

820-0242 – Install Instructions Pressure Differential Sensor Board Kit (P/N: 205-0121-14) GE P/N: 5267648

Tools Required:

- Philips #2 screwdriver or equivalent
- 4mm Allen wrench or equivalent
- Small flat blade screwdriver
- Tie Wraps (Lytron P/N 101601-01)

Removal Procedure:

1. Perform shutdown of system in accordance with Lytron manual #820-0190.
2. Lockout/Tag out system in accordance with GE procedures.
3. Remove air line to Pressure Differential Sensor Box at fitting marked “High” on the top of the box. Mark High line to differentiate from Low line.
4. Remove air line to Pressure Differential Sensor Box at fitting marked “Low” on the top of the box. Mark Low line to differentiate from High line.
5. Remove cover to the Pressure Differential Sensor Box to reveal internal components using the Philips screwdriver.
6. Use a 4mm Allen wrench to remove the Pressure Differential Sensor Box from the frame. Retain screws for re-installation.
7. Remove the following wires from the marked 3 position terminal board using a flat bladed screwdriver (Refer to photo 1 below).
 - a. “+” – Red Wire
 - b. “-” – White
 - c. “O” – Black

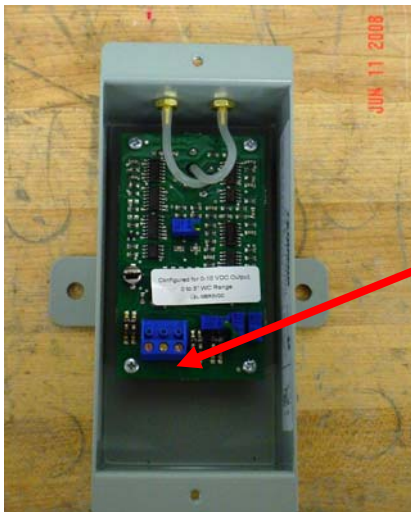


Photo 1 Pressure Differential Box

Terminal Board

8. Remove wires through strain relief.

End of Procedure

Installation of Pressure Differential Sensor Board Kit

1. Remove cover from the new Pressure Differential Sensor Box.
2. Install new strain relief on new box.
3. Thread 3 wire cables (Red, White, and Black) through strain relief from the bottom.
4. Attach each wire to screw terminals in the following order:
 - a. "+" – Red Wire
 - b. "-" – White
 - c. "O" – Black
5. Visually check dip switches S1, S2, and S3 against the following table:

	DIP 1	DIP 2
S1	ON	OFF
S2	ON	OFF
S3	ON	OFF

6. Mount box using 4mm screws saved from the removal of the box.
7. Attach air line marked "High" to Pressure Differential Sensor Box air connection on the top marked "High".
8. Attach air line marked "Low" to Pressure Differential Sensor Box air connection on the top marked "Low".
9. Replace cover to Pressure Differential Sensor Box.
10. Return system to normal operation using GE guidelines.
11. Monitor system for proper operation.

End of Procedure