

MR Service Tip: Servicing Helium Compressor in SEP Cabinets


By CSEs Bob Kosman & Dean Wilson

06-JAN-2016

NOTICE: This is a suggested time-saving service technique only, and does not replace, bypass or supersede any officially published Siemens authorized work instruction.

Here is a procedure that can save time on all SEP-cabinet-contained helium compressor service.

- Locate 4-inch diameter Schedule 40 PVC pipe at a plumbing supplier (i.e. Lowe's, Home Depot, etc.)

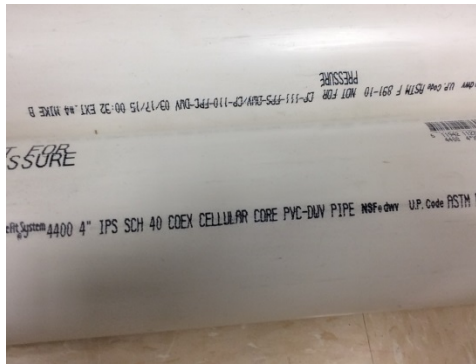

- Have it cut into three 20-inch lengths (the store did this for free)



On site, in the SEP cabinet:

- Shut off the compressor.
- Disconnect the Diagnostic Interface, the cold head connector, main power connector and the ground lead and stow all cables safely out of the way.
- Remove the two securing bolts at the base of the compressor.
- Remove tie wraps on compressor lines and cooling hoses.
 - If there is not enough length, remove the compressor lines and/or water lines.
 - There is usually sufficient length to maneuver the compressor out without disconnecting.

- Place the pipes on the floor in front of the SEP cabinet as shown:



- Slide the compressor out until it tips slightly forward onto the pipes, taking care with the helium gas lines and cooling hoses.




- Remove the lifting eyes, cover screws and remove the cover.



Now the compressor is serviceable for adsorber replacement, etc.

After servicing is completed:

- Use the securing bolts or other tools as chocks to prevent rolling during service.
- Replace the cover, screws and lifting eyes.
- To return the compressor into the cabinet, remove all but one pipe, and position it just behind the balance point, where the compressor can be tilted slightly forward.

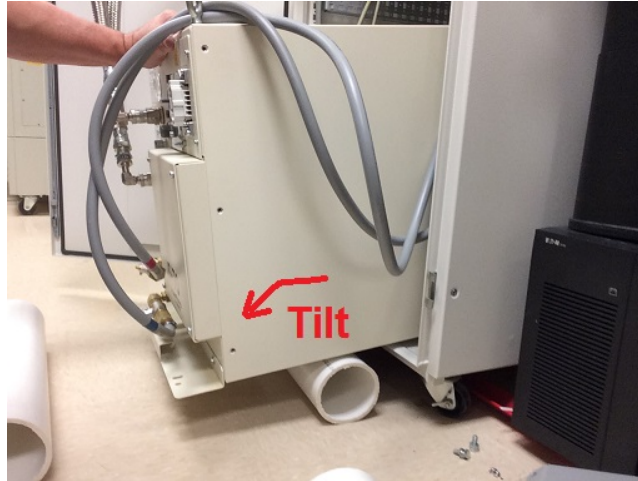

- Ease the back edge up onto the cabinet floor, and roll the compressor in, minding the helium gas lines and cooling hoses.
- Align the compressor in place and replace the two securing bolts.
 - If helium lines and/or water lines were removed, reconnect them.
- Replace the ground, cold head power, Diagnostic Interface and main power connectors.
- Power on the compressor and verify normal operation.



- Stow the pipes inside the SEP cabinet next to the compressor for future use.