

GANTRY COVERS

The following procedure shows how to open/close, install, remove/replace and adjust the various AcQSim CT Gantry covers.

Front Upper Cover

1. Loosen the captive screws on the front cover, lift up and secure. Refer to Figure 228.

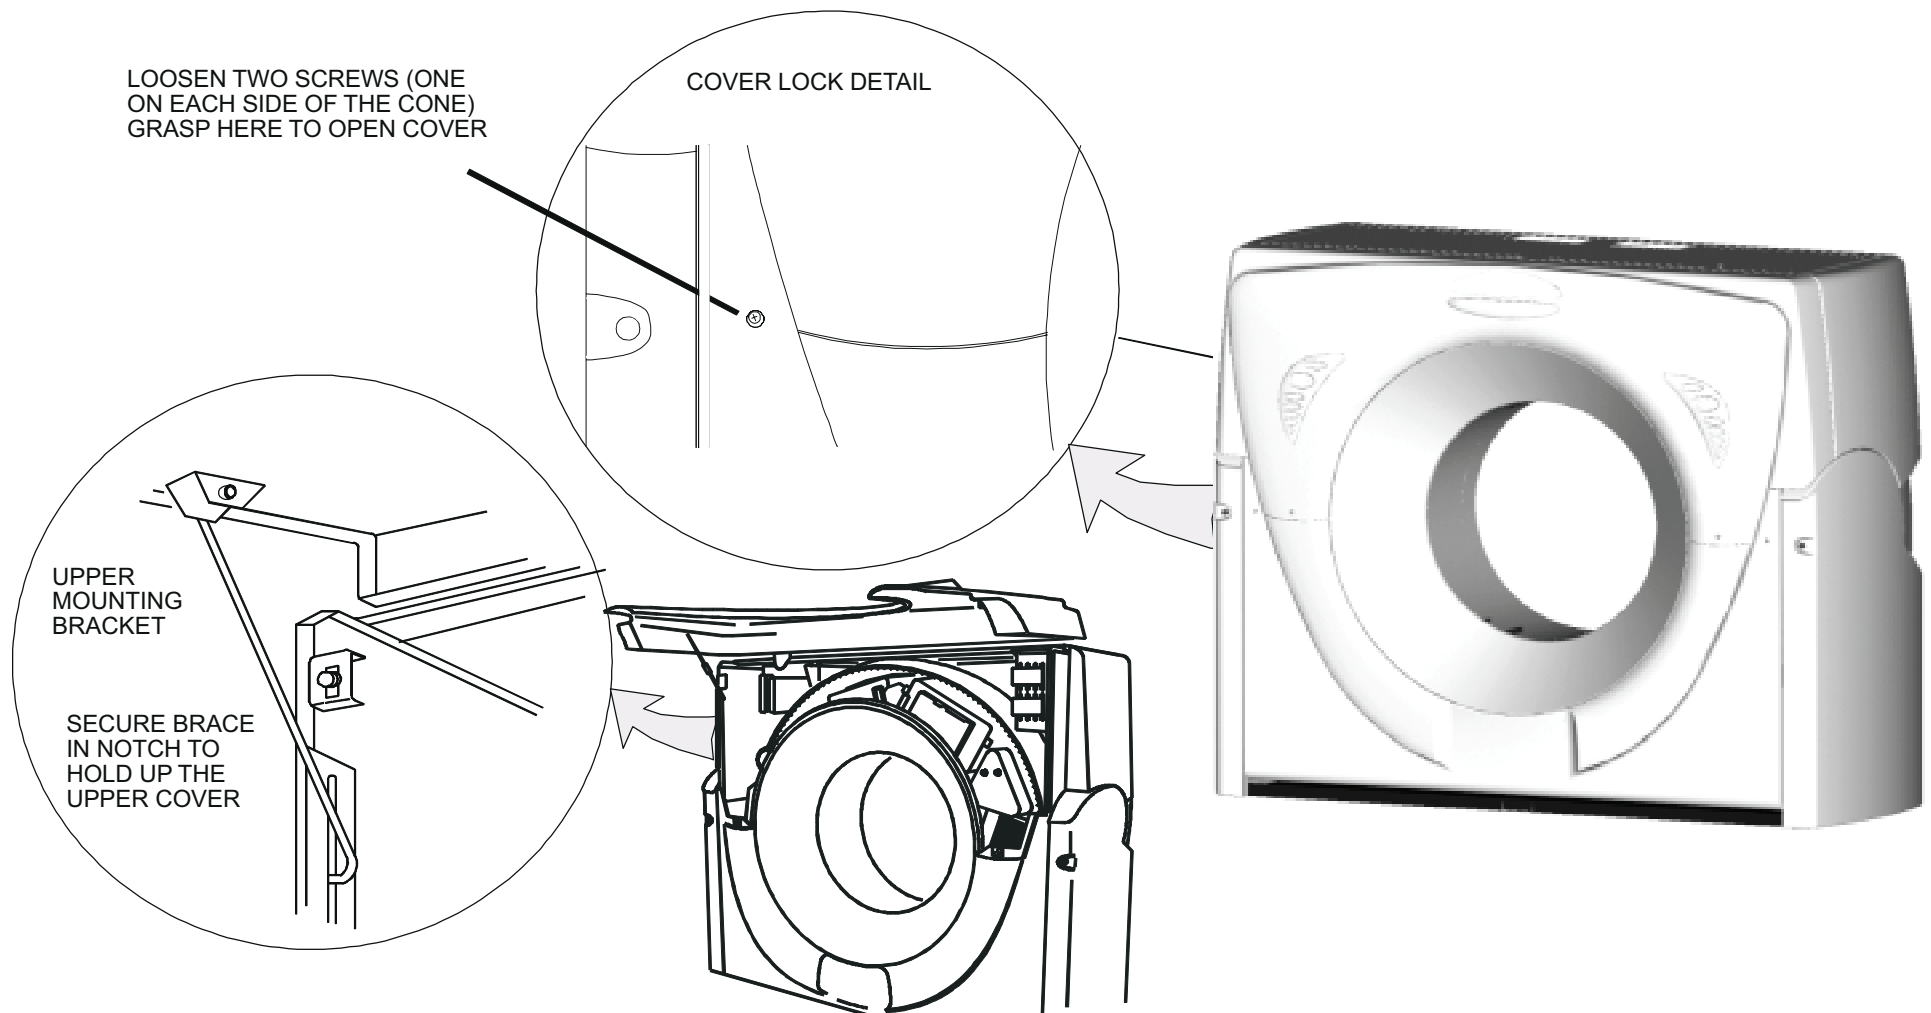


FIGURE 228 GANTRY UPPER PANEL OPENING

Lower Front Cover

1. Remove the screws that secure the lower Gantry cover. Lift the cover up and off the bottom latches and slide the cover away from Gantry. Store the cover in a secure place.. Refer to Figure 229.

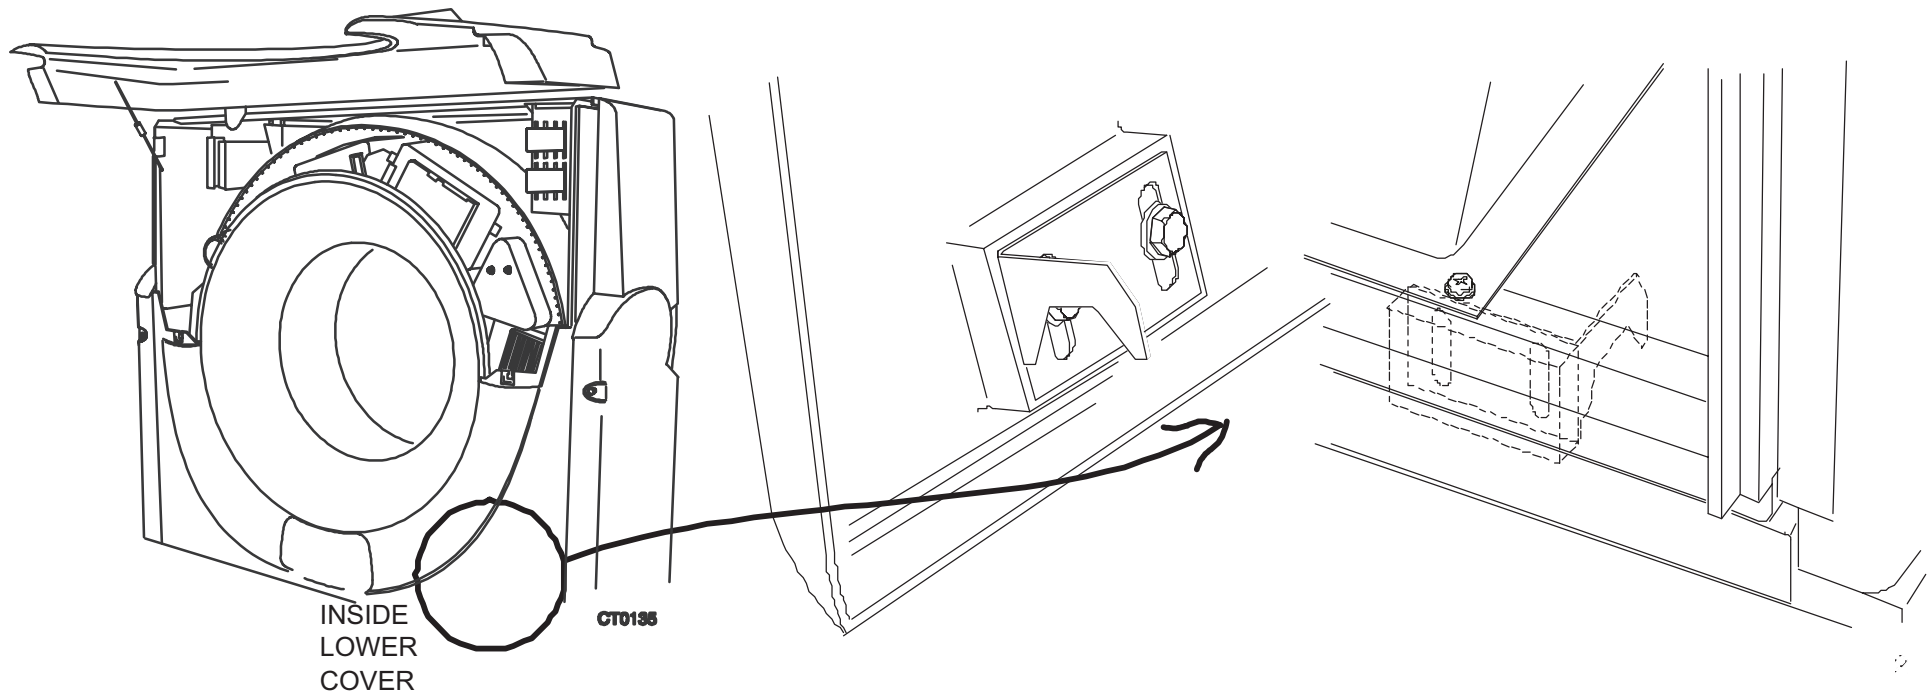


FIGURE 229 GANTRY FRONT LOWER COVER – DETAIL


Rear Covers



CAUTION

Before removing the rear covers, unplug the two connectors from the cables that lead to the speaker and x-ray light. Failure to do this will result in damage to the cables and/or connectors.

1. Remove the screws that secure the rear Gantry covers. Lift up and away on each of the covers and set aside in a safe place. Refer to Figure 230.

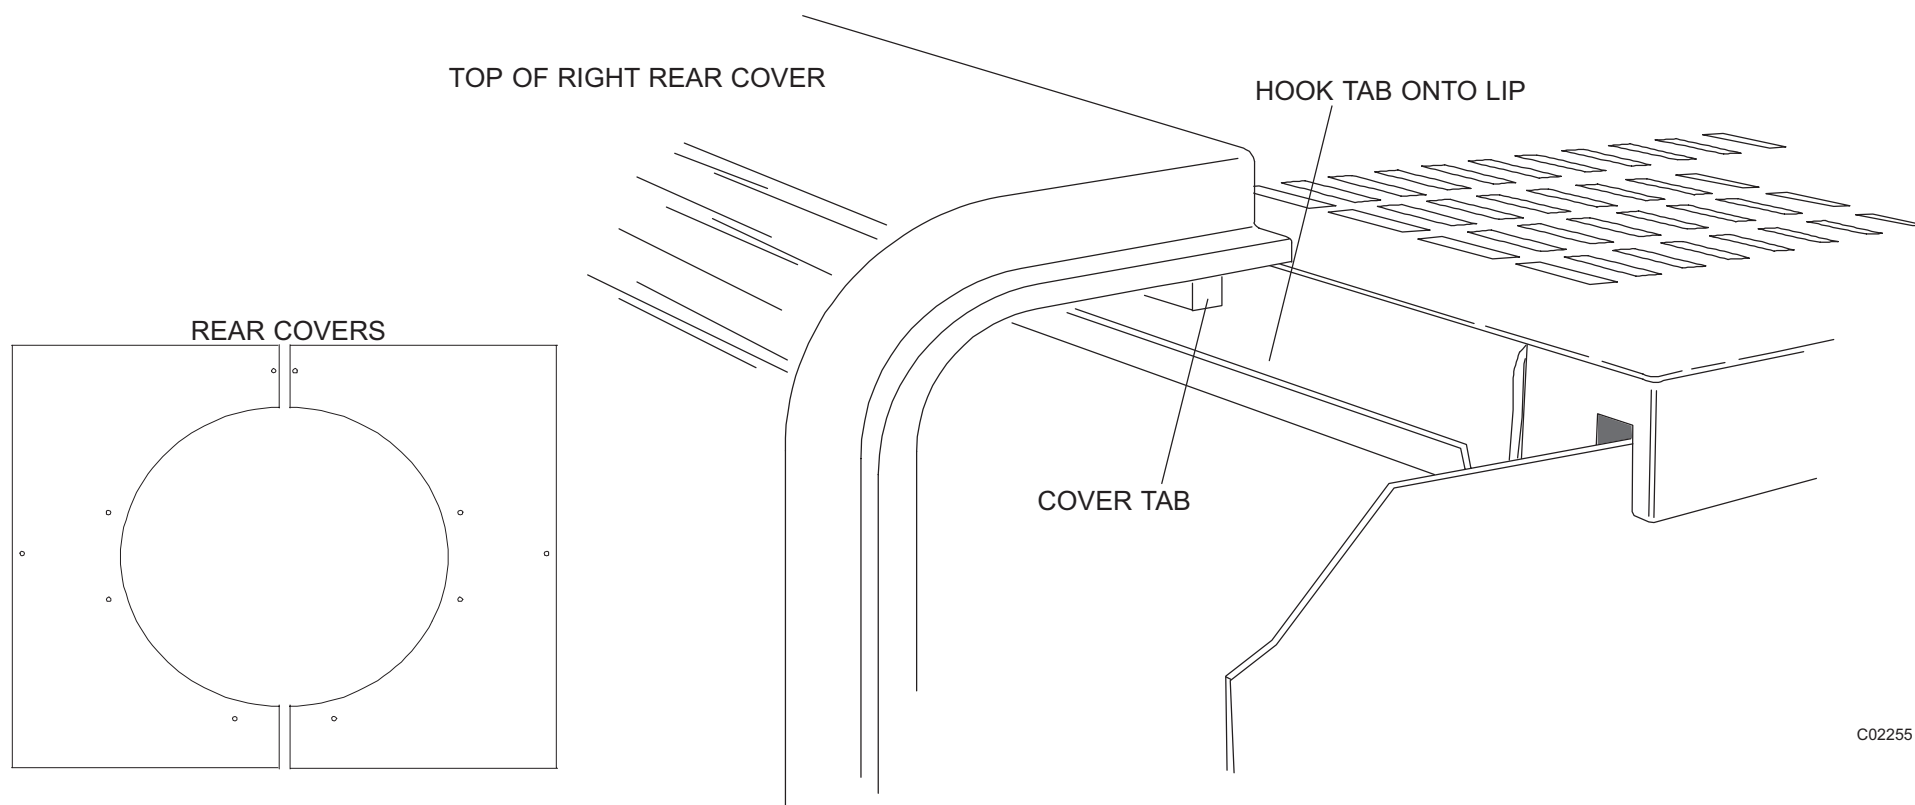

C02255

FIGURE 230 REAR COVER REMOVAL

Lower Side Cover Installation

1. Remove Lower Right Column Cover (p/n 312863) from shipping box. Remove the small bag attached to the inside surface of the cover, which contains the mounting screws and washers. Set it aside.
2. Open the Front Upper Cover and lock in place.
3. Uninstall the E–Stop Switch located on the right side column.
4. Install the E–Stop Switch in the Lower Right Side Column. Refer to Figure 231.

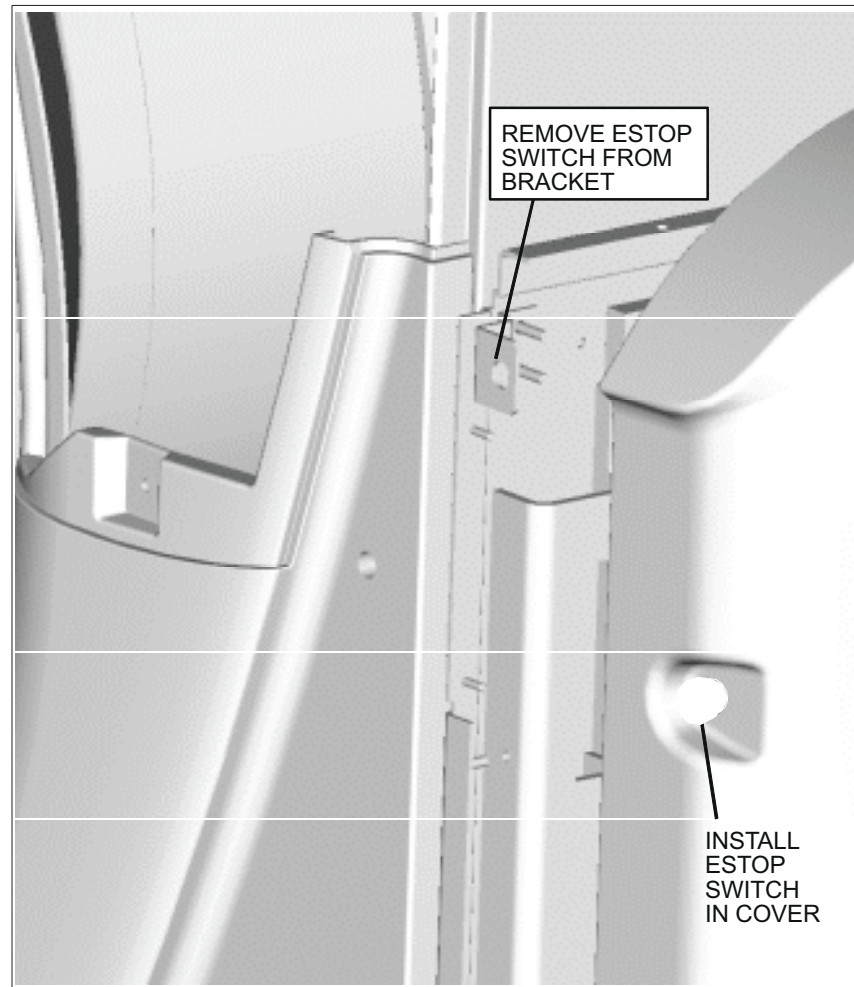


FIGURE 231 ESTOP SWITCH LOCATION

5. Install the Lower Right Column Cover onto the right side column. Align and insert Locating pins on Lower Right Column Cover with the V groove features on the Side Column. Refer to Figure 232.

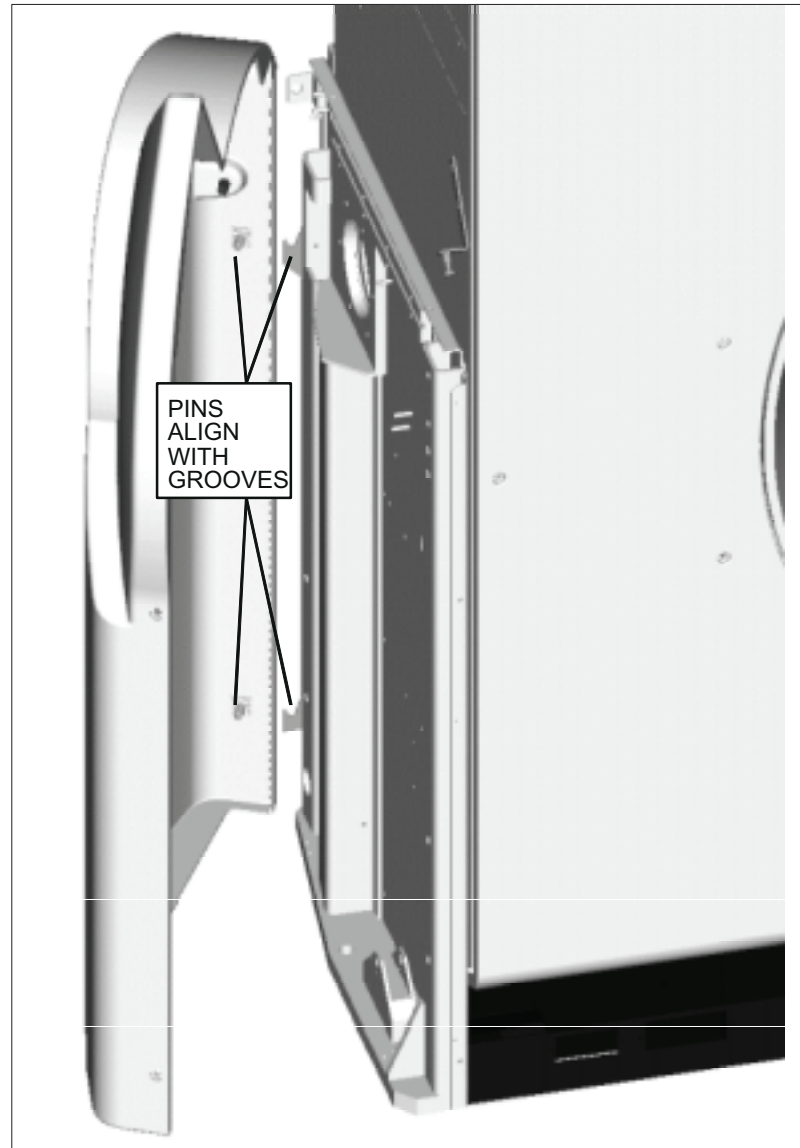


FIGURE 232 LOWER RIGHT COLUMN COVER

6. Fasten the Lower Right Column Cover to the Gantry Column using the two screws (1/4"–20 x 3/4", Pan Head) and two nylon washers provided. Maintain a gap between the top of the Column Cover and Gantry Side Panel in the range of 0.050 to 0.250 inch. Refer to Figure 233.

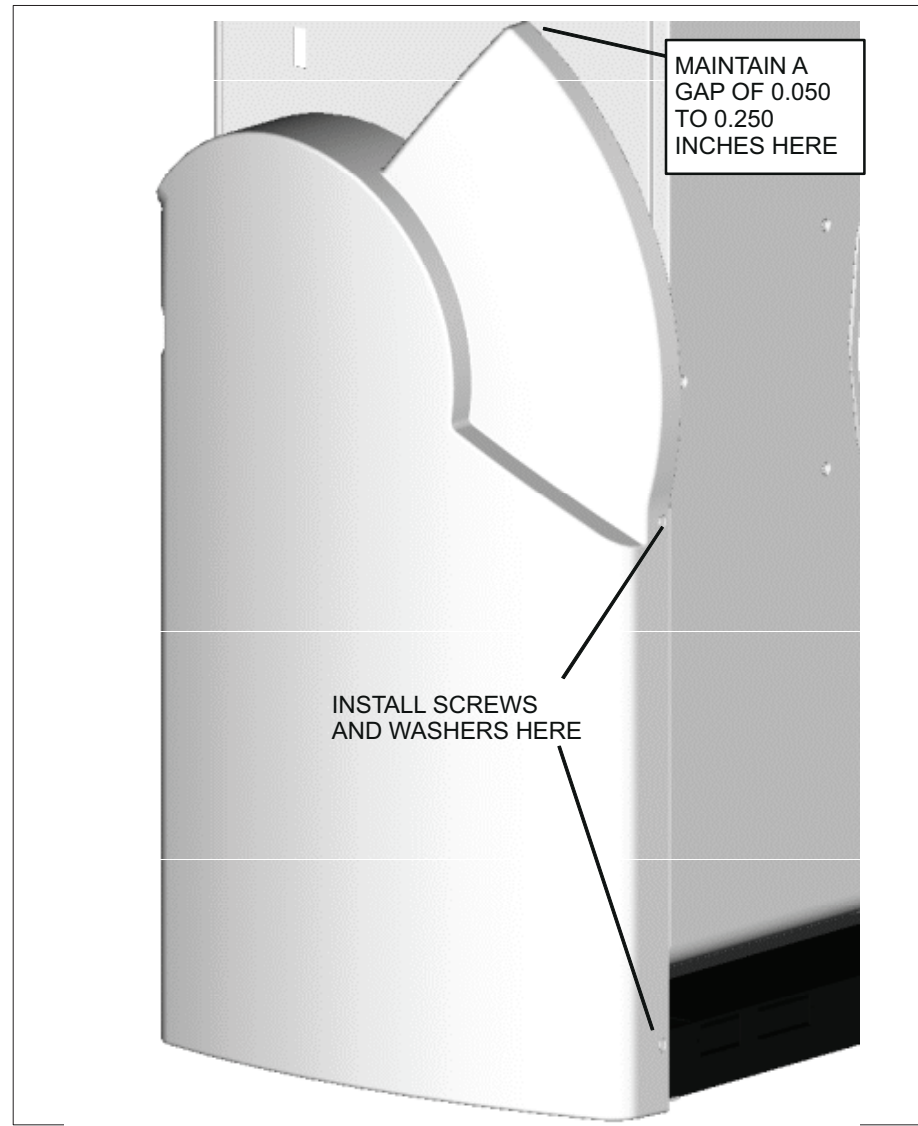


FIGURE 233 FASTENING LOWER SIDE COVER

7. Lower the Front Upper Cover. Make sure the Front Upper Cover is seated firmly against the Lower Front Cover.
8. Check the clearance between the Lower Right Column Cover and the Front Upper Cover as shown in Figure 234. It should measure between 0.100 to 0.250 inch. If the gap measures within the allowable range, assemble the Lower Left Side Cover (p/n 312865) in the same fashion as the right cover. If not, continue to step 9.

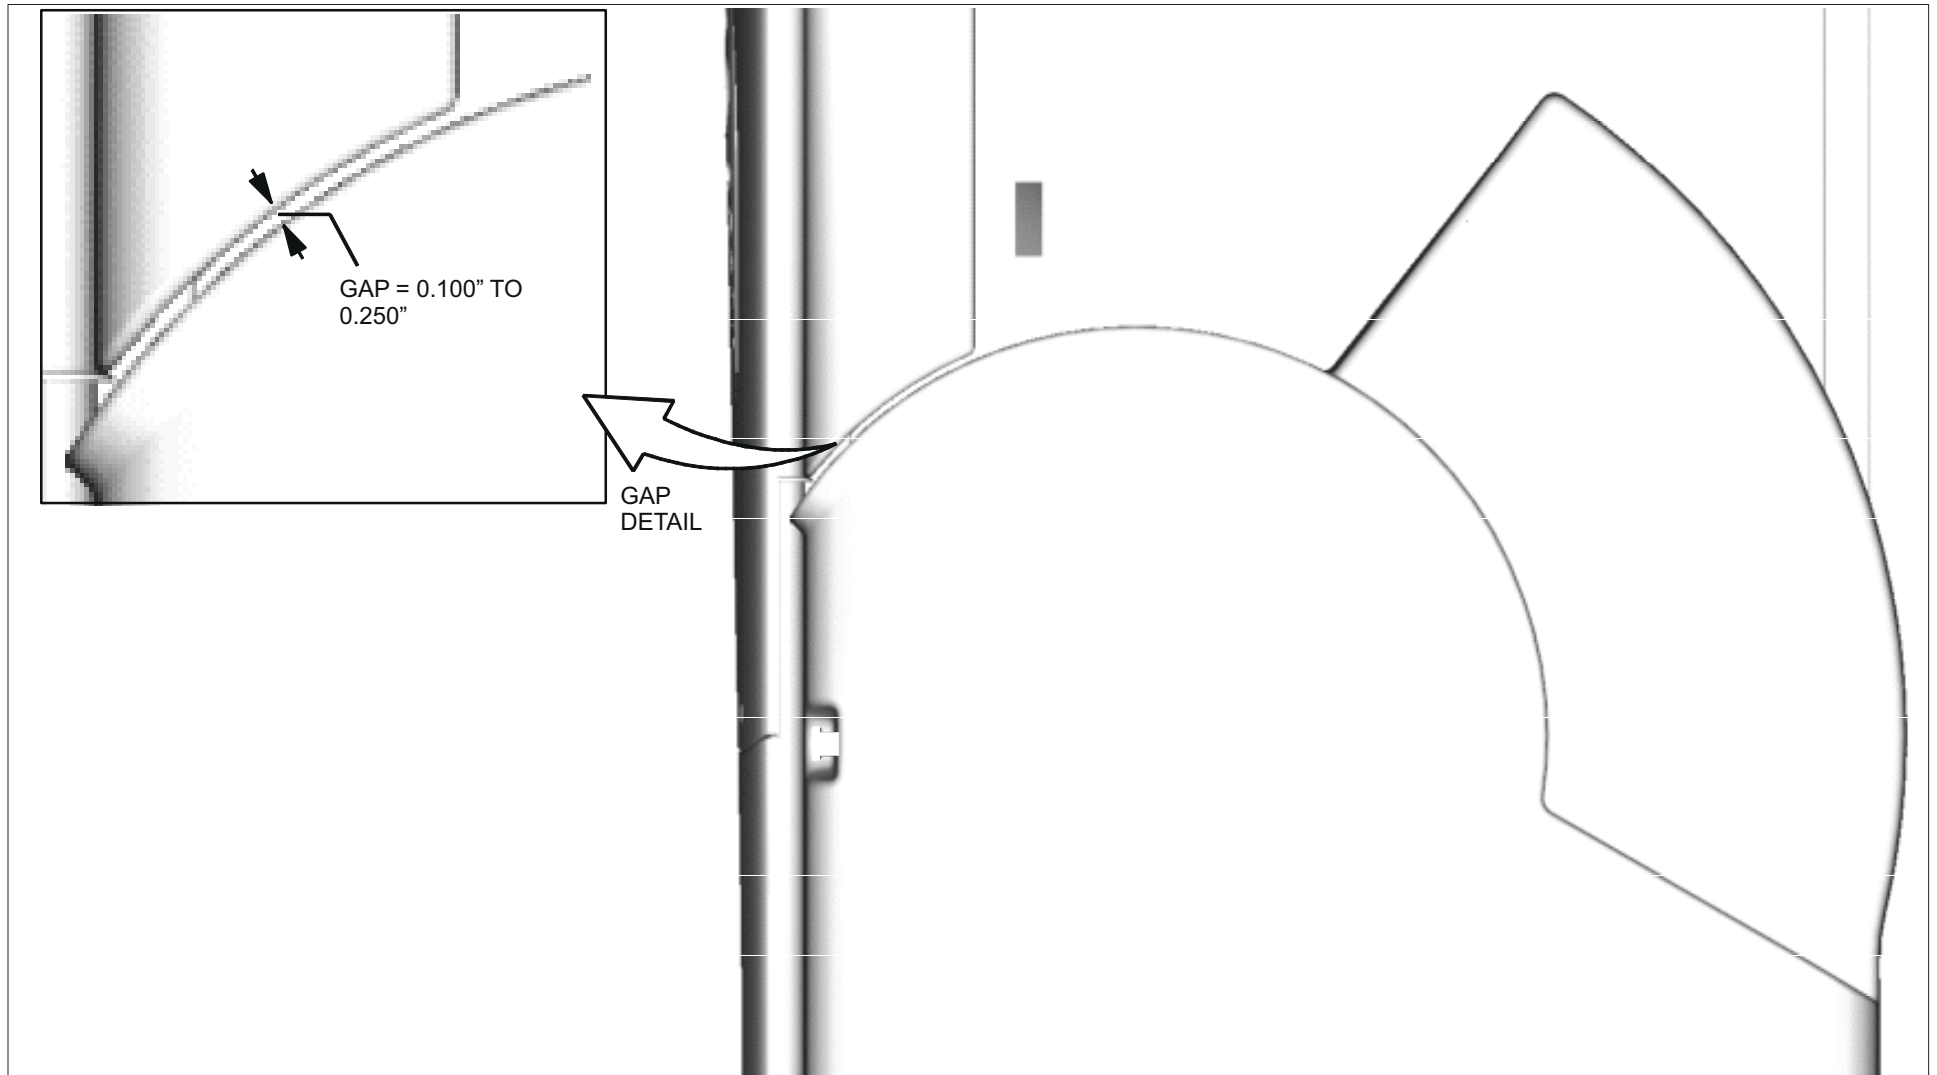


FIGURE 234 GAP BETWEEN SIDE COVER AND FRONT UPPER COVER

9. If the gap is not within the allowable range, raise the Front Upper Cover, remove the Lower Right Column Cover, and adjust the height of the V-groove Mounting Bracket. Refer to Figure 235. Continue to check the clearance between the Lower Right Column Cover and the Front Upper Cover and make sure it is within the allowable range of 0.100 to 0.250 inch.
10. Prior to final installation of Lower Right Side Cover, make sure wires are reconnected to E-Stop Switch.
11. Assemble the Lower Left Side Cover (p/n 312865) in the same fashion as the right cover.

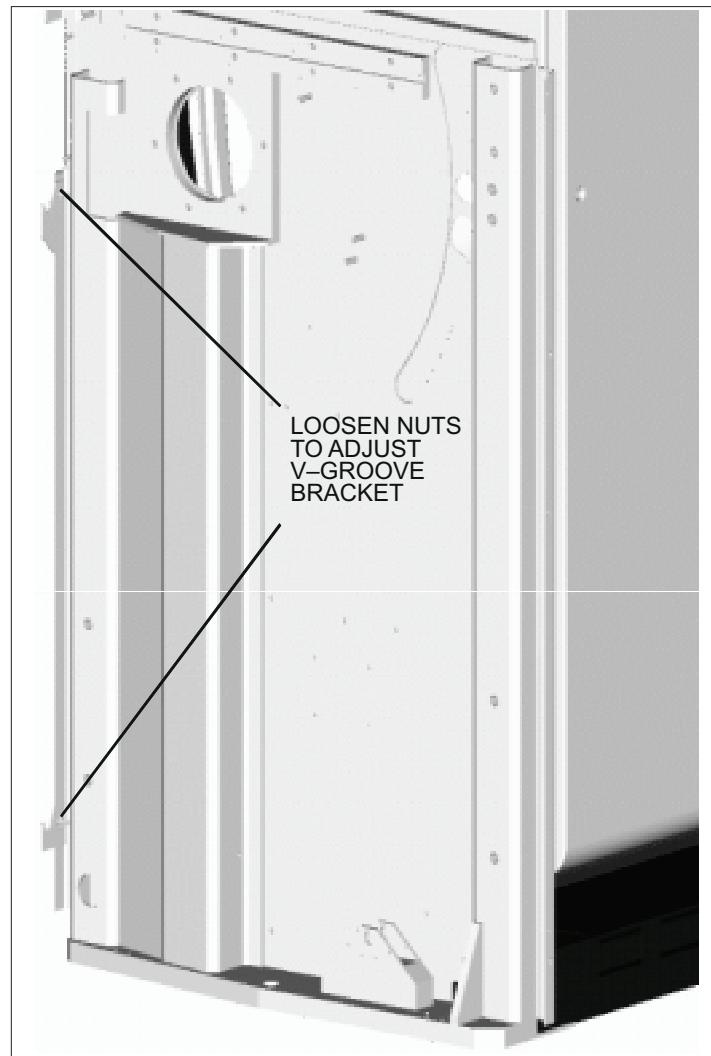


FIGURE 235 V-GROOVE BRACKET ADJUST

UPPER SIDE COVER INSTALLATION

1. Remove Upper Right Column Cover (p/n 362096) from shipping box.
2. Align and insert the pins on the Upper Right Column Cover into the holes on the Cover Mounting Bracket which is attached to the Gantry Side Panel. Refer to Figure 236.

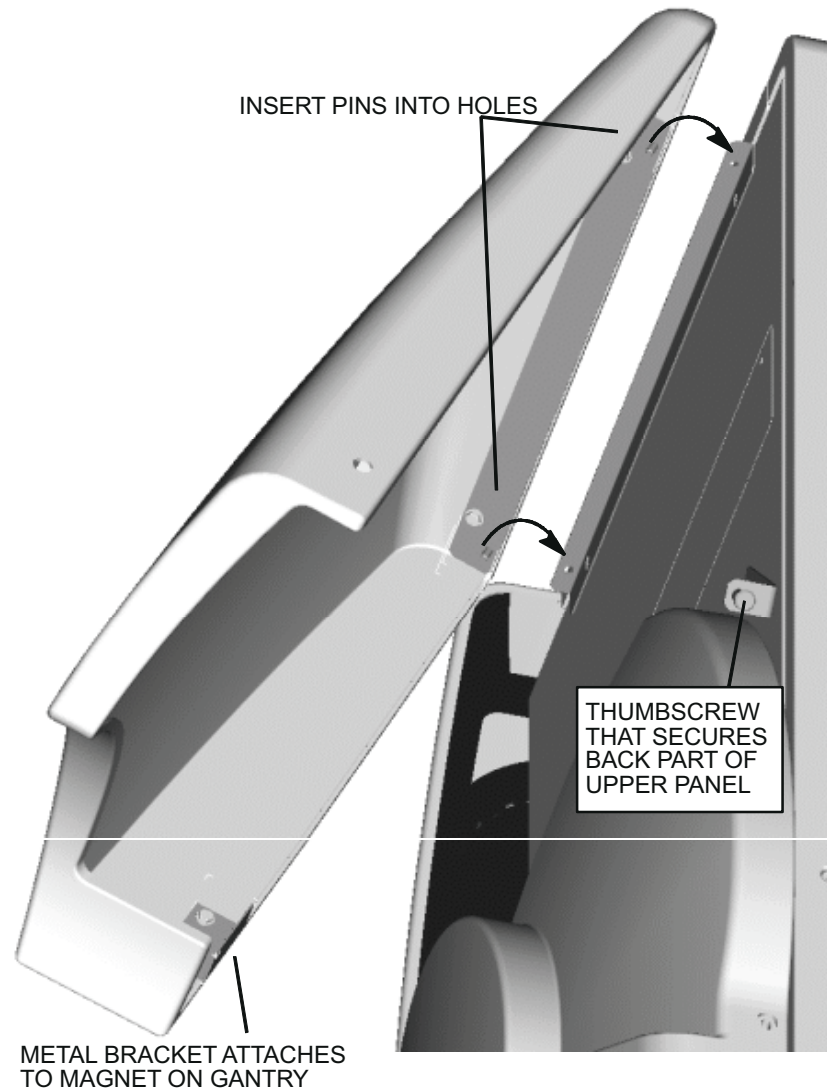


FIGURE 236 UPPER SIDE COVER

3. Swing the lower side of the Upper Right Column Cover down until it comes into contact with the Gantry Side Panel. A magnetic latch should attract and hold the cover in place.
4. Visually locate the thumbscrew through the hole on the back side of the Upper Right Column Cover. Insert a long, narrow slotted screwdriver into the hole and lightly tighten the thumbscrew. This is a blind connection, so ensure you get the right “feel” of the captive screw starting correctly. Refer to Figure 237.

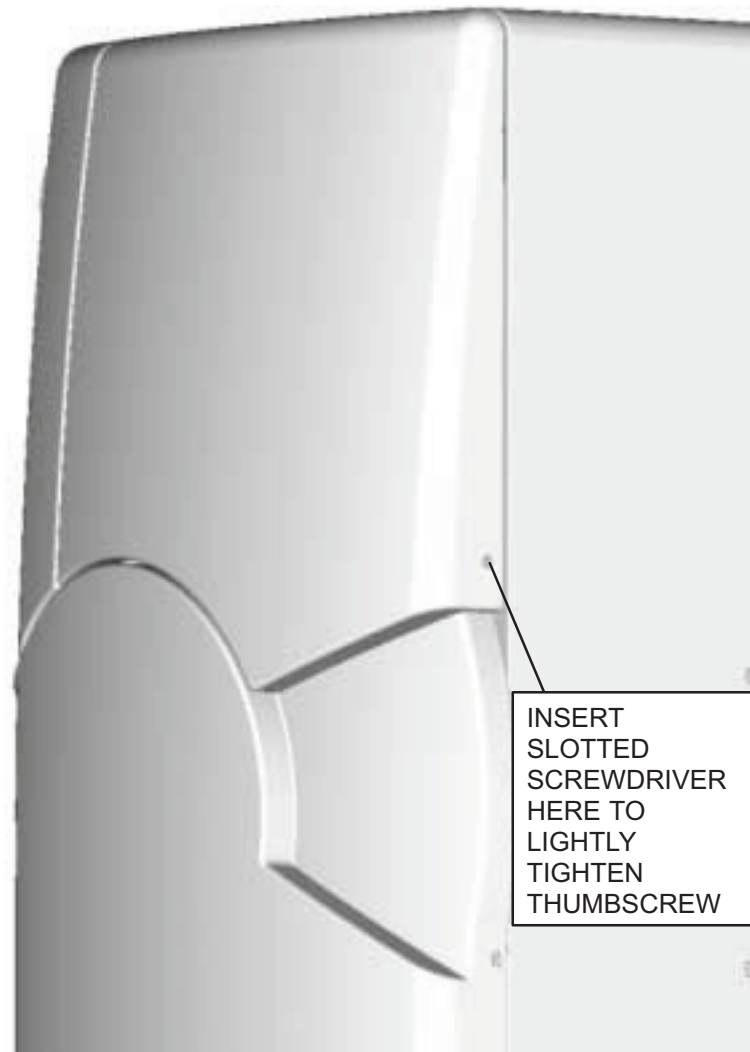


FIGURE 237 THUMBSCREW LOCATION

5. Check clearance "A" between the Upper Right Column Cover and Lower Right Column Cover. Also check the uniformity of the gap between the Upper Right Column Cover and the Upper Front Cover. Refer to Figure 238.

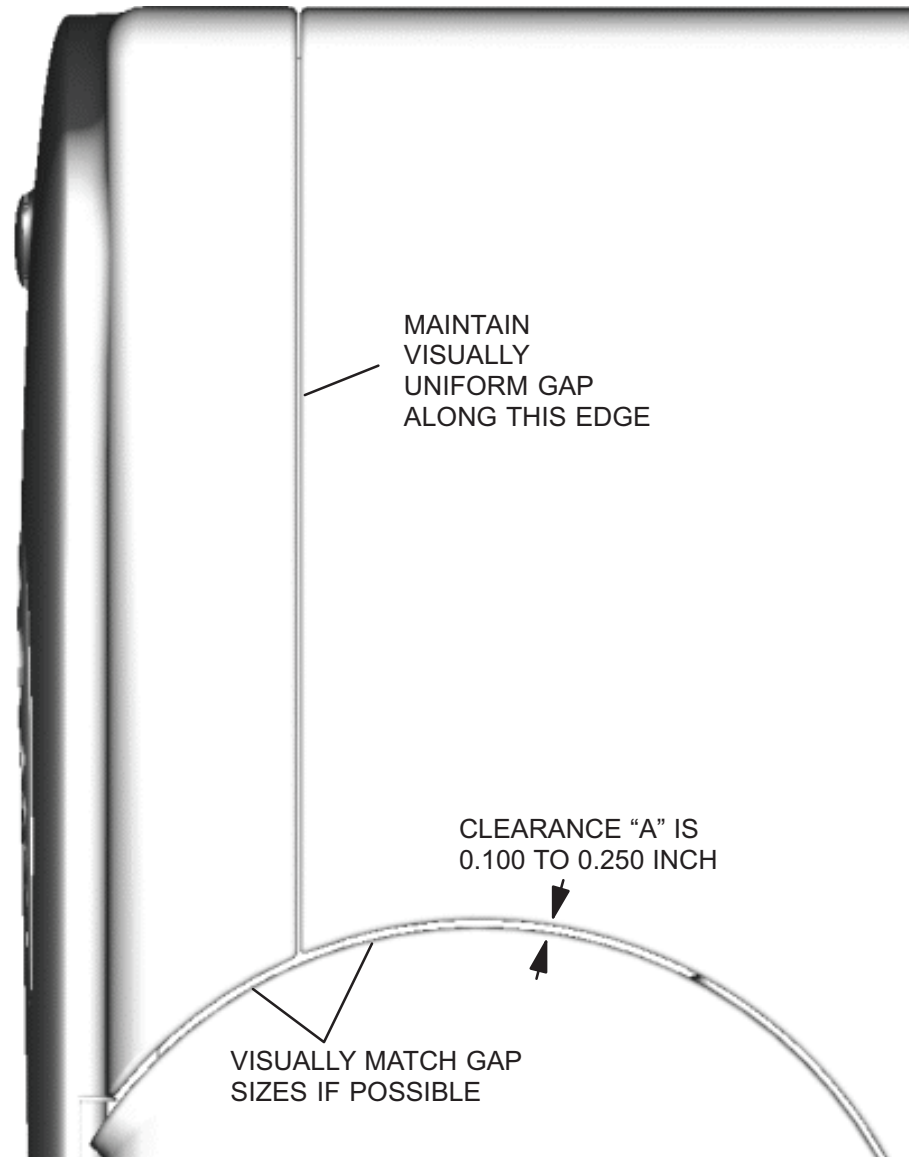


FIGURE 238 CLEARANCE "A" CHECK

6. Check clearance "B", between the Upper Right Column Cover and the Lower Right Column Cover. Refer to Figure 239.
7. If clearances "A" and "B" are within the allowable ranges and the gap uniformity looks good, than skip to the Hole Plug Installation procedure. If the clearances are not within tolerance, continue to the next page.

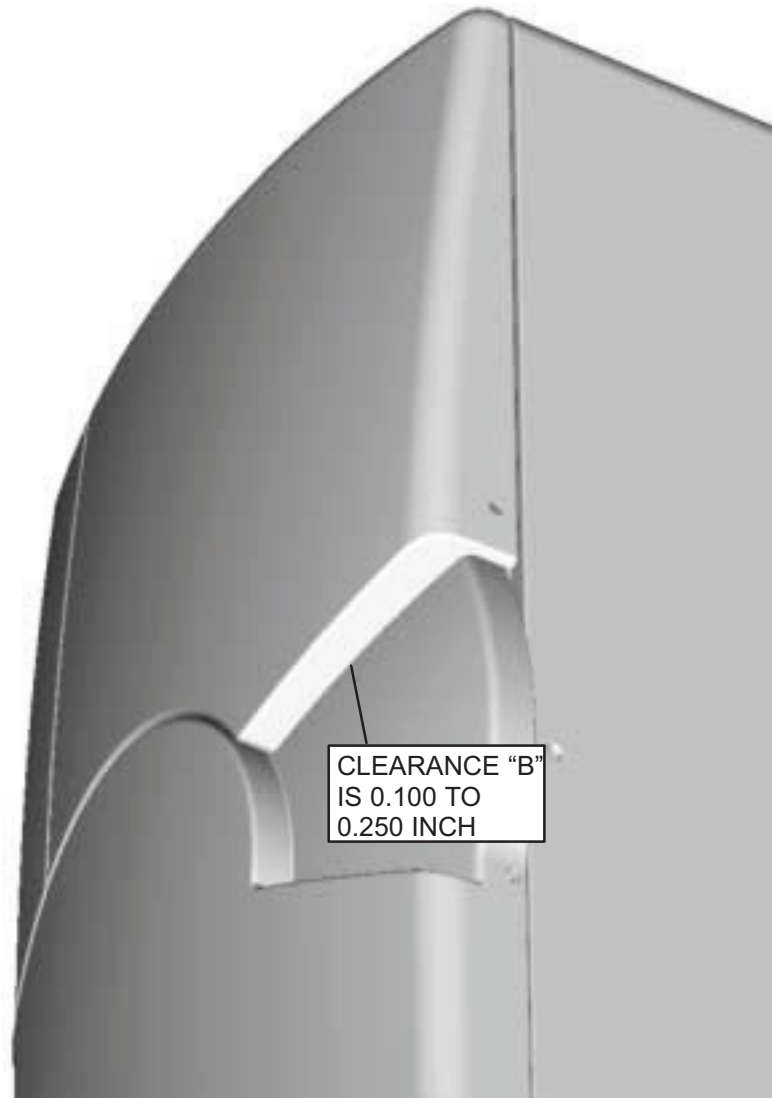


FIGURE 239 CLEARANCE "B" CHECK

8. If clearance "A" is outside the allowable range or the gap between the Upper Right Column Cover and the Upper Front Cover does not visually appear uniform, remove the Upper Right Column Cover, and adjust the Cover Mounting Bracket by loosening the two bolts as shown below.

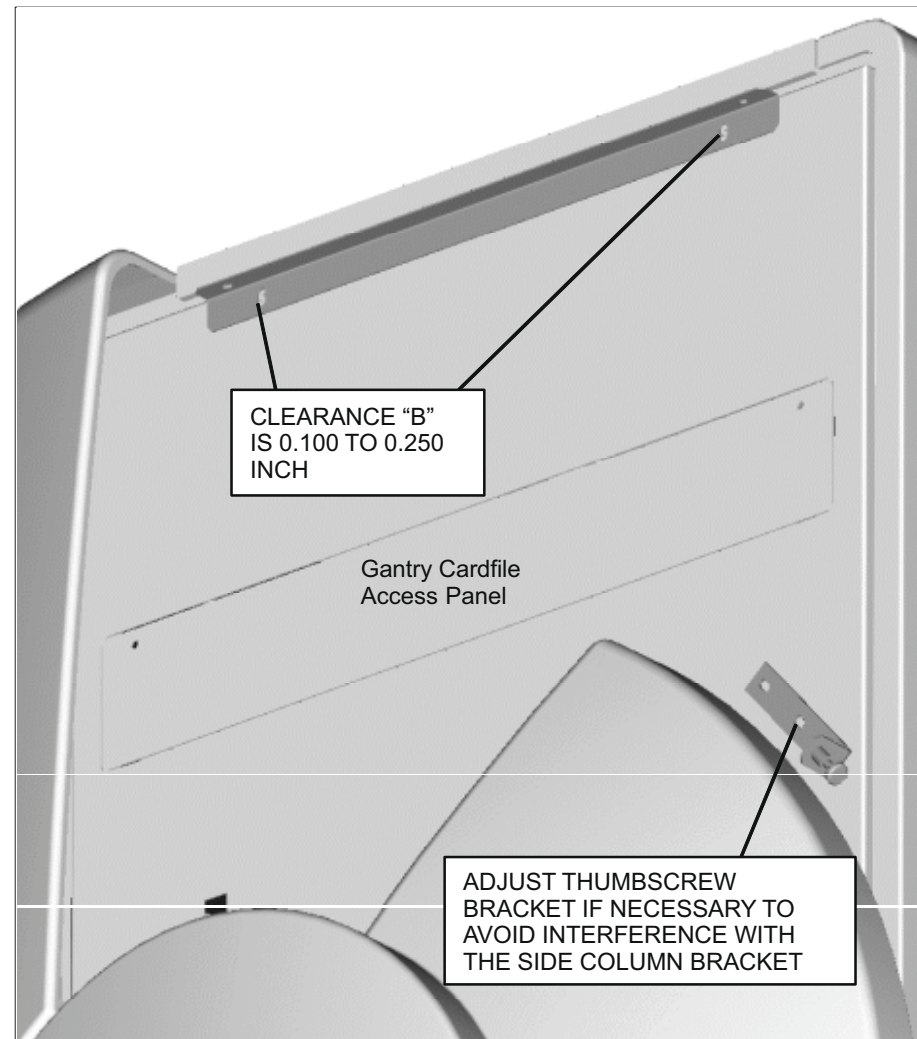


FIGURE 240 ADJUSTING CLEARANCE "A"

9. If clearance "B" is outside the allowable range, than remove the Upper Right Column Cover, and adjust the Mounting Brackets located inside the Upper Right Column Cover by loosening the bolts as shown below.
10. Assembly of the Upper Left Column Cover (p/n 362097) follows this same procedure.

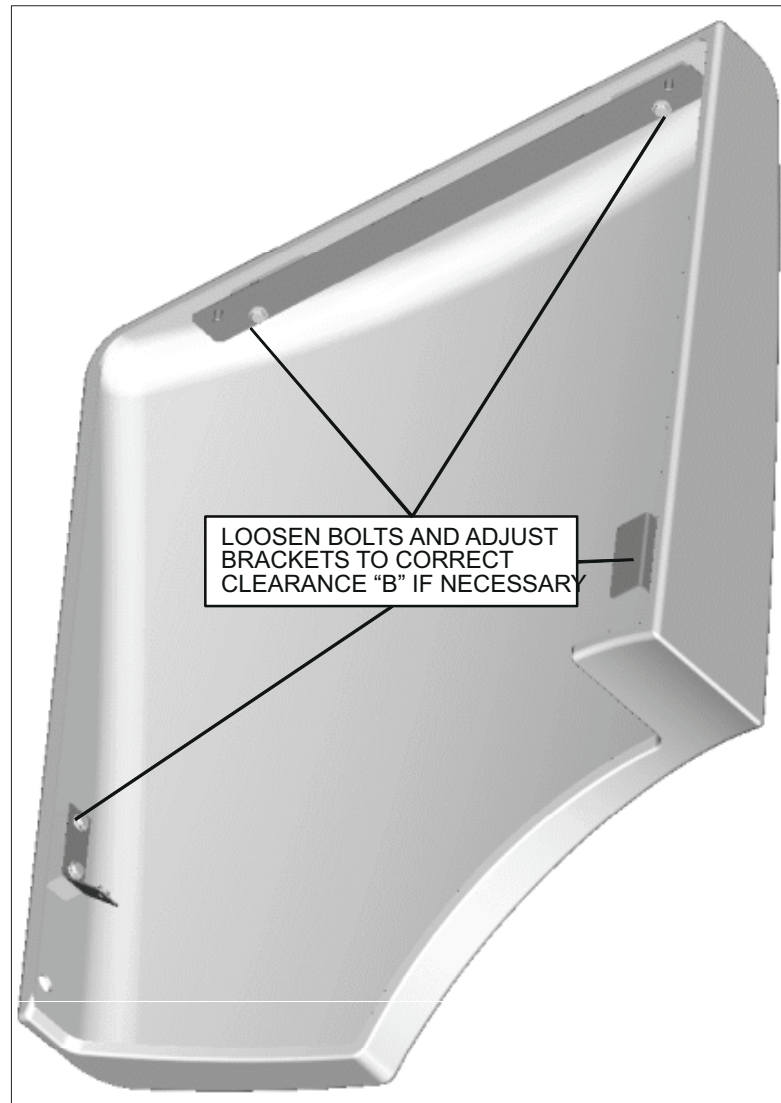


FIGURE 241 ADJUSTING CLEARANCE "B"

HOLE PLUG INSTALLATION

1. Install the Hole Plugs (p/n T39A-1013) at the four locations shown in Figure 242.

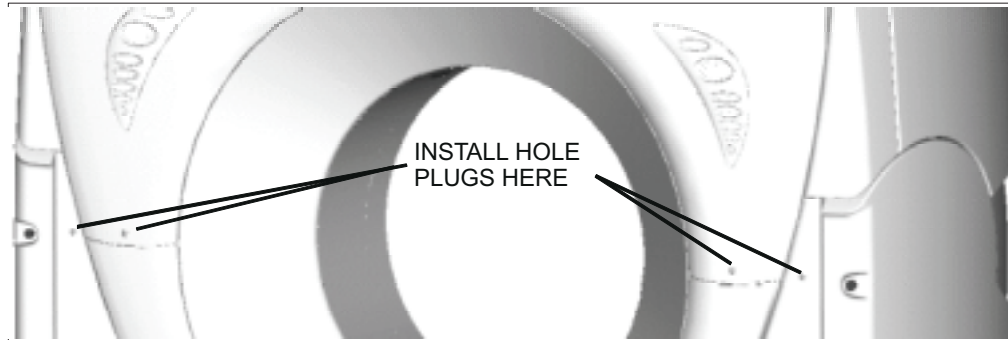


FIGURE 242 FRONT HOLE PLUG INSTALLATION

2. Install the Hole Plugs (p/n T39A-1013) at the two locations shown in Figure 243.

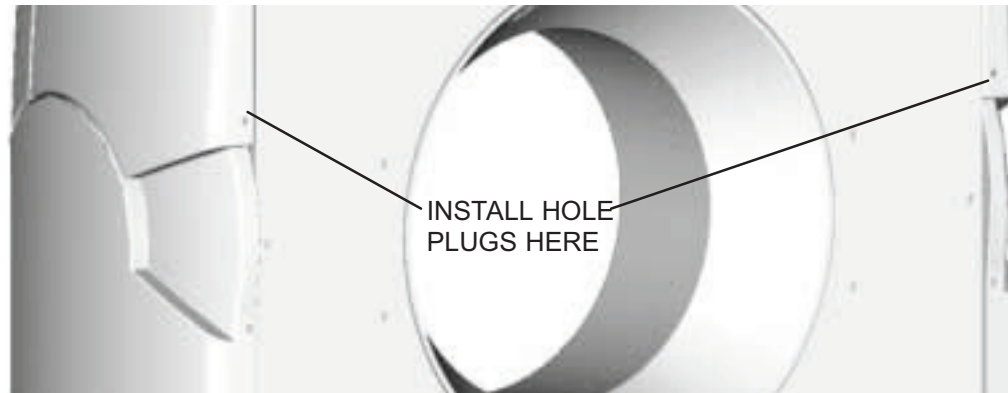


FIGURE 243 REAR HOLE PLUG INSTALLATION