

MANUAL IMAGE CALIBRATION

Image Calibration not run via AutoCalibration is run via the REASON pulldown menu of the Calibration selection of the Service Application.

Refer to the [Service Application manual](#) for more details.

Refer to the table below for the Manual Calibration/Performance pulldown menu. (Manual Calibration routines are in **bold**).

Reason Pull Down Menu – MANUAL CALIBRATION

REASON	DESCRIPTION OF ACTION PERFORMED
ManPerform_Lateral_Centering	
ManFind_Centering	
ManFind_DAC	
MandFind_Air	
MandFind_MA	
ManFind_Flatts	
ManFind_FlattsFF	
ManFind_Level	
ManFind_LevelFF	
ManFind_Level2	
ManFind_Level2FF	
ManFind_PilotAir	
ManPerform_MTF	
Clear_BadDetsList	

How to Run Manual Performance/Calibration

1. After the reason is selected, a text editor appears, containing the calibration/performance routine text of the Reason that was selected. Find and edit the appropriate text parameters for the calibration or performance routine you selected. To edit a routine, highlight the text value (mA, voltage, etc.) with the mouse pointer. (Click on the text, hold and drag across the text of choice until the text displays in reverse video.) Refer to Figure 110.
2. After the text is highlighted, type in the new value. For example, select 130kV and type in 120kV. After the text is edited, save the file and close the text editor window. When closing the editor, you will be prompted with a information about the steps you should perform. Refer to Figure 111. (In this example, the ManFind_Centering Reason was chosen.) Click on OK to continue.
3. From the scanning screen, click on the Proceed to Scan button, then the Start Scan button to continue with the Calibration or Performance routine.

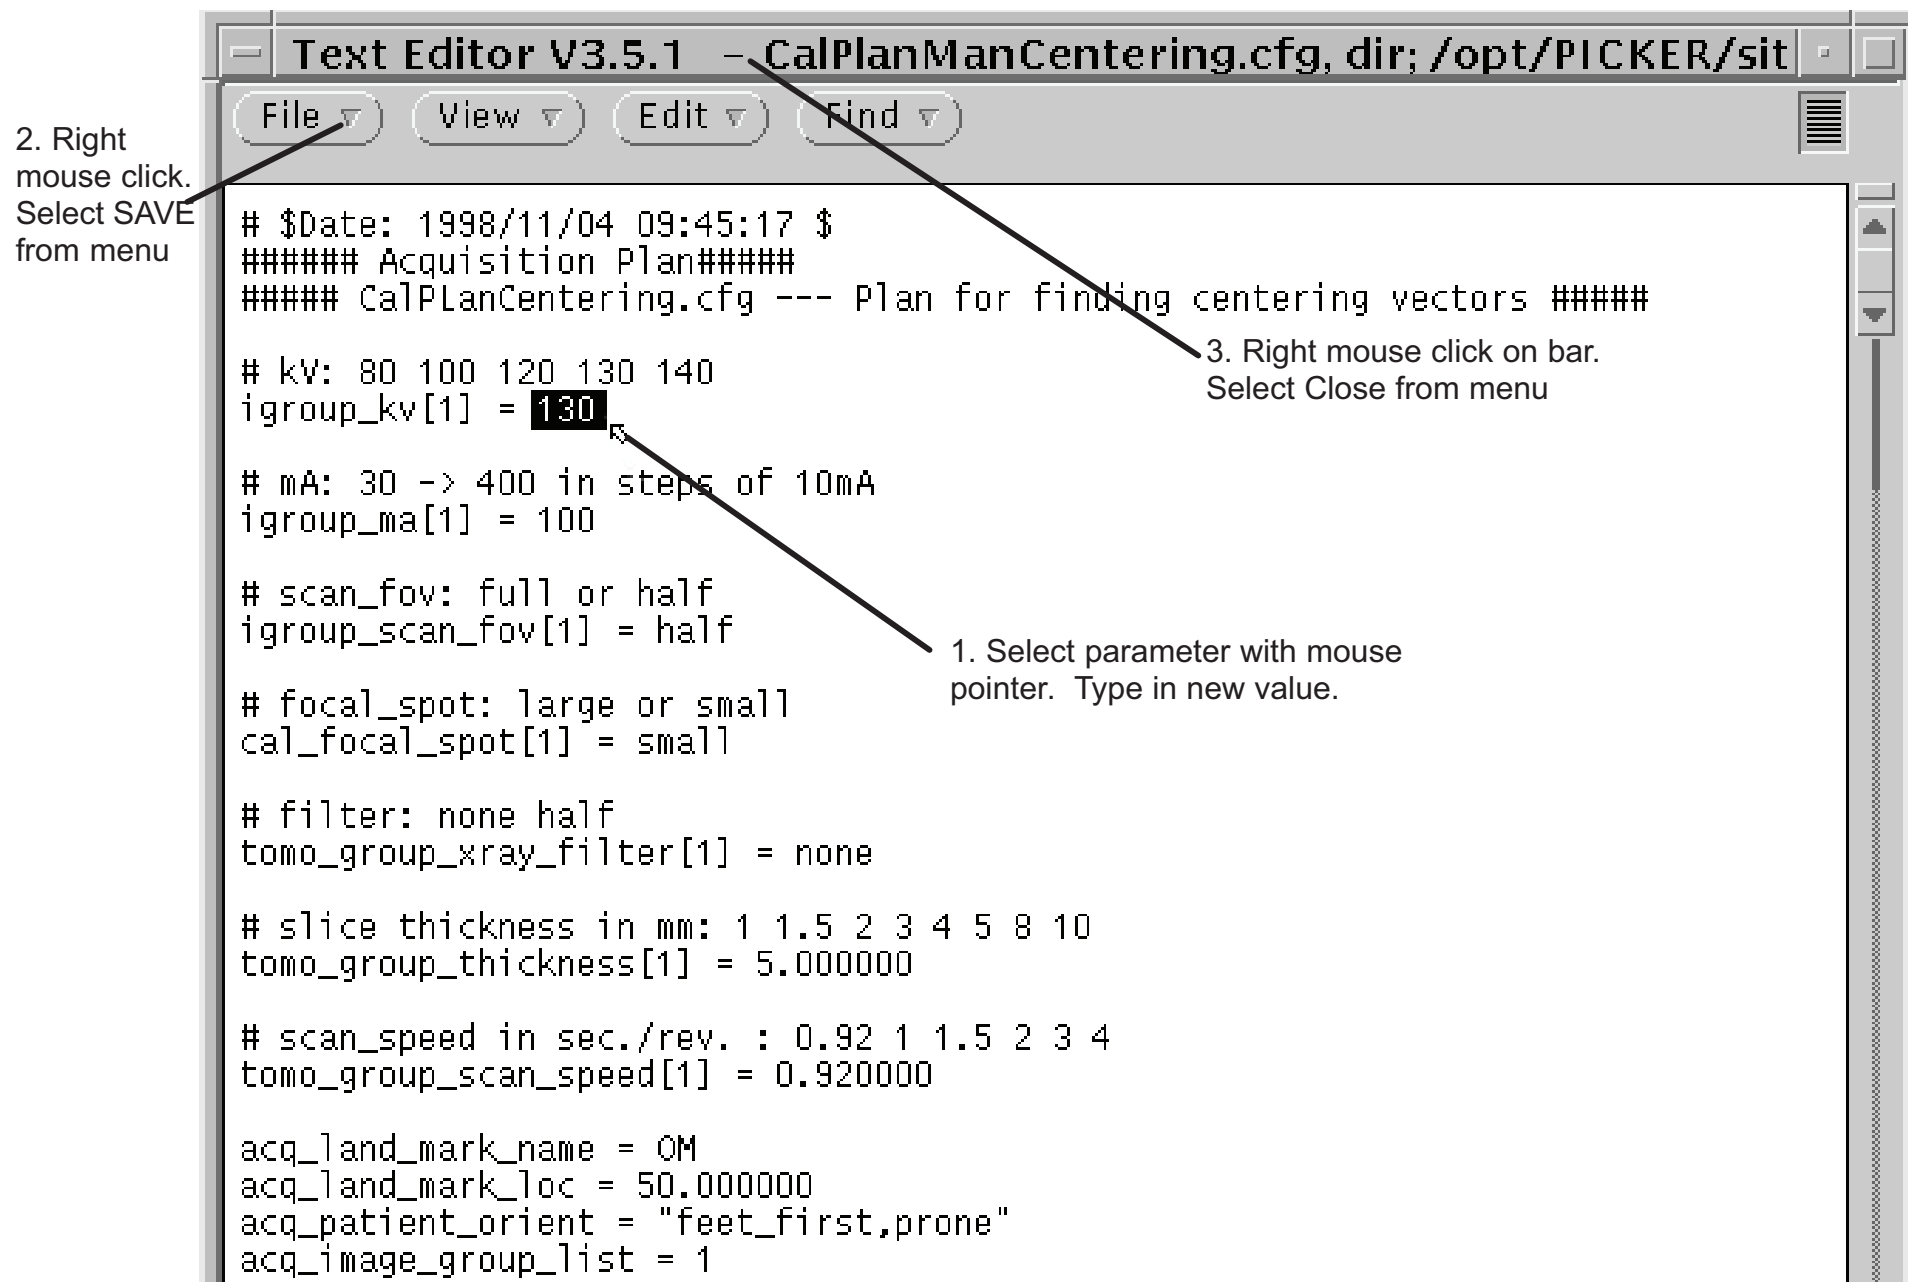


FIGURE 108 MANUAL PERFORMANCE / CALIBRATION TEXT EDITOR

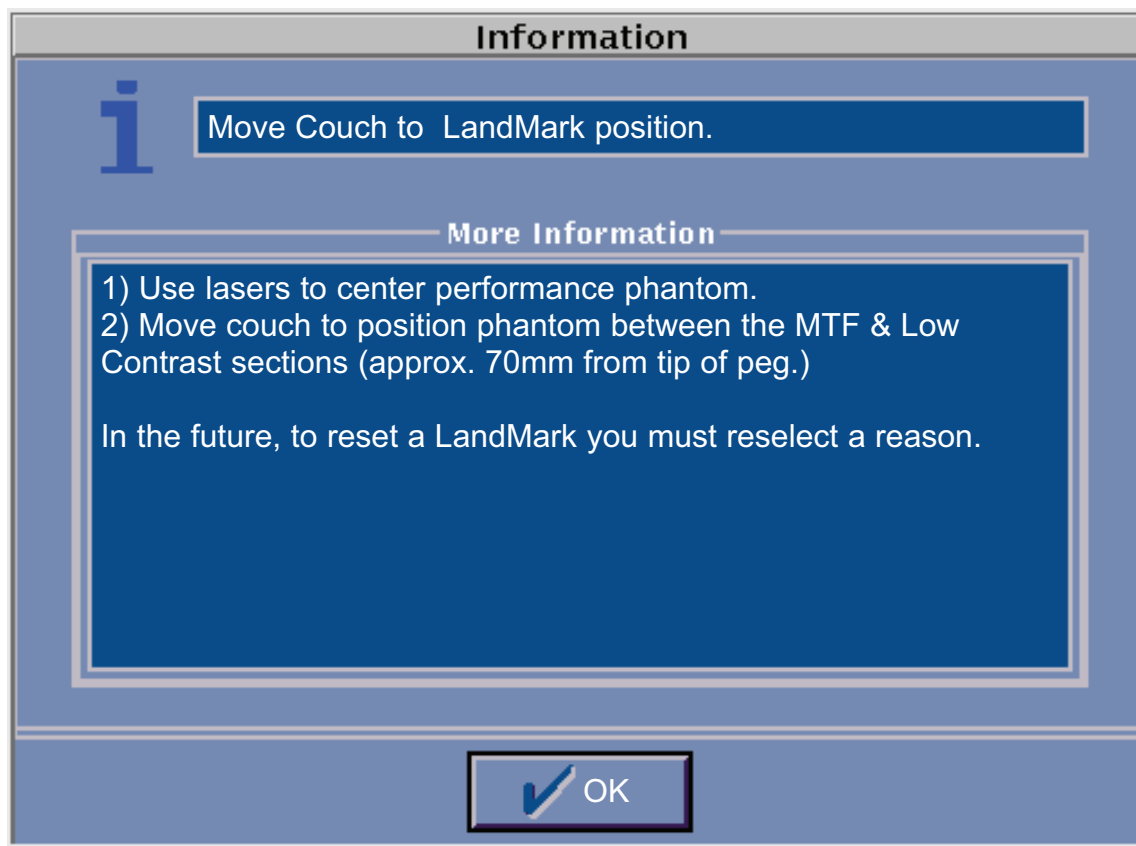


FIGURE 109 MANUAL PERFORMANCE / CALIBRATION INFORMATION WINDOW

Manual Calibration Protocols

Scan parameters for 3rd party service manual calibration of an Astro scanner.

Vector Name kv filter spot scan_fov thick ma speed

CAL: Lateral 130 none large full 5 100 1.5

CAL: Centering 130 none small full 5 100 1
CAL: Centering 130 none small full 5 100 1.5
CAL: Centering 130 none small full 5 100 2
CAL: Centering 130 none small full 5 100 3
CAL: Centering 130 none small full 5 100 4
CAL: Centering 130 none large full 5 100 1
CAL: Centering 130 none large full 5 100 1.5
CAL: Centering 130 none large full 5 100 2
CAL: Centering 130 none large full 5 100 3
CAL: Centering 130 none large full 5 100 4

CAL: DAC 130 none small full 8 100 4
CAL: DAC 130 none large full 8 100 4

CAL: Air 80 none small full 5 100 4
CAL: Air 80 half small full 5 100 4
CAL: Air 80 none large full 5 100 4
CAL: Air 80 half large full 5 100 4
CAL: Air 100 none small full 5 100 4
CAL: Air 100 half small full 5 100 4
CAL: Air 100 none large full 5 100 4
CAL: Air 100 half large full 5 100 4
CAL: Air 120 none small full 5 100 4
CAL: Air 120 half small full 5 100 4
CAL: Air 120 none large full 5 100 4

CAL:	Air	120	half large	full	5	100	4
CAL:	Air	130	none small	full	2	100	4
CAL:	Air	130	none small	full	3	100	4
CAL:	Air	130	none small	full	4	100	4
CAL:	Air	130	none small	full	5	100	4
CAL:	Air	130	none small	full	8	100	4
CAL:	Air	130	half small	full	2	100	4
CAL:	Air	130	half small	full	3	100	4
CAL:	Air	130	half small	full	4	100	4
CAL:	Air	130	half small	full	5	100	4
CAL:	Air	130	half small	full	8	100	4
CAL:	Air	130	none large	full	2	100	4
CAL:	Air	130	none large	full	3	100	4
CAL:	Air	130	none large	full	4	100	4
CAL:	Air	130	none large	full	5	100	4
CAL:	Air	130	none large	full	8	100	4
CAL:	Air	130	half large	full	2	100	4
CAL:	Air	130	half large	full	3	100	4
CAL:	Air	130	half large	full	4	100	4
CAL:	Air	130	half large	full	5	100	4
CAL:	Air	130	half large	full	8	100	4
CAL:	Air	140	none small	full	5	100	4
CAL:	Air	140	half small	full	5	100	4
CAL:	Air	140	none large	full	5	100	4
CAL:	Air	140	half large	full	5	100	4
CAL:	Ma	100	none large	full	5	30	2
CAL:	Ma	100	none large	full	5	40	2
CAL:	Ma	100	none large	full	5	50	2
CAL:	Ma	100	none large	full	5	60	2
CAL:	Ma	100	none large	full	5	70	2
CAL:	Ma	100	none large	full	5	80	2
CAL:	Ma	100	none large	full	5	90	2

CAL:	Ma	100	none	large	full	5	100	2
CAL:	Ma	100	none	large	full	5	110	2
CAL:	Ma	100	none	large	full	5	120	2
CAL:	Ma	100	none	large	full	5	130	2
CAL:	Ma	100	none	large	full	5	140	2
CAL:	Ma	100	none	large	full	5	150	2
CAL:	Ma	100	none	large	full	5	160	2
CAL:	Ma	100	none	large	full	5	170	2
CAL:	Ma	100	none	large	full	5	180	2
CAL:	Ma	100	none	large	full	5	190	2
CAL:	Ma	100	none	large	full	5	200	2
CAL:	Ma	100	none	large	full	5	210	2
CAL:	Ma	100	none	large	full	5	220	2
CAL:	Ma	100	none	large	full	5	230	2
CAL:	Ma	100	none	large	full	5	240	2
CAL:	Ma	100	none	large	full	5	250	2
CAL:	Ma	100	none	large	full	5	260	2
CAL:	Ma	100	none	large	full	5	270	2
CAL:	Ma	100	none	large	full	5	280	2
CAL:	Ma	100	none	large	full	5	290	2
CAL:	Ma	100	none	large	full	5	300	2
CAL:	Ma	100	none	large	full	5	310	2
CAL:	Ma	100	none	large	full	5	320	2
CAL:	Ma	100	none	large	full	5	330	2
CAL:	Ma	100	none	large	full	5	340	2
CAL:	Ma	100	none	large	full	5	350	2
CAL:	Ma	100	none	large	full	5	360	2
CAL:	Ma	100	none	large	full	5	370	2
CAL:	Ma	100	none	large	full	5	380	2
CAL:	Ma	100	none	large	full	5	390	2
CAL:	Ma	100	none	large	full	5	400	2
CAL:	PilotAir	130	none	large	full	2	30	4

CAL:	FlattsFF	80	none	small	full	8	100	4
CAL:	FlattsFF	80	half	small	full	8	100	4
CAL:	FlattsFF	80	none	large	full	8	100	4
CAL:	FlattsFF	80	half	large	full	8	100	4
CAL:	FlattsFF	100	none	small	full	8	100	4
CAL:	FlattsFF	100	half	small	full	8	100	4
CAL:	FlattsFF	100	none	large	full	8	100	4
CAL:	FlattsFF	100	half	large	full	8	100	4
CAL:	FlattsFF	120	none	small	full	8	100	4
CAL:	FlattsFF	120	half	small	full	8	100	4
CAL:	FlattsFF	120	none	large	full	8	100	4
CAL:	FlattsFF	120	half	large	full	8	100	4
CAL:	FlattsFF	130	none	small	full	8	100	4
CAL:	FlattsFF	130	half	small	full	8	100	4
CAL:	FlattsFF	130	none	large	full	8	100	4
CAL:	FlattsFF	130	half	large	full	8	100	4
CAL:	FlattsFF	140	none	small	full	8	100	4
CAL:	FlattsFF	140	half	small	full	8	100	4
CAL:	FlattsFF	140	none	large	full	8	100	4
CAL:	FlattsFF	140	half	large	full	8	100	4

CAL:	LevelFF	80	none	small	full	8	100	4
CAL:	LevelFF	80	half	small	full	8	100	4
CAL:	LevelFF	80	none	large	full	8	100	4
CAL:	LevelFF	80	half	large	full	8	100	4
CAL:	LevelFF	100	none	small	full	8	100	4
CAL:	LevelFF	100	half	small	full	8	100	4
CAL:	LevelFF	100	none	large	full	8	100	4
CAL:	LevelFF	100	half	large	full	8	100	4
CAL:	LevelFF	120	none	small	full	8	100	4
CAL:	LevelFF	120	half	small	full	8	100	4
CAL:	LevelFF	120	none	large	full	8	100	4

CAL:	LevelFF	120	half large	full	8	100	4
CAL:	LevelFF	130	none small	full	8	100	4
CAL:	LevelFF	130	half small	full	8	100	4
CAL:	LevelFF	130	none large	full	8	100	4
CAL:	LevelFF	130	half large	full	8	100	4
CAL:	LevelFF	140	none small	full	8	100	4
CAL:	LevelFF	140	half small	full	8	100	4
CAL:	LevelFF	140	none large	full	8	100	4
CAL:	LevelFF	140	half large	full	8	100	4

CAL:	Level2FF	80	none small	full	8	100	4
CAL:	Level2FF	80	half small	full	8	100	4
CAL:	Level2FF	80	none large	full	8	100	4
CAL:	Level2FF	80	half large	full	8	100	4
CAL:	Level2FF	100	none small	full	8	100	4
CAL:	Level2FF	100	half small	full	8	100	4
CAL:	Level2FF	100	none large	full	8	100	4
CAL:	Level2FF	100	half large	full	8	100	4
CAL:	Level2FF	120	none small	full	8	100	4
CAL:	Level2FF	120	half small	full	8	100	4
CAL:	Level2FF	120	none large	full	8	100	4
CAL:	Level2FF	120	half large	full	8	100	4
CAL:	Level2FF	130	none small	full	8	100	4
CAL:	Level2FF	130	half small	full	8	100	4
CAL:	Level2FF	130	none large	full	8	100	4
CAL:	Level2FF	130	half large	full	8	100	4
CAL:	Level2FF	140	none small	full	8	100	4
CAL:	Level2FF	140	half small	full	8	100	4
CAL:	Level2FF	140	none large	full	8	100	4
CAL:	Level2FF	140	half large	full	8	100	4