

**INTRODUCTION**



**SYSTEM LEVEL**



**MAINS DISTRIBUTION**



**MAGNET**



**PATIENT SUPPORT**



**GRADIENT AMPLIFIER**



**DATA ACQUISITION SYSTEM**



**PHYSIOLOGY**



**OPERATOR CONSOLE**



**COMPUTER**




**OPTIONS**



CONTENTS:


## ALPHA SERVER 800:

|                                                                           |          |
|---------------------------------------------------------------------------|----------|
| Blockdiagram Alpha Server 800 BH .....                                    | Z1-10.1  |
| SCSI Configuration Alpha Server 800 BH .....                              | Z1-10.2  |
| Connection Monitor, Mouse and Keyboard .....                              | Z3-10.1  |
| Connector Location Alpha Server 800 BH .....                              | Z3-10.2  |
| Connector Location and Jumper Setting Mother Board BHP1 .....             | Z3-10.3  |
| Connector Location and Jumper Setting CPU-Board BHP9 .....                | Z3-10.4  |
| Connector Location and Jumper Setting Frame Buffer Video Board BHP8 ..... | Z3-10.5  |
| Connector Location SCSI Controller BHP7 .....                             | Z3-10.6  |
| Connector Location and Jumper Setting SCSI Controller BHP6 .....          | Z3-10.7  |
| Connector Location Ethernet Controller DE500 BHP5 .....                   | Z3-10.8  |
| Connector Location and Jumper Setting DIGI board BHP3 .....               | Z3-10.9  |
| Connector Location Backpanel for System - and Data Disks BHN .....        | Z3-10.10 |
| Connector Location and Jumper Setting Optical Disk Drive (4.1 GB) .....   | Z3-10.11 |
| Connector Location and Jumper Setting Floppy Disk Drive BHE .....         | Z3-10.12 |
| Connector Location and Jumper Setting CD-Rom .....                        | Z3-10.13 |
| Connector Location and Jumper Setting System or Data Disk .....           | Z3-10.14 |
| Connector Location and Jumper Setting KZPBA-CA Board .....                | Z3-10.15 |
| Ethernet Switch 5708TX .....                                              | Z3-10.16 |
| HP Jetdirect 300X Print server .....                                      | Z3-10.17 |

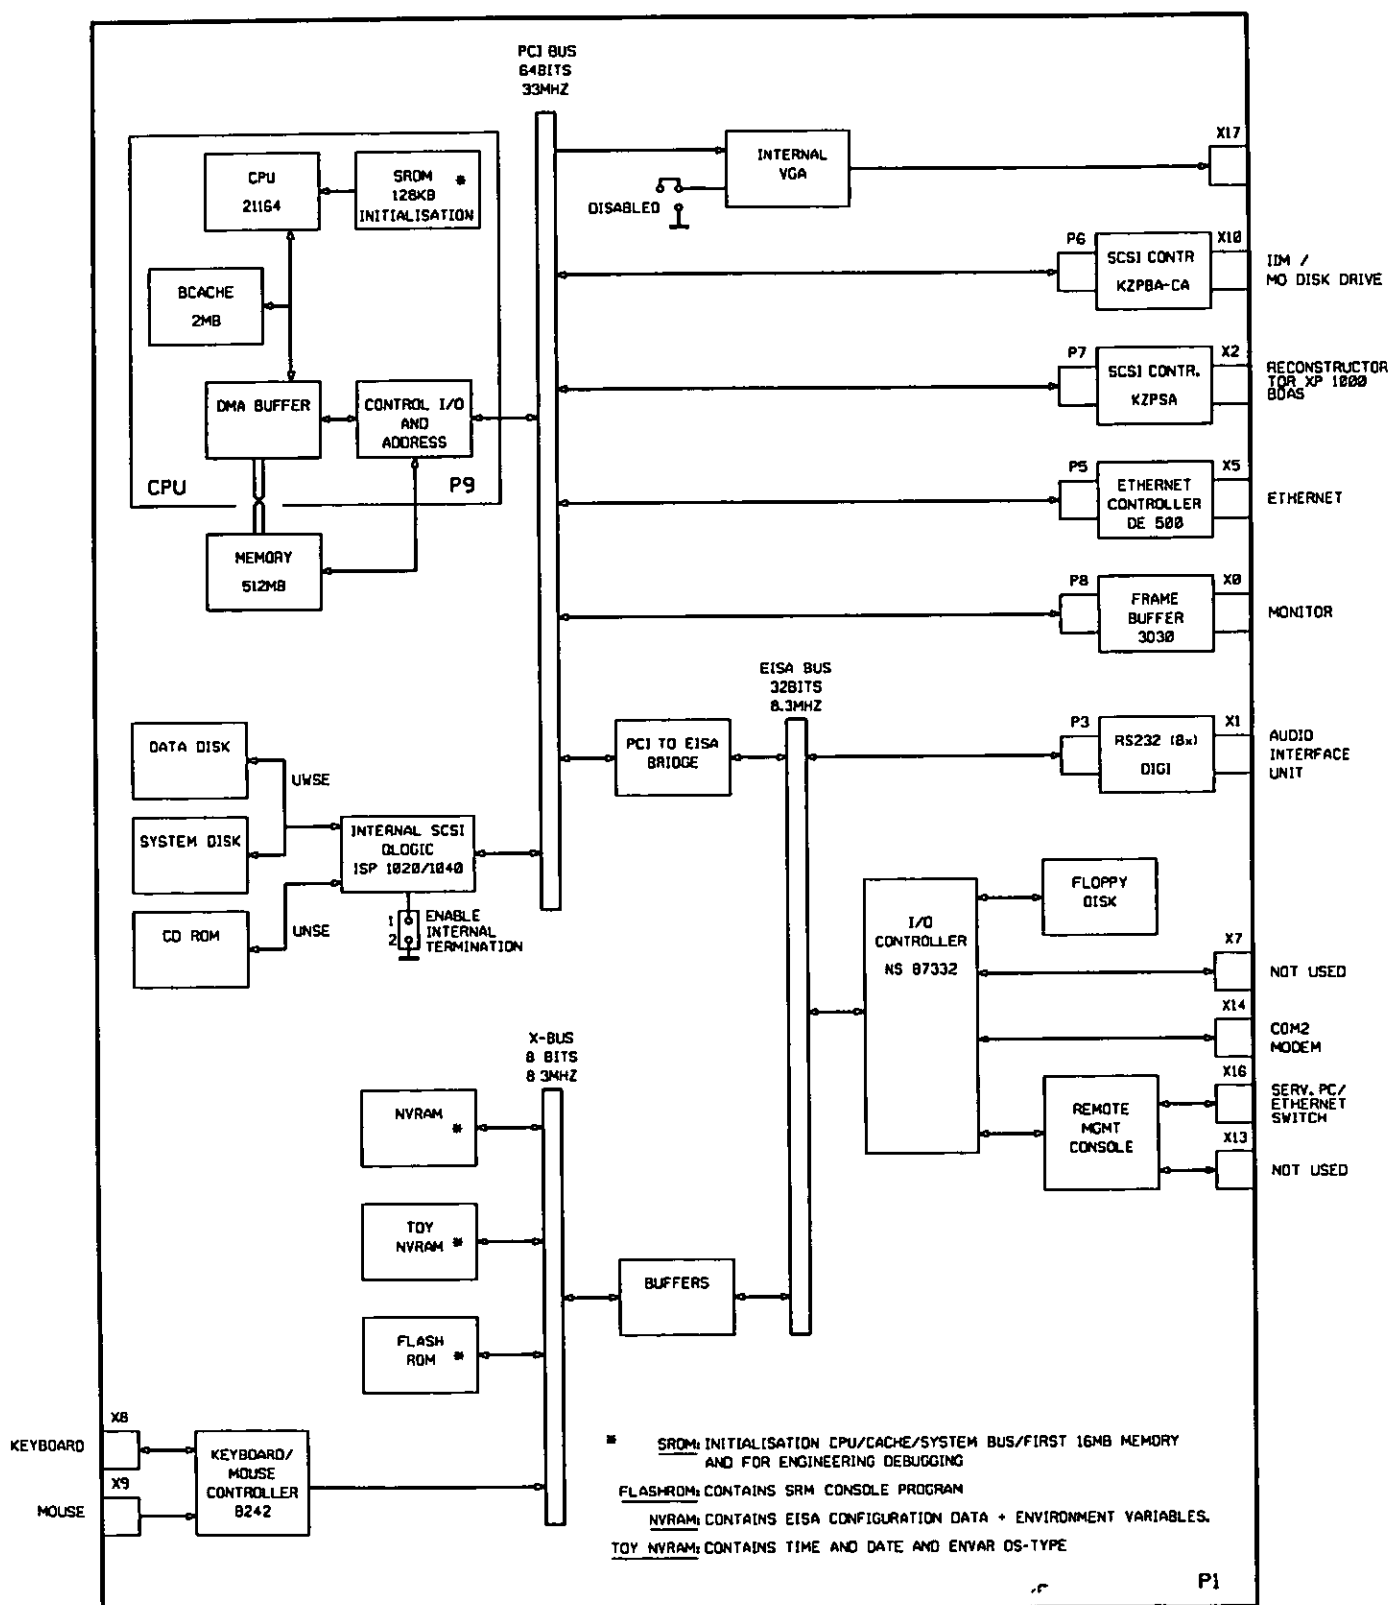

|              |      |              |      |              |        |  |
|--------------|------|--------------|------|--------------|--------|--|
| Intere 0.5 T |      | Intere 1.0 T |      | Intere 1.5 T |        |  |
| Standard     | Omni | Power        | Omni | Power        | Master |  |

BLOCKDIAGRAM  
ALPHA SERVER 800 BH

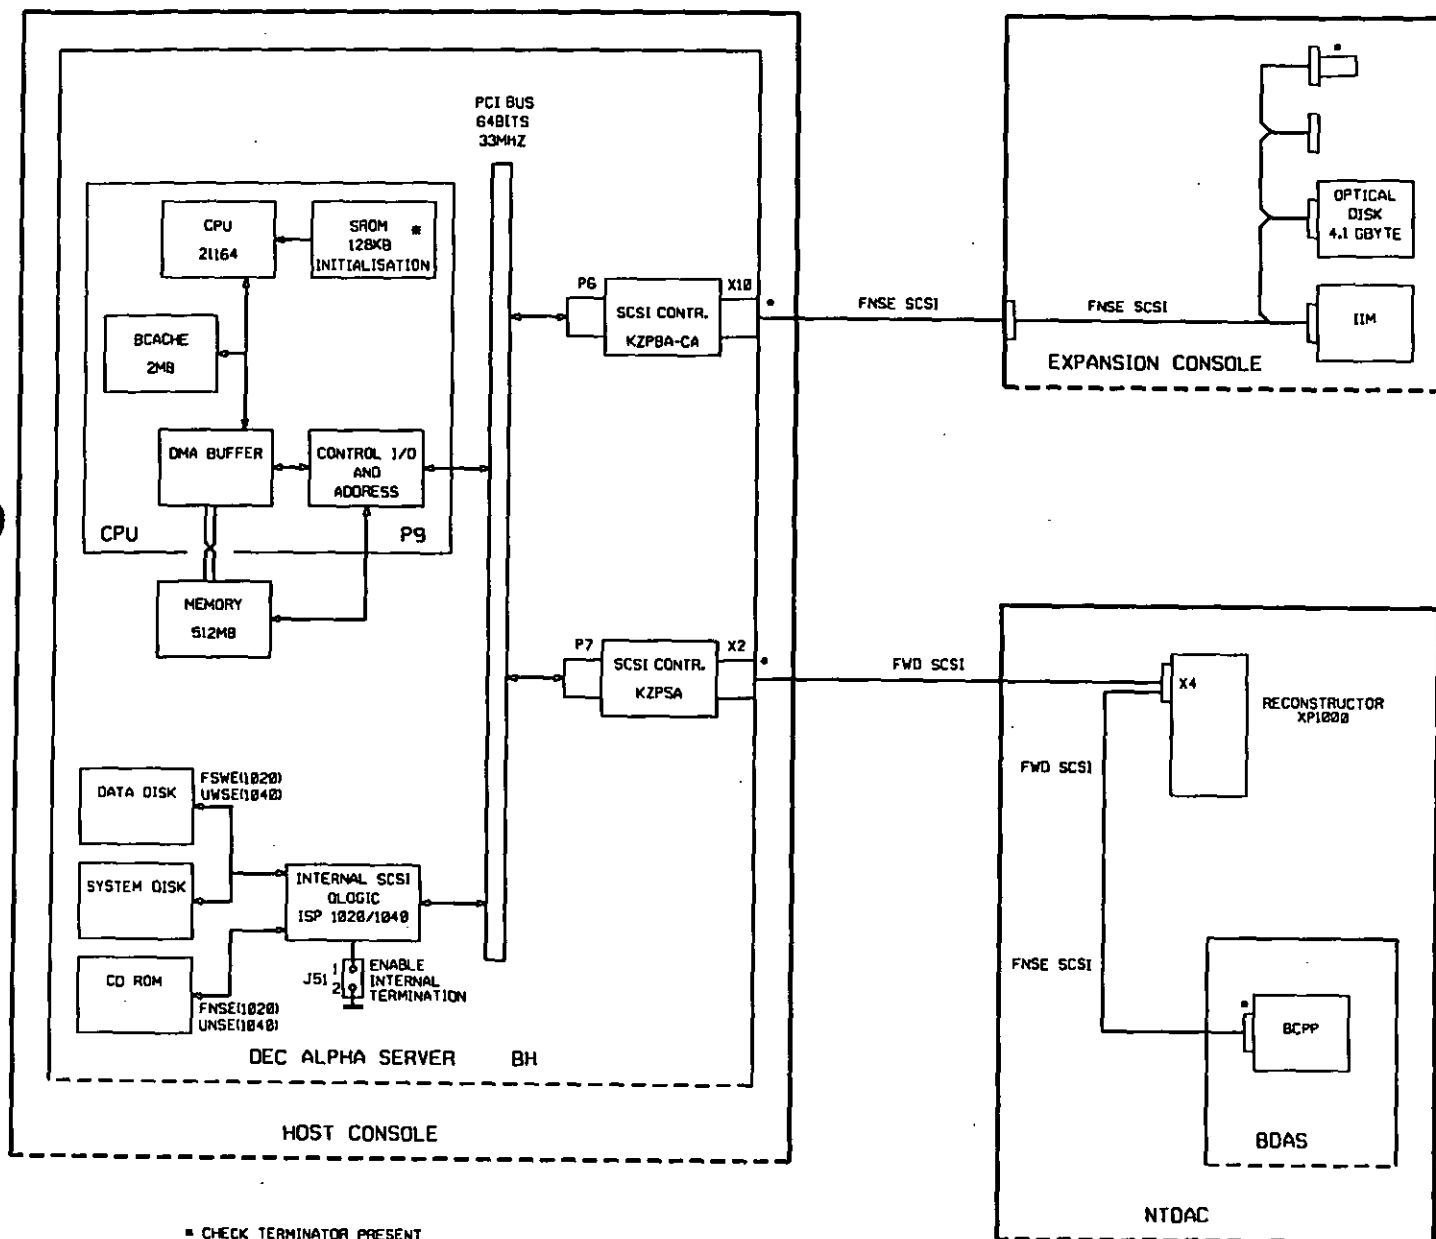


■ CHECK TERMINATOR PRESENT

| SCSI DEVICE NAMES       | CONSOLE MODE<br>(VMS NOT LOADED) | AFTER BOOTING<br>(VMS LOADED) |
|-------------------------|----------------------------------|-------------------------------|
| SYSTEM DISK             | DKA 0                            | DKA 0                         |
| DATA DISK               | DKA 100                          | DKA 100                       |
| CD ROM DRIVE            | DKA 400                          | DKA 400                       |
| M.O. DISK DRIVE         | DKC 200                          | WDC 200                       |
| IIM                     | JKC 300-307                      | GKC 300-307                   |
| BDAS WITH BCPP          | JKB 400-407                      | GKB 400-407                   |
| RECONSTRUCTOR<br>XP1000 | JKB 300-307                      | GKB 300-302                   |

| SCSI<br>STANDARD          | SCSI NAMES & VERSIONS<br>S=SLOW F=FAST<br>N=NARROW W=WIDE<br>SE=SINGLE ENDED<br>D=DIFFERENTIAL | BUS WIDTH<br>(BITS) | MAX SPEED<br>(MBYTE/s) | MAX BUS LENGTH<br>(m) |              |
|---------------------------|------------------------------------------------------------------------------------------------|---------------------|------------------------|-----------------------|--------------|
|                           |                                                                                                |                     |                        | SINGLE<br>ENDED       | DIFFERENTIAL |
| SCSI-II                   | FAST SCSI                                                                                      | 8                   | 10                     | 3                     | 25           |
|                           | FAST WIDE SCSI                                                                                 | 16                  | 20                     | 3                     | A+B425       |
| ULTRA I<br>OR<br>SCSI-III | ULTRA SCSI                                                                                     | 8                   | 20                     | 1.5                   | 25           |


| Intera 0.5 T |      | Intera 1.0 T |      | Intera 1.5 T |        |
|--------------|------|--------------|------|--------------|--------|
| Standard     | Omni | Power        | Omni | Power        | Master |

## SCSI CONFIGURATION ALPHA SERVER 800 BH

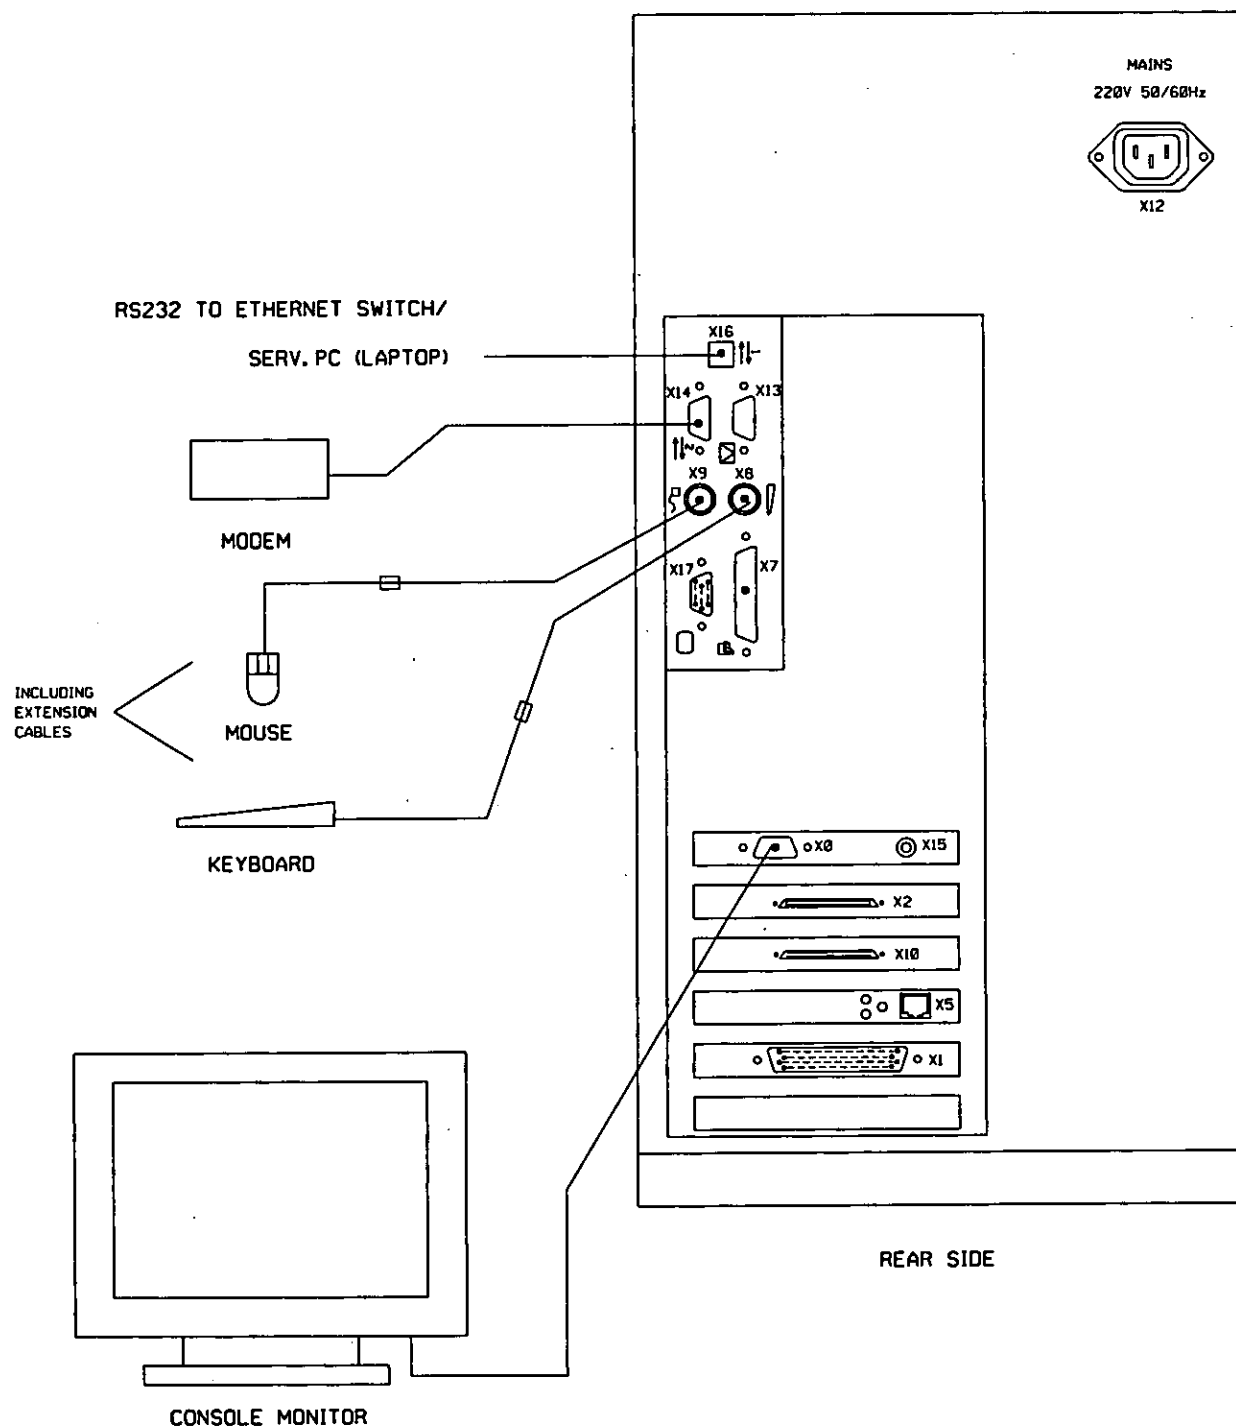


| Intera 8.5 T |      | Intera 1.8 T |      | Intera 1.5 T |        |
|--------------|------|--------------|------|--------------|--------|
| Standard     | Omni | Power        | Omni | Power        | Master |


CONNECTION MONITOR-  
MOUSE AND KEYBOARD

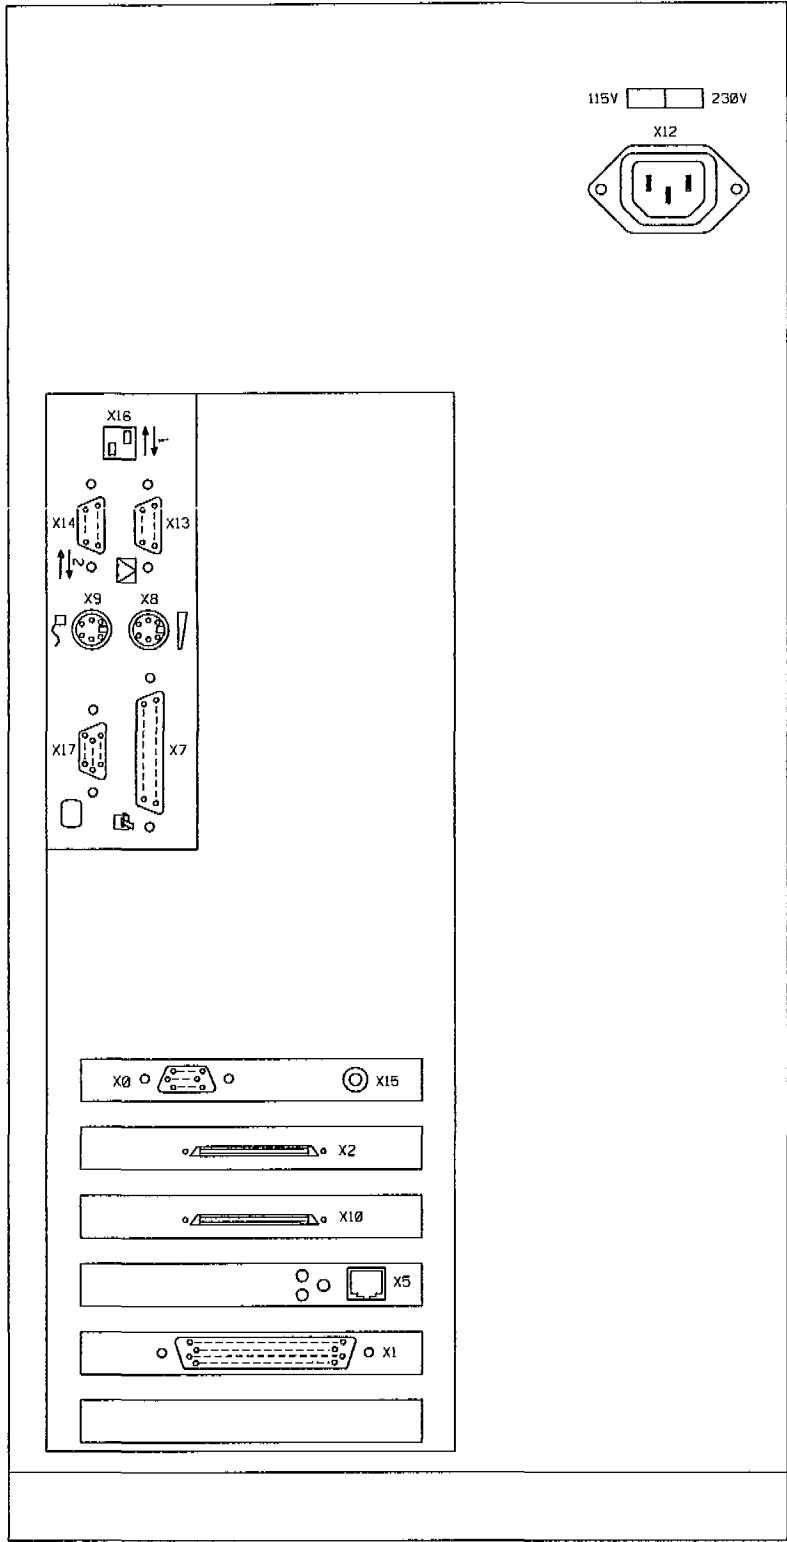

REAR SIDE

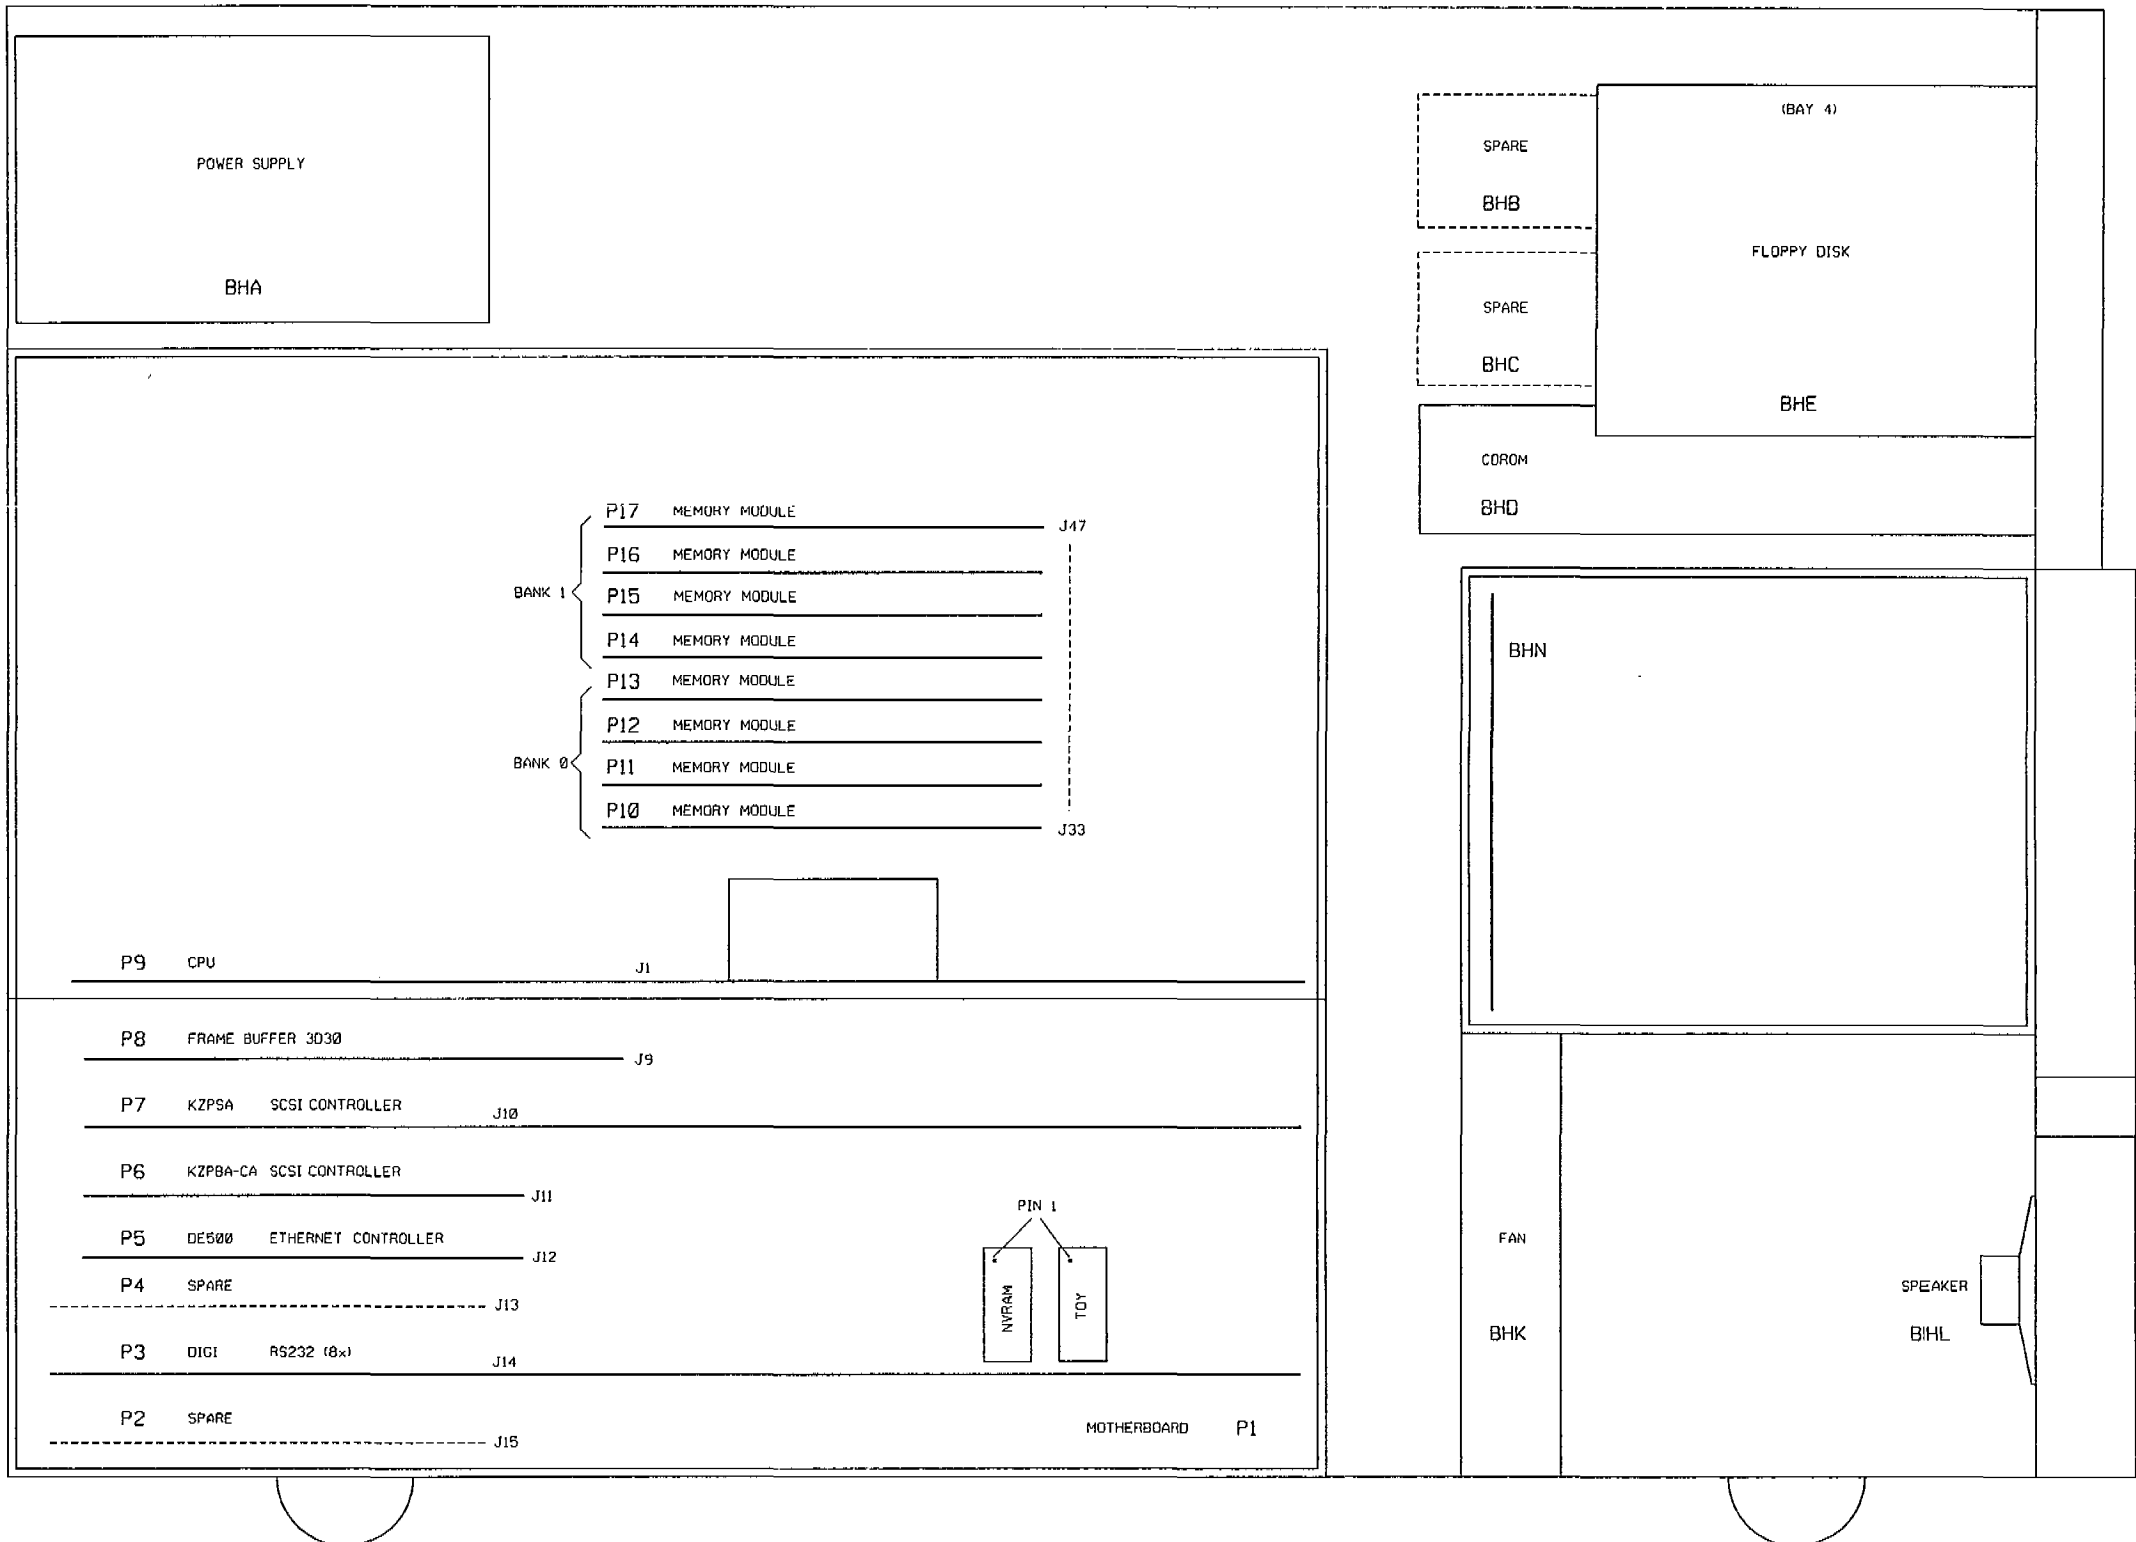

LEFT SIDE

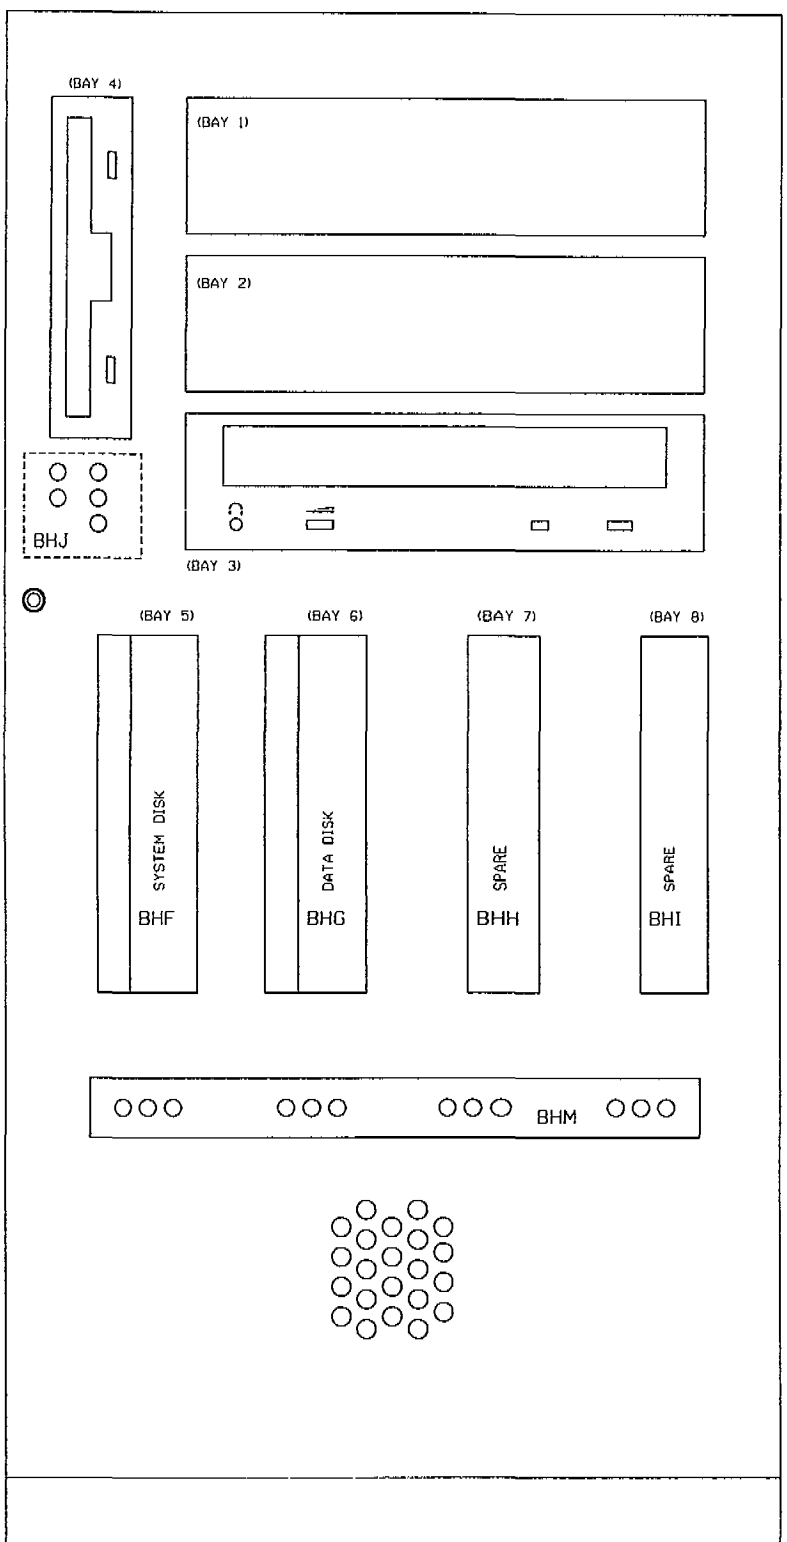

FRONT SIDE



| BOARD    | NAME        | LOCATION ON MOTHERBOARD | SLOT * IN >>> SH CONFIG. |
|----------|-------------|-------------------------|--------------------------|
| BHG : P1 | MOTHERBOARD | --                      | --                       |
| BHG : P2 | (SPARE)     | J15                     | --                       |
| BHG : P3 | DIGI        | J14                     | SLOT 02                  |
| BHG : P4 | (SPARE)     | J13                     | --                       |
| BHG : P5 | DE500       | J12                     | SLOT 14                  |
| BHG : P6 | KZPBA-CA    | J11                     | SLOT 13                  |
| BHG : P7 | KZPSA       | J10                     | SLOT 12                  |
| BHG : P8 | 3030        | J9                      | SLOT 11                  |
| BHG : P9 | CPU         | J1                      | --                       |

| Inter-a 0.5 T |      | Inter-a 1.0 T |      | Inter-a 1.5 T |        |
|---------------|------|---------------|------|---------------|--------|
| Standard      | Omni | Power         | Omni | Power         | Master |

CONNECTOR LOCATION  
ALPHA SERVER 800 BH


# DEFAULT SETTINGS

J27 = DISABLE ON-BOARD VGA  
J51 = ENABLE INTERNAL SCSI TERMINATION  
J22 = SET DEFAULT VALUES TO RMC  
J50 = 12V ENABLED TO UPDATE FLASH ROM

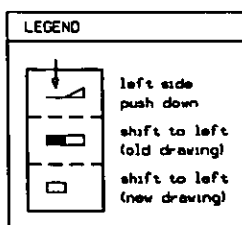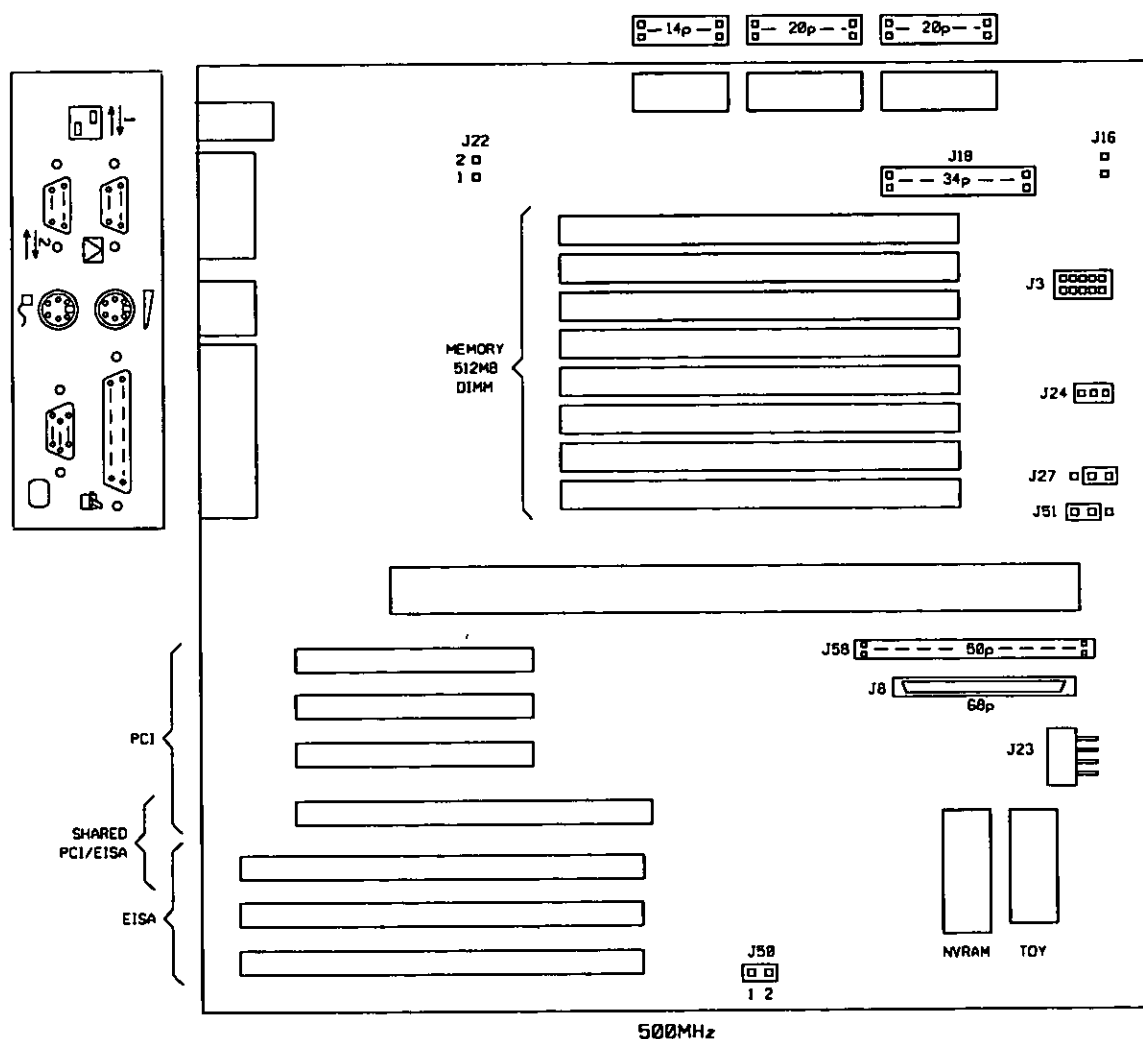



| Intera 8.5 T |      | Intera 1.0 T |      | Intera 1.5 T |        |
|--------------|------|--------------|------|--------------|--------|
| Standard     | Omni | Power        | Omni | Power        | Master |

## CONNECTOR LOCATION AND JUMPER SETTING MOTHER BOARD BHP1

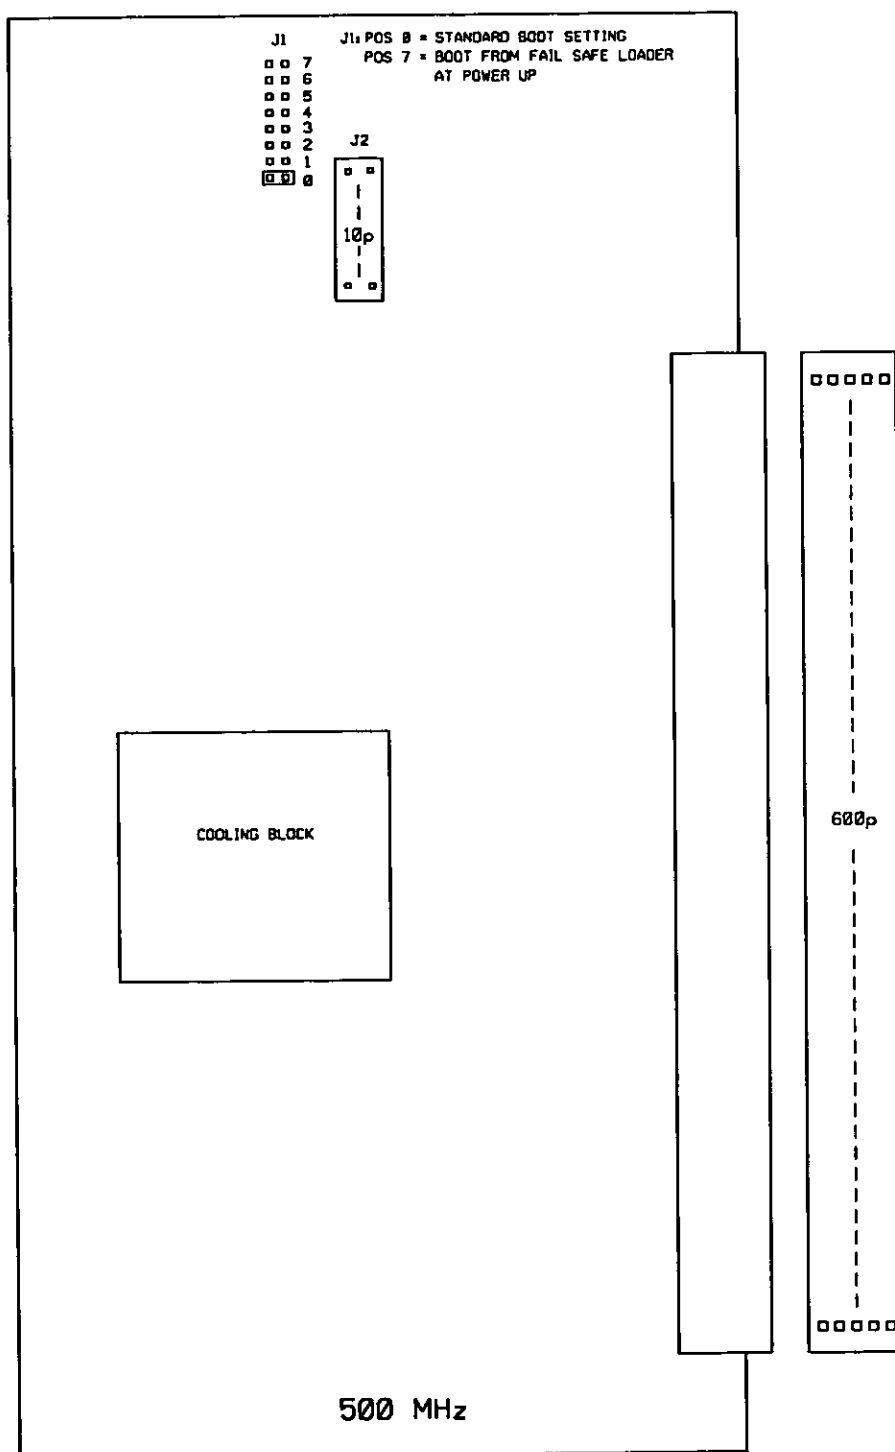



## CONNECTOR LOCATION AND JUMPER SETTING CPU BOARD BHP9

| Intera 2.5 T | Intera 1.8 T |       | Intera 1.5 T |       |        |
|--------------|--------------|-------|--------------|-------|--------|
| Standard     | Omni         | Power | Omni         | Power | Master |

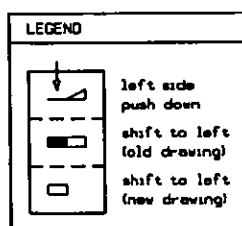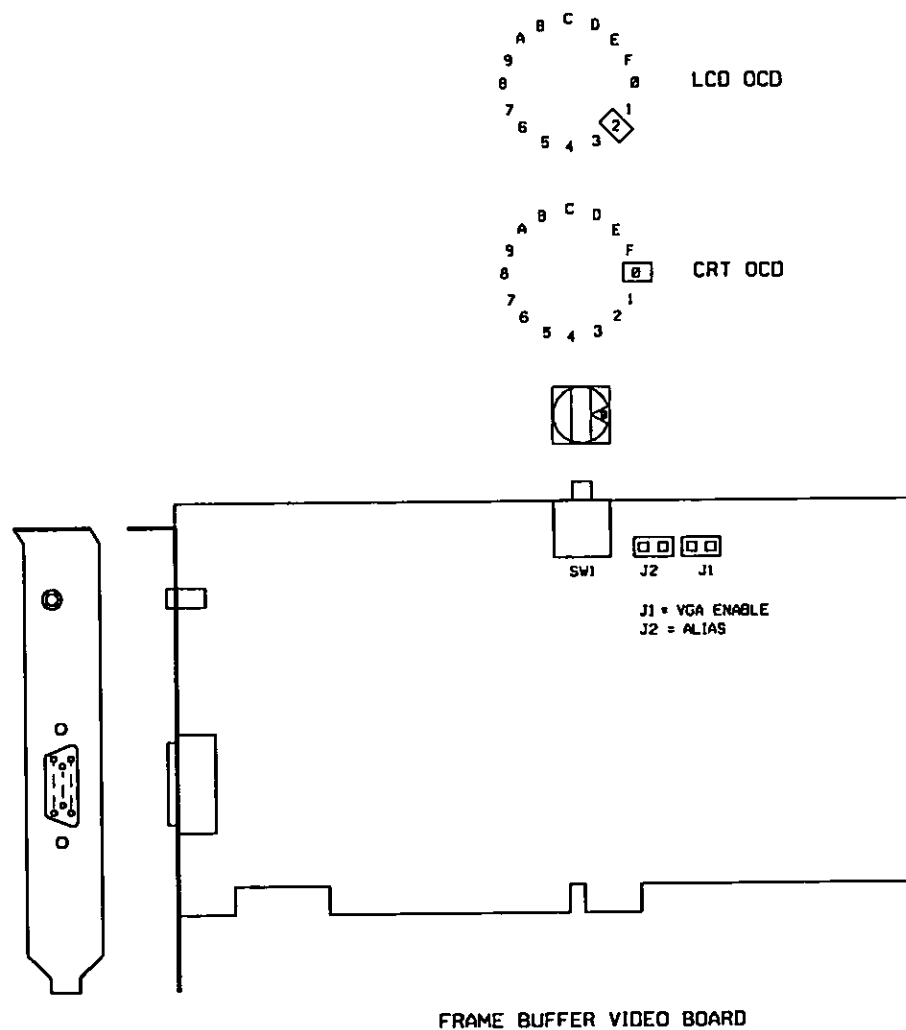

| Intera 0.5 T |      |       | Intera 1.0 T |       |        | Intera 1.5 T |  |  |
|--------------|------|-------|--------------|-------|--------|--------------|--|--|
| Standard     | Omni | Power | Omni         | Power | Master |              |  |  |



## CONNECTOR LOCATION AND JUMPER SETTING FRAME BUFFER VIDEO BRD. BHP8

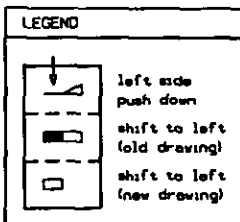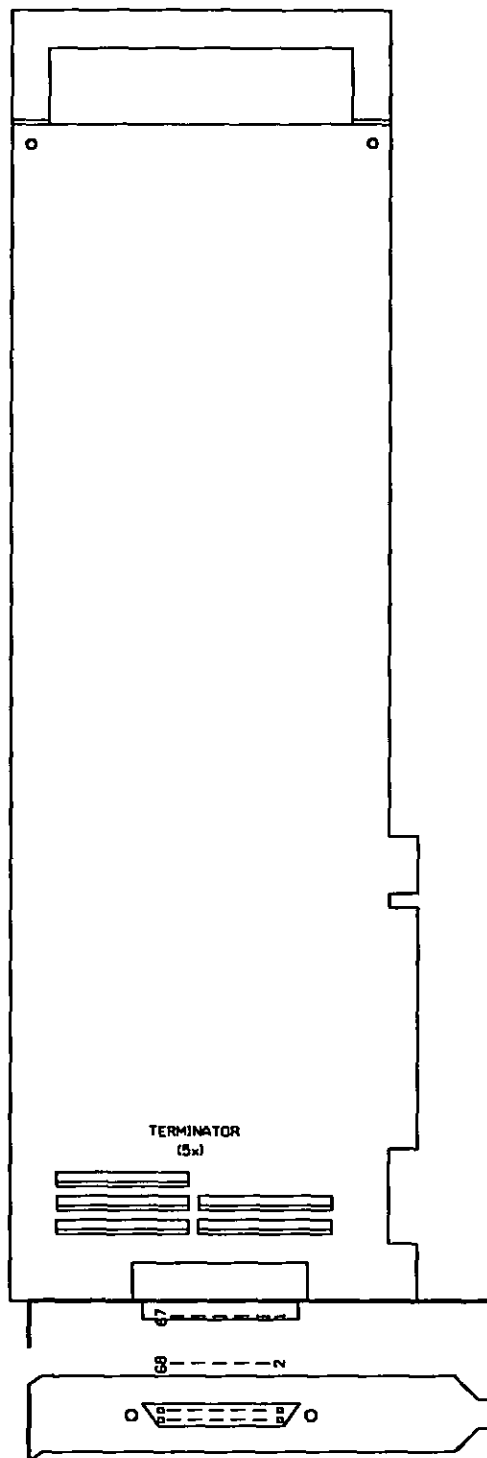

| Intera 8.5 T | Intera 1.0 T |       | Intera 1.5 T |       |        |
|--------------|--------------|-------|--------------|-------|--------|
| Standard     | Omni         | Power | Omni         | Power | Master |


KZPSA SCSI CONTROLLER

## CONNECTOR LOCATION SCSI CONTROLLER BHP7

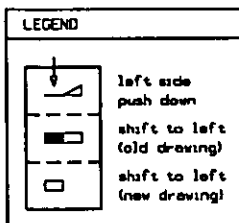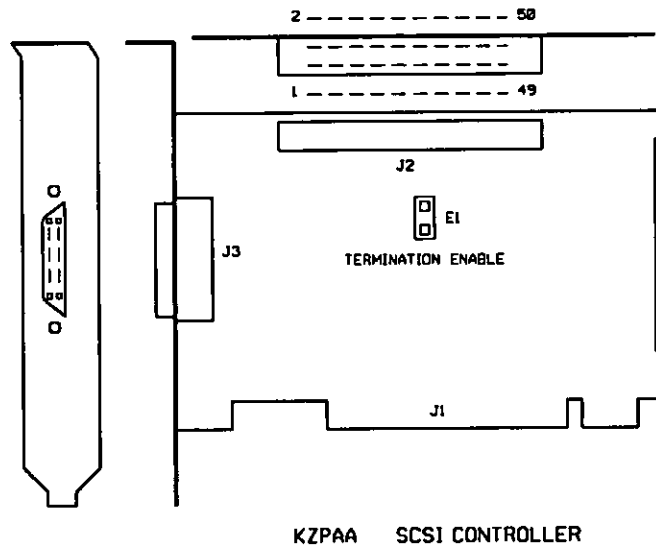


| Intera 0.5 T |      | Intera 1.0 T |      | Intera 1.5 T |        |
|--------------|------|--------------|------|--------------|--------|
| Standard     | Dim1 | Power        | Dim1 | Power        | Master |

## CONNECTOR LOCATION AND JUMPER SETTING SCSI CONTROLLER BHP6

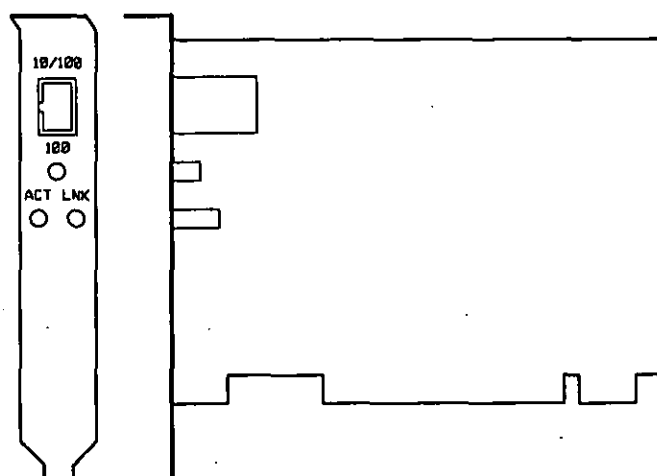


DE500

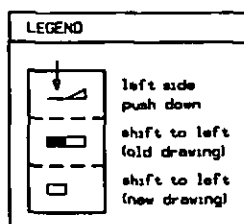


| Intera 0.5 T | Intera 1.0 T |       | Intera 1.5 T |       |        |
|--------------|--------------|-------|--------------|-------|--------|
| Standard     | Demu         | Power | Demu         | Power | Master |

# CONNECTOR LOCATION ETHERNET CONTROLLER DE500 BHP5

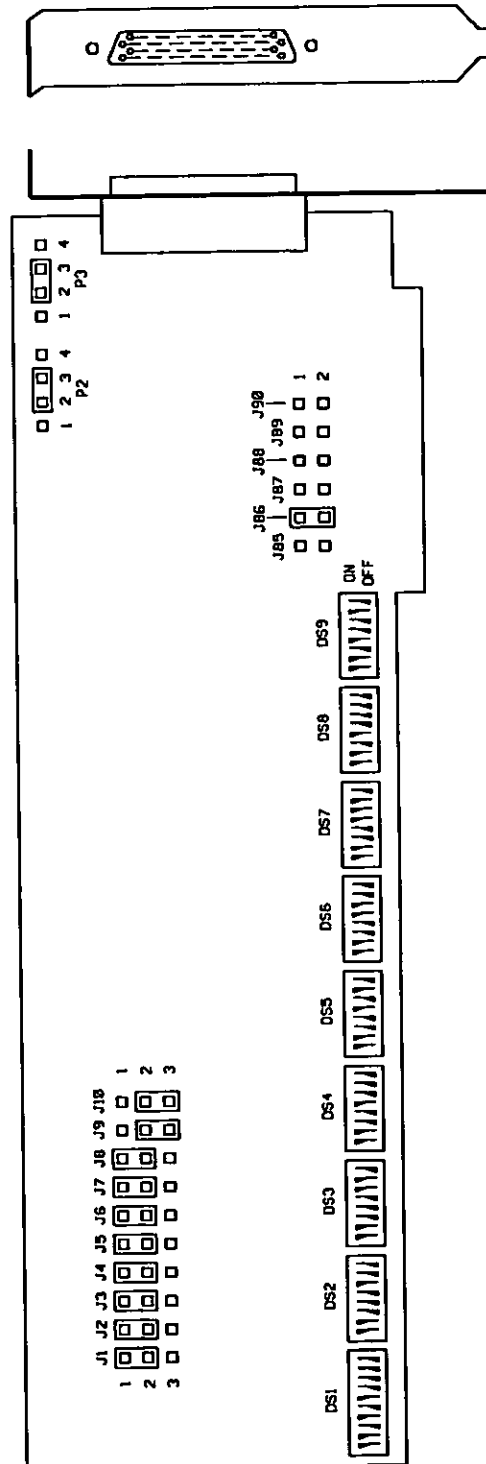


DIGI RS232 (8x)

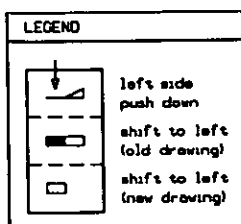


| Interco 0.5 T |      | Interco 1.0 T |      | Interco 1.5 T |        |
|---------------|------|---------------|------|---------------|--------|
| Standard      | Omni | Power         | Omni | Power         | Master |


## CONNECTOR LOCATION AND JUMPER SETTING DIGI BOARD BHP3

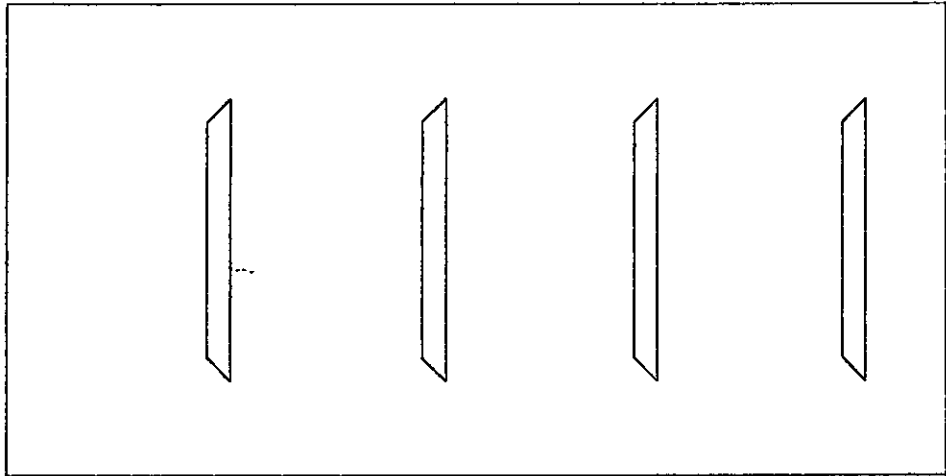


FRONT SIDE

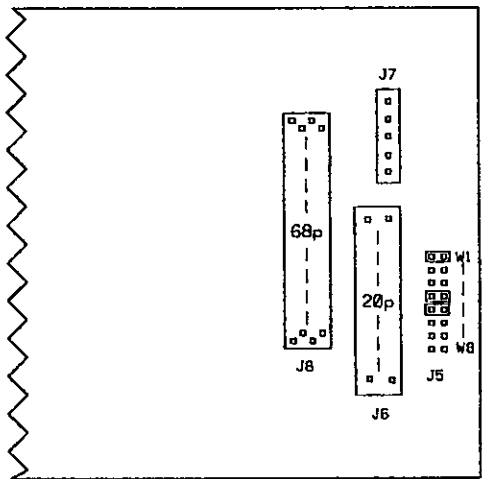

REAR SIDE

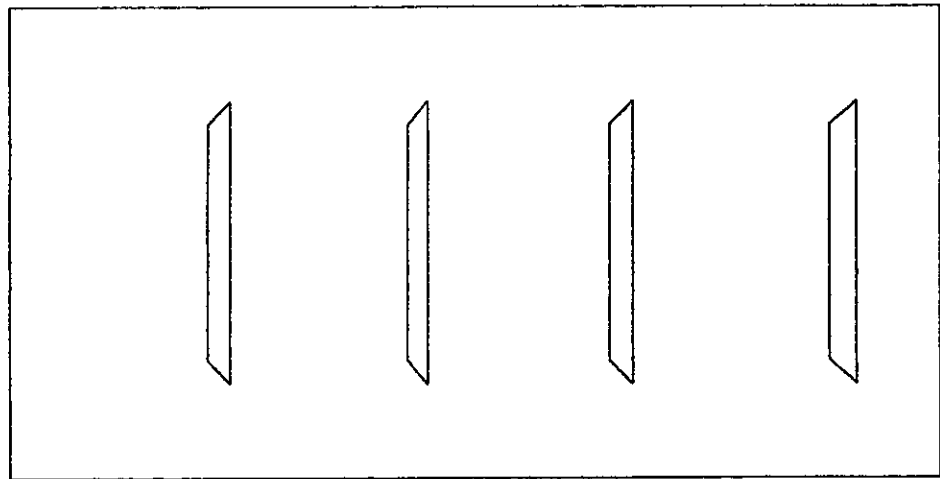


FRONT SIDE

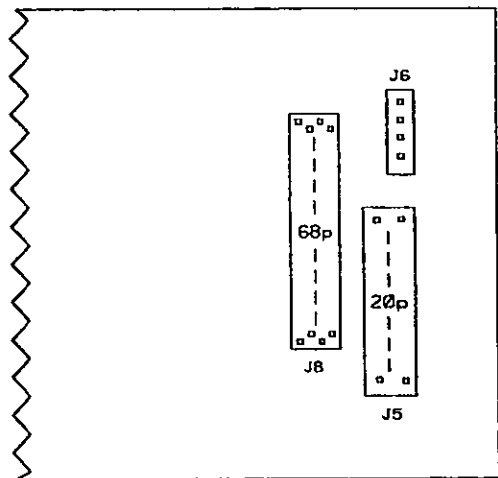


REAR SIDE

| Intera 85 T |      |       | Intera 1.0 T |       |        | Intera 1.5 T |  |  |
|-------------|------|-------|--------------|-------|--------|--------------|--|--|
| Standard    | Omni | Power | Omni         | Power | Master |              |  |  |


CONNECTOR LOCATION  
BACKPANEL FOR  
SYSTEM- AND DATA DISKS BHN

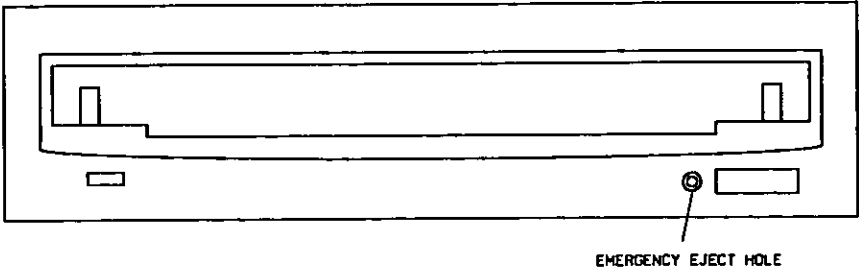

FRONT VIEW

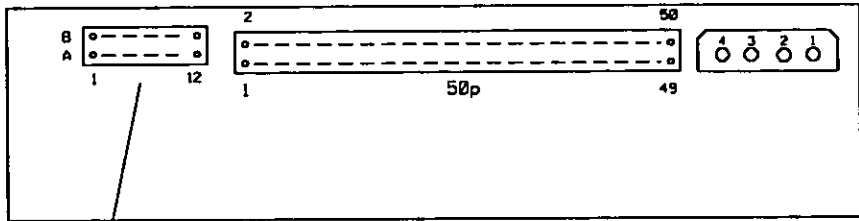


REAR VIEW

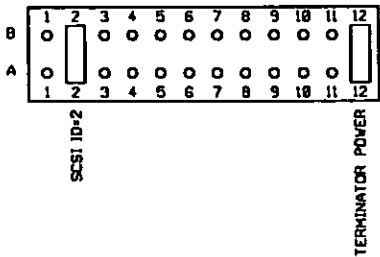


| MANUF. | TYPE     | REMARK                               |
|--------|----------|--------------------------------------|
| SONY   | SMO-F551 | 4.1 GBYTE MAGNETO OPTICAL DISK DRIVE |

# CONNECTOR LOCATION AND JUMPER SETTING 4.1 GB M.O. DISK DRIVE


| Intera 8.5 T | Intera 1.0 T | Intera 1.5 T |
|--------------|--------------|--------------|
| Standard     | Omni         | Power        |
|              | Omni         | Power        |
|              |              | Master       |

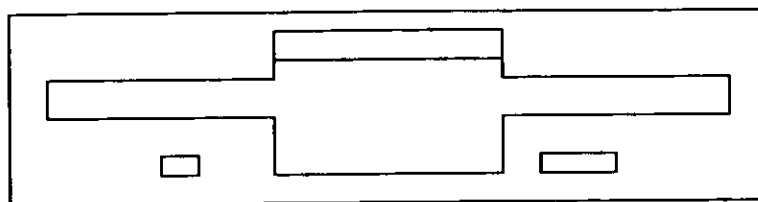

FRONT SIDE

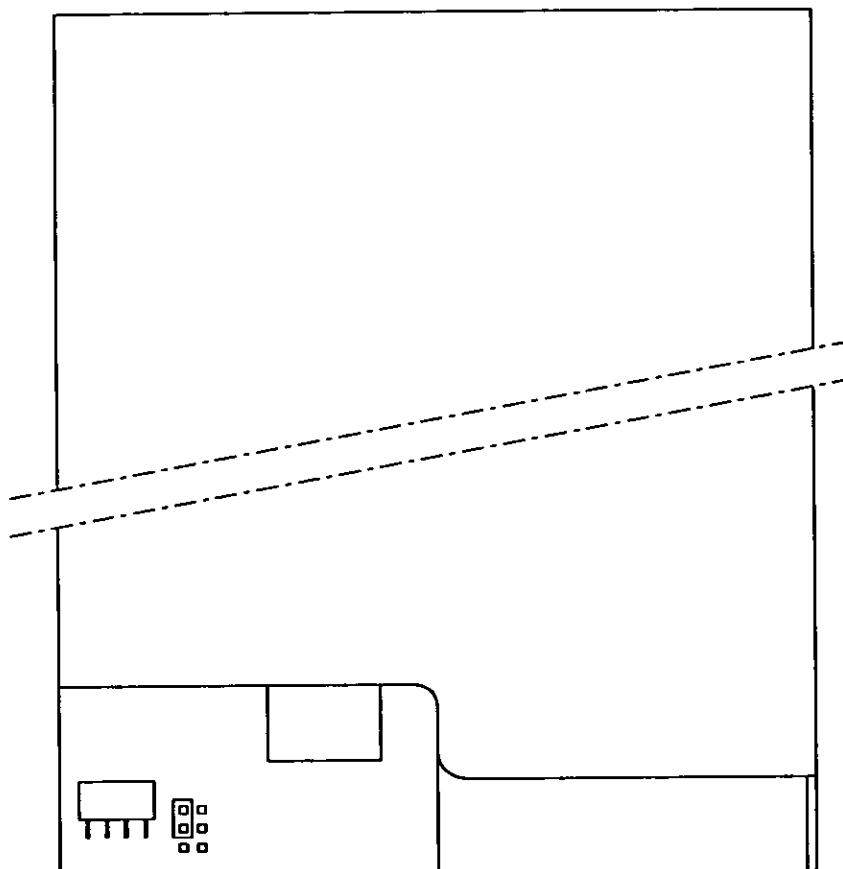


REAR SIDE

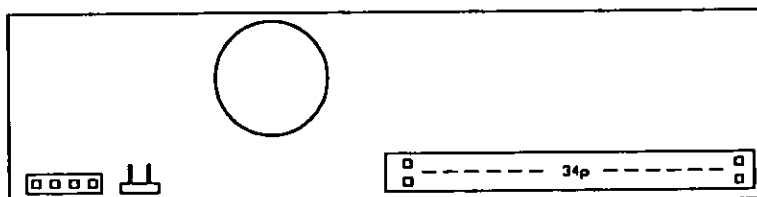


| Intera 0.5 T |      | Intera 1.0 T |      | Intera 1.5 T |        |
|--------------|------|--------------|------|--------------|--------|
| Standard     | Omni | Power        | Omni | Power        | Master |

## CONNECTOR LOCATION AND JUMPER SETTING FLOPPY DISK DRIVE


BHE

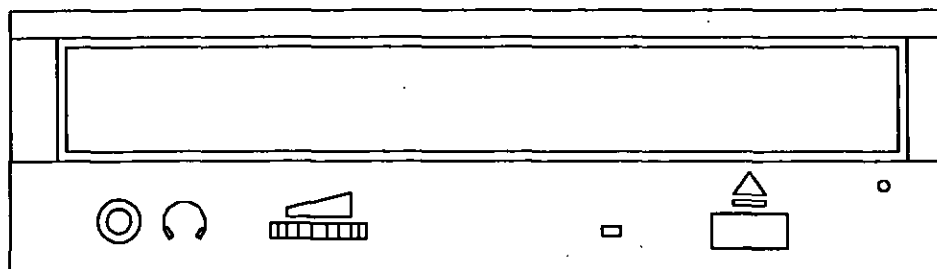

FRONT VIEW

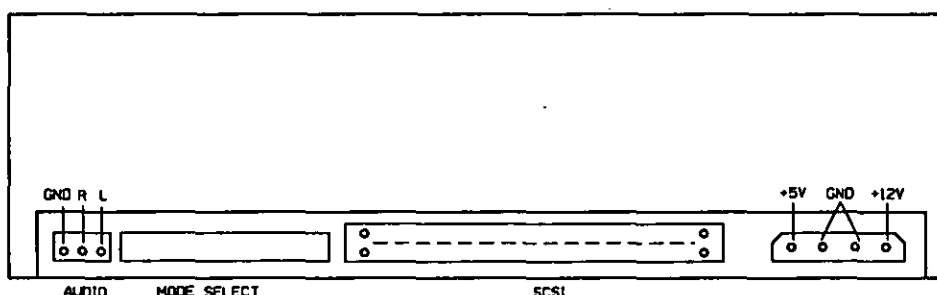


REAR VIEW

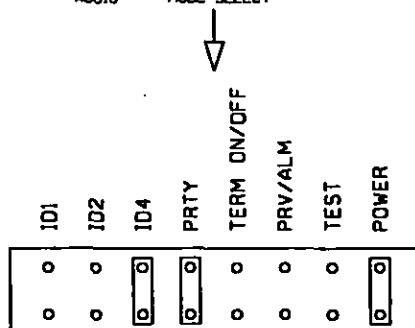


| MANUF.  | TYPE     | REMARK   |
|---------|----------|----------|
| TOSHIBA | XM 6201B | 32 SPEED |
| DIGITAL | RRD47    | 32 SPEED |

| Intera 8.5 T |      |       | Intera 1.8 T |       |        | Intera 1.5 T |  |  |
|--------------|------|-------|--------------|-------|--------|--------------|--|--|
| Standard     | Omni | Power | Omni         | Power | Master |              |  |  |

## CONNECTOR LOCATION AND JUMPER SETTING CD-ROM

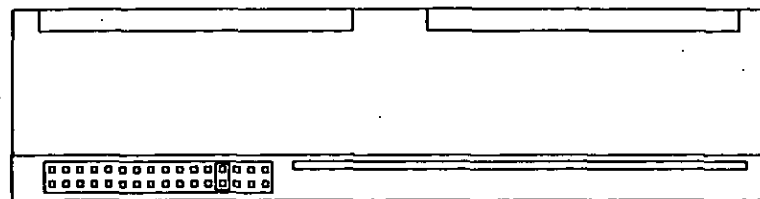

FRONT SIDE

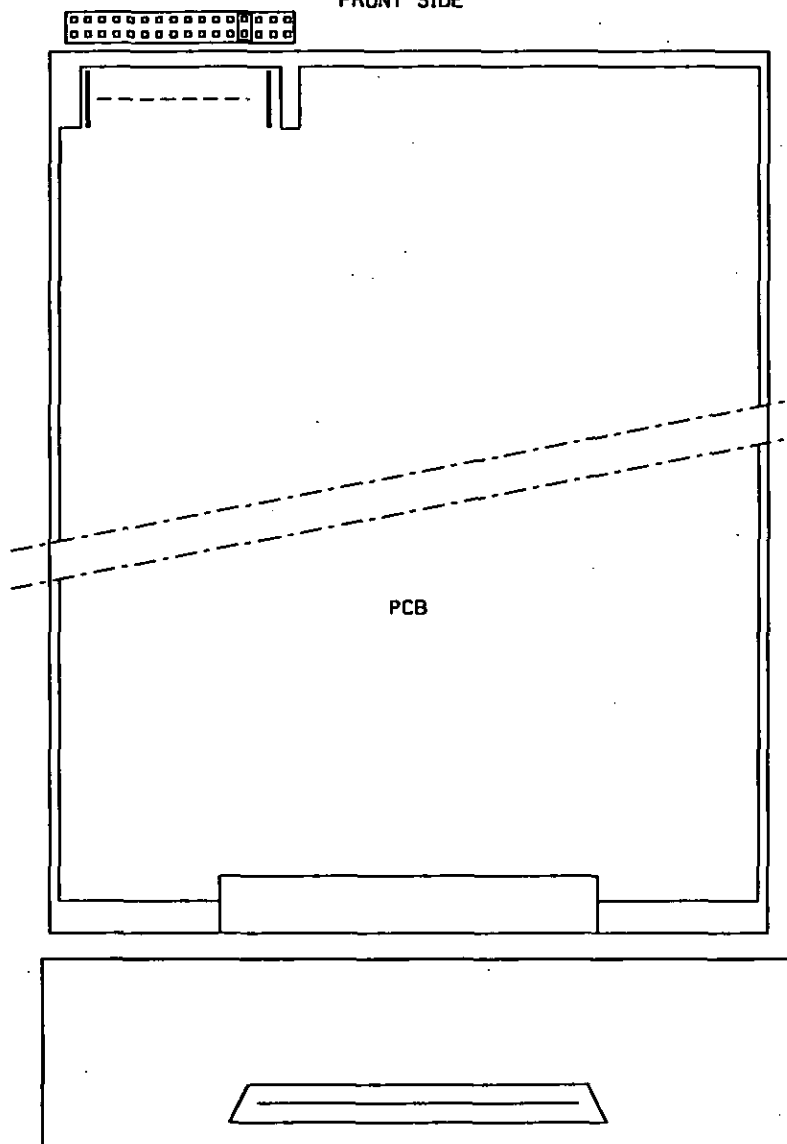

PCB

REAR SIDE

**NOTE:**


SCSI ID: IS DETERMINED BY POSITION OF DISK  
IN THE DRIVE BAY. (BAY 0---3 = SCSI ID 0---3)

| MANUF. | TYPE     | REMARK                   |
|--------|----------|--------------------------|
| IBM    | RZ1DF-CB | 9 GB SYSTEM / DATA DISK  |
| IBM    | RZ1EF-CB | 18 GB OPTIONAL DATA DISK |

| Intera 0.5 T | Intera 1.0 T |       | Intera 1.5 T |       |        |
|--------------|--------------|-------|--------------|-------|--------|
| Standard     | Dens         | Power | Dens         | Power | Master |

## CONNECTOR LOCATION AND JUMPER SETTING SYSTEM OR DATA DISK


KZPBA-CA

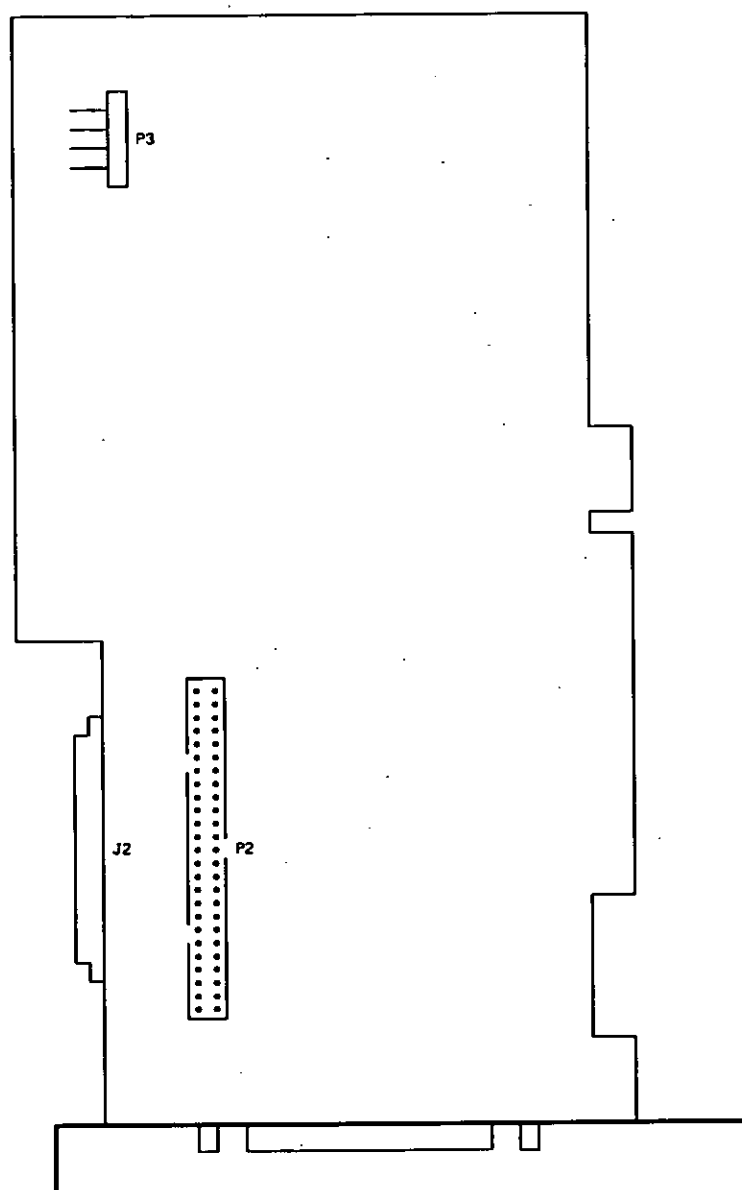


| Intera 0.5 T |      | Intera 1.0 T |      | Intera 1.5 T |        |
|--------------|------|--------------|------|--------------|--------|
| Standard     | Omni | Power        | Omni | Power        | Master |

# CONNECTOR LOCATION AND JUMPER SETTING KZPBA-CA BOARD

REAR

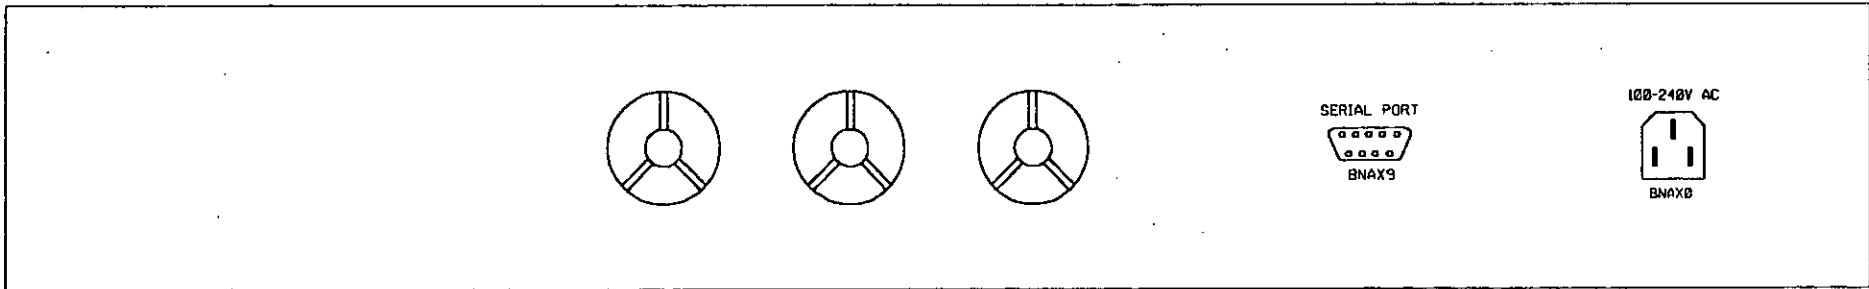

FRONT

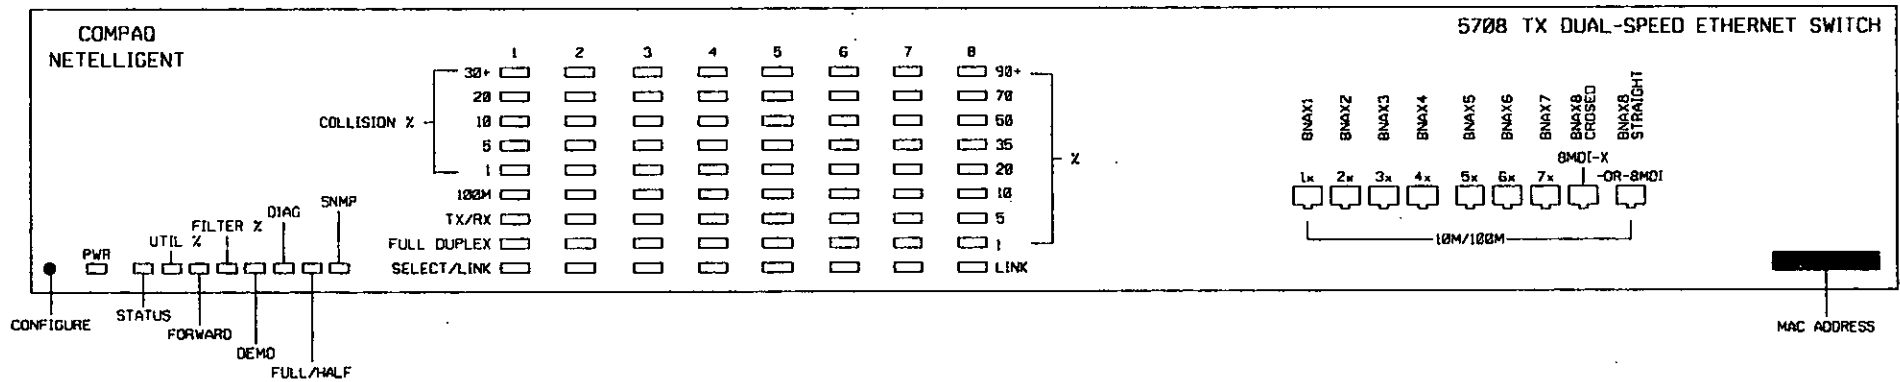


| Intera 0.5 T |      | Intera 1.0 T |      | Intera 1.5 T |        |
|--------------|------|--------------|------|--------------|--------|
| Standard     | Omni | Power        | Omni | Power        | Master |



ETHERNET SWITCH  
5708TX

HP JETDIRECT 300X

BACK VIEW

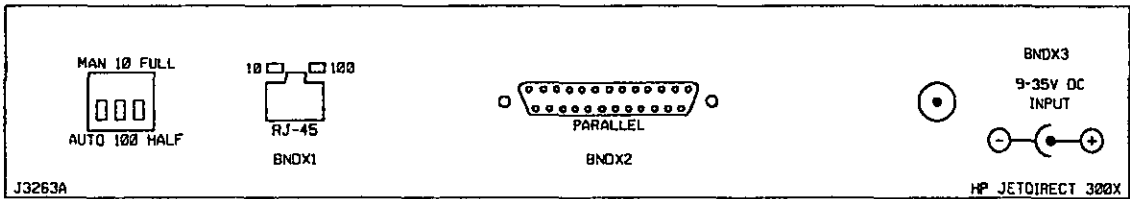

TOP VIEW

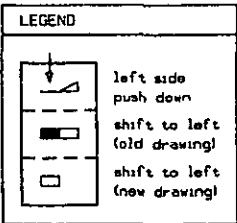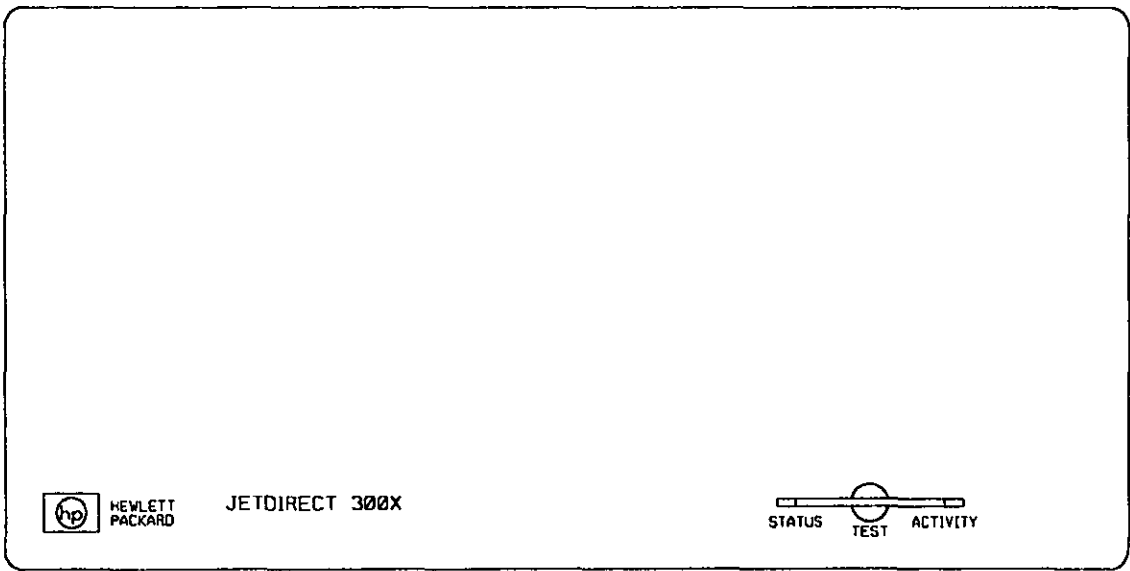

| Intera 25 T |      | Intera 10 T |      | Intera 1.5 T |        |  |
|-------------|------|-------------|------|--------------|--------|--|
| Standard    | Omni | Power       | Omni | Power        | Master |  |

HP JETDIRECT 300X  
PRINT SERVER

**INTRODUCTION**



**SYSTEM LEVEL**



**MAINS DISTRIBUTION**



**MAGNET**



**PATIENT SUPPORT**



**GRADIENT AMPLIFIER**



**DATA ACQUISITION SYSTEM**



**PHYSIOLOGY**



**OPERATOR CONSOLE**



**COMPUTER**



**OPTIONS**

