

INTRODUCTION



SYSTEM LEVEL



MAINS DISTRIBUTION



MAGNET



PATIENT SUPPORT



GRADIENT AMPLIFIER



DATA ACQUISITION SYSTEM



PHYSIOLOGY



OPERATOR CONSOLE



COMPUTER




OPTIONS




CONTENTS:

Block Diagram Data Acquisition System	Z1-7.1
Block Diagram BDAS Part 1	Z1-7.2
Block Diagram BDAS Part 2	Z1-7.3
Block Diagram BDAS Part 3	Z1-7.4
Standard Block Diagram BBM Box MGB	Z1-7.5
Omni/Power/Master Block Diagram Hybrid Box MGB	Z1-7.6
Block Diagram Reconstructor XP1000	Z1-7.7
Principle Diagram PFEI-M	Z1-7.8
Wiring Diagram PFEI Assy MM	Z2-7.1
Front View NTDAC-MT F.	Z3-7.1
Jumper Setting BDAS FC	Z3-7.2
Front View and Wiring DAC Cable Interface Unit FM	Z3-7.3
Standard Lay Out RF Amplifier MR5002 FR	Z3-7.4
Omni/Power/Master Lay Out RF Power Amplifier S23A-64 S24A-42 FR	Z3-7.5
Omni/Power/Master Front View RF Power Amplifier S21 FR	Z3-7.5.1
Connector Location and Overview Reconstructor XP1000 FL	Z3-7.6
Connector Location and Jumper Setting Main Logic Board XP1000	Z3-7.7
Connector Location and Jumper Setting CPU Daughter Board XP1000	Z3-7.8
Connector Location and Jumper Setting Reconstructor XP1000	Z3-7.9
Connector Location and Jumper Setting Floppy/CD-Rom Disk Drive XP1000	Z3-7.10
Connector Location and Jumper Setting Hard Disk Drives XP1000	Z3-7.11
PFEI MM	Z3-7.12
Jumper Setting PFEI MM	Z3-7.13
Standard Connector Location and Jumper Setting BBM Box MGB	Z3-7.14
Omni/Power/Master Connector Location Hybrid Box MGB	Z3-7.15
Standard Power/Master Quad Body Coil MGQ	Z3-7.16.1
Omni/Power/Master Quad Body Coil MGQ	Z3-7.16.2
Quad Body Coil MGQ	Z3-7.17
Standard Trimmer Location Quadrature Headcoil (41) SRA	Z3-7.18
Omni/Power/Master Trimmer Location Quadrature Headcoil (51) SRA	Z3-7.19
Jumper Setting Quadrature Headcoil SRA	Z3-7.20
Connector Location Mains Inlet Unit FI	Z3-7.21

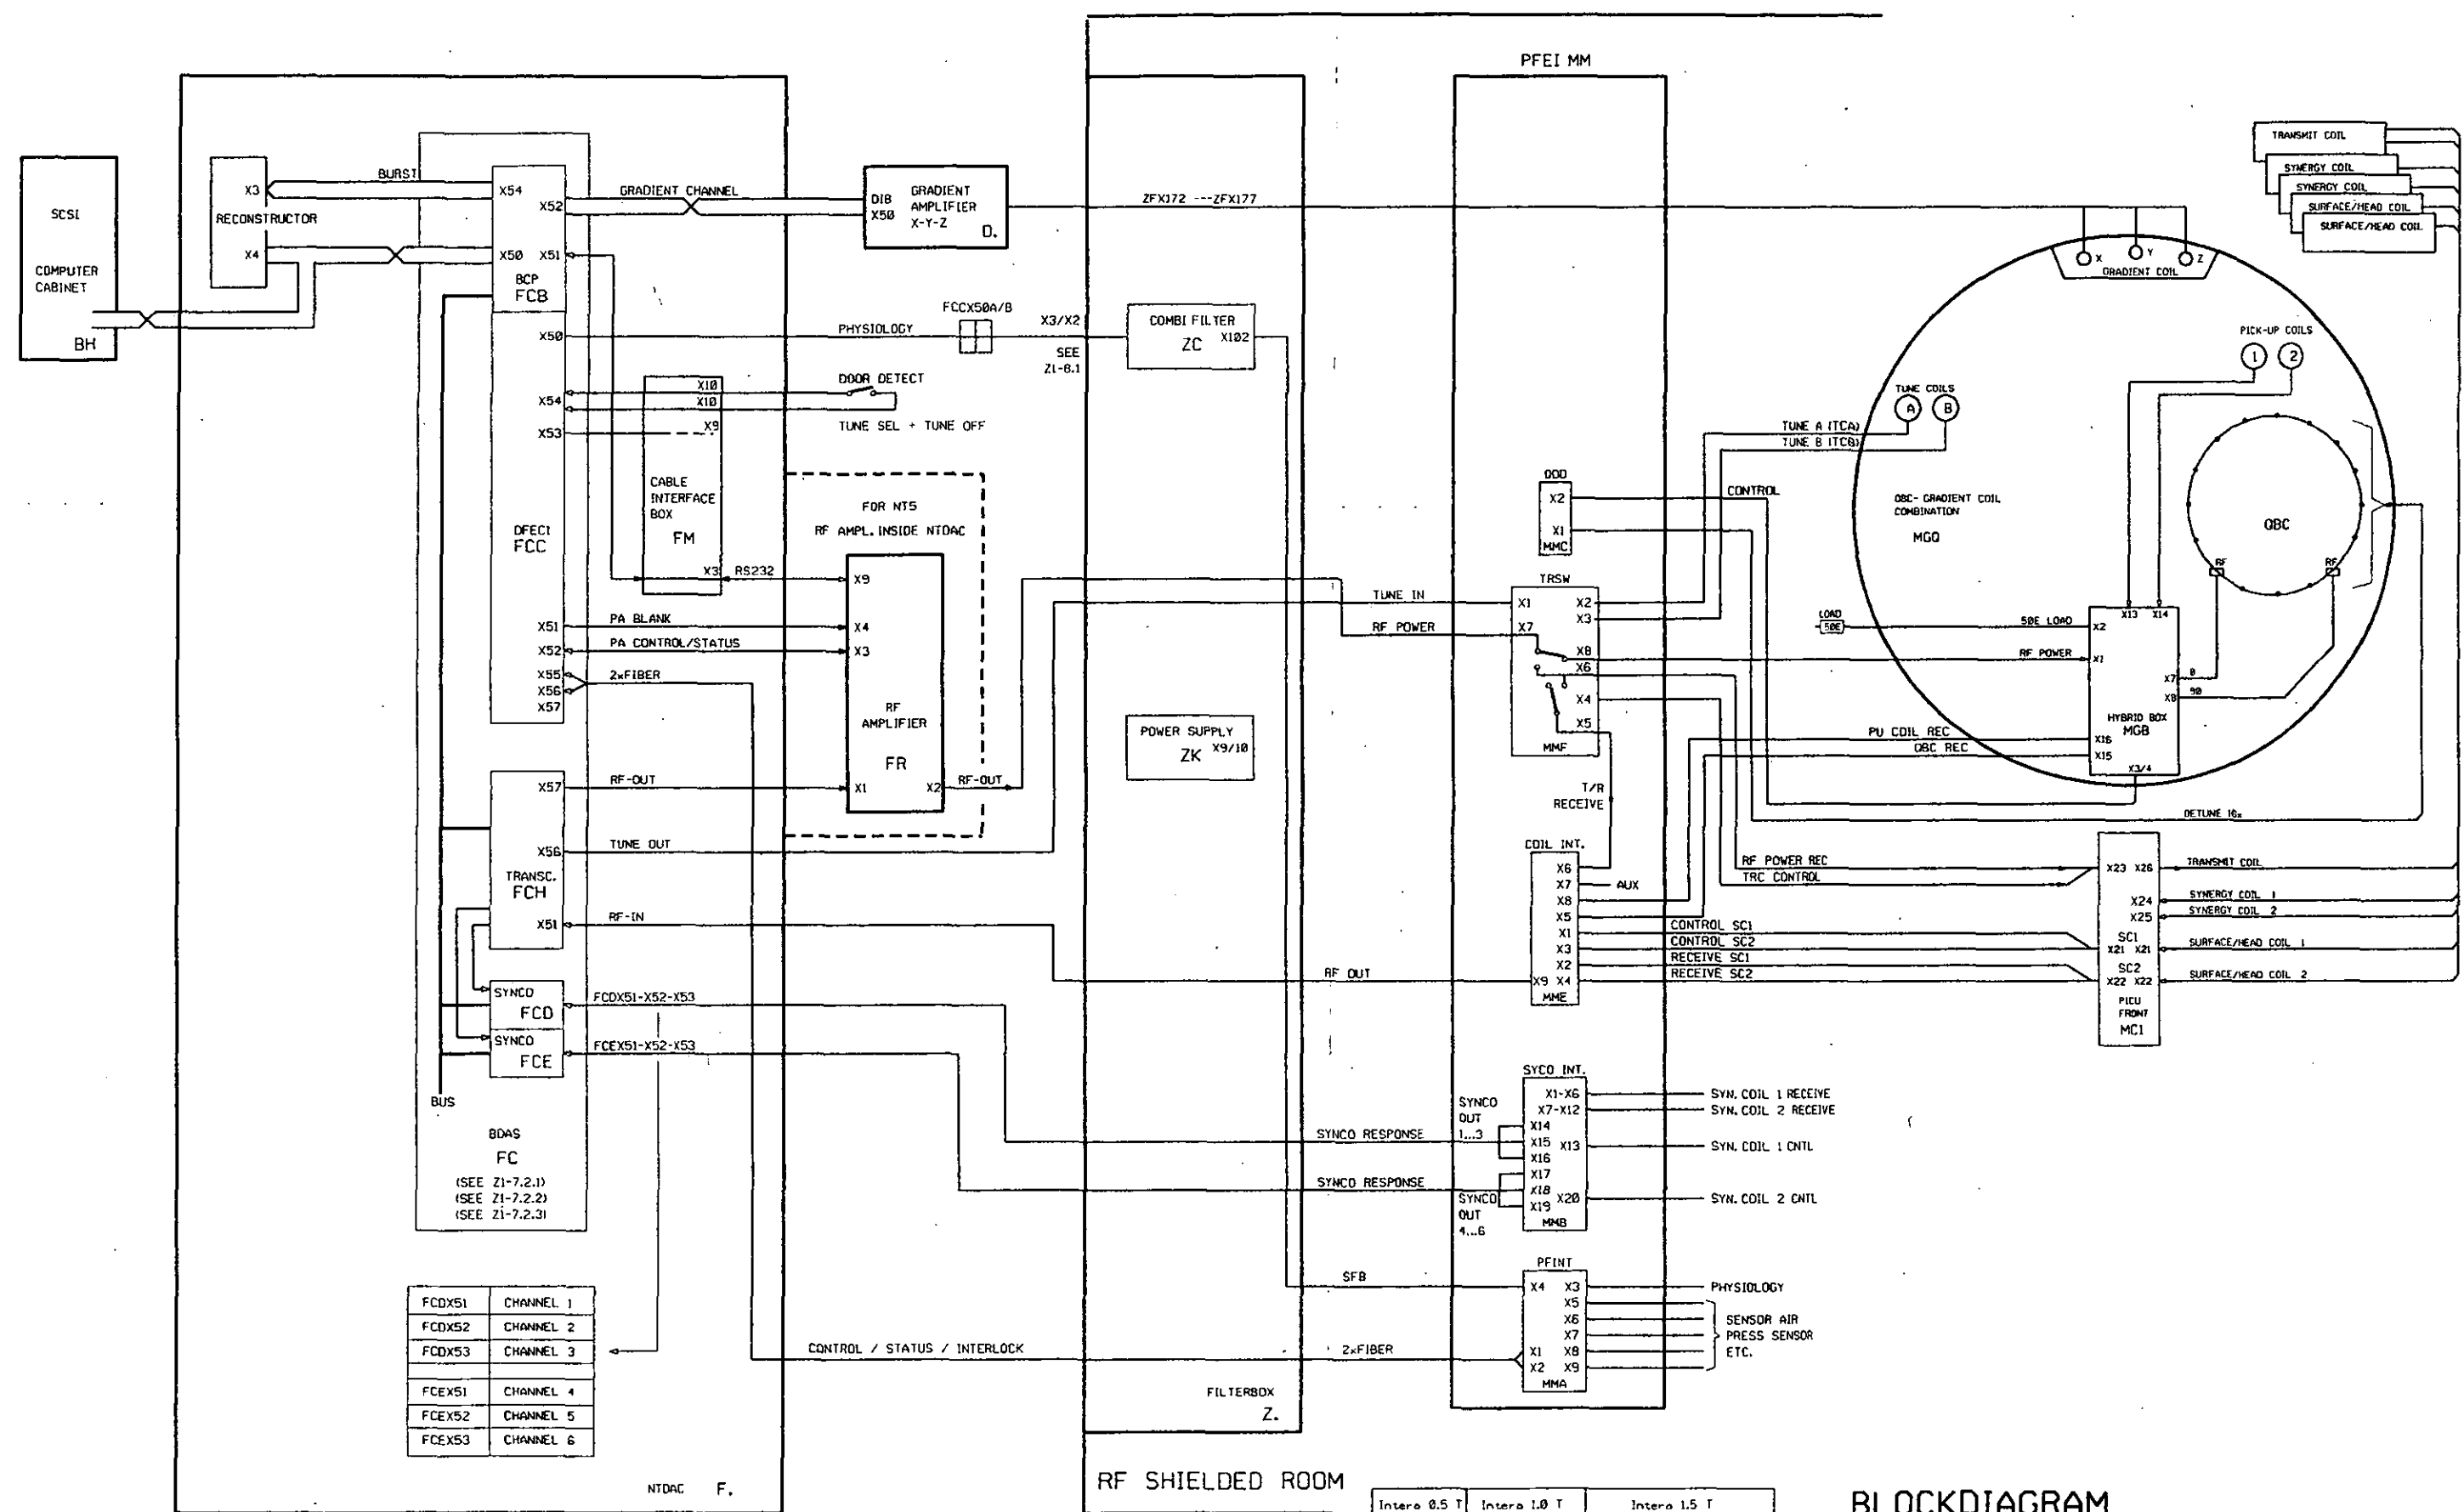


BLOCKDIAGRAM
DATA ACQUISITION SYSTEM

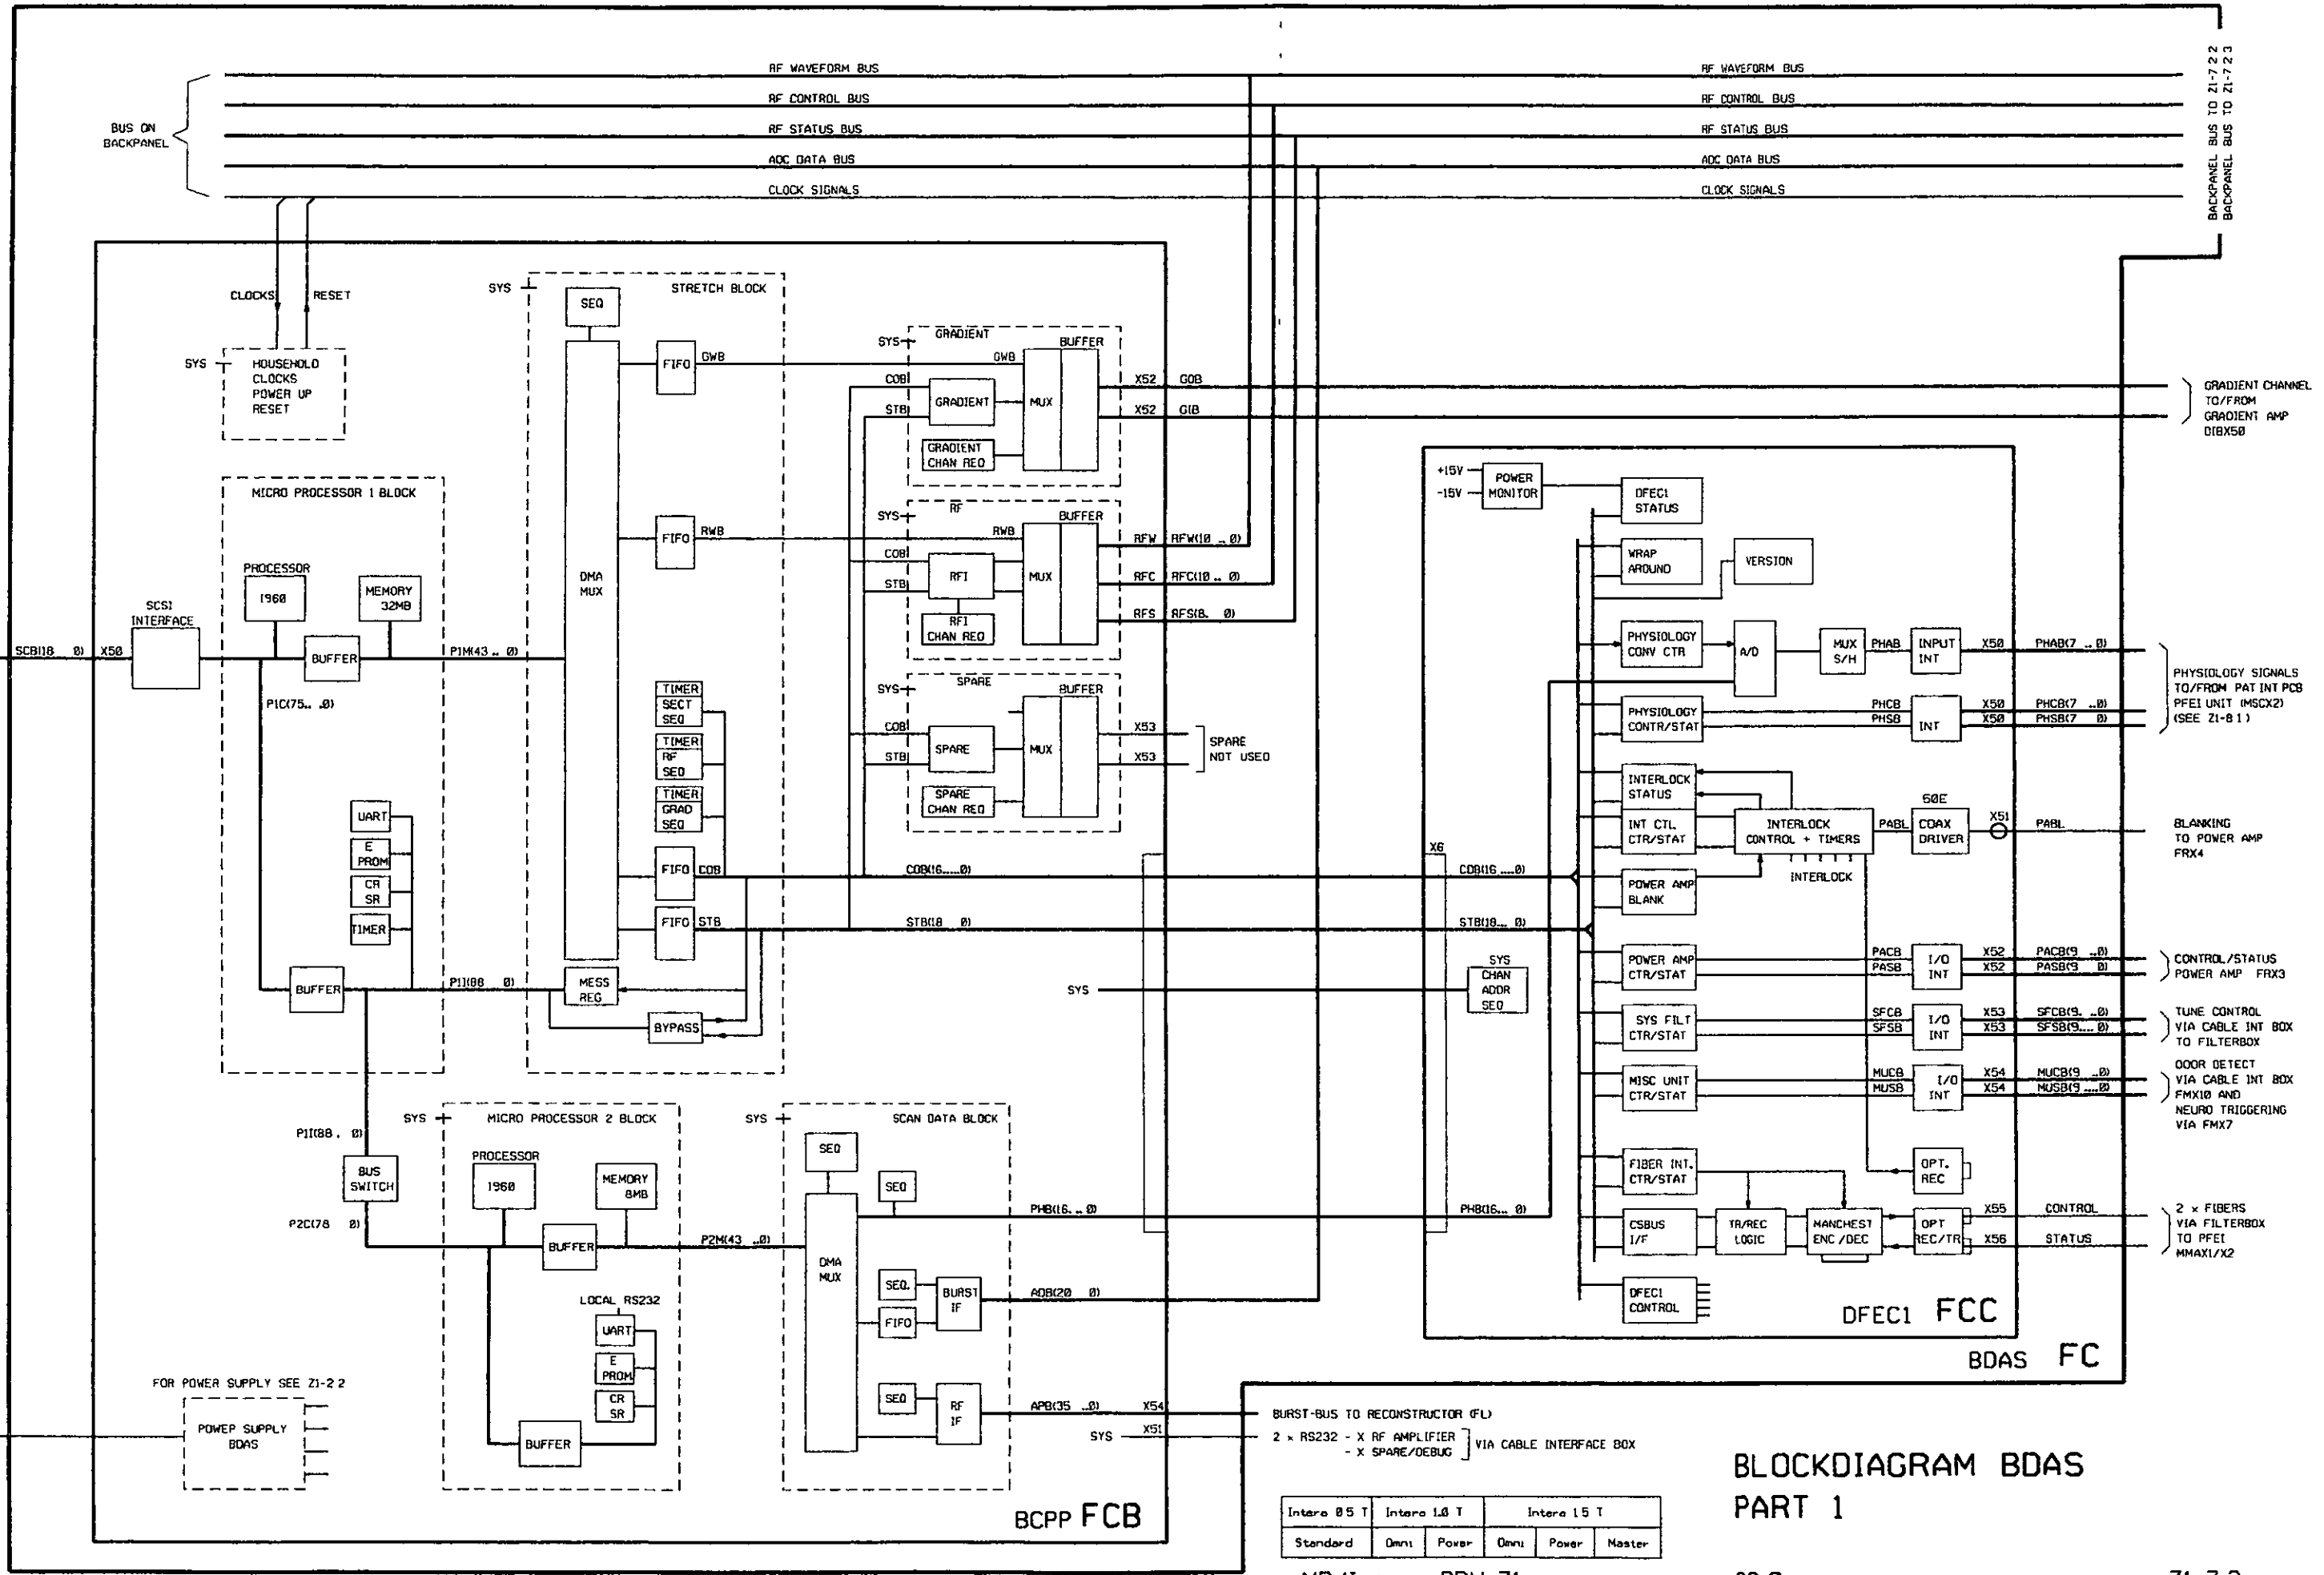


BURST-BUS TO RECONSTRUCTOR (FL)
2 x RS232 - X RF AMPLIFIER
- X SPARE/OEBUG } VIA CABLE INTERFACE BOX

Intera 05 T		Intera 1.0 T		Intera 1.5 T	
Standard	Omni	Power	Omni	Power	Master

BLOCKDIAGRAM BDAS
PART 1




Copyright © 1999 Philips Medical Systems Nederland B.V.
ALL RIGHT RESERVED

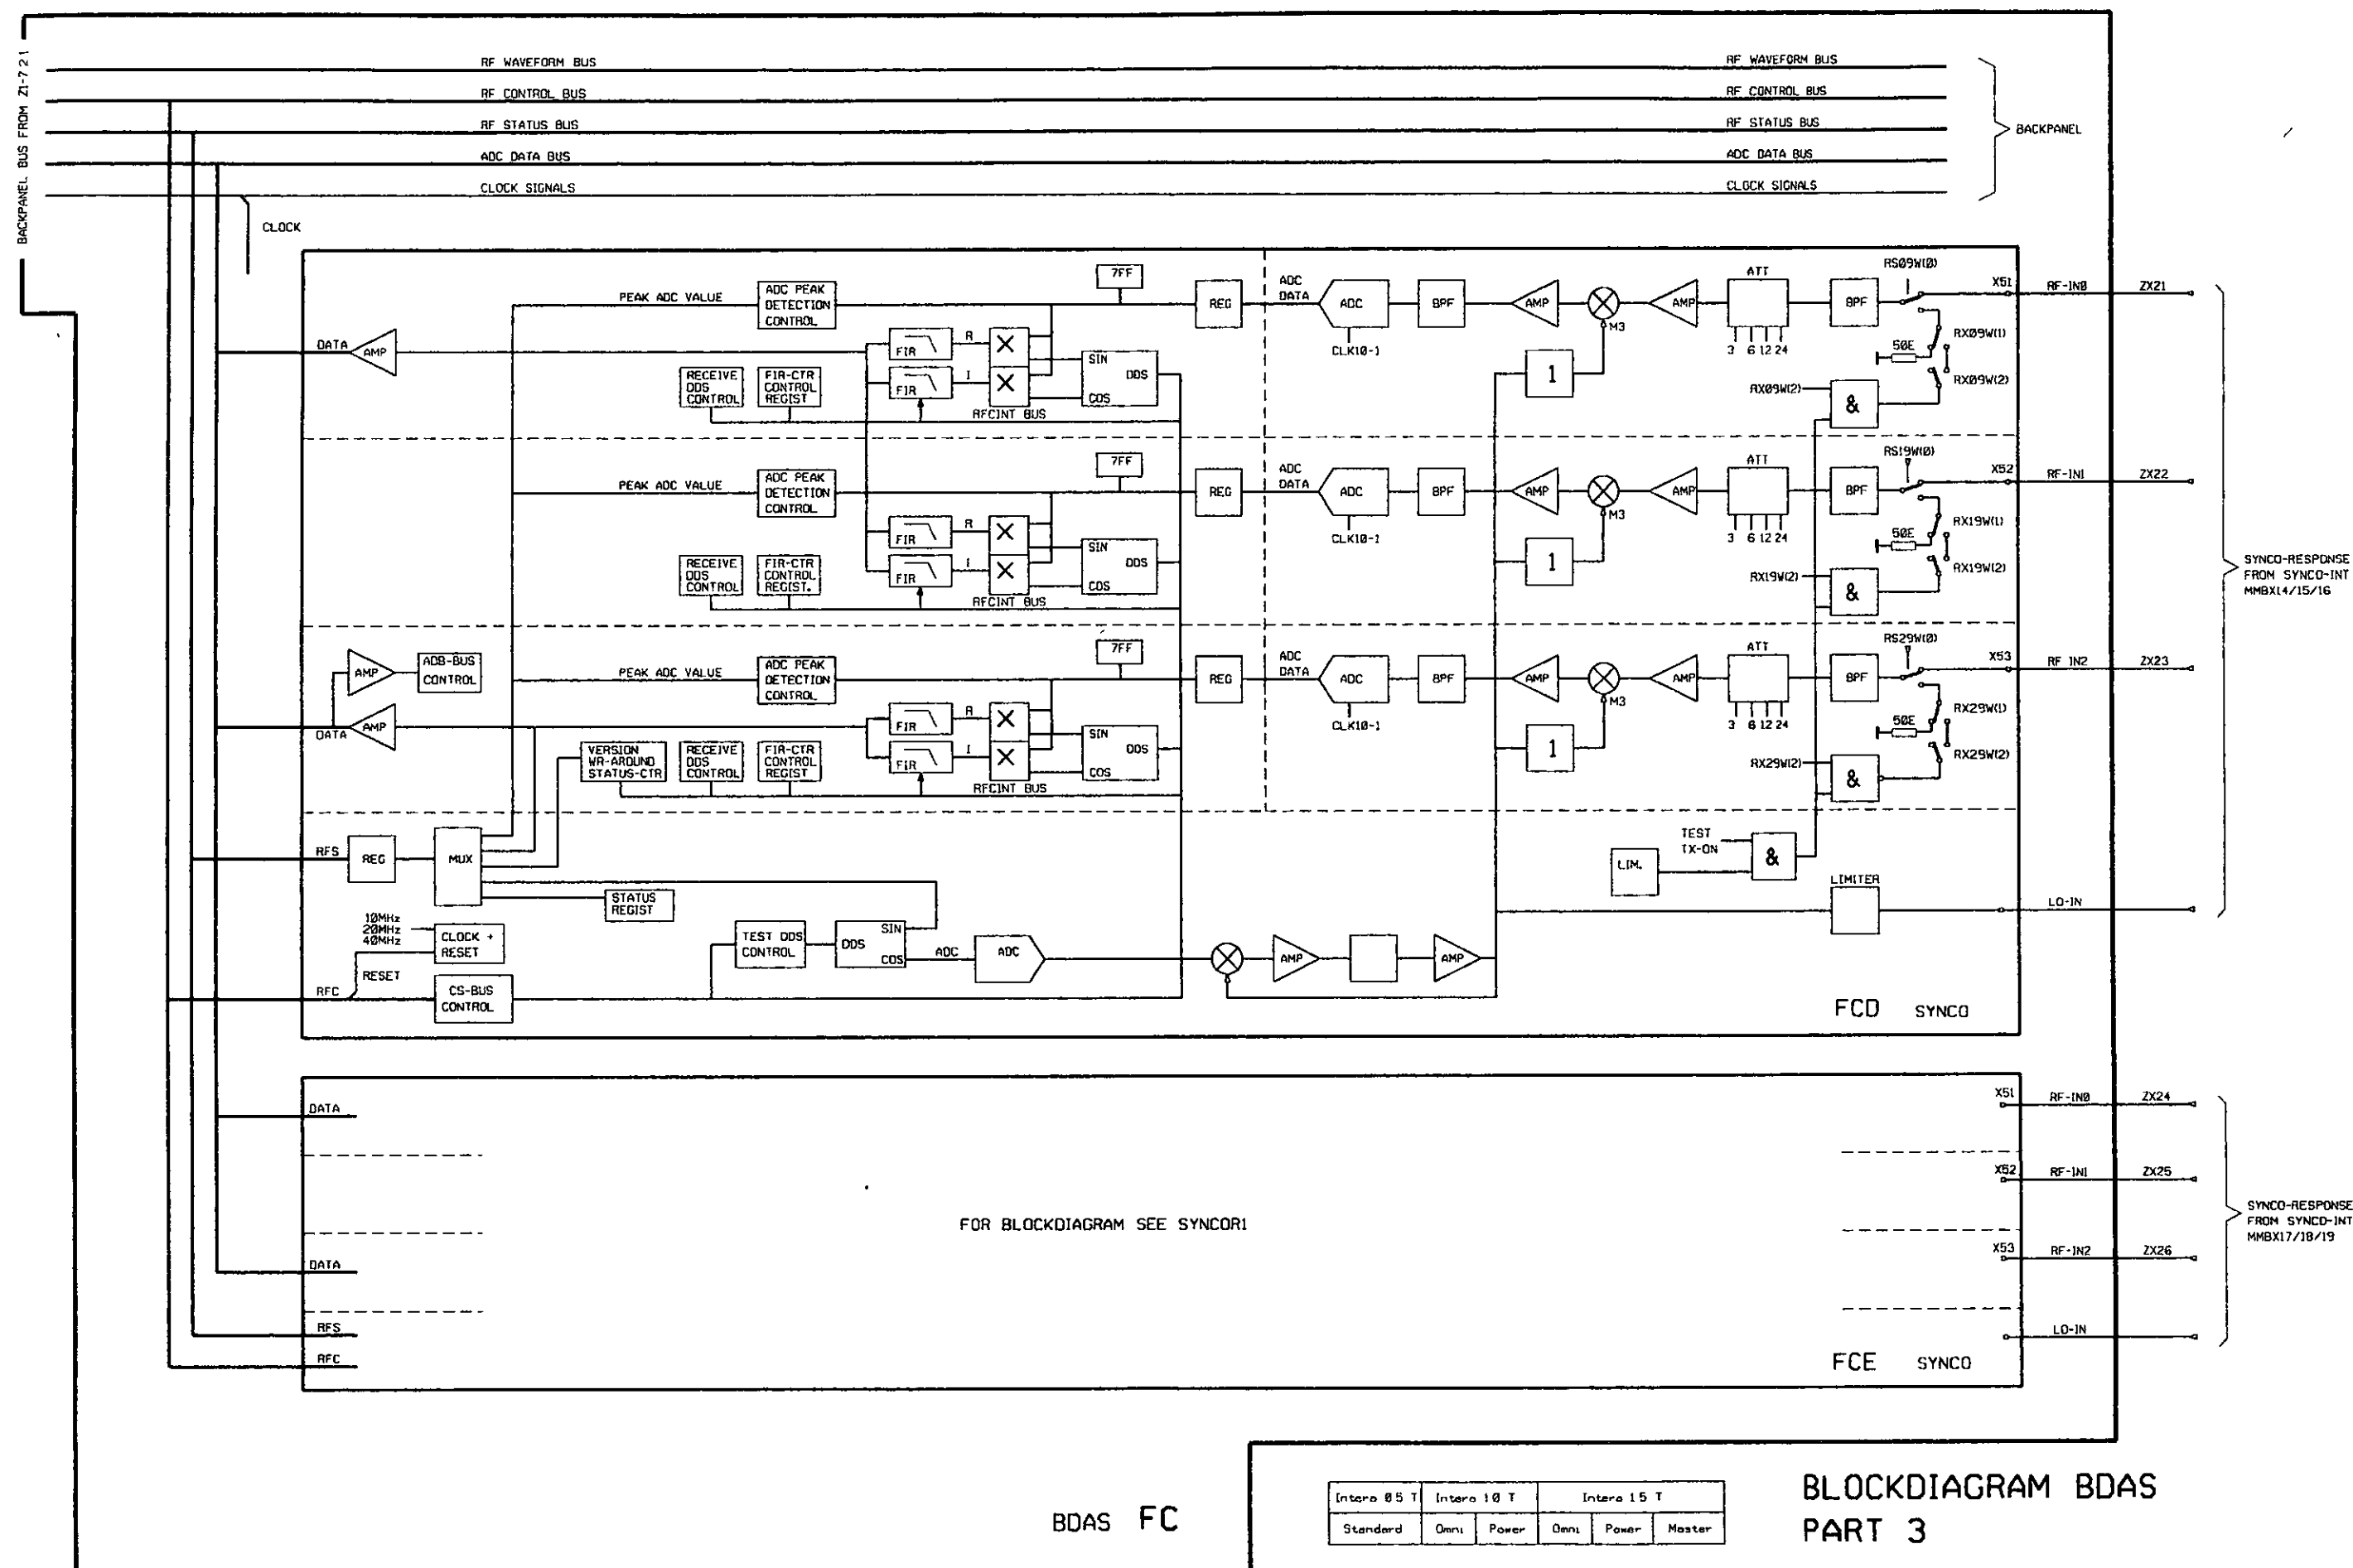

BDAS FC


Intera 0.5 T	Intera 10 T		Intera 15 T		
Standard	Omni	Power	Omni	Power	Master

BLOCKDIAGRAM BDAS PART 3

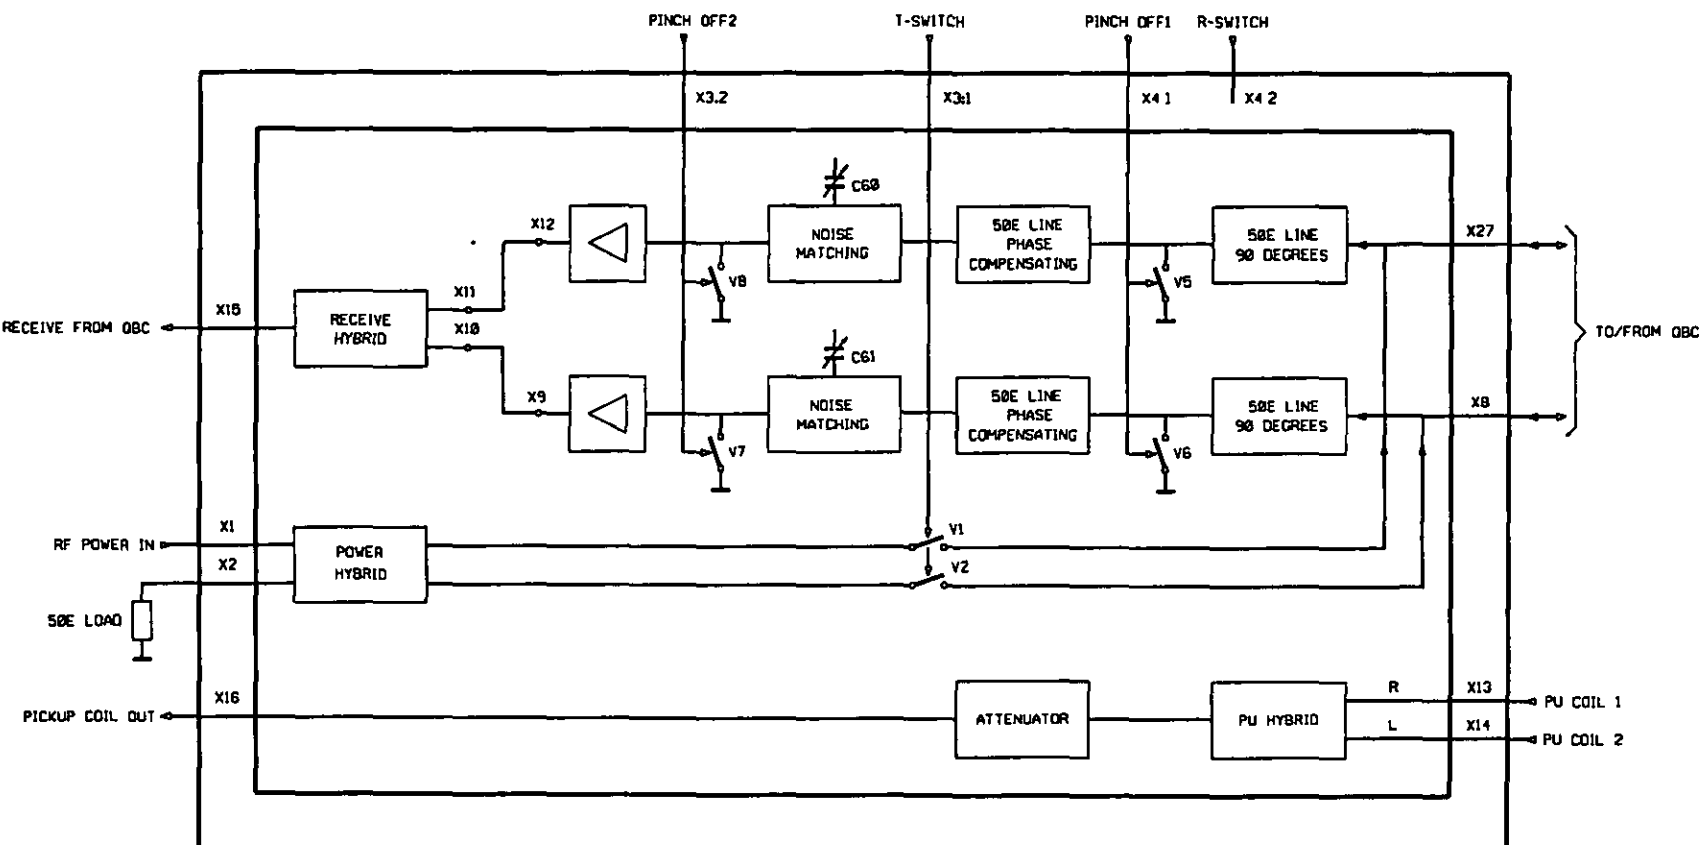


Inter-o 0.5 T	Inter-o 1.0 T	Inter-o 1.5 T
Standard		

BLOCKDIAGRAM
BBM BOX MCB

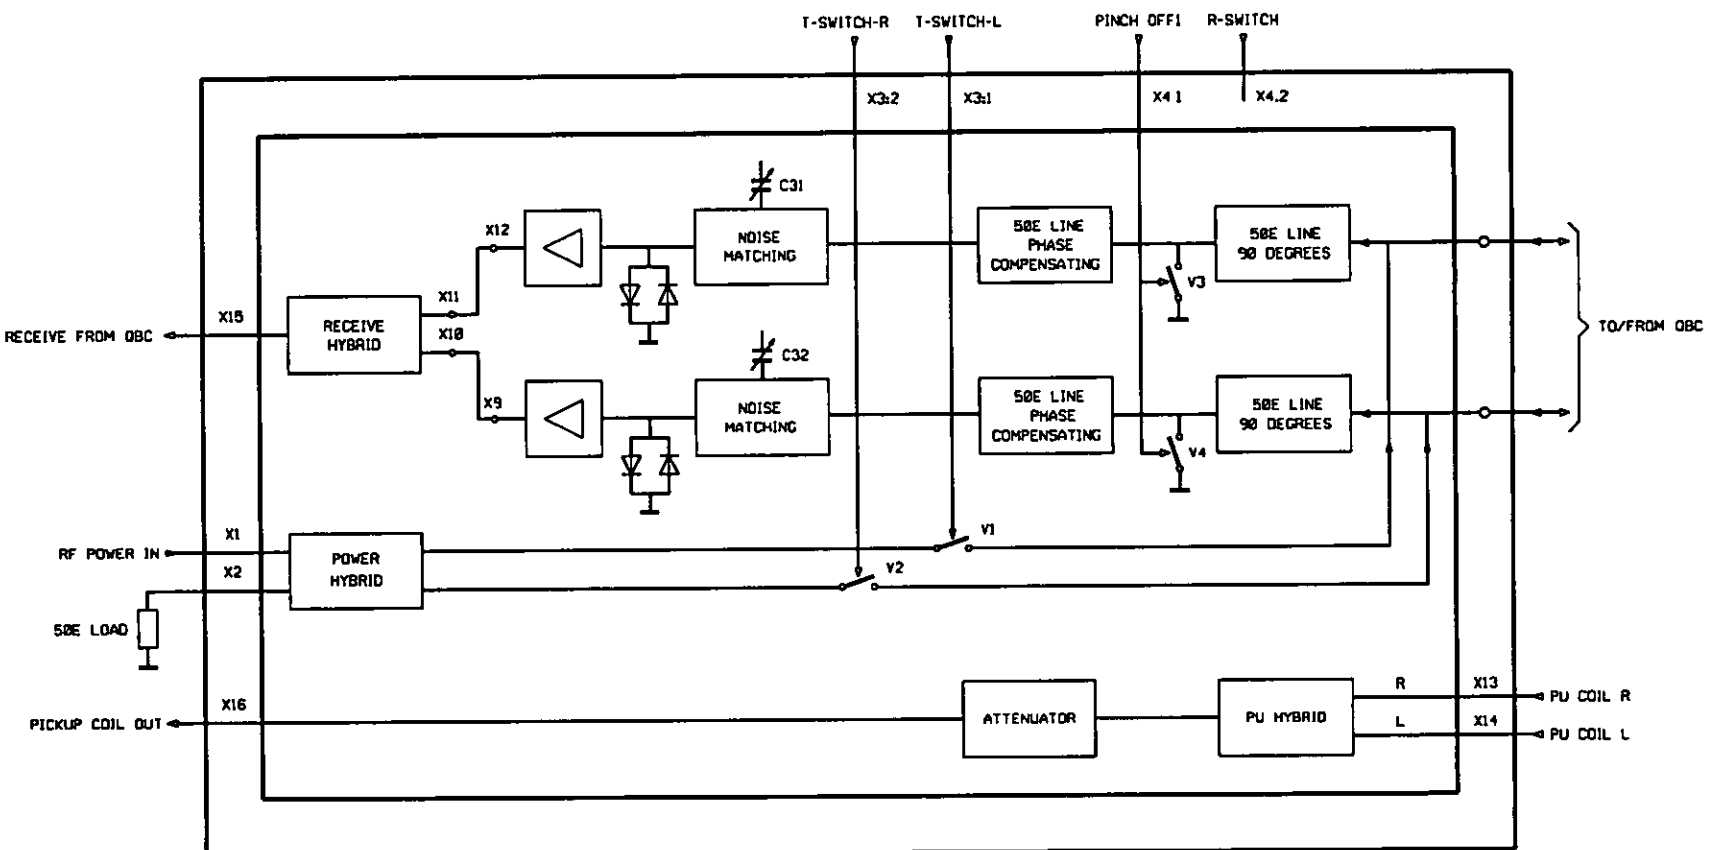


Inter-o L5 T	Inter-o L6 T	Inter-o L5 T
Open	Power	Open
Power	Power	Master




BLOCKDIAGRAM HYBRID BOX MGB

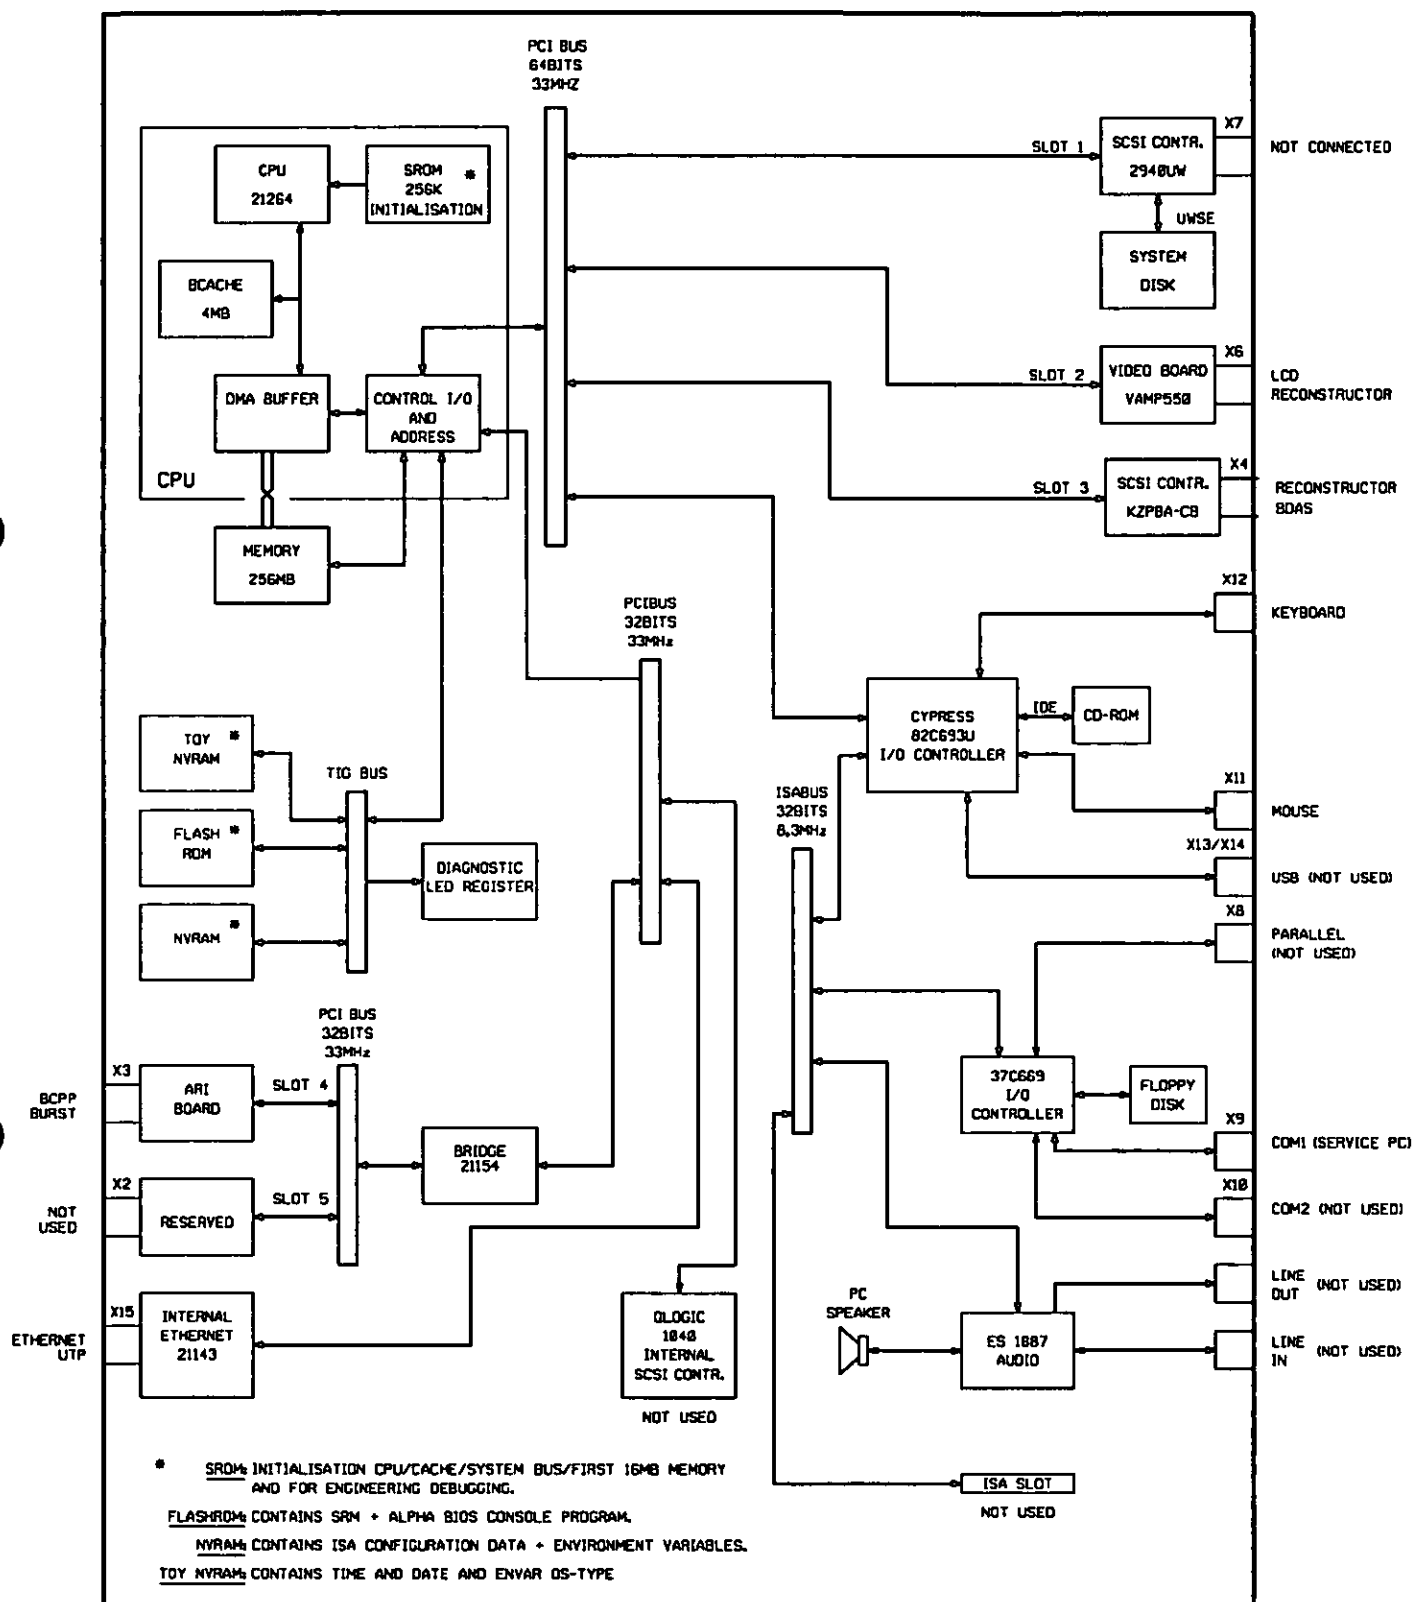

Intera 0.5 T			Intera 1.0 T		Intera 1.5 T	
Standard	Omni	Power	Omni	Power	Mester	

BLOCKDIAGRAM RECONSTRUCTOR XP1000 FL



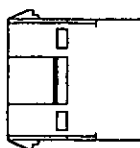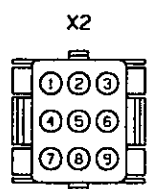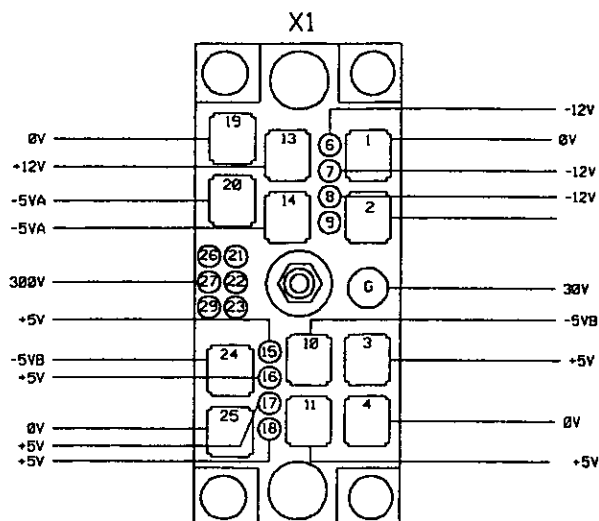


X3




- 1 - X3-A1 300V
- 2 - X3-A2 30V
- 3 - X3-A3 12V
- 4 - X3-A1 5V
- 5 - X3-B1 -5VA
- 6 - X3-B2 -5VB
- 7 - X3-B3 -12V
- 8 - X3-A1 GND
- 9 - X3-B4 GND

- A1 - X2-1 300V
- A2 - X2-2 30V
- A3 - X2-3 12V
- A4 - X2-4 5V
- A5 - X2-5 GND
- B1 - X2-6 -5VA
- B2 - X2-7 -5VB
- B3 - X2-8 -12V
- B4 - X2-9 GND

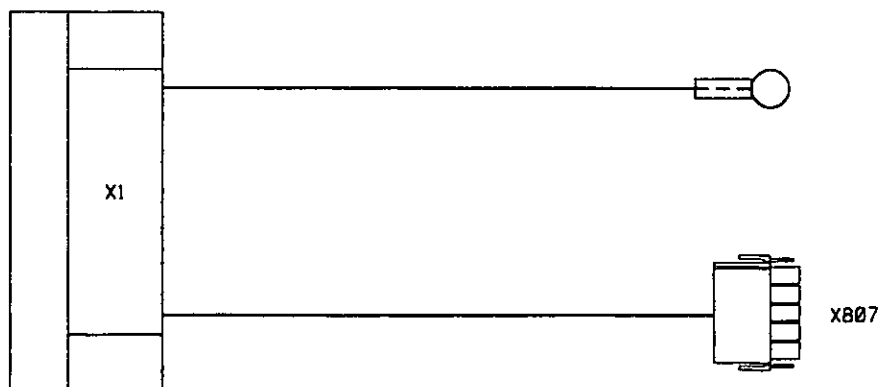


Intera 0.5 T			Intera 1.0 T			Intera 1.5 T		
Standard	Dim	Power	Dim	Power	Master			

WIRING DIAGRAM PFEI ASSY MM

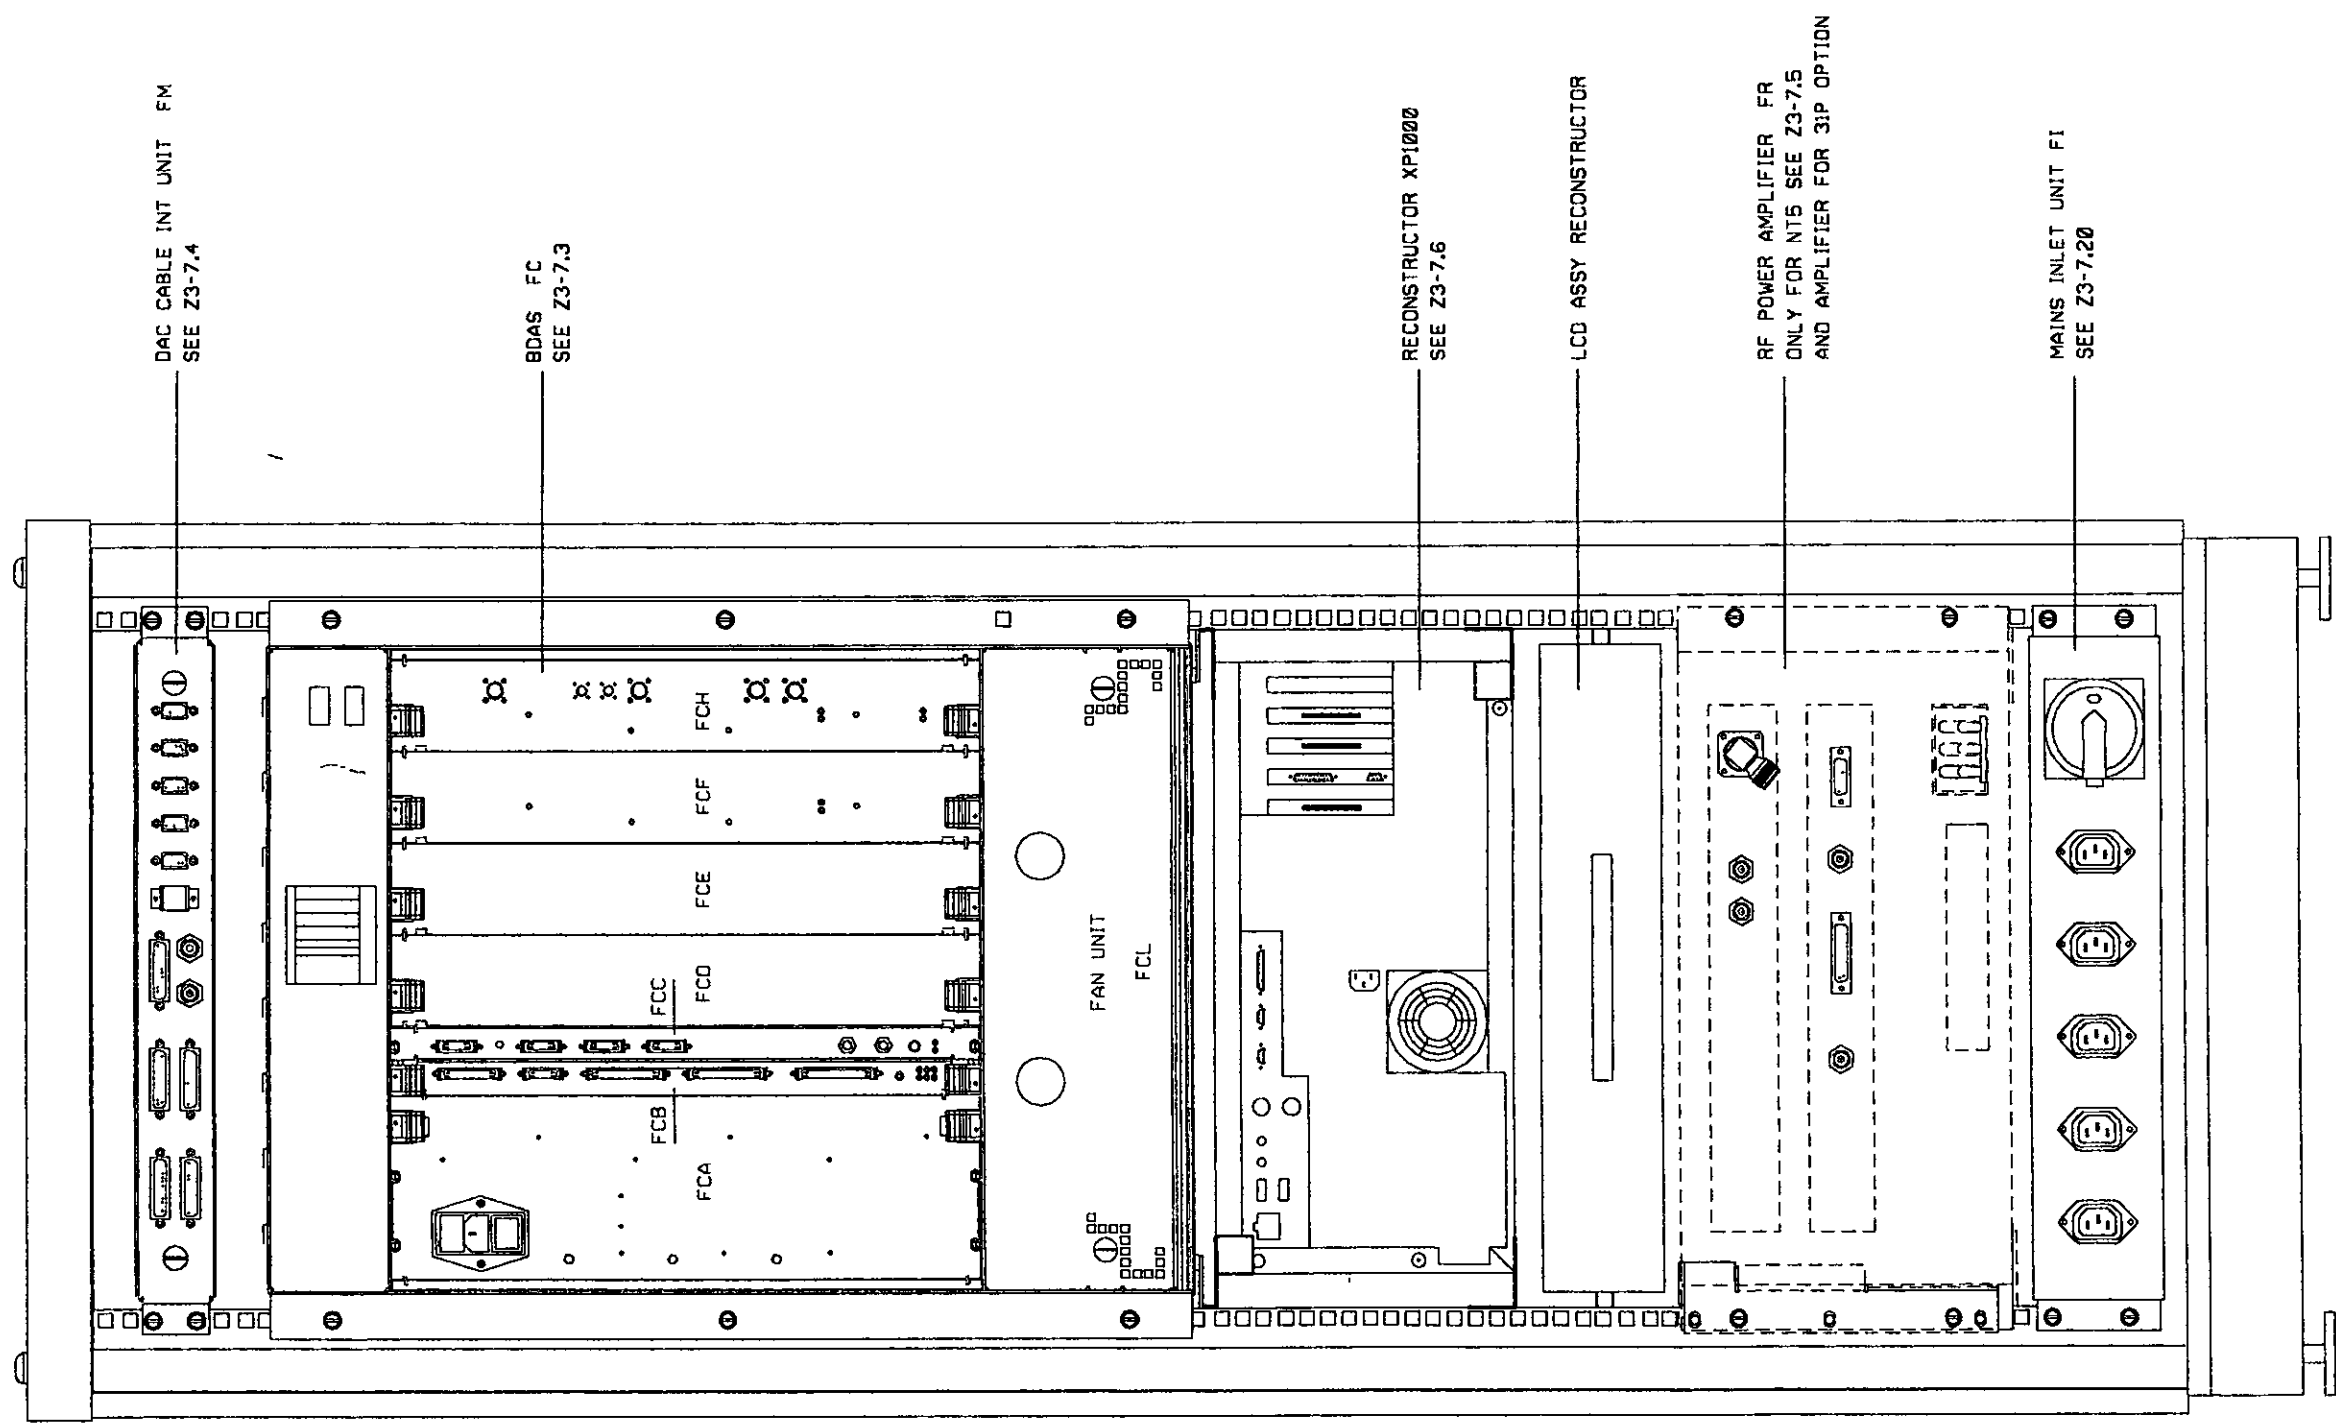


Intera 05 T		Intera 10 T		Intera 15 T	
Standard	Omni	Power	Omni	Power	Master

FRONT VIEW
NTDAC MT F.

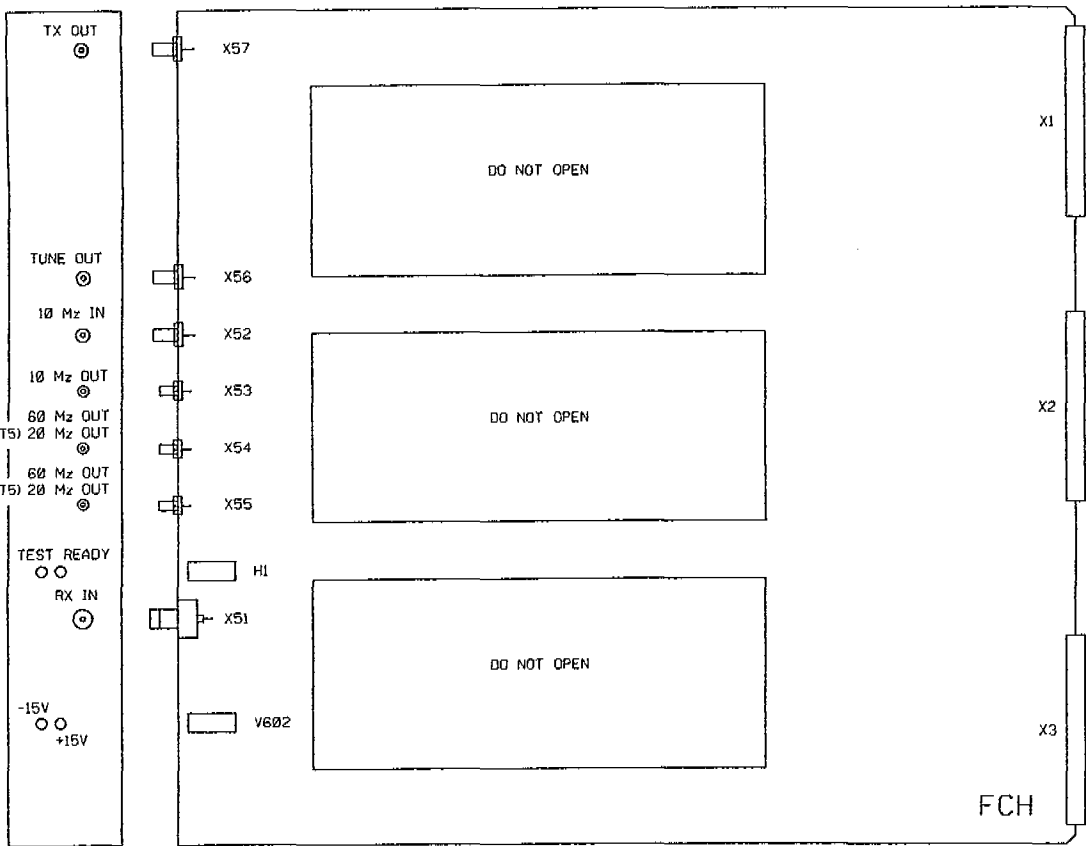


TRANSCEIVER
(4522 117 8975, FOR NT15)
(4522 117 8980, FOR NT10)
(4522 117 8985, FOR NT5)

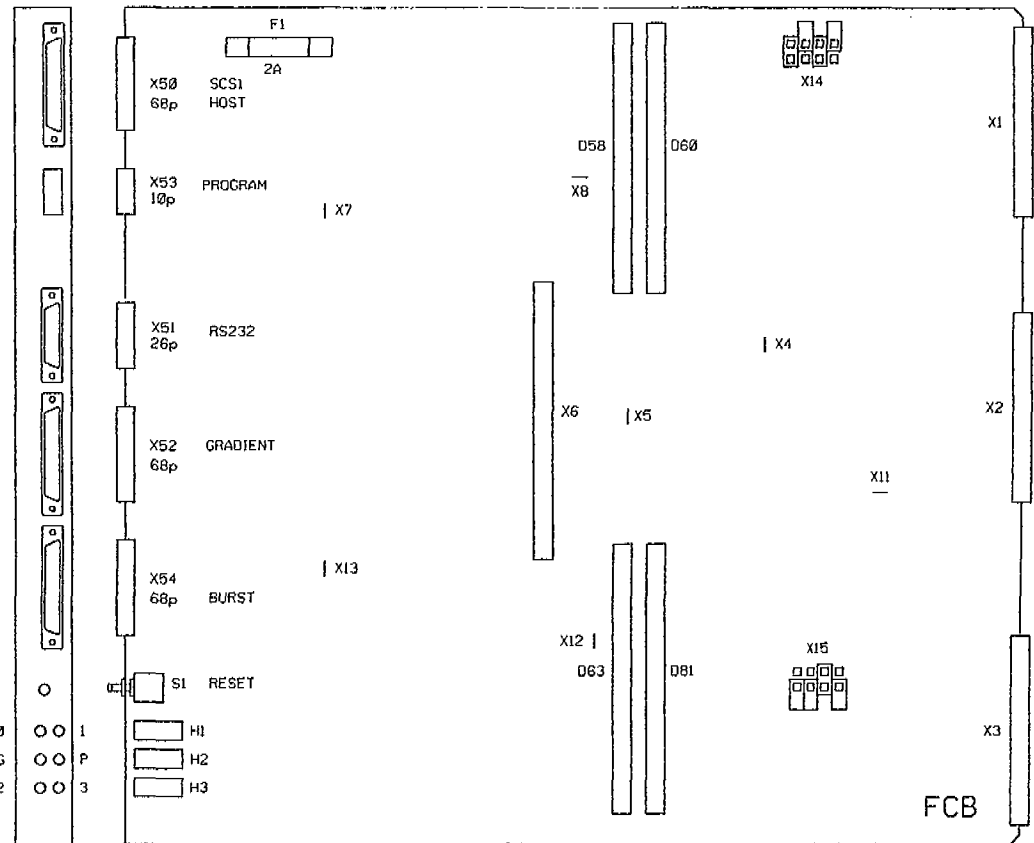


P=POWER ON
G=DIAGN. TEST PASSED
0---3=SELF TEST STATUS


BCPP
(4522 117 7717.)

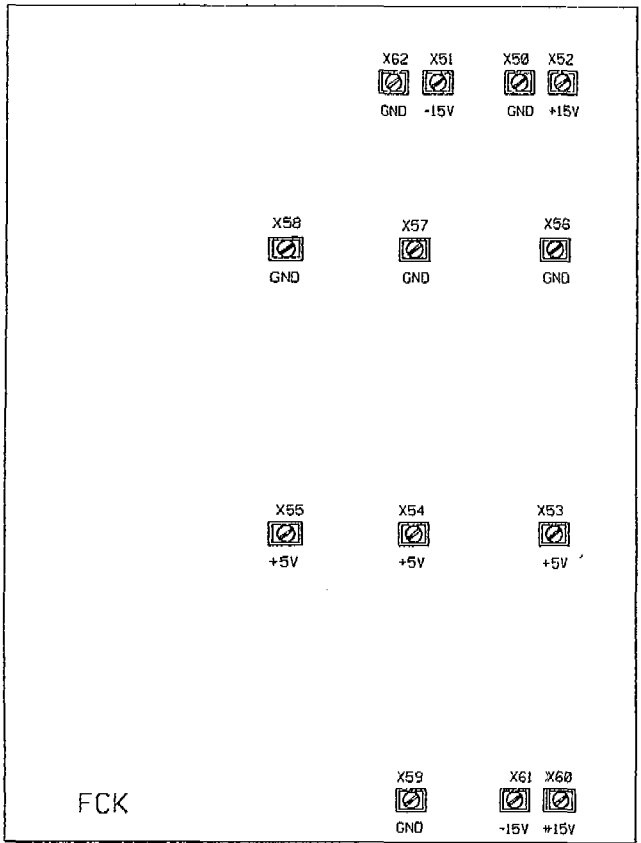


BDAS BACKPANEL PLUS
(4522 117 7716J)

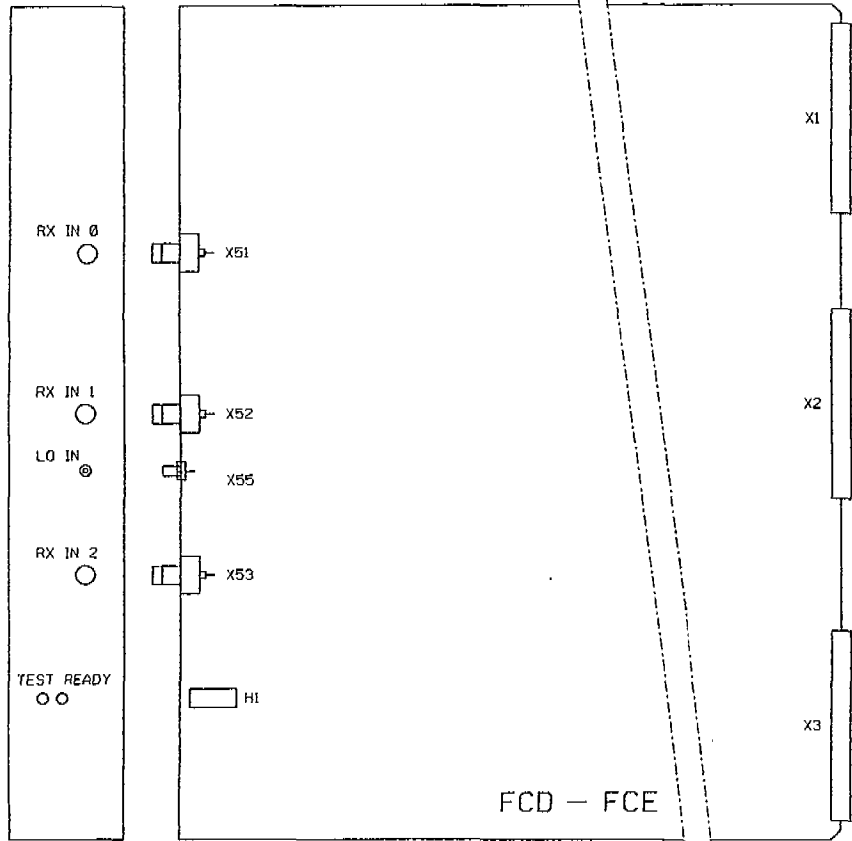



SYNCO RECEIVER
(4522 117 6001, FOR NT15)
(4522 117 6002, FOR NT10)
(4522 117 6003, FOR NT5)

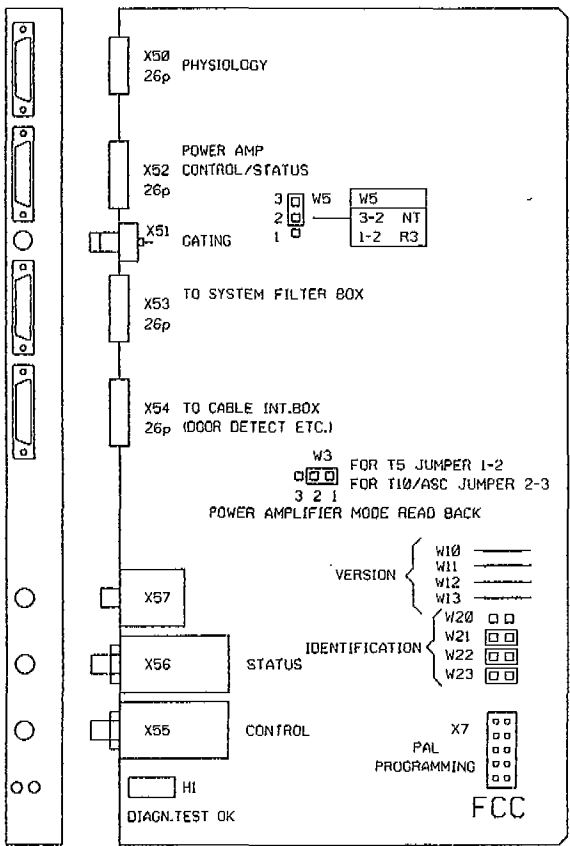

DFEC1P
(4522 117 8861.)

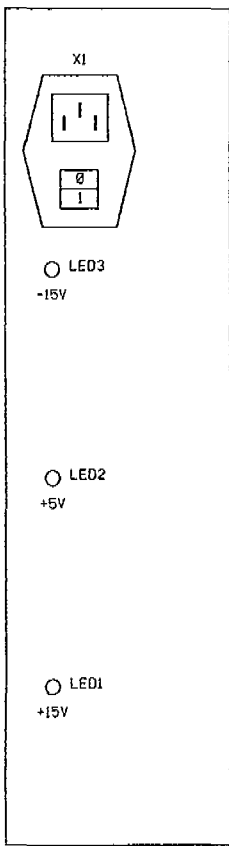


SWITCH MODE POWER SUPPLY
(4522 131 0286.)

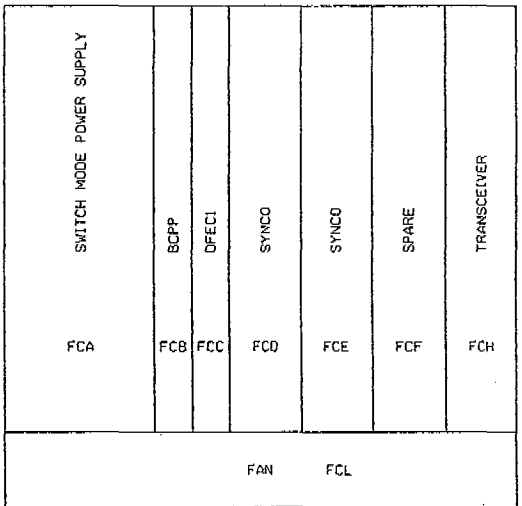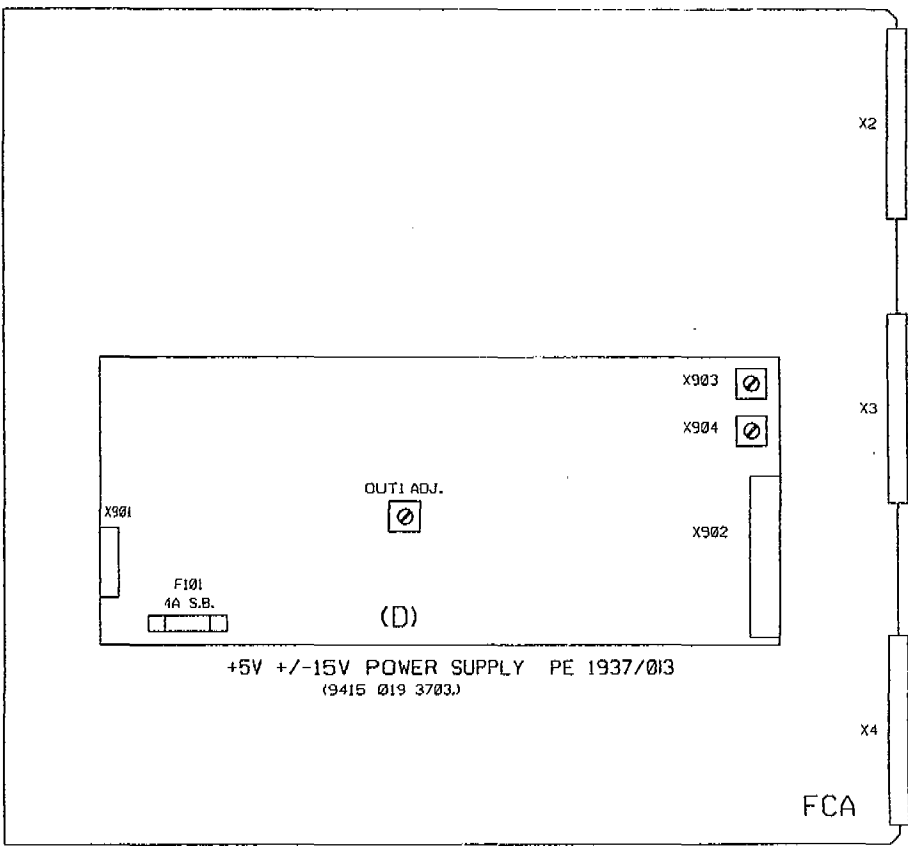


FRONT VIEW

Inters 0.5 T		Inters 1.0 T		Inters 1.5 T	
Standard	Omni	Power	Omni	Power	Master



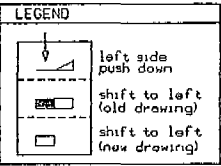


JUMPER SETTING
BDAS FC

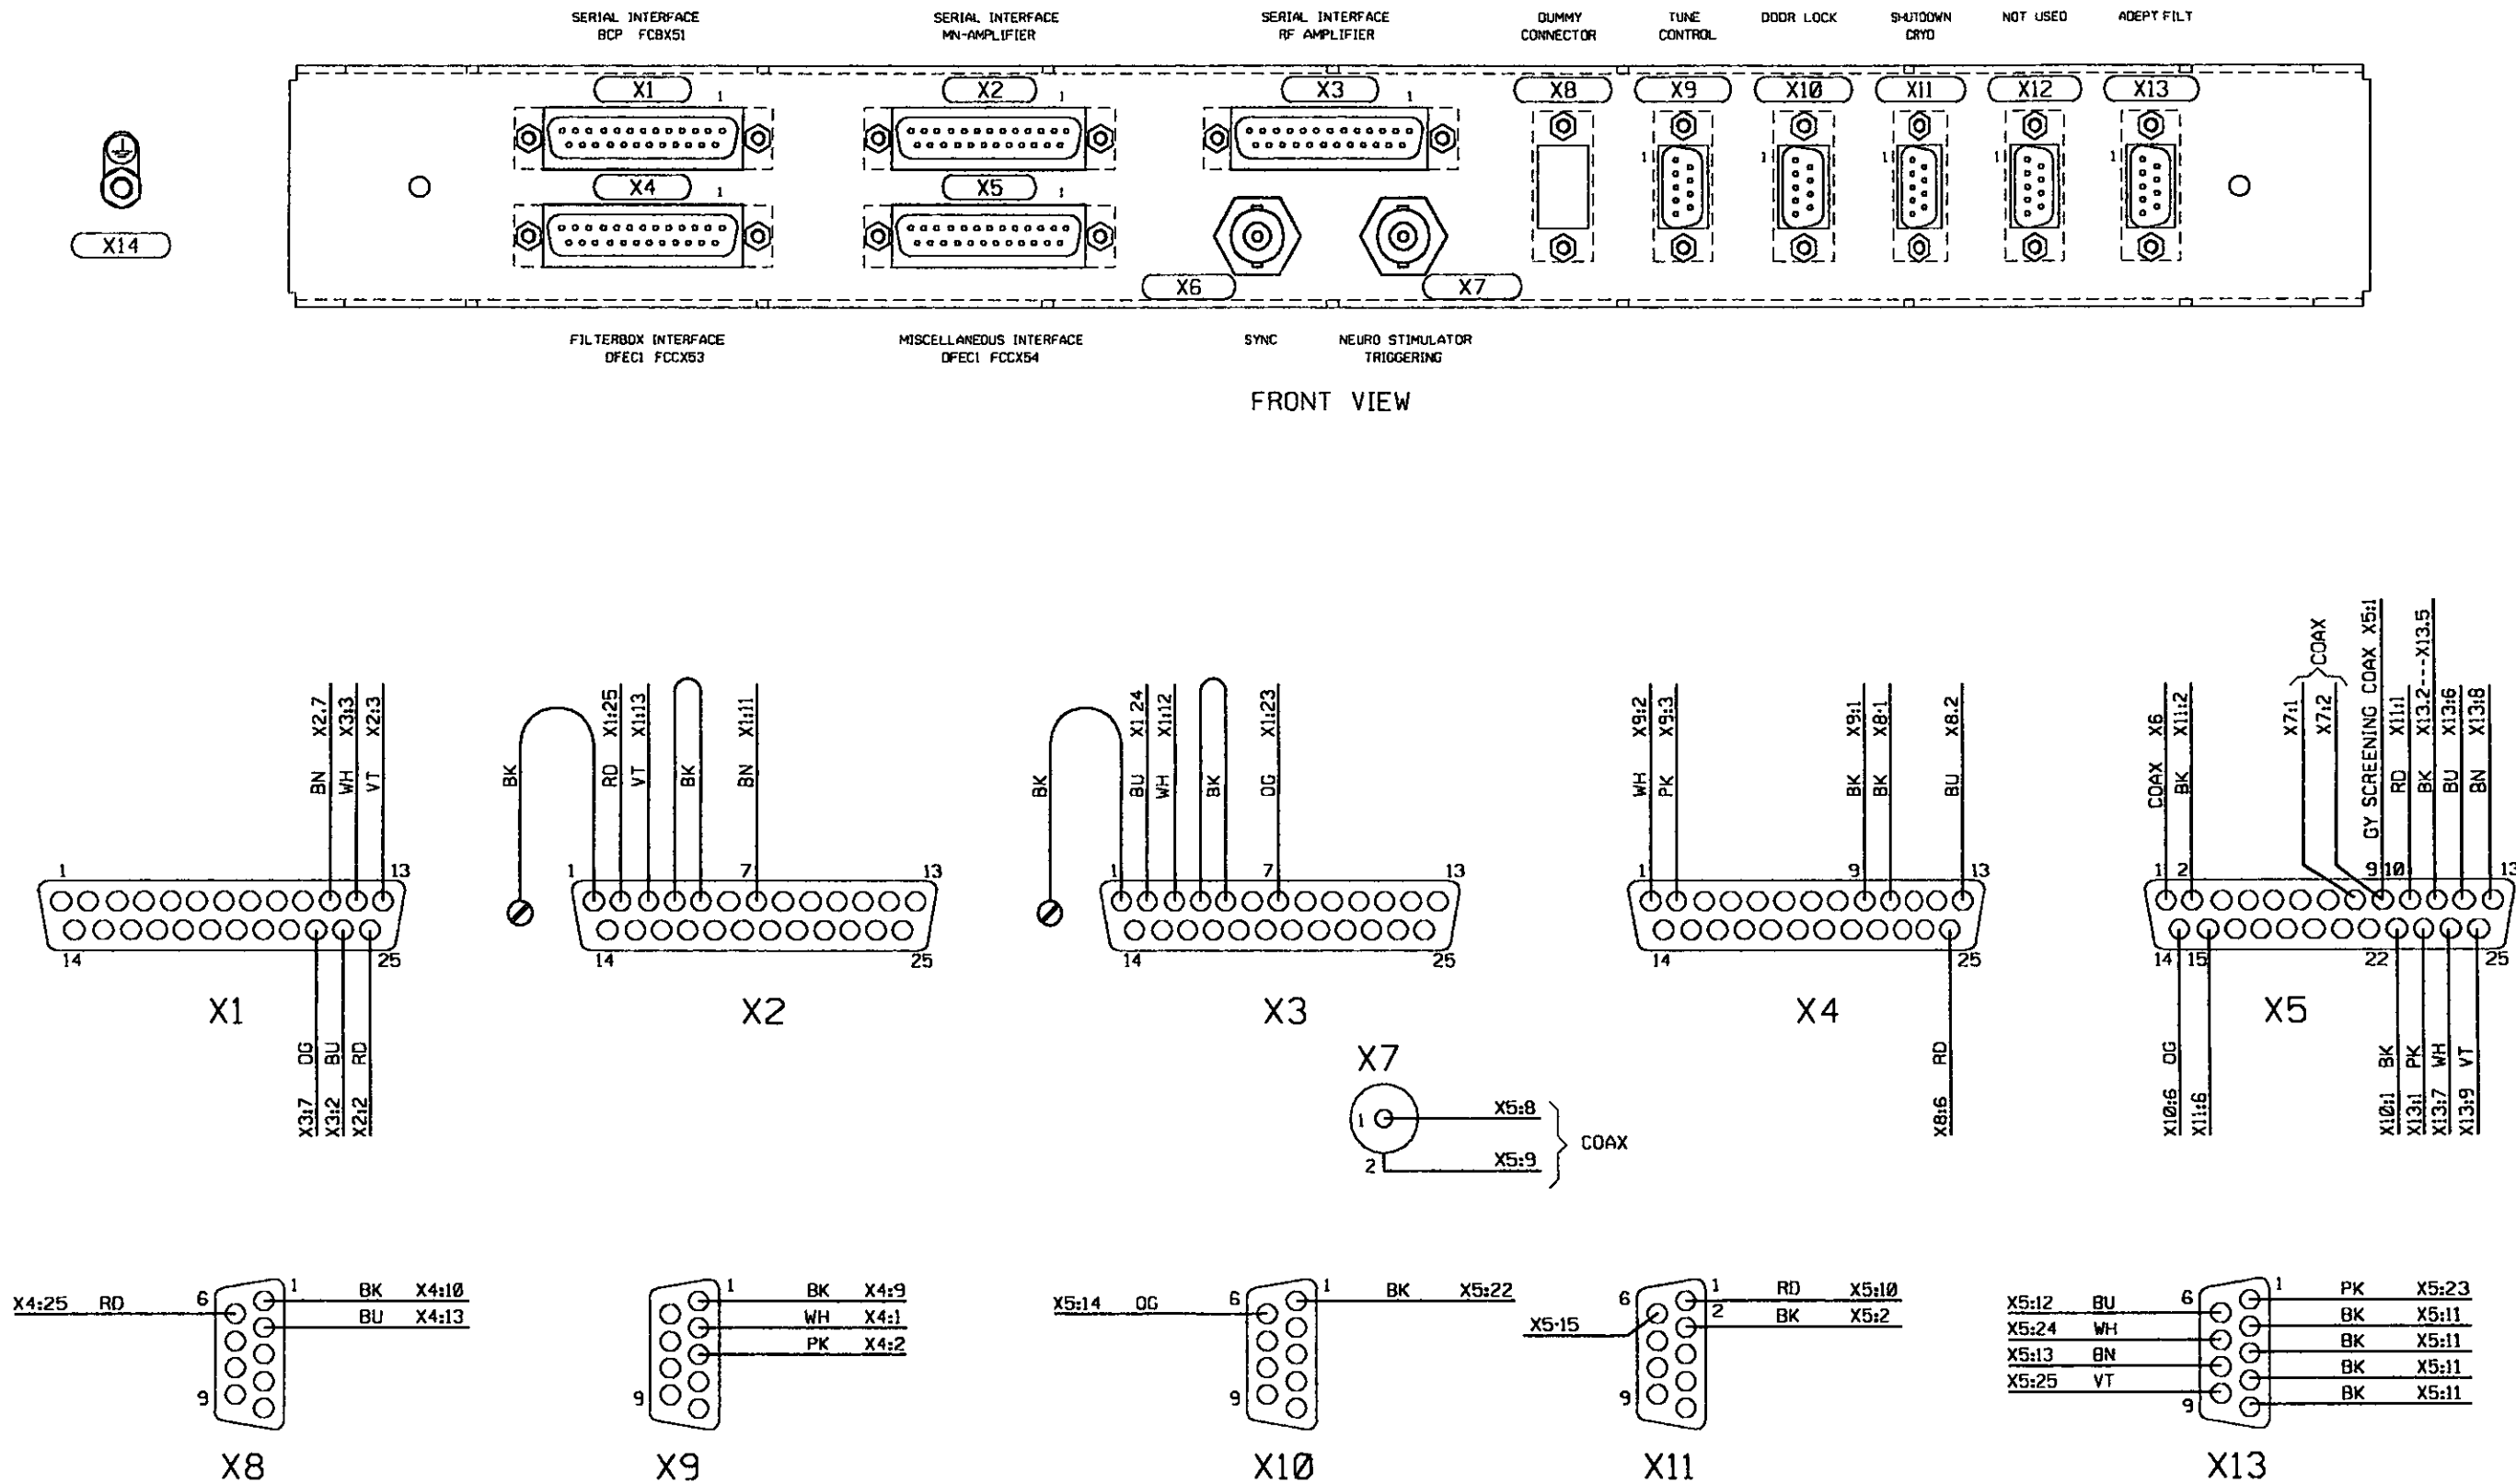



Intera 05 T		Intera 10 T		Intera 15 T	
Standard	Omni	Power	Omni	Power	Master

FRONTVIEW AND WIRING
DAC.CABLE INT.UNIT FM

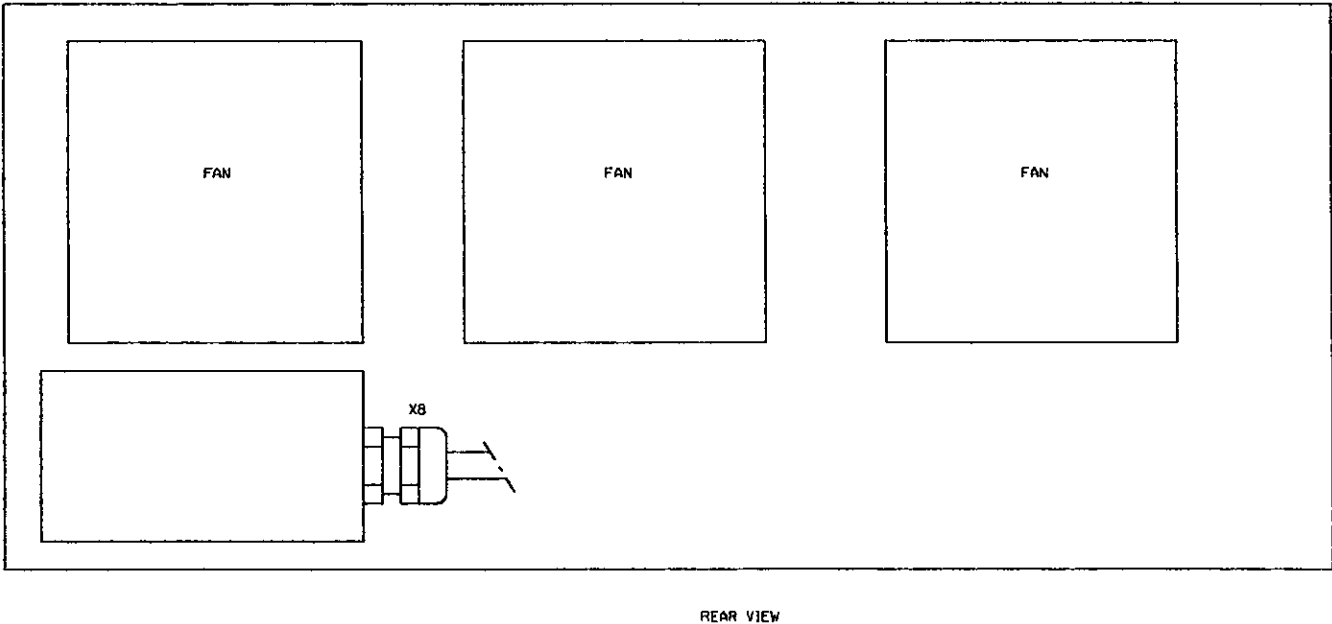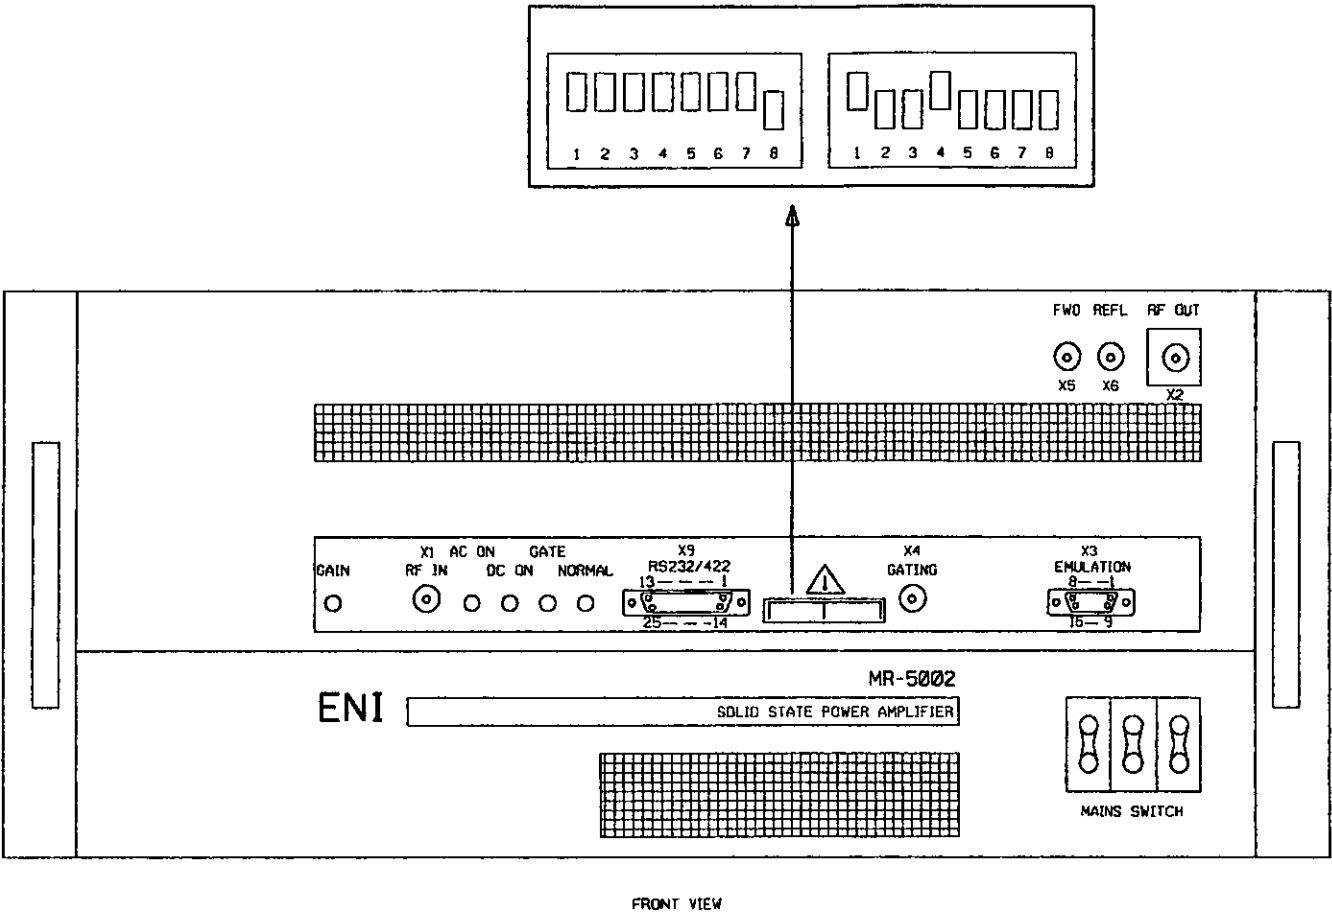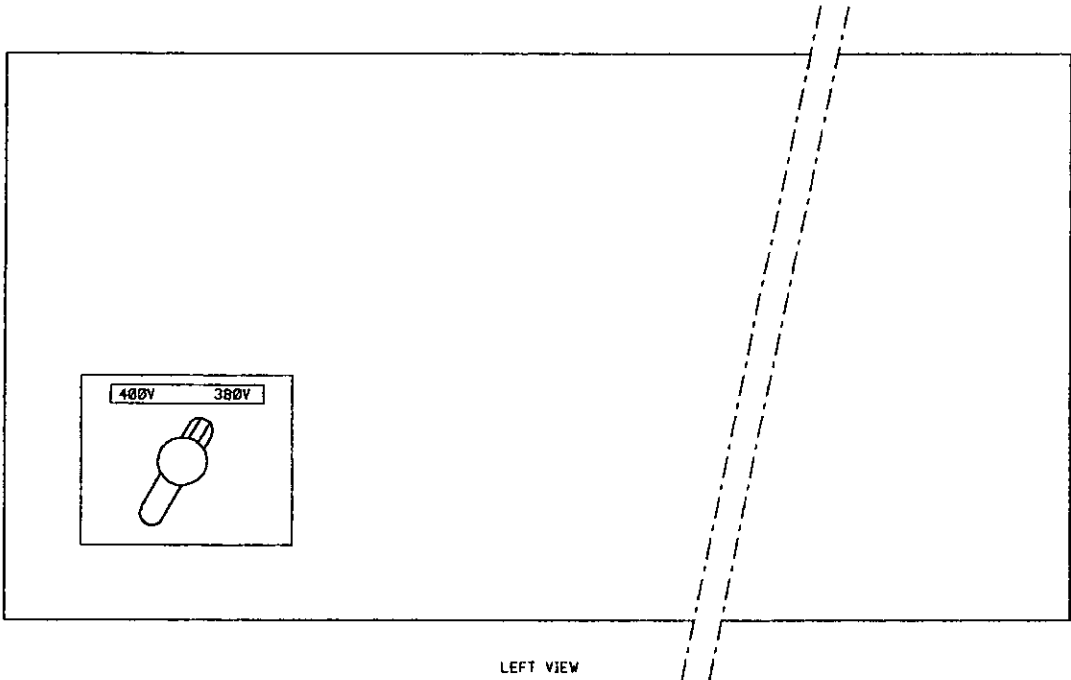


Intera 0.5 T	Intera 1.0 T	Intera 1.5 T
Standard		

LAY OUT
RF AMPLIFIER MR5002 FR

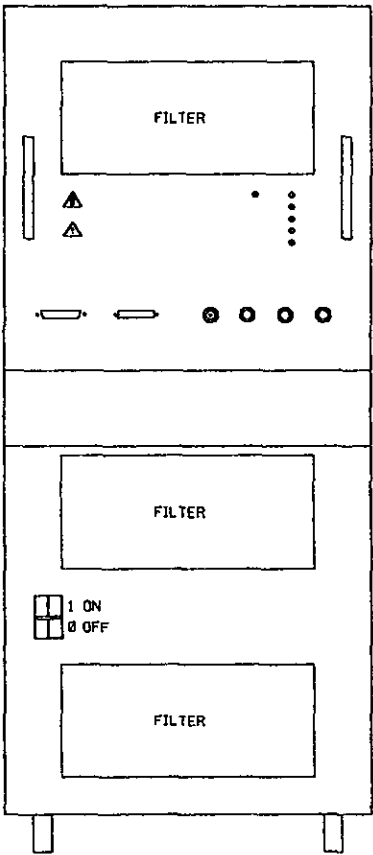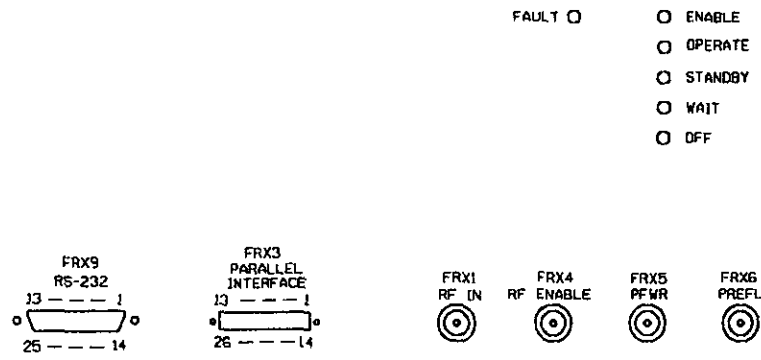



FRONT VIEW

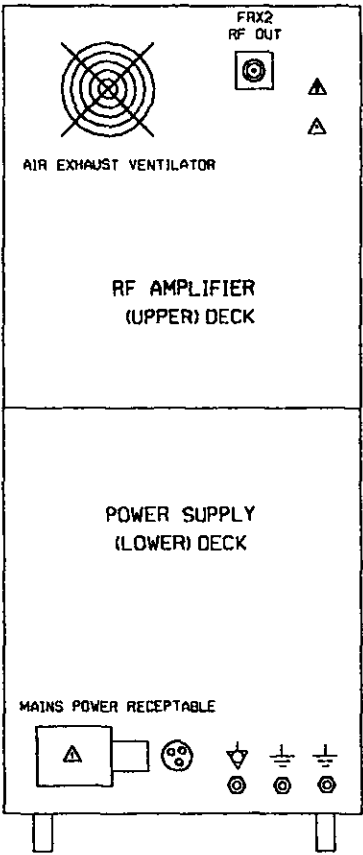

REAR VIEW


Intera 0.5 T	Intera 1.0 T		Intera 1.5 T		
	Dim	Power	Dim	Power	Master

LAY OUT FR
RF POWER AMPL. S23A-64 S24A-

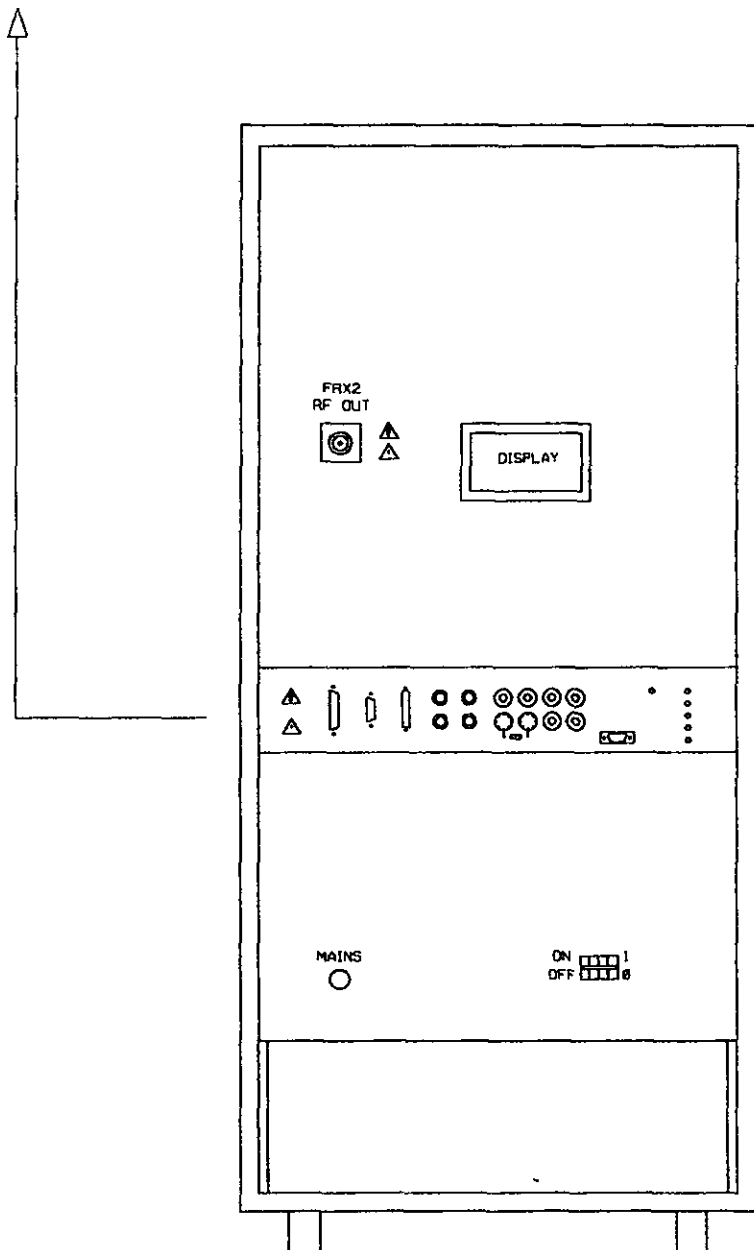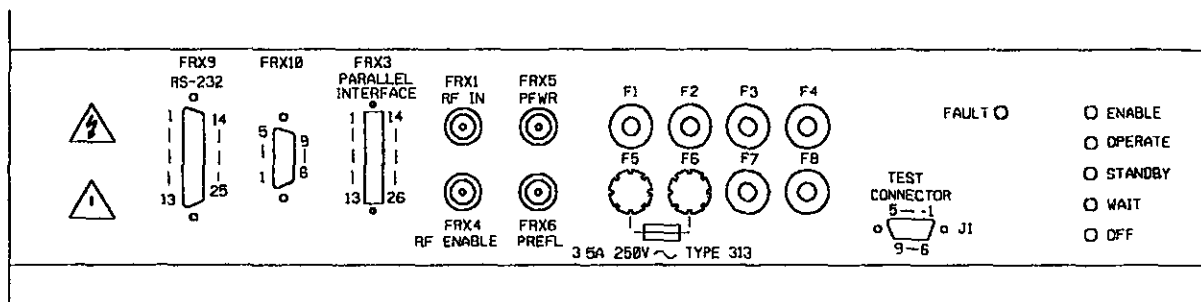

Intera 0.5 T	Intera 1.0 T		Intera 1.5 T		
	Onn	Power	Onn	Power	Master



FRONT VIEW
RF POWER AMPL. S21 FR

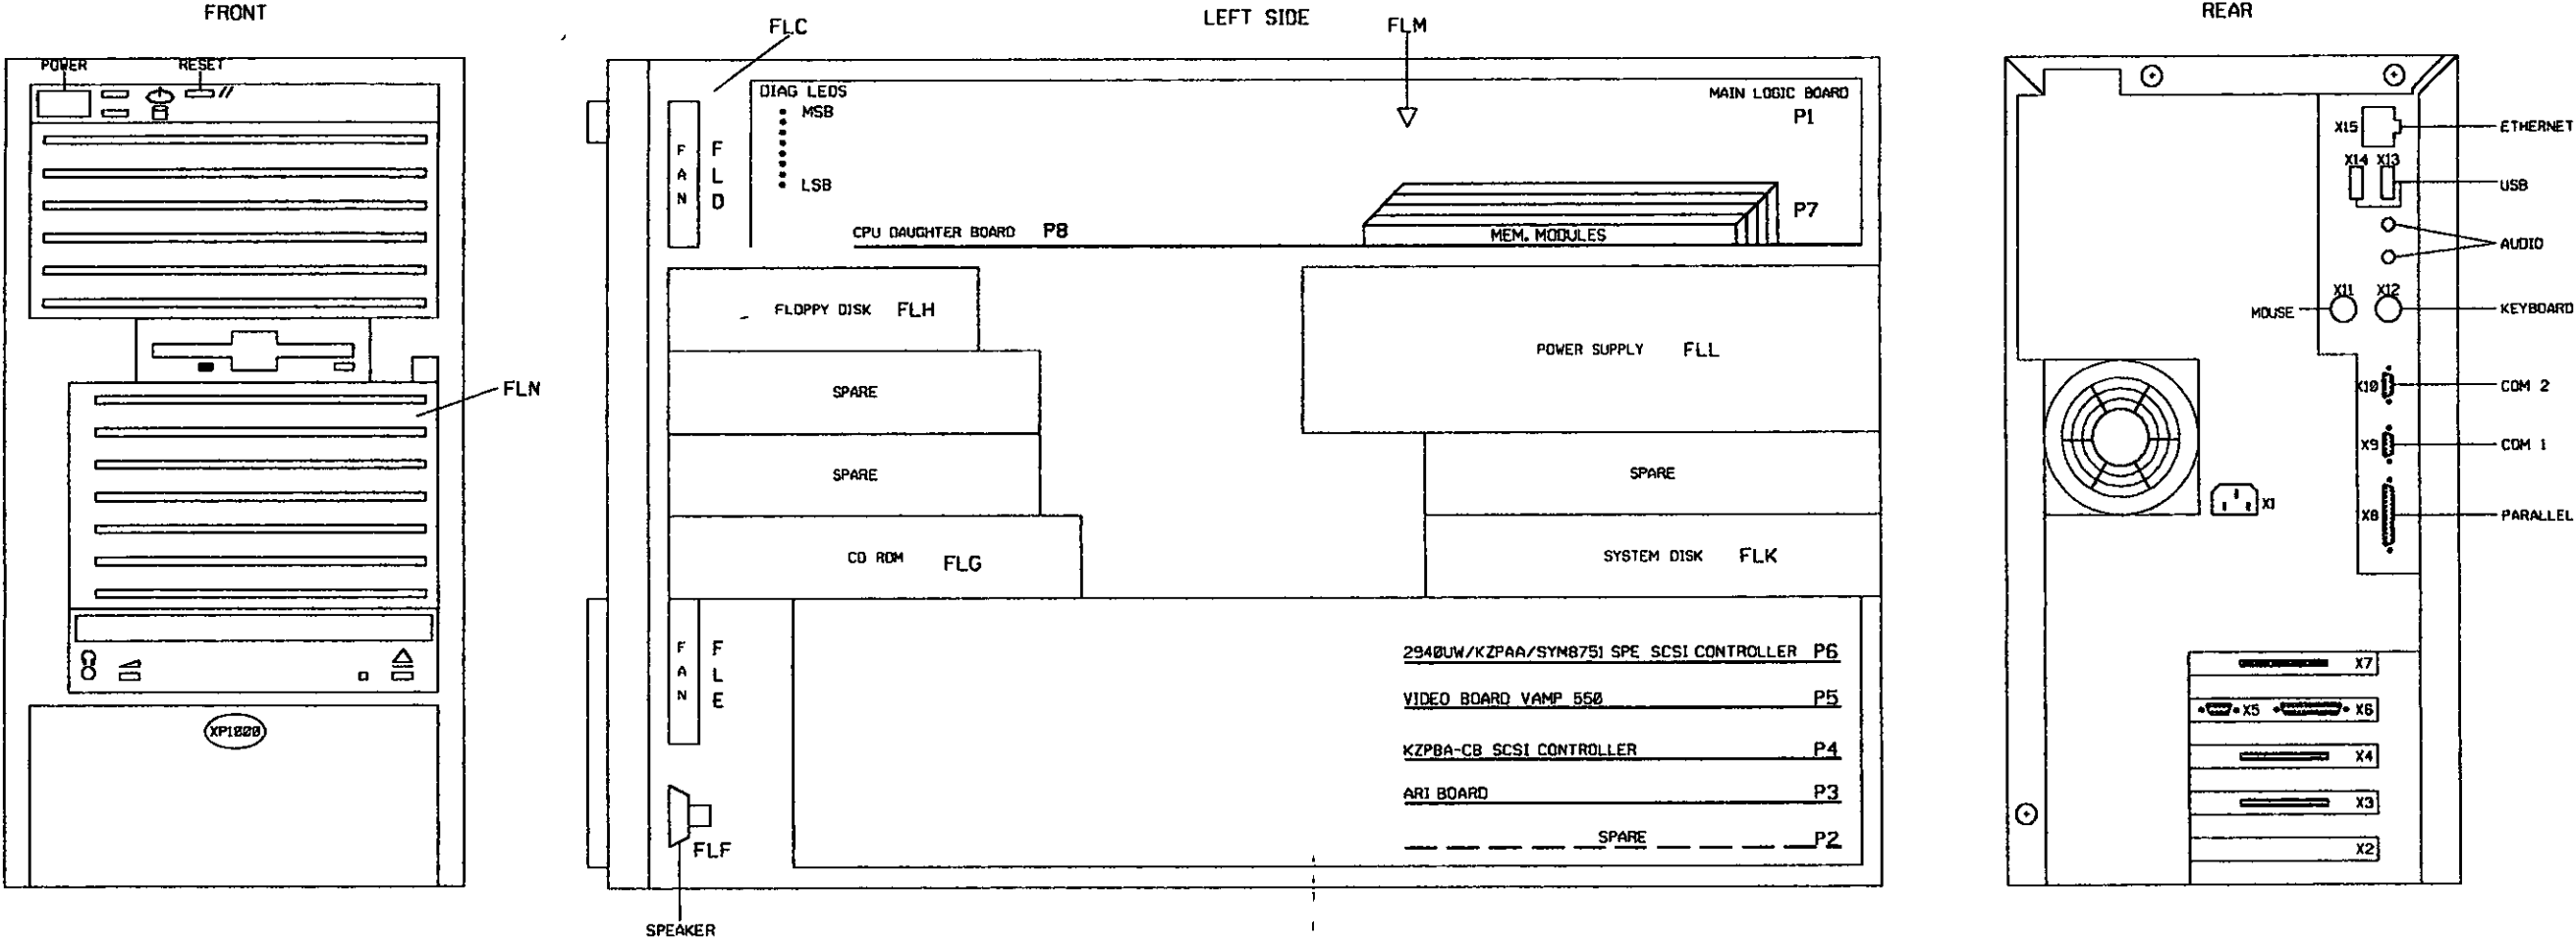

Intera 0.5 T		Intera 1.0 T		Intera 1.5 T	
Standard	Omni	Power	Omni	Power	Master

CONNECTOR LOCATION AND
OVERVIEW
RECONSTRUCTOR XP1000 FL



MAIN LOGIC BOARD XP1000

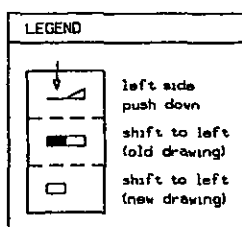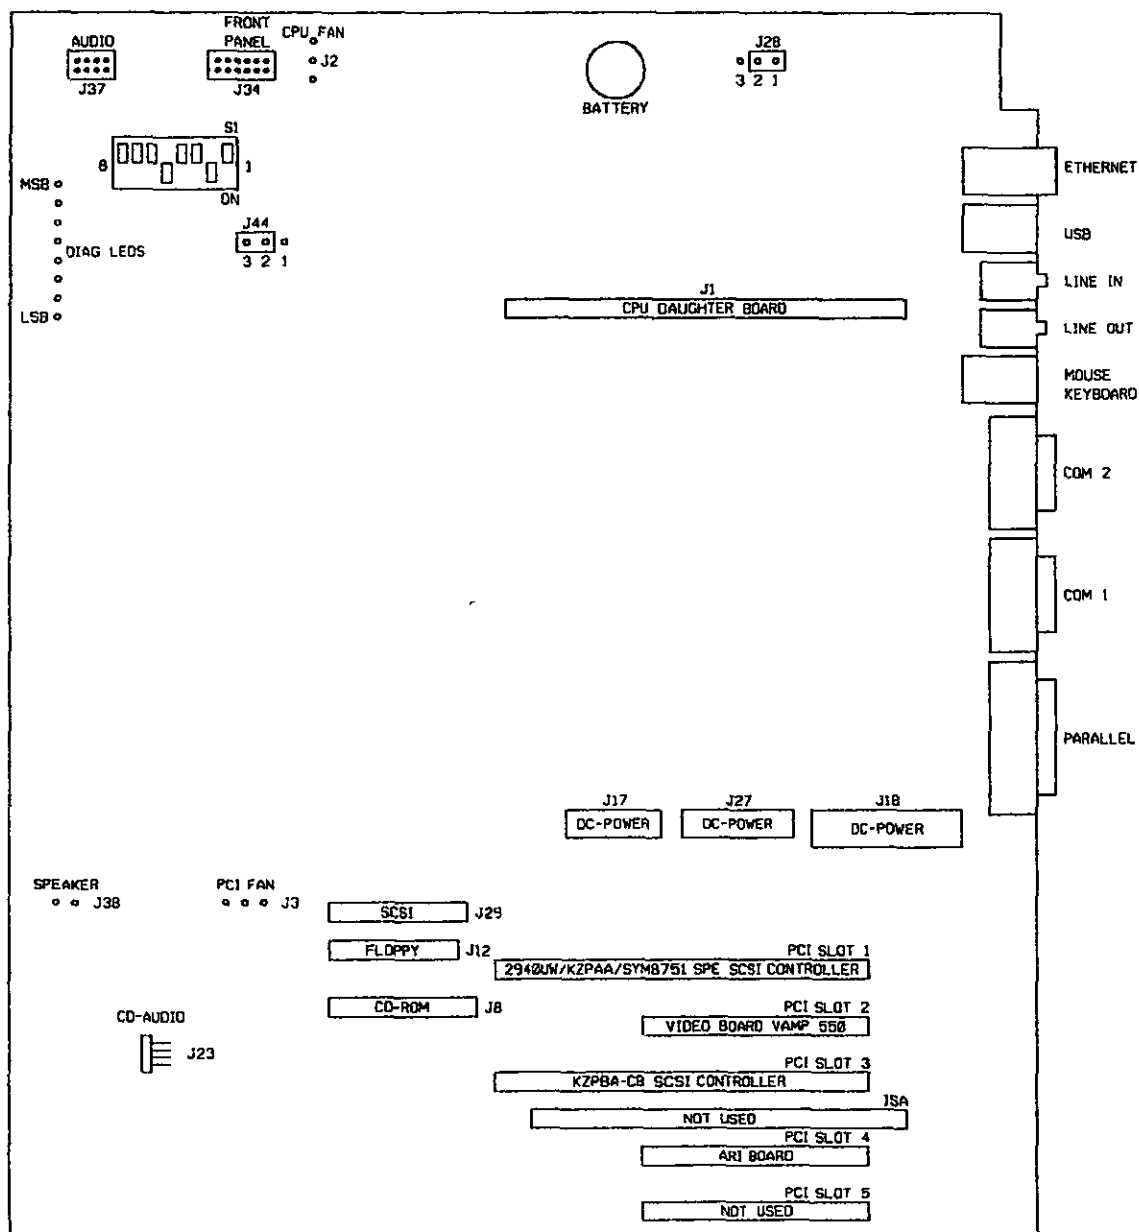

Inter-a 0.5 T		Inter-a 1.0 T		Inter-a 1.5 T	
Standard	Onms	Power	Onms	Power	Master

CONNECTOR LOCATION AND
JUMPER SETTING
MAIN LOGIC BOARD XP1000








CPU DAUGHTER BOARD XP1000 500MHz

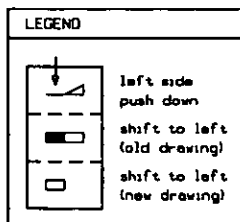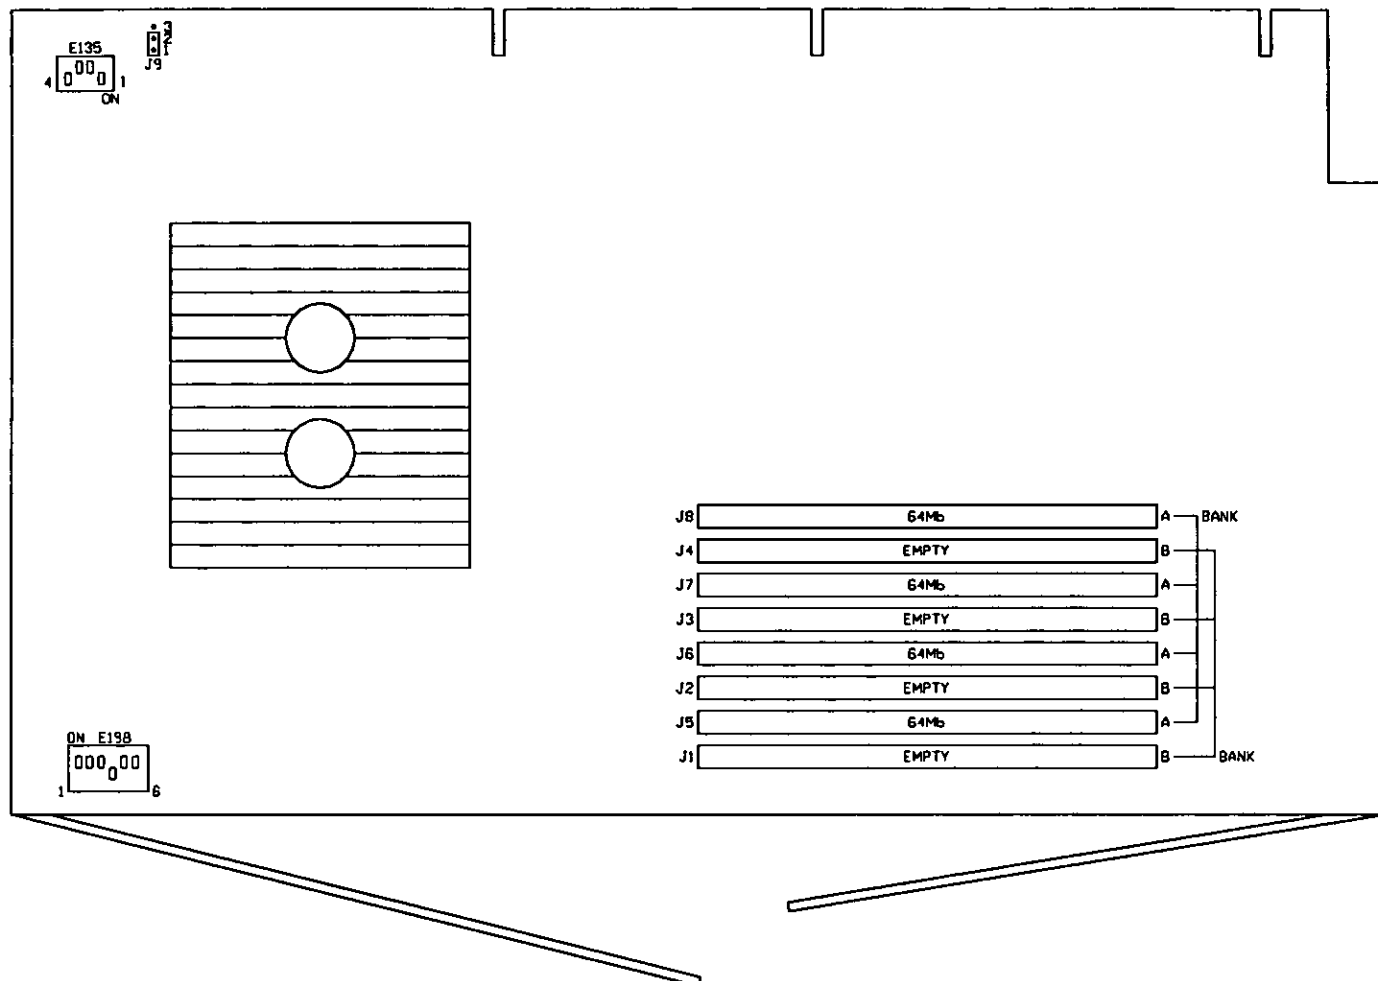

Intera 0.5 T		Intera 1.0 T		Intera 1.5 T	
Standard	Omni	Power	Omni	Power	Master

CONNECTOR LOCATION AND JUMPER SETTING


CPU DAUGHTER BOARD XP1000

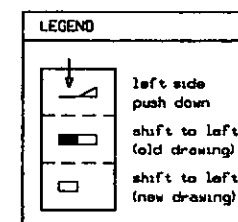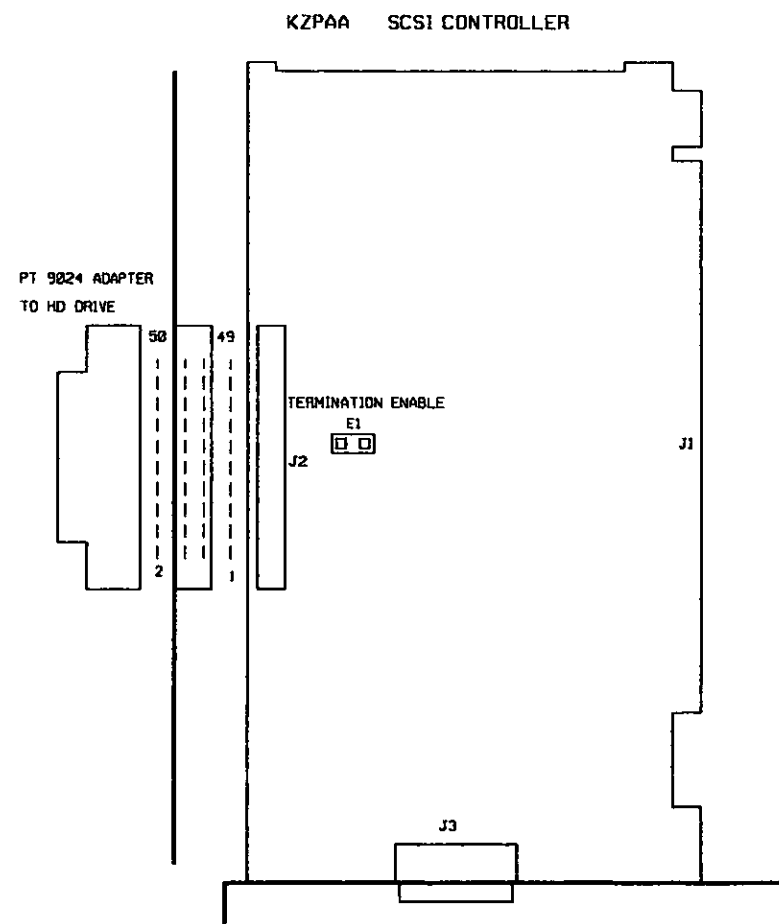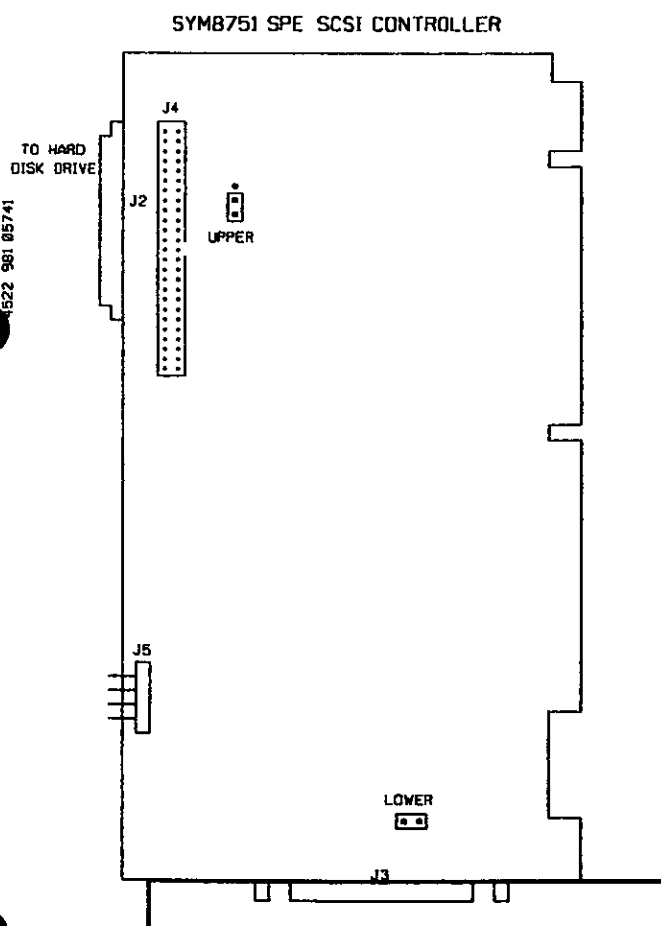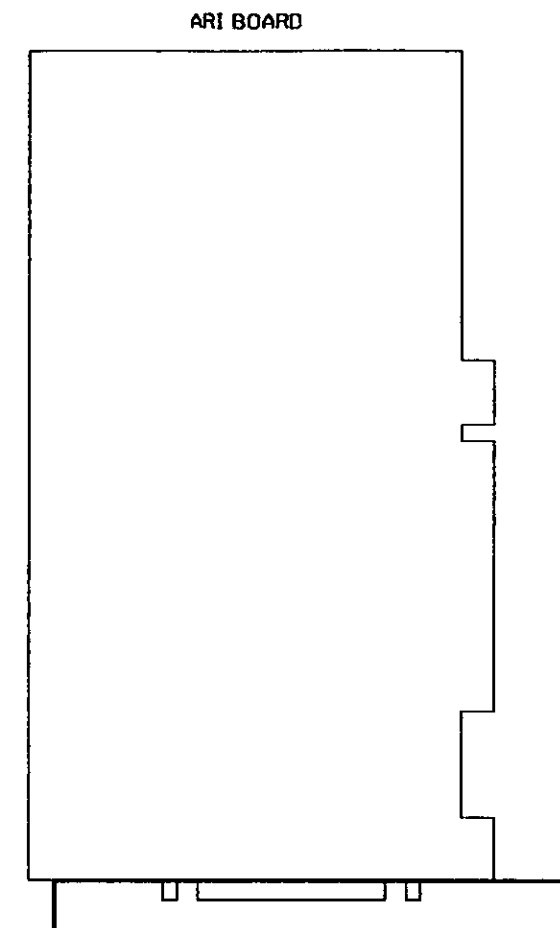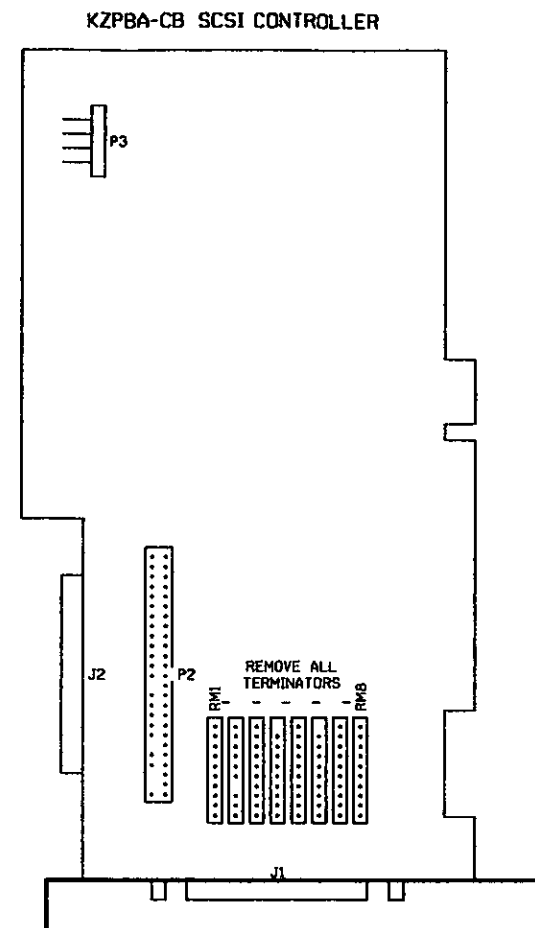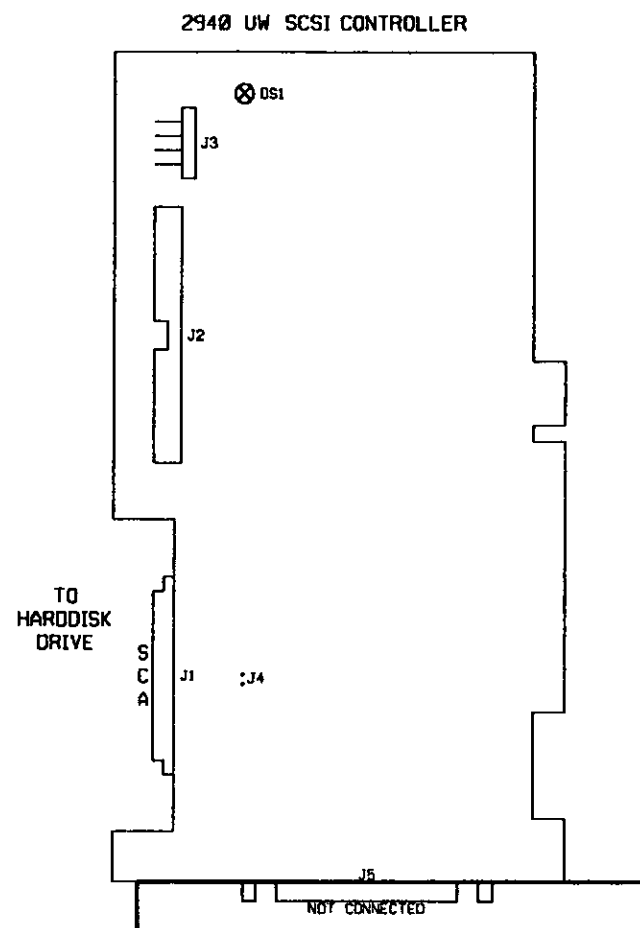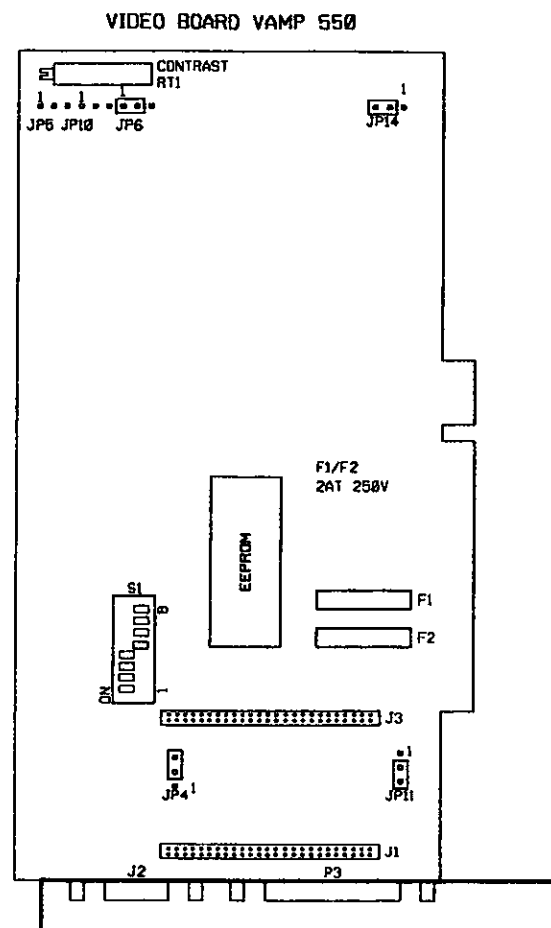


Inter 05 T		Inter 1.0 T		Inter 1.5 T	
Standard	Omni	Power	Omni	Power	Master

CONNECTOR LOCATION AND JUMPER SETTING RECONSTRUCTOR XP1000

FLOPPY DISK DRIVE XP1000

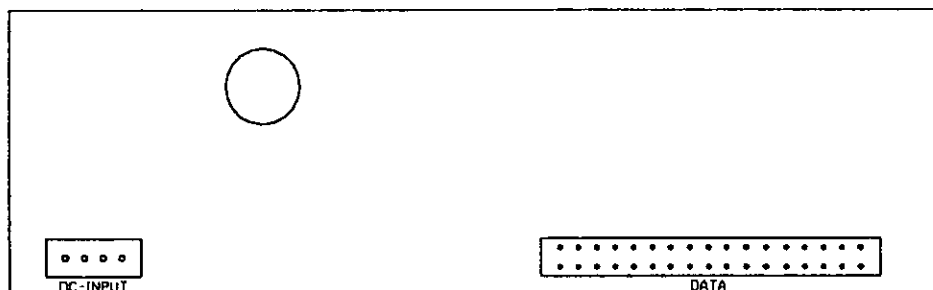

CD-ROM DRIVE XP1000

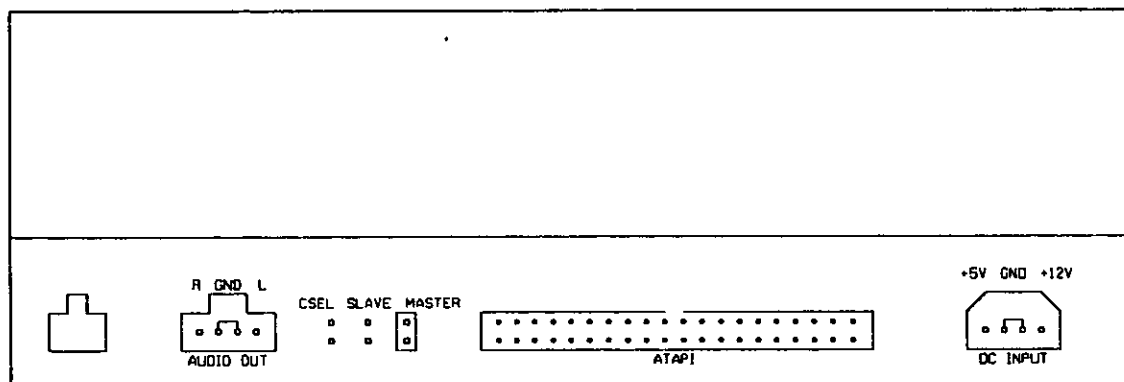


Intera 0.5 T	Intera 10 T		Intera 15 T		
Standard	Omni	Power	Omni	Power	Master

CONNECTOR LOCATION AND JUMPER SETTING FLOPPY/ CD ROM DISK DRIVE XP1000


HARDDISK DRIVES RECONSTRUCTOR XP1000

TYPE	MANUFAC	
KB	IBM	4,3 GB
KA	QUANTUM	4,3 GB


RZ2CC-KA

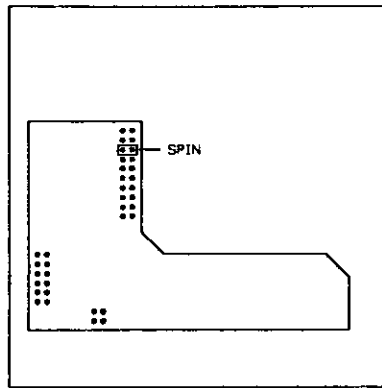


TOP VIEW

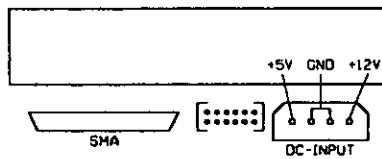

RZ2CC-KB

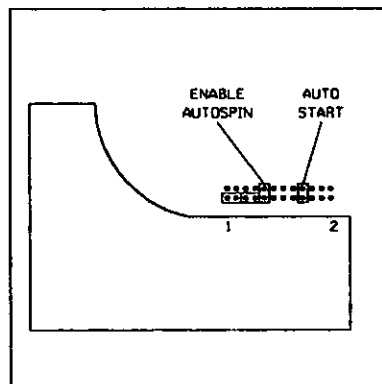


TOP VIEW


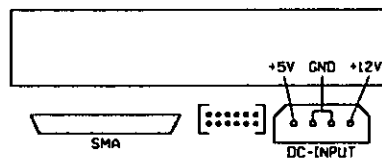


Intera 0.5 T	Intera 10 T		Intera 1.5 T		
Standard	Omni	Power	Omni	Power	Master

CONNECTOR LOCATION AND
JUMPER SETTINGS
HARD DISK DRIVES XP1000

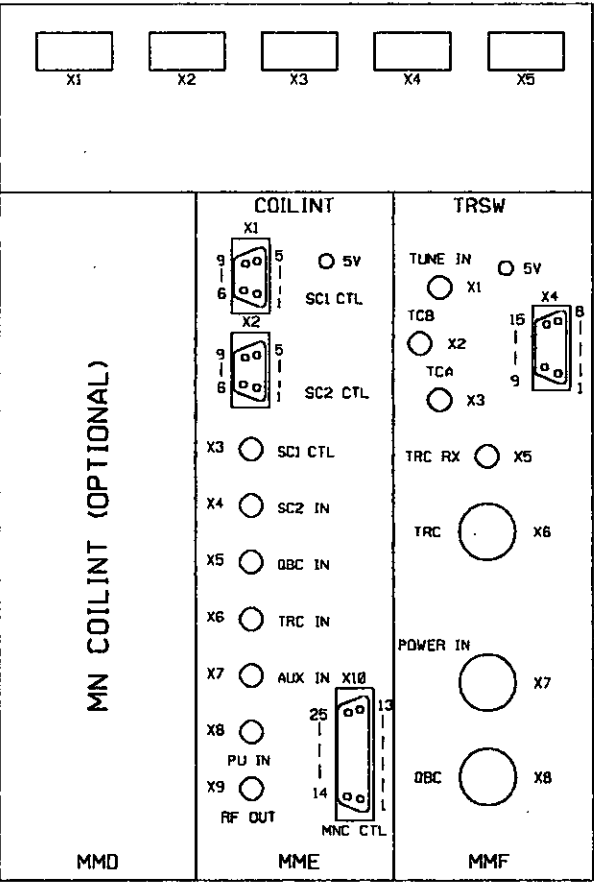







LEFT SIDE VIEW

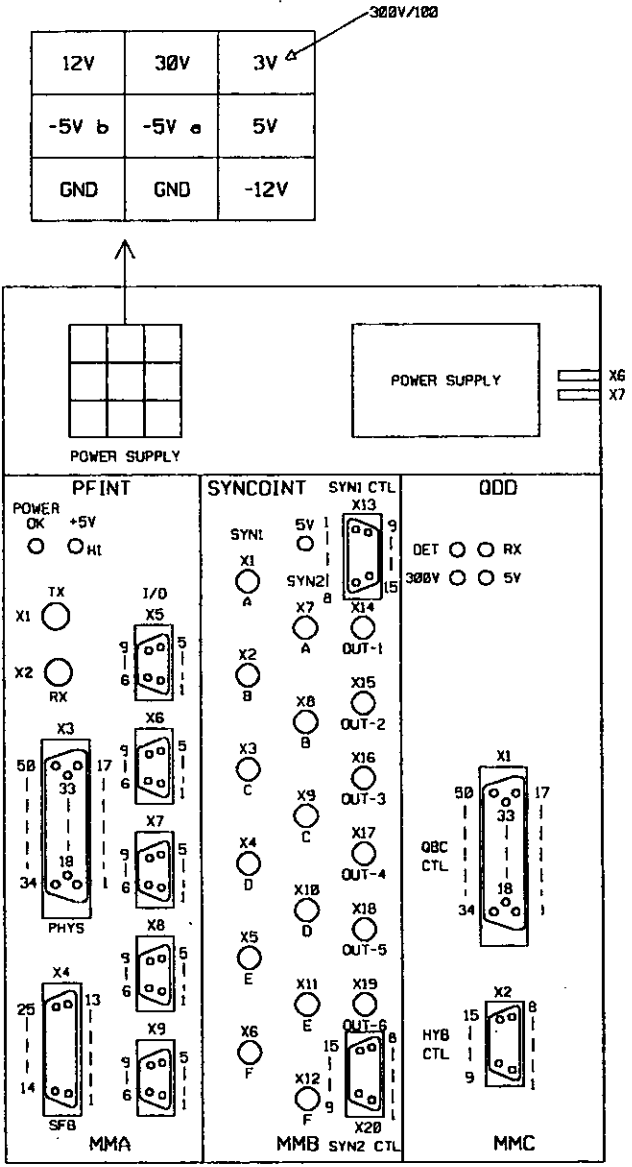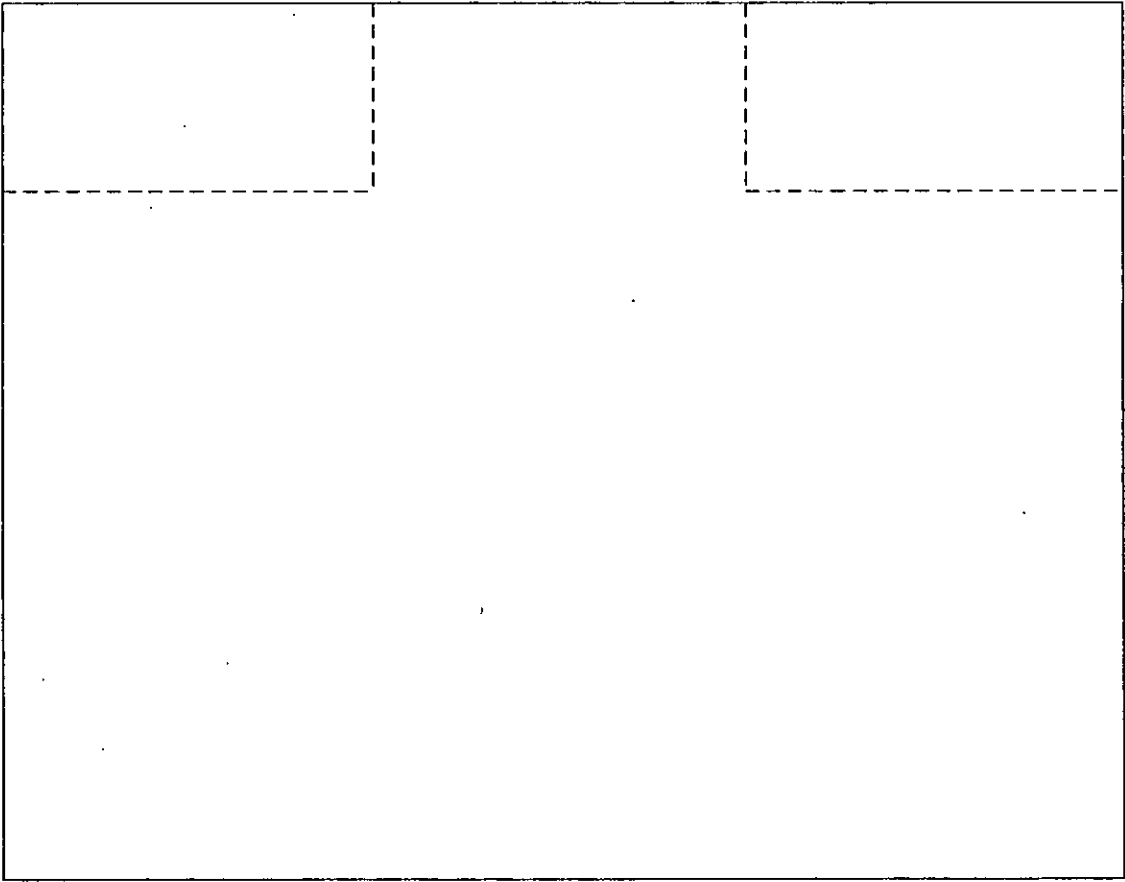

RIGHT SIDE VIEW



Inter 0.5 T	Inter 1.0 T	Inter 1.5 T
Standard	Omni	Power
Omni	Power	Master

PFEI MM

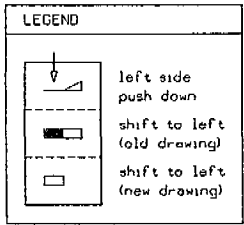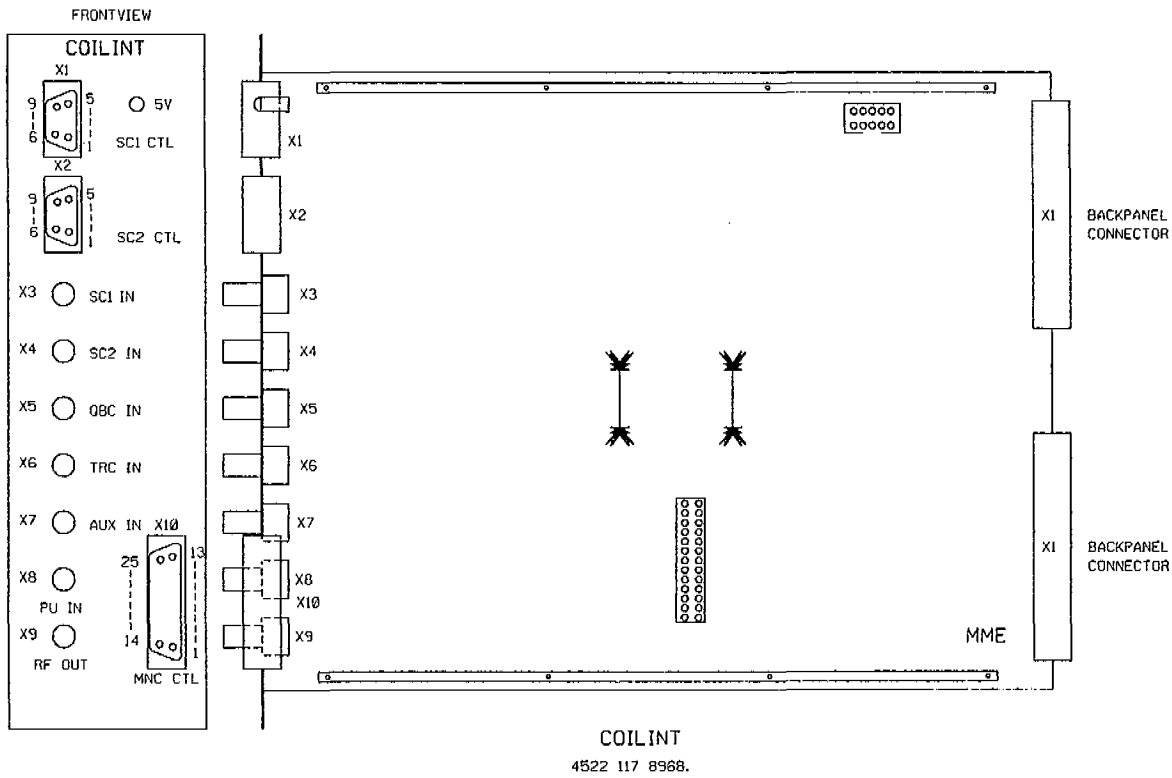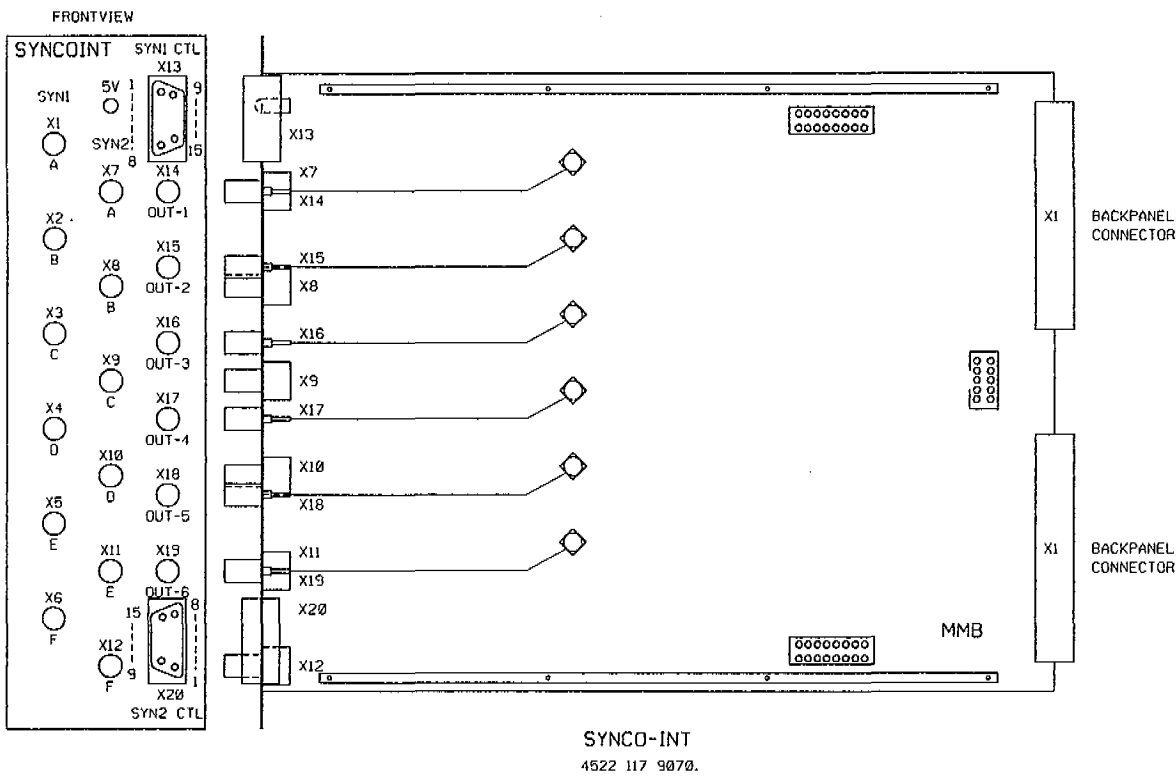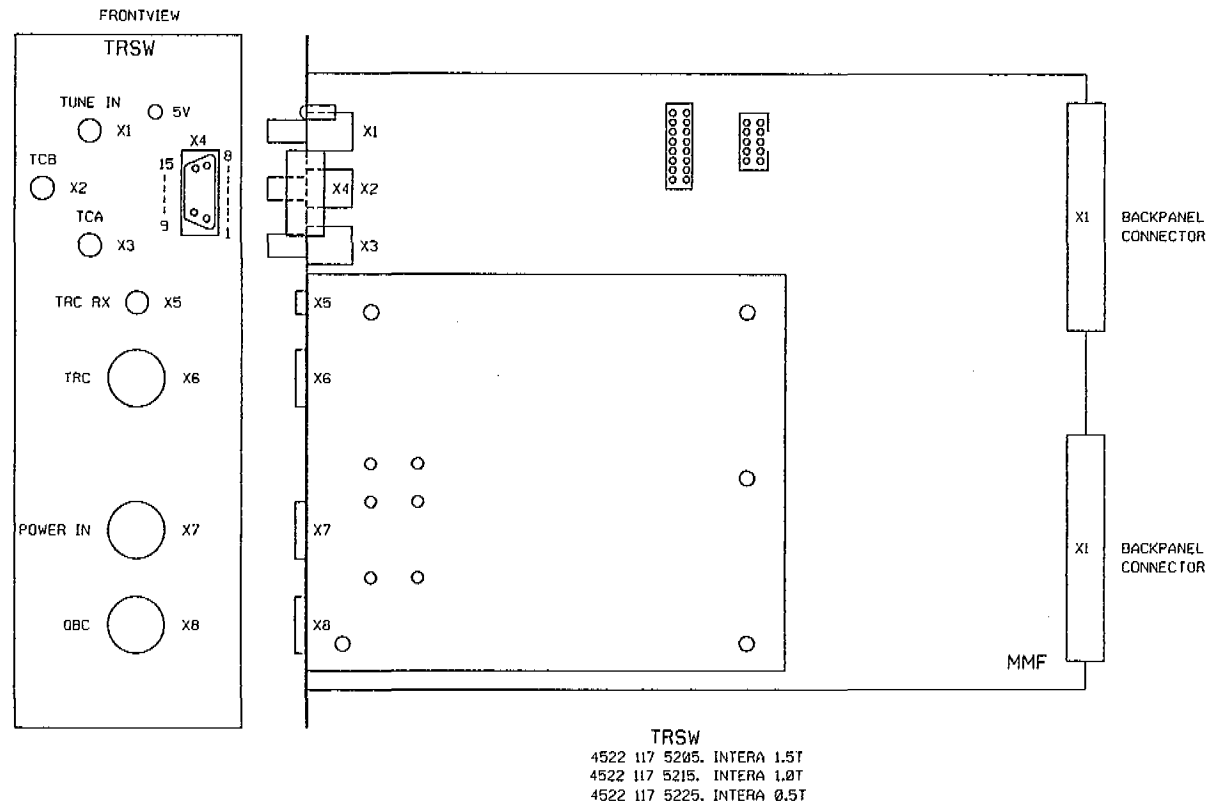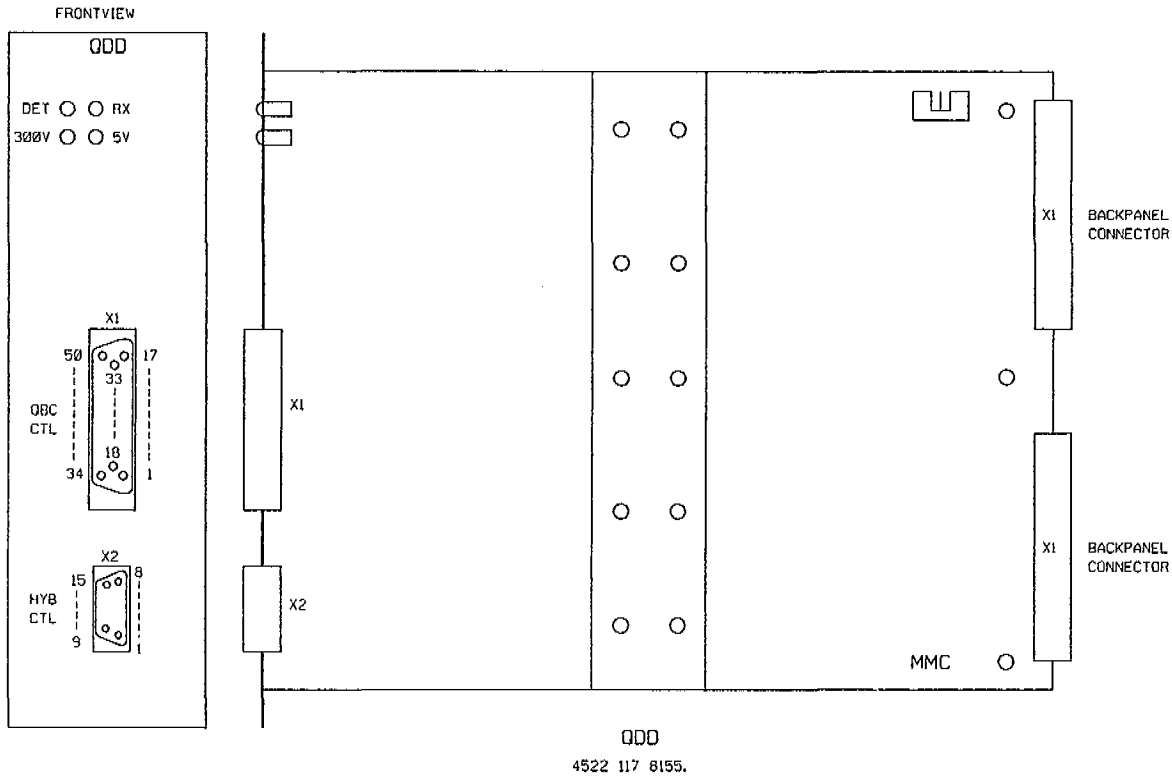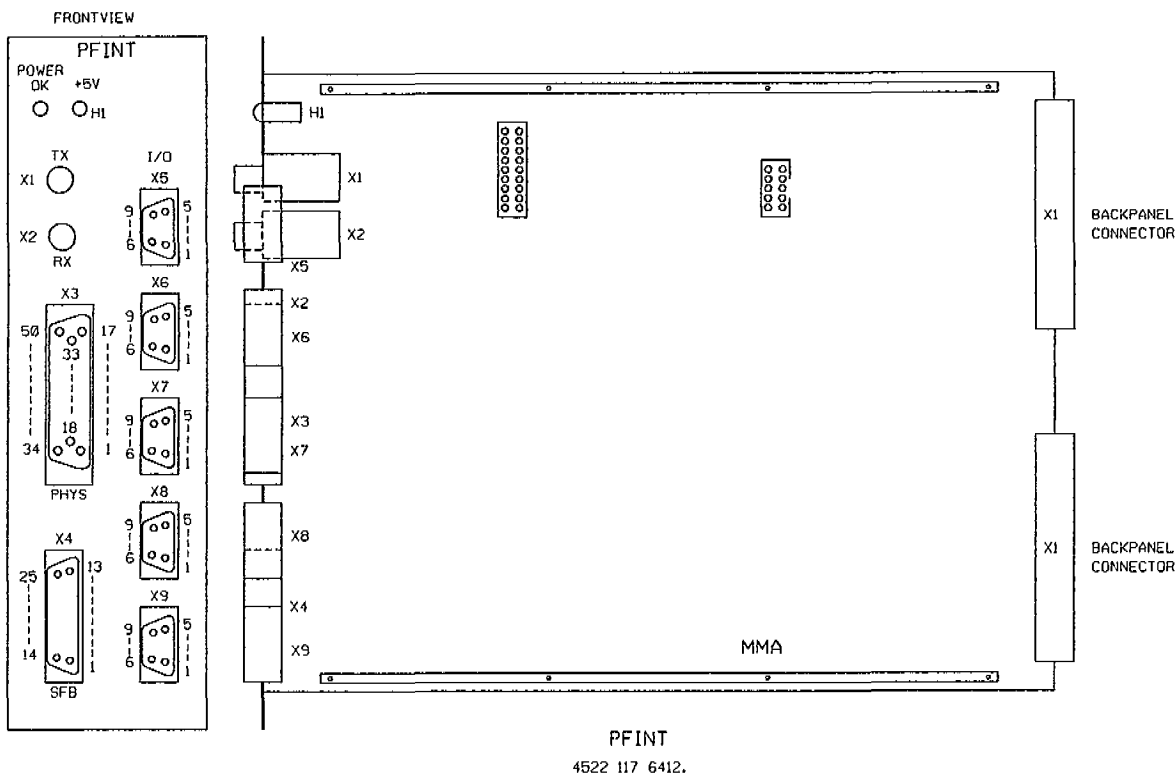


Intera 0.5 T		Intera 1.0 T		Intera 1.5 T	
Standard	Omni	Power	Omni	Power	Master

JUMPER SETTING
PFEI MM


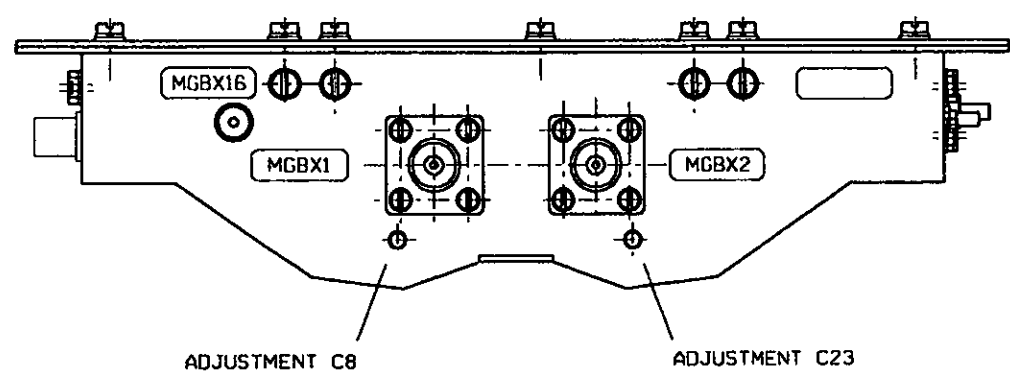
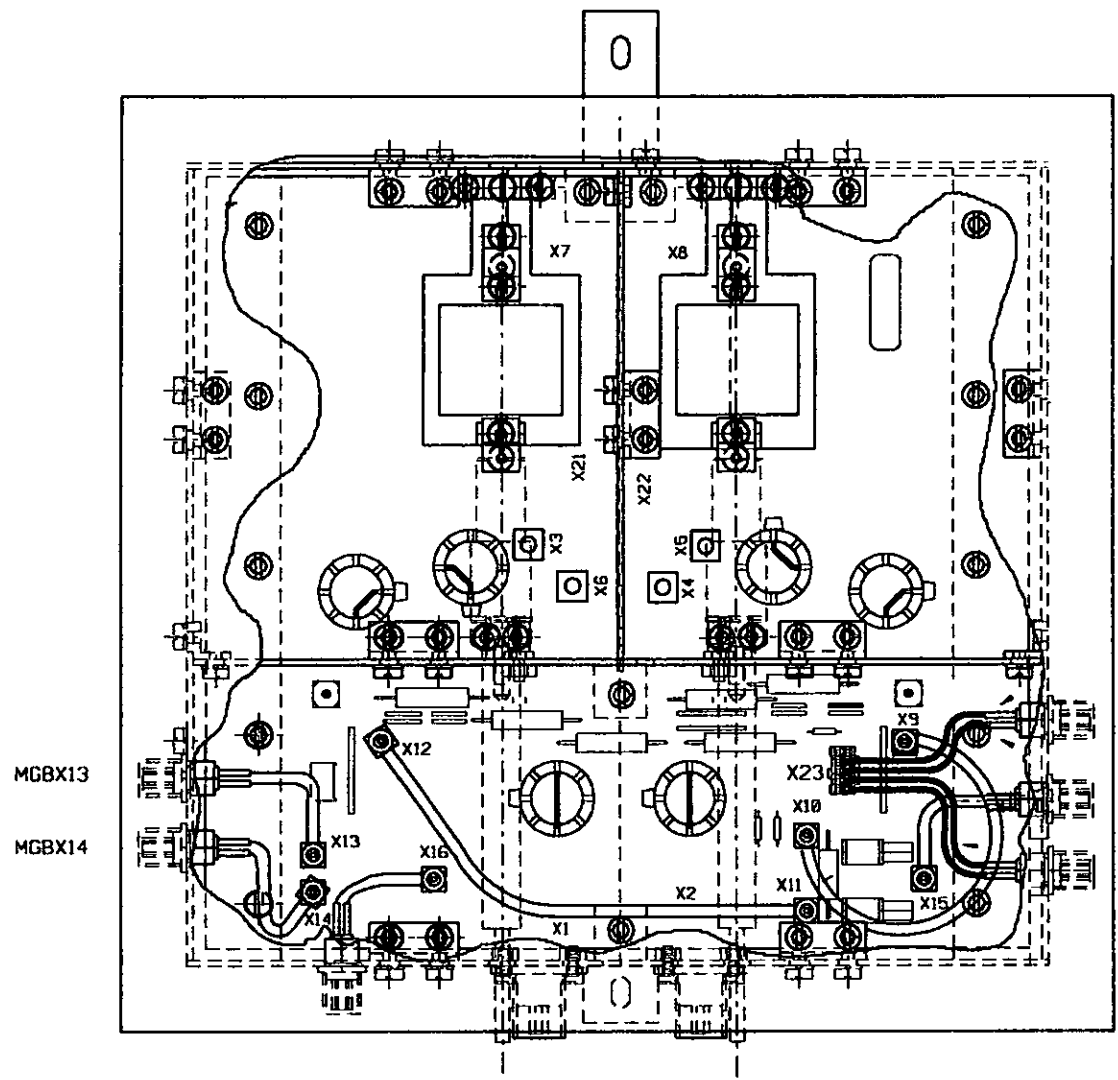


MGBX4
MGBX15
MGBX3

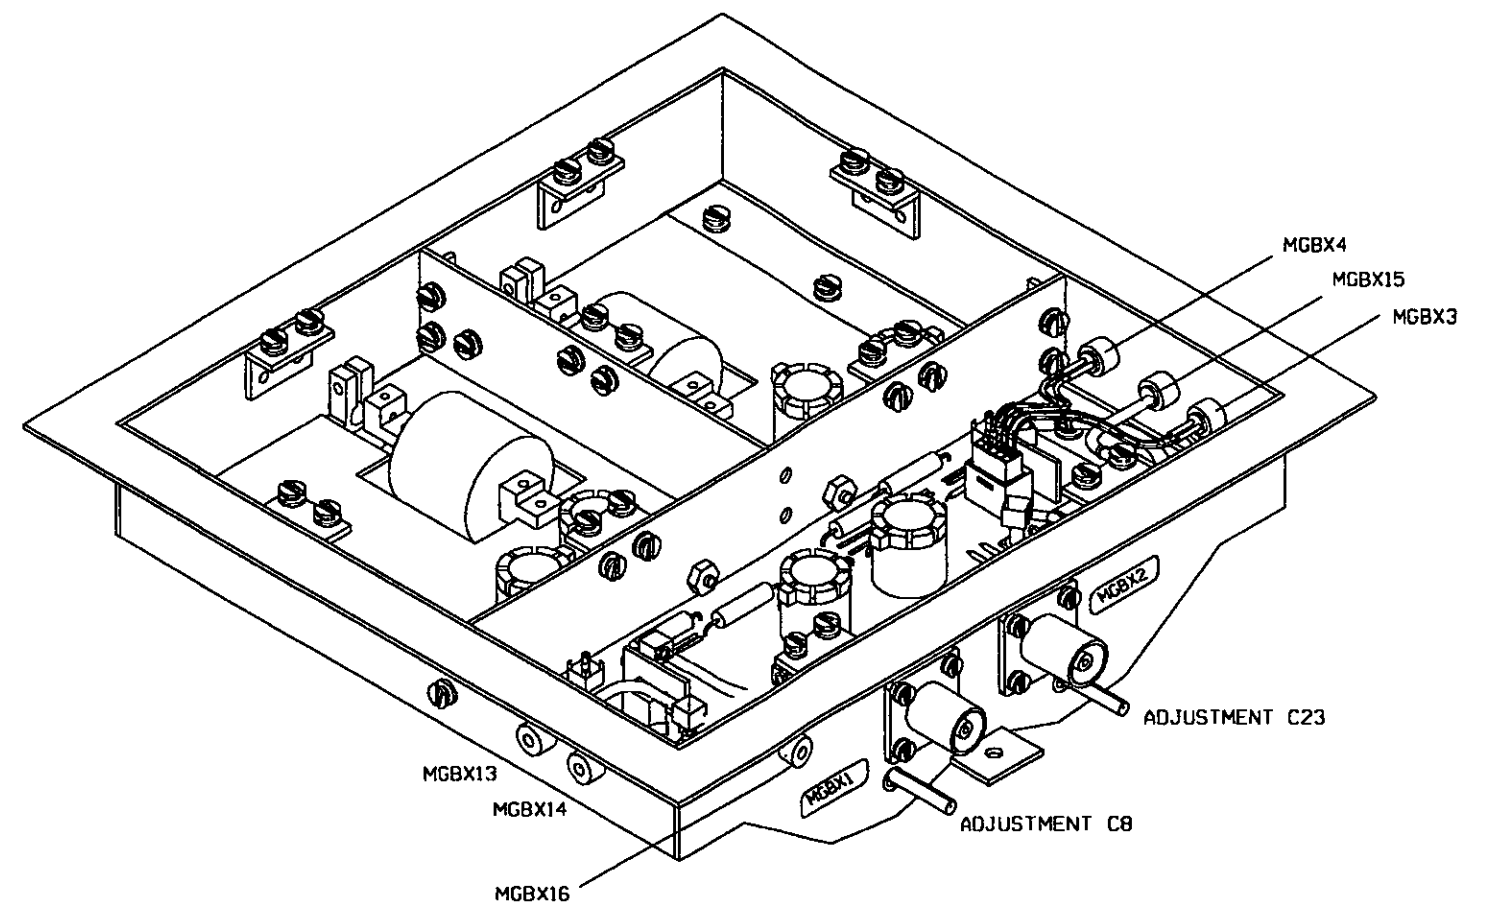


Interco 85 T	Interco 10 T	Interco 1.5 T
Standard		

CONNECTOR LOCATION AND JUMPER SETTING BBM BOX MGB

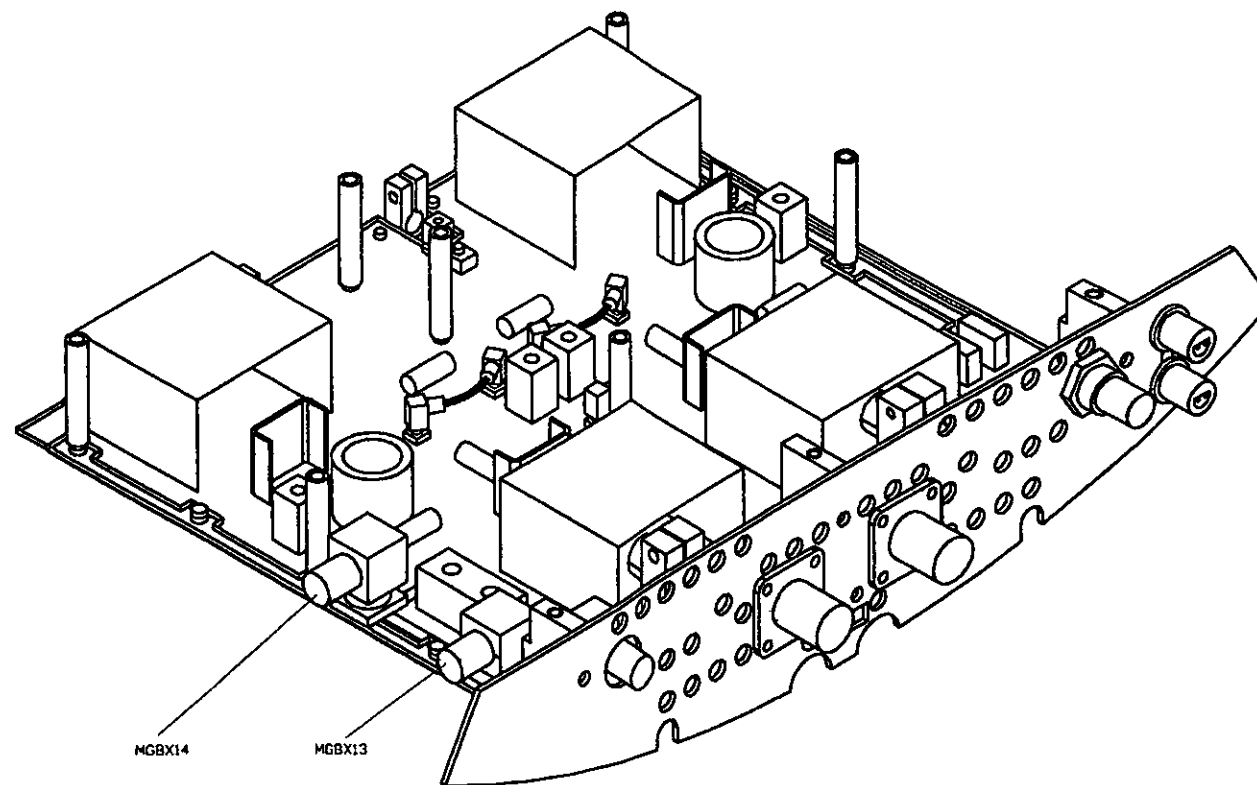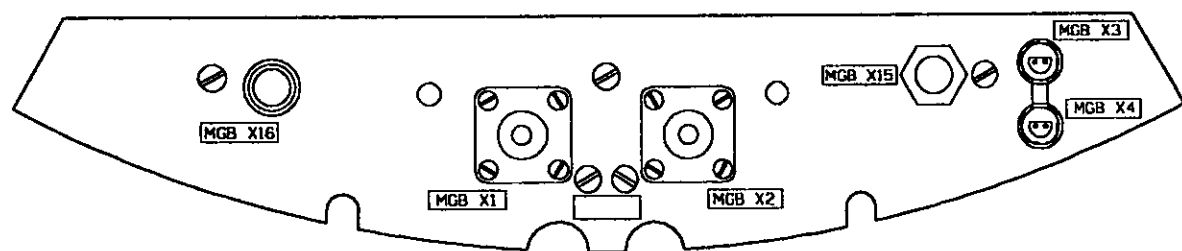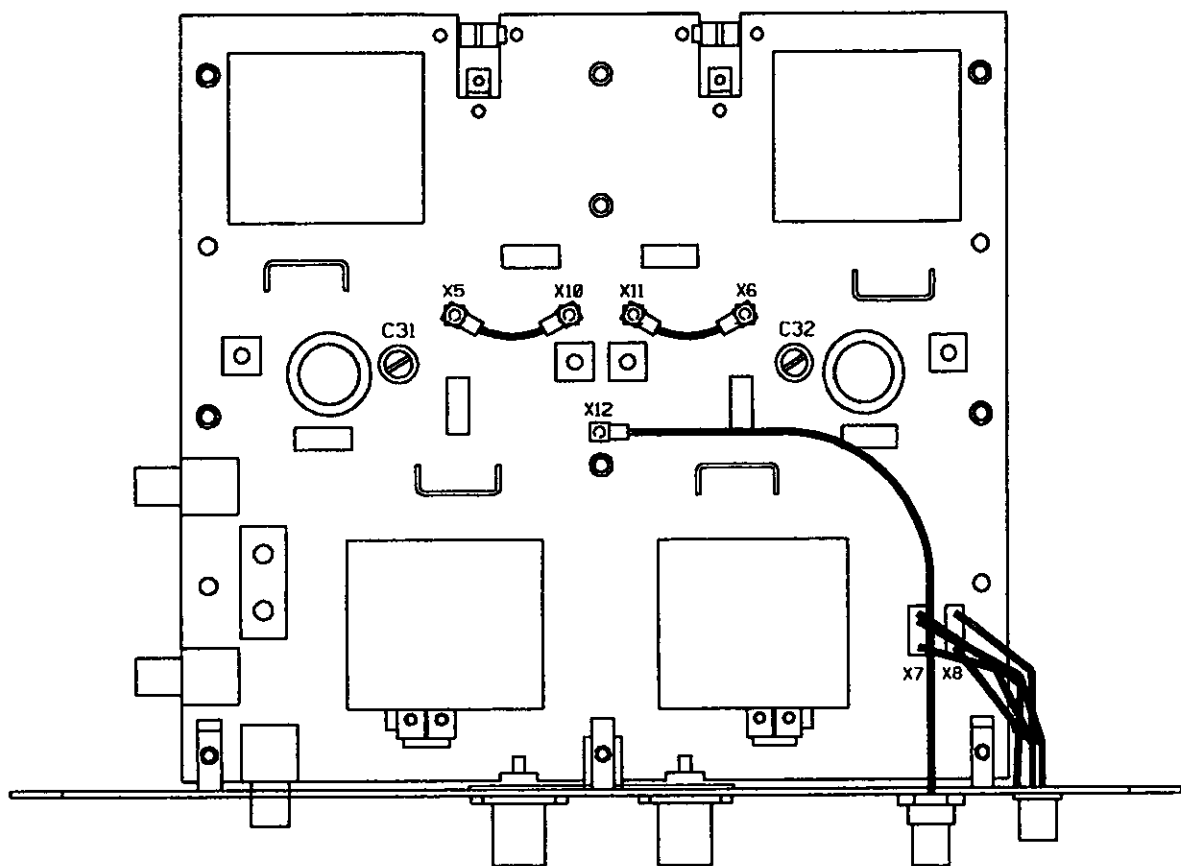


Intera 05 T	Intera 10 T		Intera 15 T		
	Omni	Power	Omni	Power	Master

CONNECTOR LOCATION HYBRID BOX MGB

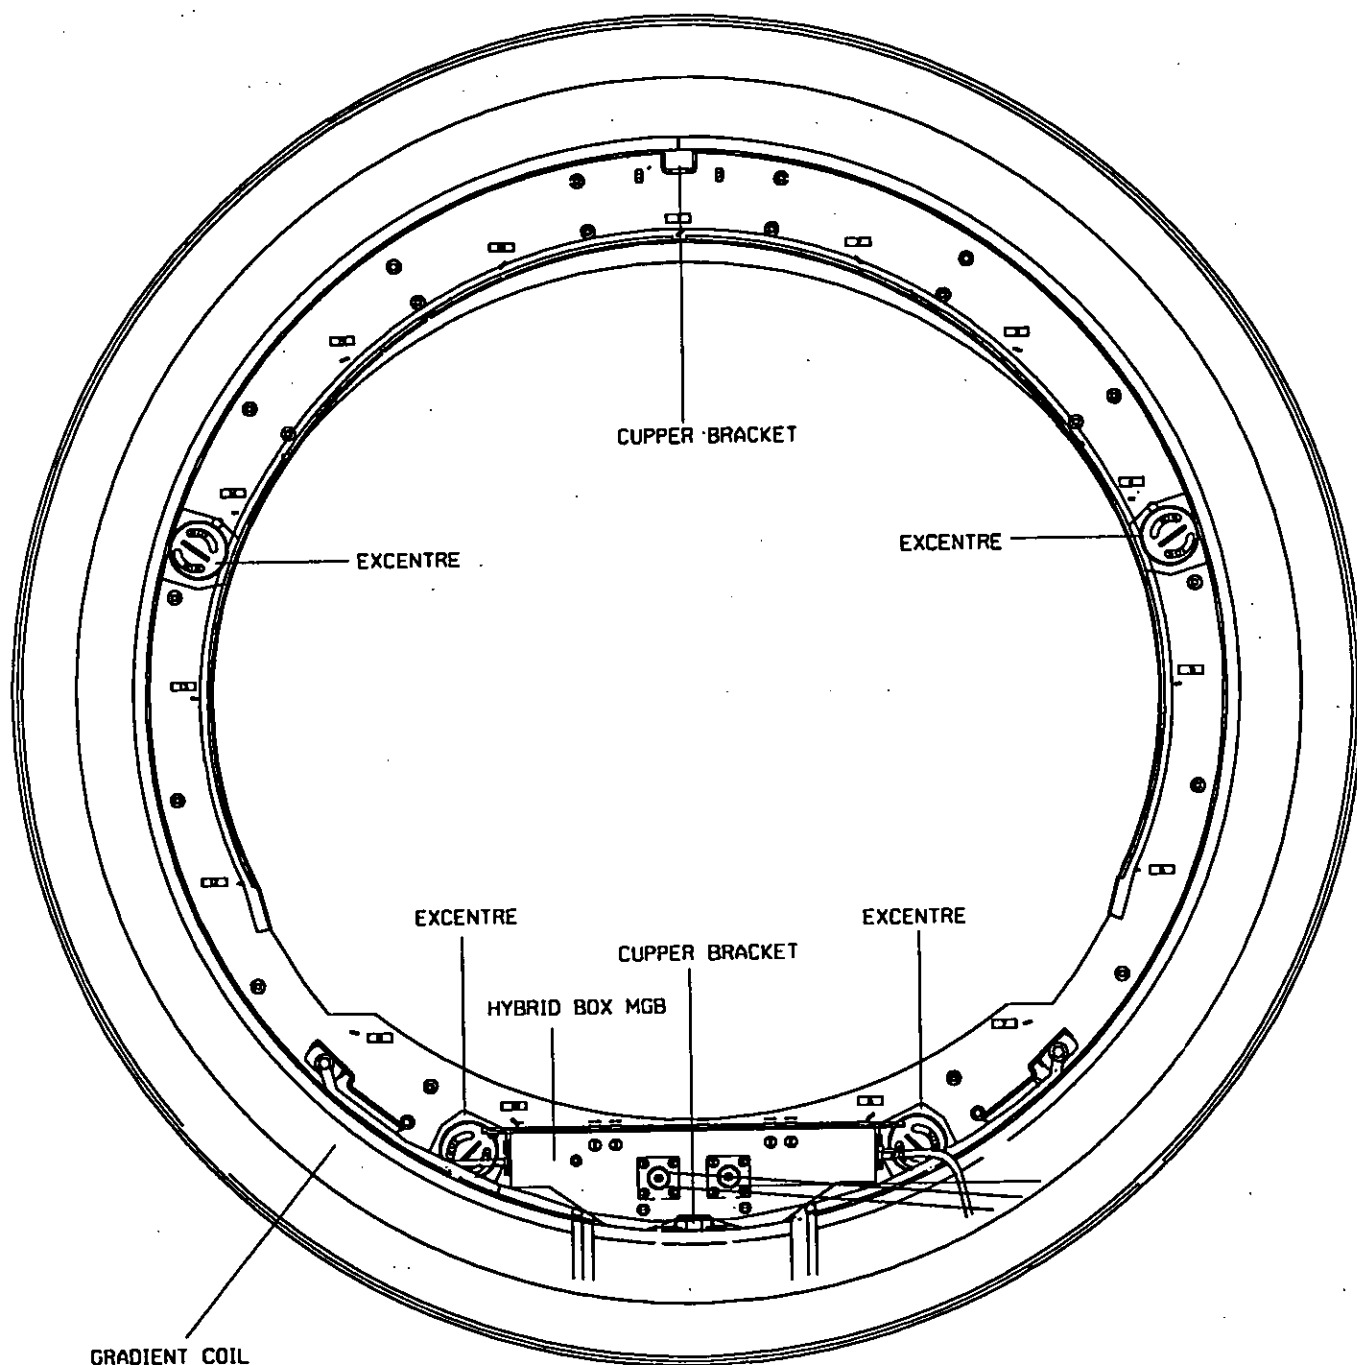


Intere 0.5 T	Intere 1.0 T	Intere 1.5 T
Standard		

QUAD BODY COIL MGO

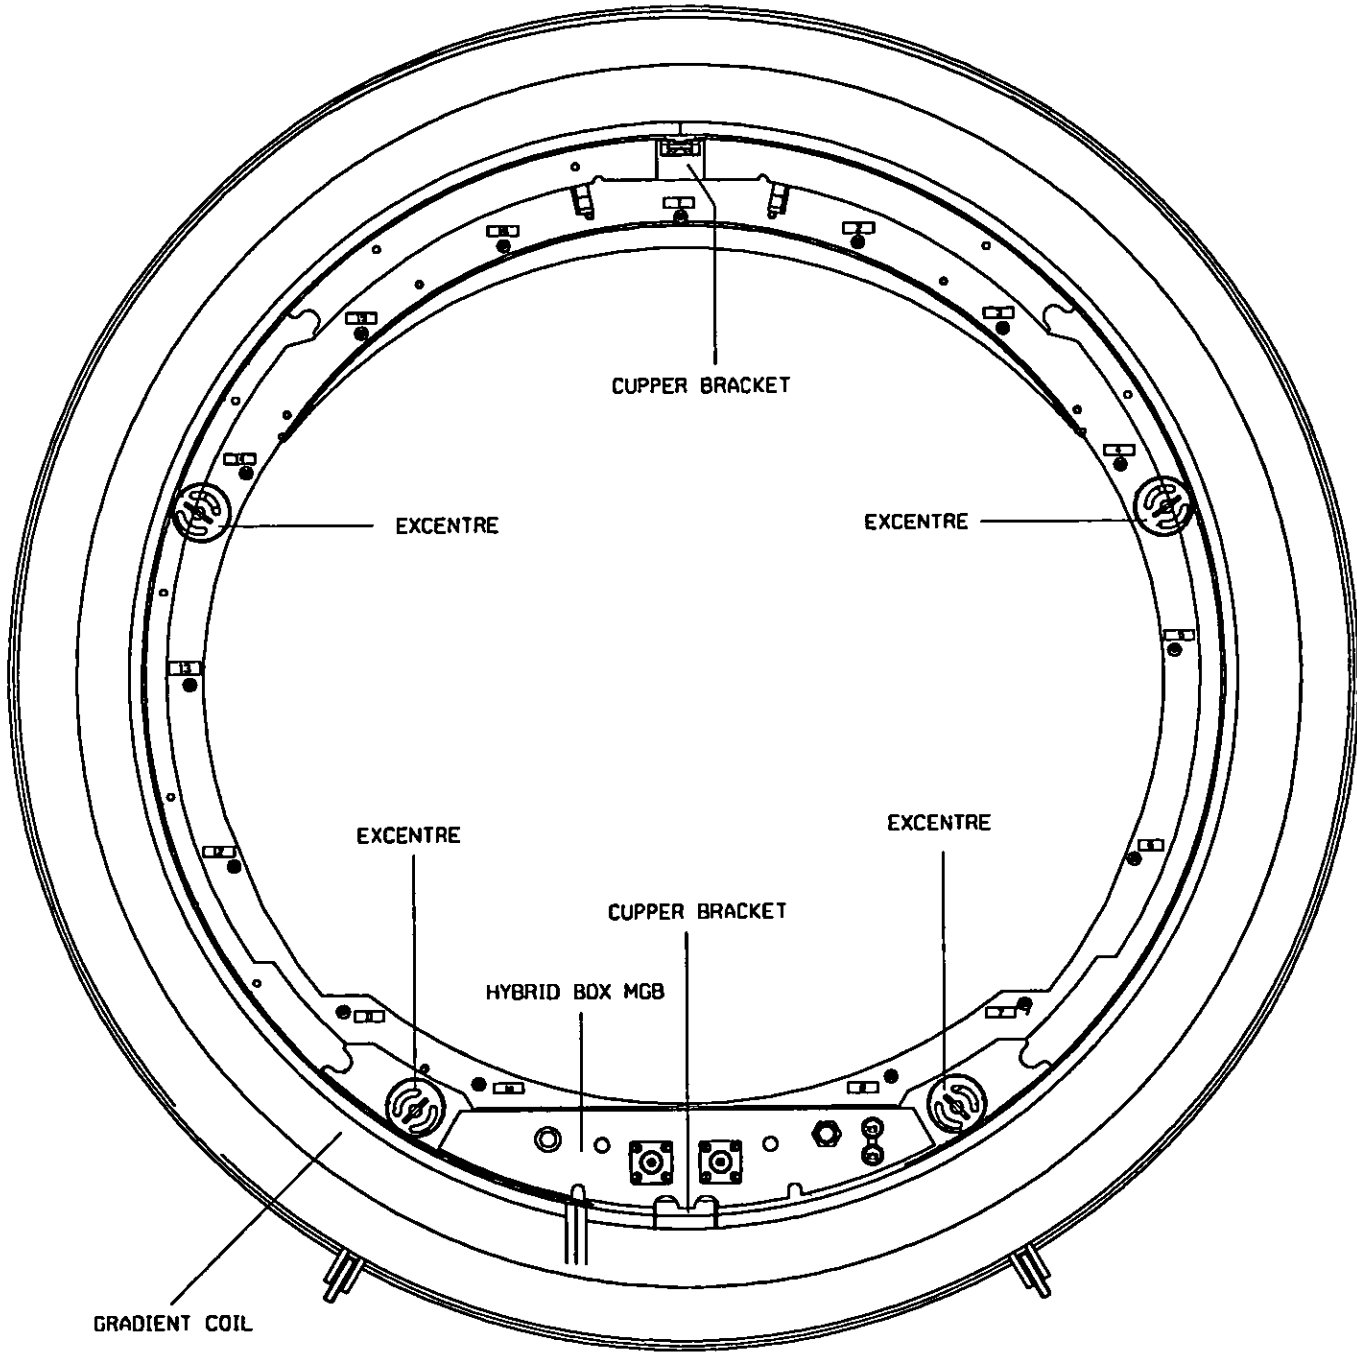


Intera 0.5 T	Intera 1.0 T		Intera 1.5 T		
	Omni	Power	Omni	Power	Master

QUAD BODY COIL MGO

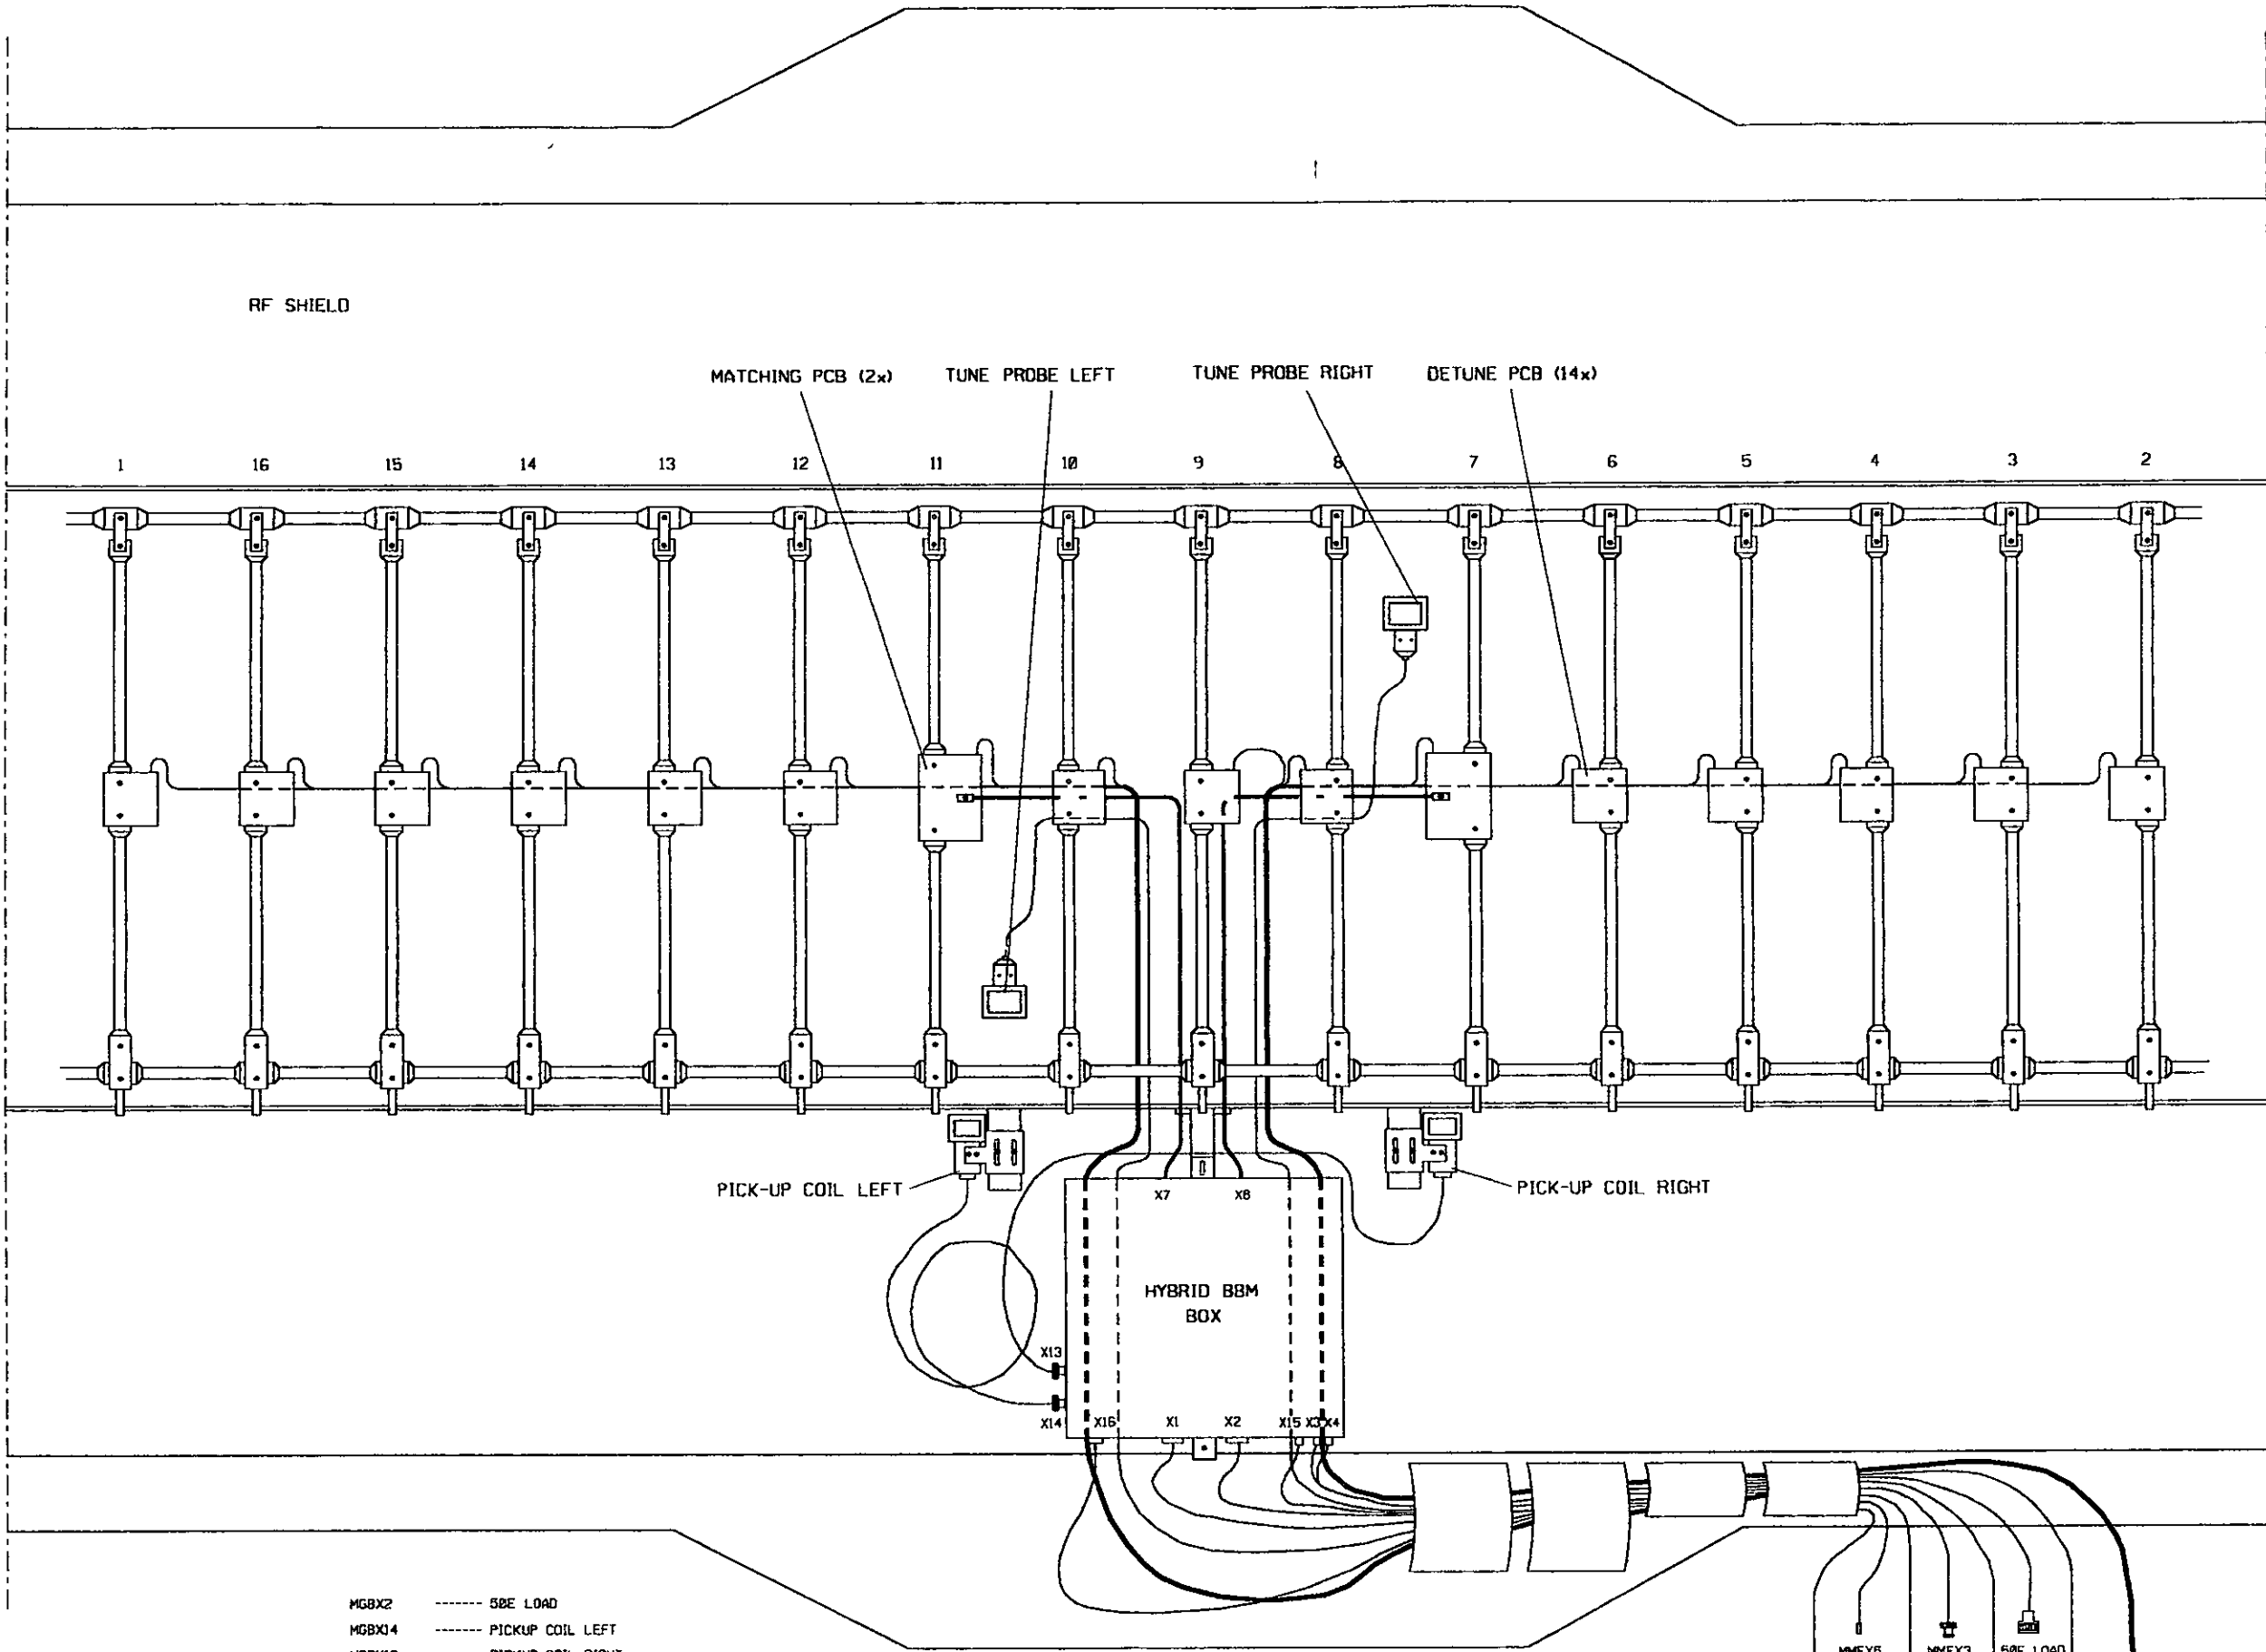


- MGBX2 ----- 50E LOAD
- MGBX14 ----- PICKUP COIL LEFT
- MGBX13 ----- PICKUP COIL RIGHT
- MGBX16 ----- MMEX8 (PICK-UP COIL)
- MGBX15 ----- MMEX5 (BODY COIL RECEIVE)
- MGBX1 ----- MMFX8 (RF POWER)
- MGBX3/X4 ----- MMEX2 (RF T/R MODE HYBRID)
- DET. ROD 1---8 } MMEX1 (TUNE/DETUNE)
- DET. ROD 9---16 }
- TUNE COIL LEFT -- MMFX2 (TUNE-A)
- TUNE COIL RIGHT-- MMFX3 (TUNE-B)

Intera 0.5 T		Intera 1.0 T		Intera 1.5 T	
Standard	Omni	Power	Omni	Power	Master

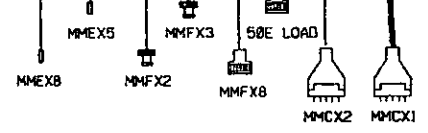


QUAD BODY COIL MGO

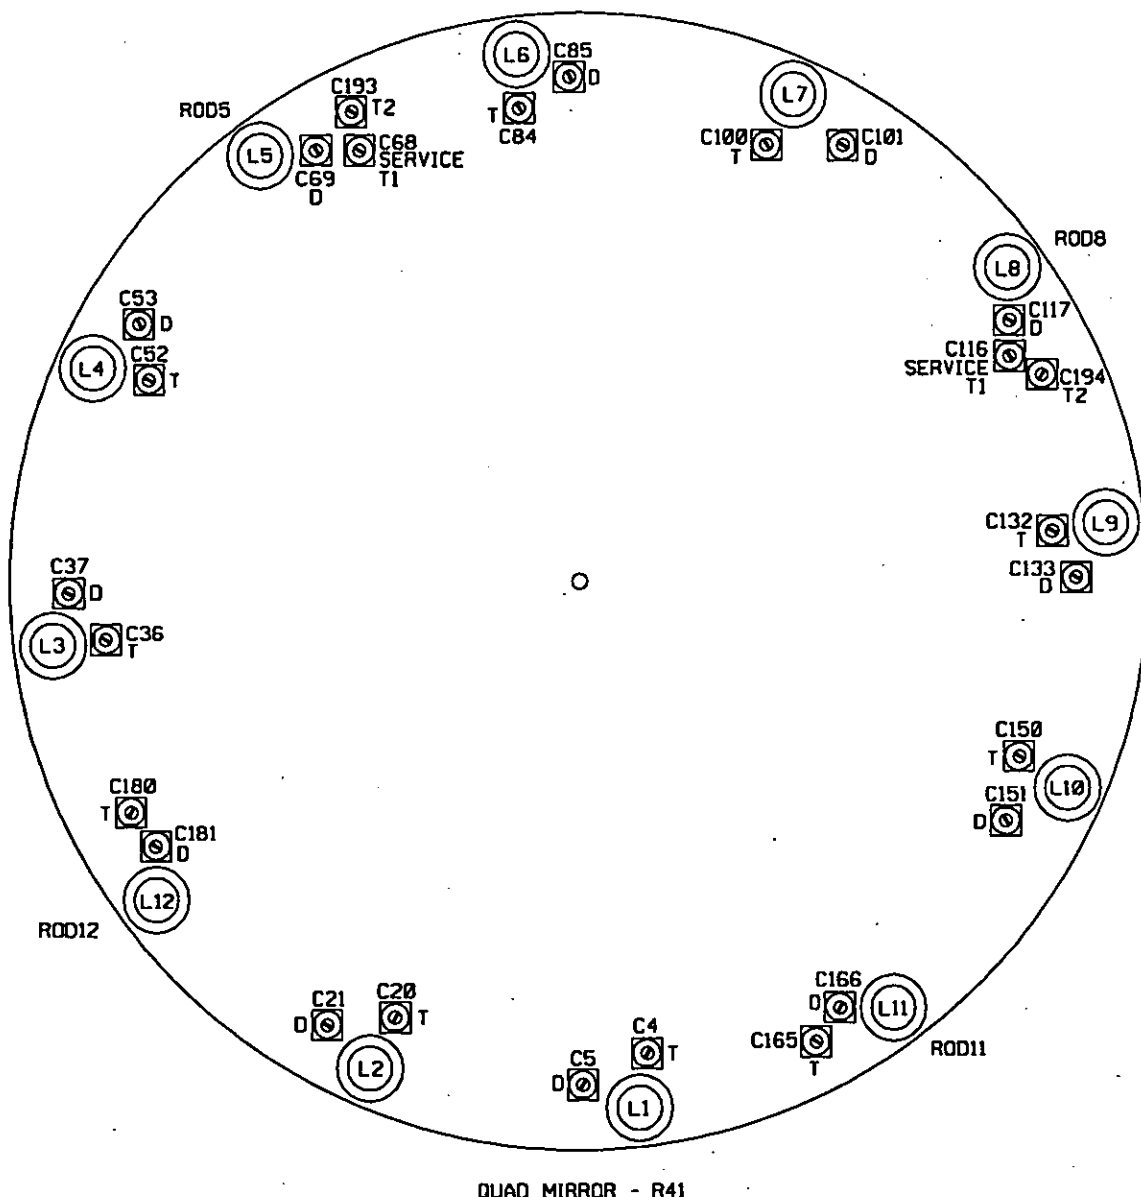

Intera 0.5 T	Intera 1.0 T	Intera 1.5 T
Standard		


TRIMMER LOCATION QUADRATURE HEADCOIL SRA

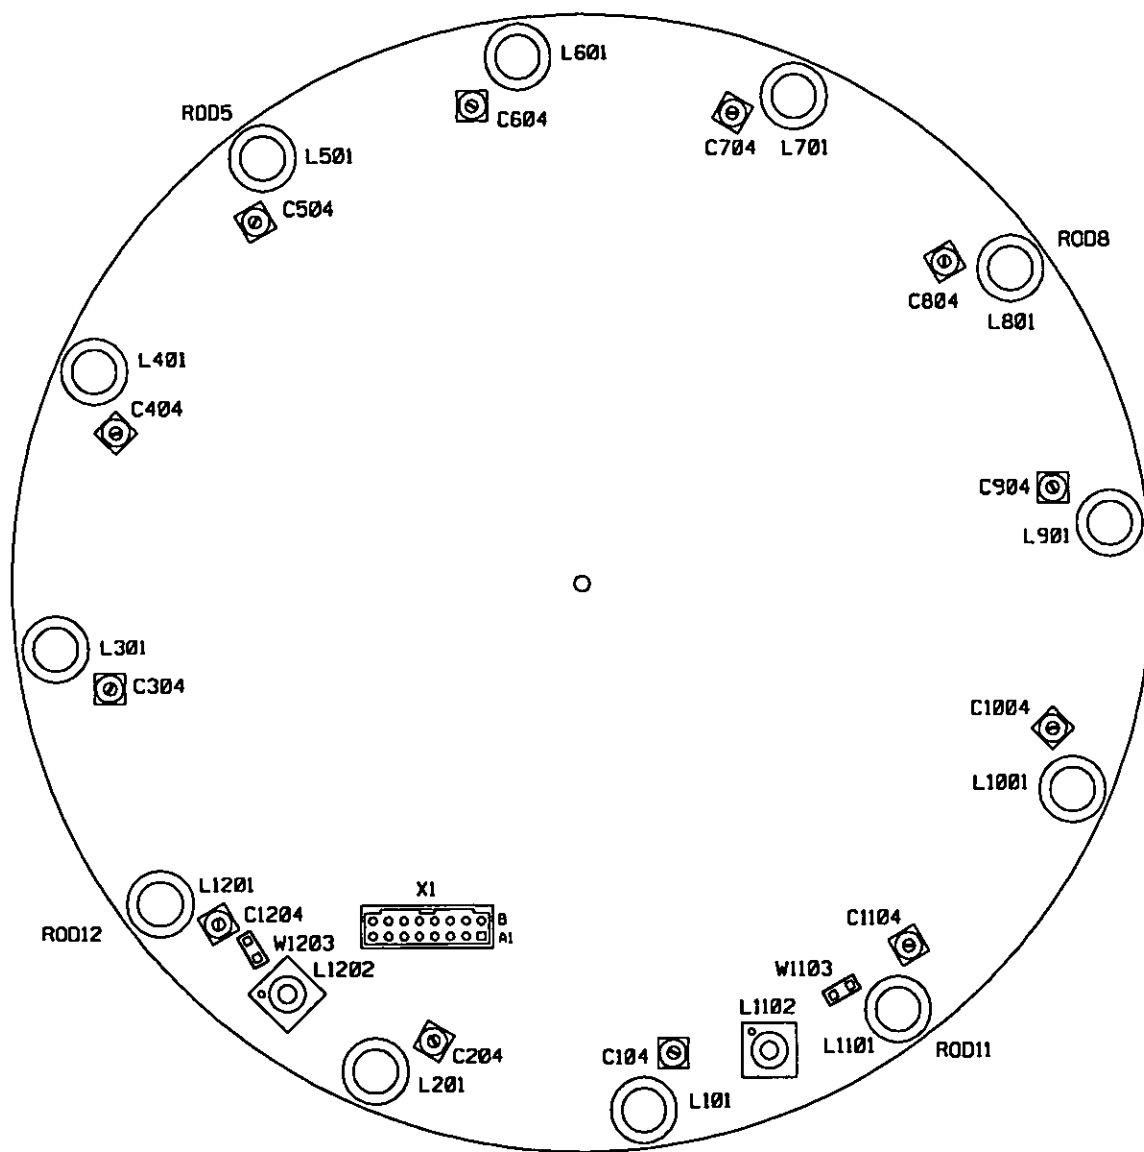


QUAD MIRROR - R51

Intera 0.5 T	Intera 1.0 T		Intera 1.5 T		
	Omni	Power	Omni	Power	Master


TRIMMER LOCATION QUADRATURE HEADCOIL SRA

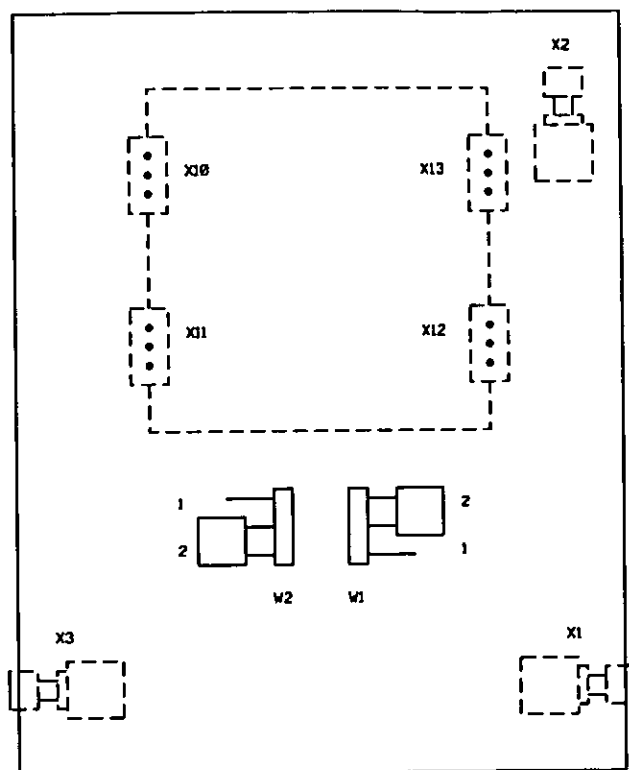

QUAD PREAMP - 0.5T
(4522 117 1145)

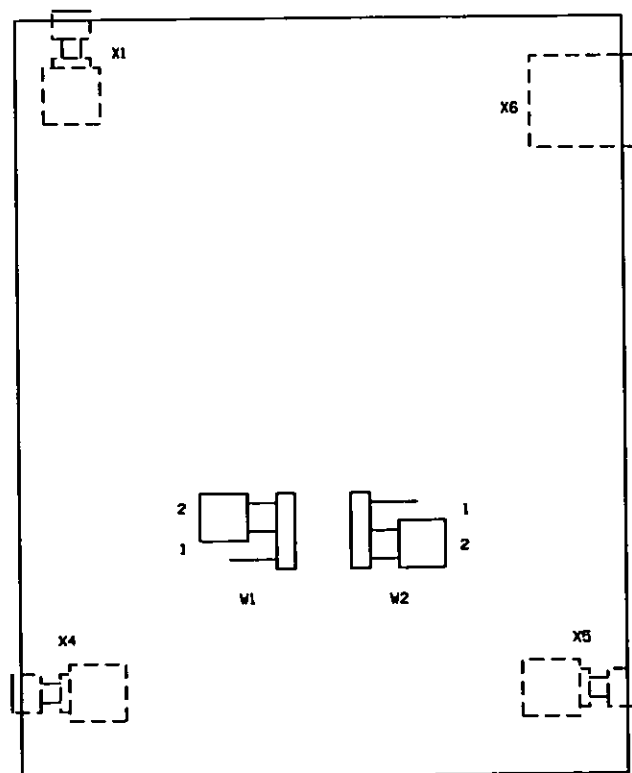


QHC PREAMP
(4522 117 7740, 1.5T
4522 117 4820, 1.8T)

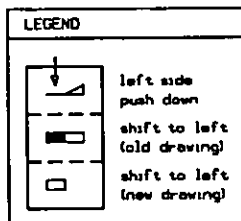


Intera 0.5 T			Intera 1.0 T			Intera 1.5 T		
Standard	Onns	Power	Onns	Power	Master			

JUMPER SETTING
QUADRATURE HEADCOIL SRA

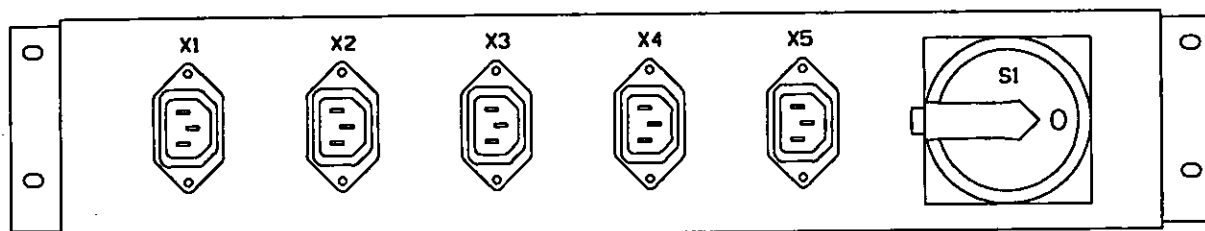

FRONT VIEW

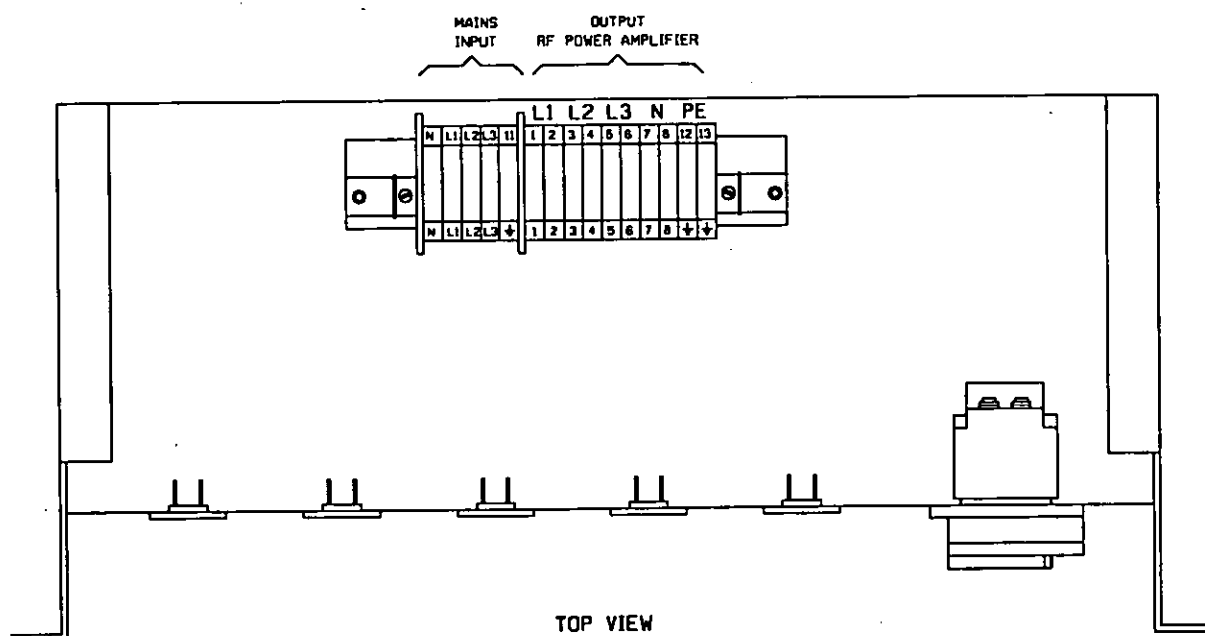

TOP VIEW

Intero 0.5 T		Intero 1.0 T		Intero 1.5 T	
Standard	Omni	Power	Omni	Power	Master

CONNECTOR LOCATION MAINS INLET UNIT FI