

INTRODUCTION



SYSTEM LEVEL



MAINS DISTRIBUTION



MAGNET



PATIENT SUPPORT



GRADIENT AMPLIFIER



DATA ACQUISITION SYSTEM



PHYSIOLOGY



OPERATOR CONSOLE



COMPUTER





OPTIONS



CONTENTS:


Standard/Omni Block Diagram Gradient System.....	Z1-6.1.1
Standard/Omni Power Supply Gradient Amplifier D.....	Z1-6.1.2
Standard/Omni Block Diagram Gradient Interface DI.....	Z1-6.1.3
Standard/Omni Block Diagram "234" Amplifier X-Y-Z.....	Z1-6.1.4
Standard/Omni Block Diagram Power Supply 15kW DP1.....	Z1-6.1.5
Standard/Omni Internal Low Power Supply "234" Amplifier DM.....	Z1-6.1.6
 Standard/Omni Wiring Diagram "234" Amplifier DM.....	 Z2-6.1.1
 Standard/Omni Lay Out Gradient Amplifier Cabinet D.....	 Z3-6.1.1
Standard/Omni Connector Location "234" Amplifier X-Y-Z DM.....	Z3-6.1.2
Standard/Omni Connector Location Power Supply 15kW DP1.....	Z3-6.1.3
Standard/Omni Top View "234" Amplifier X-Y-Z DM.....	Z3-6.1.4
Standard/Omni Top View Power Supply 15kW DP1.....	Z3-6.1.5
Standard/Omni Jumper Setting Gradient Interface DI.....	Z3-6.1.6
Standard/Omni Jumper Setting "234" Amplifier DM.....	Z3-6.1.7
 Power Block Diagram Gradient System.....	 Z1-6.2.1
Power Power Supply Gradient Amplifier D.....	Z1-6.2.2
Power Block Diagram Gradient Interface DI.....	Z1-6.2.3
Power/Master Simplified Diagram(1) 274 Controller + Backplane.....	Z1-6.2.4
Power/Master Simplified Diagram(2) 274 Controller + Backplane.....	Z1-6.2.5
Power/Master Simplified Diagram(3) 274 Controller + Backplane.....	Z1-6.2.6
Power/Master Simplified Diagram(4) 274 Controller + Backplane.....	Z1-6.2.7
Power/Master Simplified Diagram Power Module DP1-2.....	Z1-6.2.8
Power/Master Blockdiagram Power Supply 20 kW/420V DP1-2.....	Z1-6.2.9
 Power/Master Lay Out Gradient Amplifier Cabinet D.....	 Z3-6.2.1
Power/Master Connector Location and Jumper setting 274 Amplifier DM.....	Z3-6.2.2
Power/Master Connector Location Power Supply 20kW/420V DP1-2.....	Z3-6.2.3
Power/Master Top View Power Supply 20kW/420V DP1-2.....	Z3-6.2.4
Power/Master Jumper Setting Gradient Interface DI.....	Z3-6.2.5
Power/Master Jumper Setting 274 Controller.....	Z3-6.2.6
Power/Master Connector Location Power Supply DS.....	Z3-6.2.7
Power/Master Top View Power Supply DS.....	Z3-6.2.8
Power/Master Connector Location Heat exchanger AH.....	Z3-6.2.9
 Master Block Diagram Gradient System.....	 Z1-6.3.1
Master Block Diagram Gradient Interface DI.....	Z1-6.3.2
Master Simplified Diagram Dual Mode Interface Board DIR.....	Z1-6.3.3
 Master Jumper Setting and Connector Location Dual Mode Interface Board DIR.....	 Z3-6.3.1

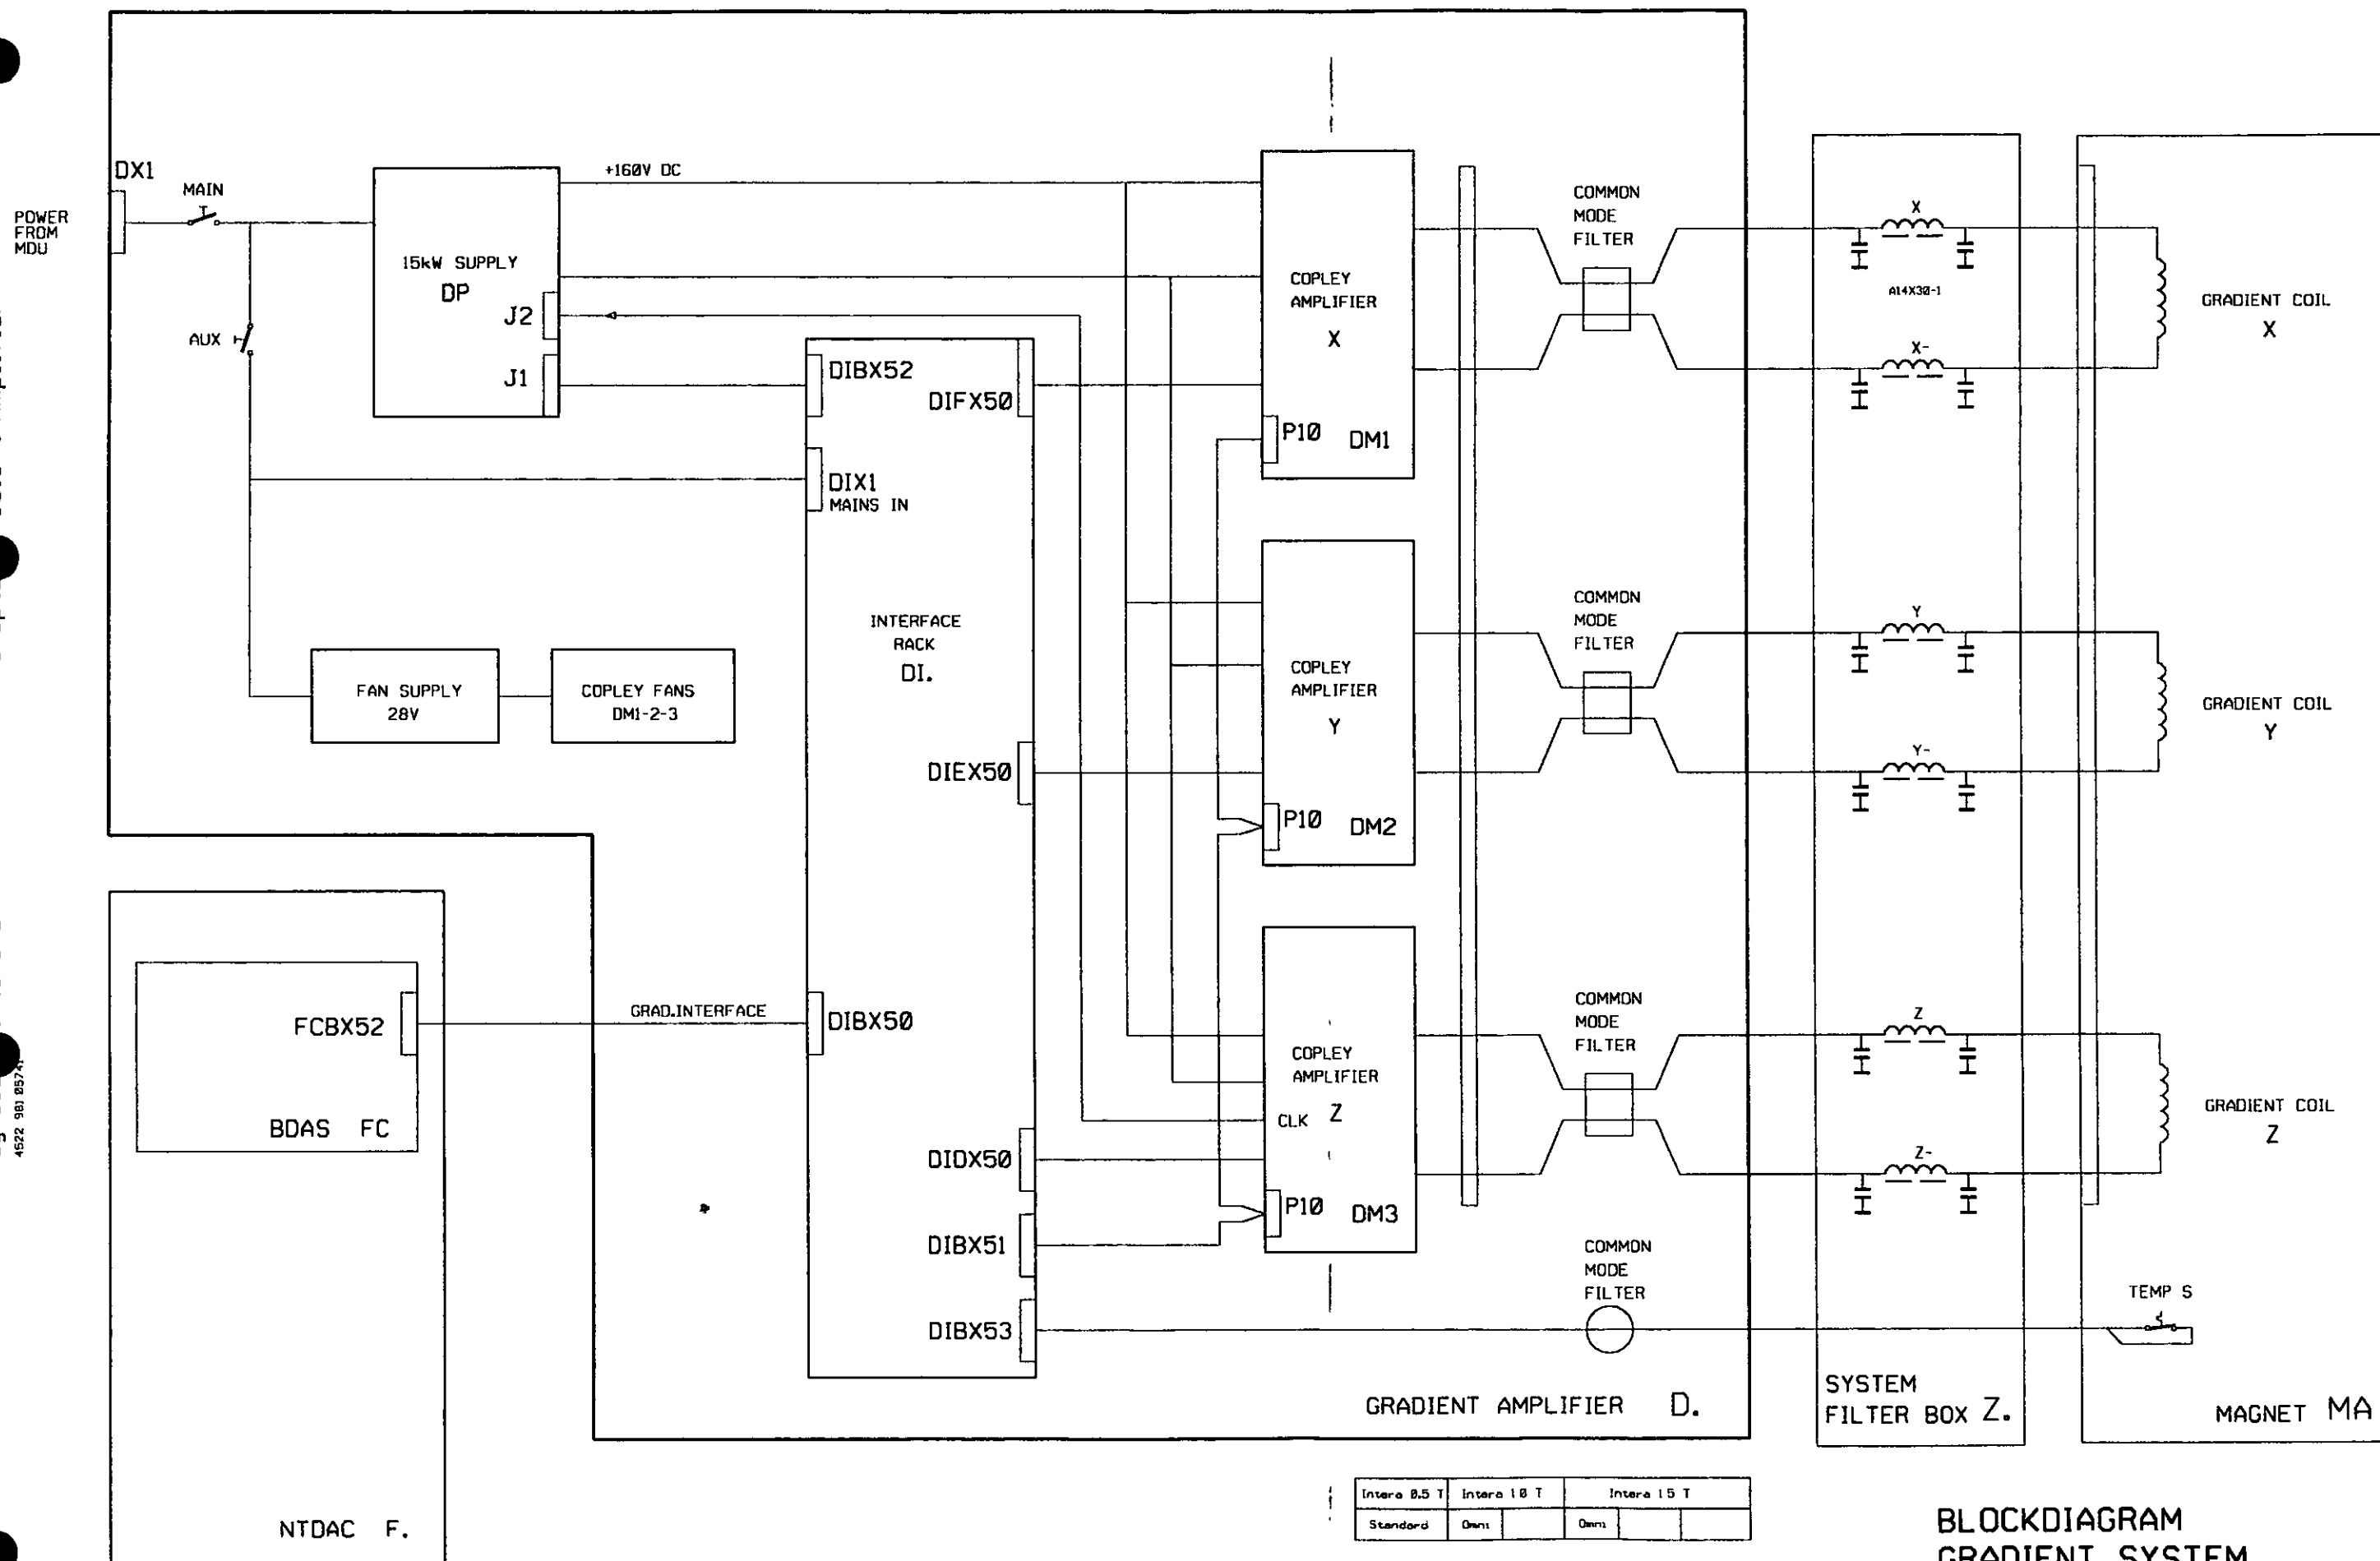

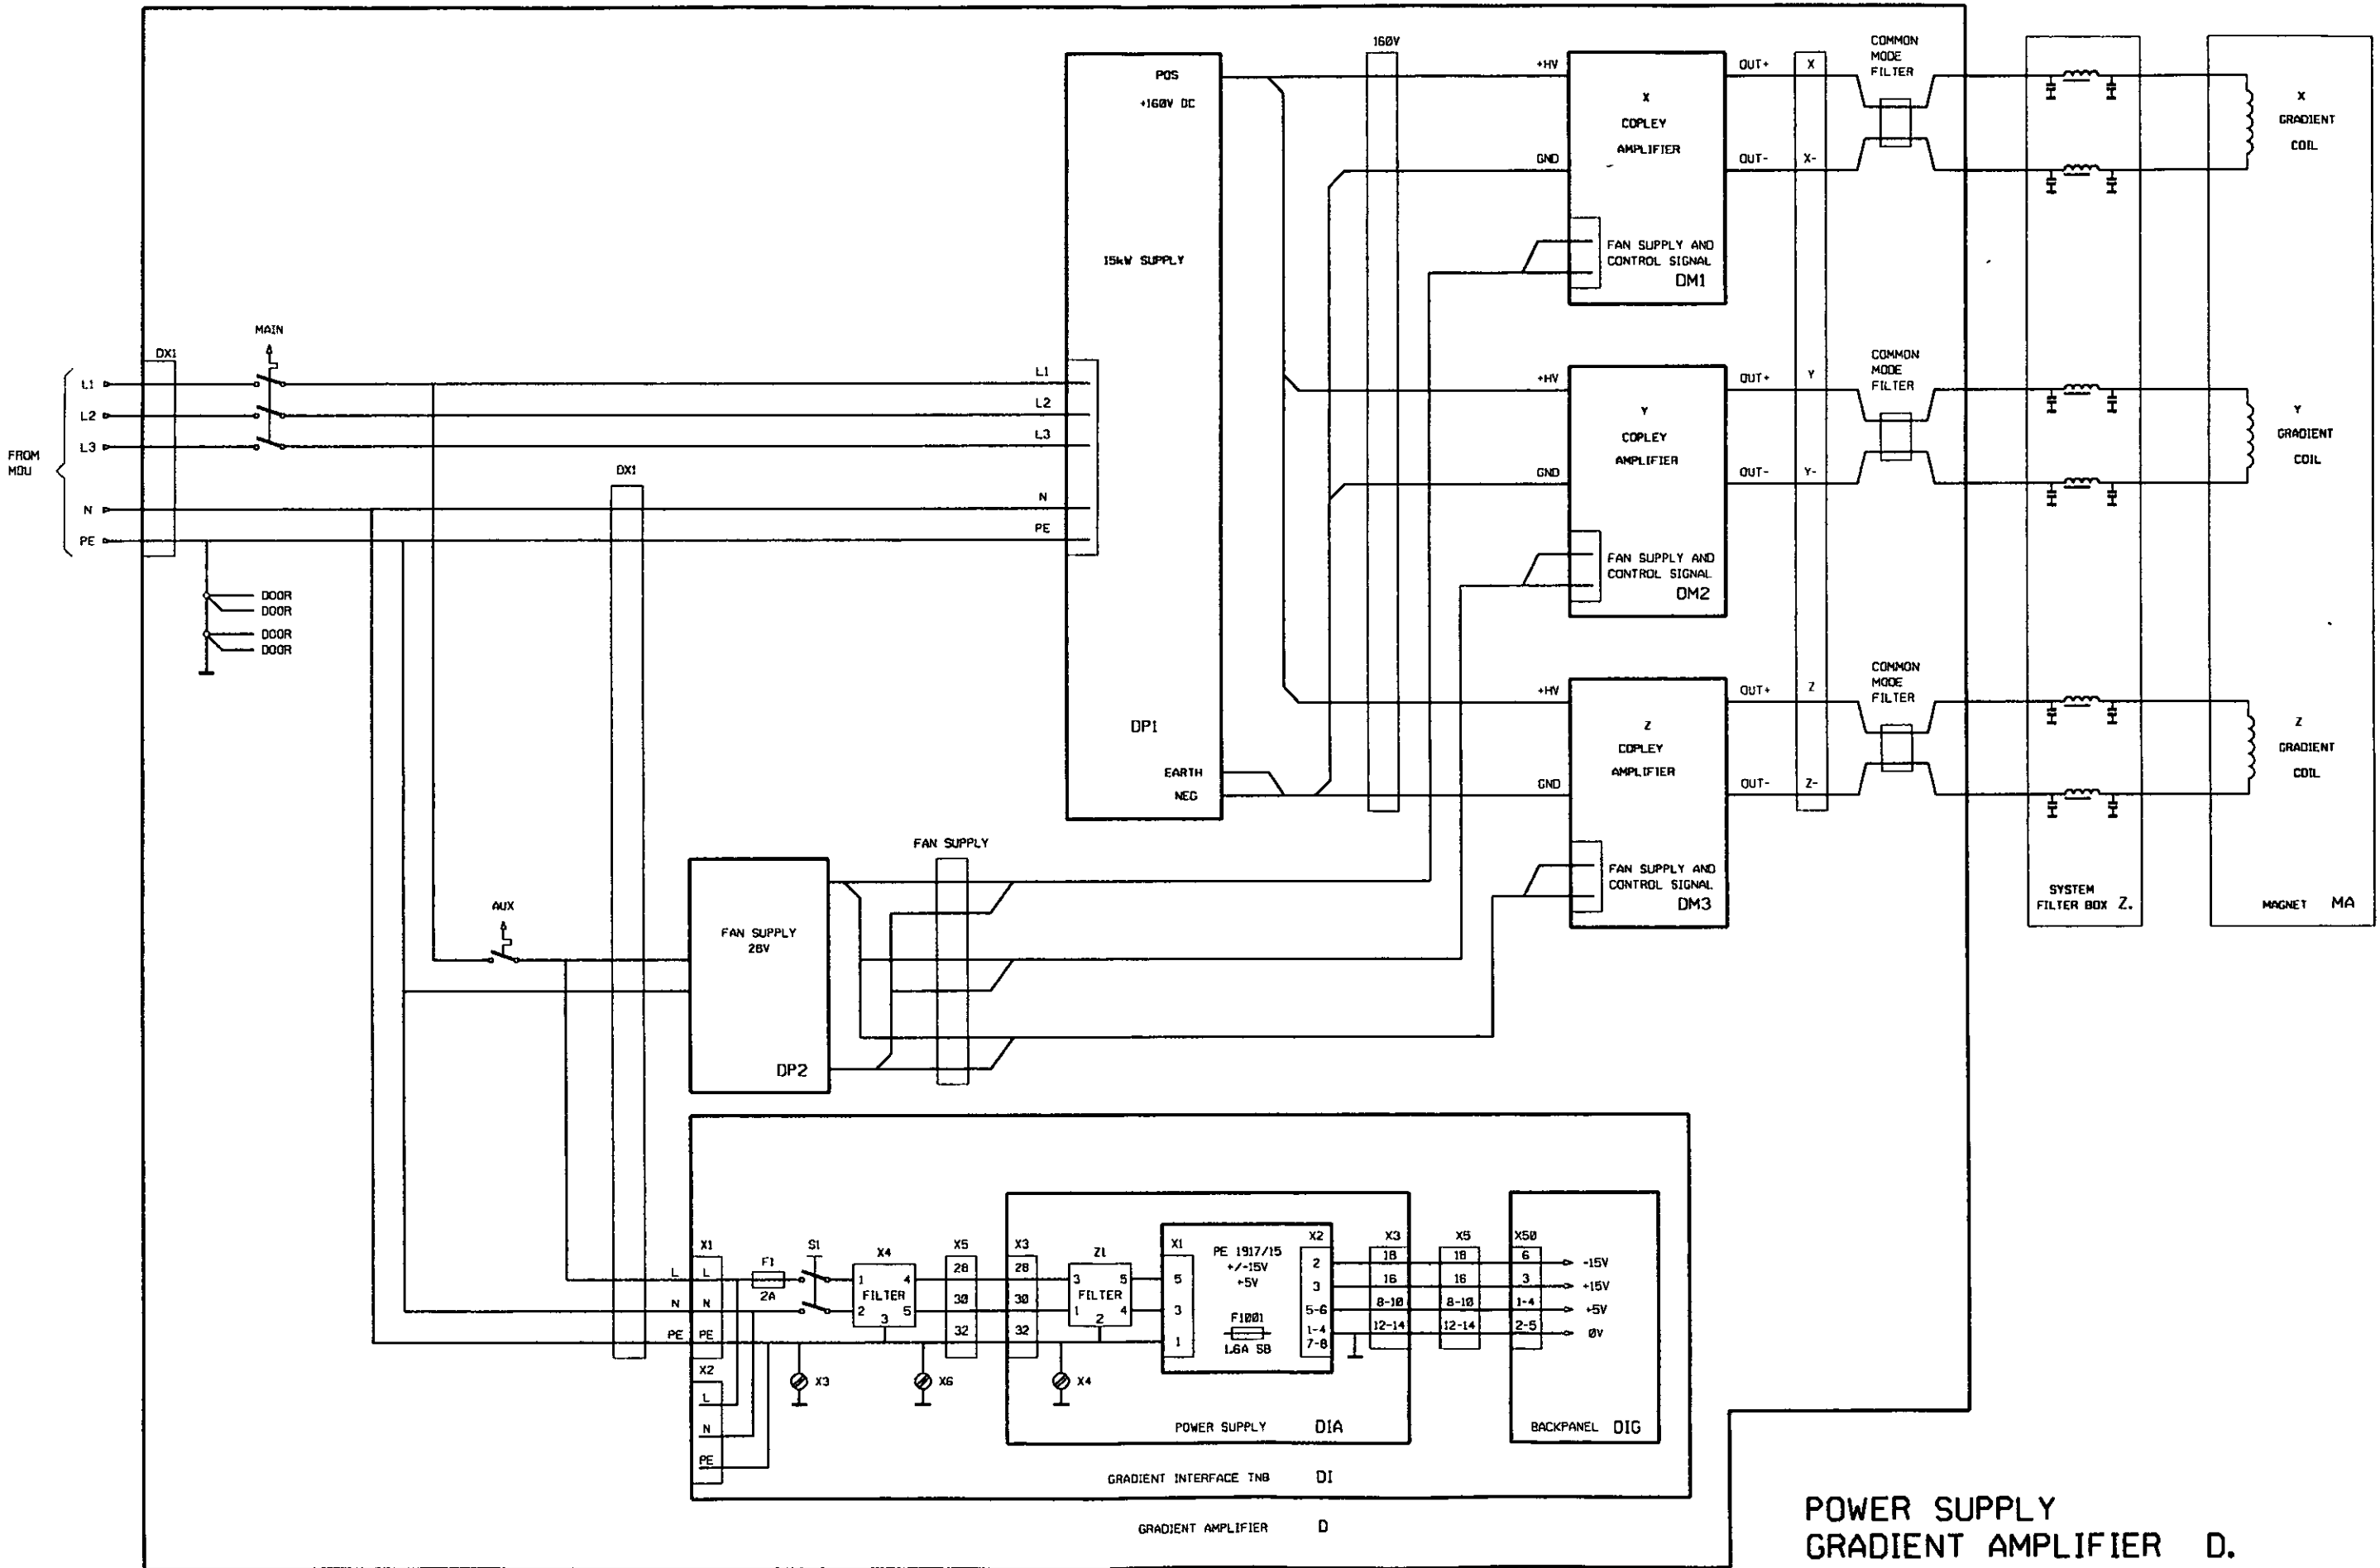


POWER SUPPLY
GRADIENT AMPLIFIER D.

Inter 0.5 T	Inter 1.0 T	Inter 1.5 T
Standard	Omni	Omni

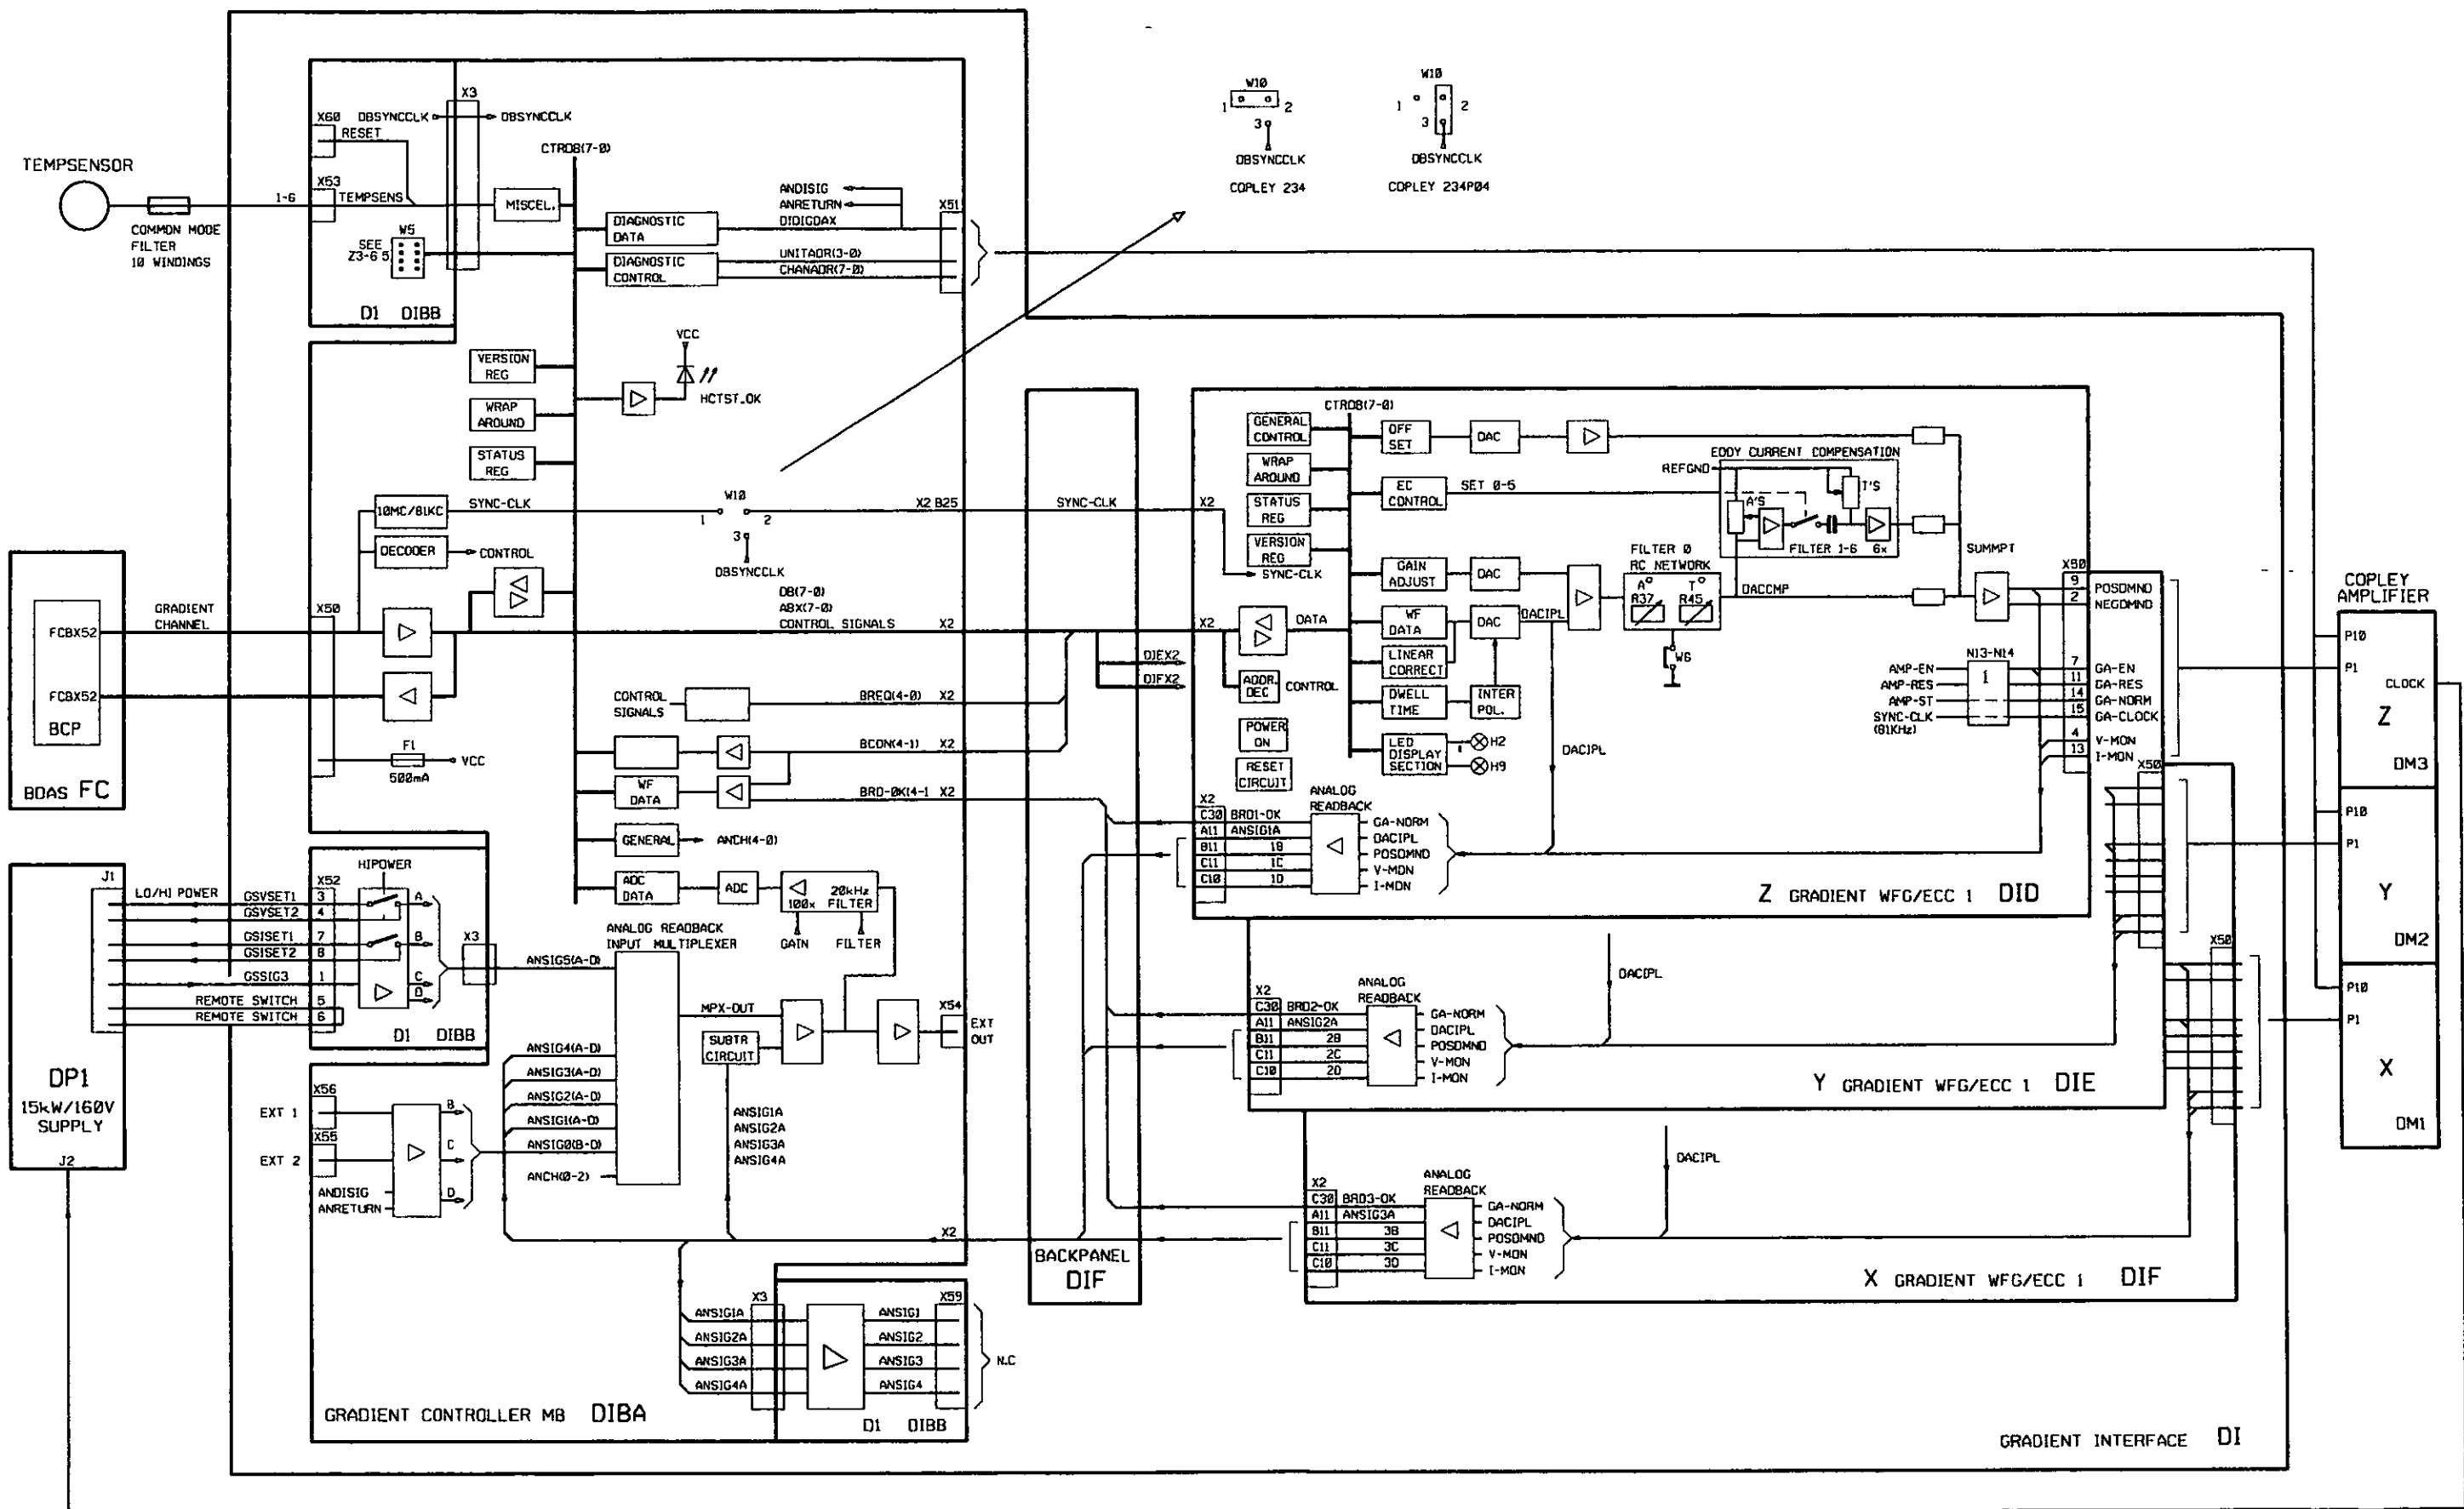


Inter 85 T	Inter 10 T	Inter 15 T
Standard	Omni	Omni

BLOCKDIAGRAM GRADIENT INTERFACE DI.

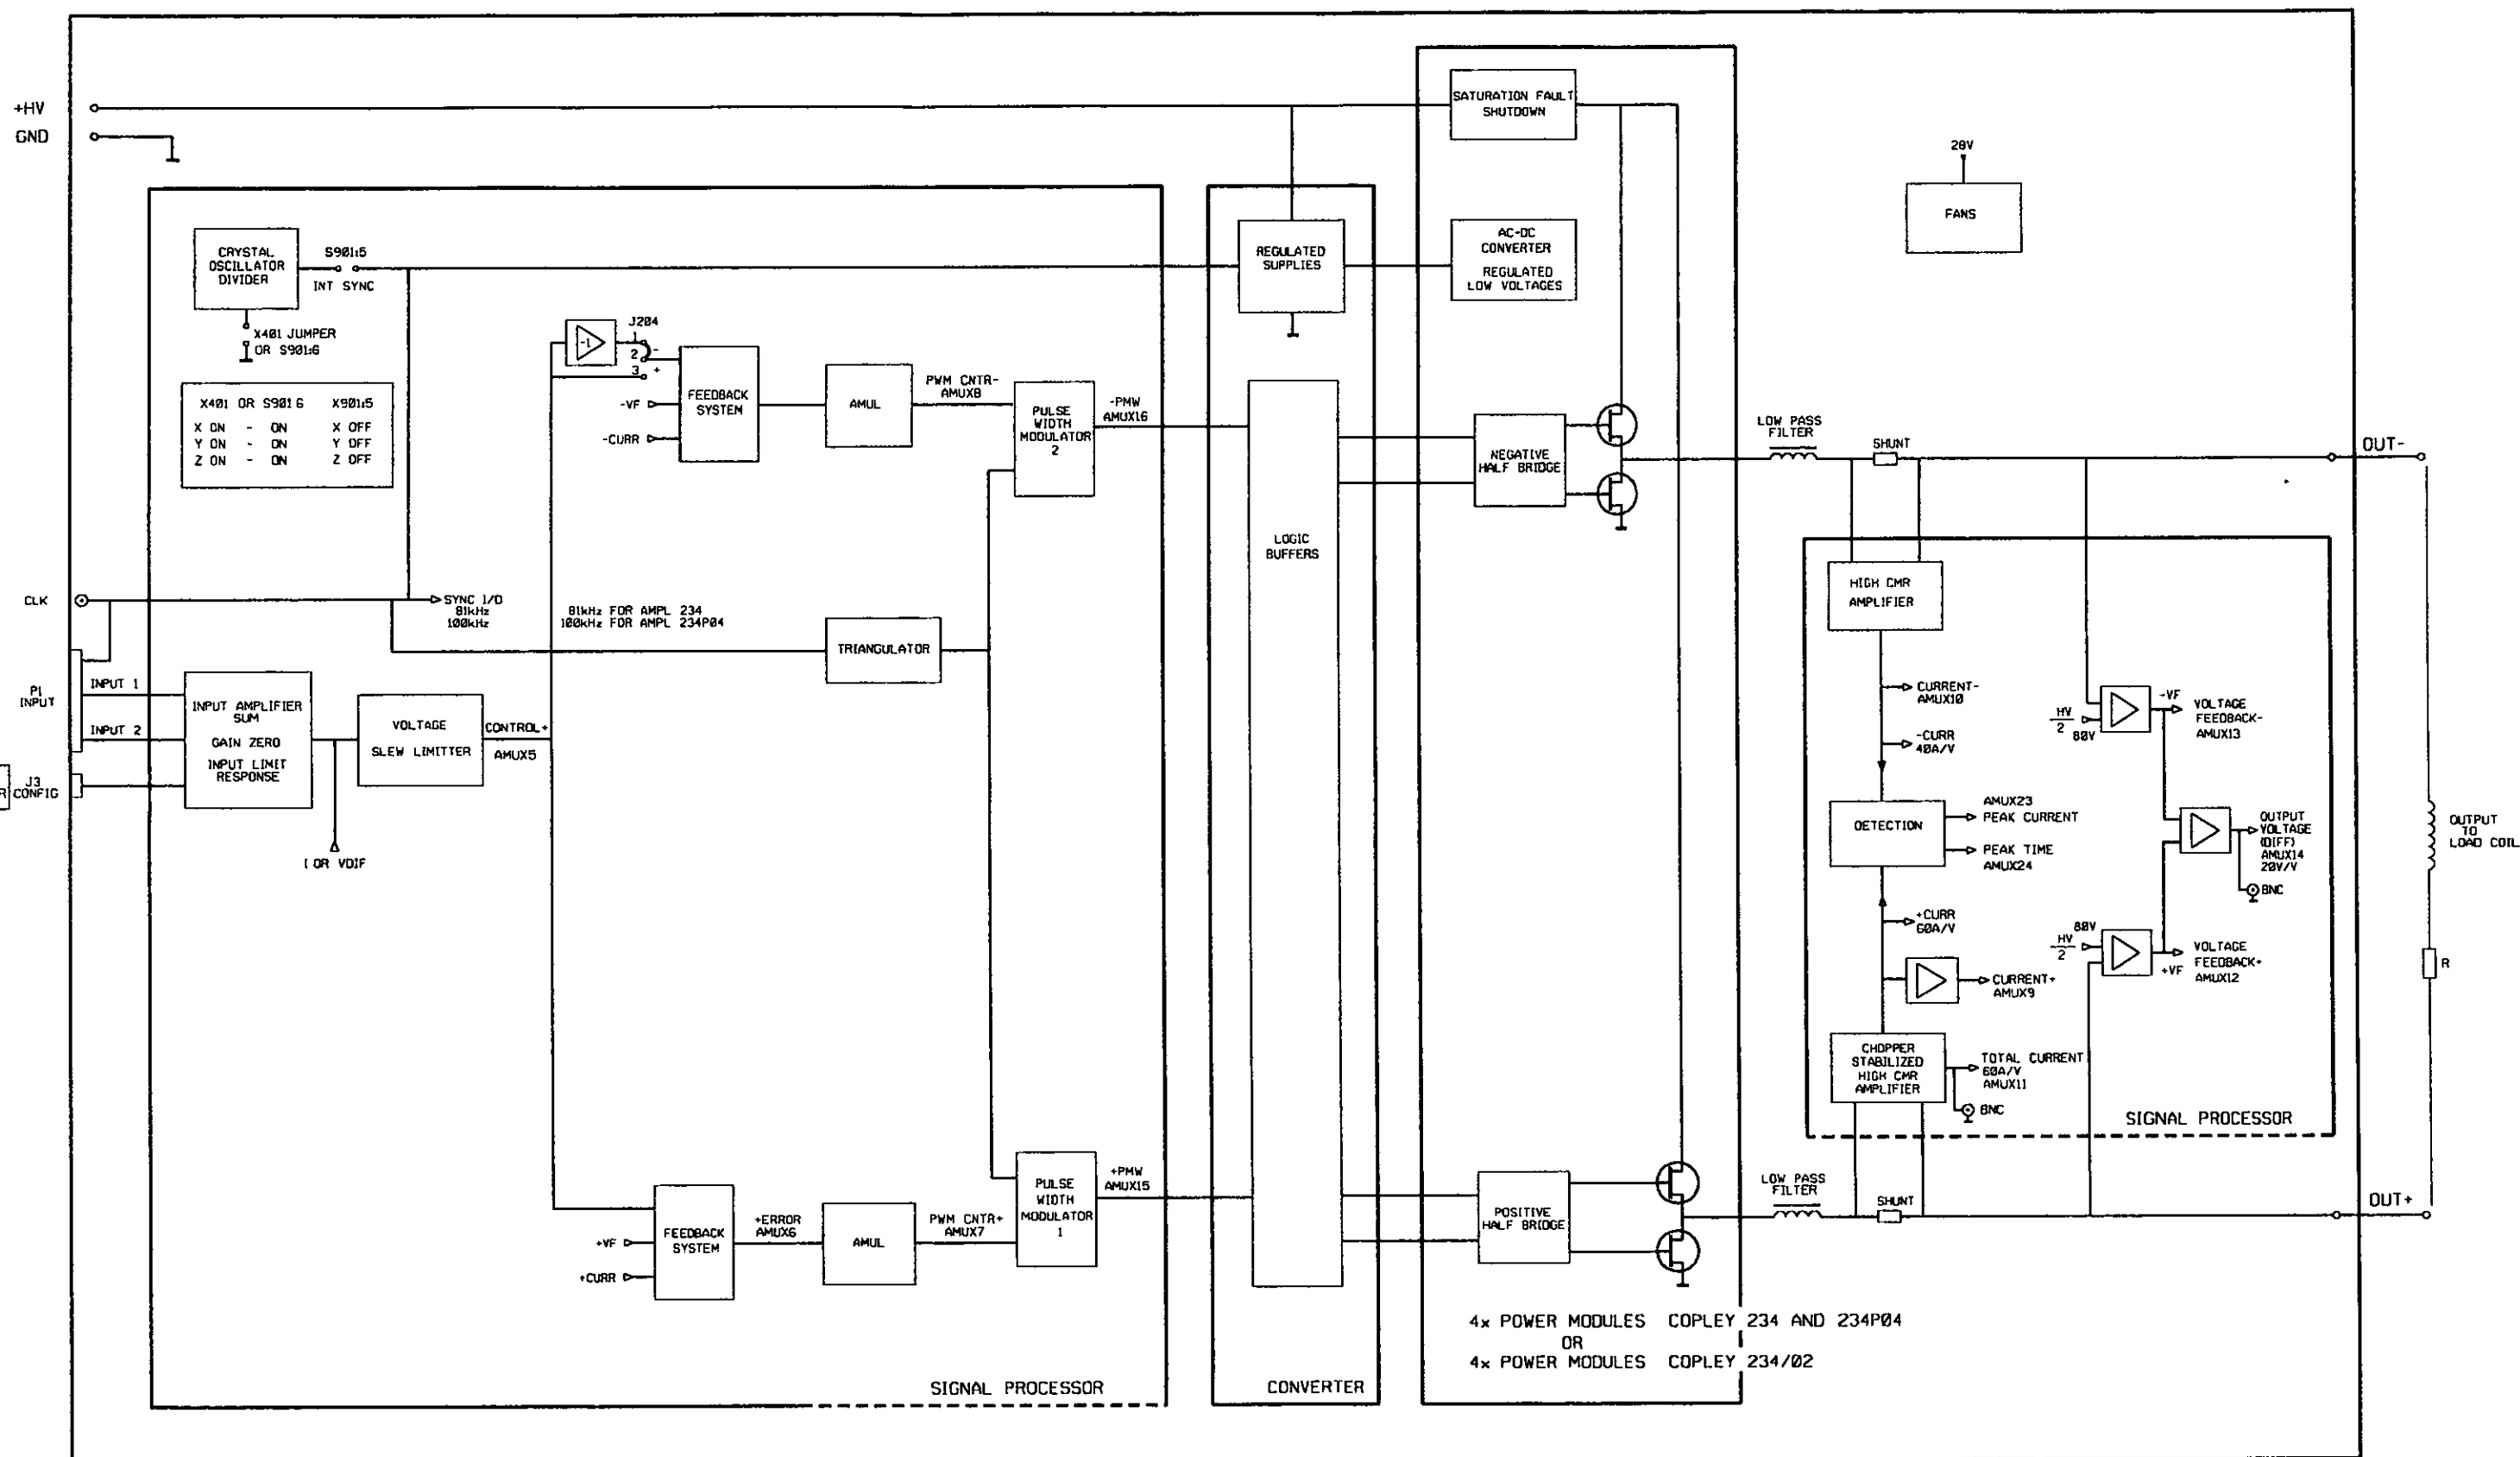


Inter 05 T	Inter 10 T	Inter 15 T
Standard	Omni	Omni

BLOCKDIAGRAM '234' AMPLIFIER X-Y-Z

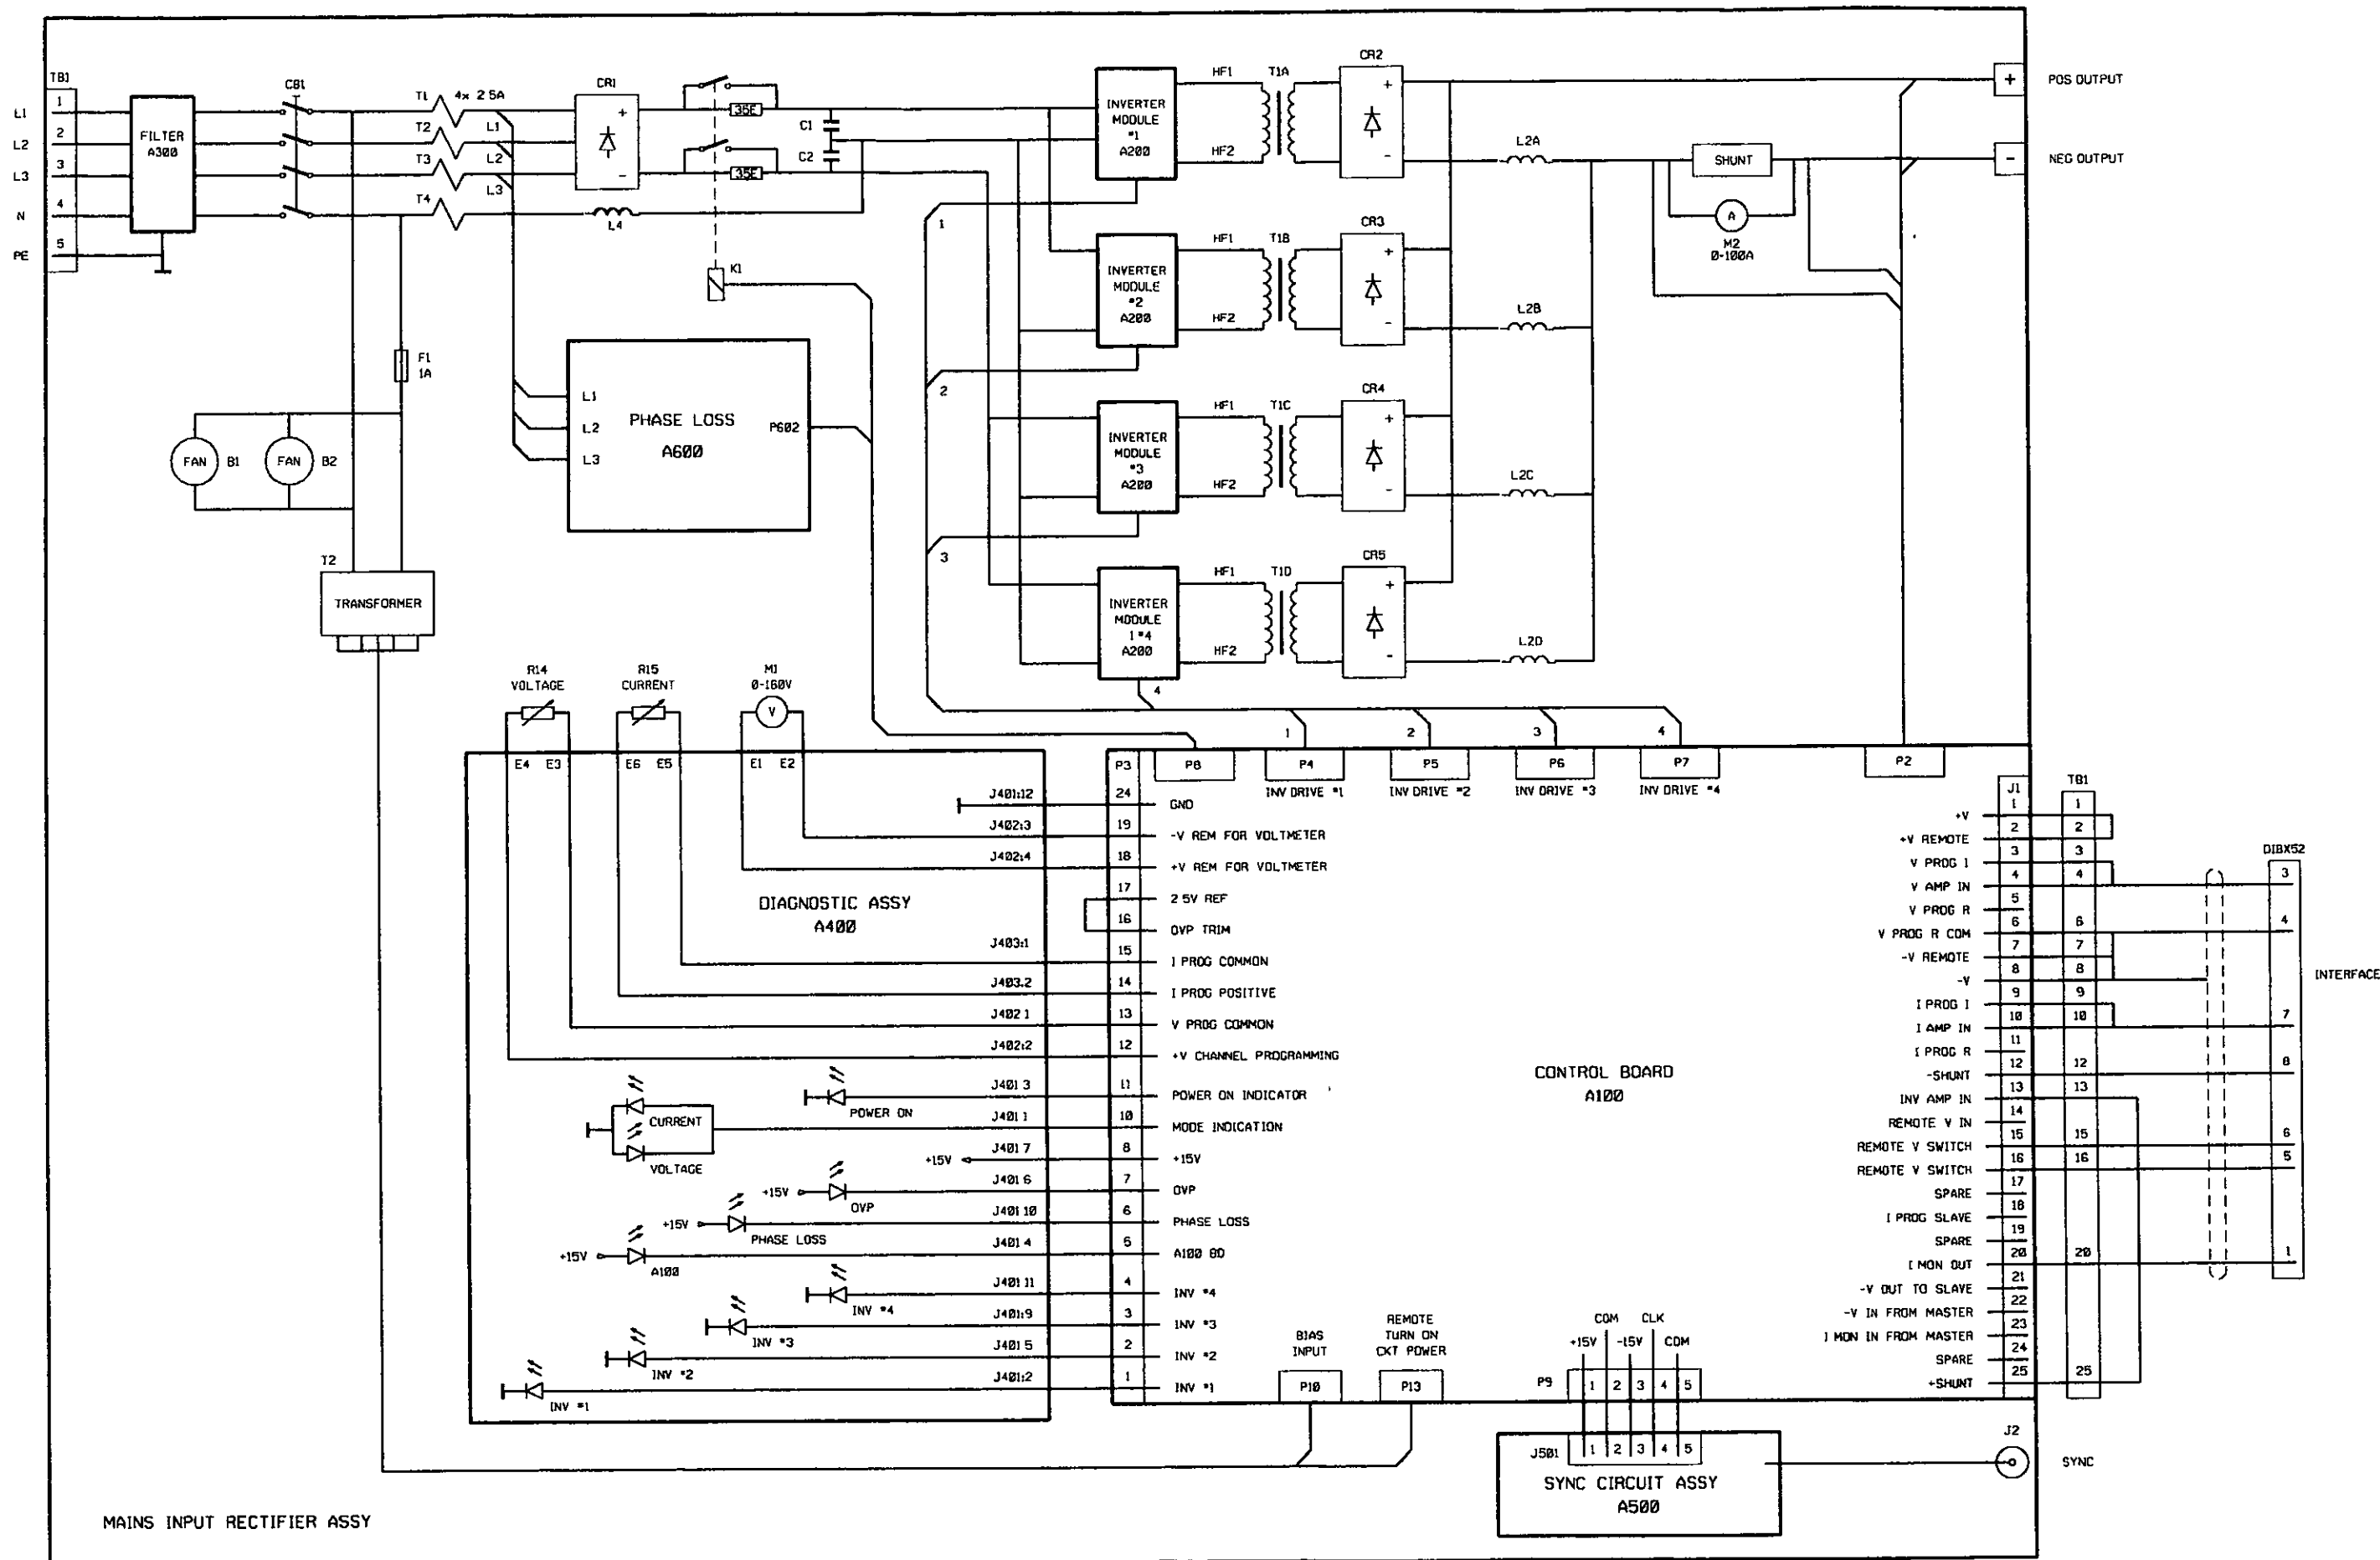



Inter-85 T	Inter-1.0 T	Inter-1.5 T
Standard	Omni	Omni

BLOCKDIAGRAM **POWER SUPPLY 15kW DP1**

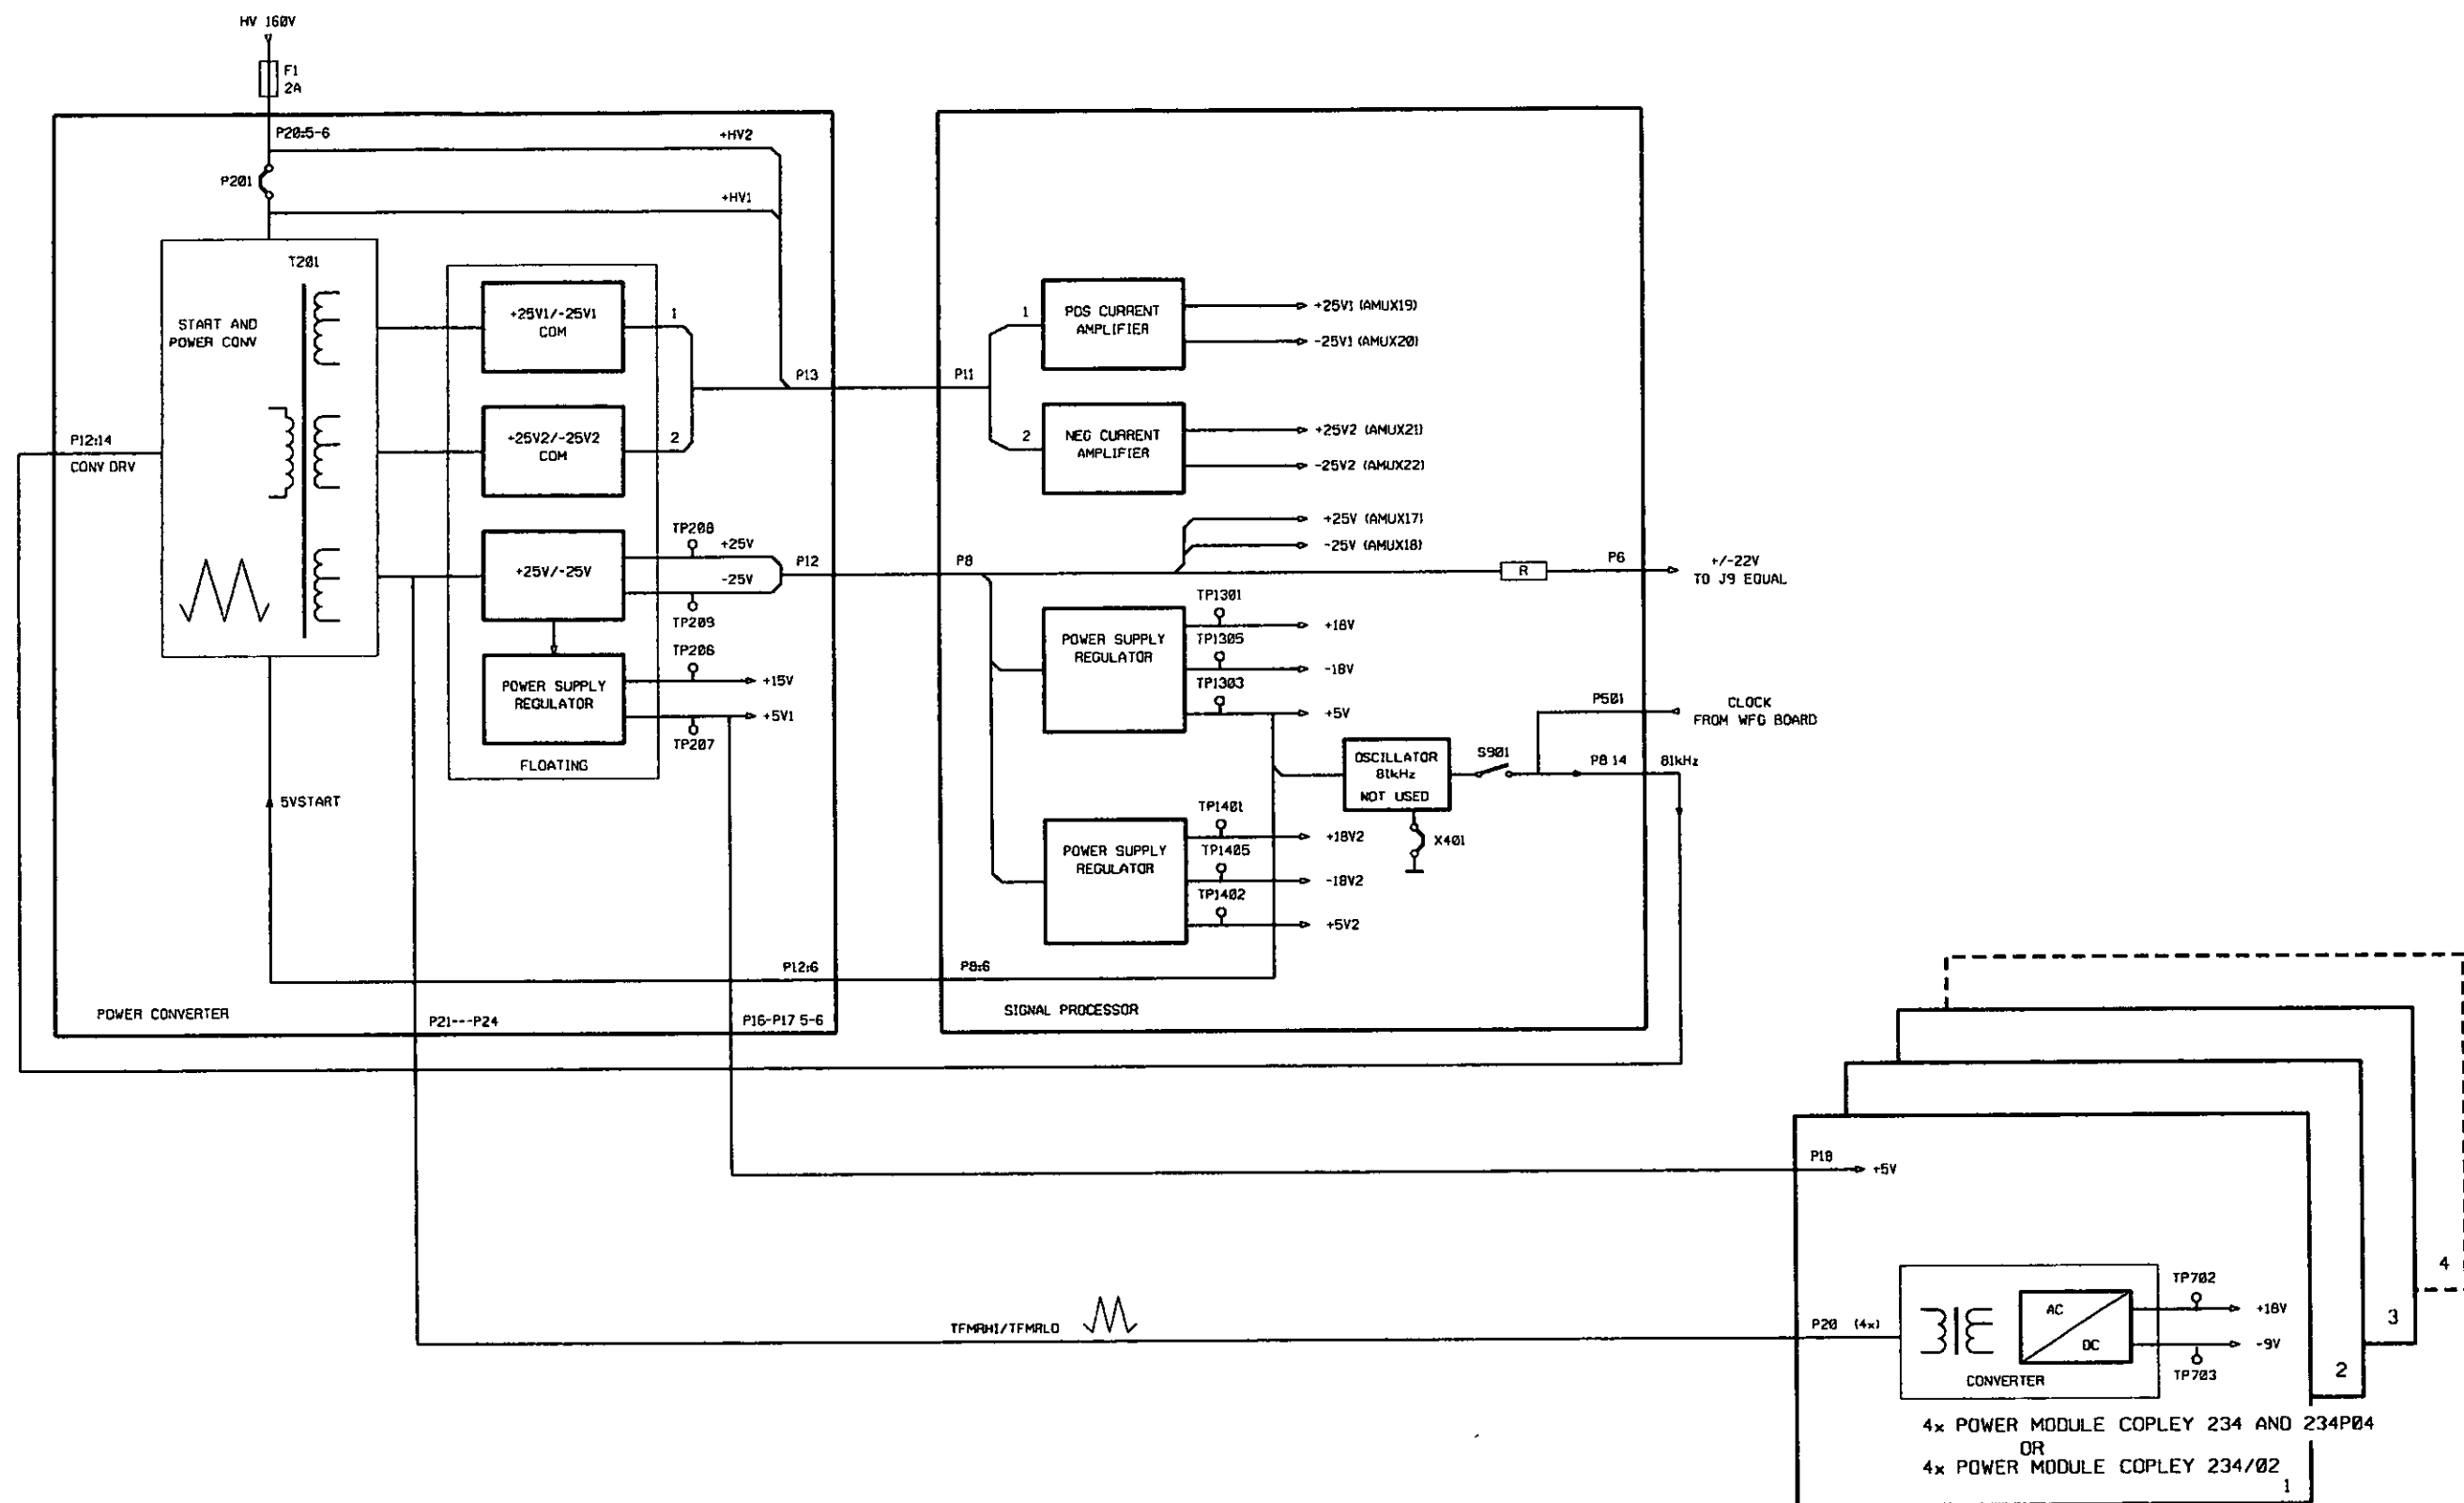


Inter 05 T	Inter 10 T	Inter 15 T
Standard	Omni	Omni

INTERNAL LOW POWER SUPPLY
"234" AMPLIFIER DM.

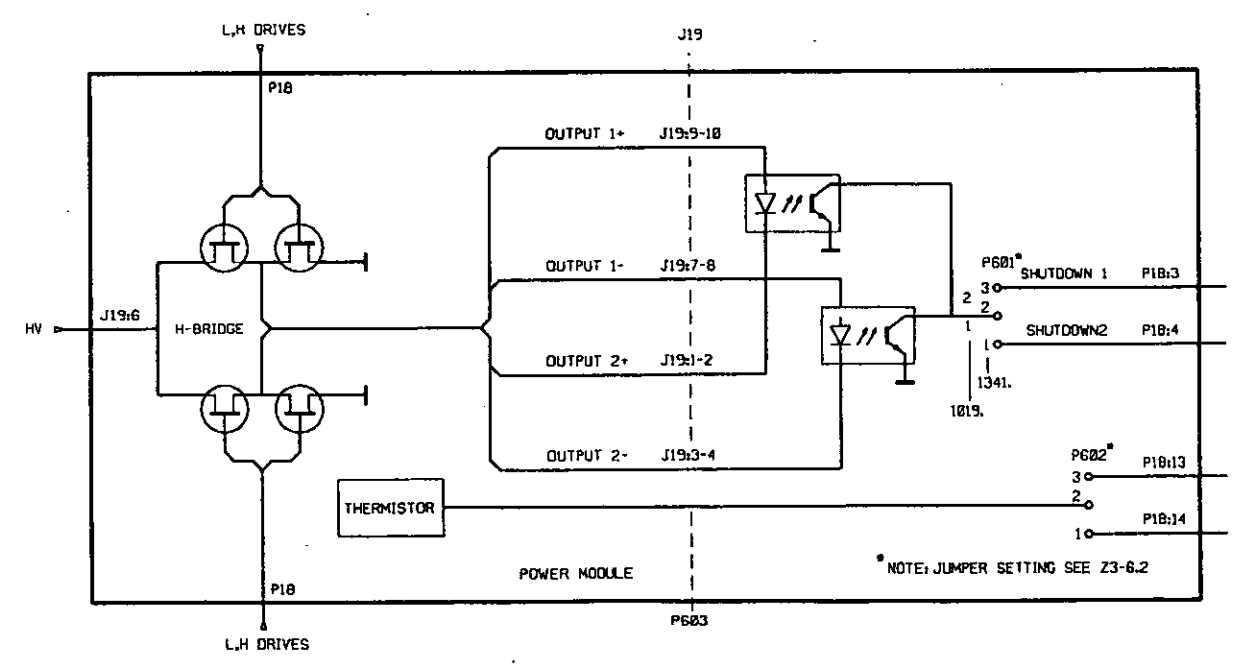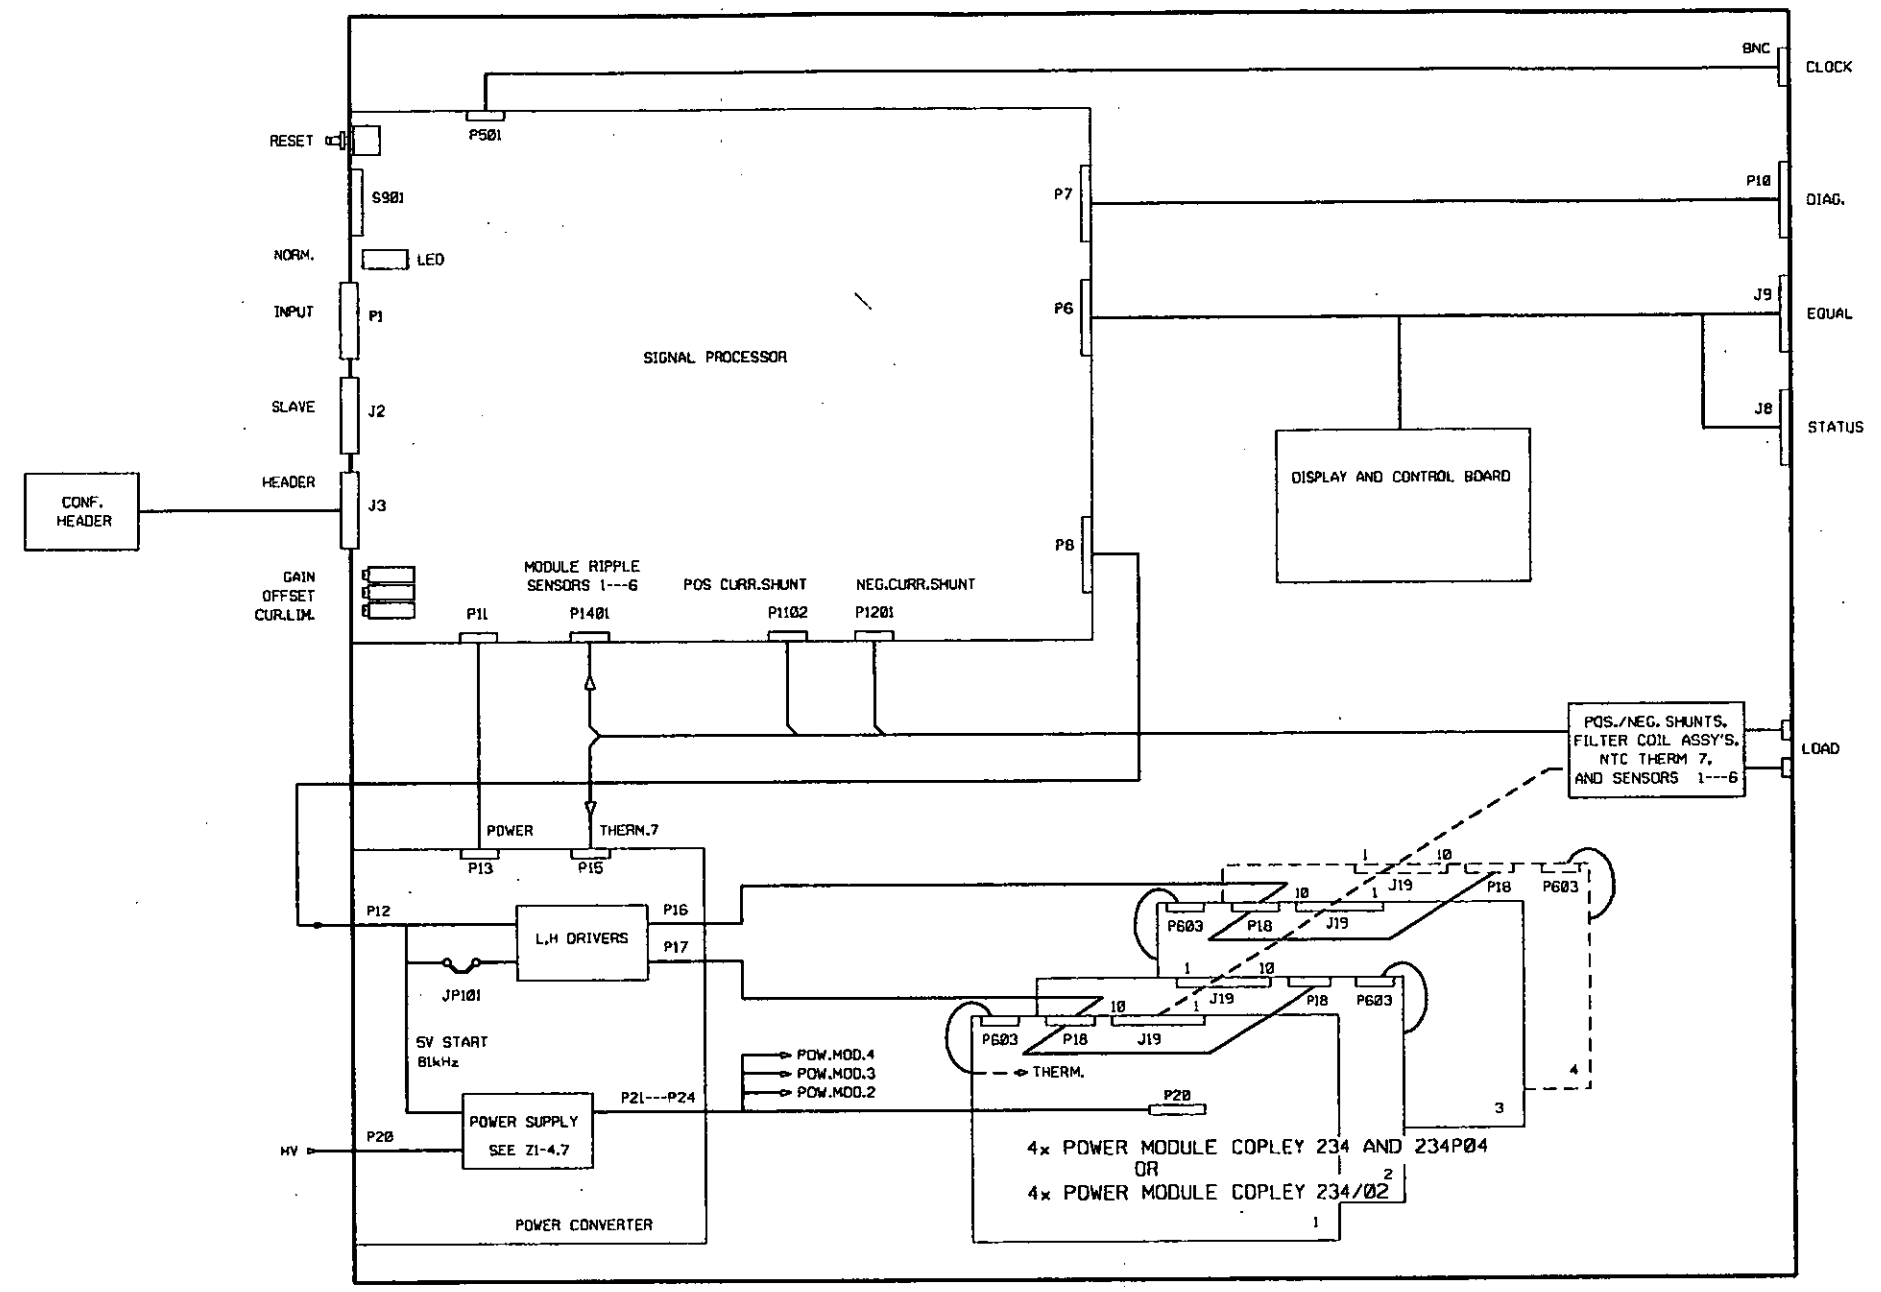


Inter 0.5 T	Inter 1.0 T	Inter 1.5 T
Standard	Omni	Omni

WIRING DIAGRAM
'234' AMPLIFIER DM.

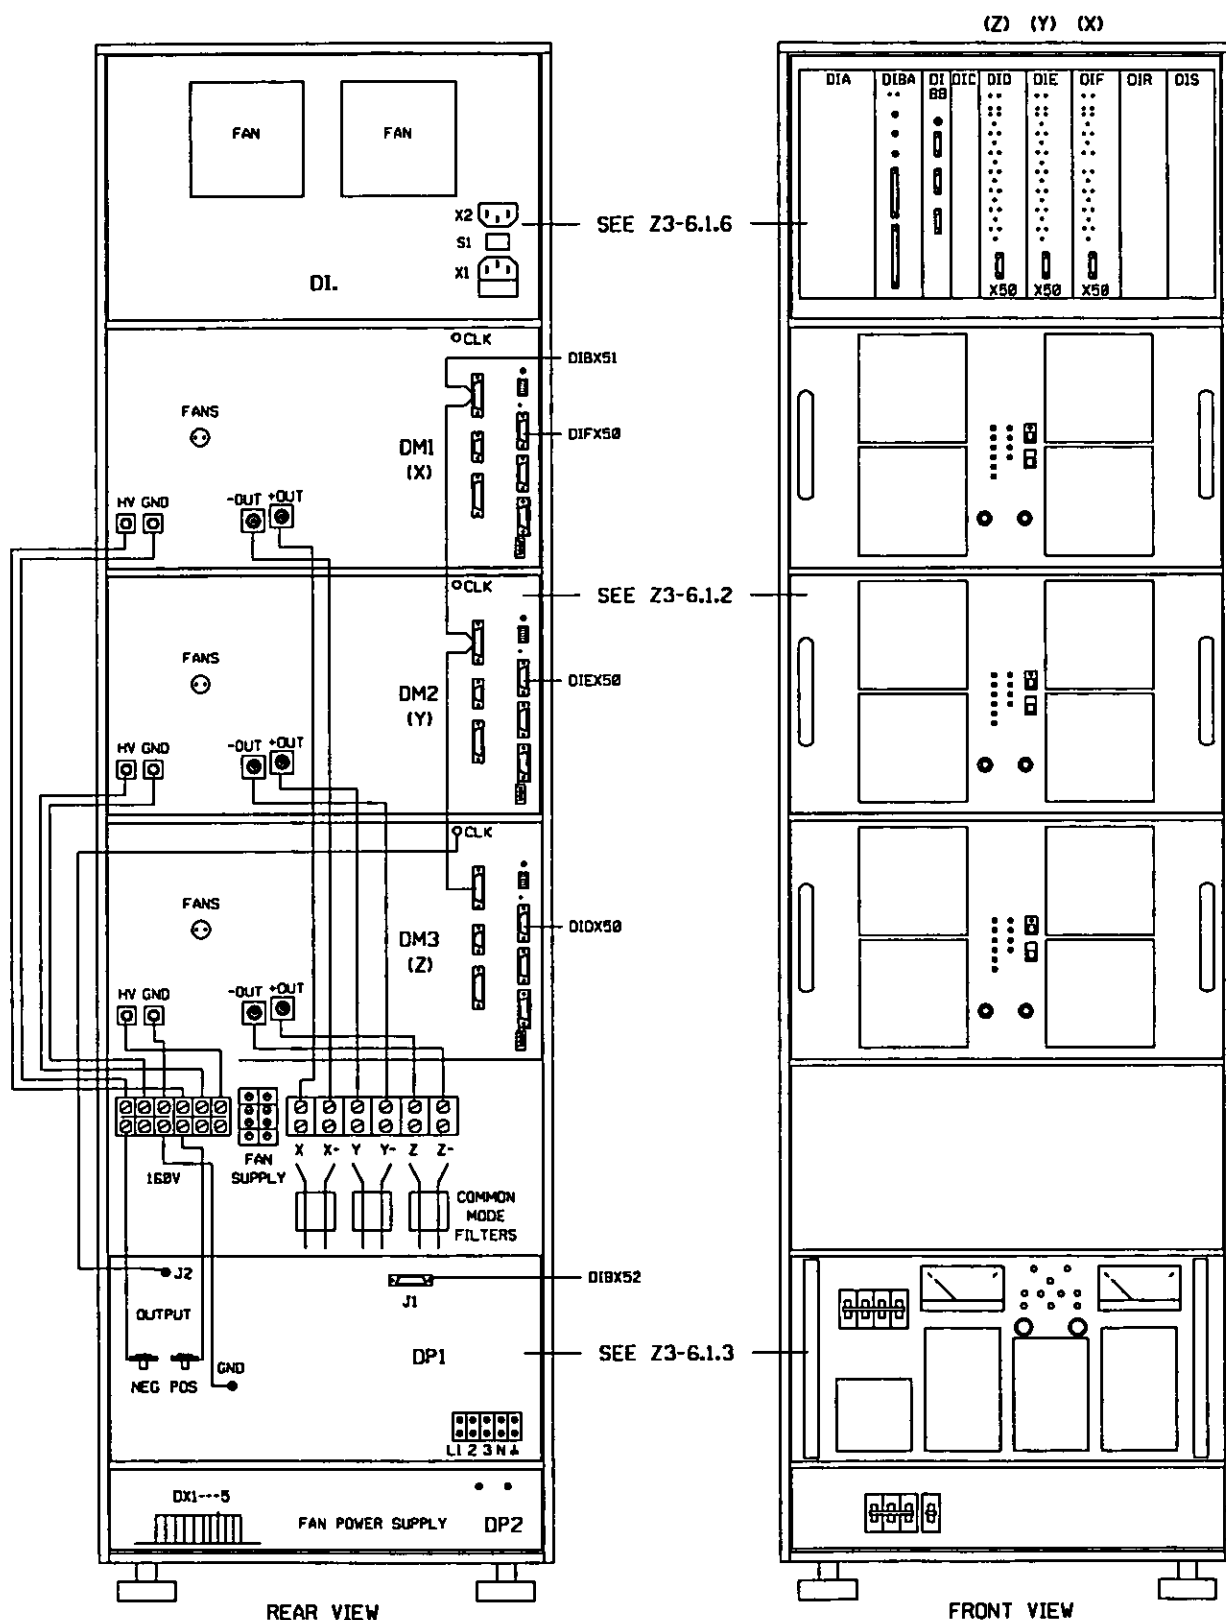


Intera 8.5 T	Intera 18 T	Intera L5 T
Standard	Omni	Omni


LAY OUT GRADIENT AMPLIFIER CABINET D.

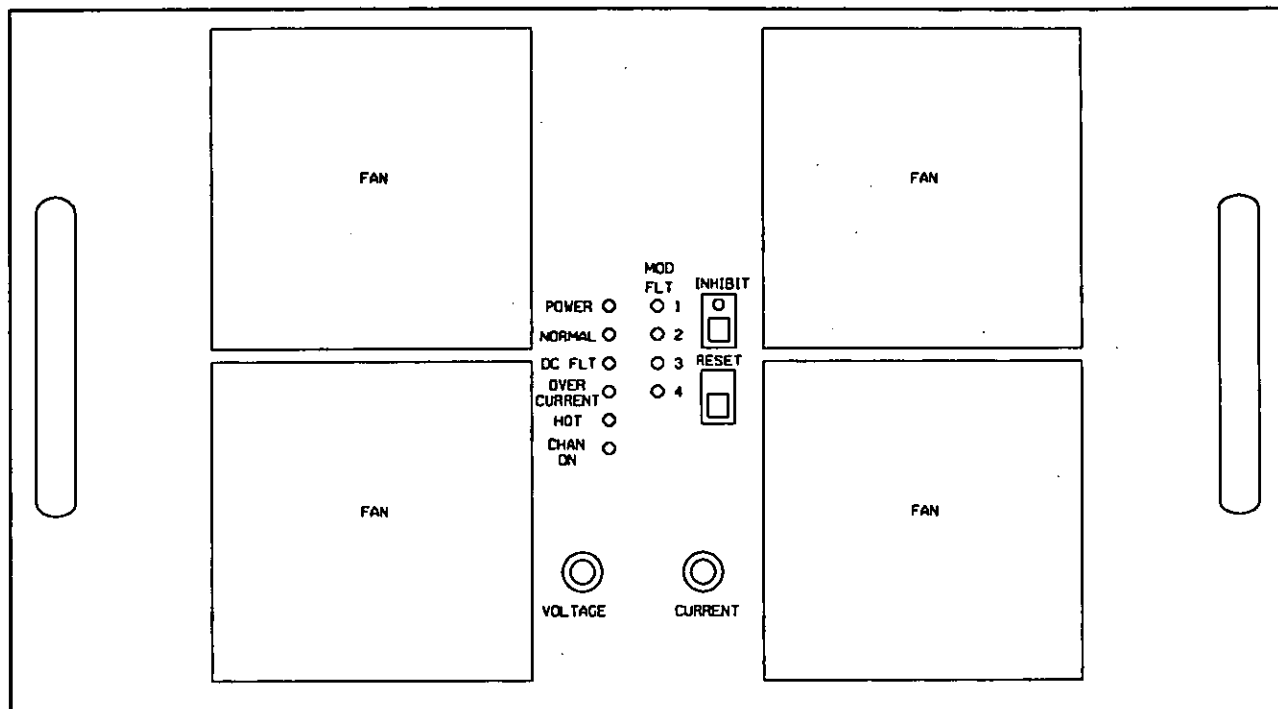

FRONT

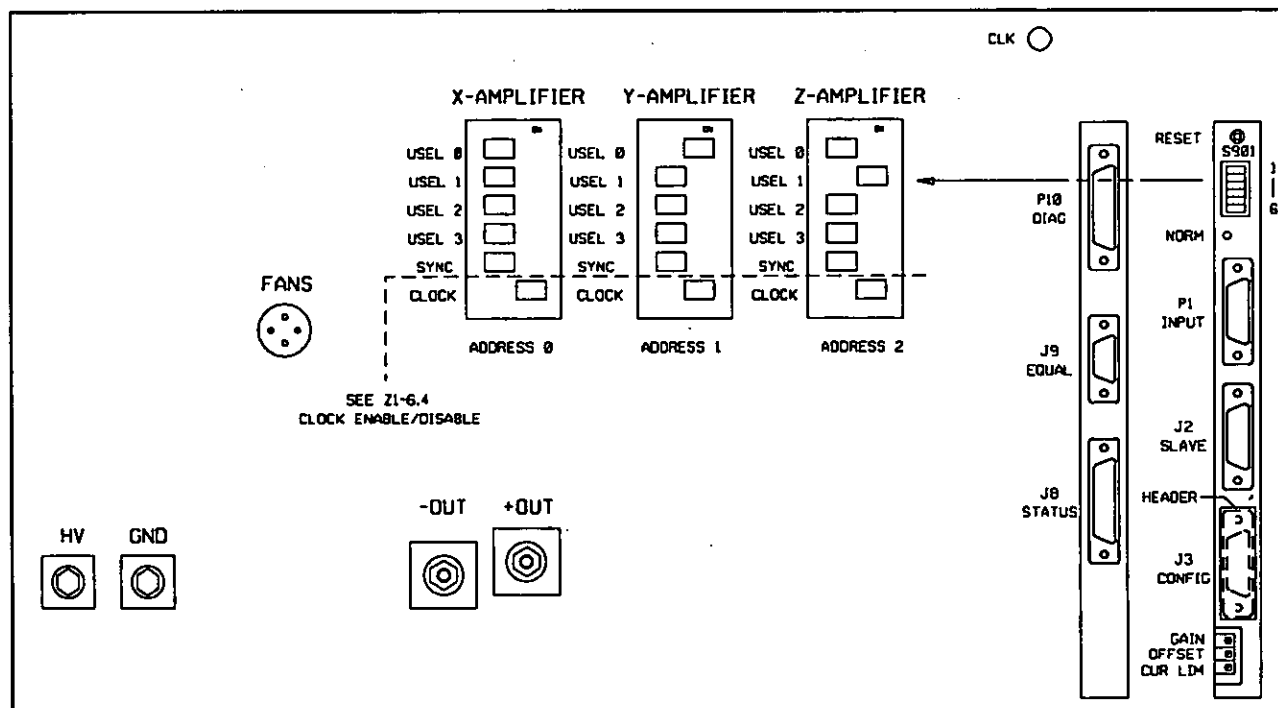


REAR

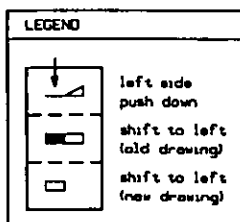


Inter 0.5 T	Inter 1.0 T	Inter 1.5 T
Standard	Dim	Dim

CONNECTOR LOCATION
"234" AMPLIFIER X-Y-Z DM.

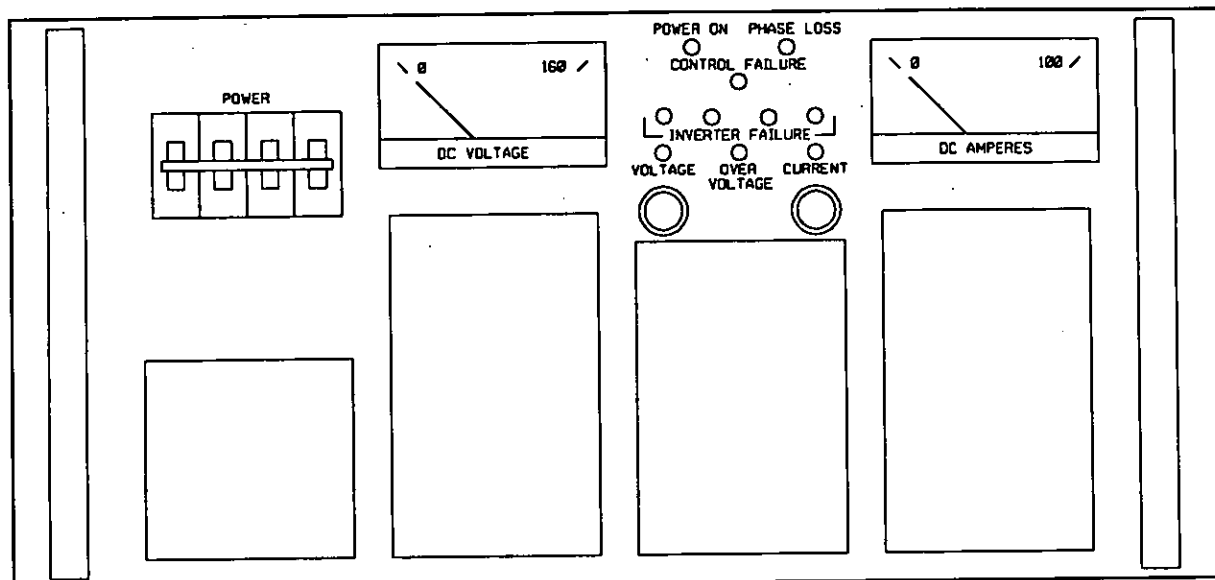

FRONT

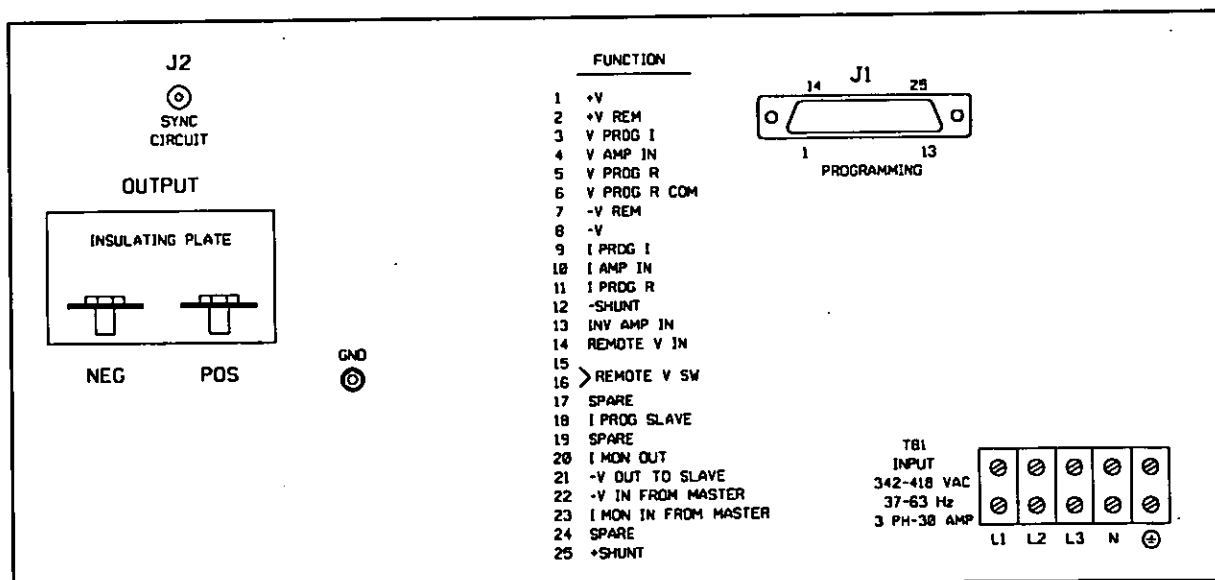


REAR

Intera 8.5 T	Intera 1.8 T	Intera 1.5 T
Standard	Dim1	Dim1


CONNECTOR LOCATION
POWER SUPPLY 15kW

DP1

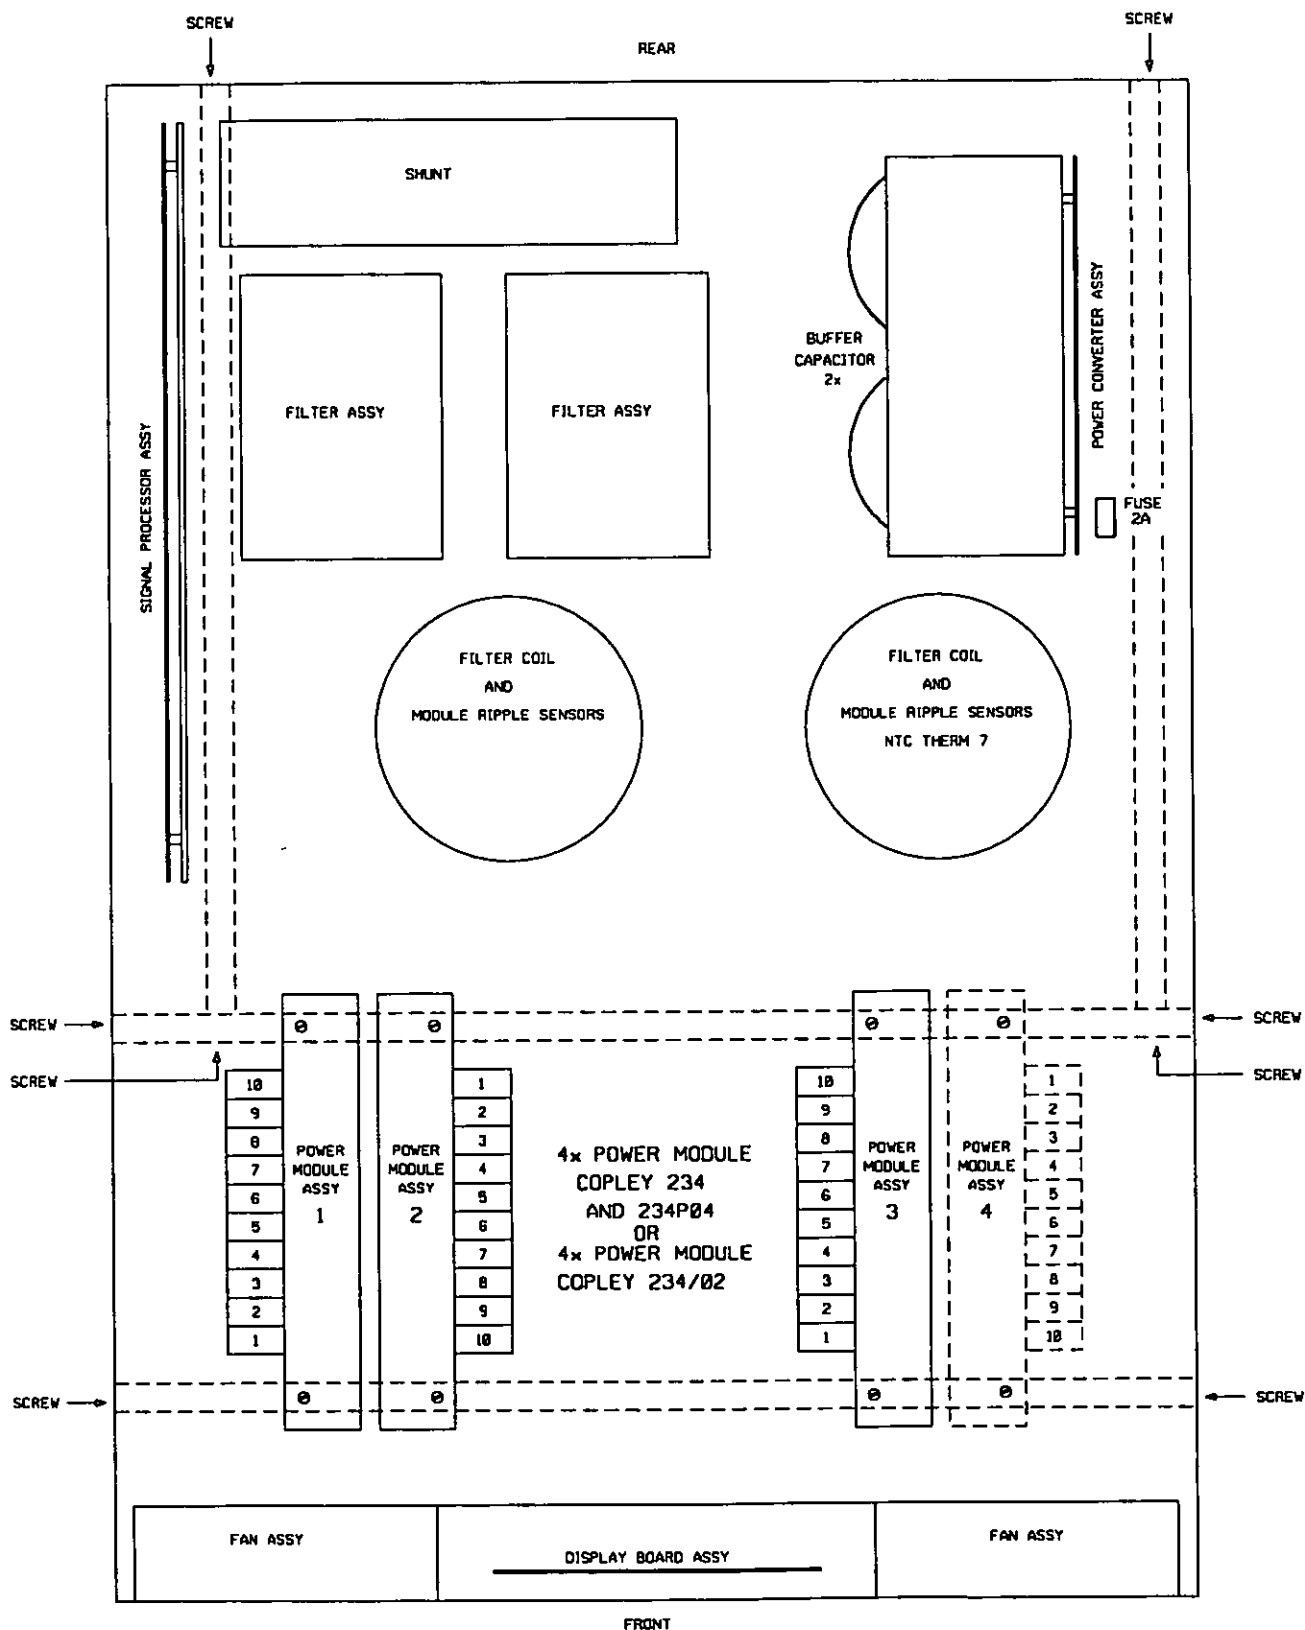


Intera B.5 T	Intera L.8 T	Intera L.5 T
Standard	Dim1	Dim1

TOP VIEW
'234' AMPLIFIER X-Y-Z DM.

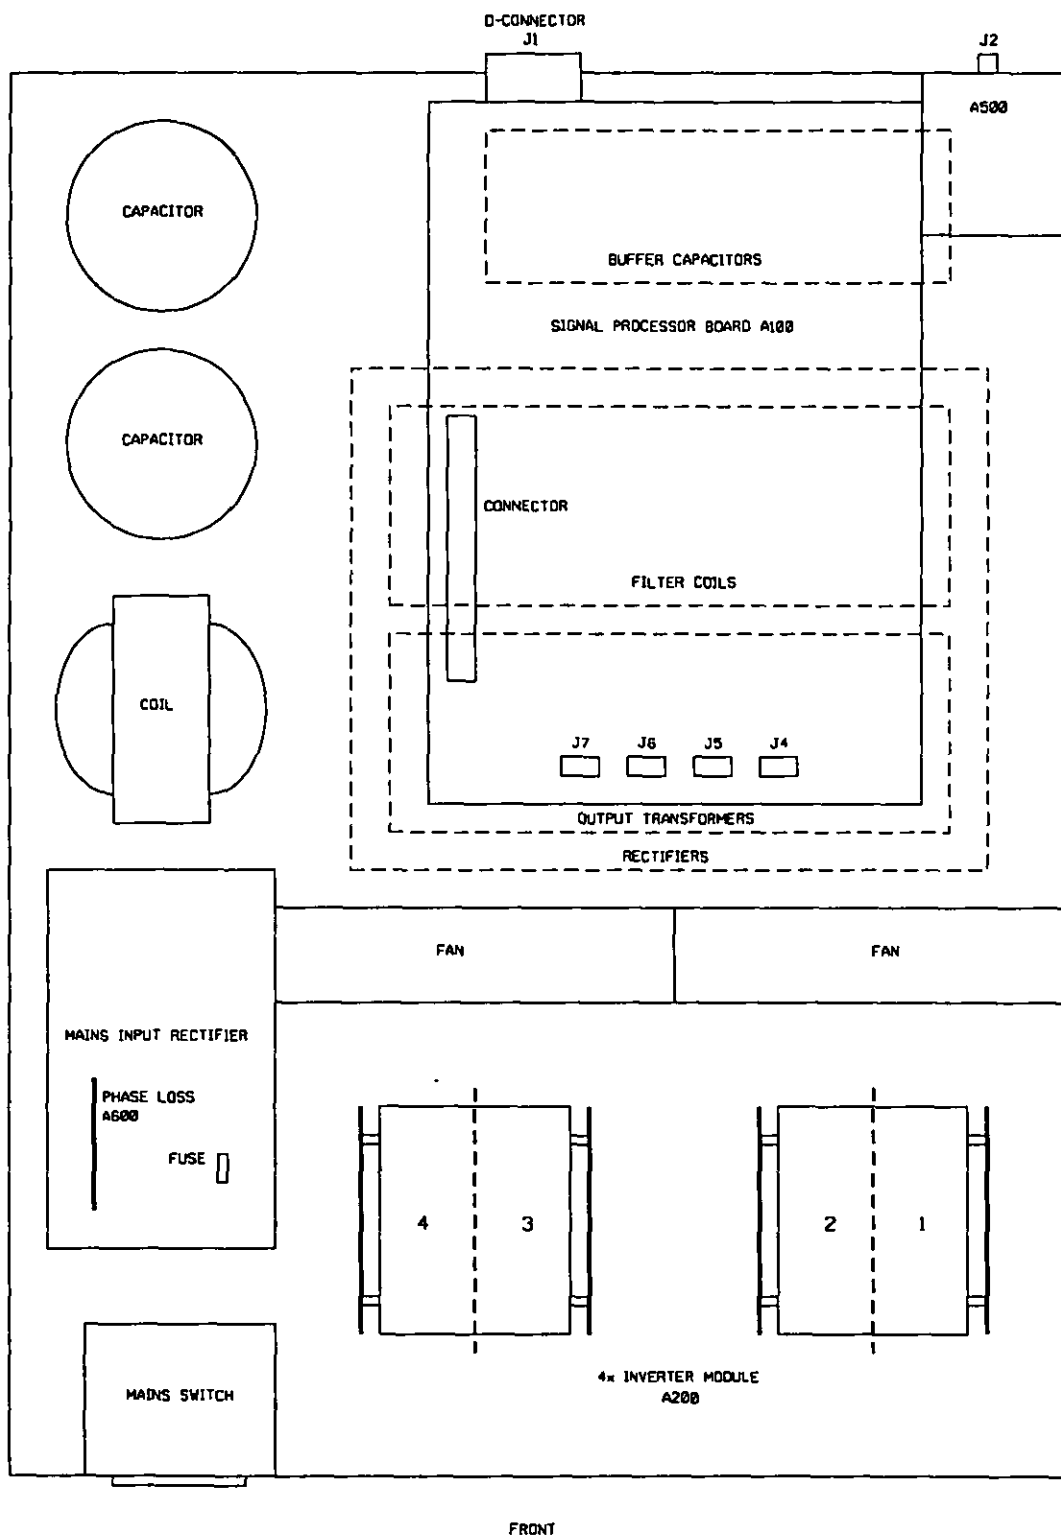


Intera 0.5 T	Intera 1.0 T	Intera 1.5 T
Standard	0mm	0mm


TOP VIEW
POWER SUPPLY 15kW DP1

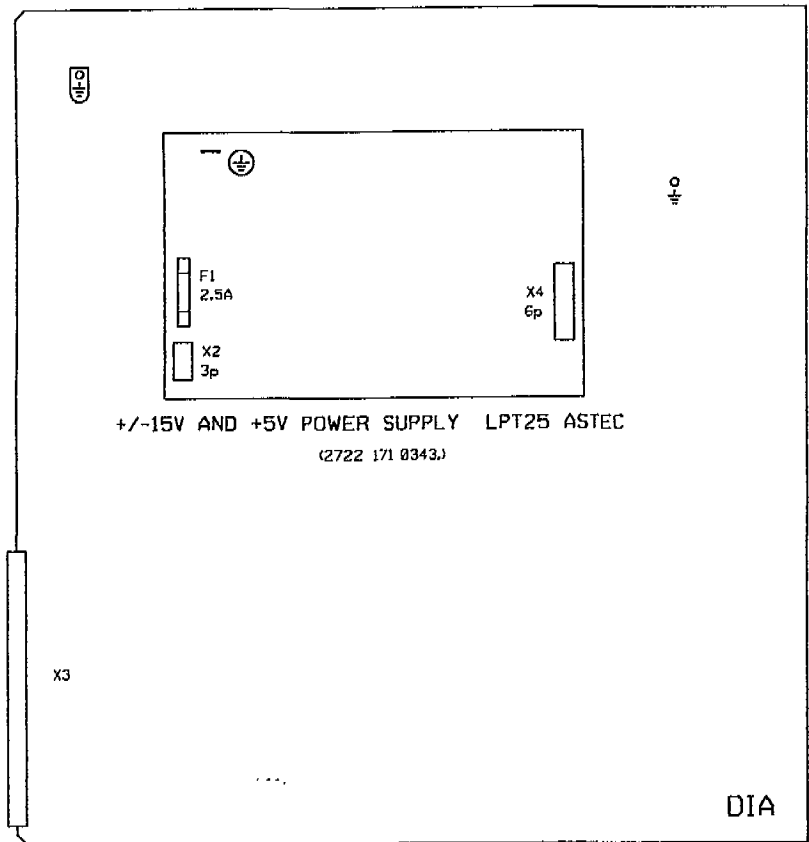


POWER SUPPLY GRADIENT INTERFACE
(4522 131 0927.)

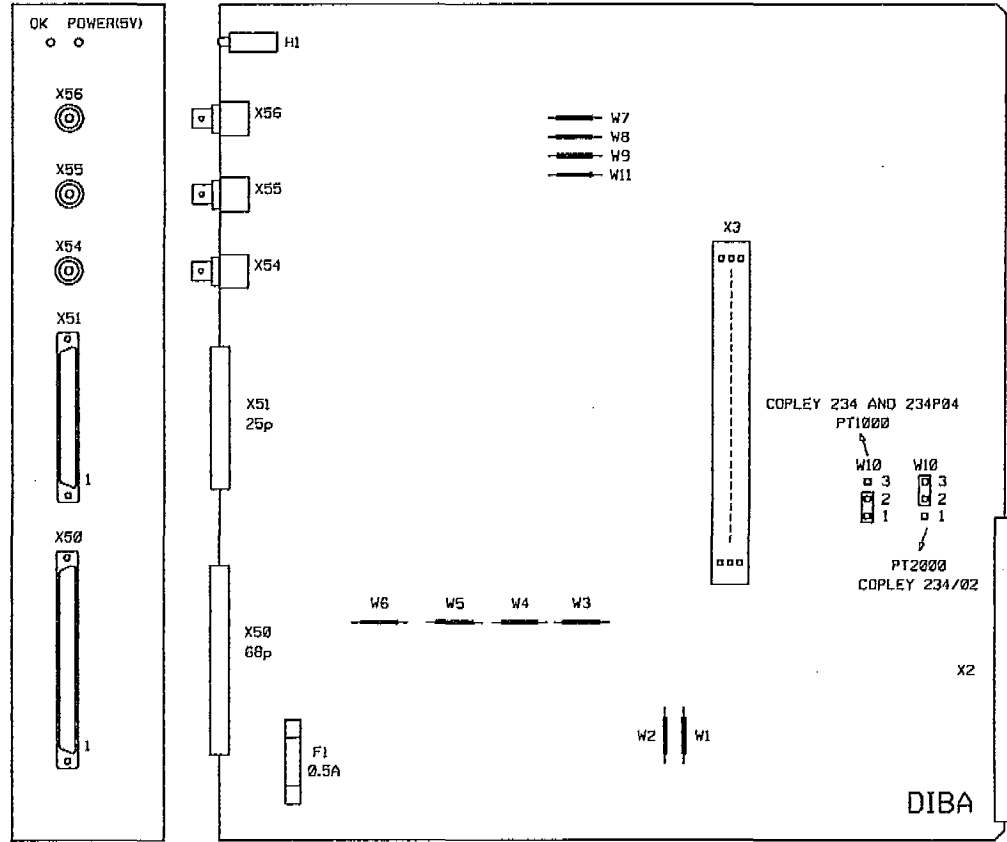


GRADIENT CONTROLLER MB
(4522 117 0477.)

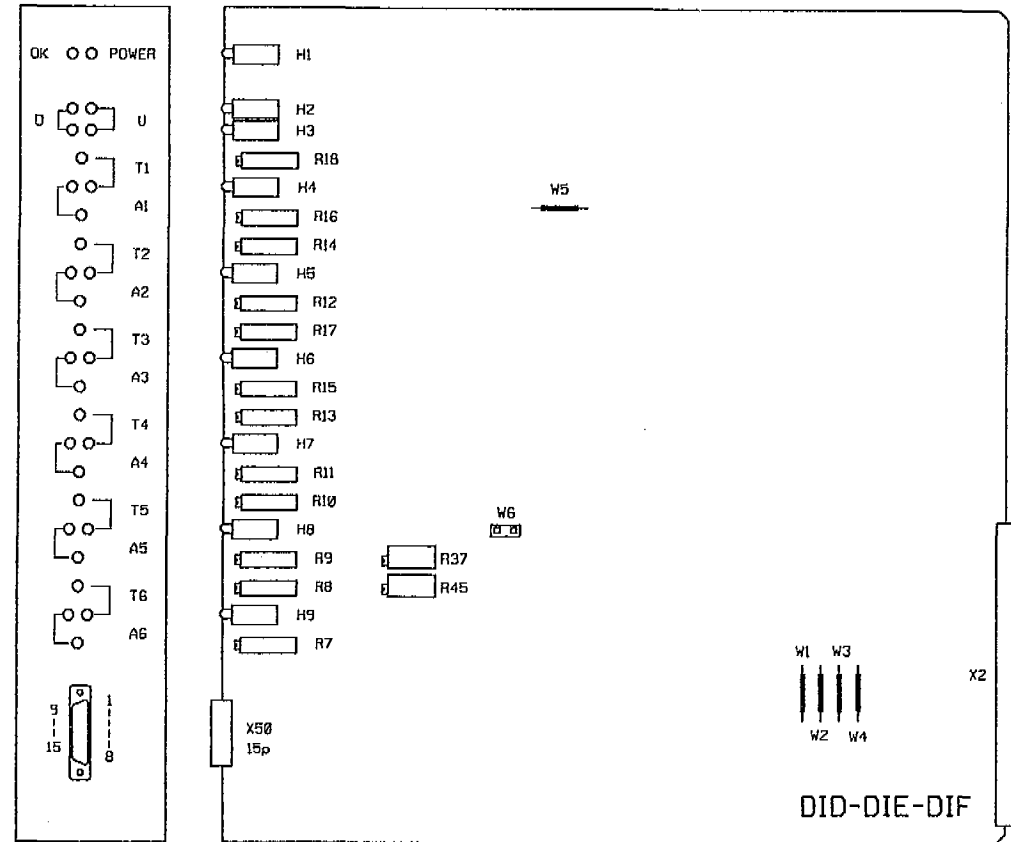


GRADIENT WFG/ECC
(4522 117 0480.)

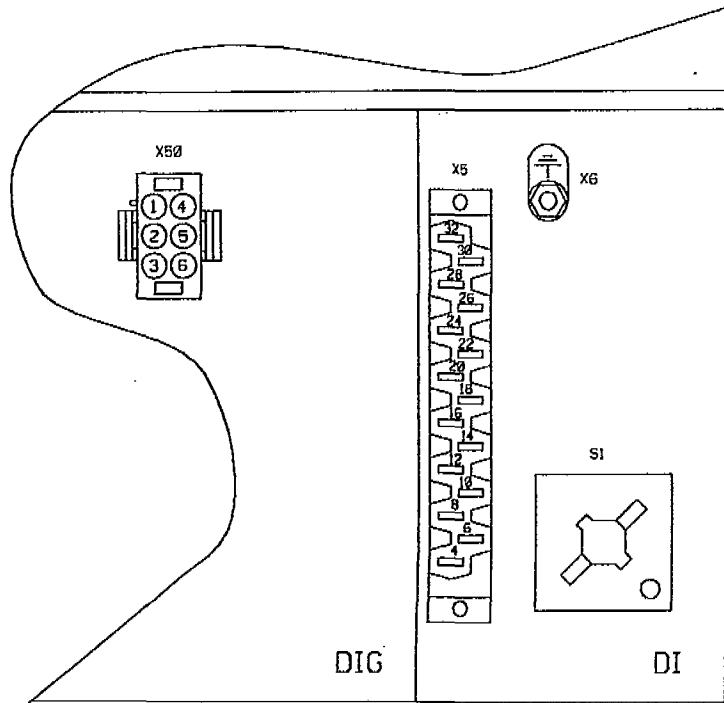

GRADIENT BACKPLANE
(4522 117 4495.)

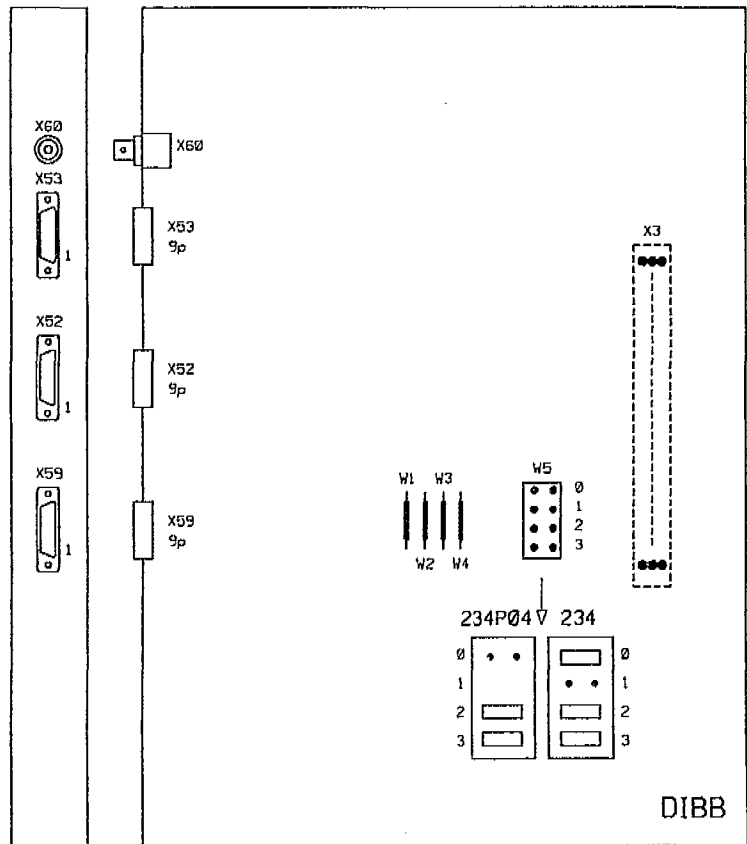


GRADIENT CONTROLLER DI
(4522 117 0479.)

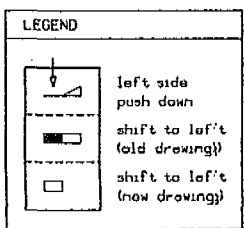


Intera 0.5 T	Intera 1.0 T	Intera 1.5 T
Standard	Omni	Omni

JUMPER SETTING GRADIENT INTERFACE DI.

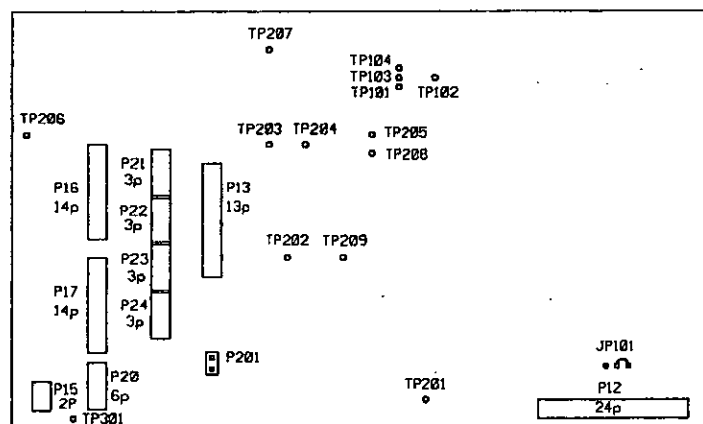


CONVERTER BOARD
(4522 150 1022.)

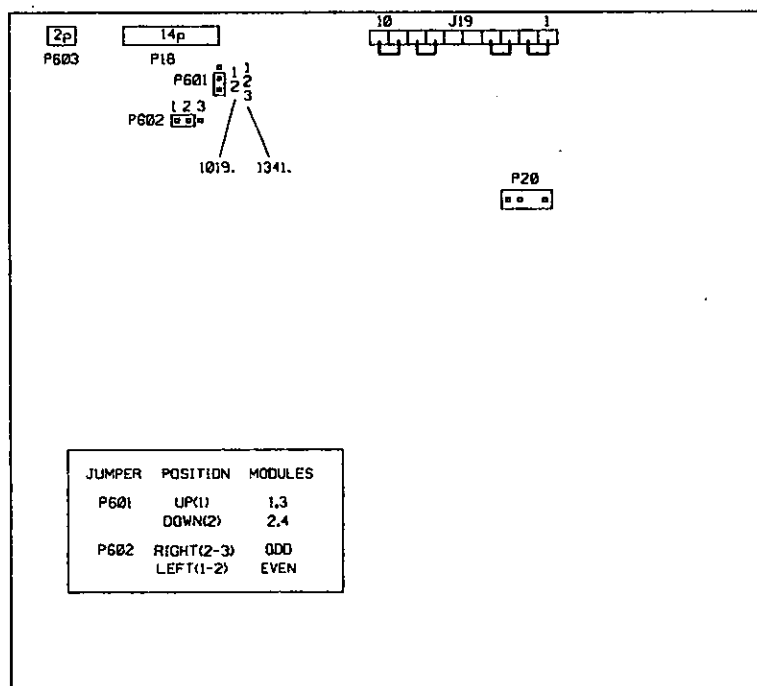

POWER MODULE
(4522 150 1019.)
(4522 150 1341.)


JUMPER	POSITION	MODULES
P601	UP(1)	1,3
	DOWN(2)	2,4
P602	RIGHT(2-3)	ODD
	LEFT(1-2)	EVEN

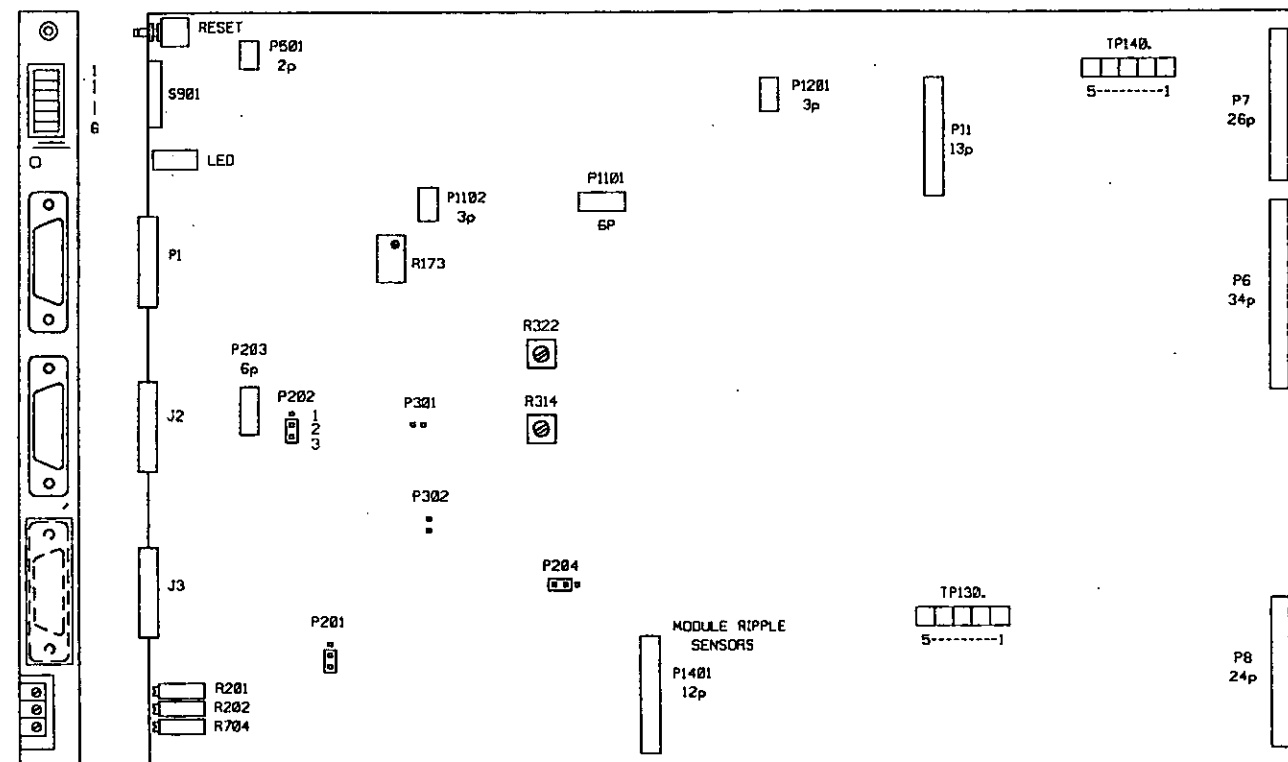


SIGNAL PROCESSOR BOARD
(4522 150 1021.)

Inter 0.5 T	Inter 1.0 T	Inter 1.5 T
Standard	Omni	Omni

JUMPER SETTING
'234' AMPLIFIER DM.

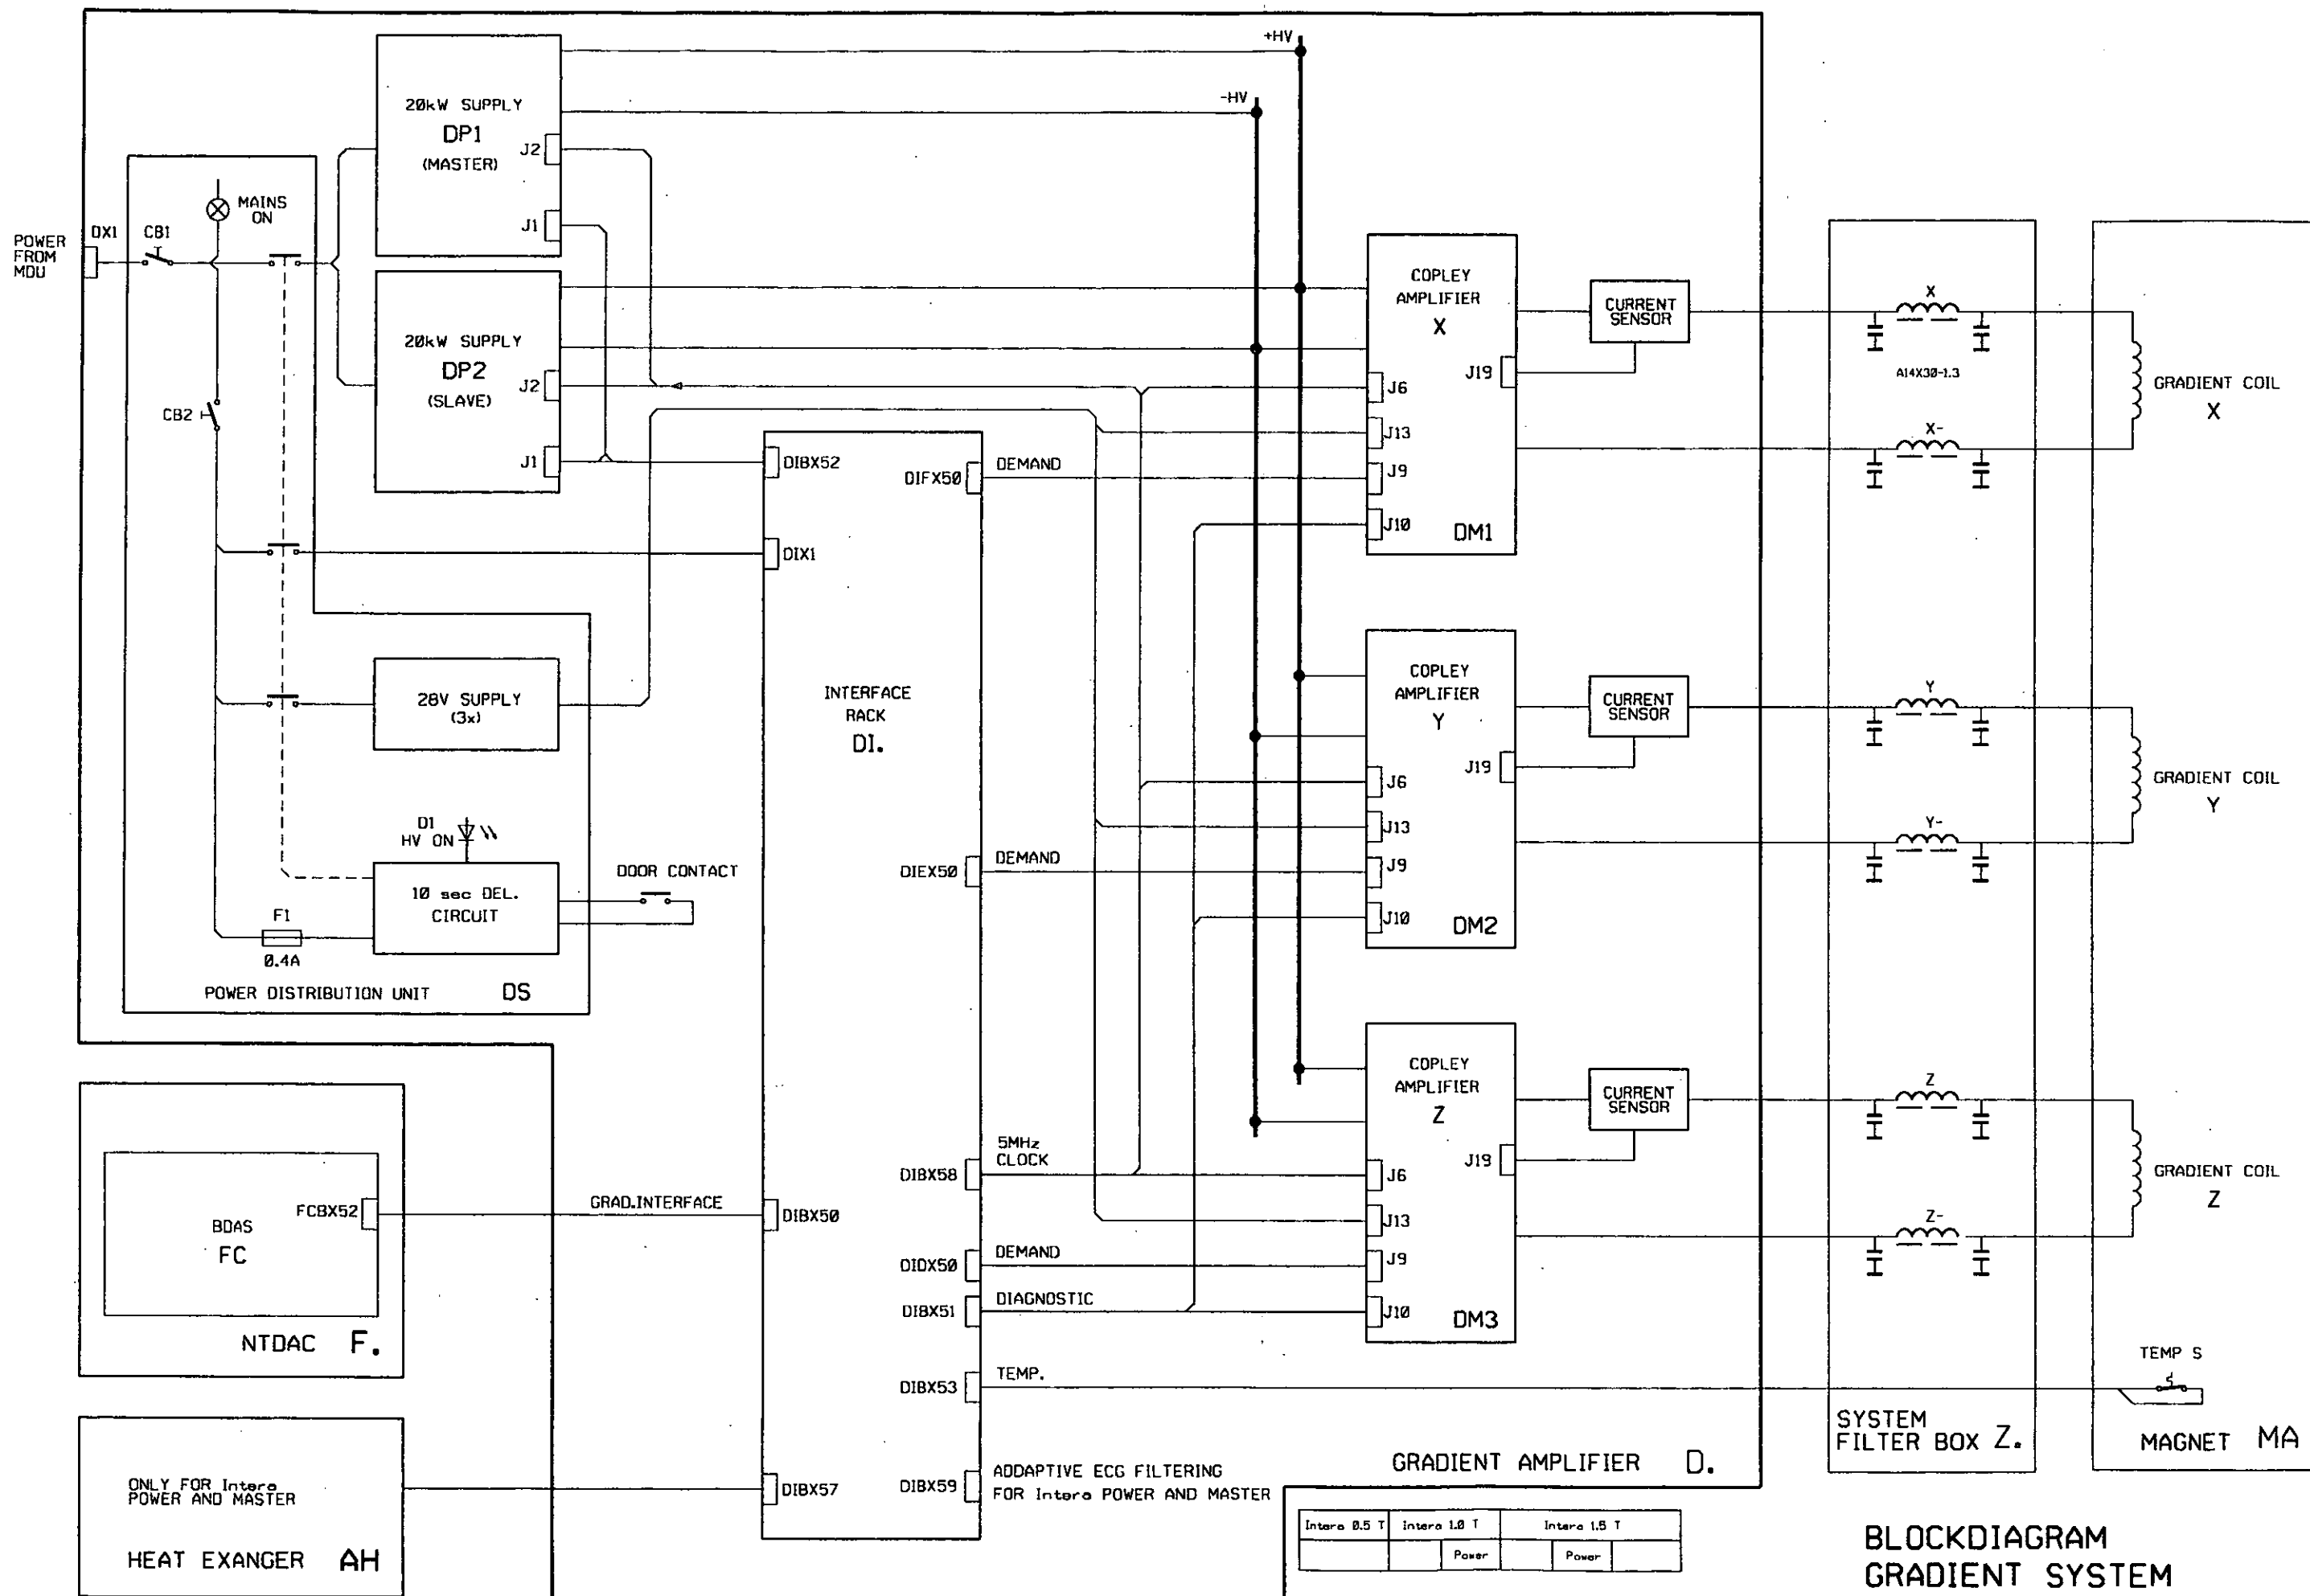


BLOCKDIAGRAM GRADIENT SYSTEM

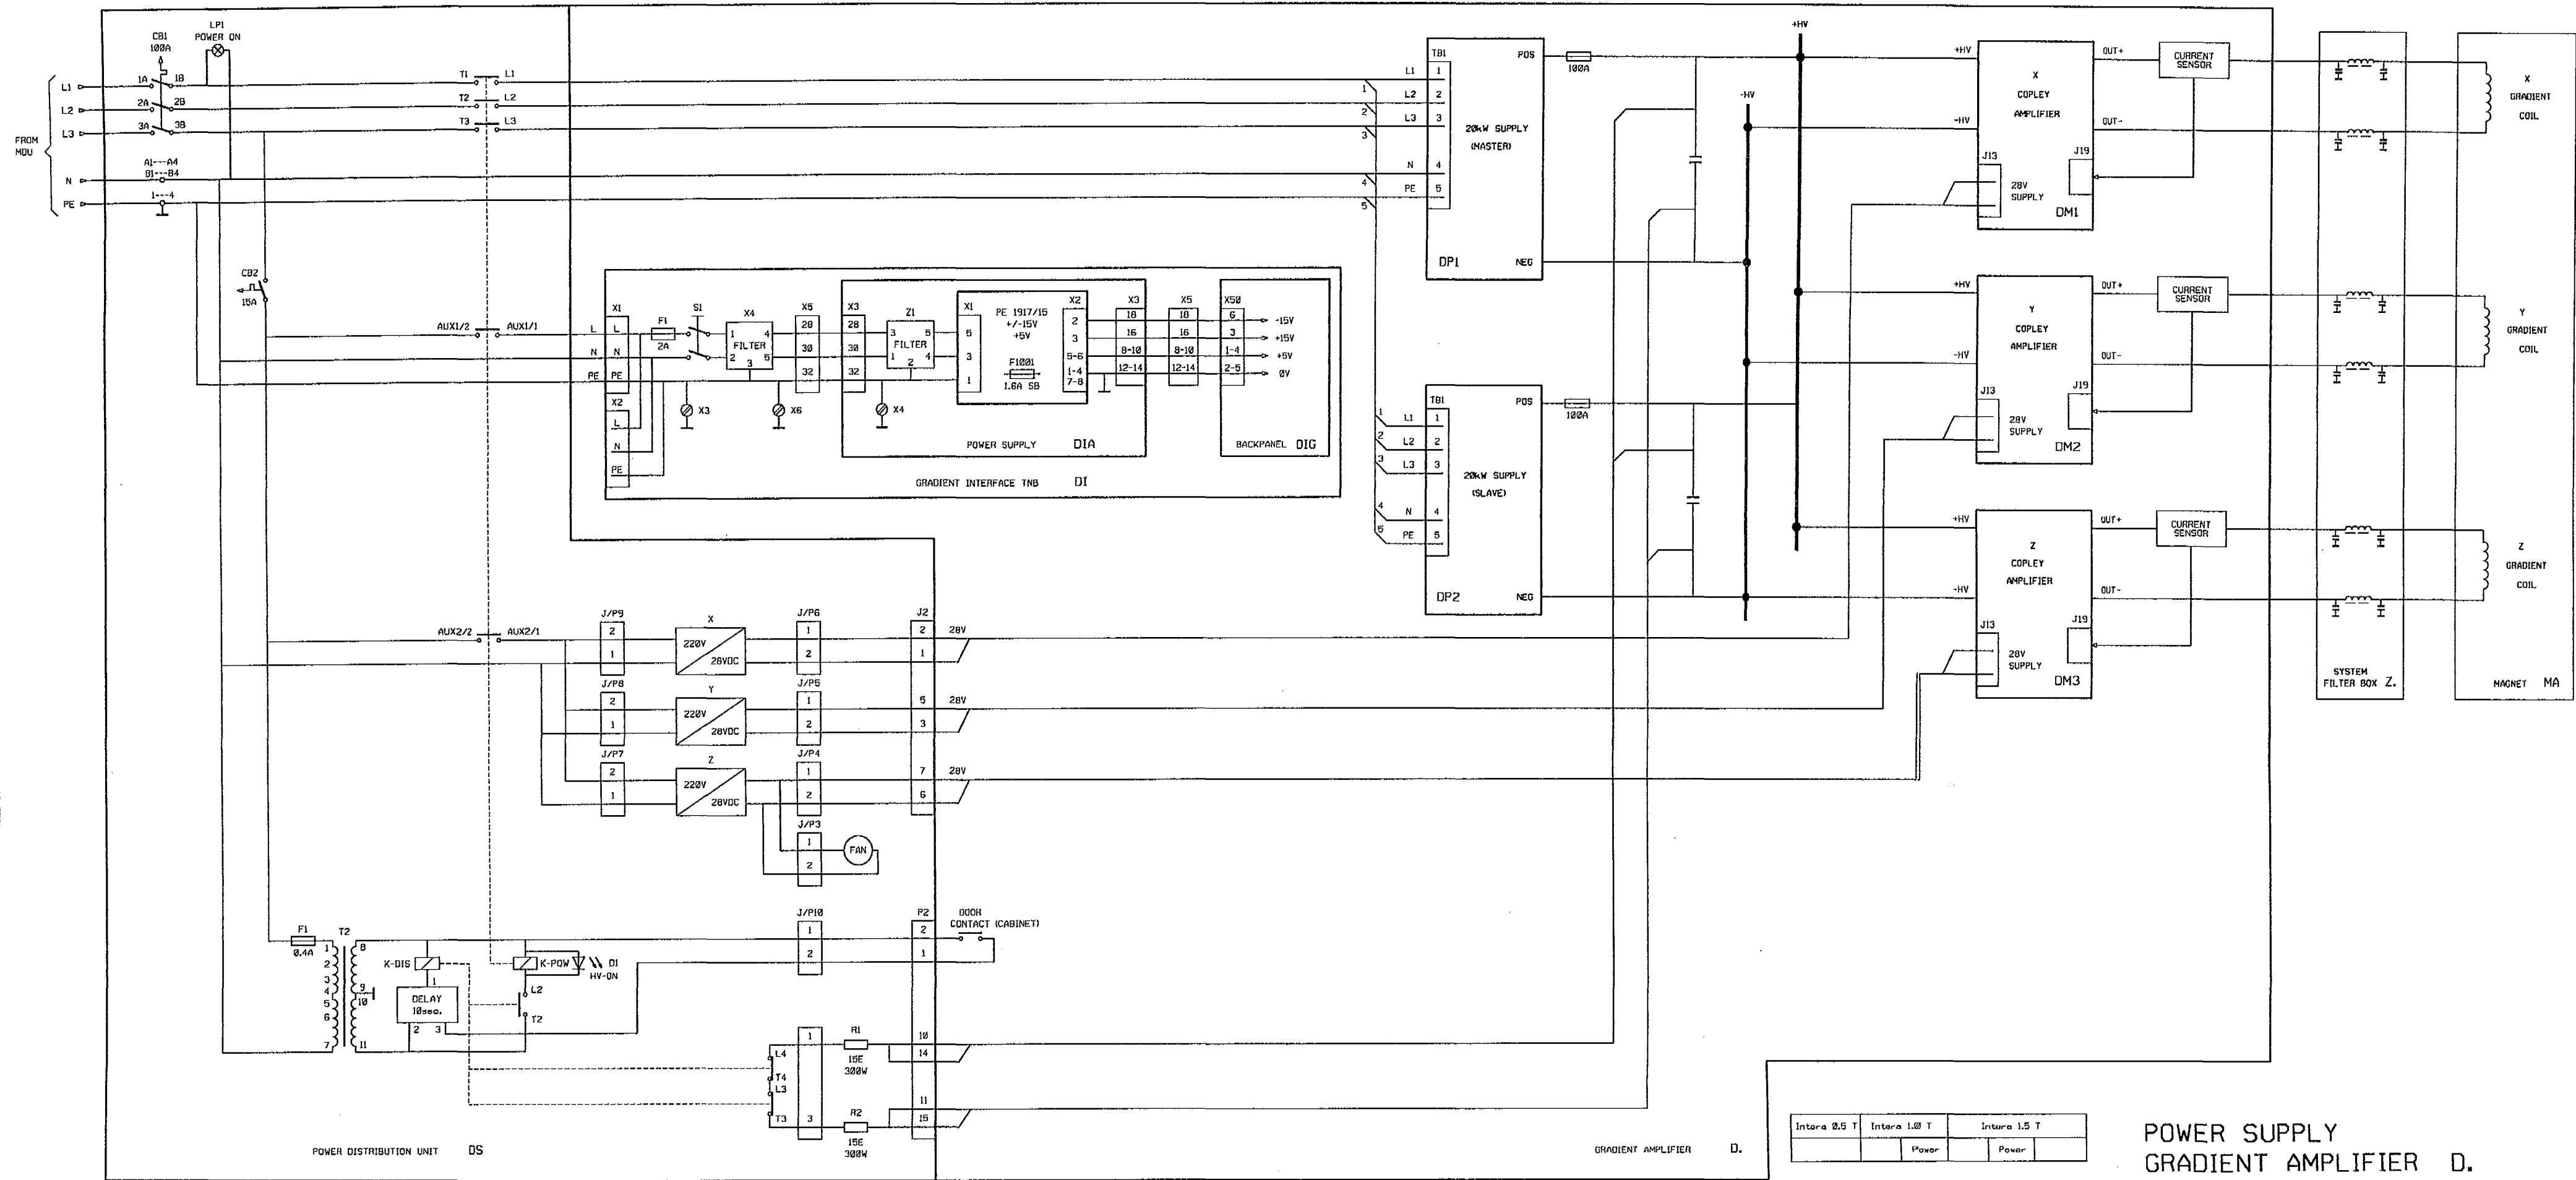


Intera 0.5 T	Intera 1.0 T	Intera 1.5 T
	Power	Power

POWER SUPPLY
GRADIENT AMPLIFIER D.

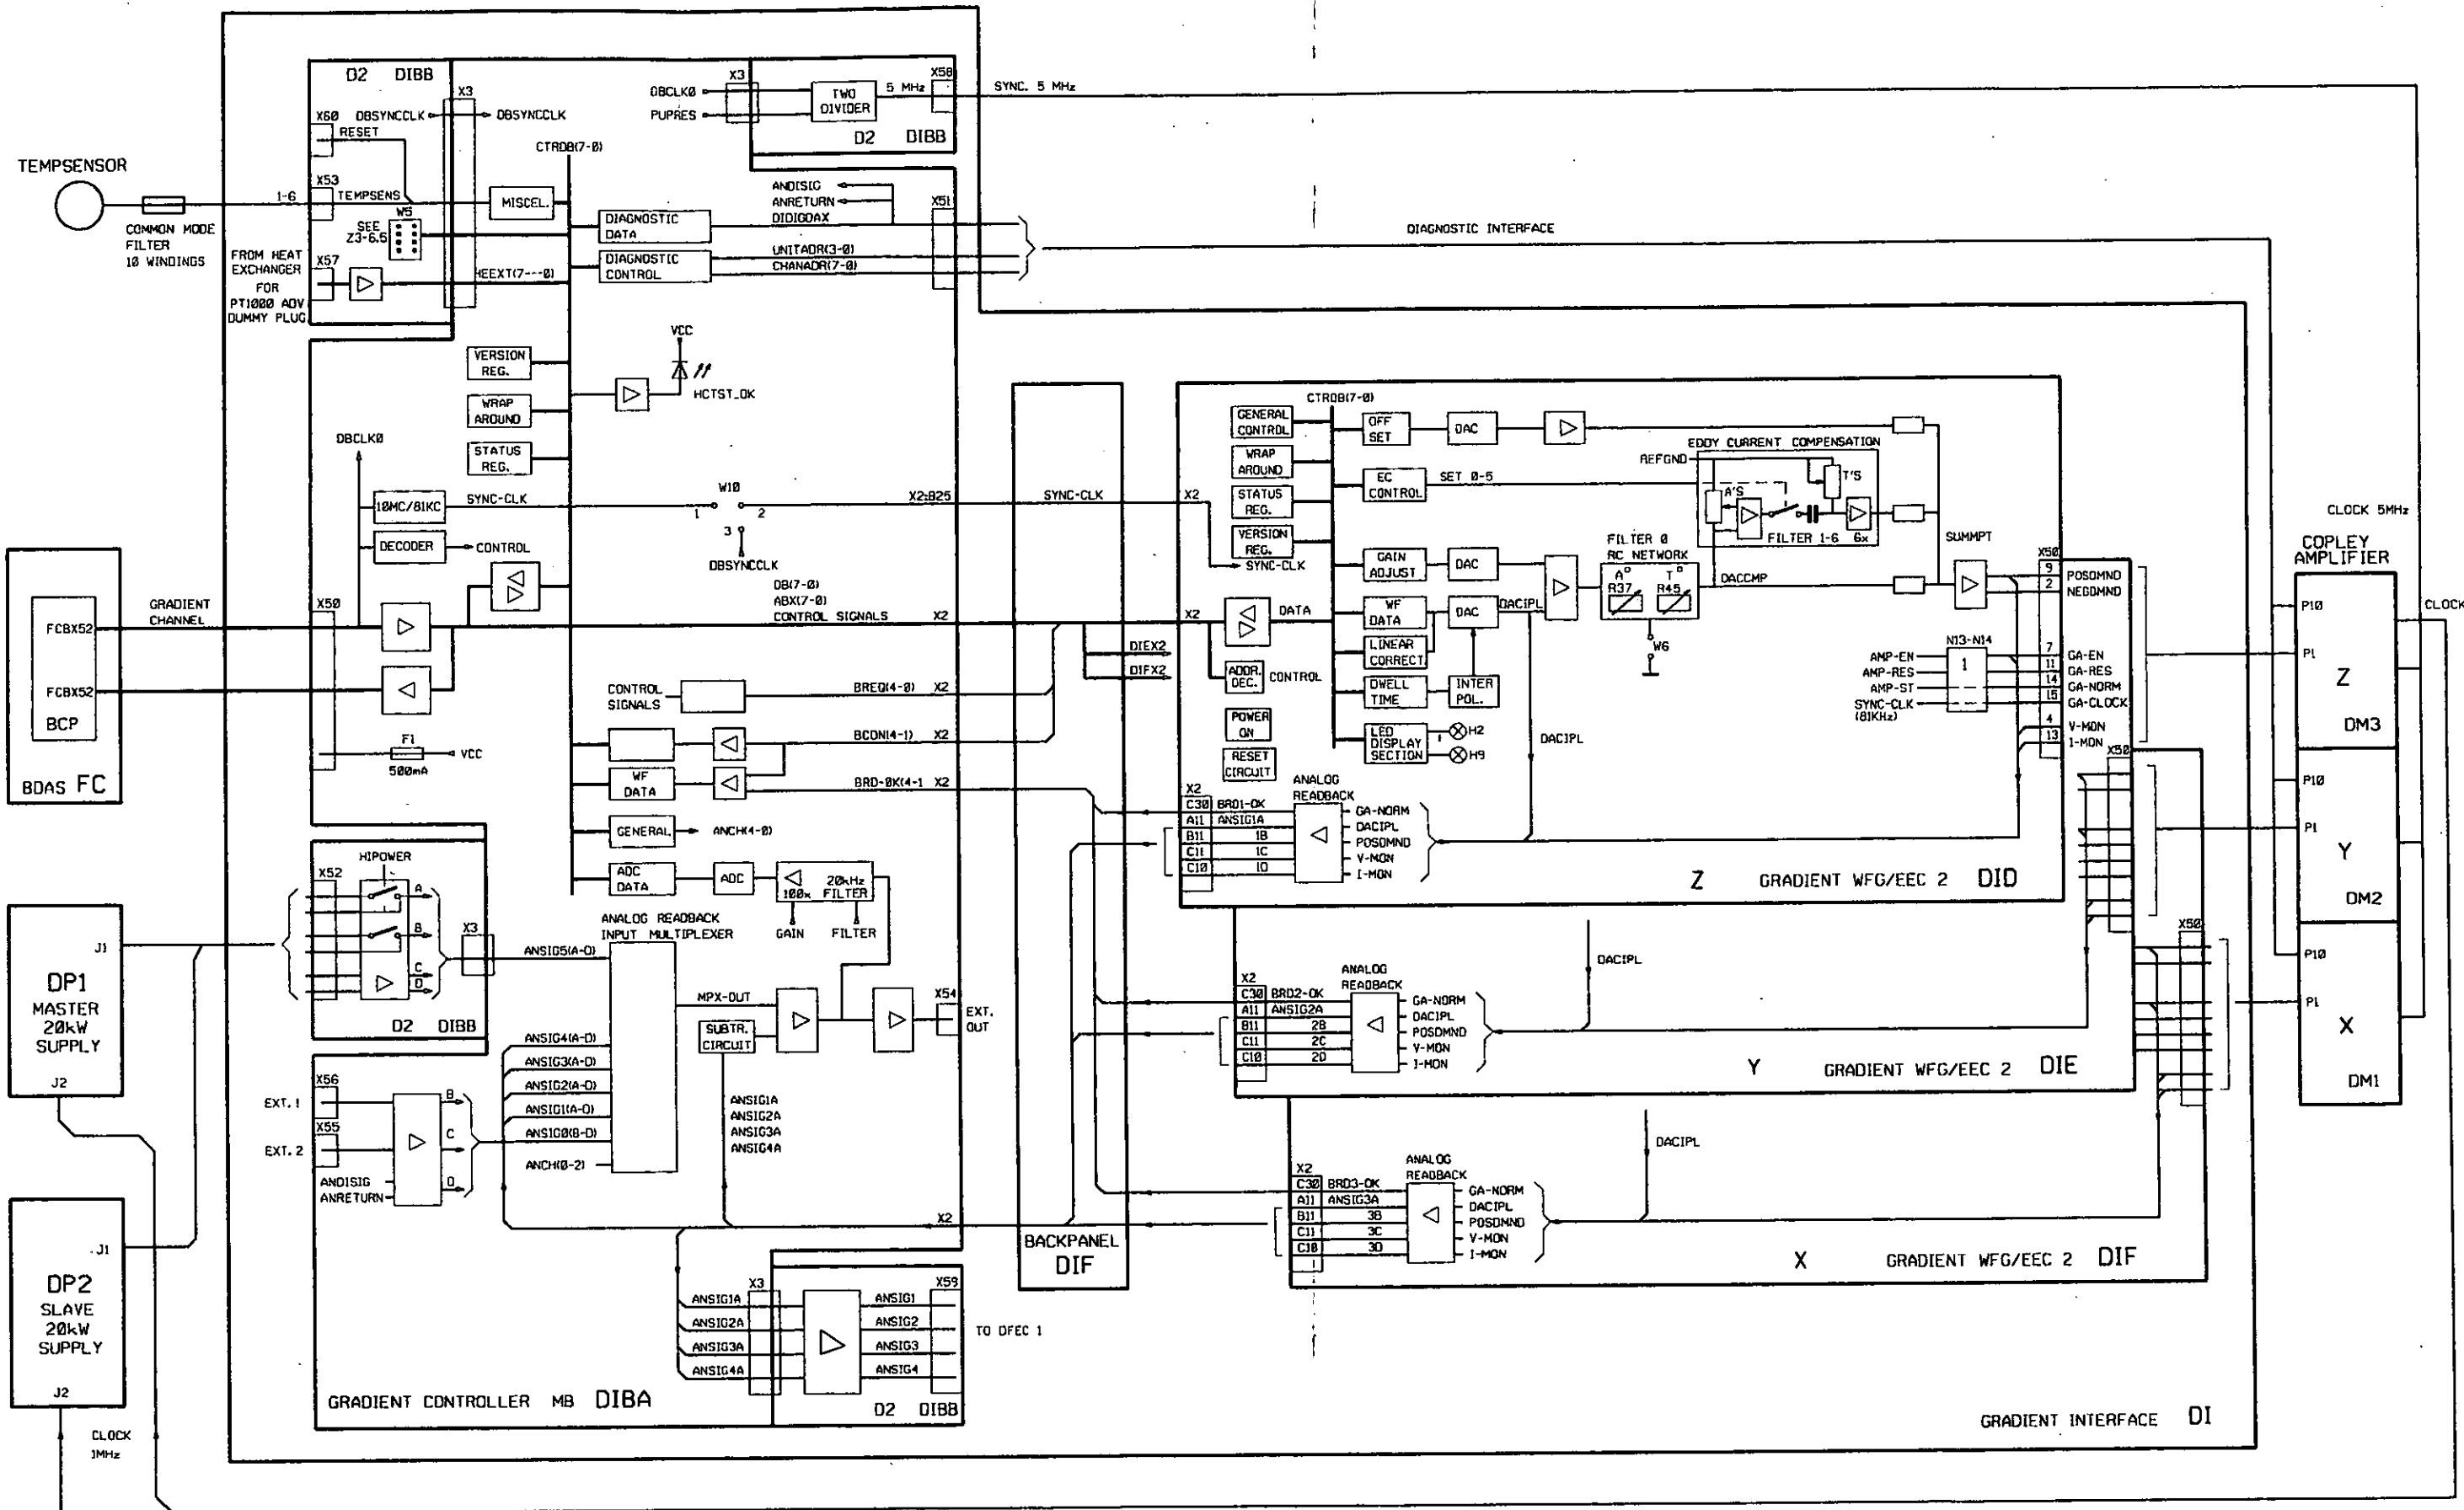



Interø 0.5 T	Interø 1.0 T	Interø 1.5 T
	Power	Power

BLOCKDIAGRAM GRADIENT INTERFACE DI.




Z1-6.2.4

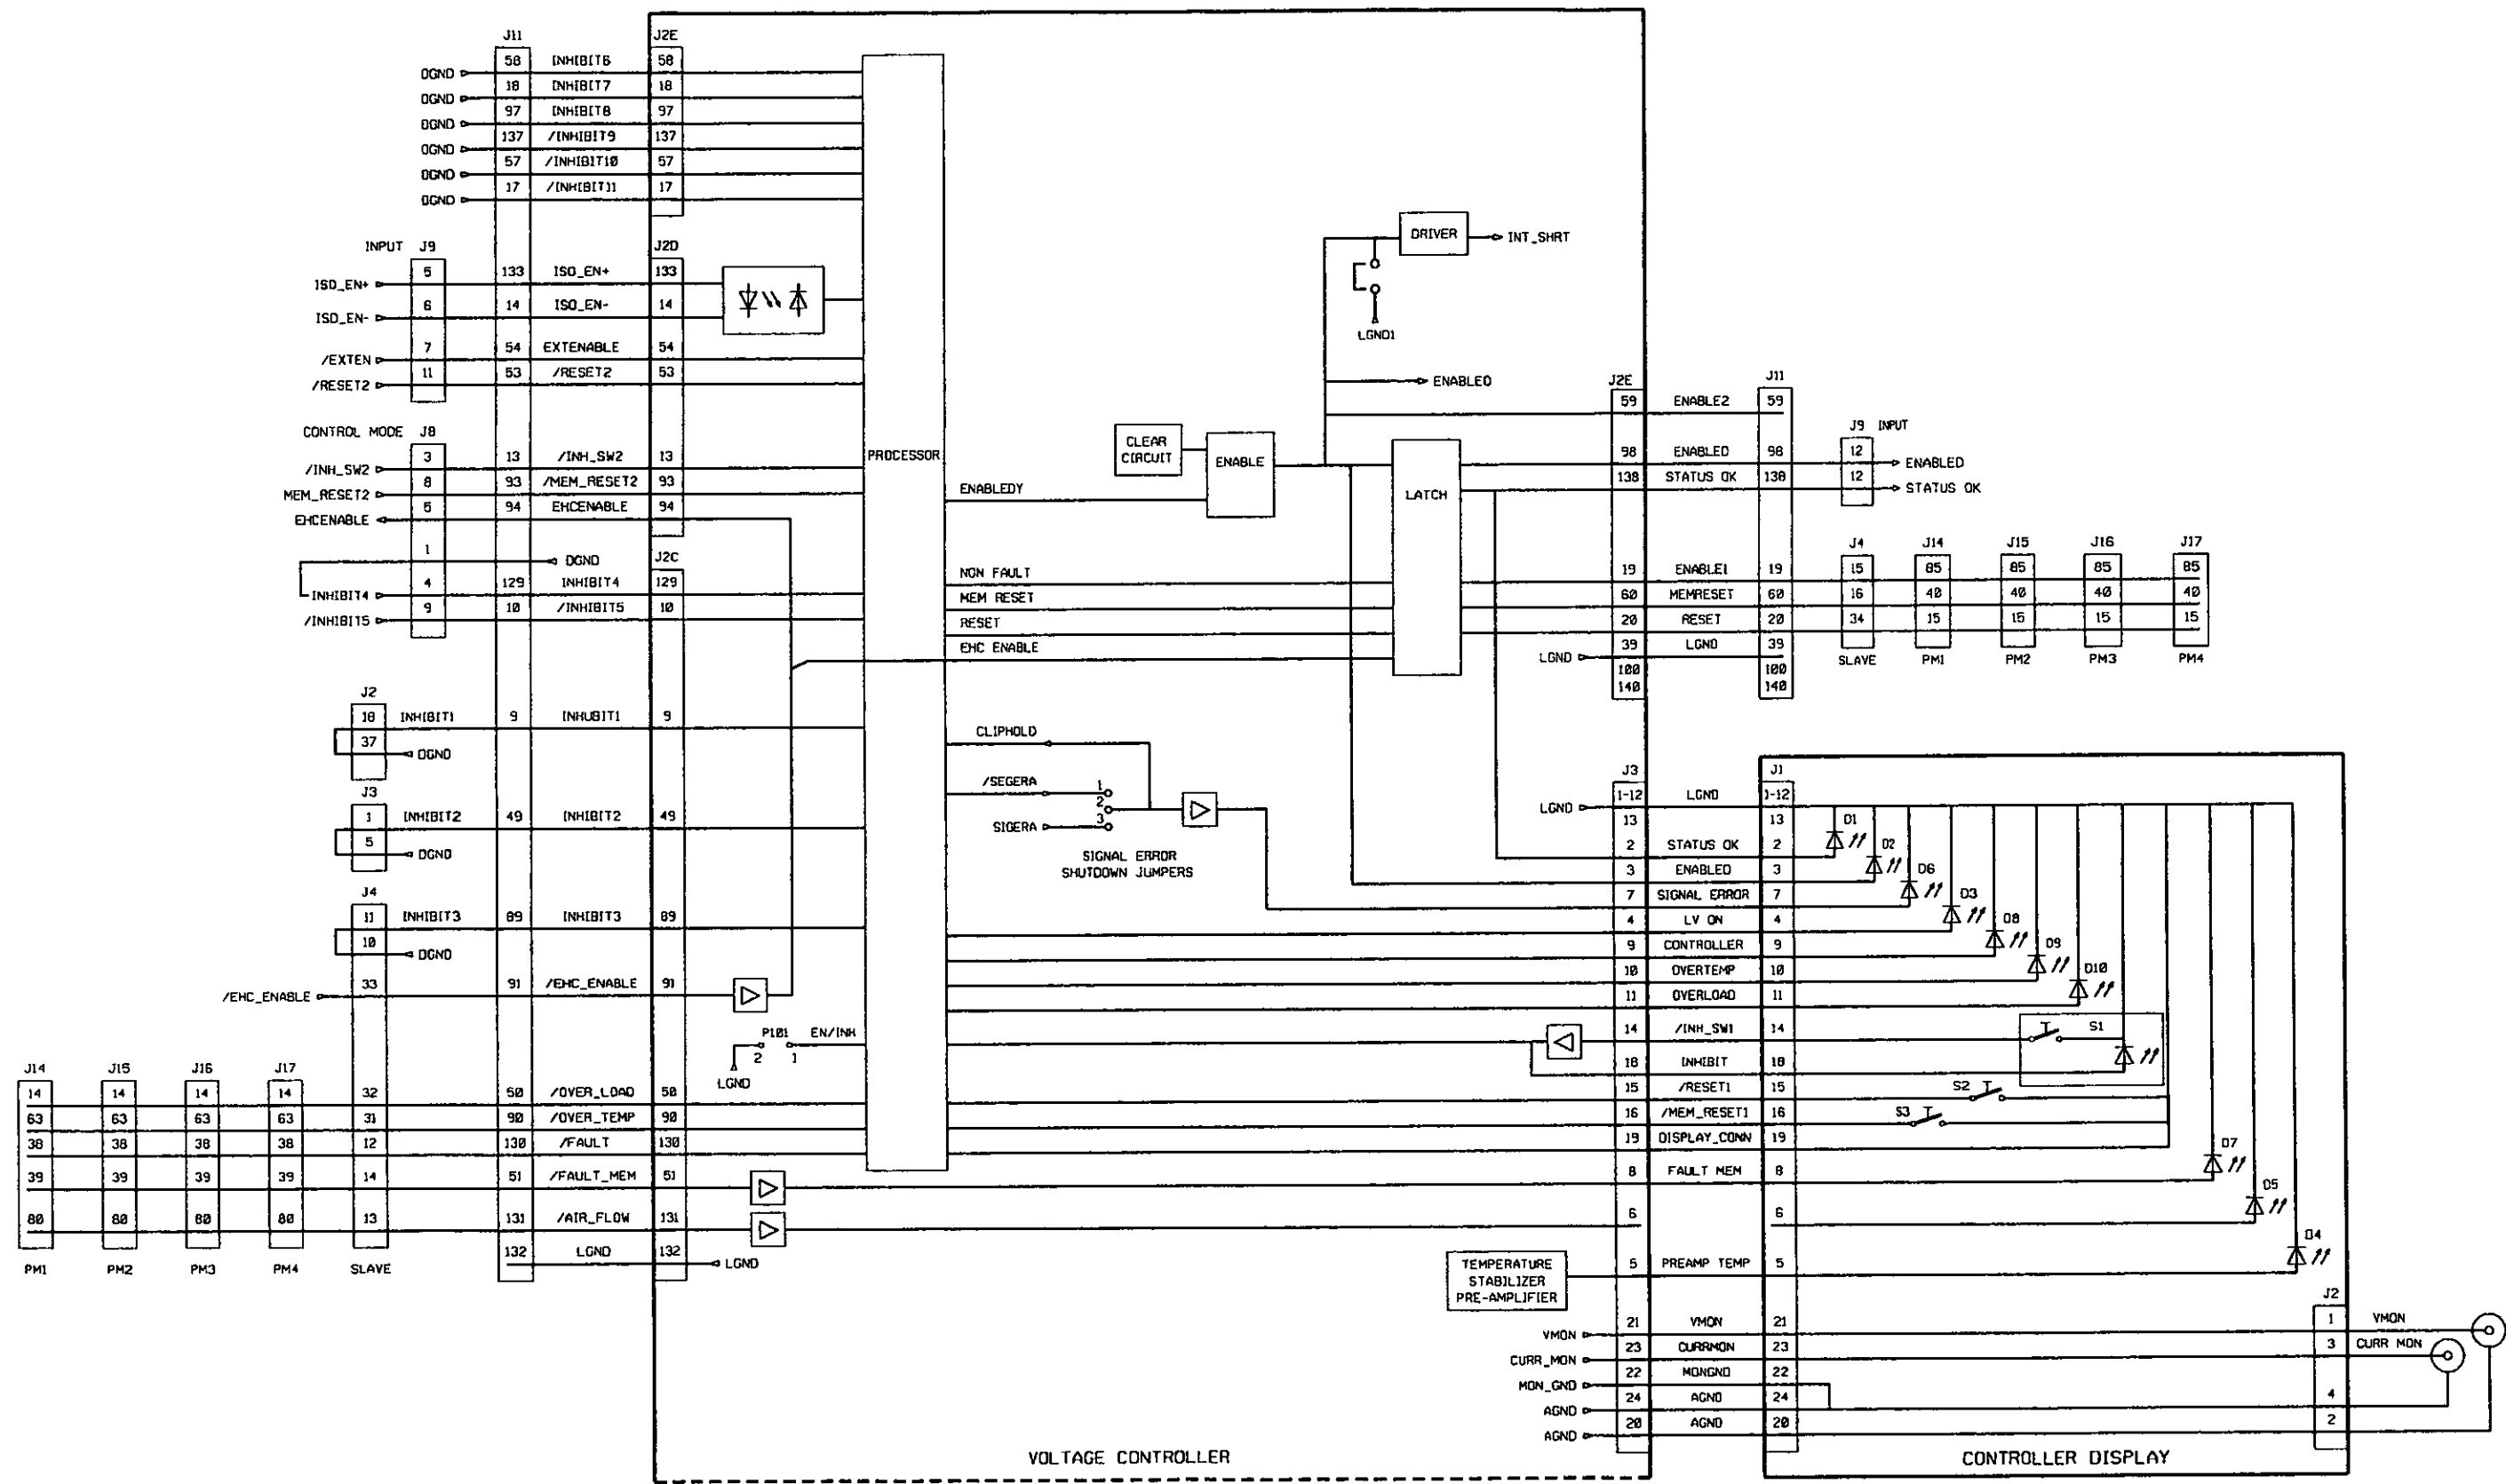

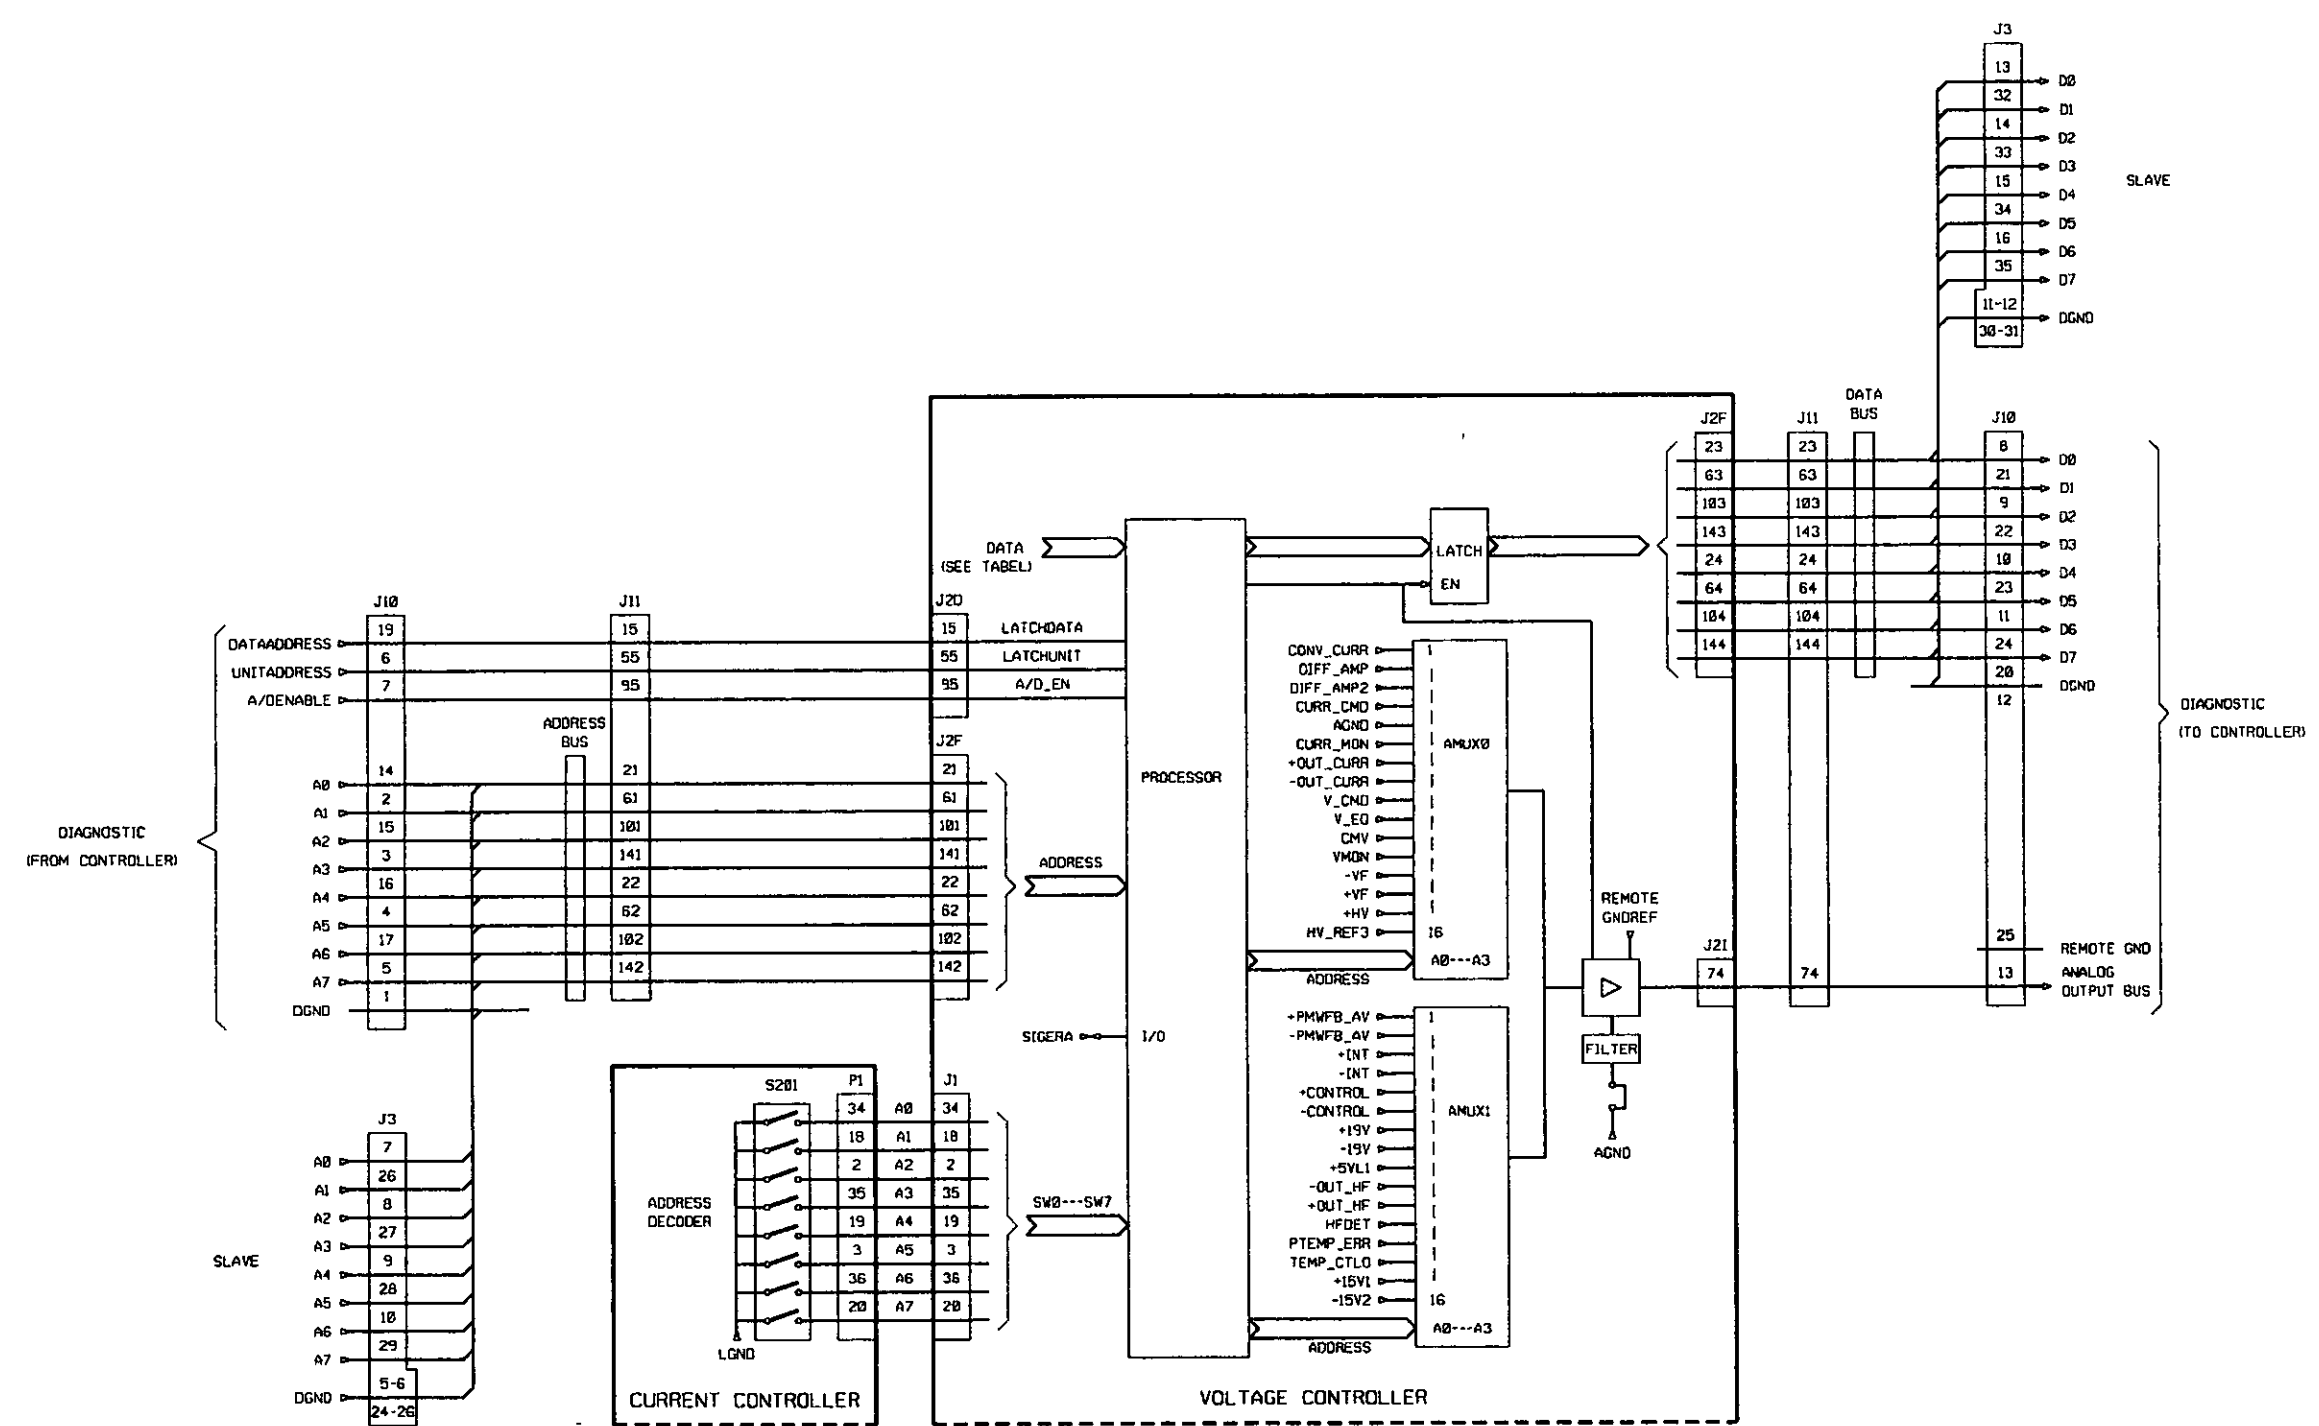


Intera 05 T	Intera 1.0 T	Intera 1.5 T
	Power	Power Master

SIMPLIFIED DIAGRAM 3 OF 4
274 CONTROLLER + BACKPLANE

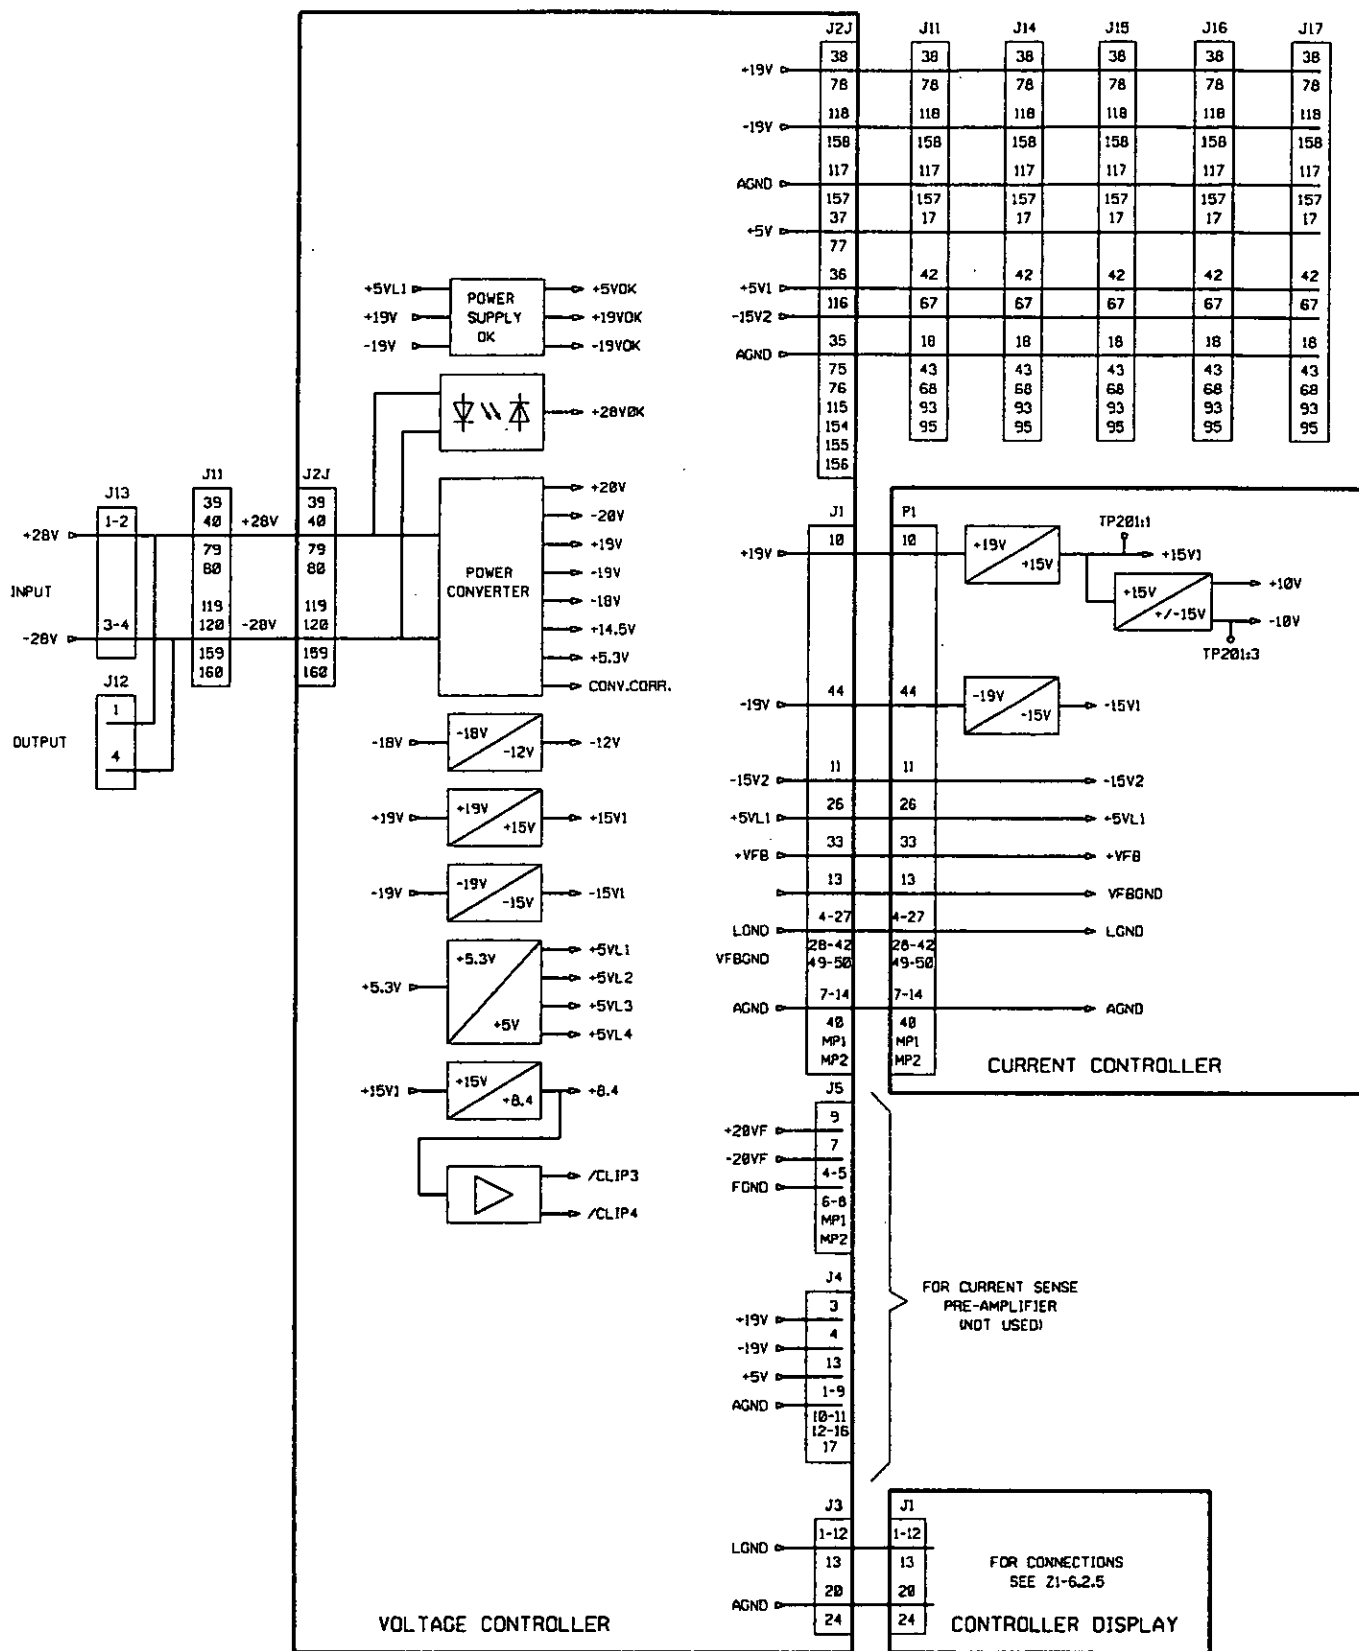



Interα 0.5 T	Interα 1.0 T	Interα 1.5 T
	Power	Power Master

SIMPLIFIED DIAGRAM 4 OF 4 274 CONTROLLER + BACKPLANE

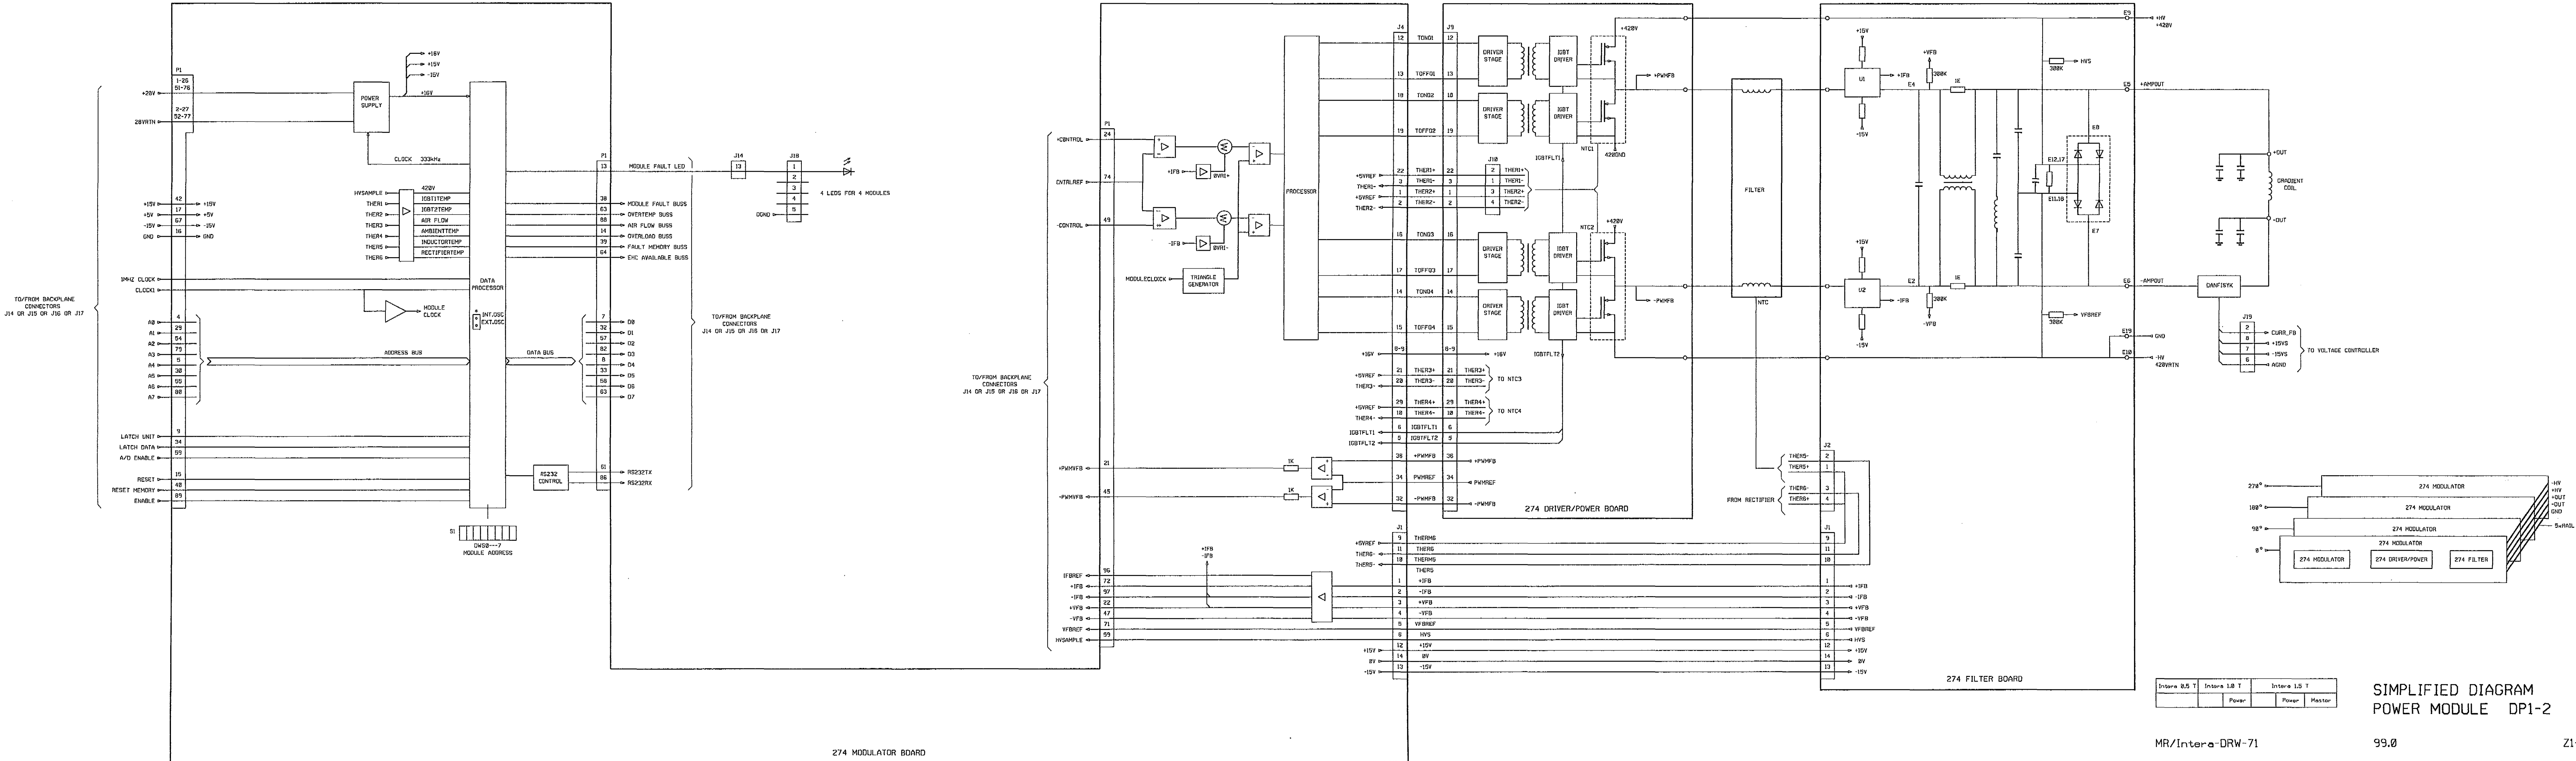


Intera 0.5 T	Intera 1.0 T	Intera 1.5 T
	Power	Power
		Master

SIMPLIFIED DIAGRAM
POWER MODULE DP1-2

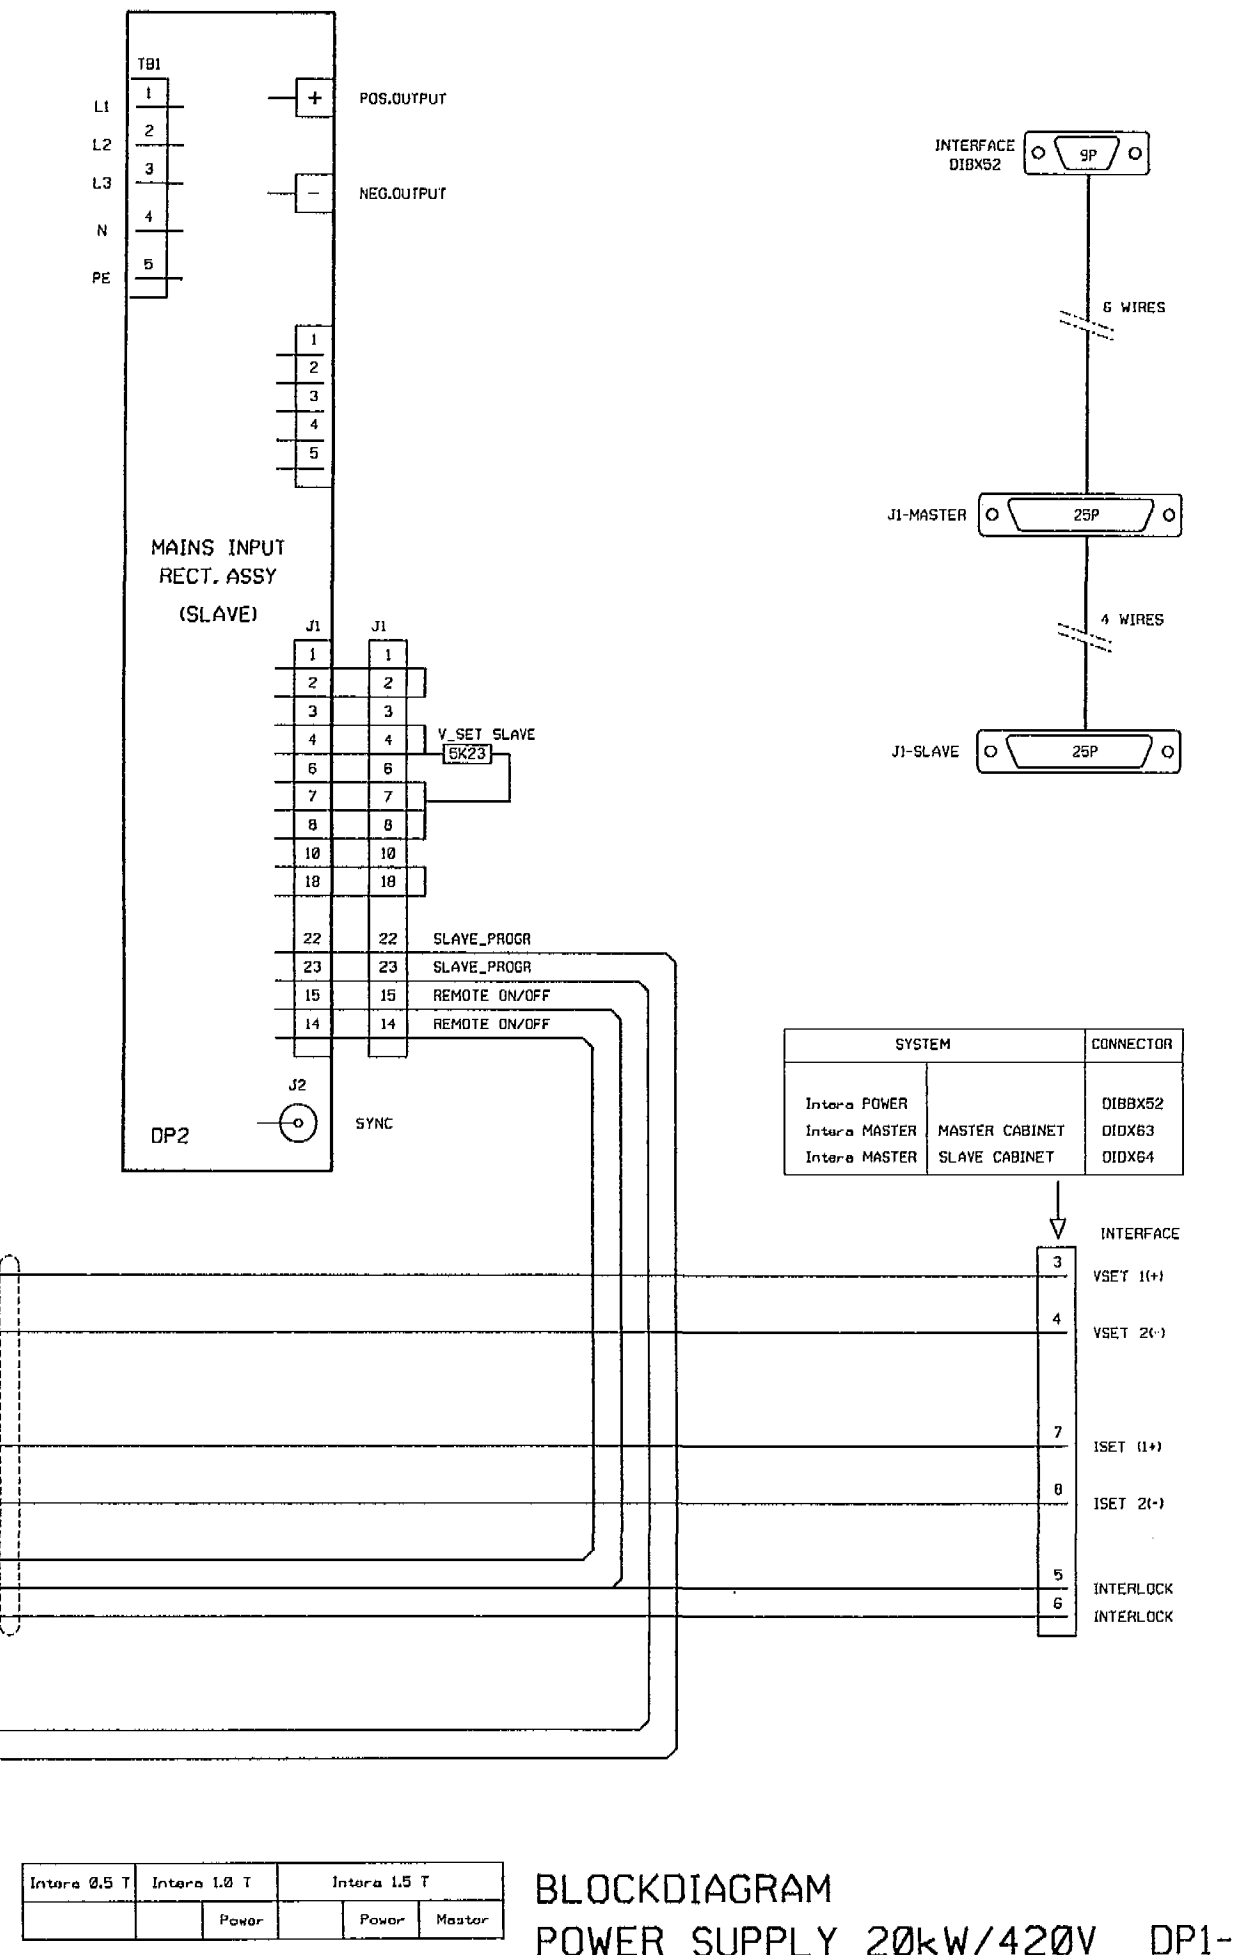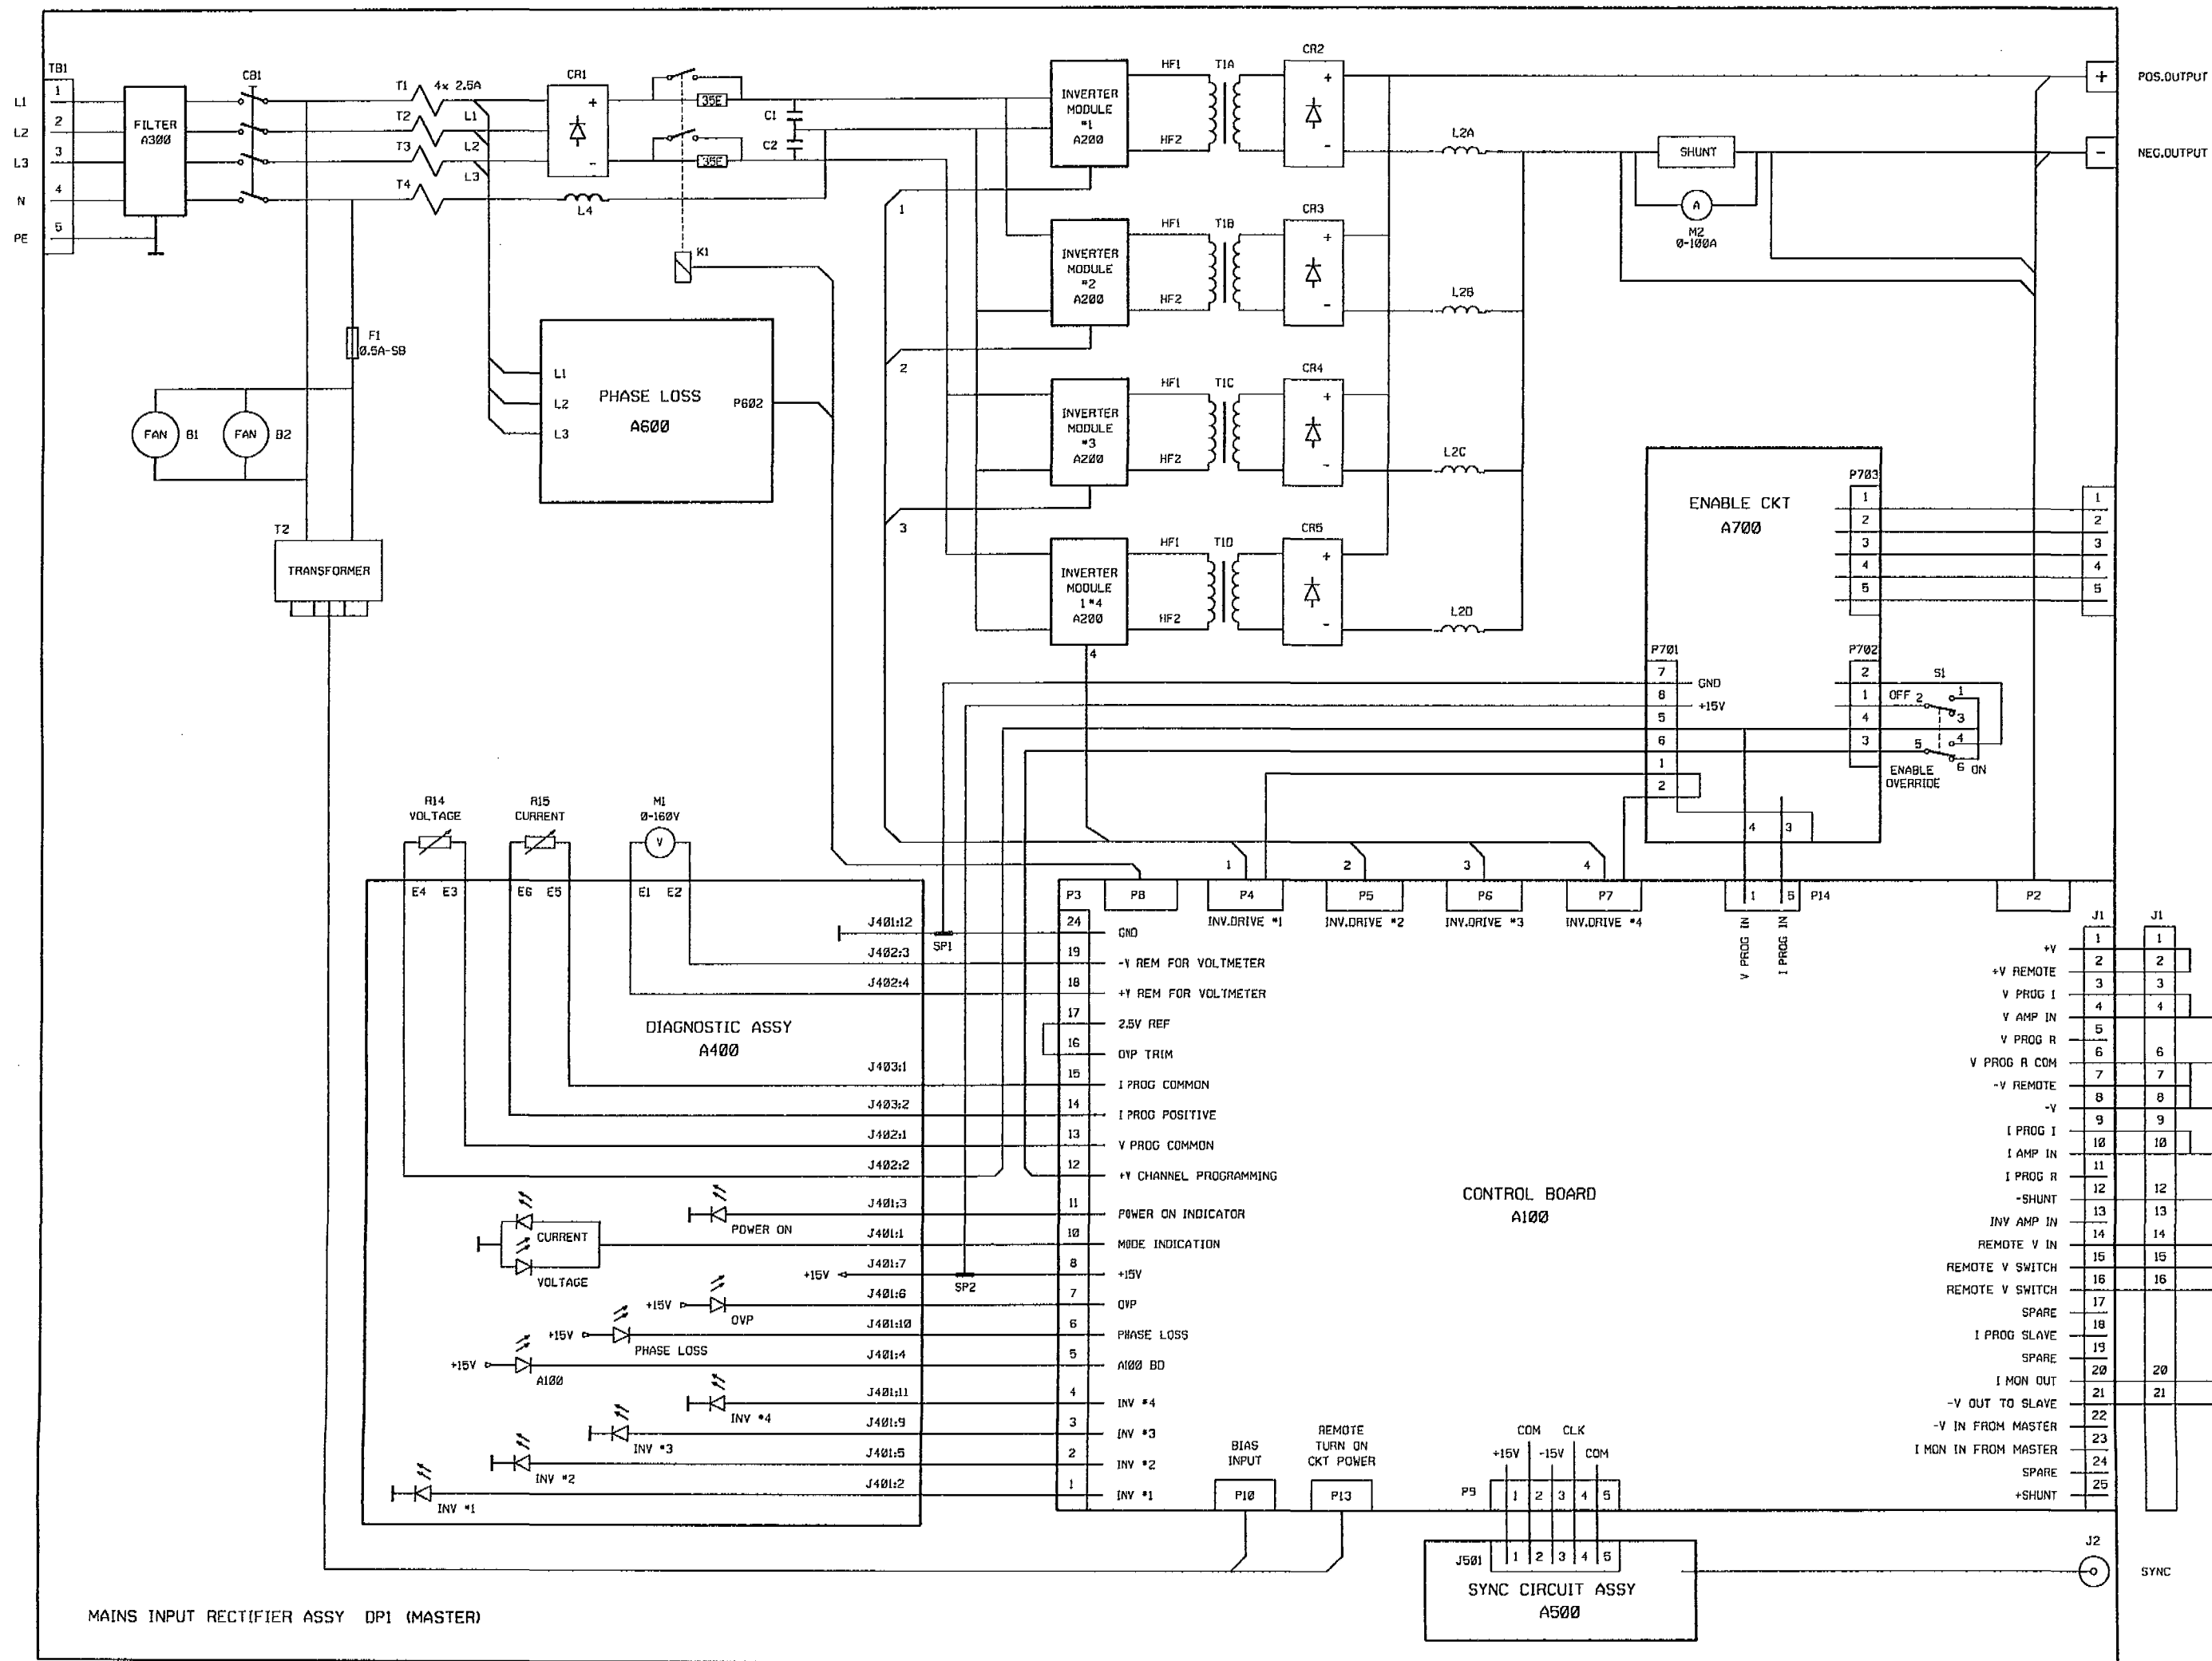


Inter 0.5 T	Inter 1.0 T	Inter 1.5 T
	Power	Power
		Master

BLOCKDIAGRAM
POWER SUPPLY 20kW/420V DP1-2

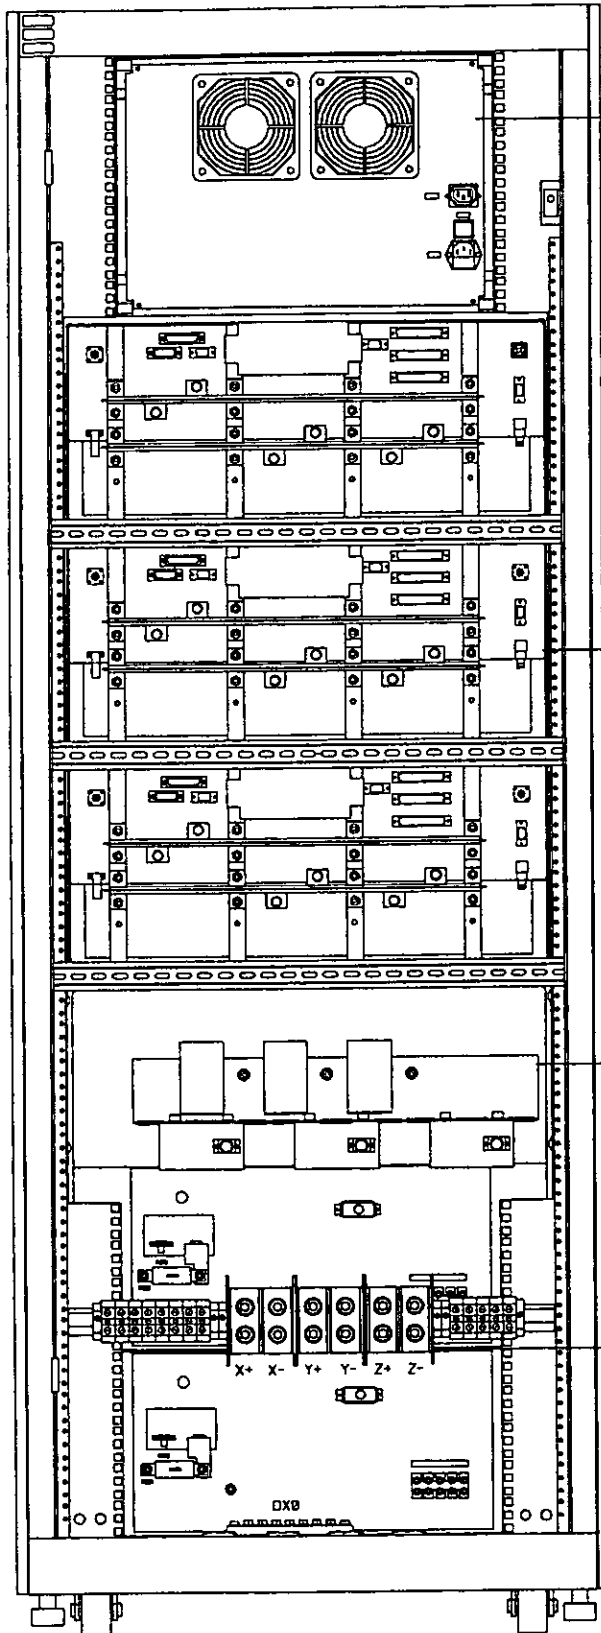


REAR VIEW

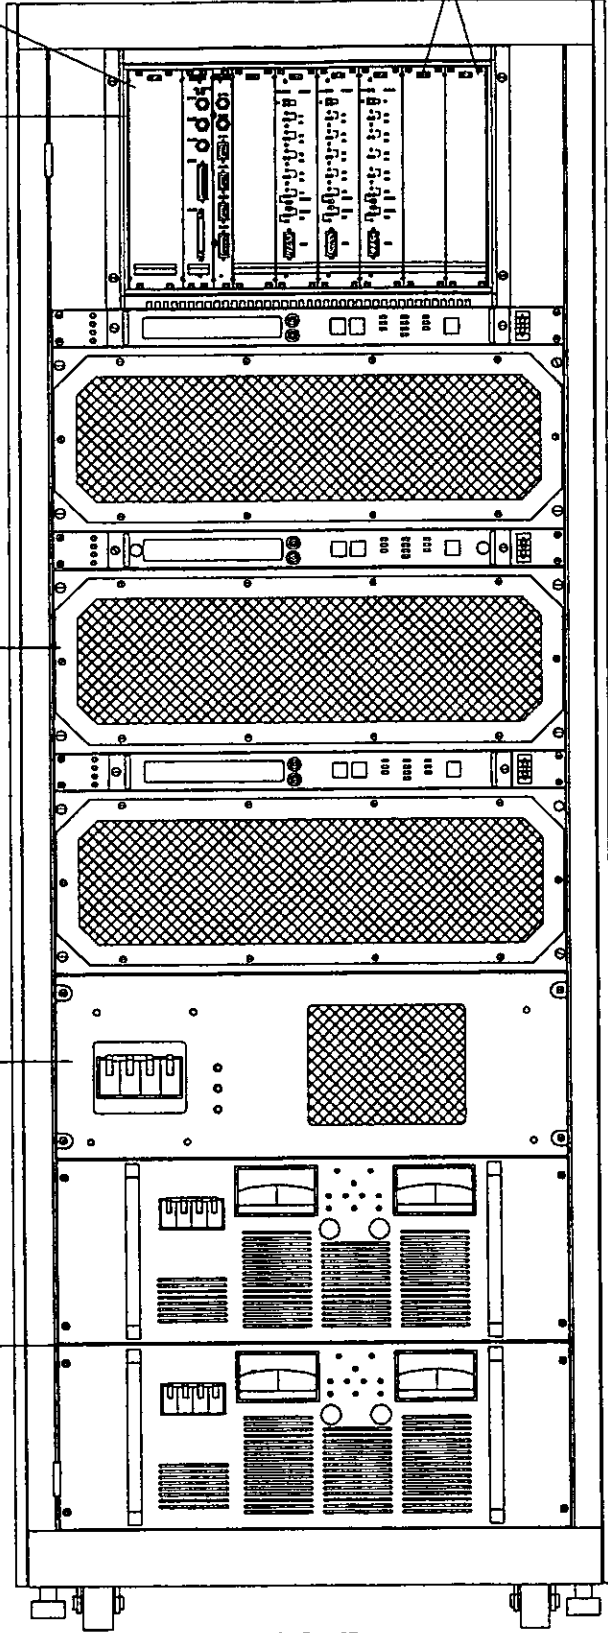


FRONT VIEW

Intera 0.5 T	Intera 1.0 T	Intera 1.5 T
	Power	Power Master

LAY OUT GRADIENT AMPLIFIER CABINET D.

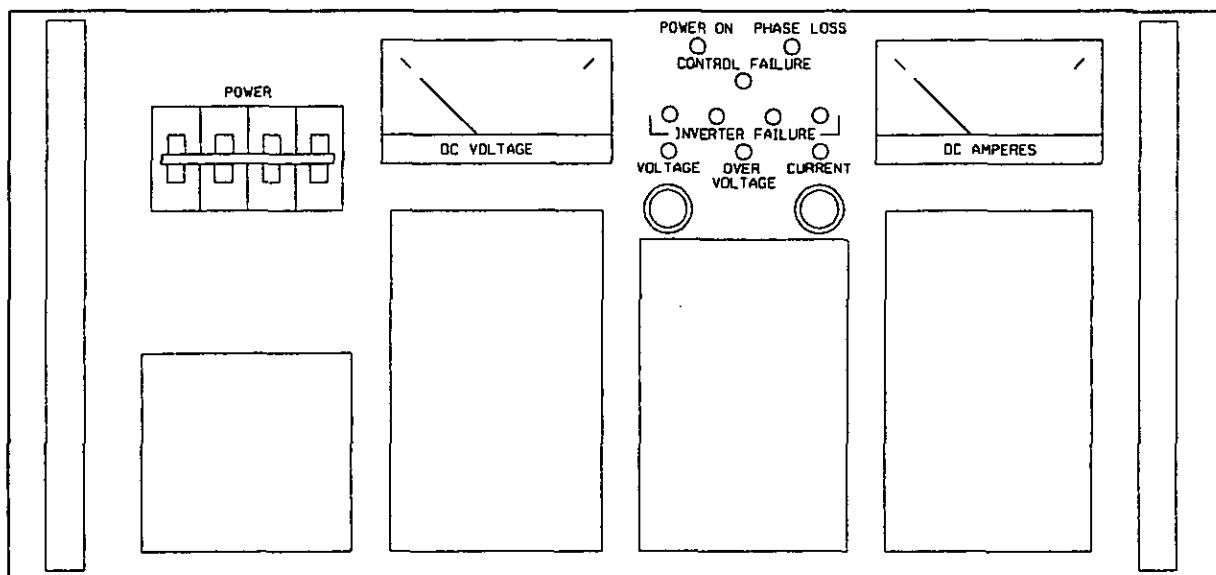


FRONT

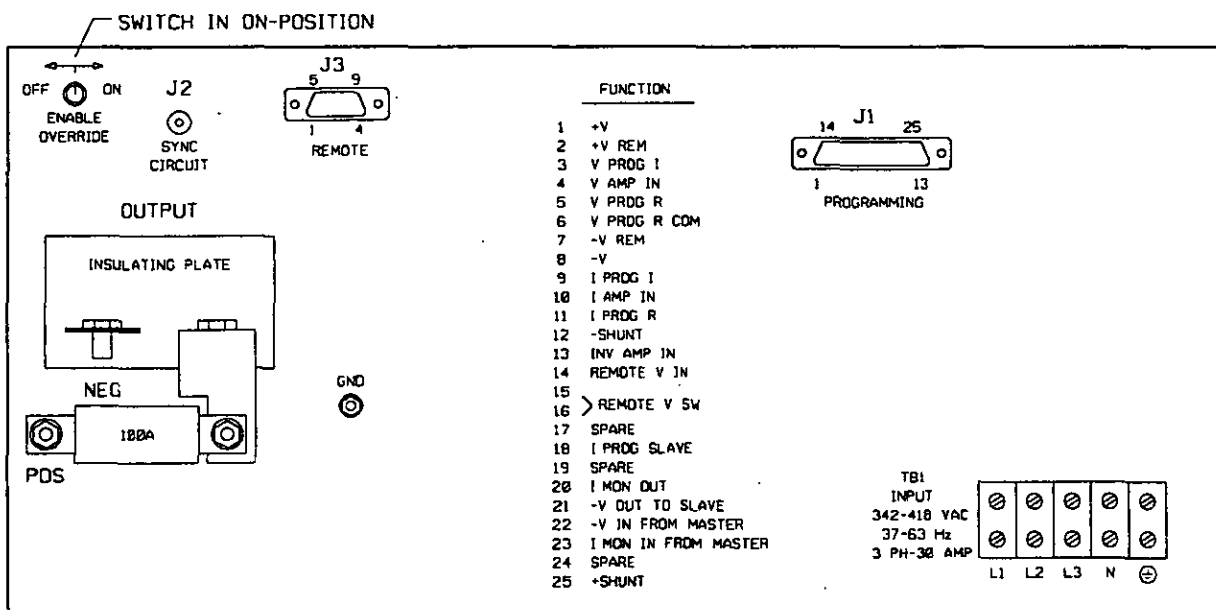

REAR

Intera 0.5 T	Intera 1.0 T	Intera 1.5 T
	Power	Power Master



CONNECTOR LOCATION
POWER SUPPLY 20kW/420V DP1-2

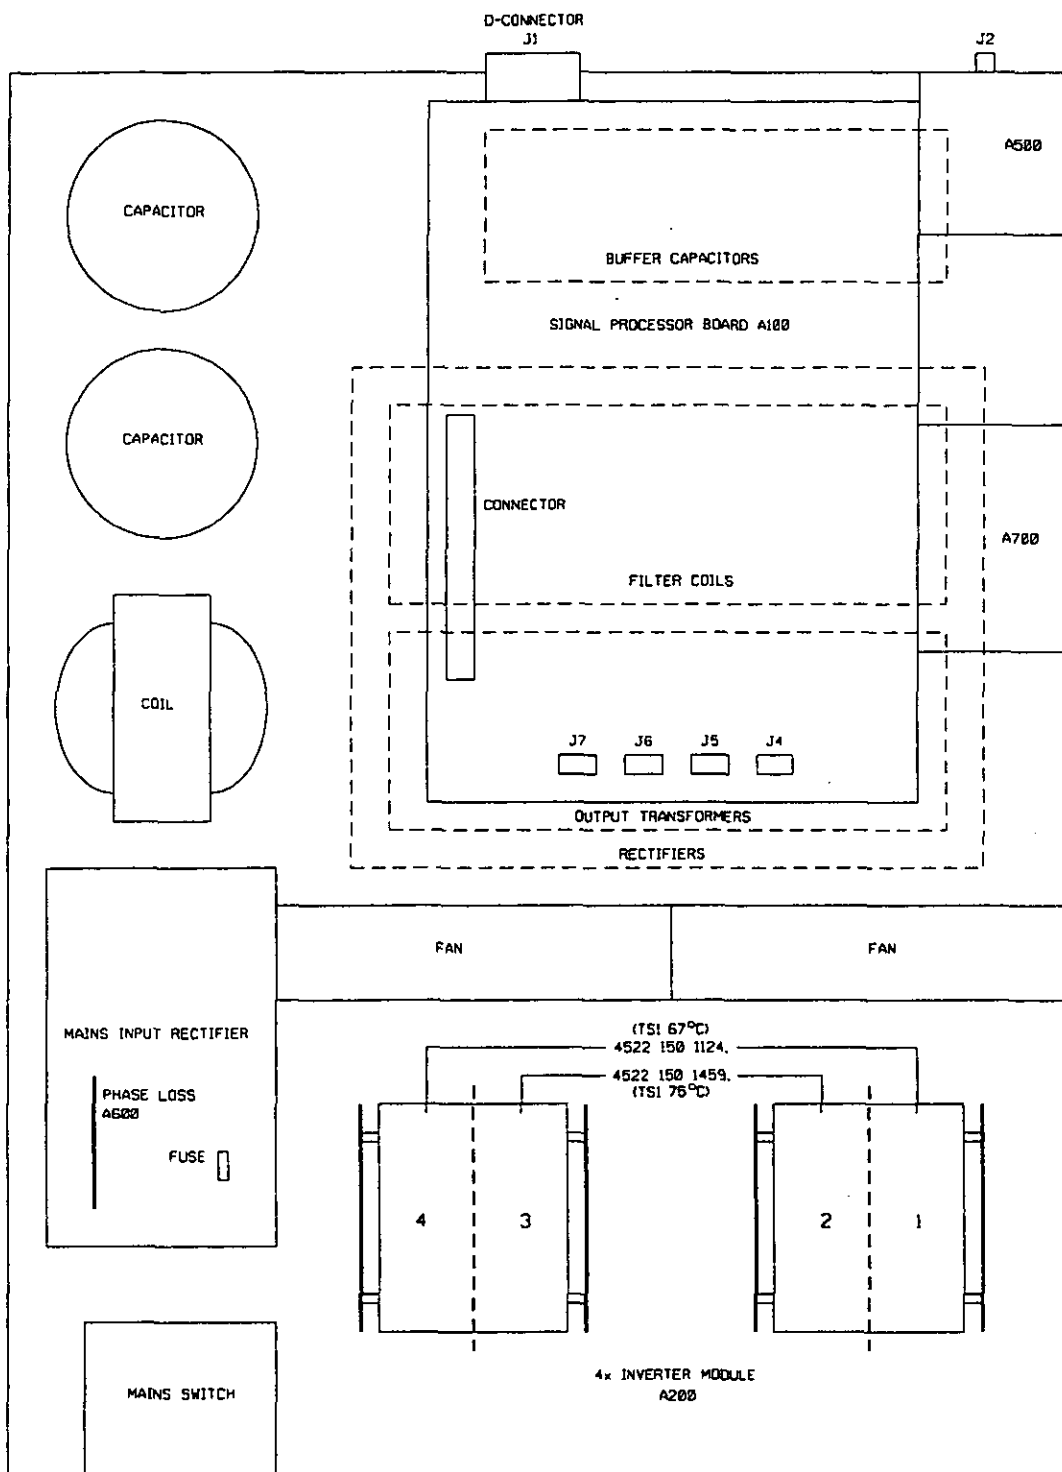


FRONT

Intera 0.5 T	Intera 1.0 T	Intera 1.5 T
	Power	Power Master


TOP VIEW
POWER SUPPLY 20kW/420V DP1-2

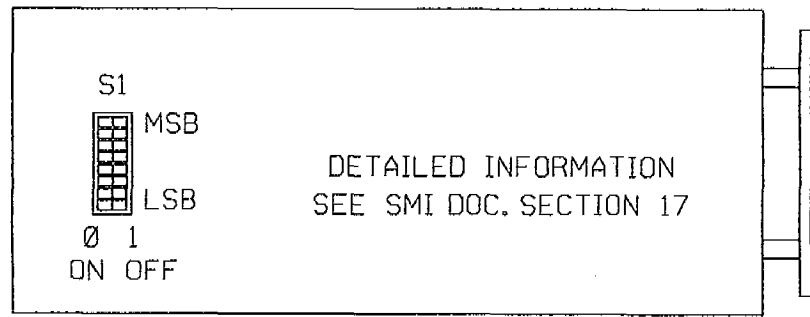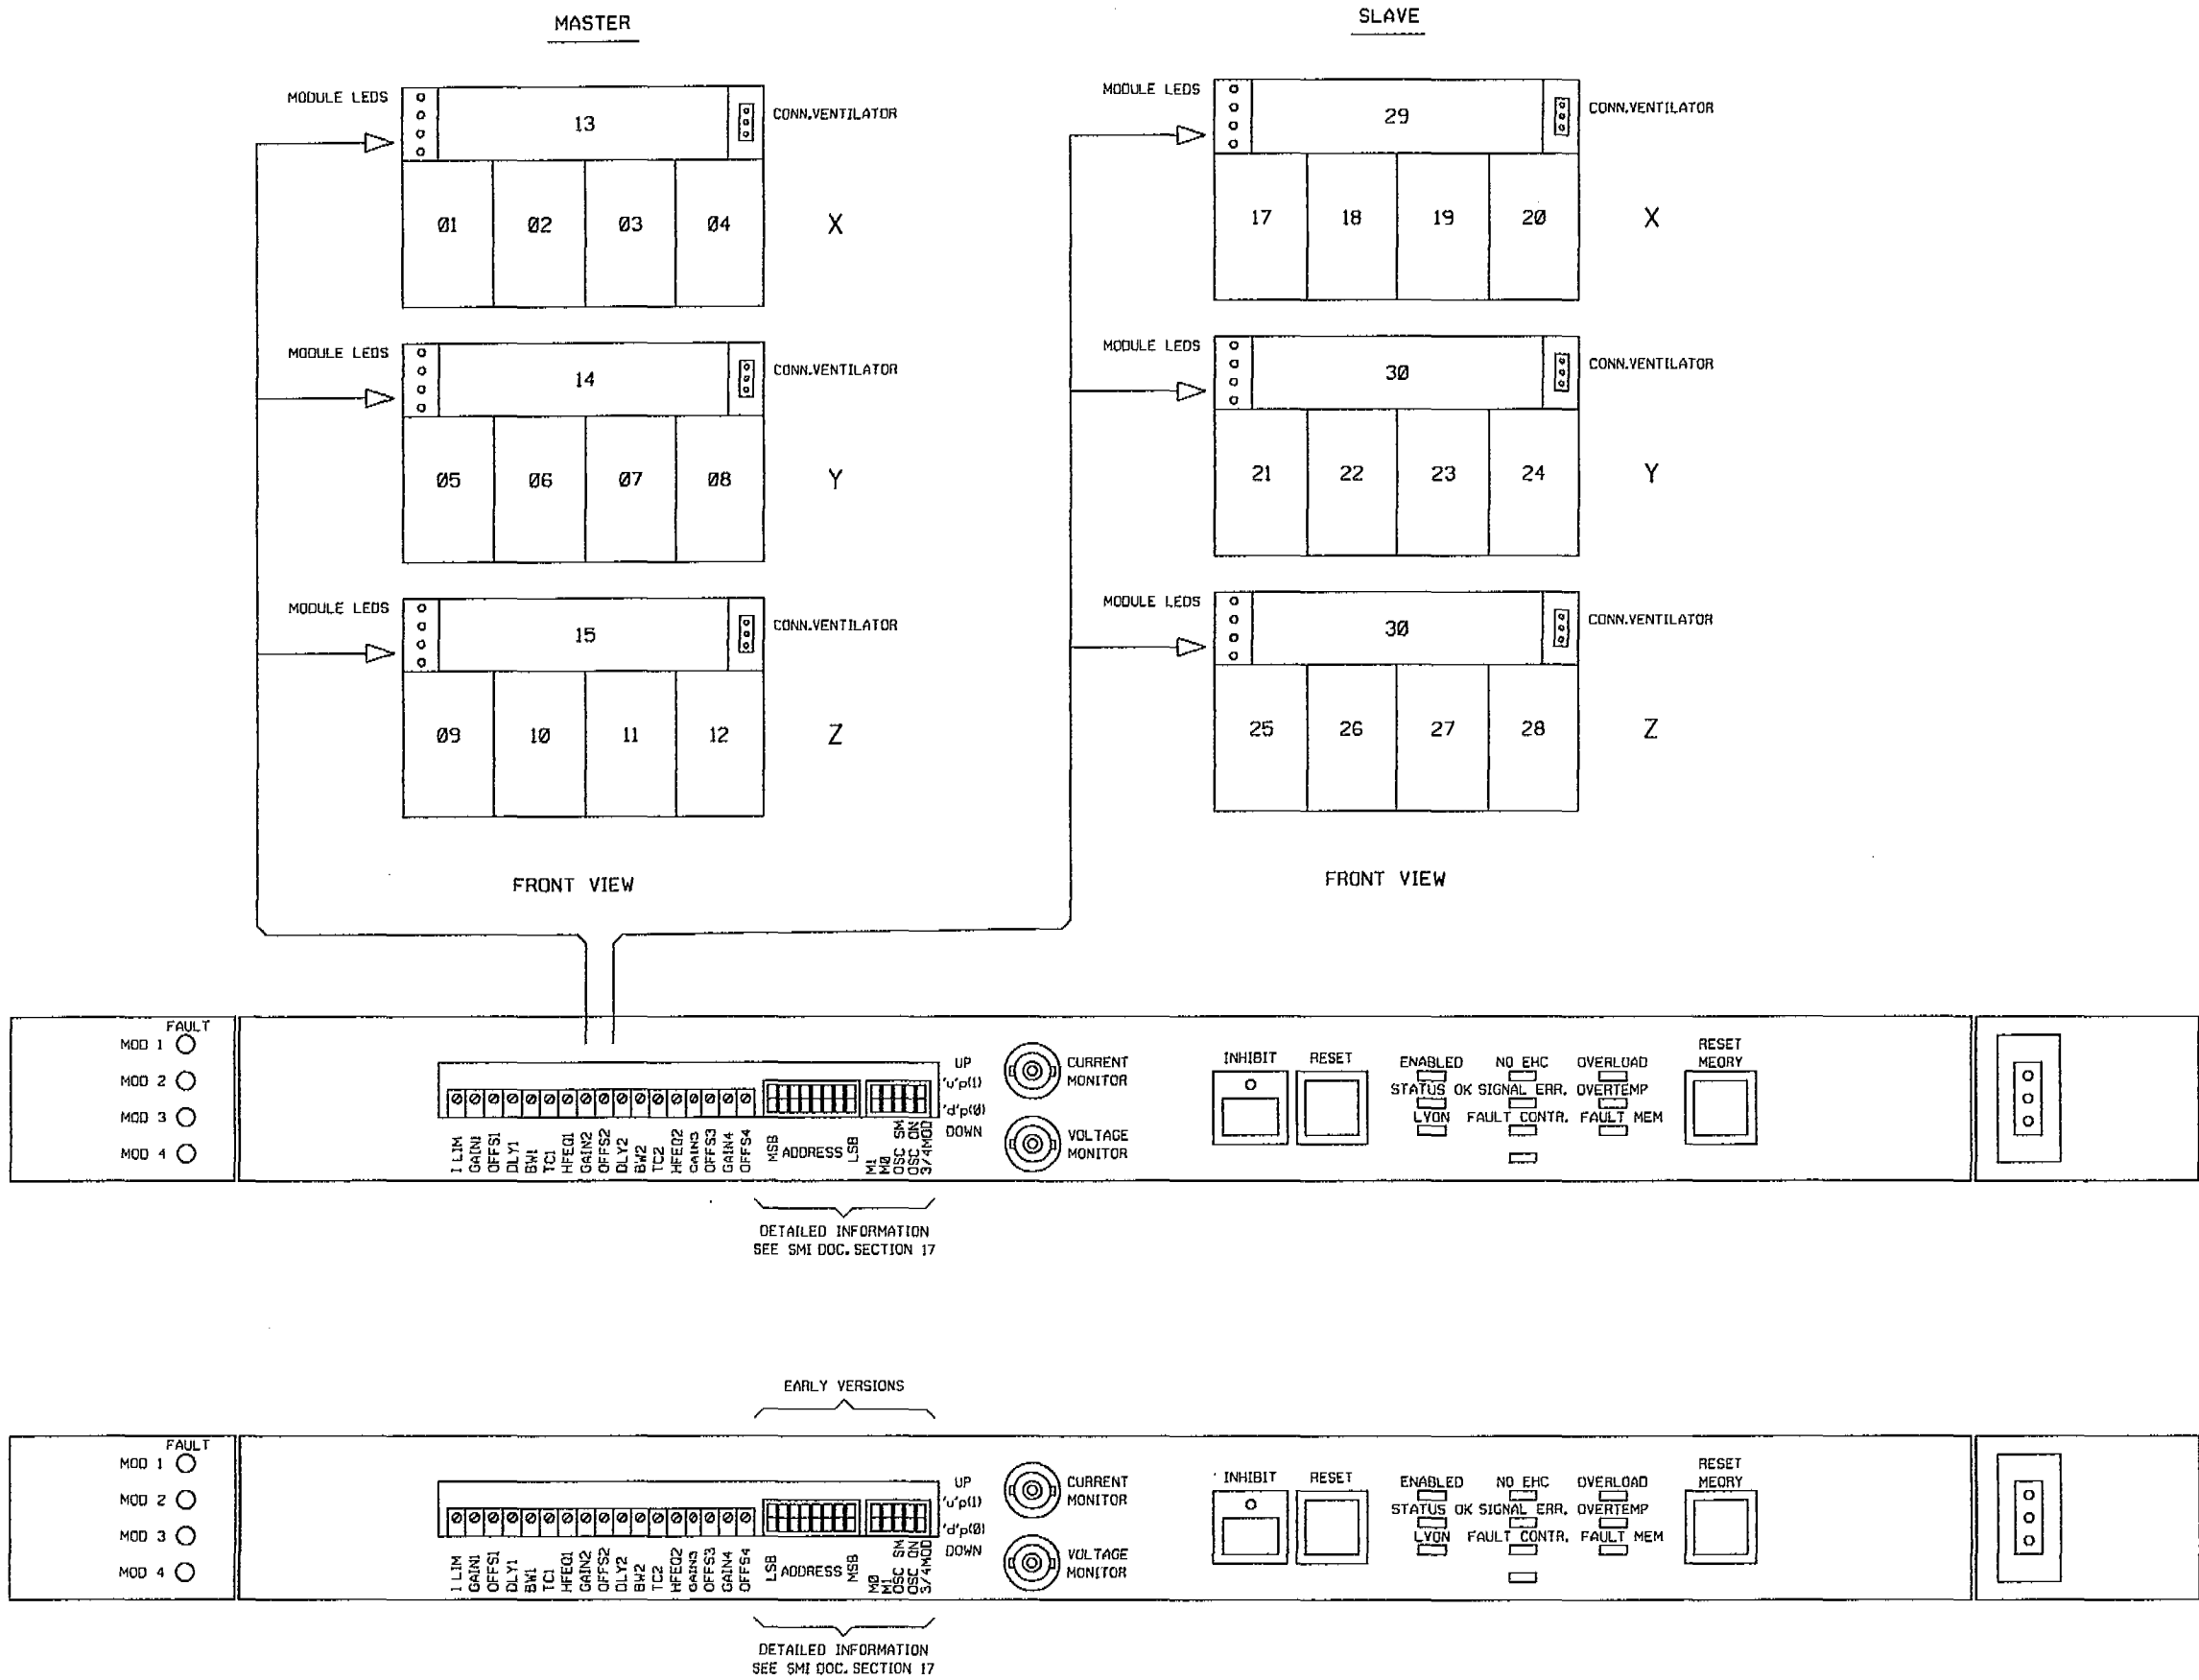

LEFT VIEW






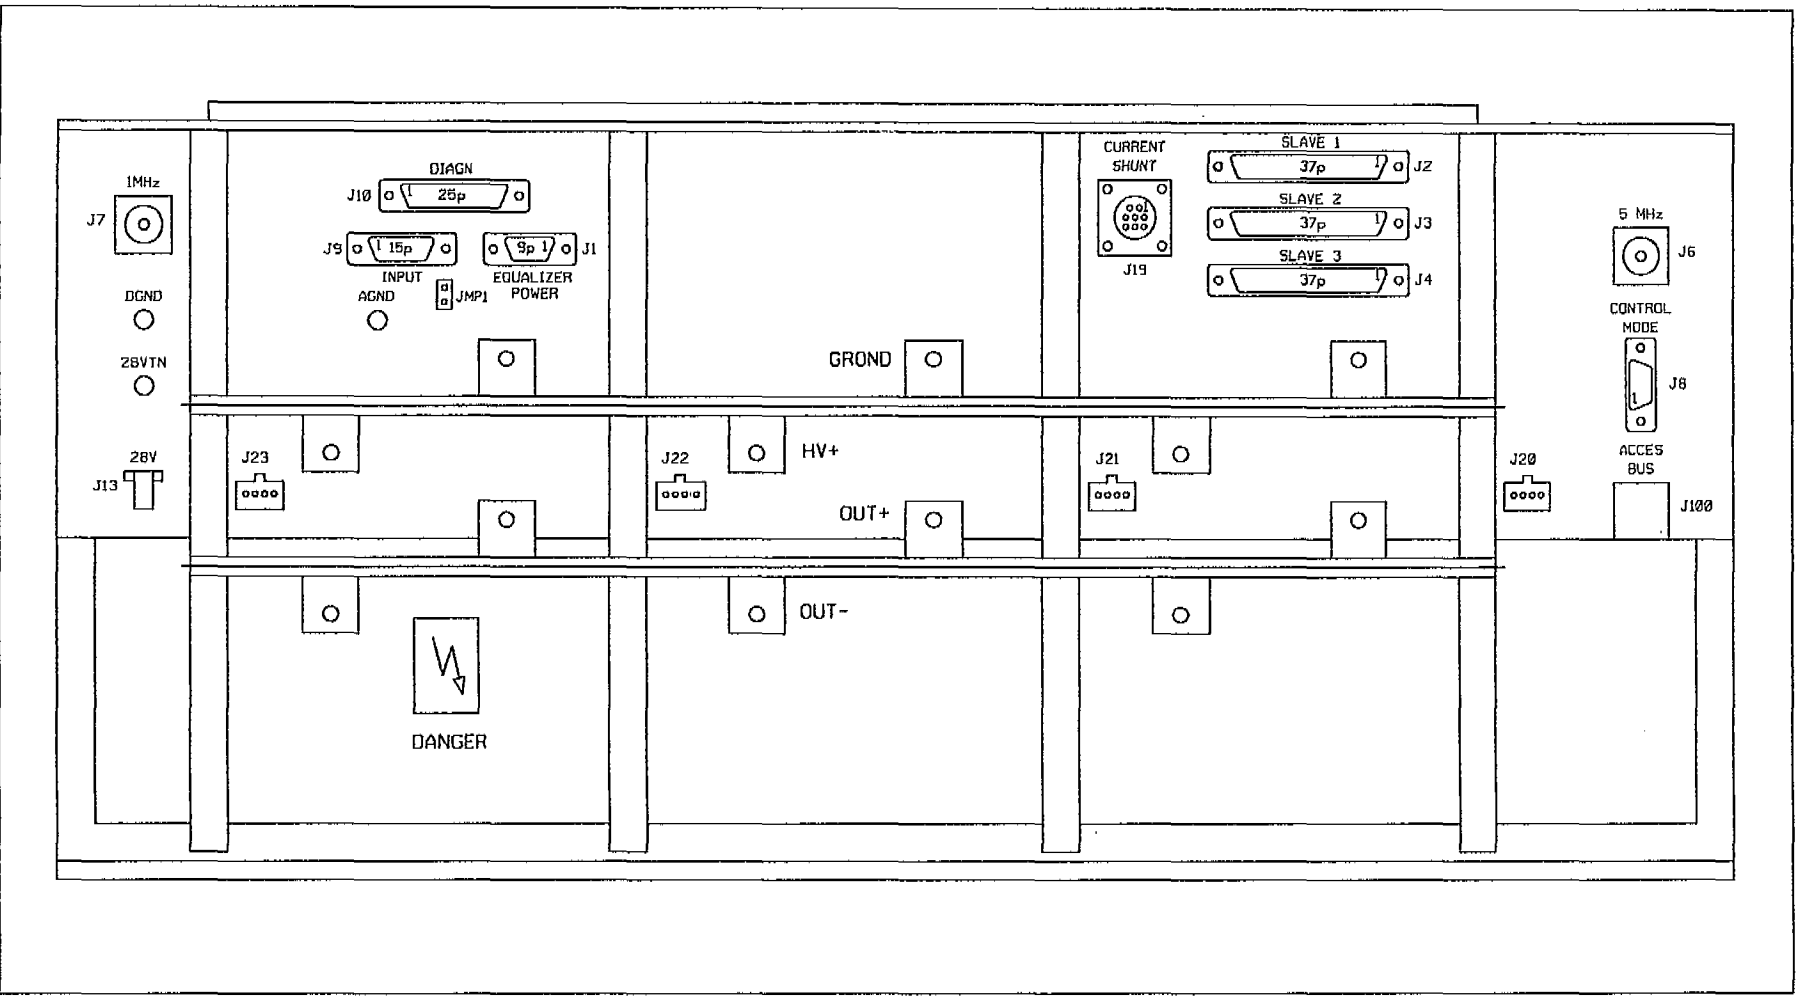


REAR VIEW

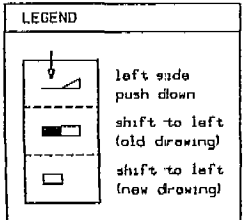


Intera 0.5 T	Intera 1.0 T	Intera 1.5 T
	Power	Power Master


CONN. LOCATION & JUMPER SETT.
274 AMPLIFIER DM.

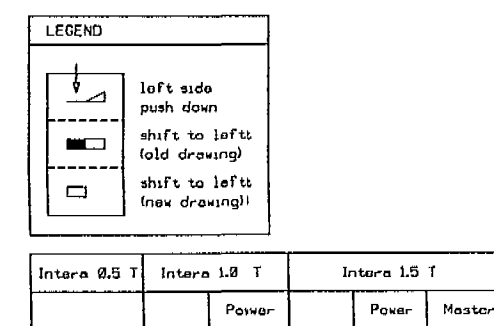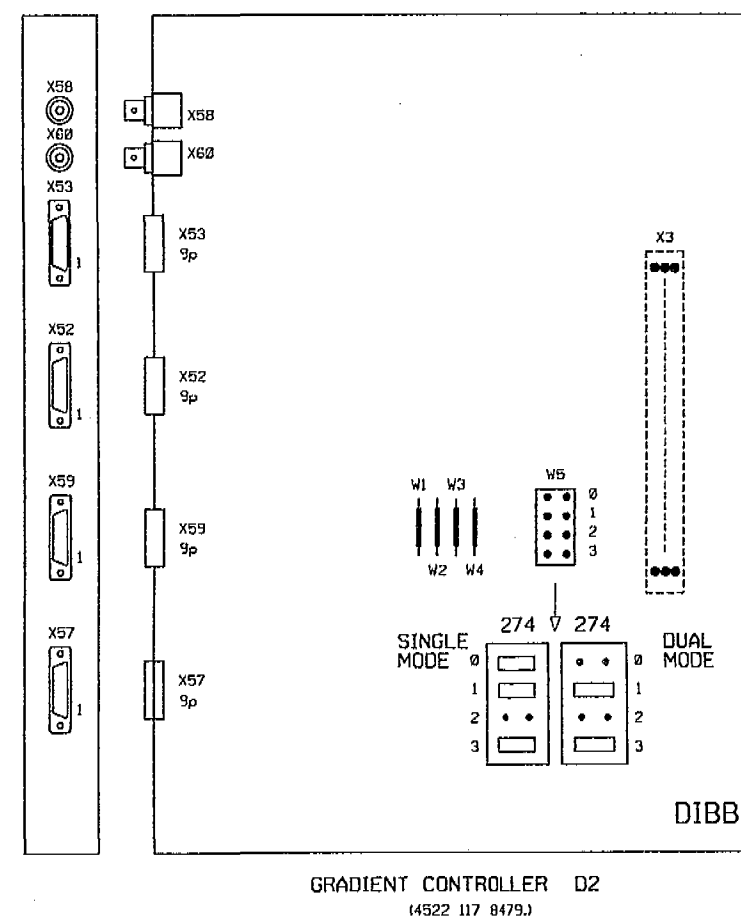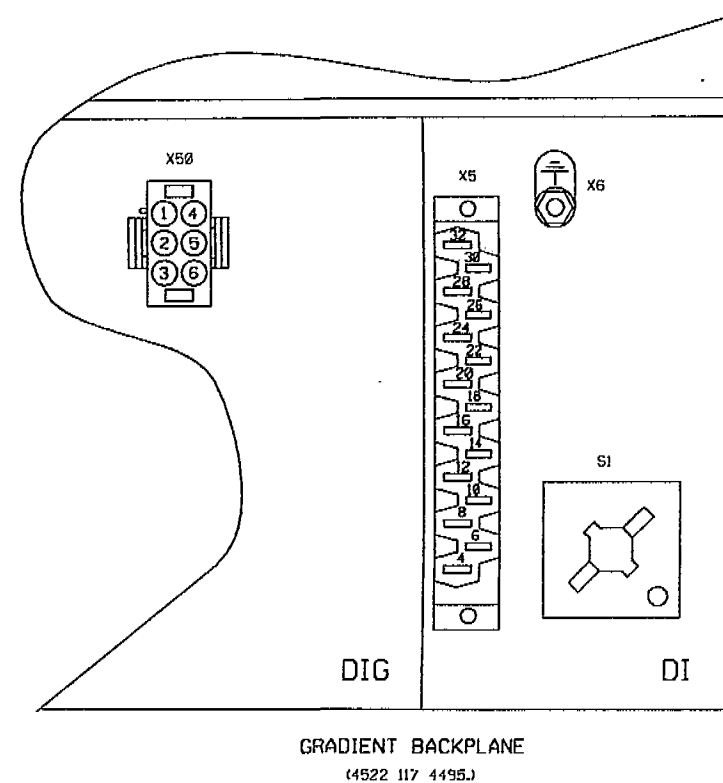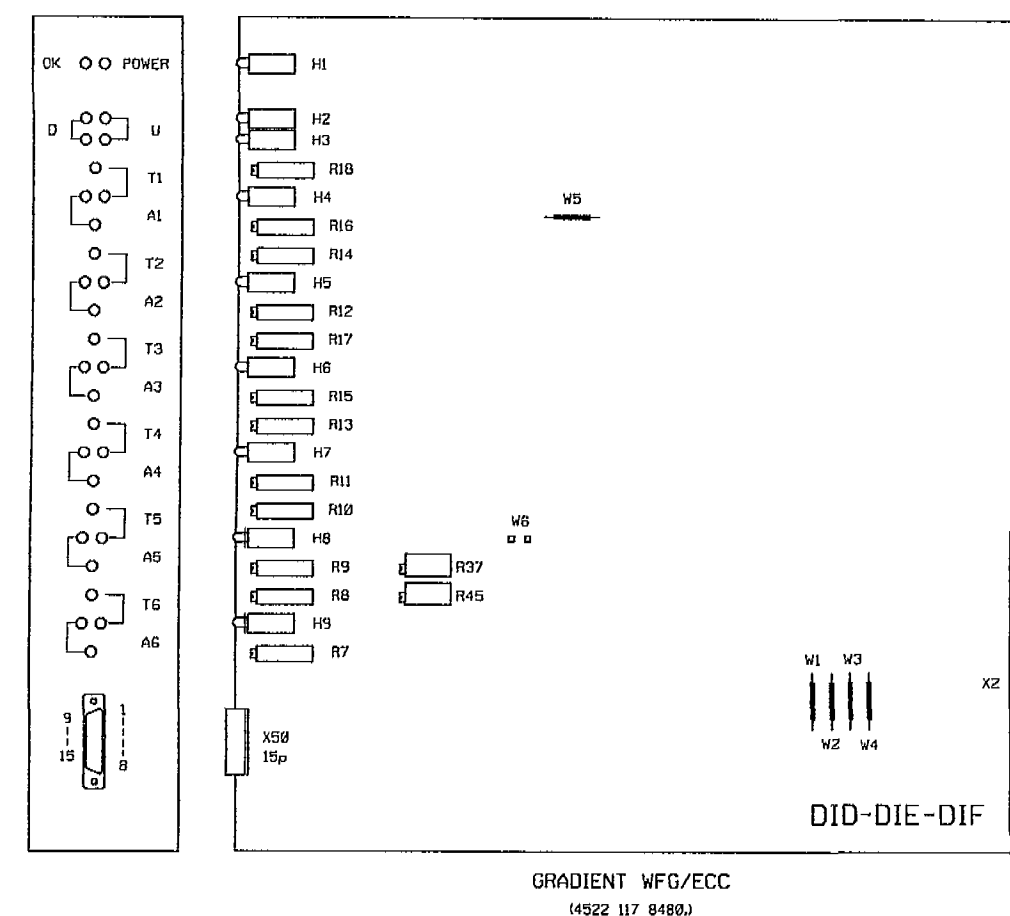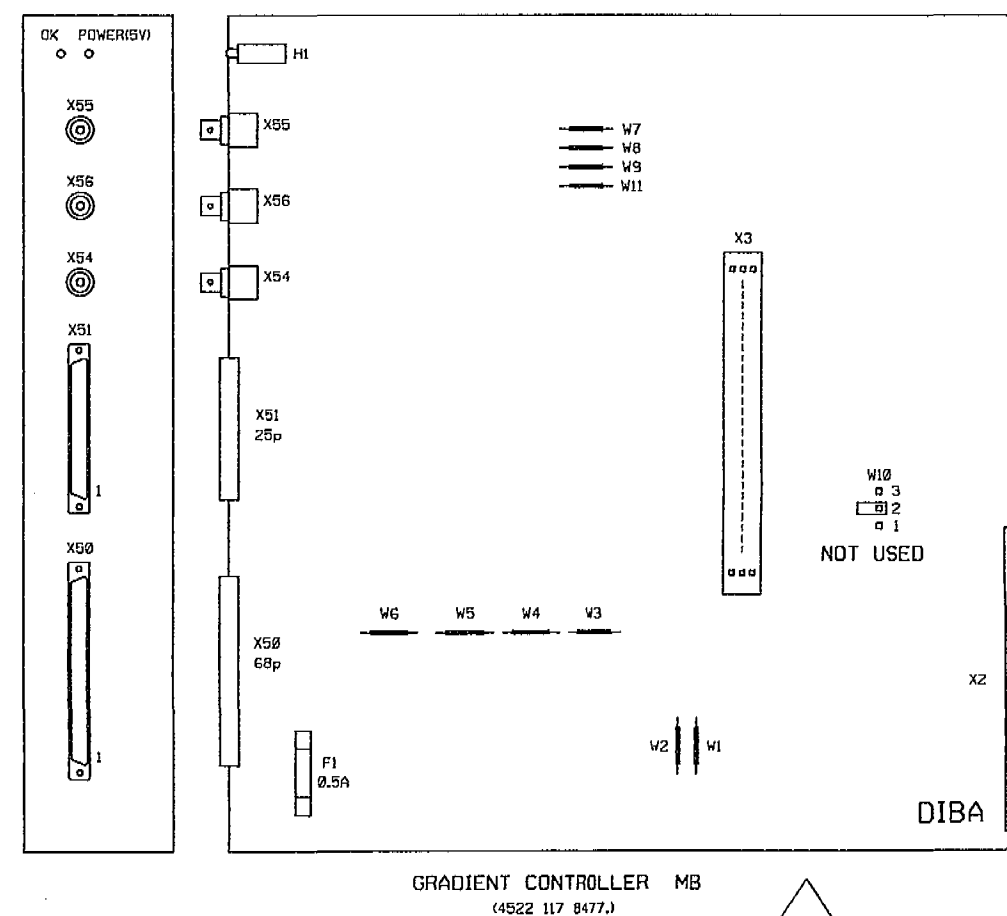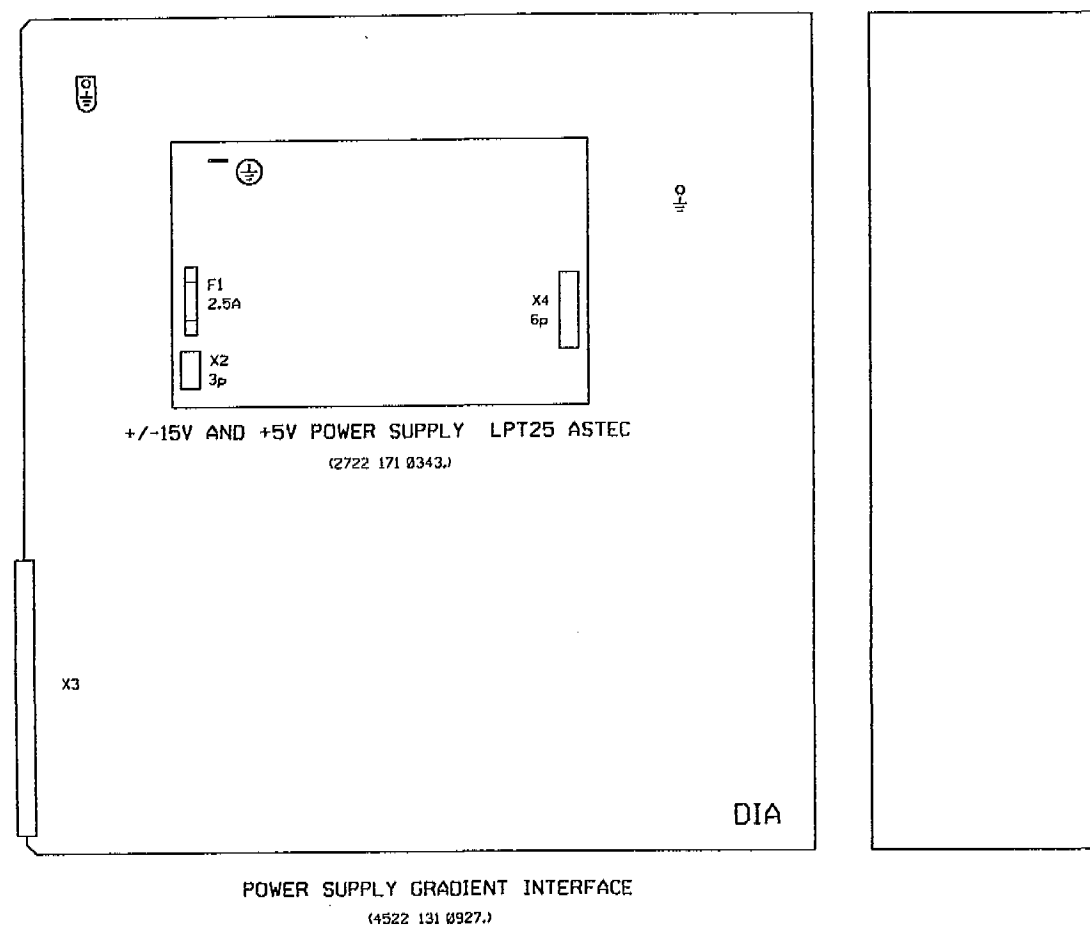

JUMPER SETTING
GRADIENT INTERFACE DI.

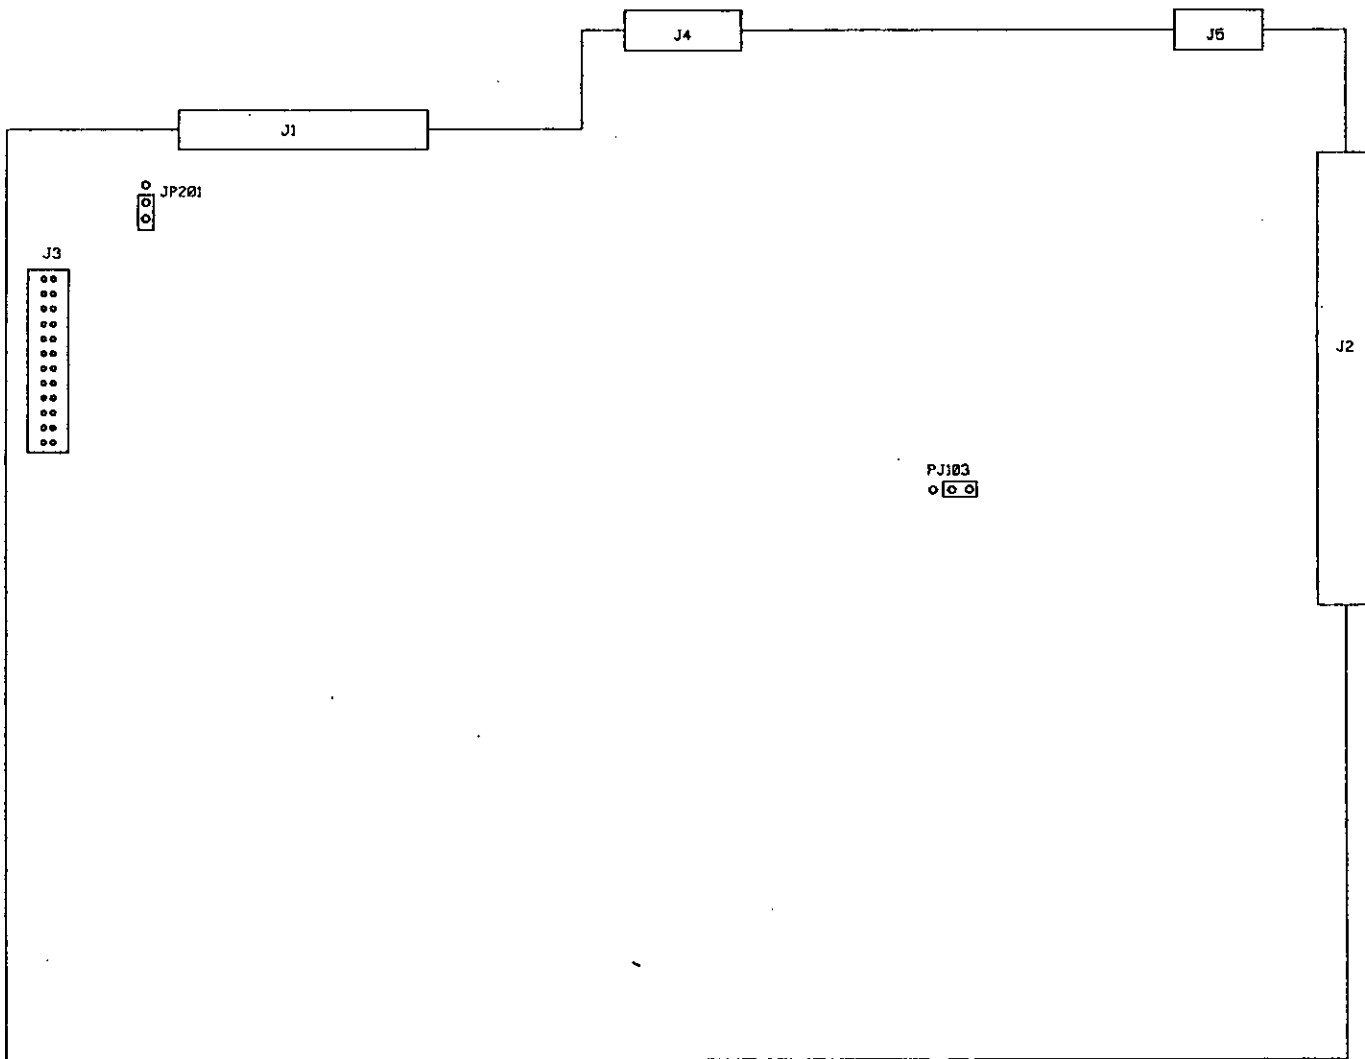

VOLTAGE CONTROLLER

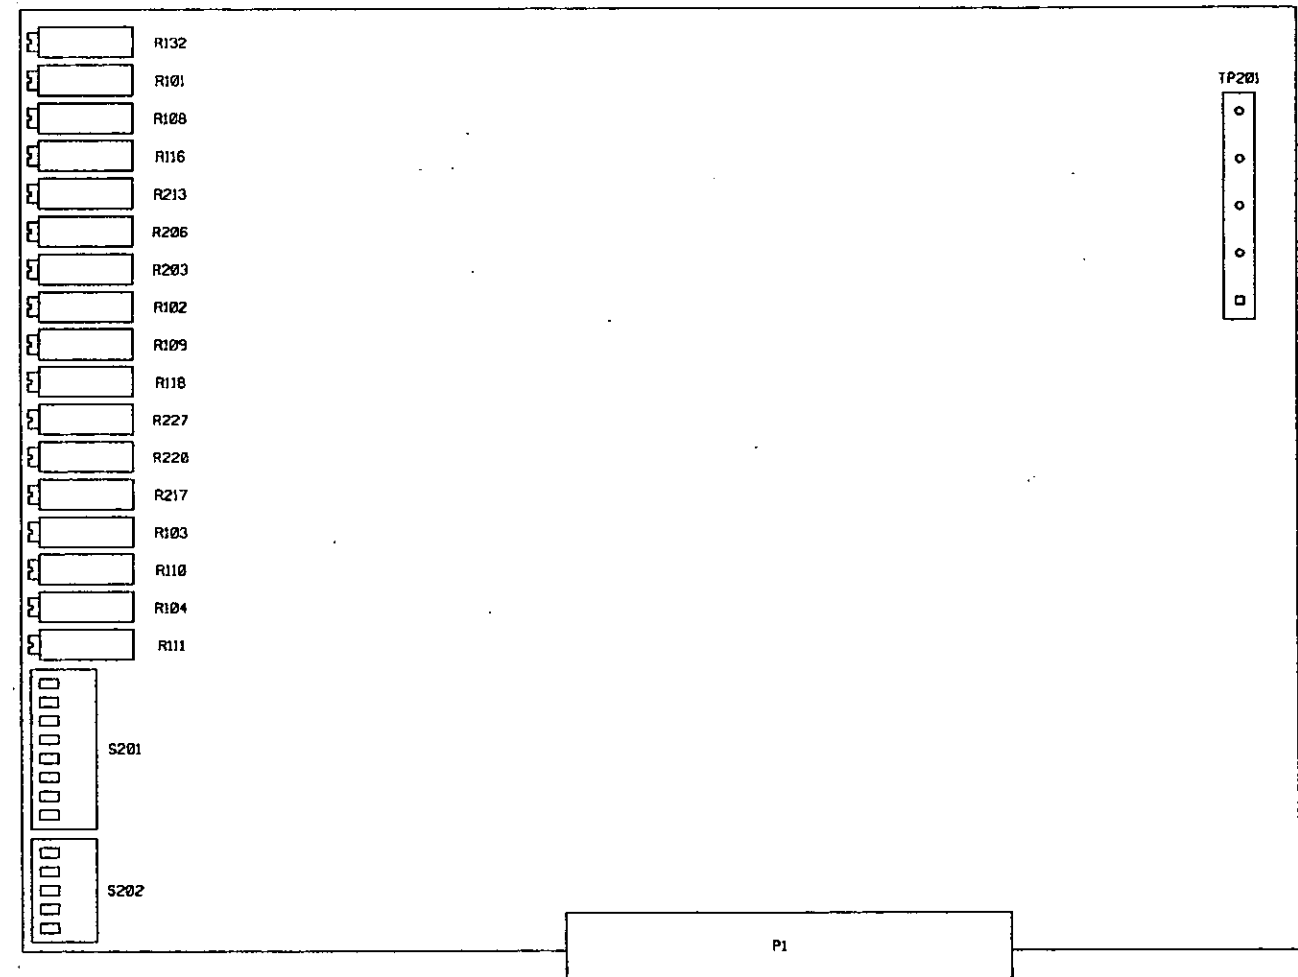


CURRENT CONTROLLER

LEGEND


	left side push down
	shift to left (old drawing)
	shift to left (new drawing)

Intera 0.5 T	Intera 1.0 T	Intera 1.5 T
	Power	Power Master

JUMPER SETTING
274 CONTROLLER

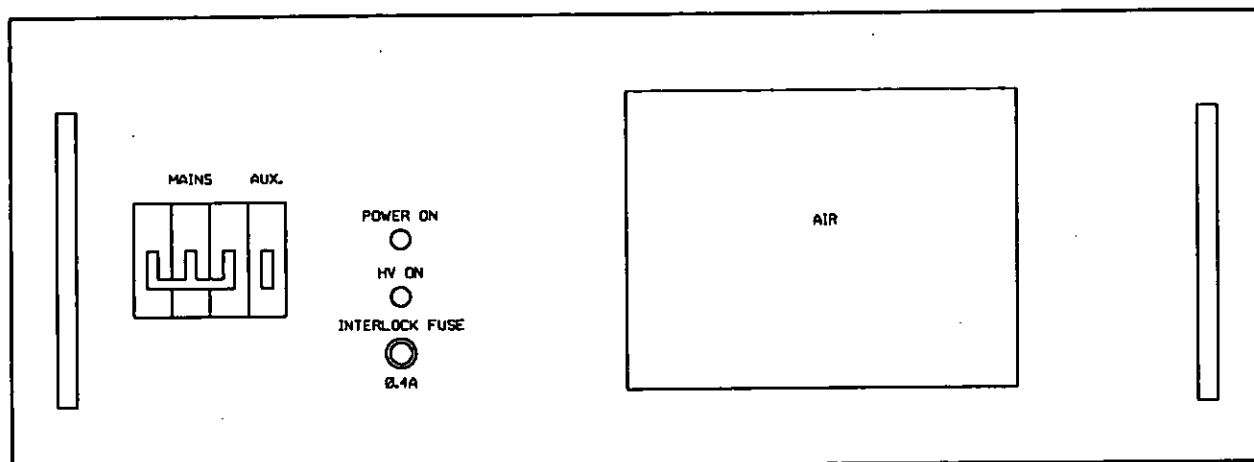


FRONT VIEW

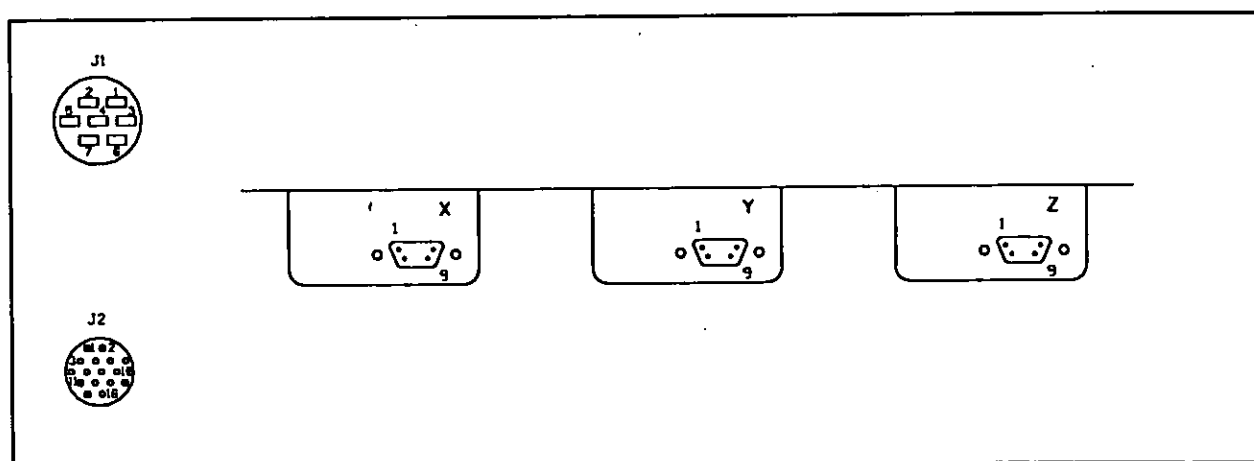

REAR VIEW

Intera 0.5 T	Intera 1.0 T	Intera 1.5 T
	Power	Power Master


CONNECTOR LOCATION
POWER SUPPLY DS

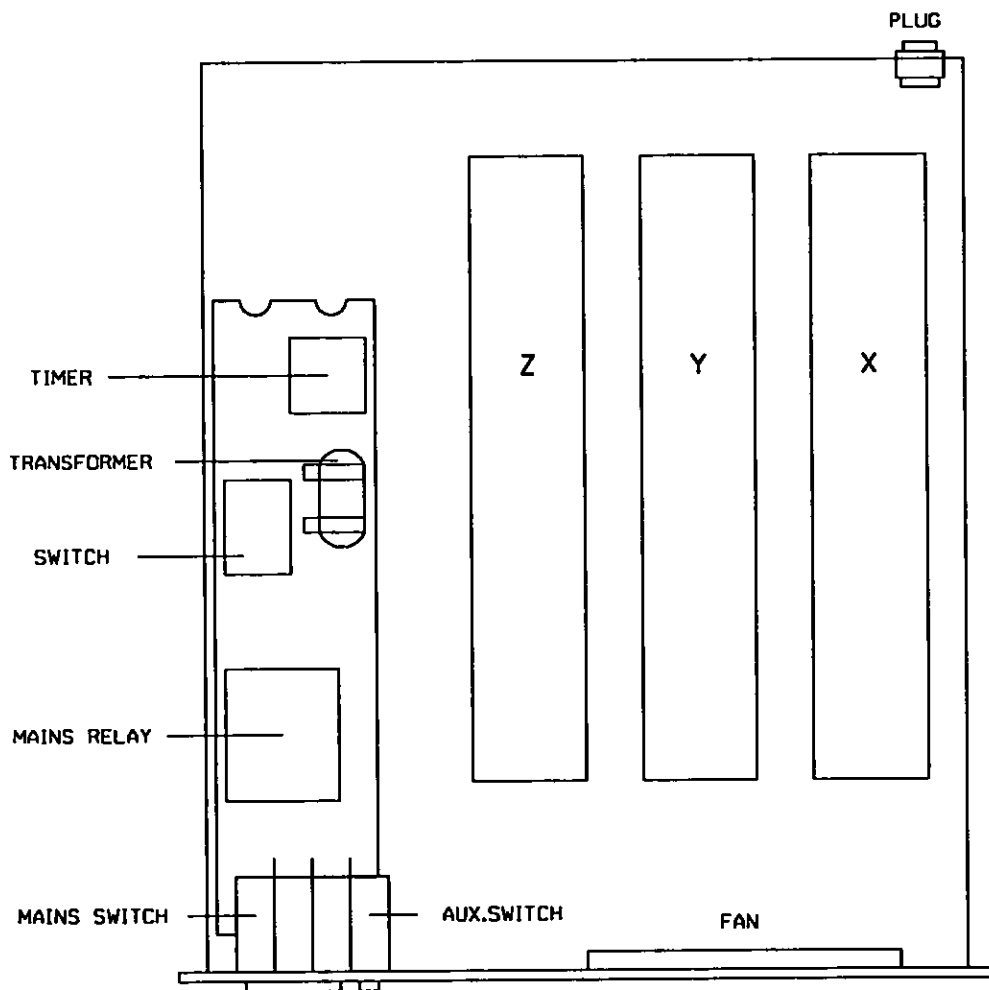

TOP VIEW


Intera 0.5 T	Intera 1.8 T	Intera 1.5 T
	Power	Power Master

TOP VIEW
POWER SUPPLY DS

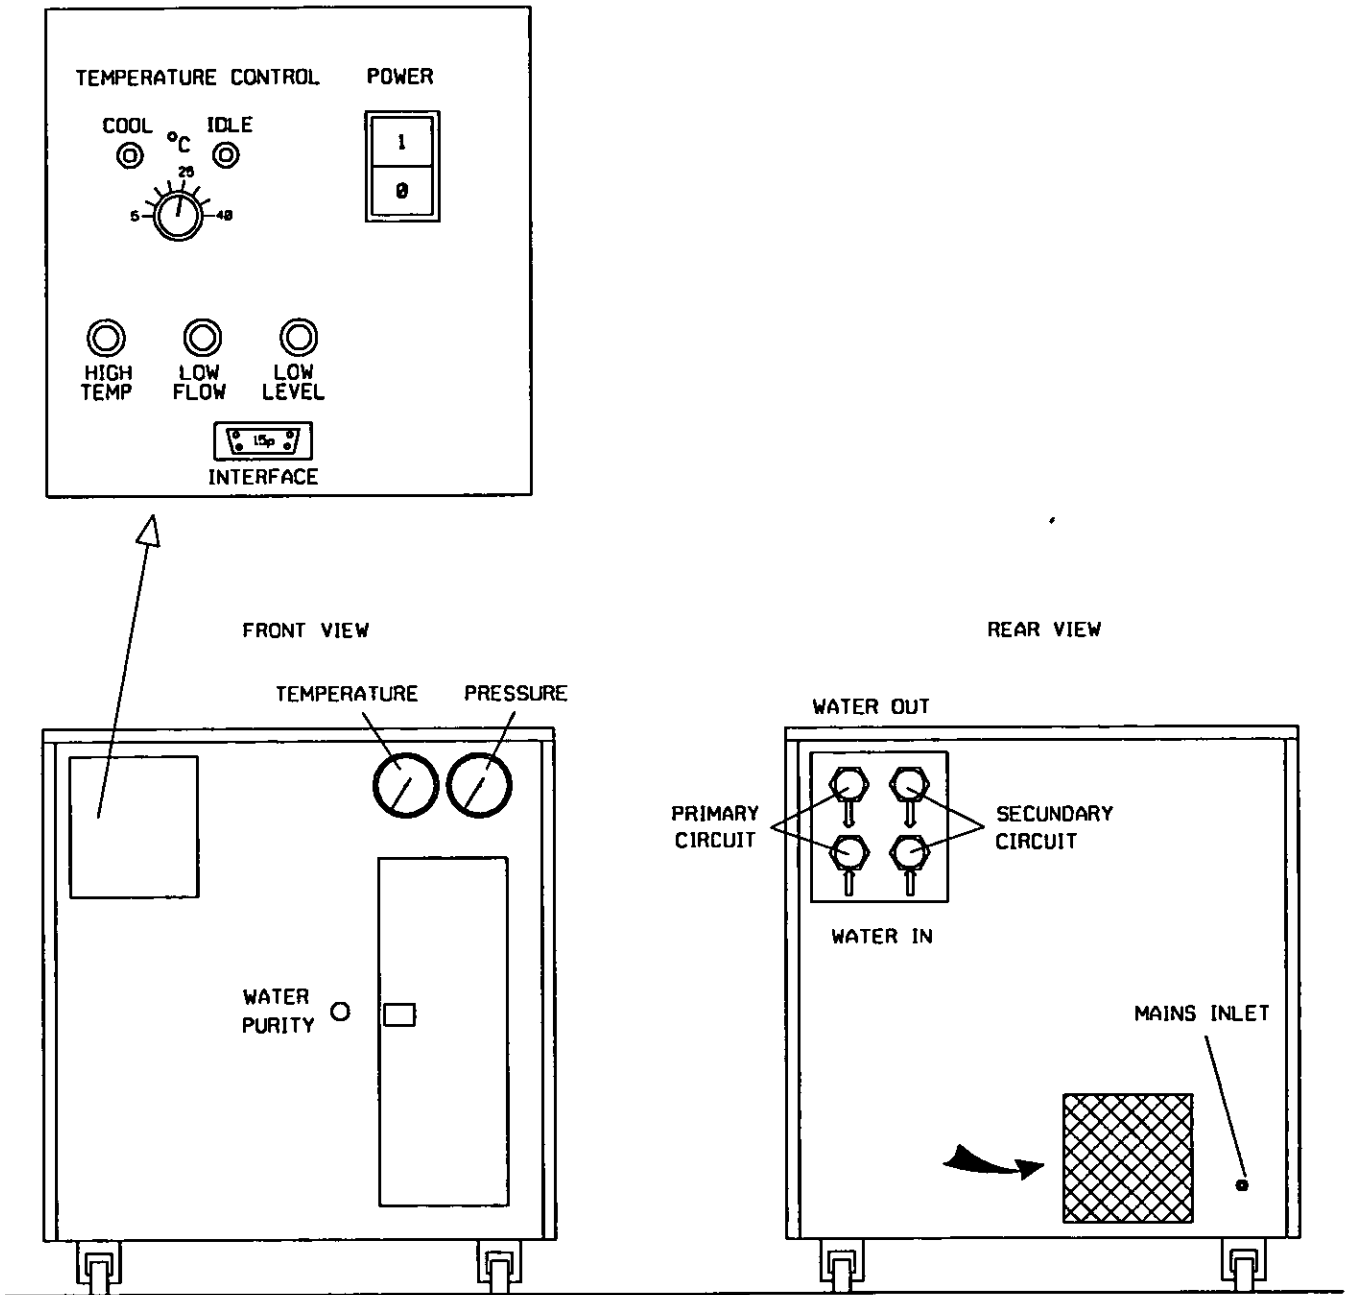

Intera 0.5 T	Intera 1.5 T	Intera 1.5 T
	Power	Power Master

CONNECTOR LOCATION
HEAT EXCHANGER AH

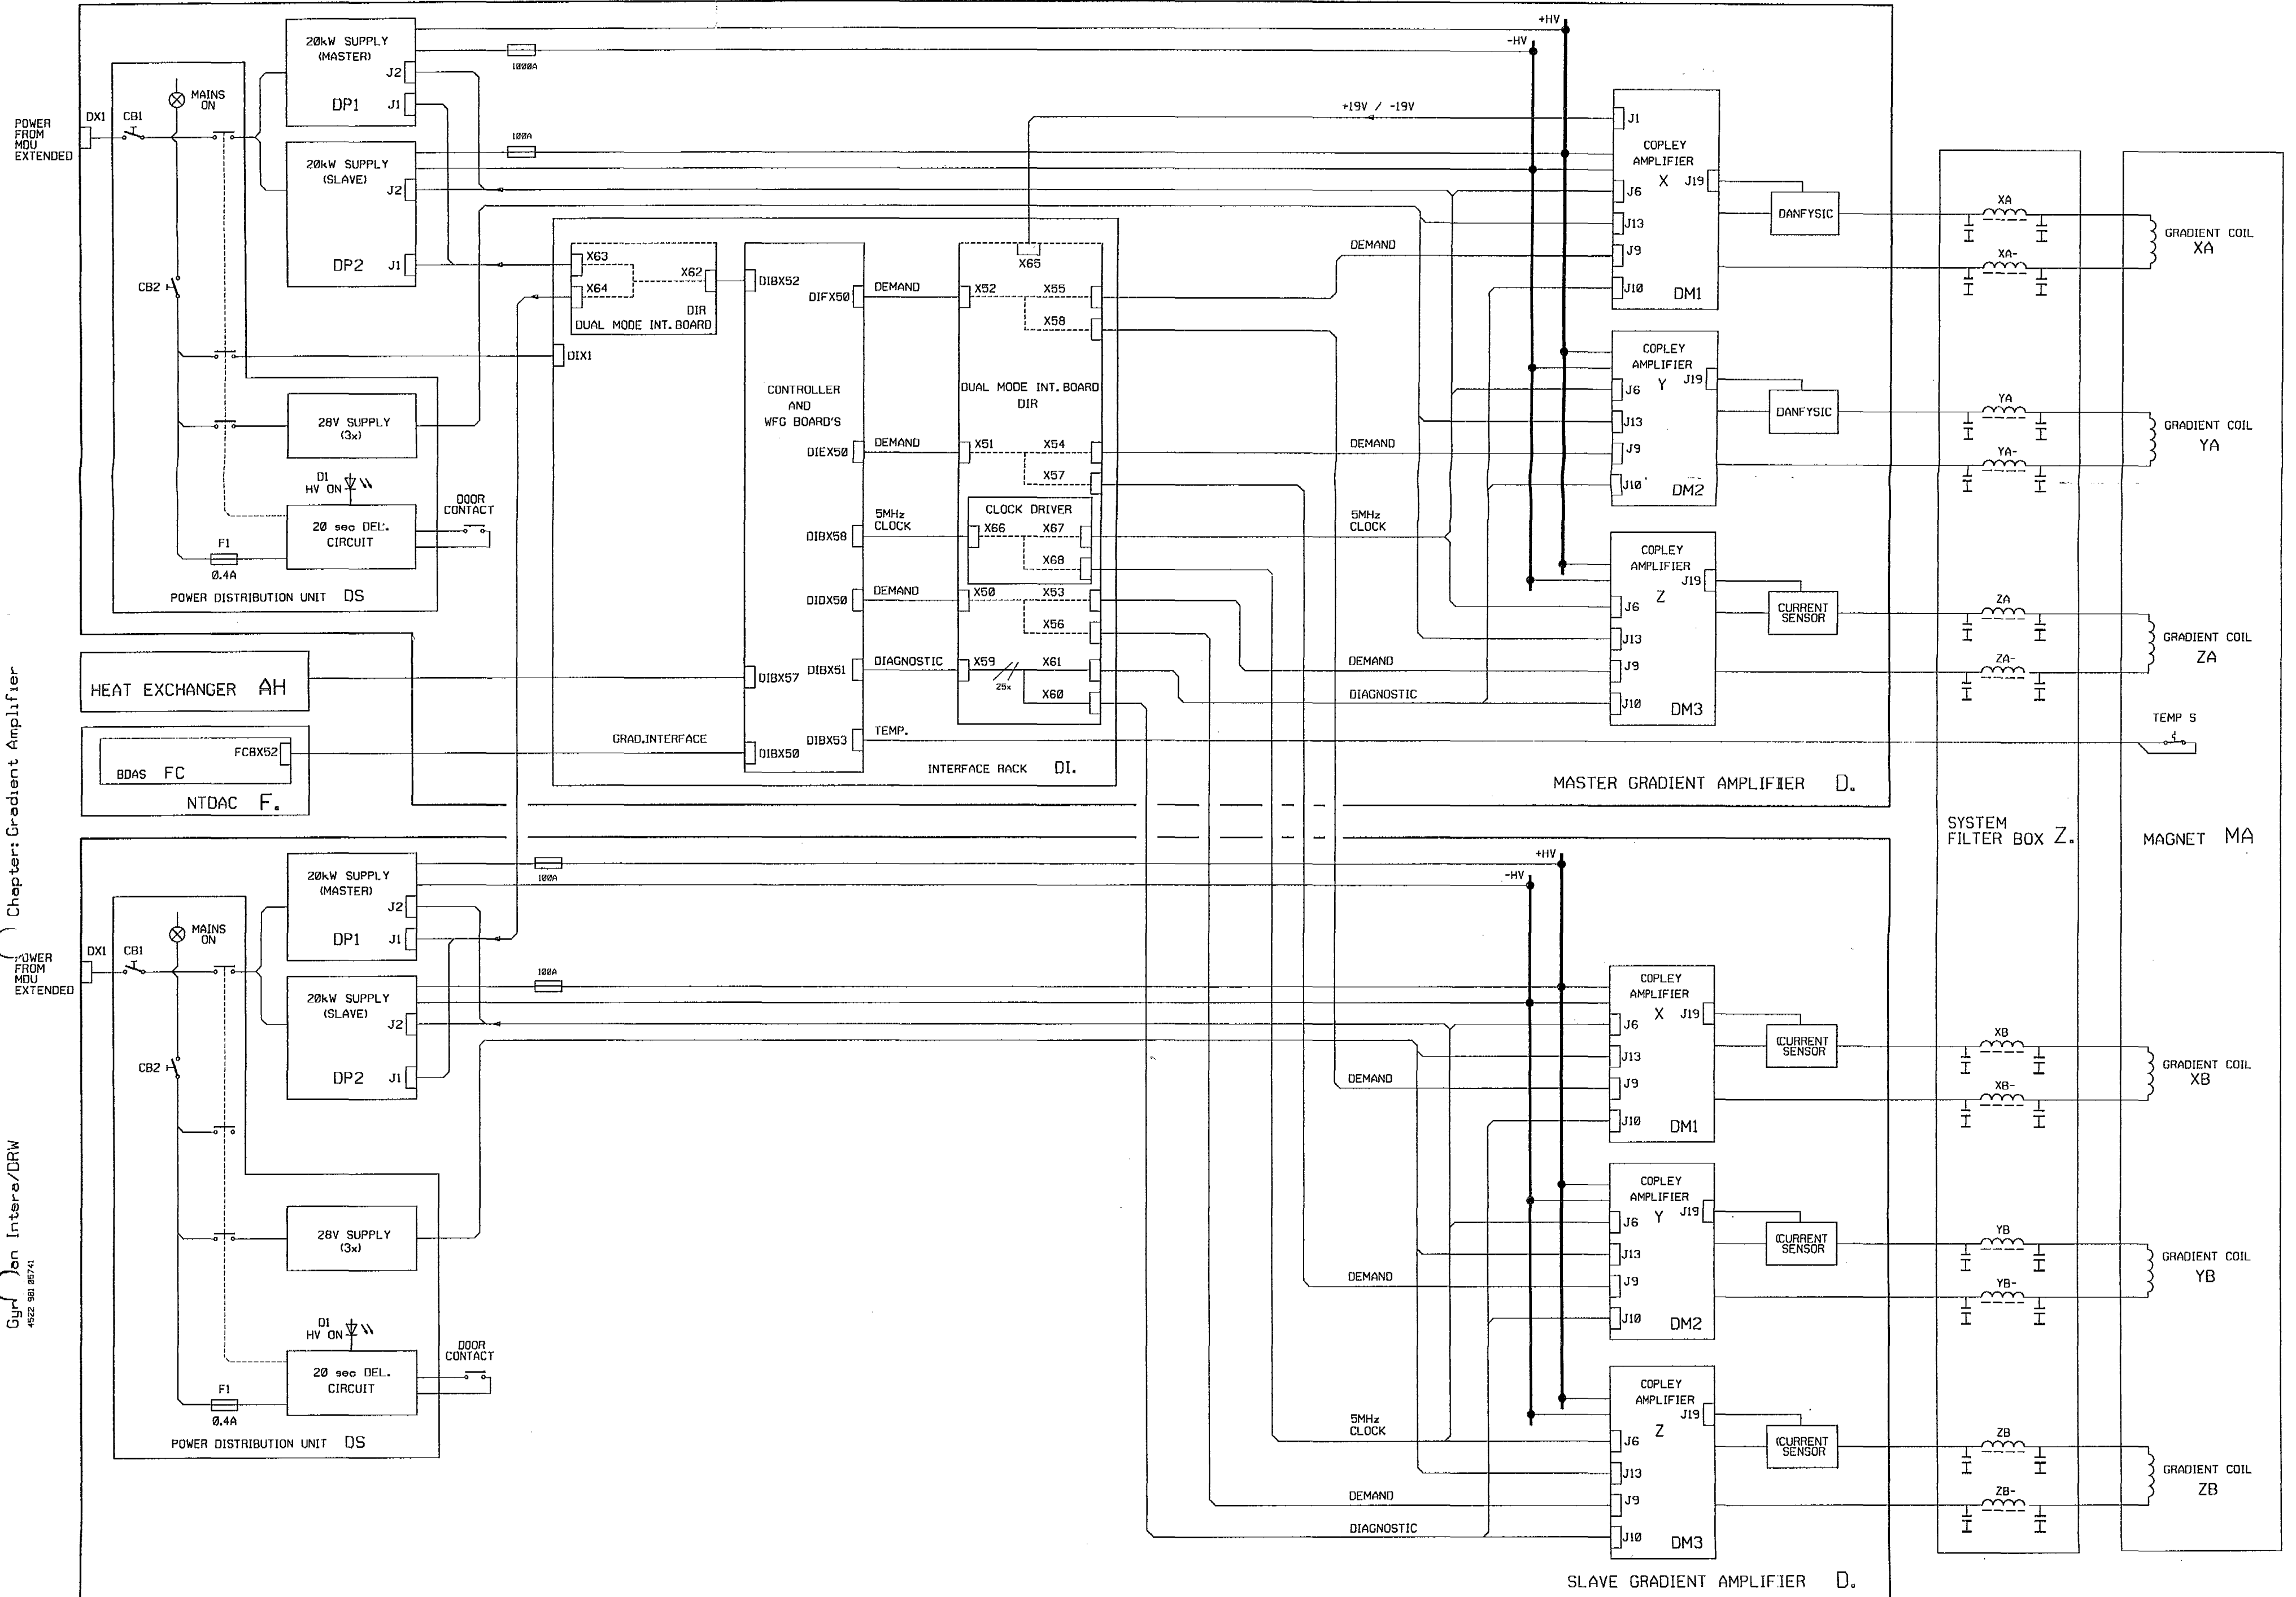


BLOCKDIAGRAM
GRADIENT SYSTEM

Intera 0.5 T	Intera 1.0 T	Intera 1.5 T
		Master

MR/Intera-DRW-71


99.0

Z1-6.3.1

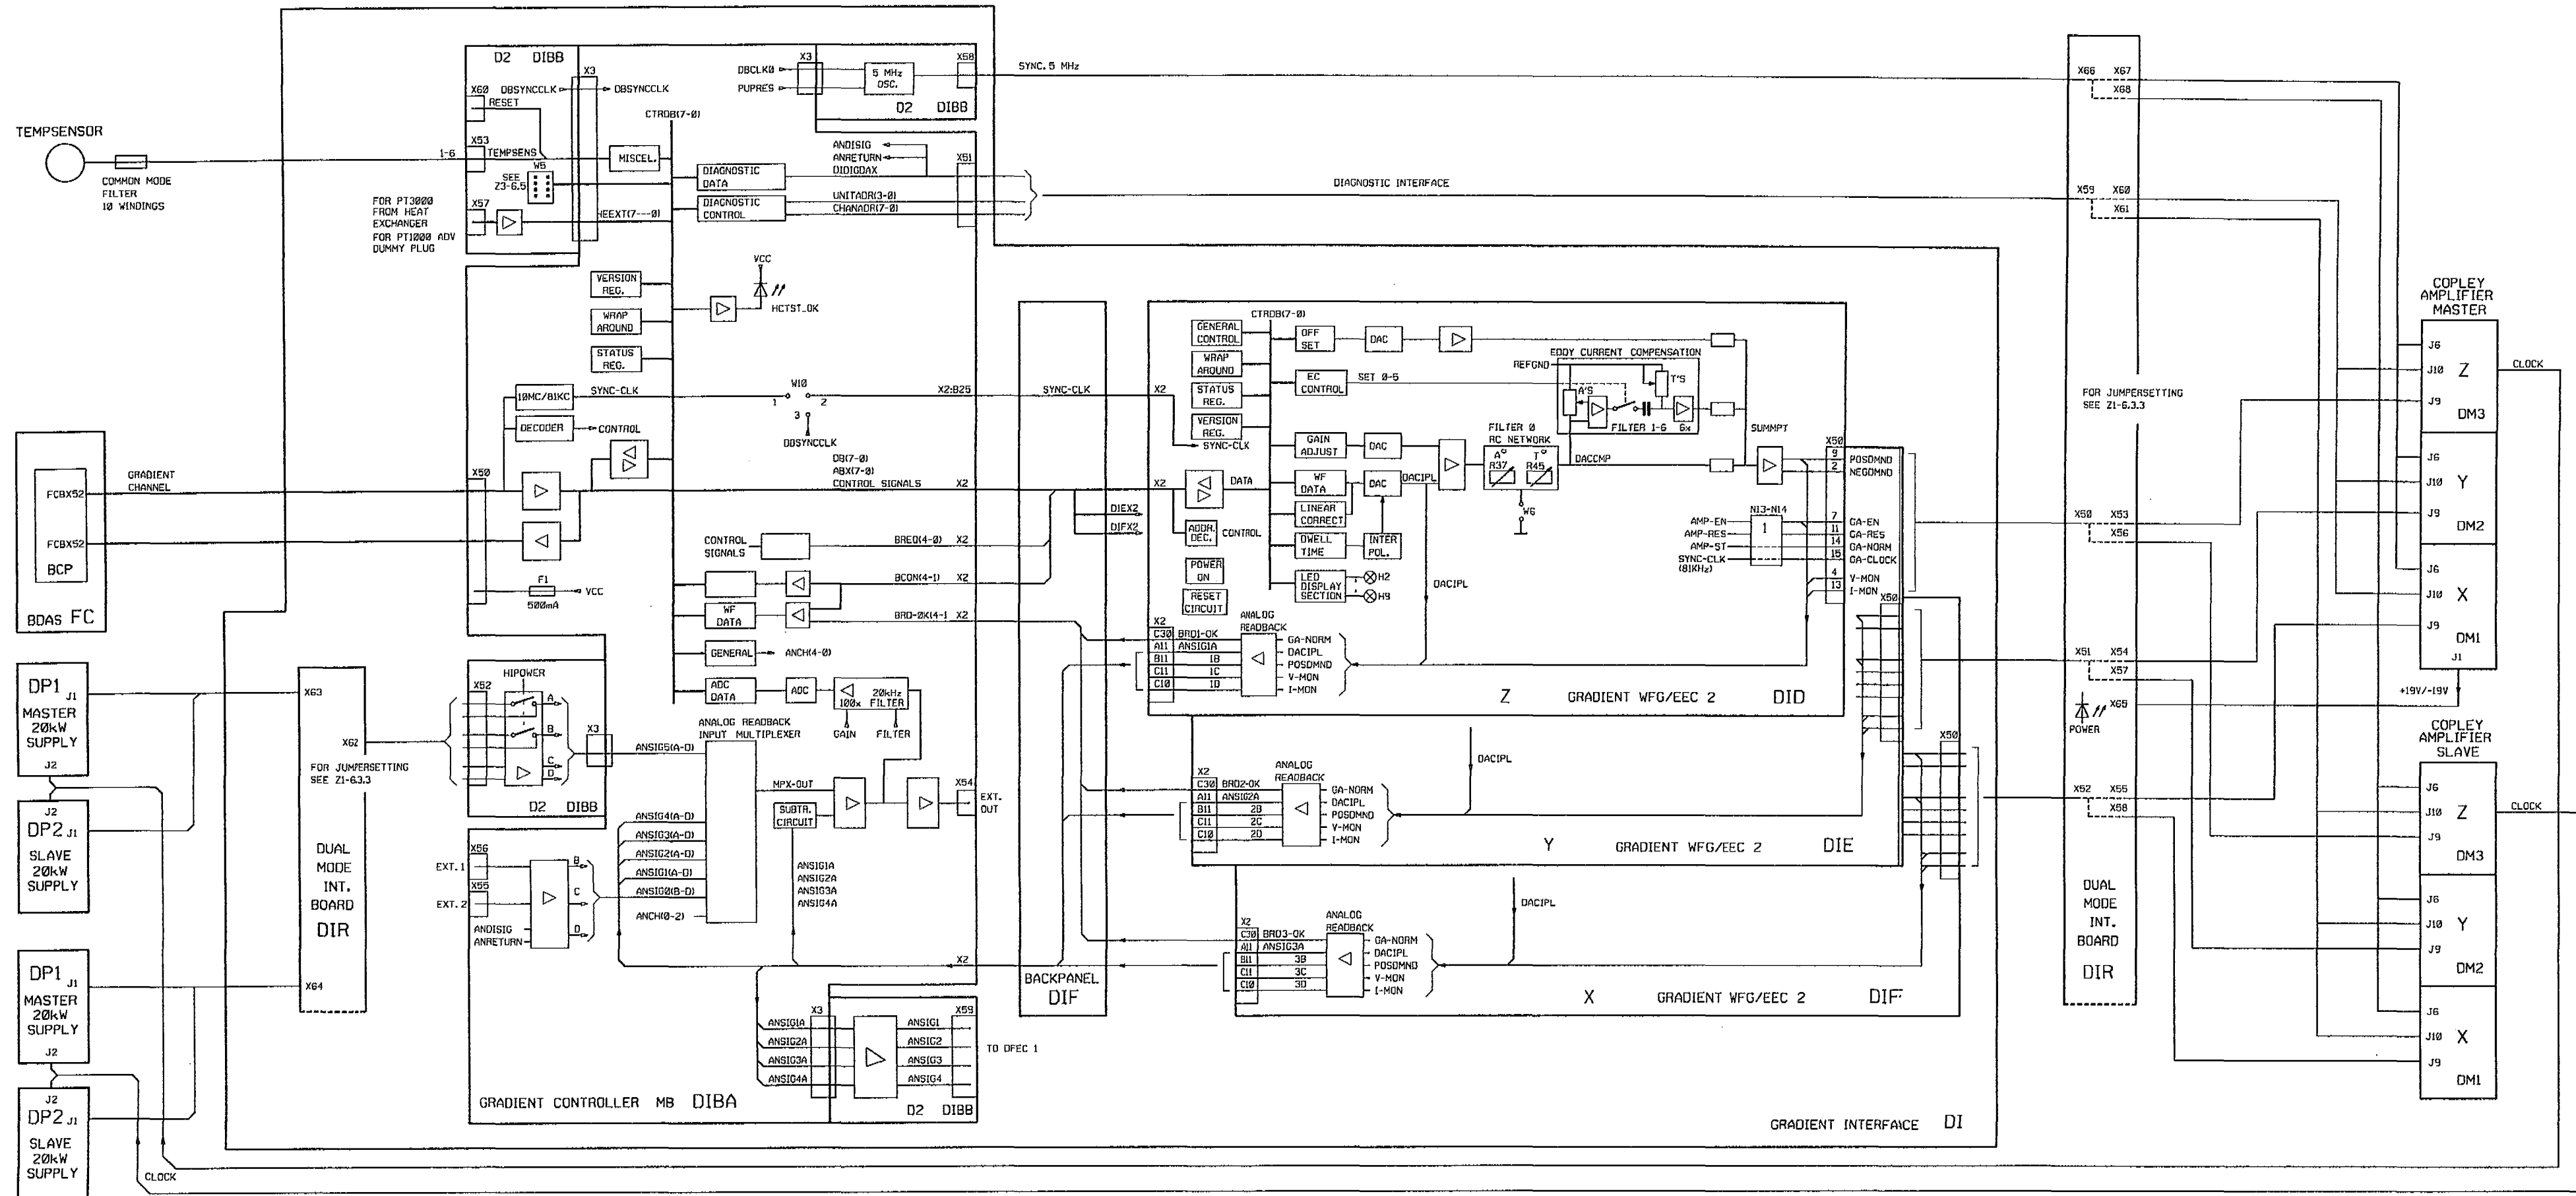



Intera 0.5 T	Intera 1.0 T	Intera 1.5 T
		Master

BLOCKDIAGRAM
GRADIENT INTERFACE DI.

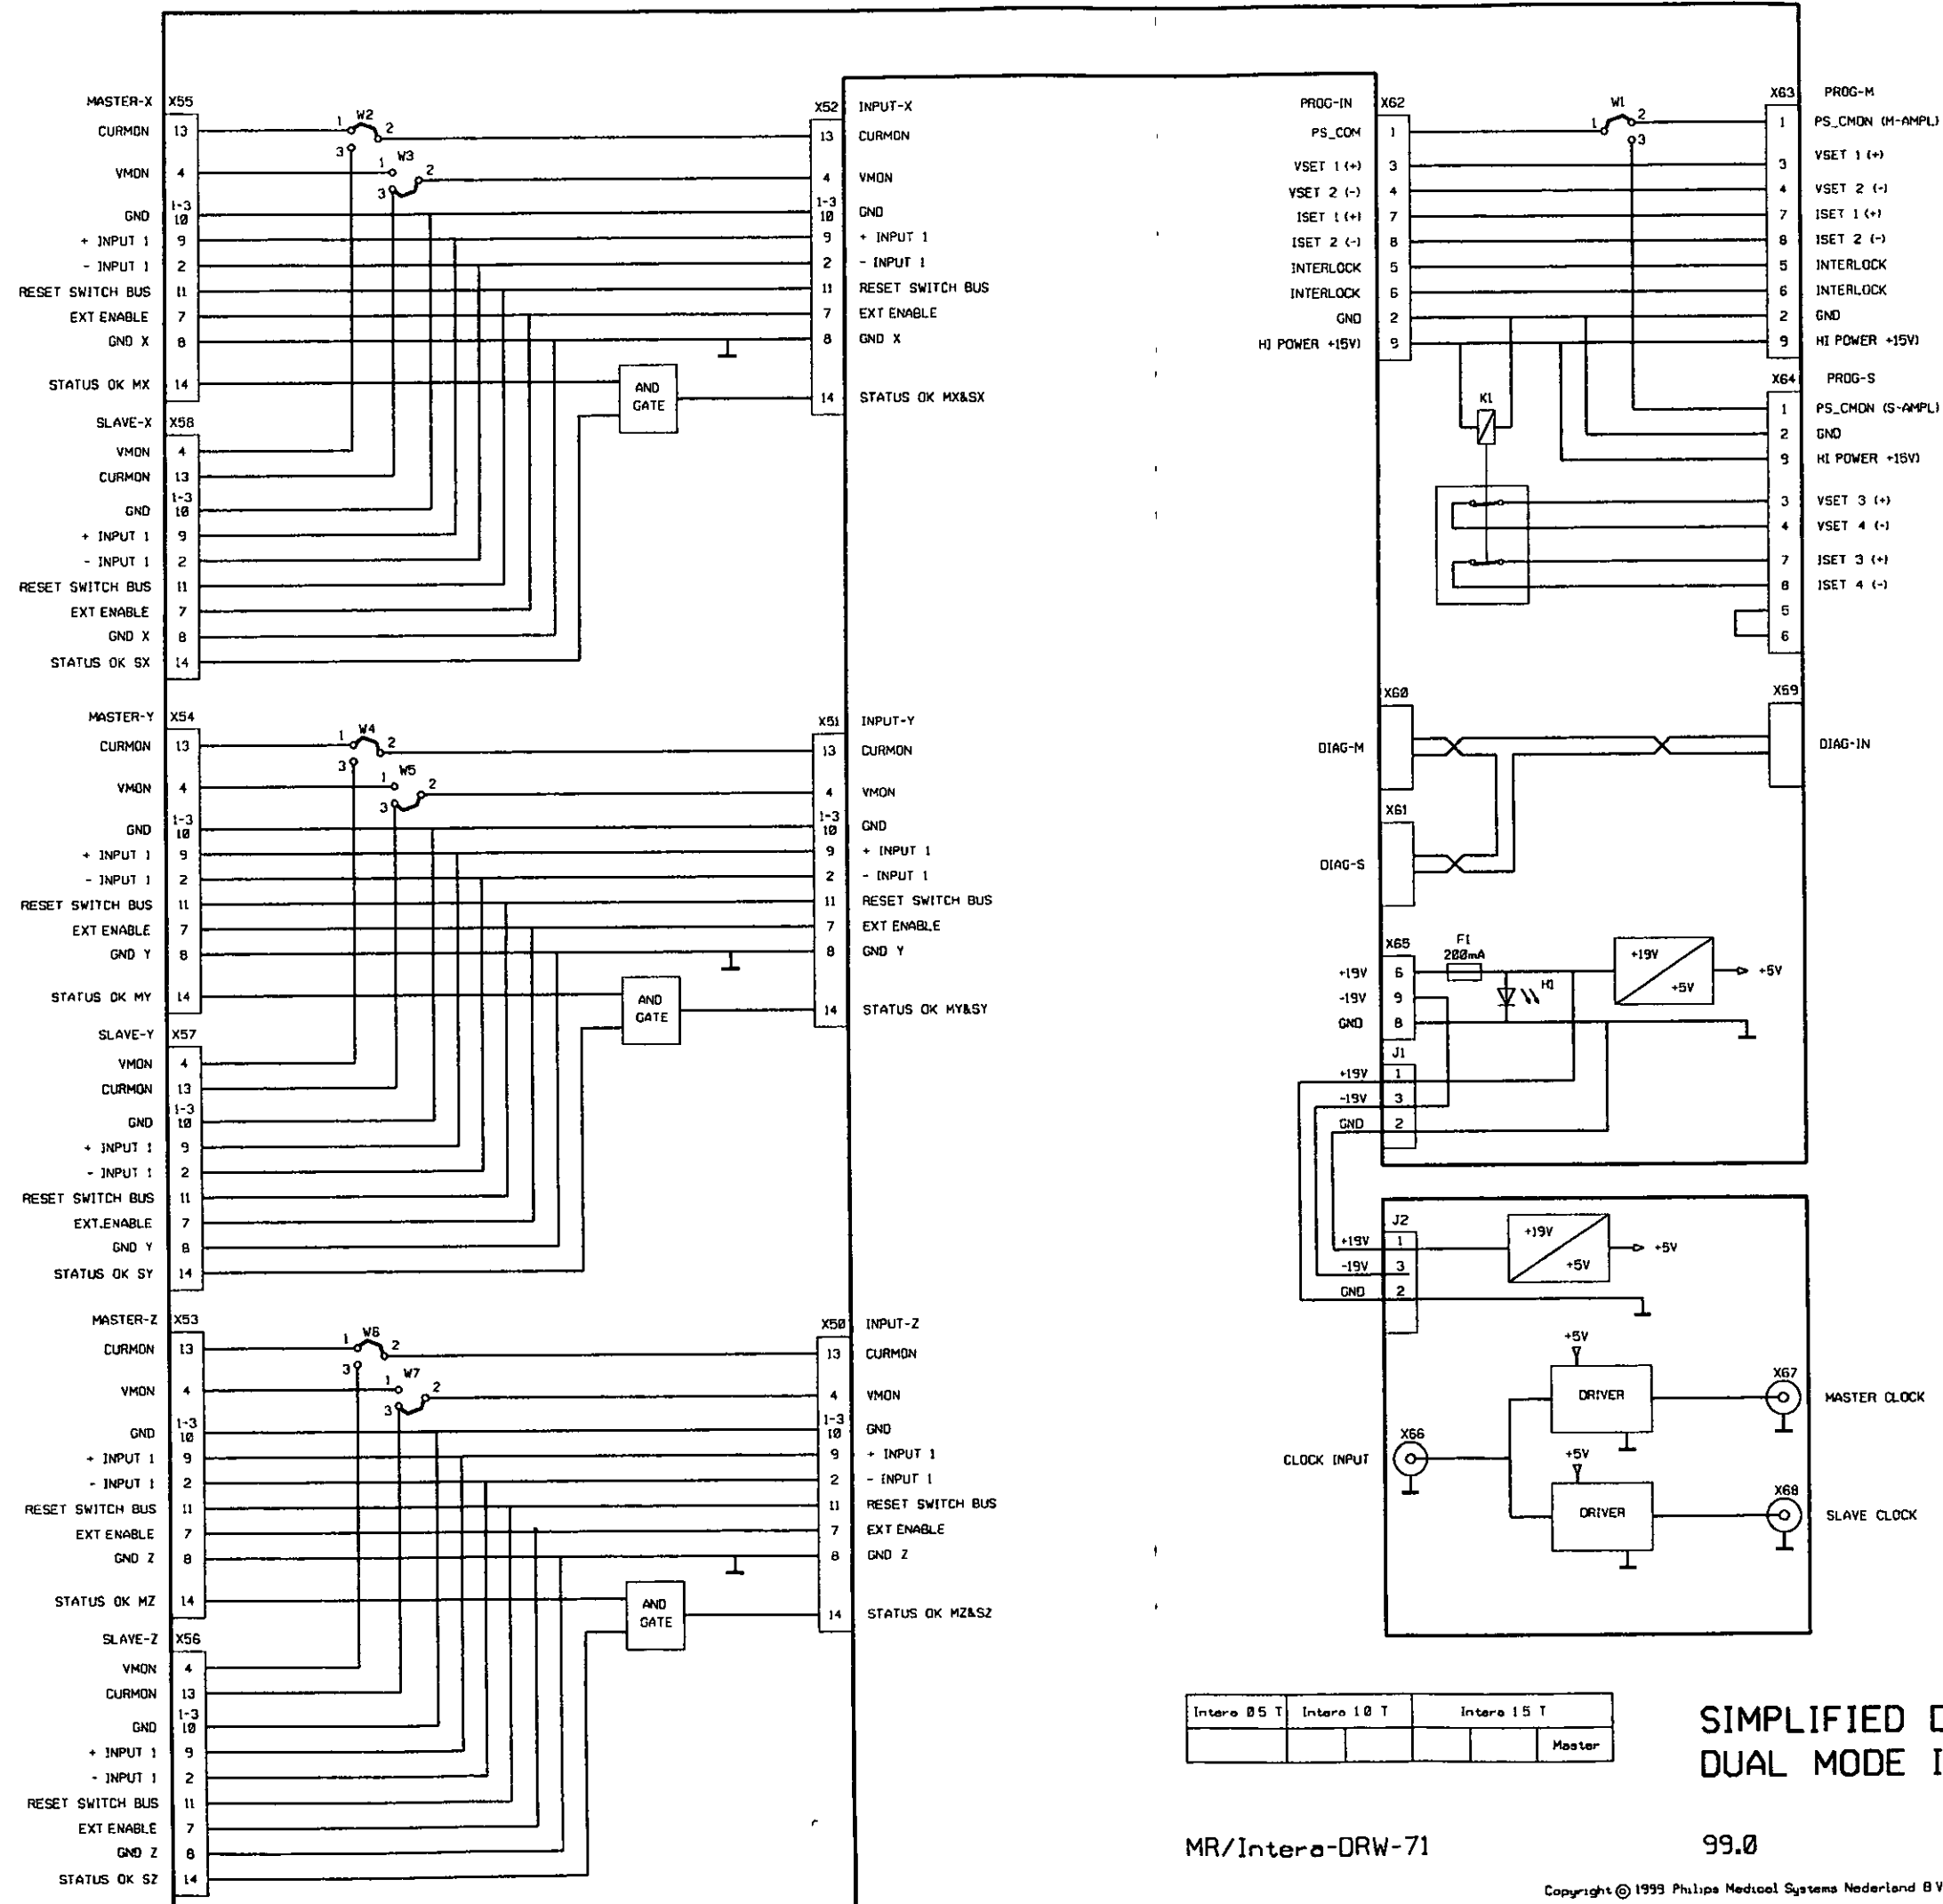

Inter 05 T	Inter 10 T	Inter 15 T
		Master

SIMPLIFIED DIAGRAM DUAL MODE INT. BOARD DIR

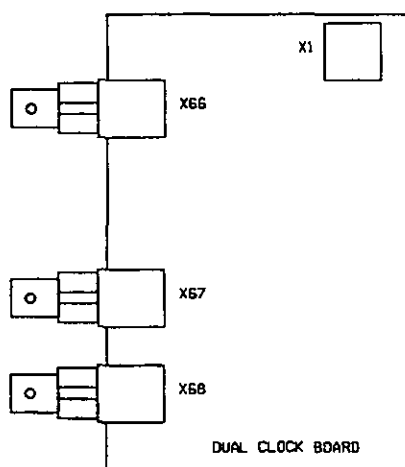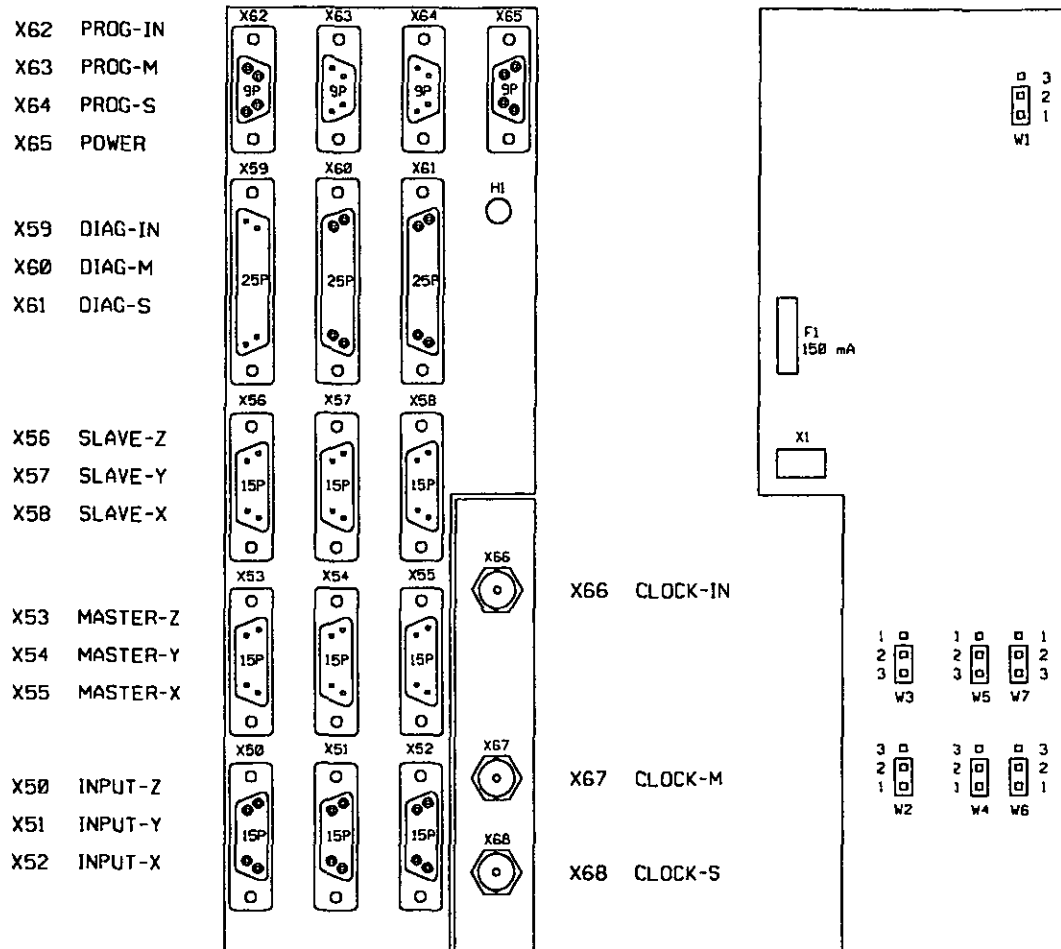

Intera 0.5 T	Intera 1.0 T	Intera 1.5 T	Master

JUMPER SETT. AND CONN. LOCATIC
DUAL MODE INT. BOARD DIR