

INTRODUCTION



SYSTEM LEVEL



MAINS DISTRIBUTION



MAGNET



PATIENT SUPPORT



GRADIENT AMPLIFIER



DATA ACQUISITION SYSTEM



PHYSIOLOGY



OPERATOR CONSOLE



COMPUTER




OPTIONS




CONTENTS

Front and Rear view Operator Console B	Z1-9 1
Simplified Diagram 1 Audio System BE	Z1-9 2 1
Simplified Diagram 2 Audio System BE	Z1-9 2 2
Simplified Diagram IIM Unit BEI	Z1-9 3
Power Supply Backend Miscellaneous Box BE	Z1-9 4
Network Connections	Z1-9 5
Wiring Diagram Operator Console	Z2-9 1
Wiring Diagram Backend Miscellaneous Box BE	Z2-9 2
Lay Out Audio System BA	Z3-9 1
Unit and Connector Location Backend Miscellaneous Box BE	Z3-9 2
Lay Out and Connector Location IIM Assy BEI	Z3-9 3
Connector Location Operator Console Display BM	Z3-9 4
Connector Location Audio Switch 2 BEA	Z3-9 5
Connector Location RS232 Fiber 2 BEB	Z3-9 6
Connector Location and Jumper Setting Audio Module 2 BA	Z3-9 7
Connector Location Microphone Box MVM	Z3-9 8

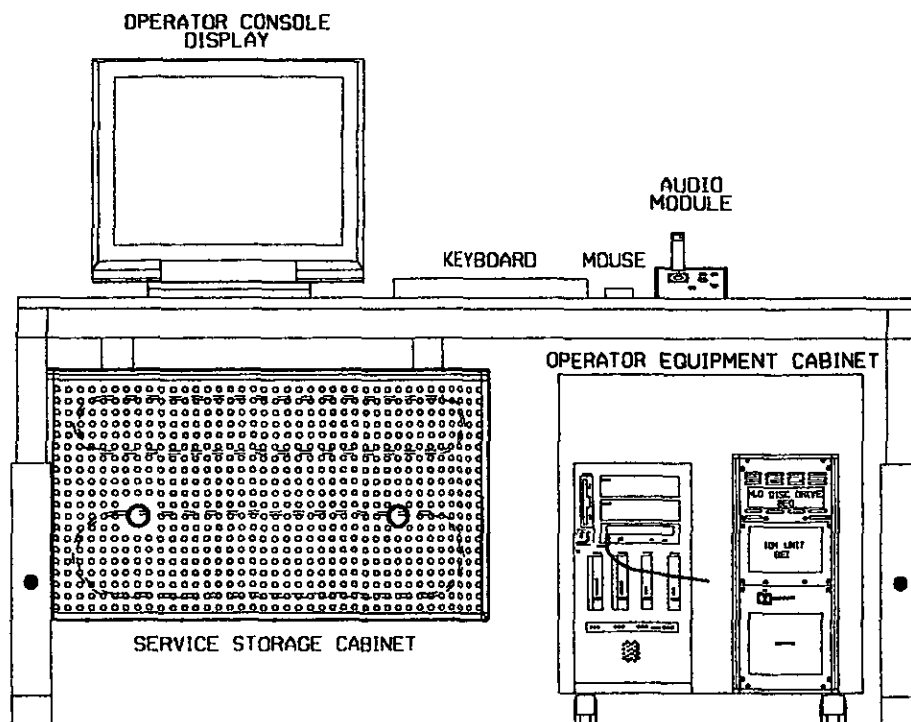


FRONT VIEW

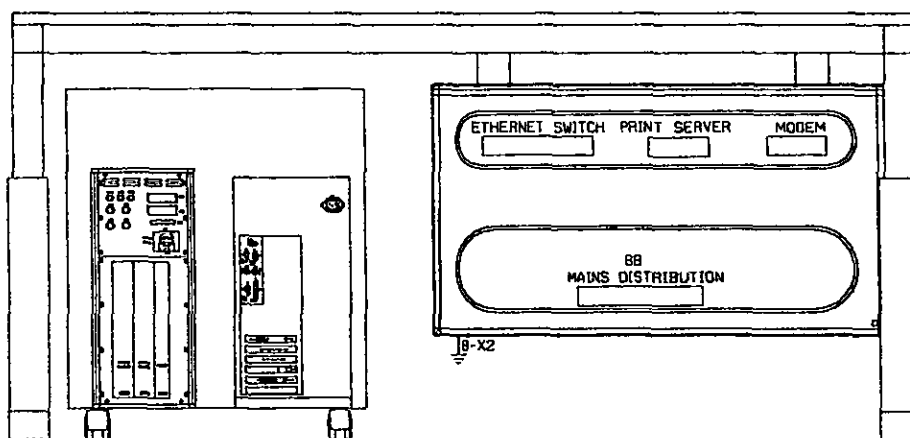

REAR VIEW


Intera 0.5 T		Intera 1.0 T		Intera 1.5 T	
Standard	Omni	Power	Omni	Power	Master

FRONT AND REAR VIEW
OPERATOR CONSOLE B.

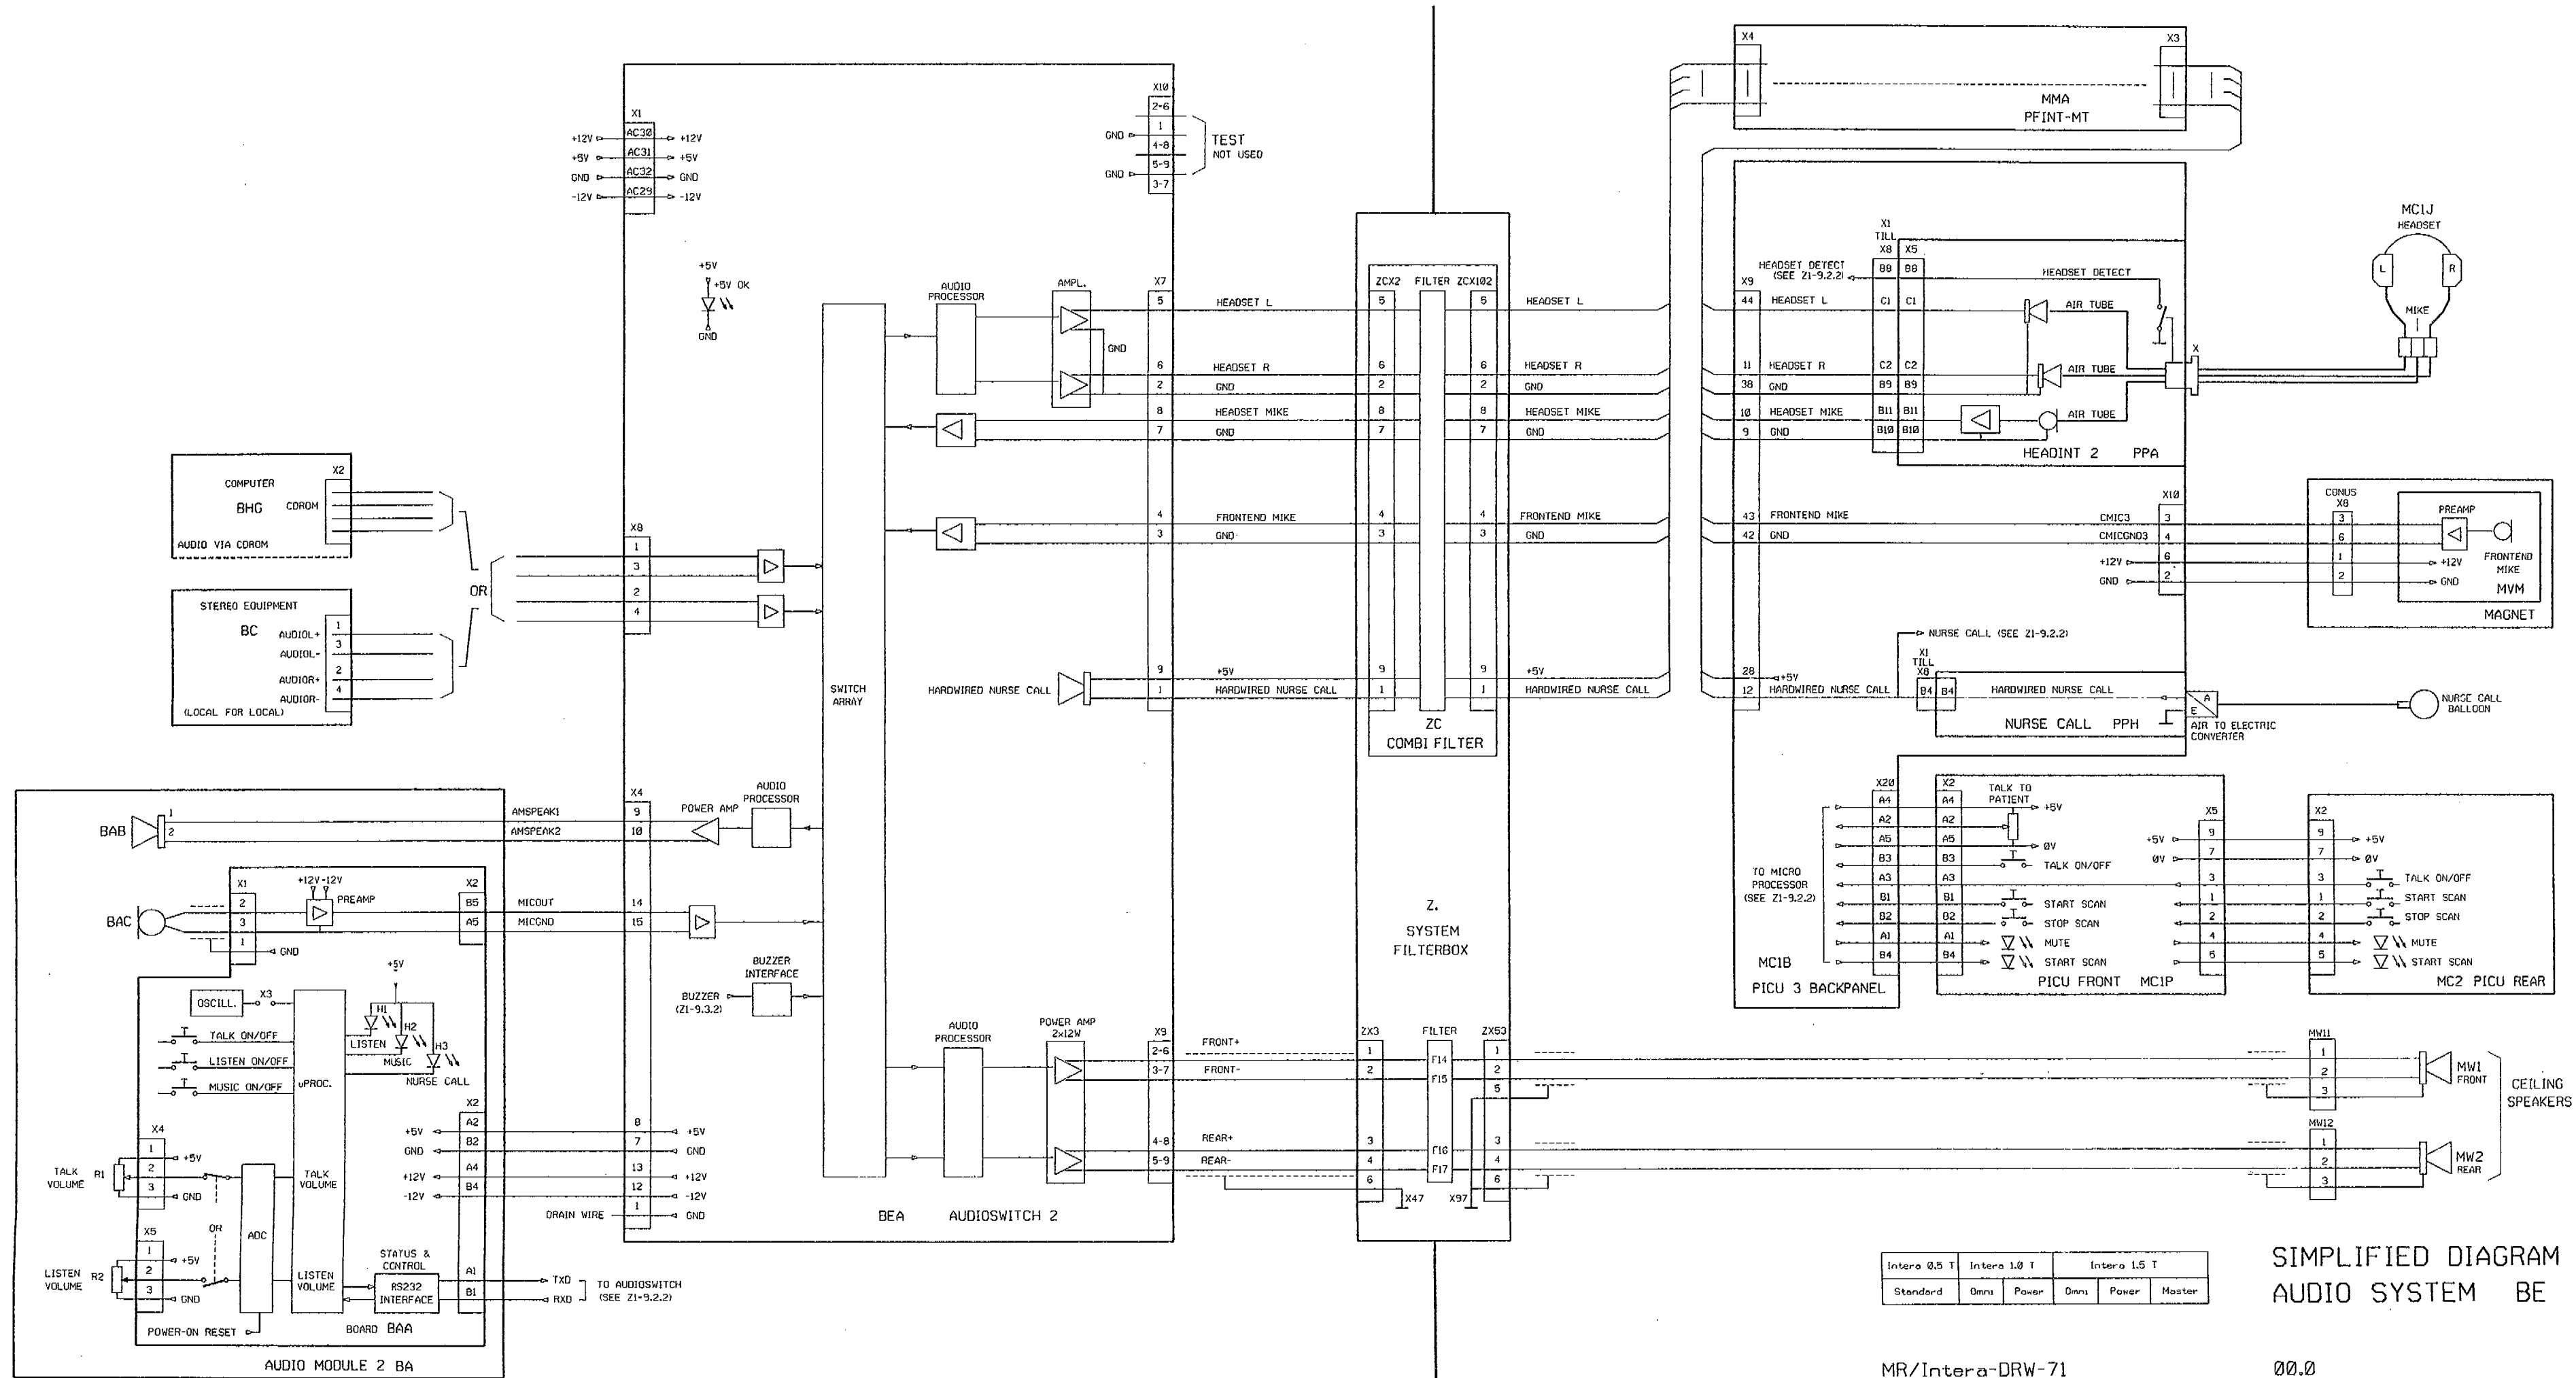



Intera 0.5 T		Intera 1.0 T		Intera 1.5 T	
Standard	Omni	Power	Omni	Power	Master

SIMPLIFIED DIAGRAM 1
AUDIO SYSTEM BE

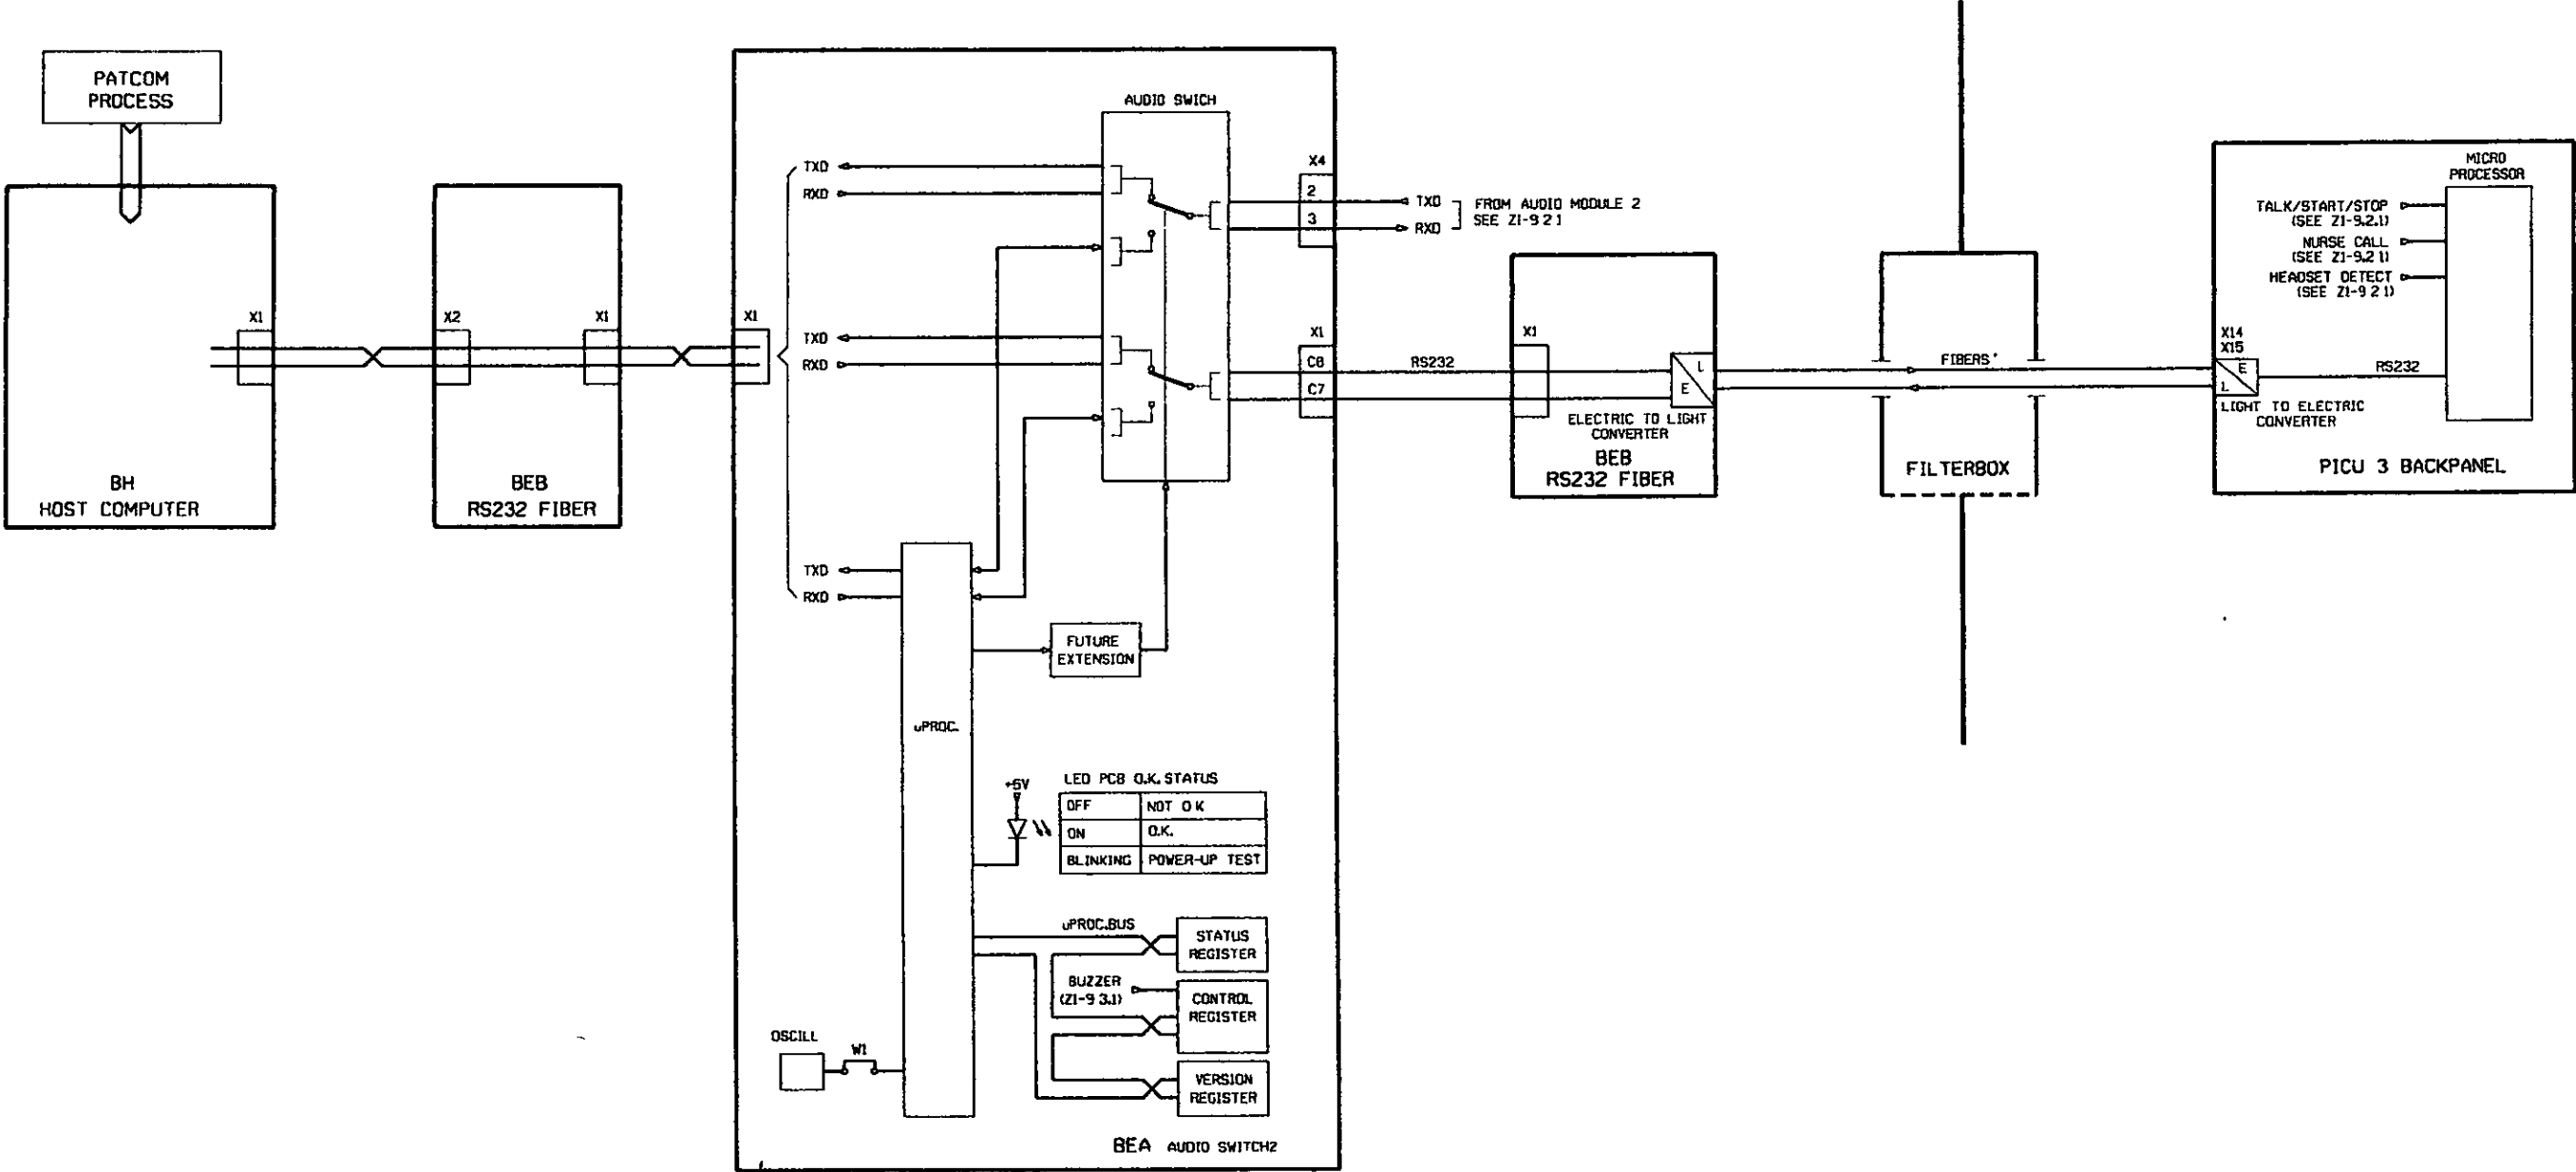


Intera 0.5 T	Intera 1.0 T		Intera 1.5 T		
Standard	Opti	Power	Opti	Power	Master

SIMPLIFIED DIAGRAM 2
AUDIO SYSTEM BE

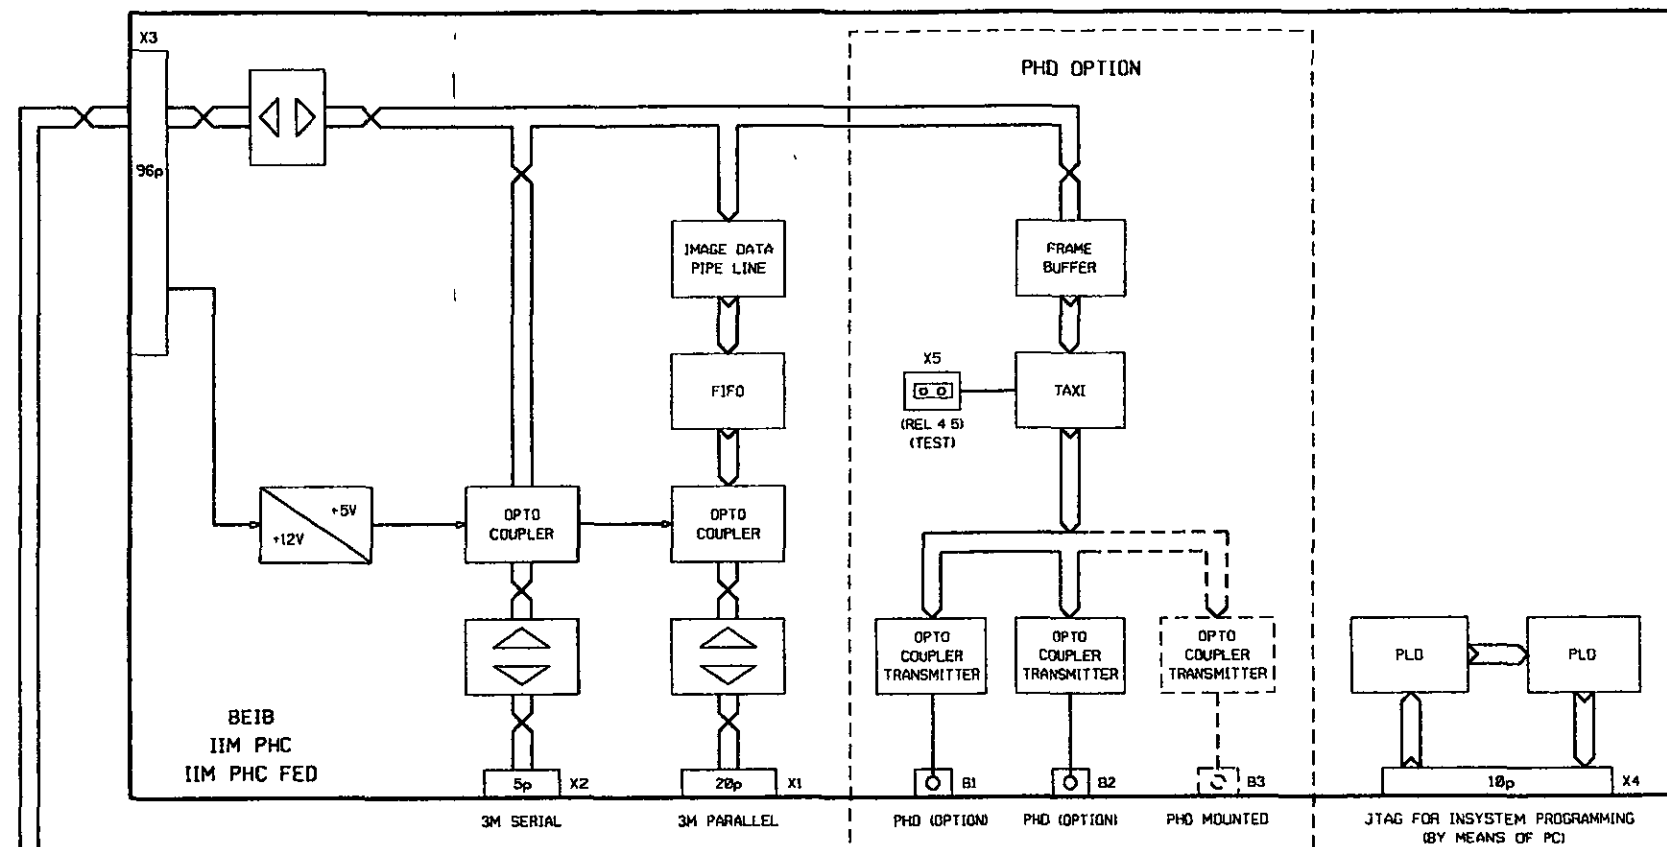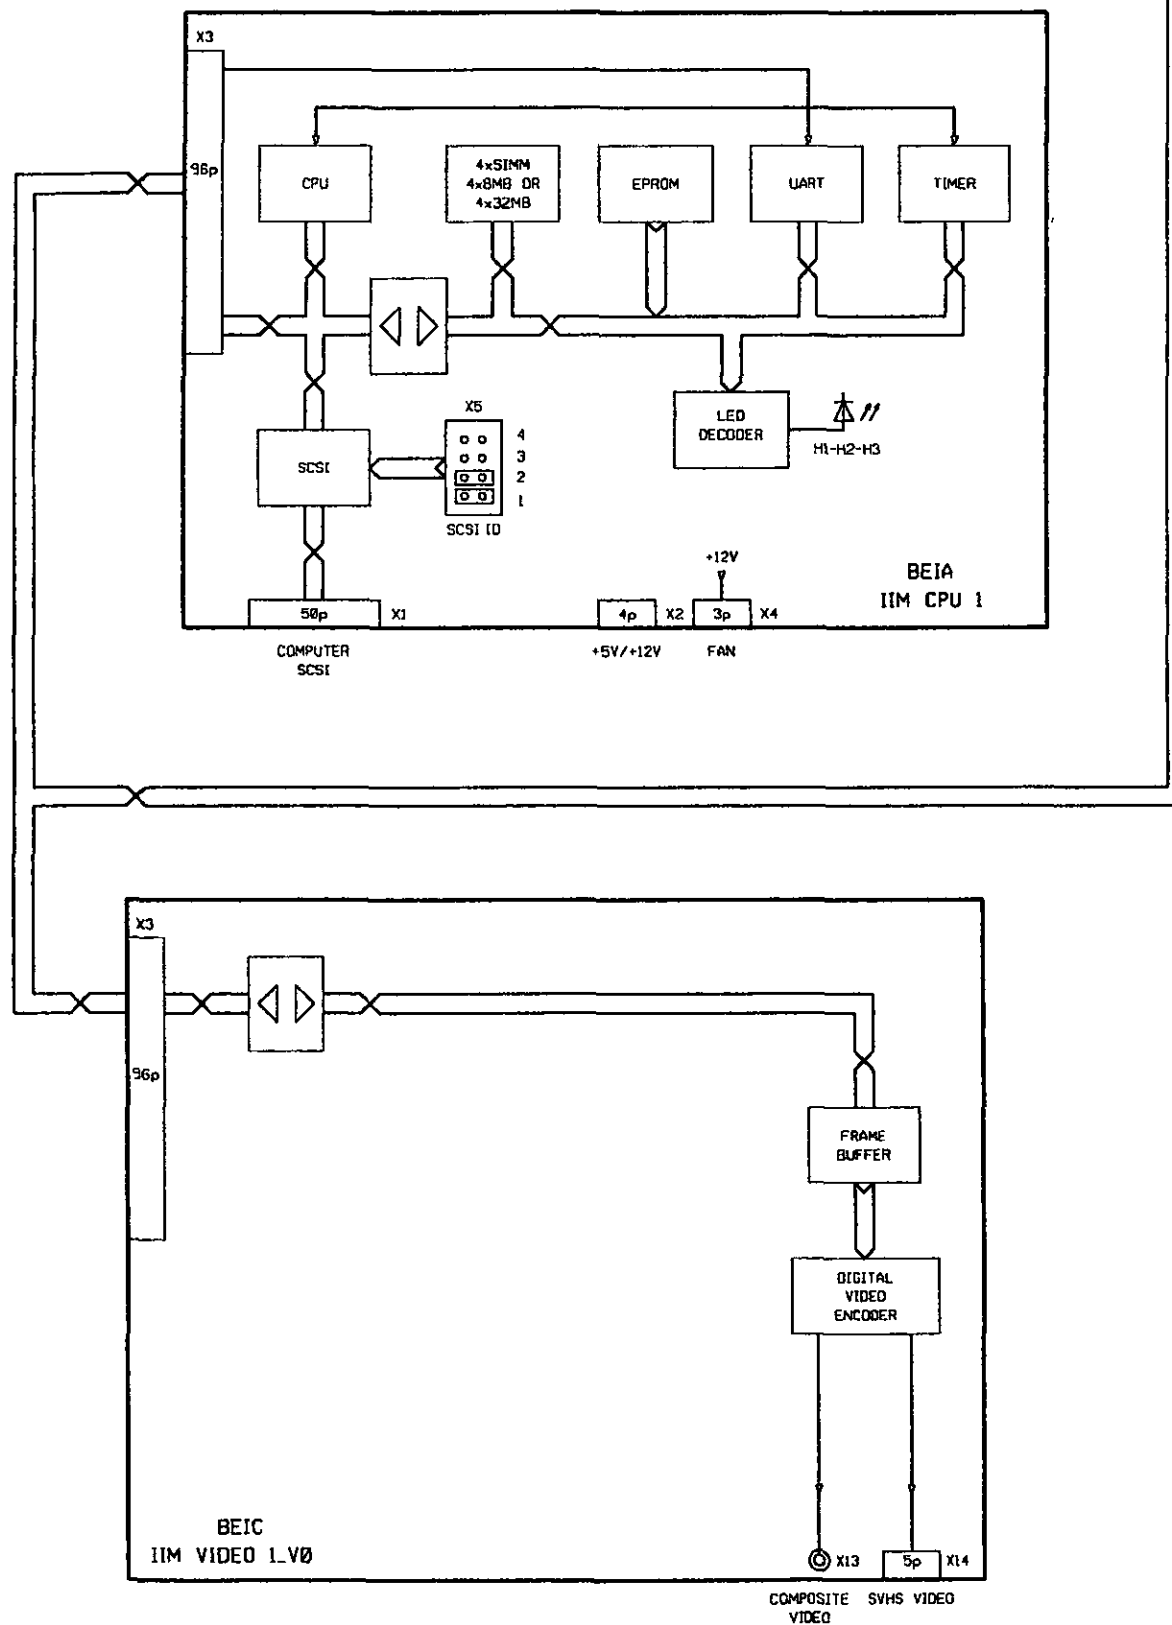


SIMPLIFIED DIAGRAM
IIM UNIT BEI

Intera 0.5 T		Intera 1.0 T		Intera 1.5 T	
Standard	Omni	Power	Omni	Power	Master

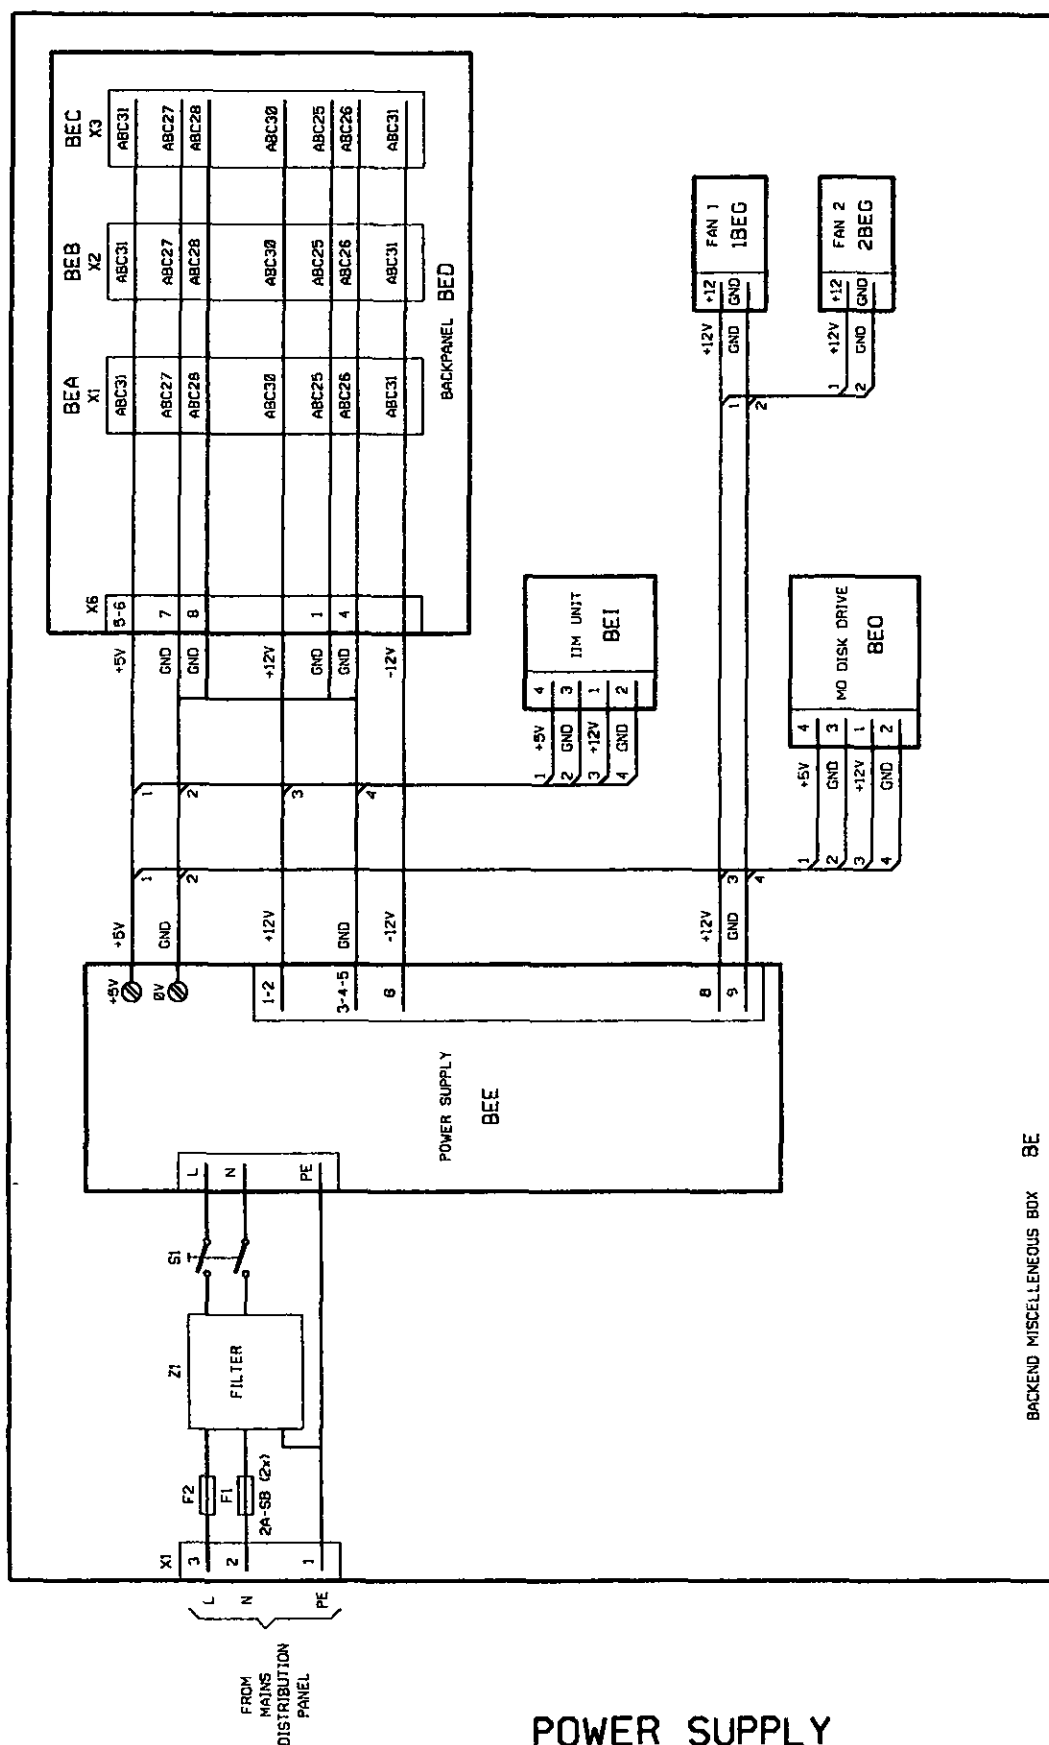








Intera 0.5 T		Intera 1.0 T		Intera 1.5 T	
Standard	Omni	Power	Omni	Power	Master

POWER SUPPLY BACKEND MISCELLANEOUS BOX BE

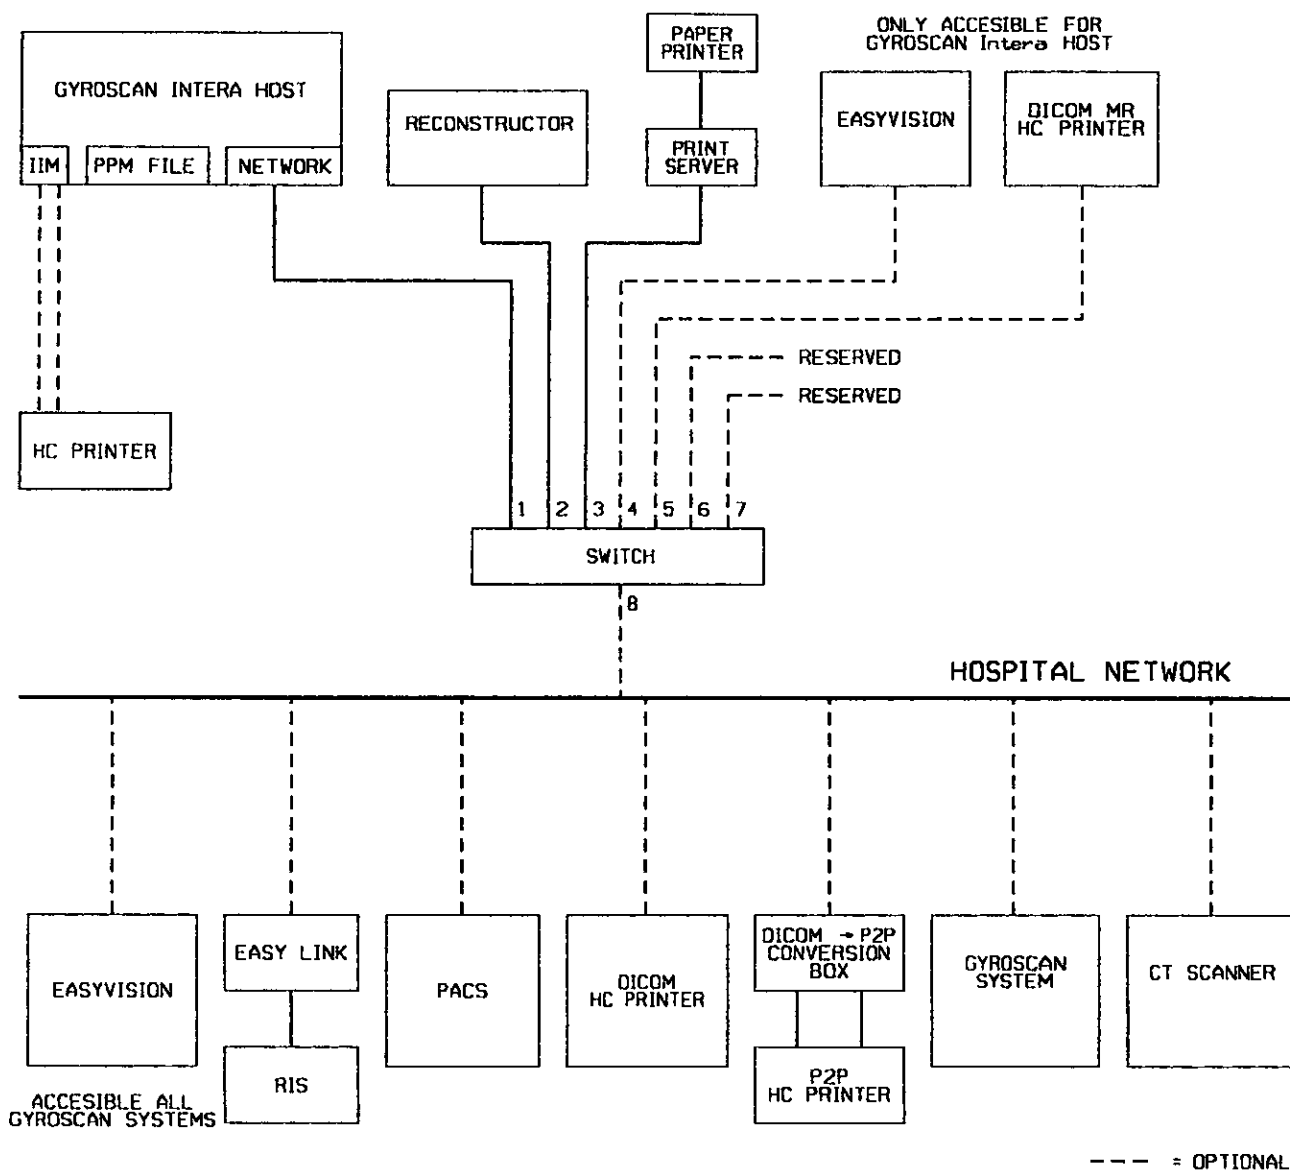




Intera 05 T	Intera 10 T		Intera 15 T		
Standard	Dens	Power	Dens	Power	Master

NETWORK CONNECTIONS

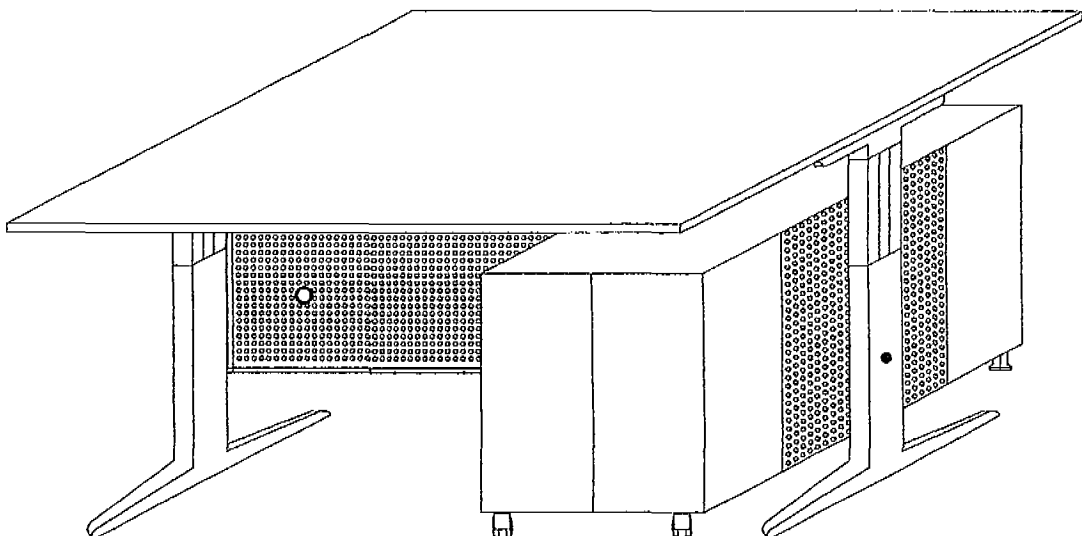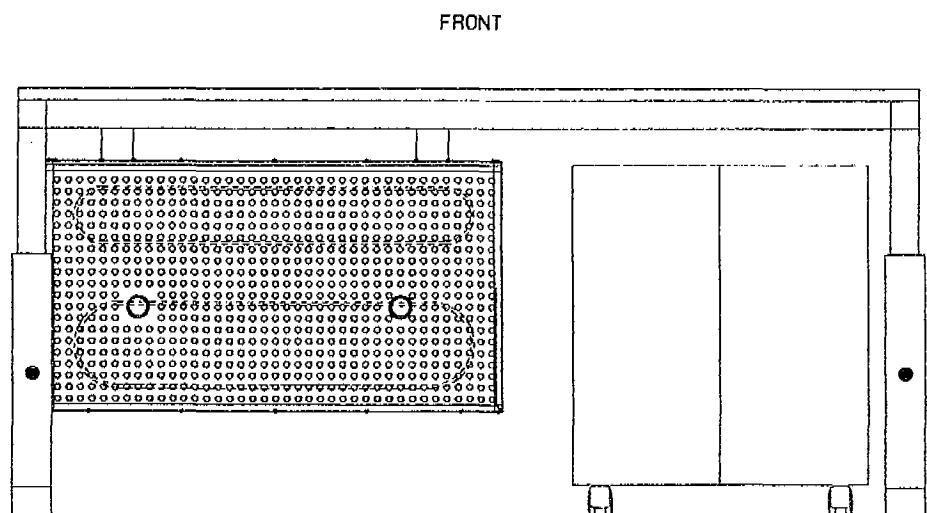
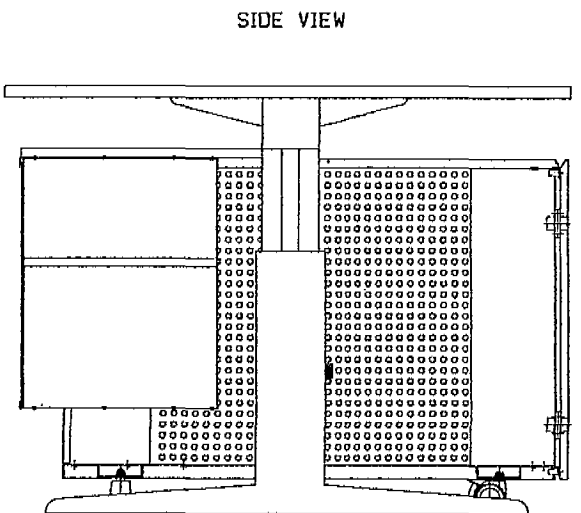
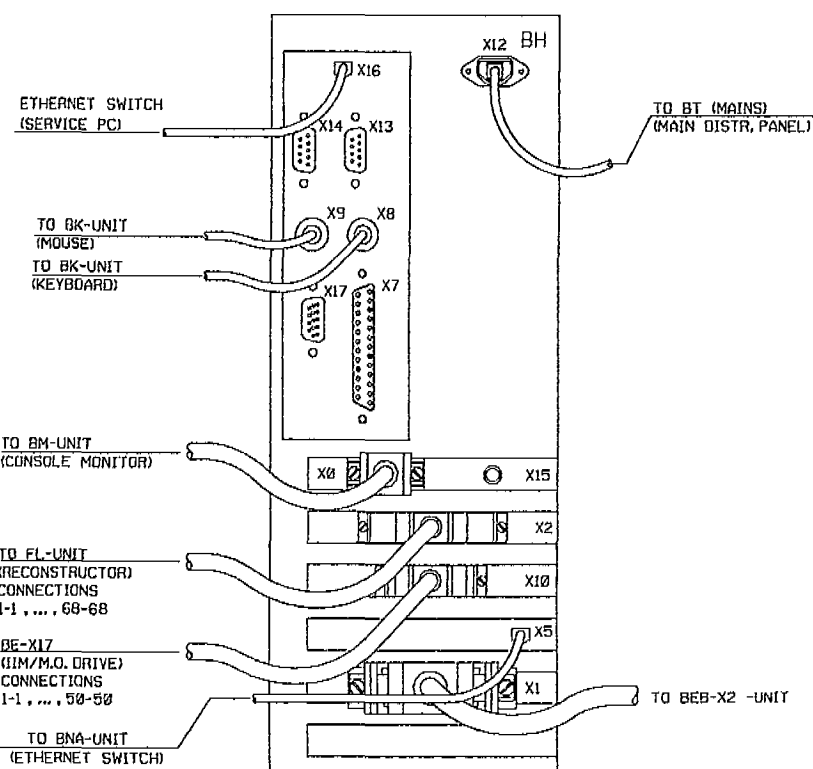
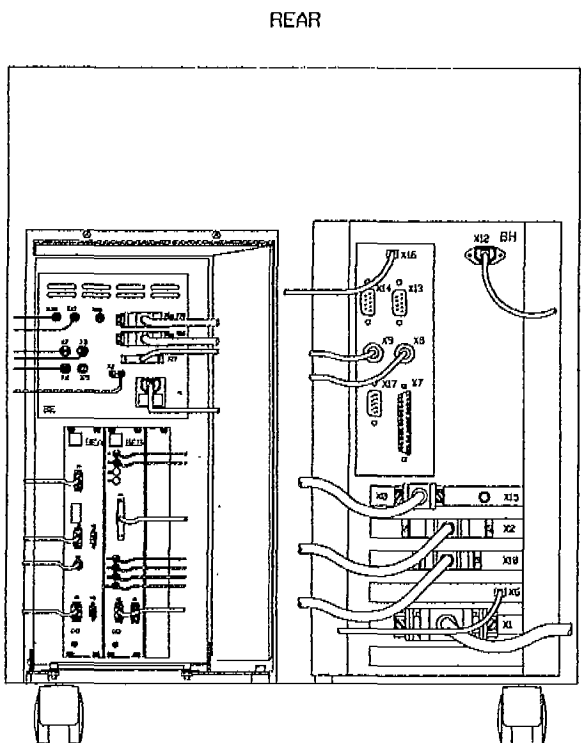
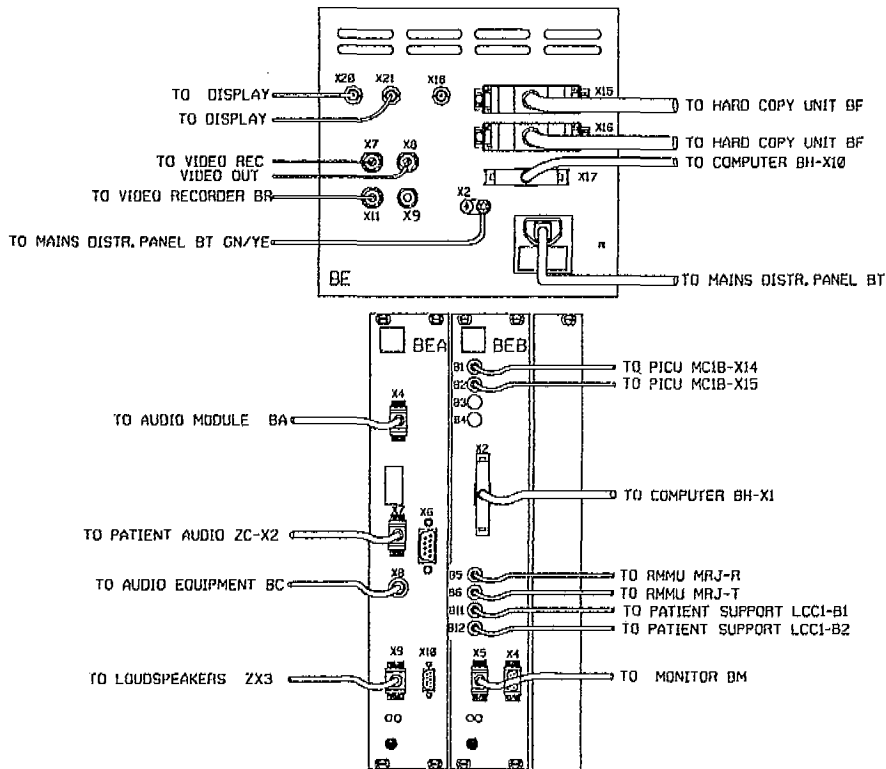
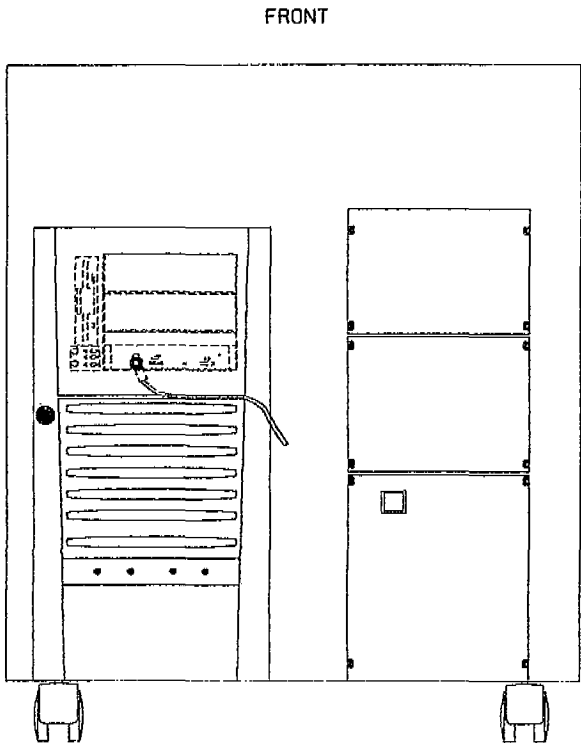


Intera 0.5 T		Intera 1.0 T		Intera 1.5 T	
Standard	Omni	Power	Omni	Power	Master

WIRING DIAGRAM
OPERATOR CONSOLE

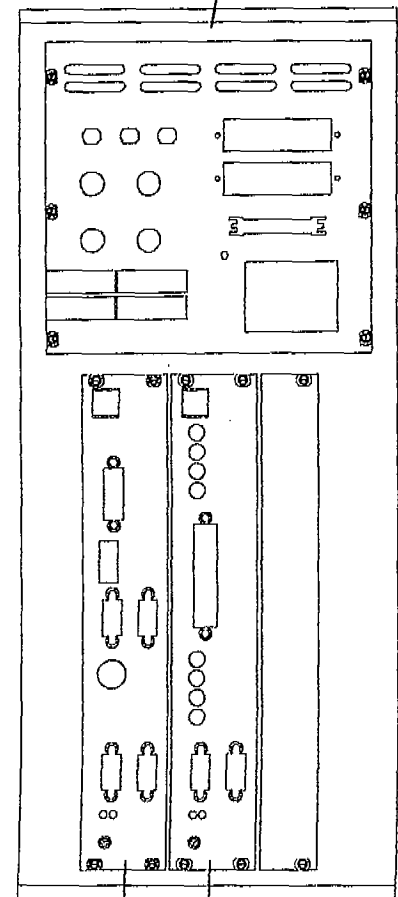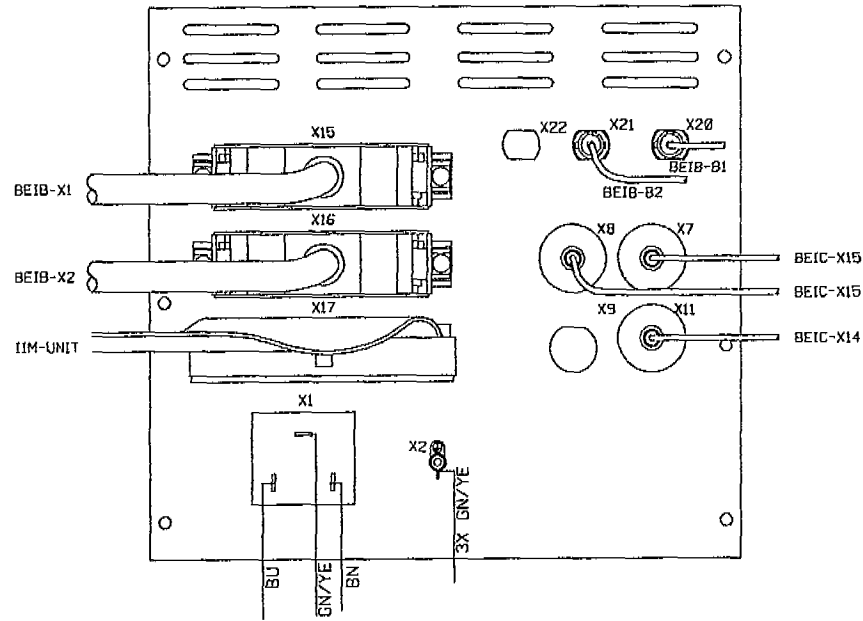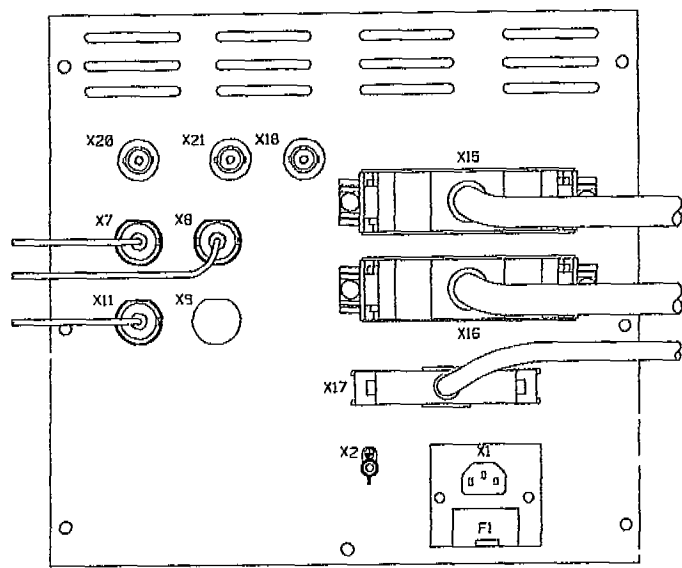


SEE Z3-9.6
SEE Z3-9.5

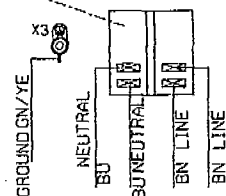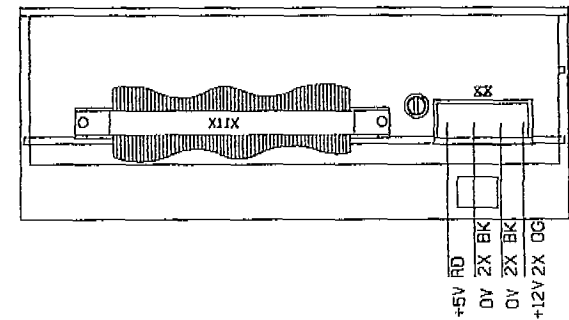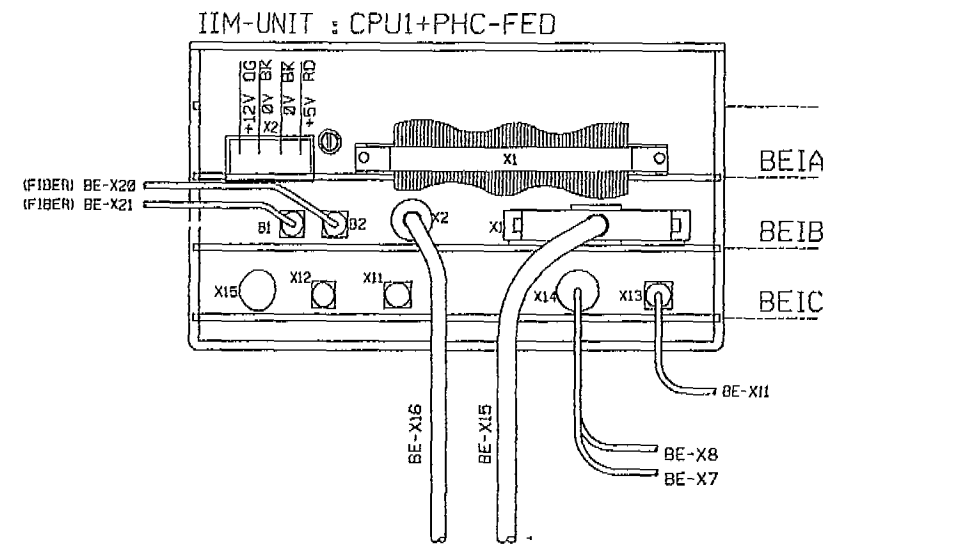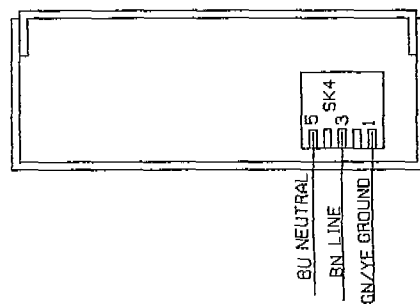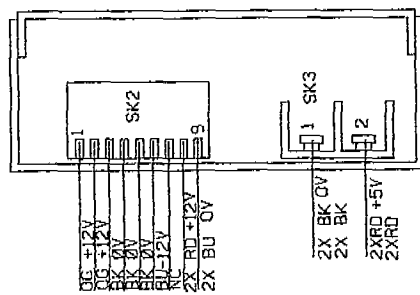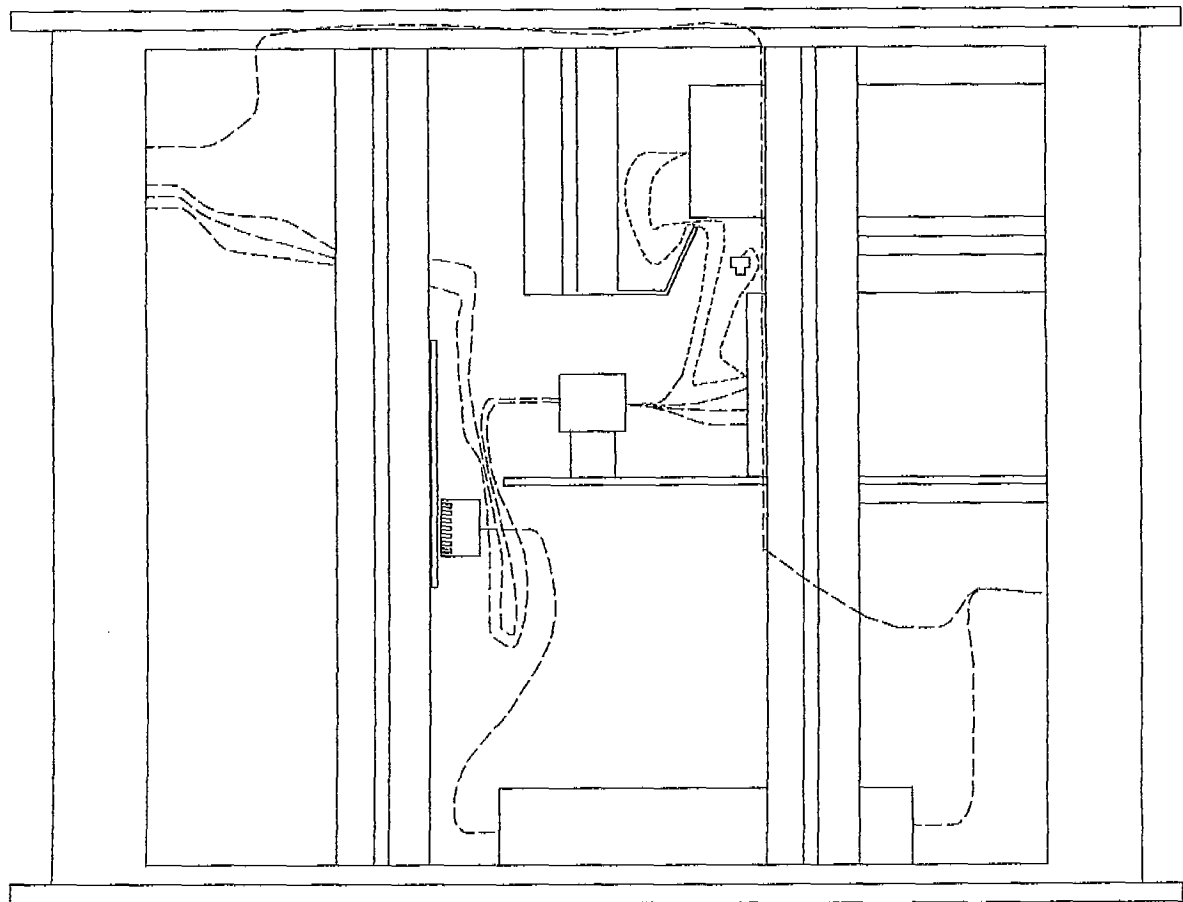


Intera 0.5 T			Intera 1.0 T			Intera 1.5 T		
Standard	Omni	Power	Omni	Power	Master			


WIRING DIAGRAM
BACKEND MISCELLNEOUS BOX BE

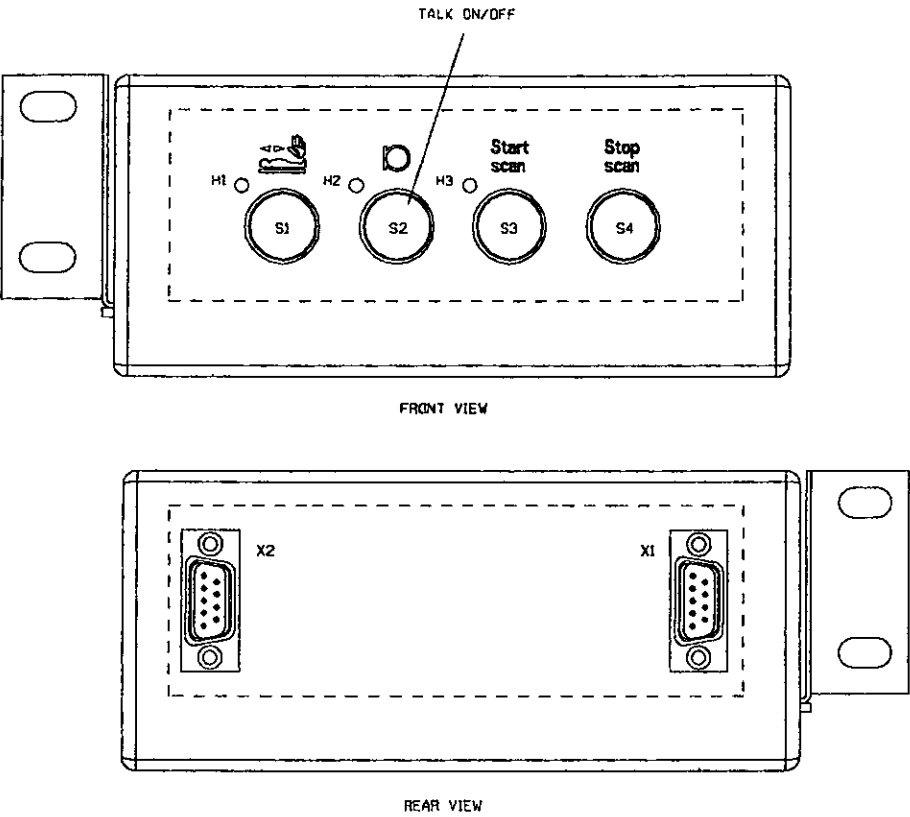

PICU2 REAR MC2P

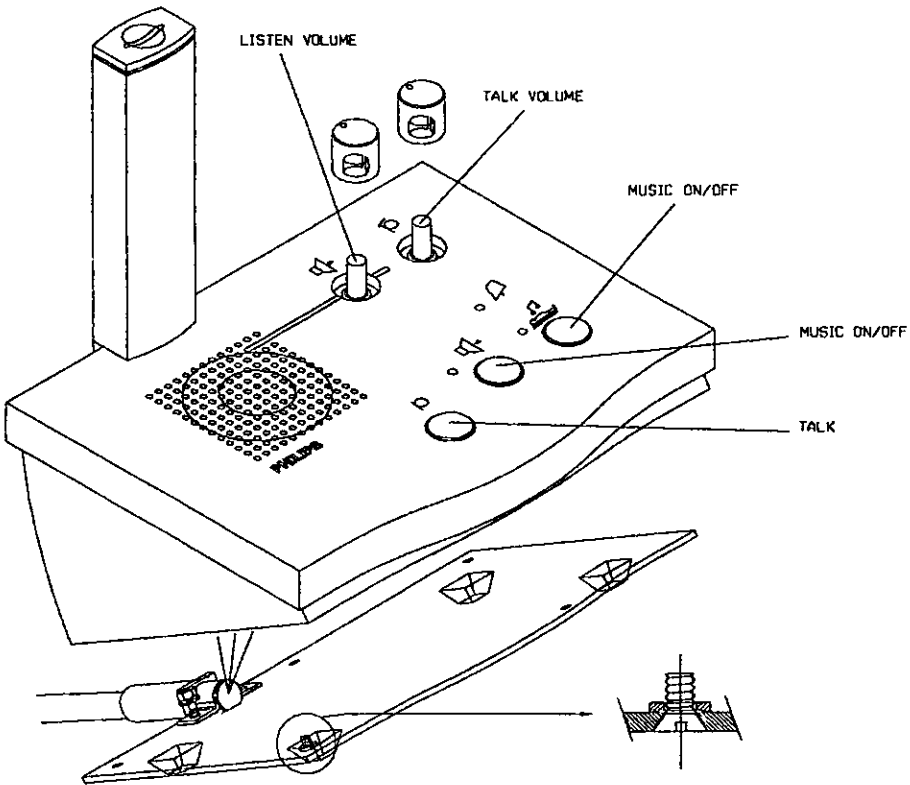




AUDIO MODULE 2 BA

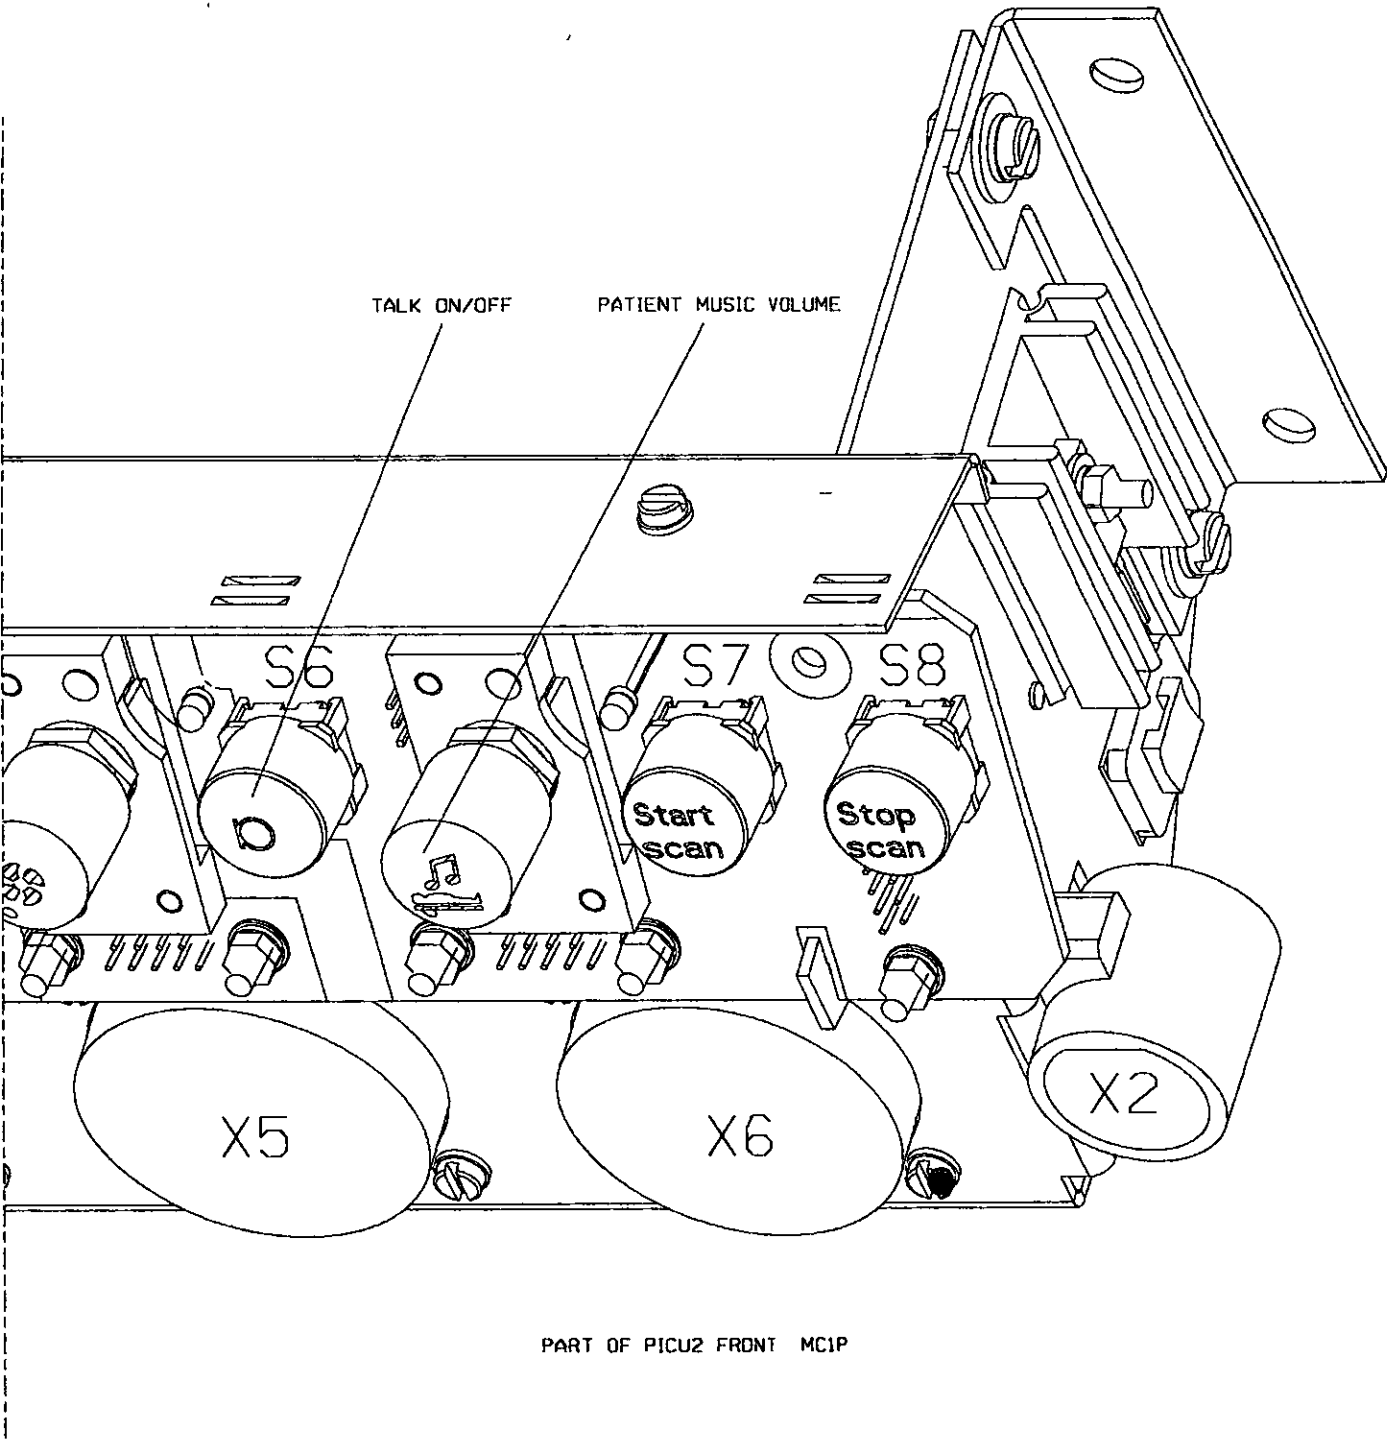

PART OF PICU2 FRONT MC1P



Intera 85 T			Intera 10 T			Intera 15 T		
Standard	Omni	Power	Omni	Power	Master			

LAY OUT
AUDIO SYSTEM BA

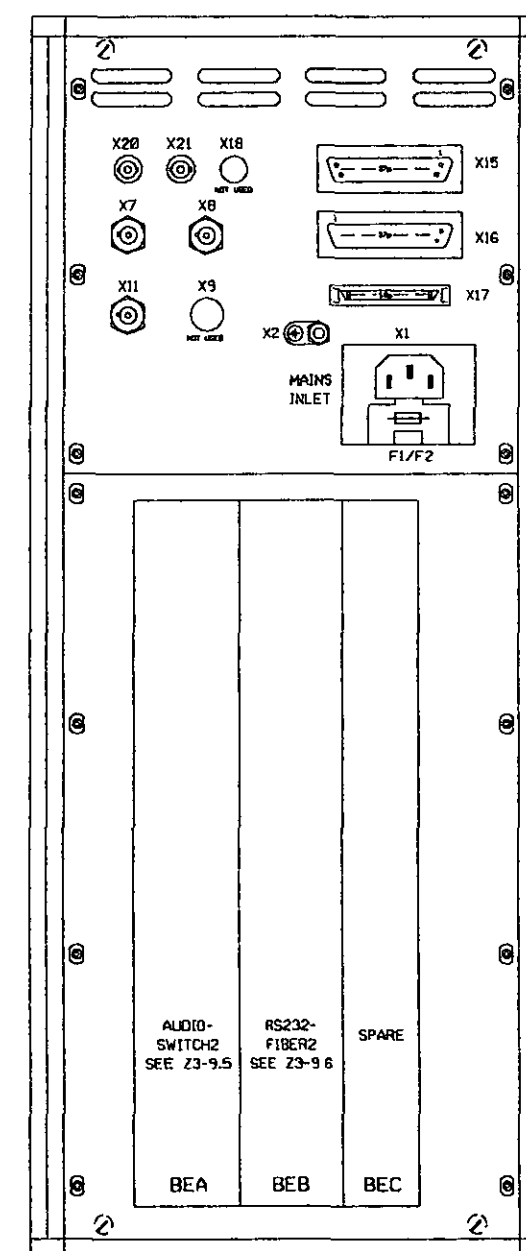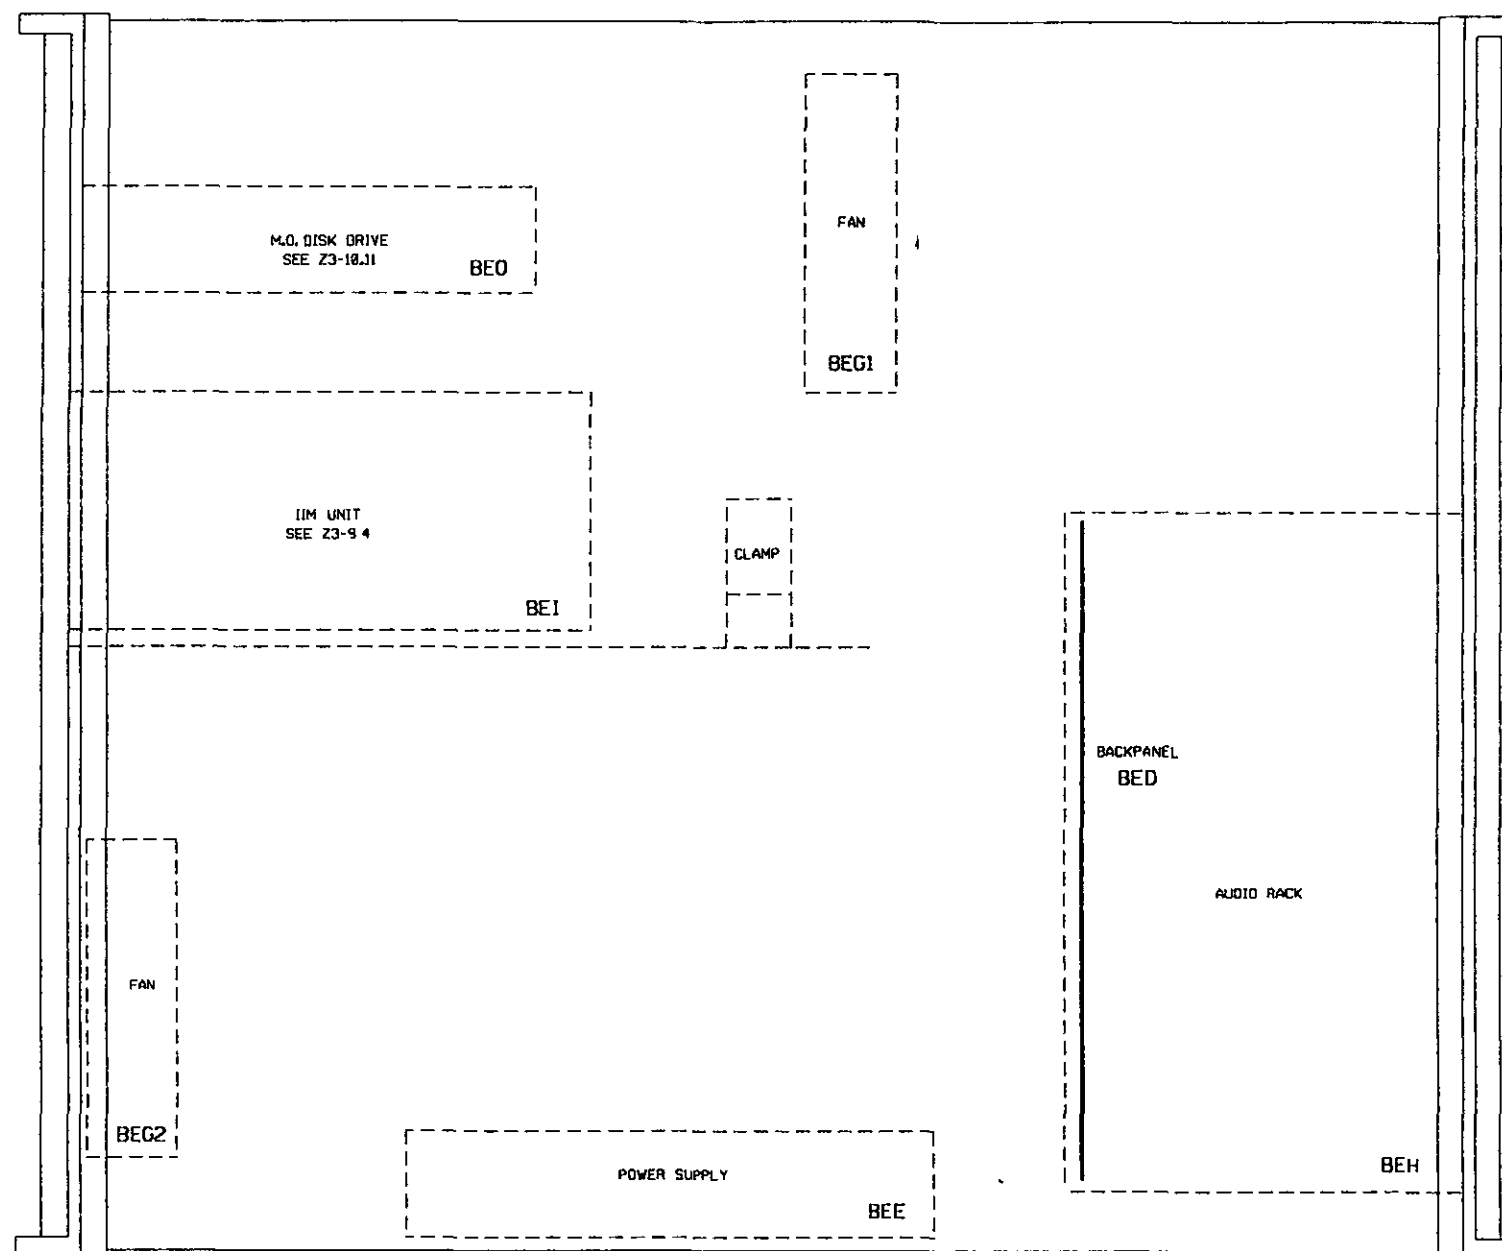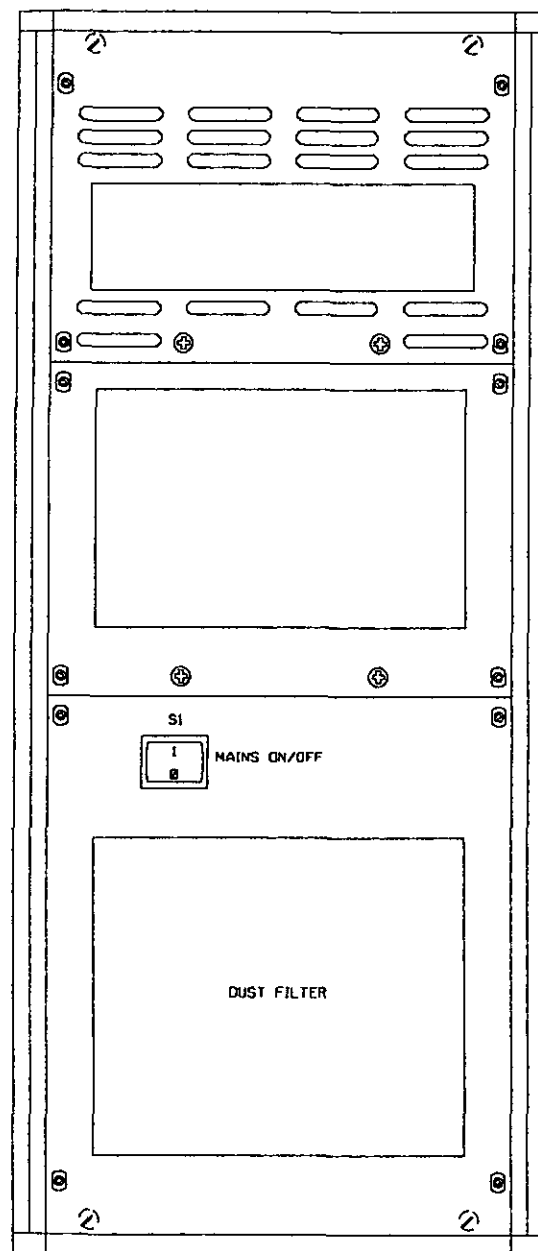


Intera 0.5 T	Intera 1.0 T		Intera 1.5 T		
Standard	Omni	Power	Omni	Power	Master

UNIT LOCATION +
CONNECTOR LOCATION
BACKEND MISCELLANEOUS BOX BE

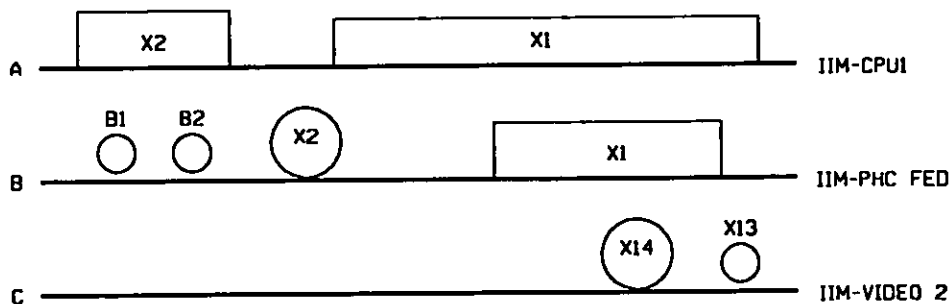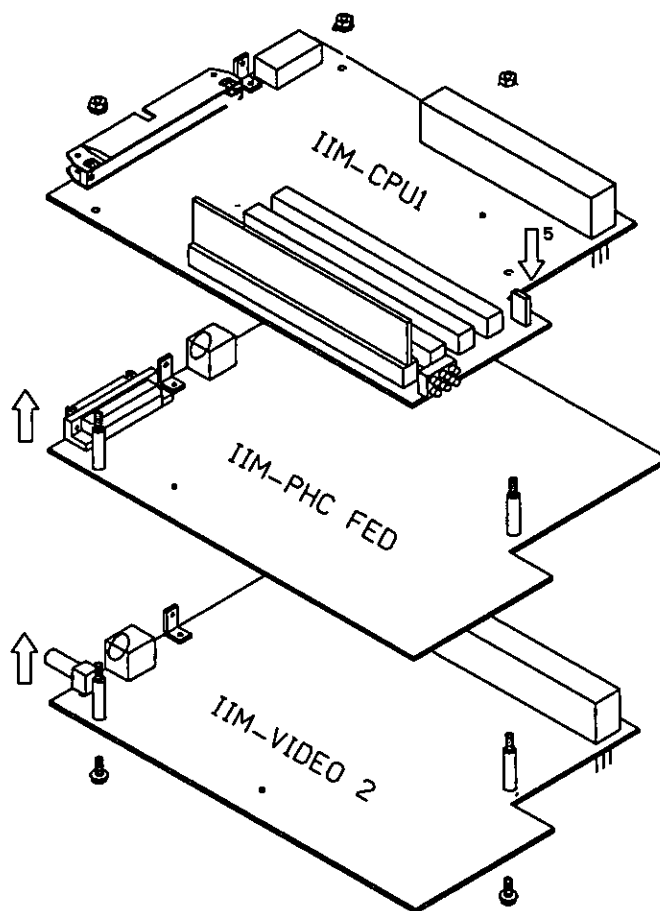


Intera 0.5 T		Intera 1.0 T		Intera 1.5 T	
Standard	Omni	Power	Omni	Power	Master


LAY OUT AND CONN.LOC.
IIM ASSY BEI

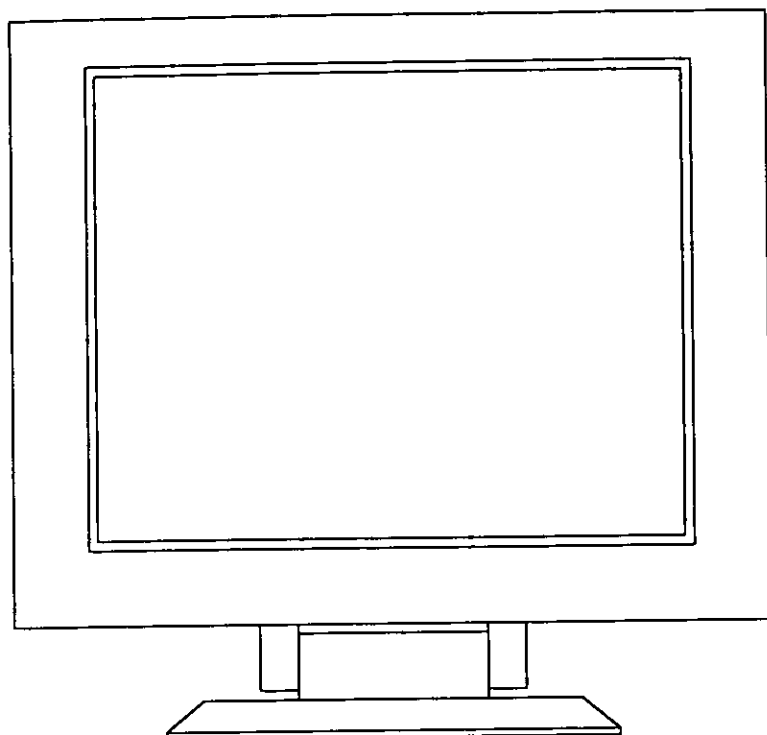


FRONT SIDE

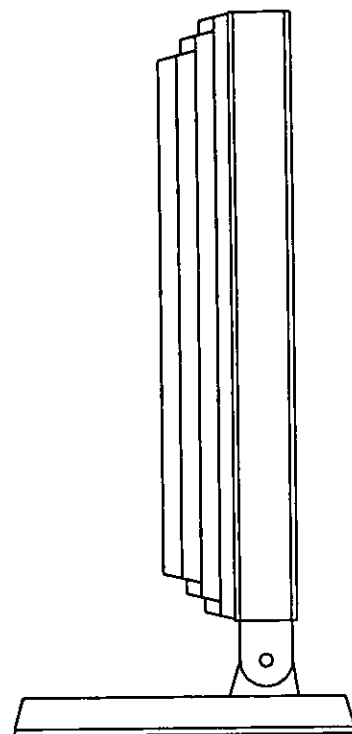

LEFT SIDE

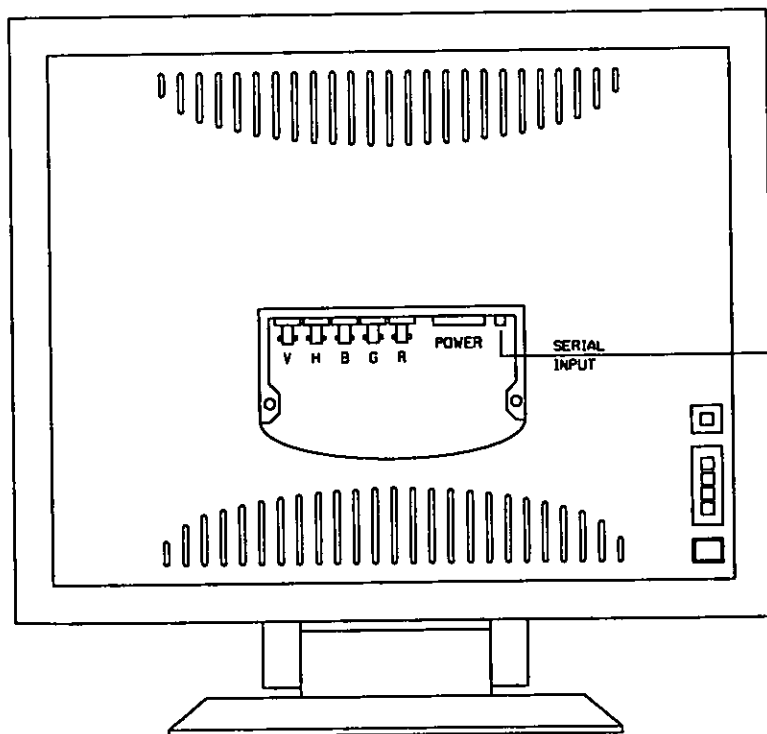


REAR SIDE

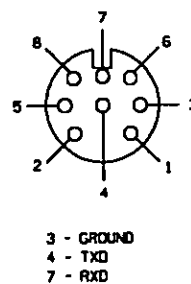


CONNECTOR LOCATION O.C. DISPLAY BM

Intera 0.5 T		Intera 1.0 T		Intera 1.5 T	
Standard	Onus	Power	Onus	Power	Master

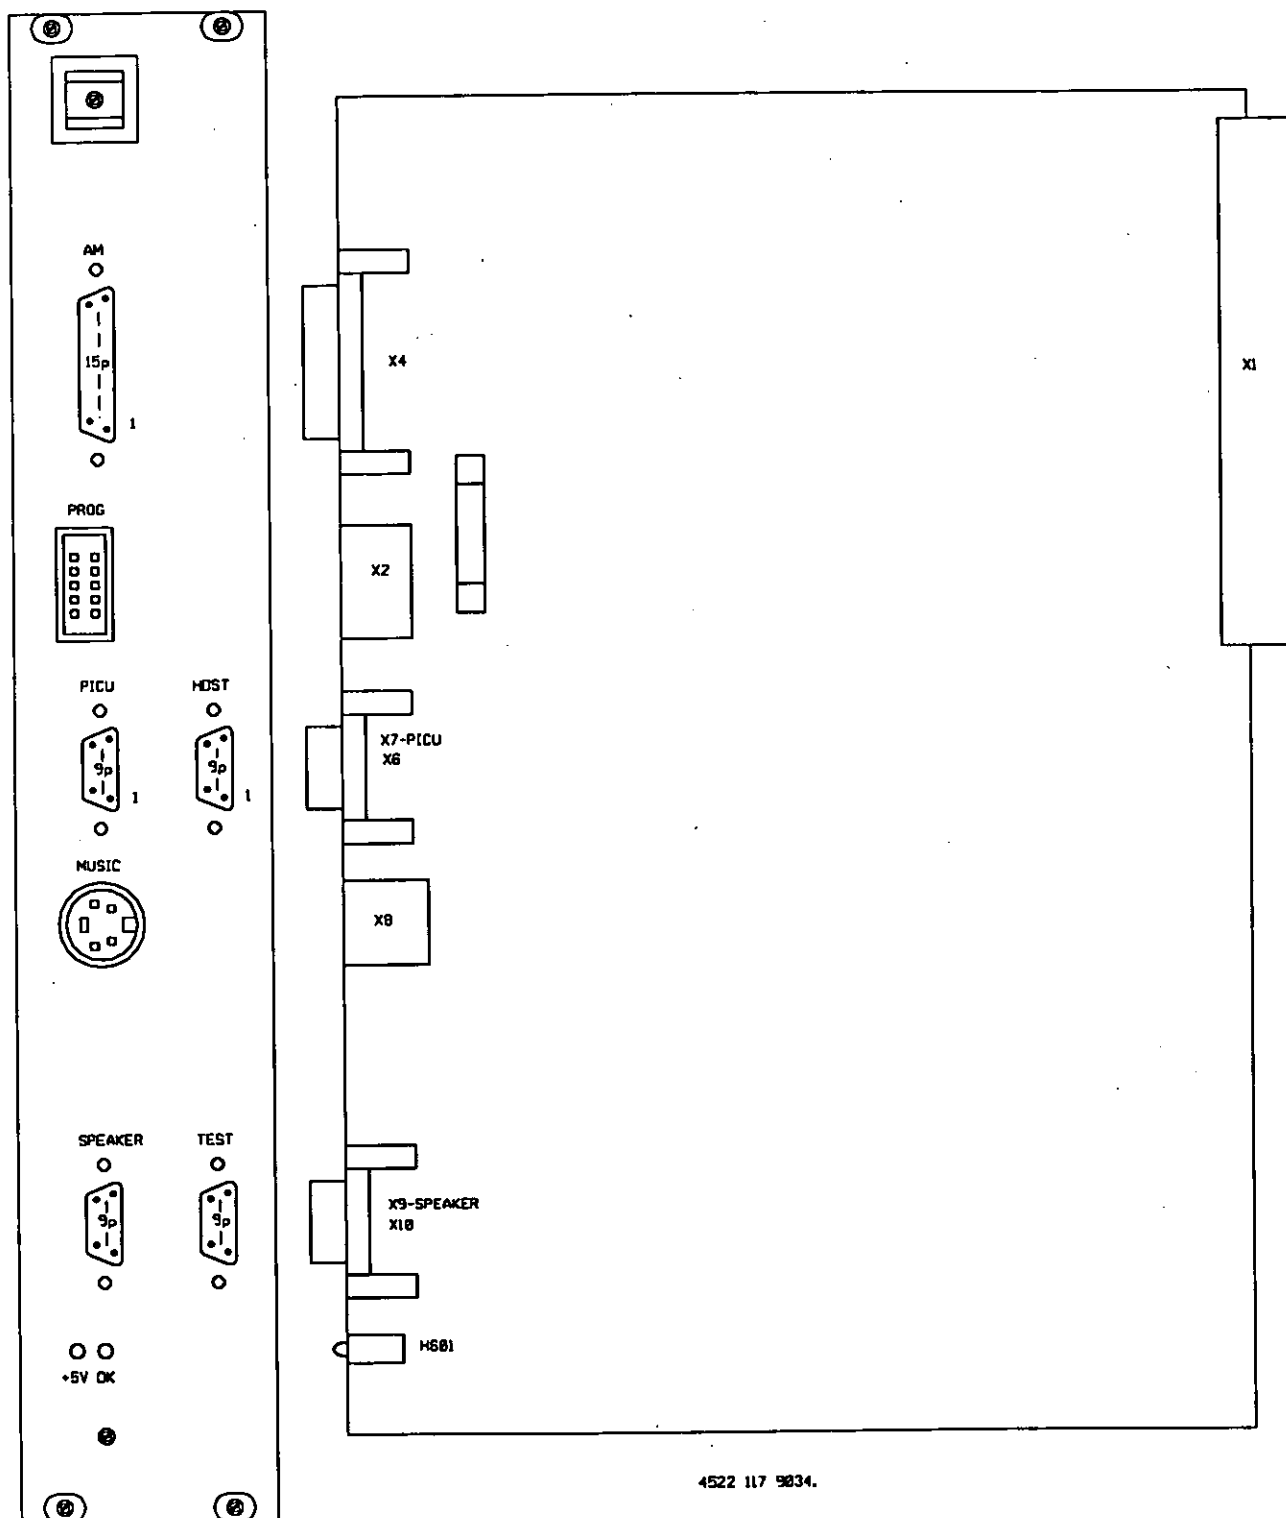


Intera 0.5 T		Intera 1.0 T		Intera 1.5 T		
Standard	Omni	Power	Omni	Power	Master	

CONNECTOR LOCATION AUDIO SWITCH 2 BEA

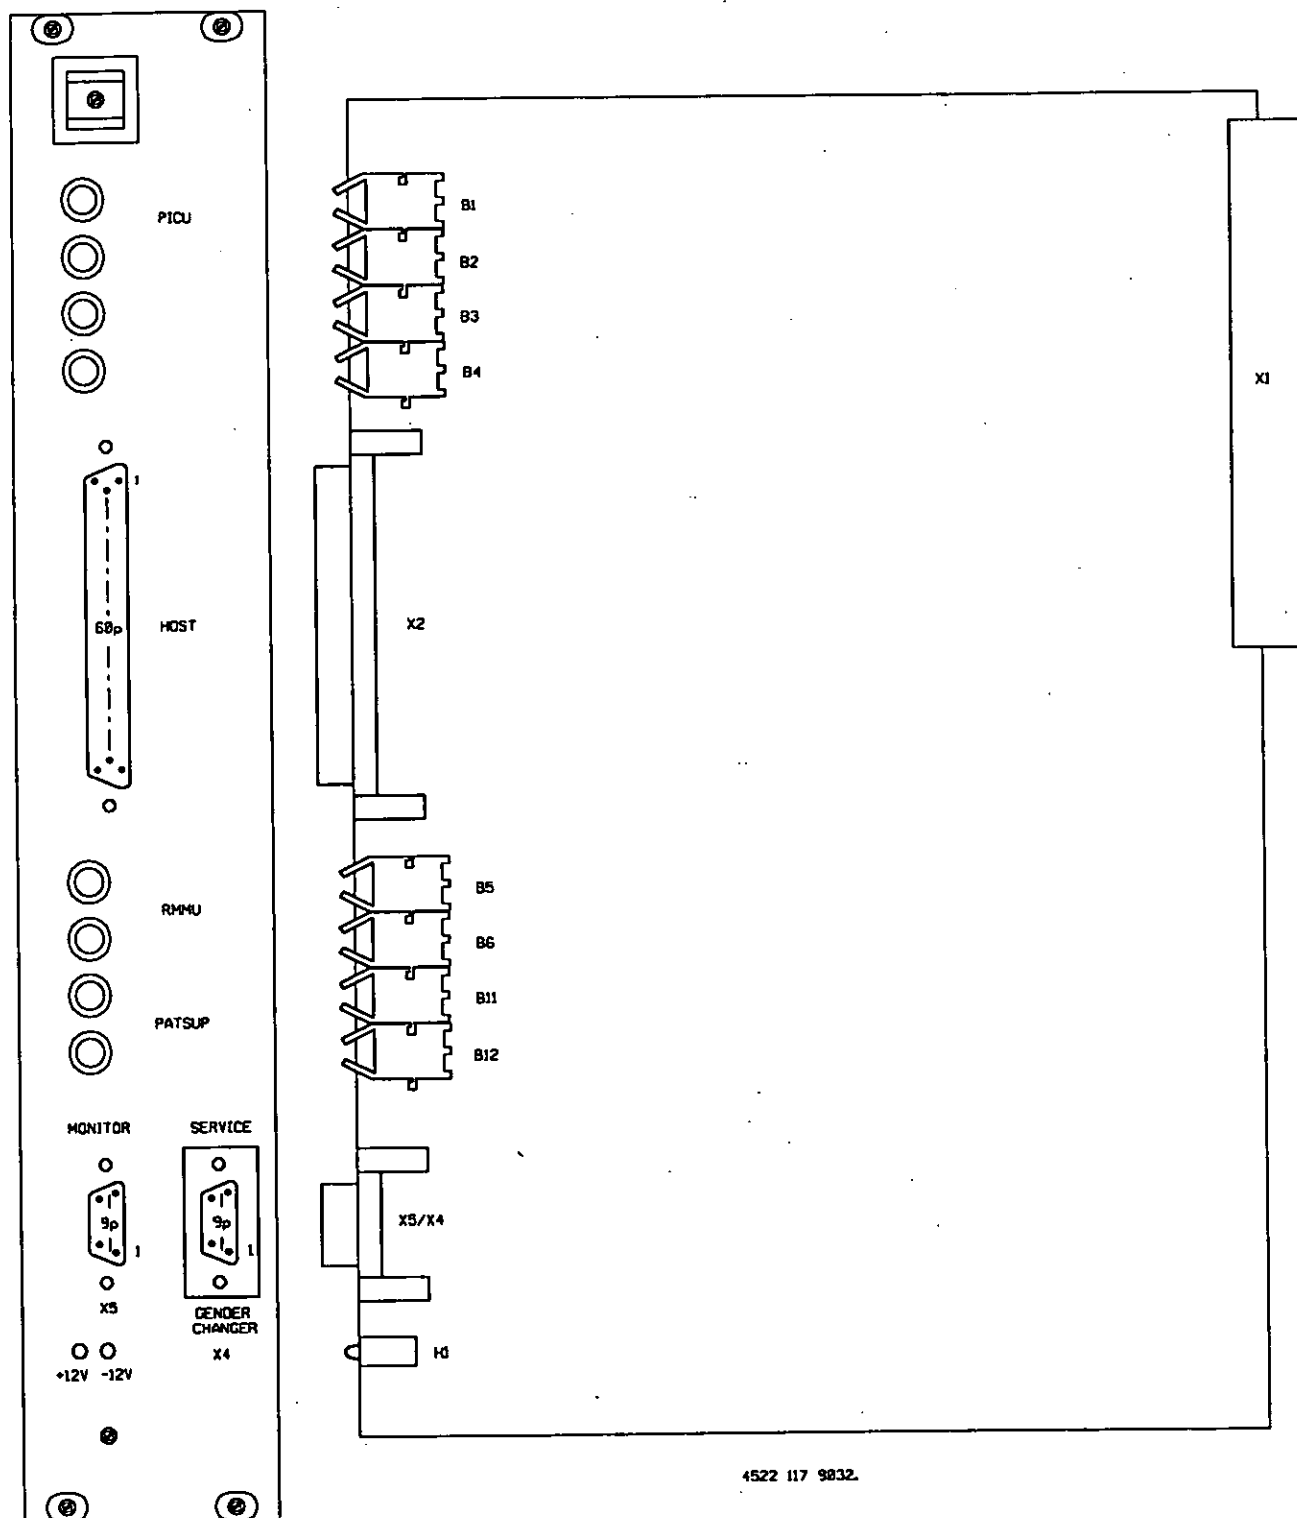

Intera 8.5 T		Intera 1.0 T		Intera 1.5 T	
Standard	Omni	Power	Omni	Power	Master

CONNECTOR LOCATION
RS232 FIBER2 BEB

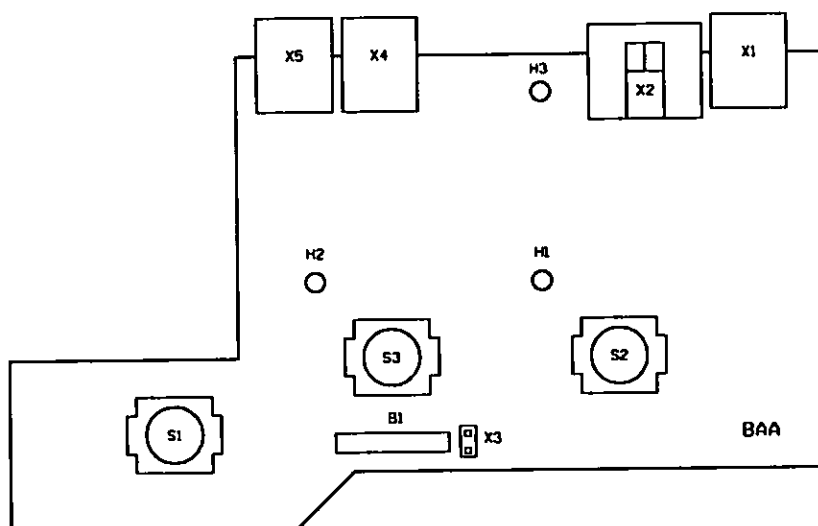





AUDIO MODULE

4522 117 8926.

CONNECTOR LOCATION AND JUMPER SETTING AUDIO MODULE 2 BA

Intera Q.5 T		Intera L8 T		Intera L5 T	
Standard	Qans	Power	Dans	Power	Master

VIEW B - B

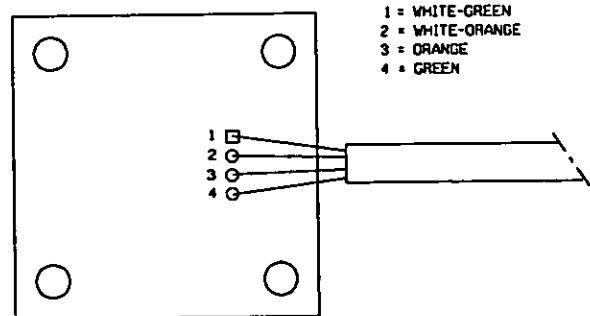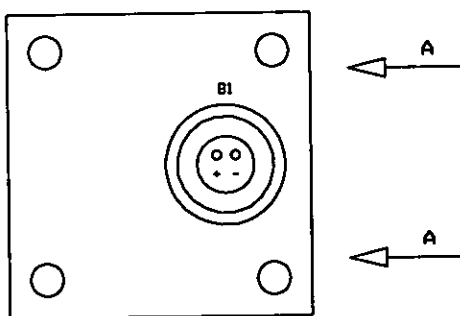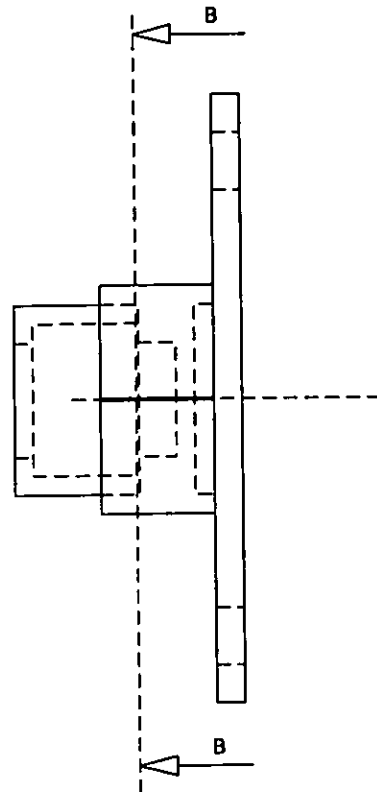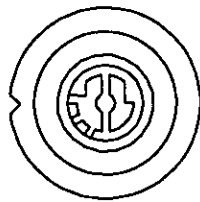

Intera 2.5 T		Intera 1.8 T		Intera 1.5 T	
Standard	Omni	Power	Omni	Power	Master

CONNECTOR LOCATION MICROPHONE BOX MVM