

INTRODUCTION



SYSTEM LEVEL



MAINS DISTRIBUTION



MAGNET



PATIENT SUPPORT



GRADIENT AMPLIFIER



DATA ACQUISITION SYSTEM



PHYSIOLOGY



OPERATOR CONSOLE



COMPUTER





OPTIONS



CONTENTS:



Simplified Diagram Patient Support-Intera L	Z1-5.1
Unit Location and Mechanics Patient Support-Intera L	Z3-5.1
Control Unit Patient Support-Intera LC	Z3-5.2
Jumper Setting PLC Extension Board LCC1	Z3-5.3
Jumper Setting Patient Support-Intera PLC LCC2	Z3-5.4
Jumper Setting Servo Amplifier Board Patient Support-Intera LCC3	Z3-5.5
Jumper Setting Power Supply unit LB	Z3-5.6
Lay out Patient Support-Intera PICU 2 Front MC1	Z3-5.7
Covers Patient Support-Intera L	Z3-5.8
Horizontal Drive Unit Patient Support-Intera LH	Z3-5.9
Vertical Actuator Patient Support-Intera LA	Z3-5.10
Mechanical Installation Patient Support-Intera L	Z3-5.11
Vertical Actuator Replacement Patient Support-Intera	Z3-5.12

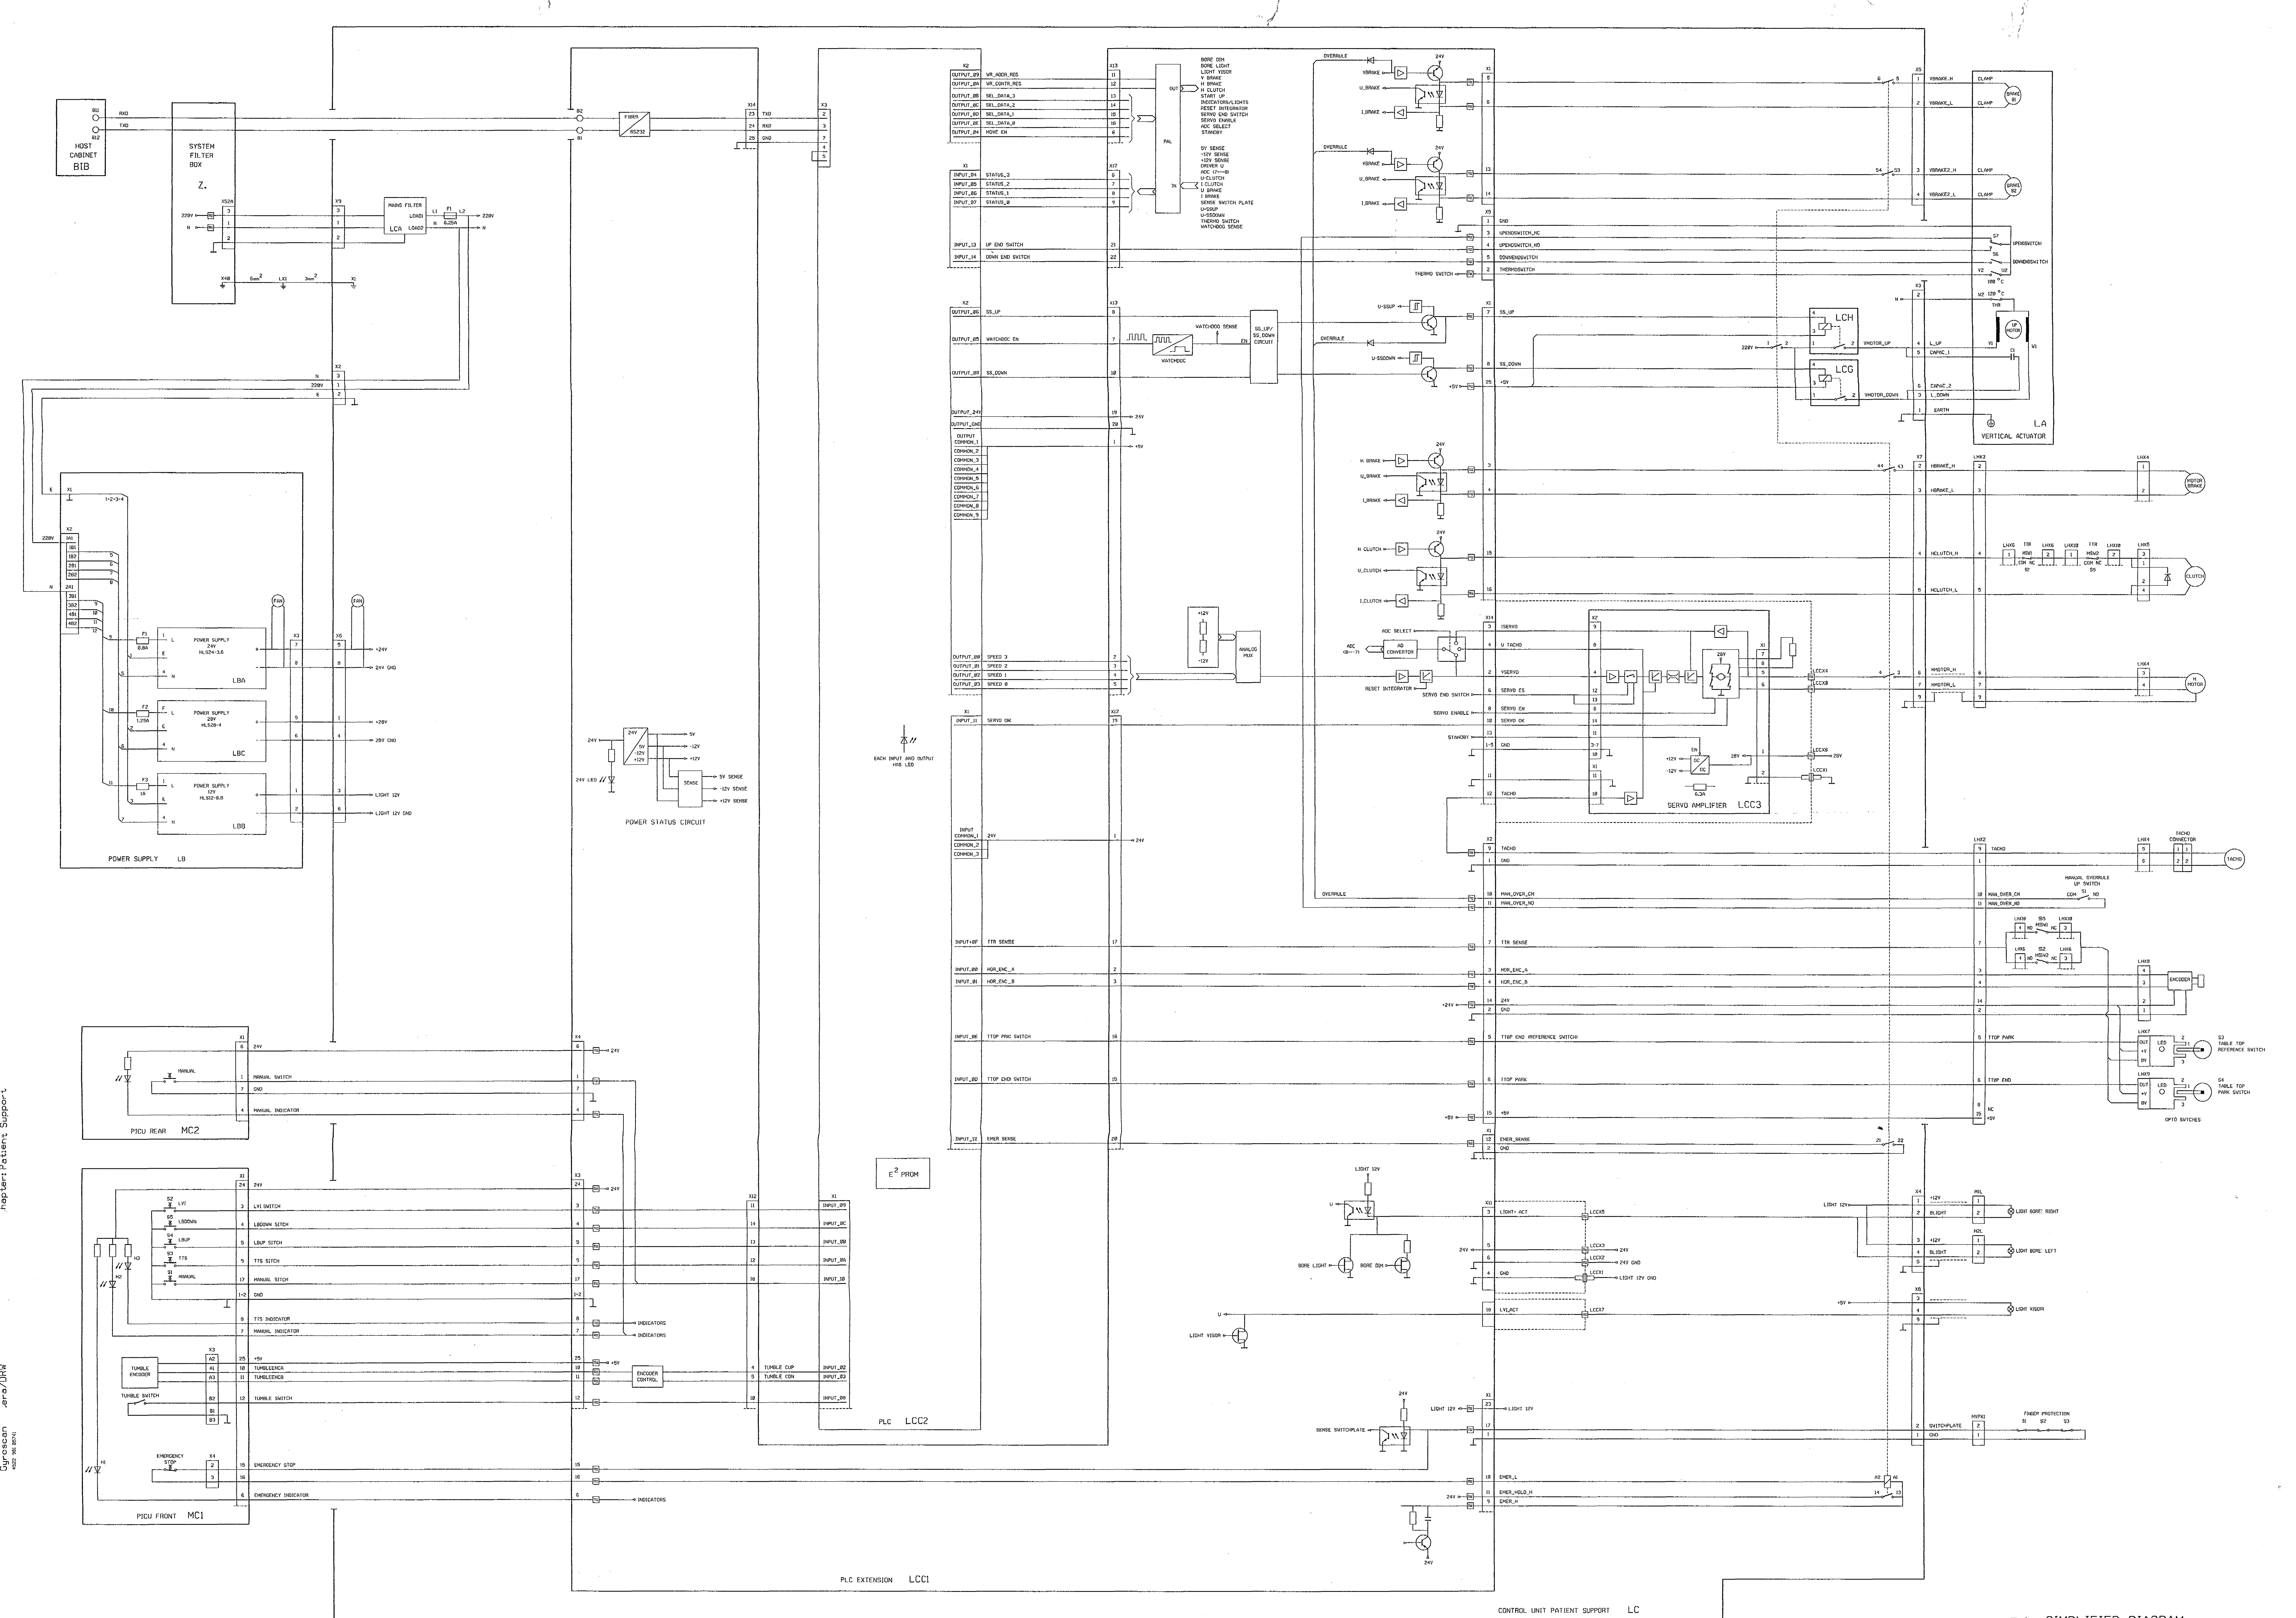

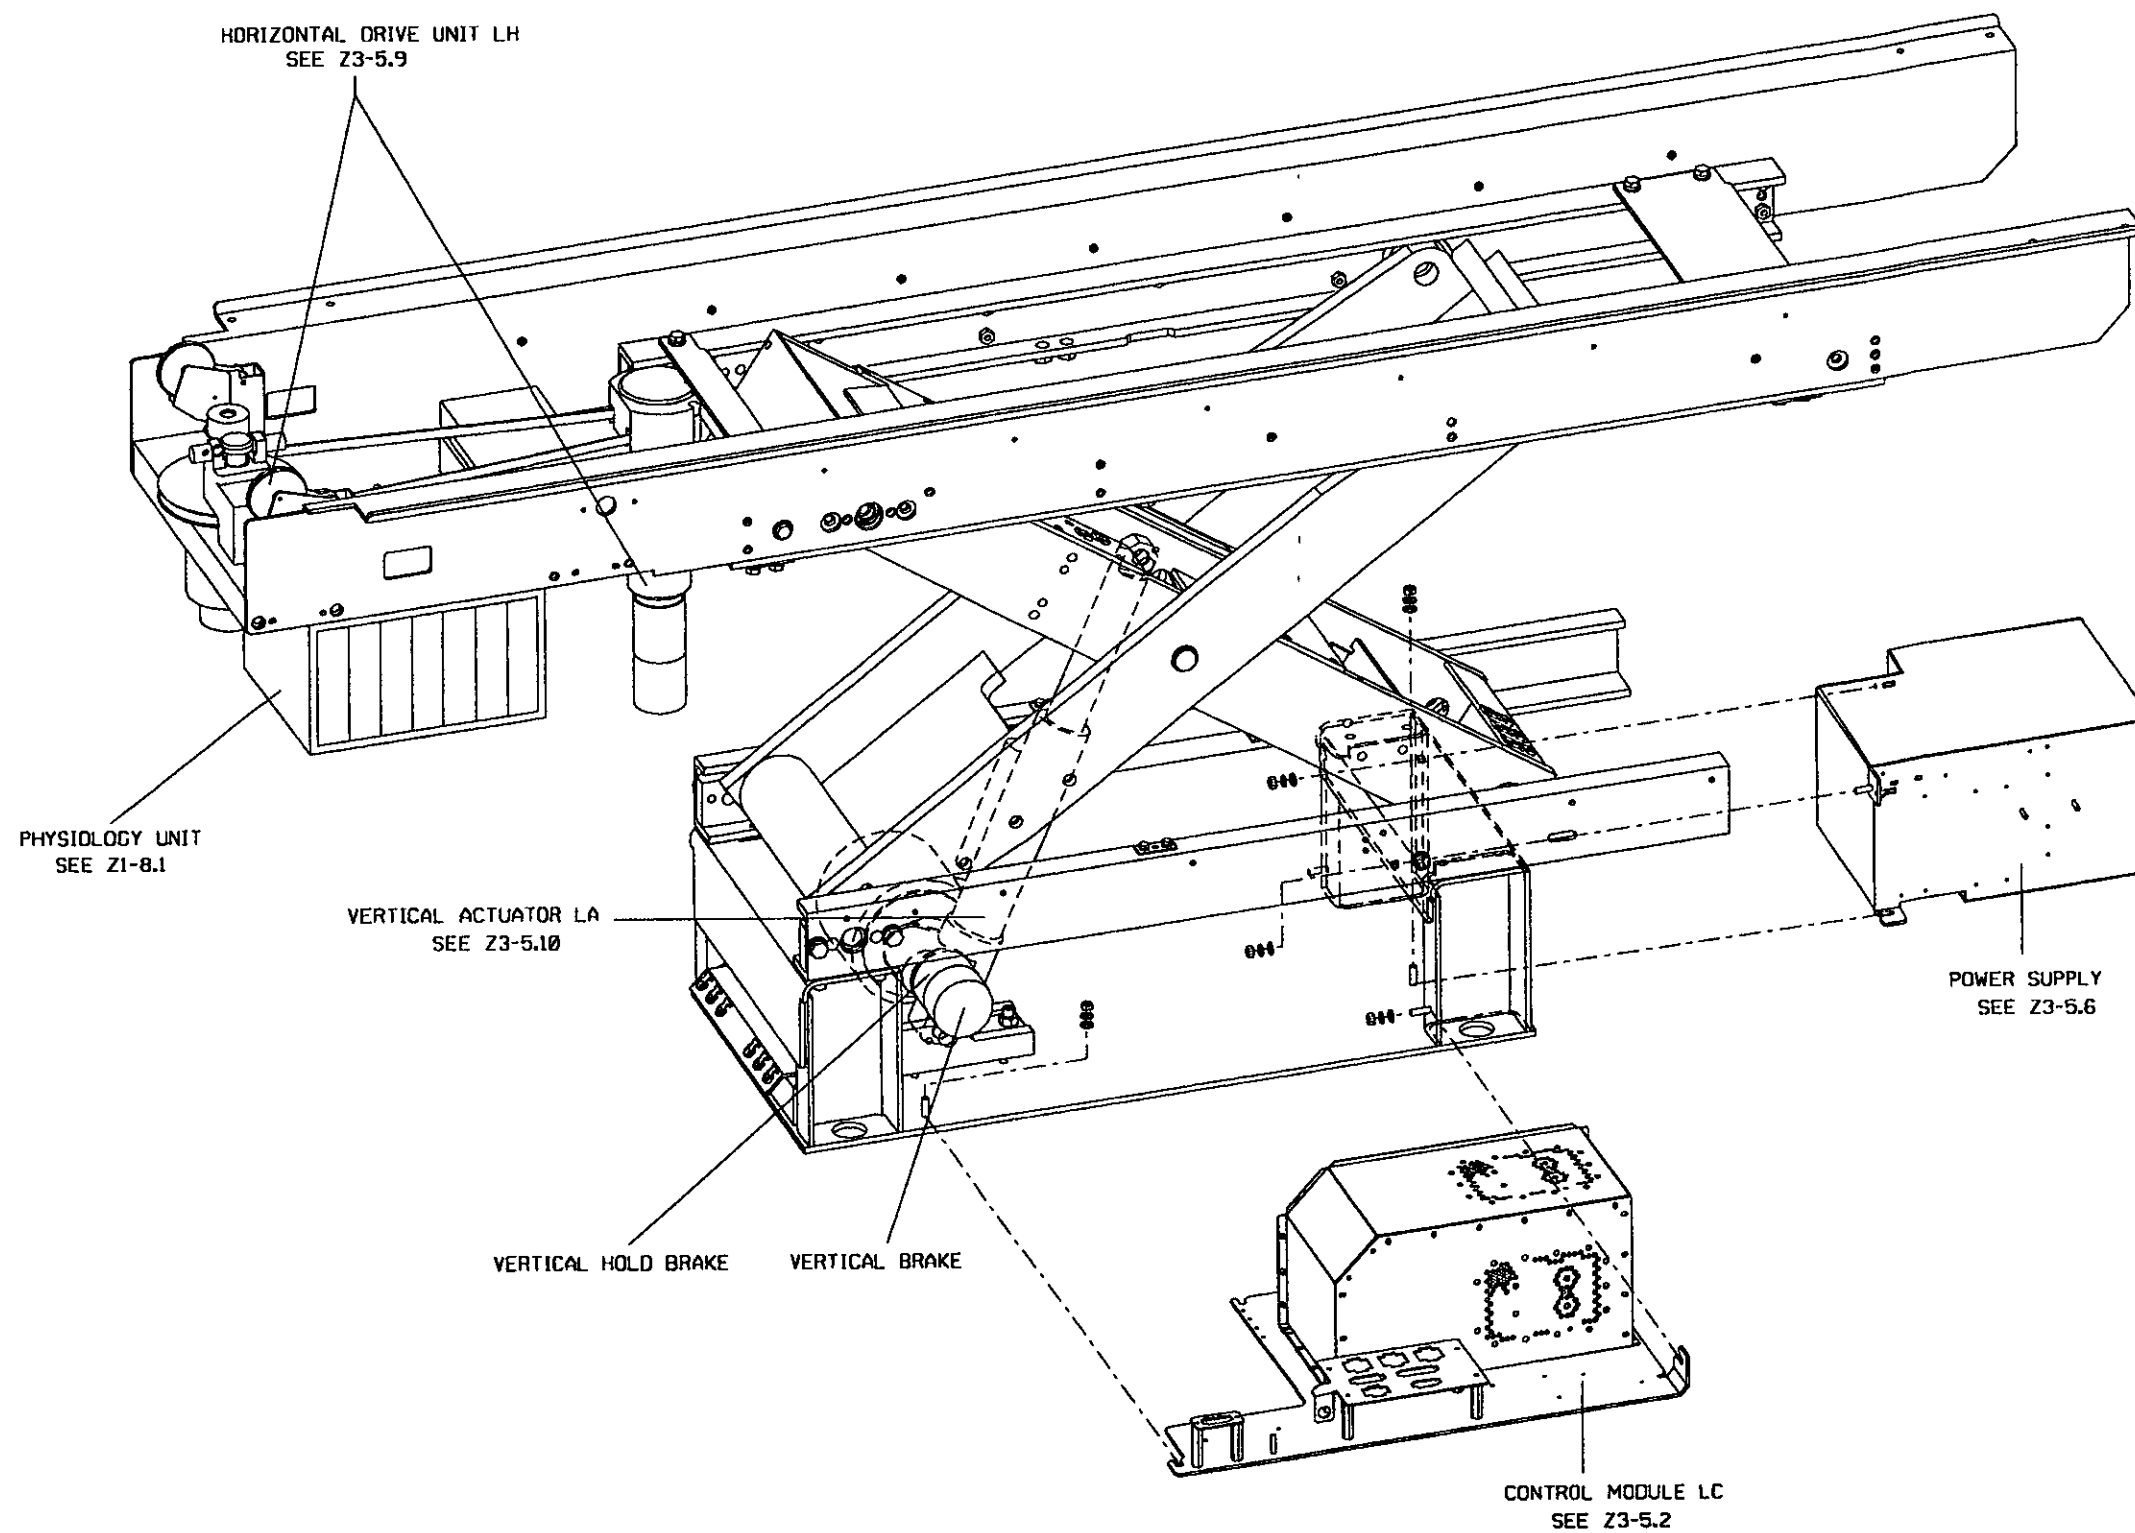


Intera 0.5 T			Intera 1.0 T			Intera 1.5 T		
Standard	Omni	Power	Omni	Power	Master			

UNIT LOCATION AND MECHANICS PATIENT SUPPORT Intera L.

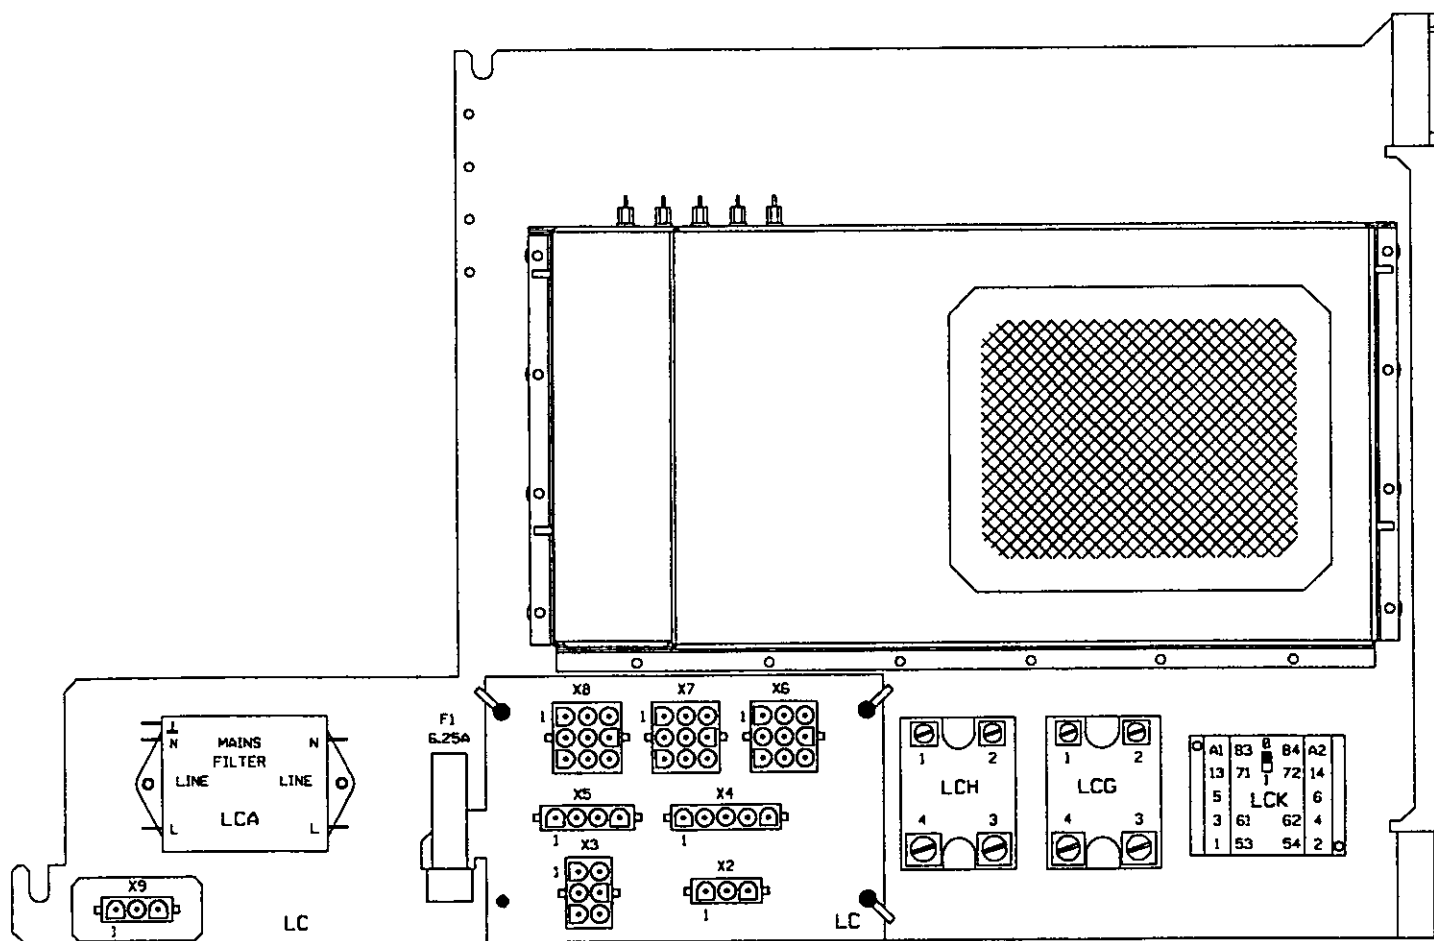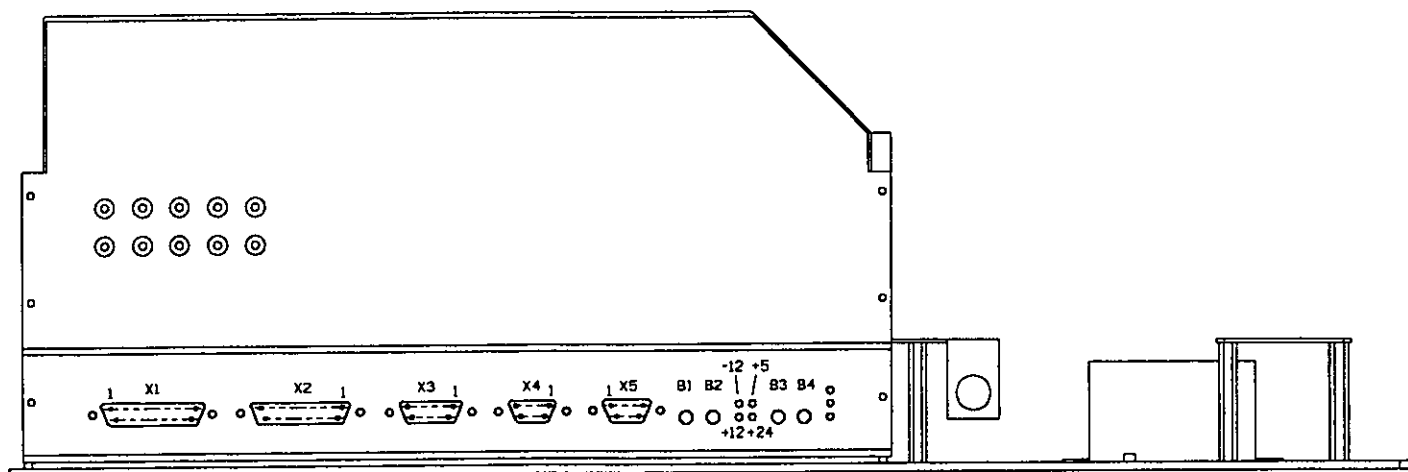


Intera 05 T		Intera 10 T		Intera L5 T	
Standard	Omni	Power	Omni	Power	Master

CONTROL UNIT
PATIENT SUPPORT Intera LC

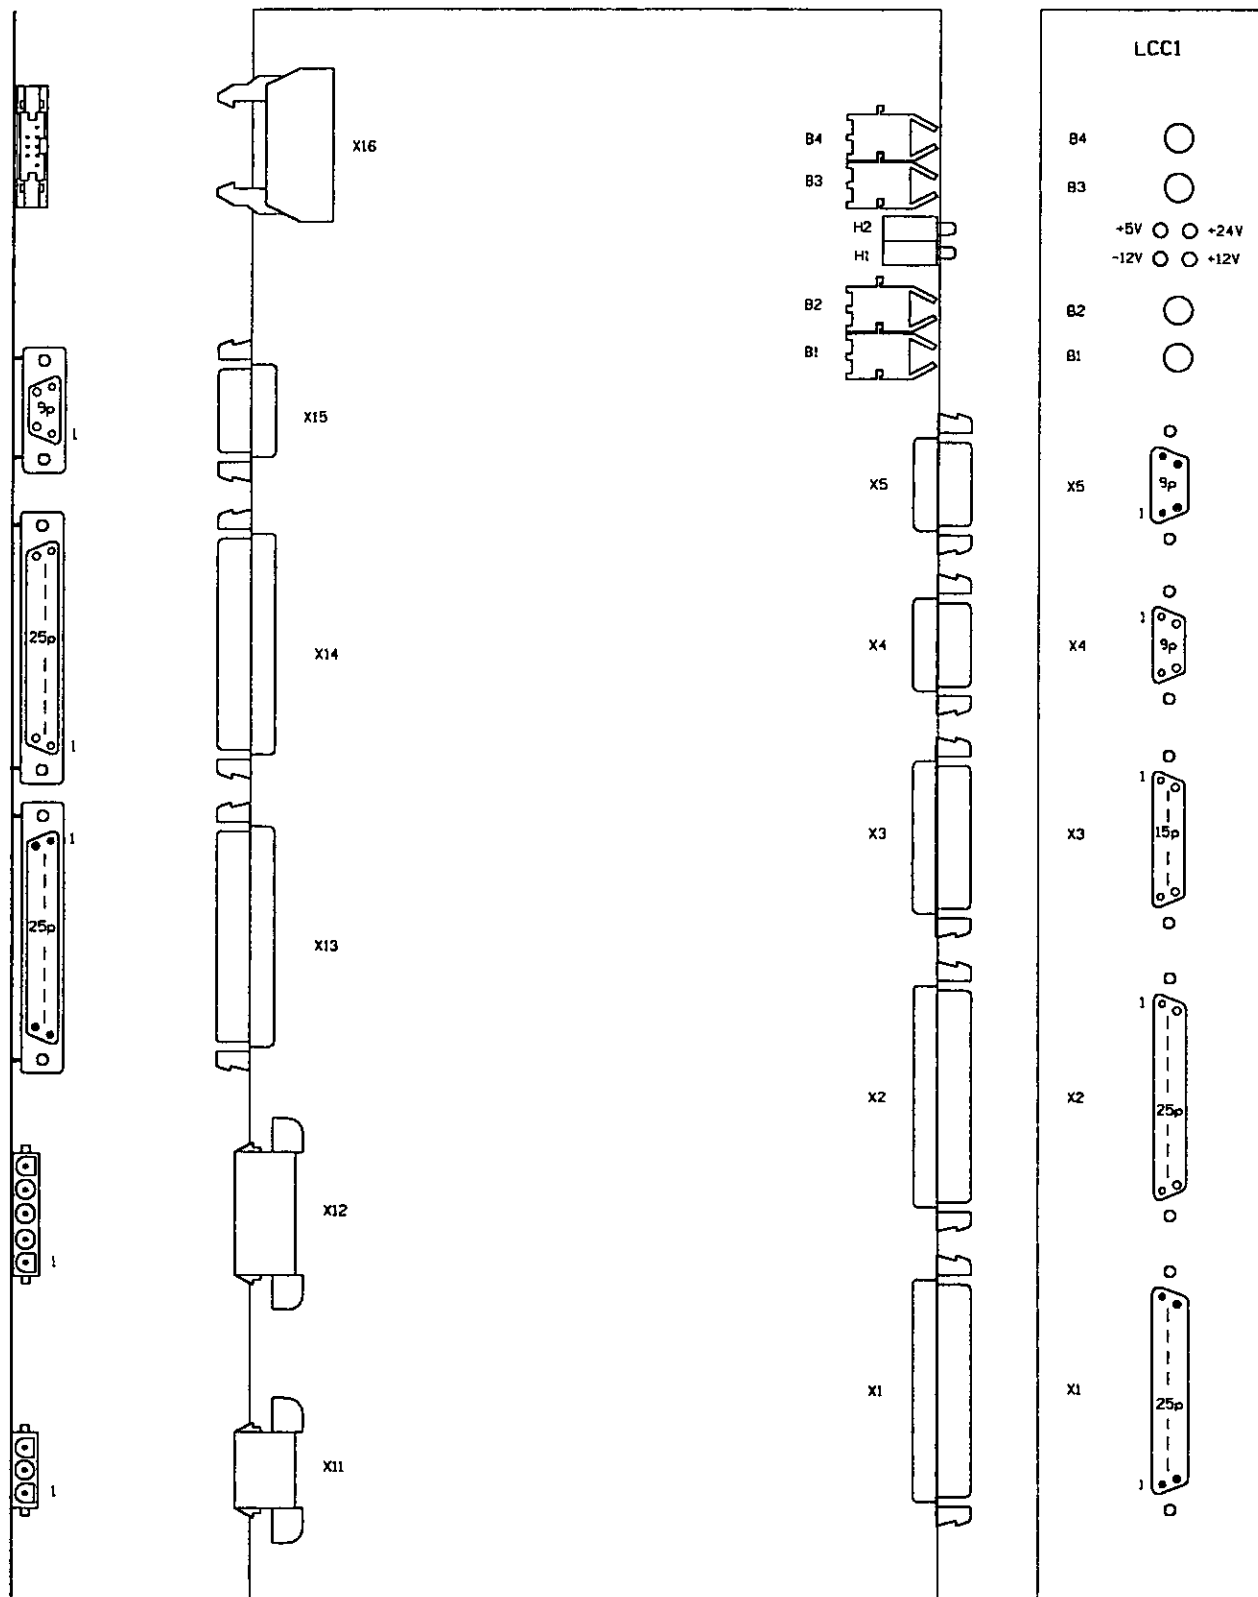


Intera 05 T	Intera 1.0 T		Intera 1.5 T		
Standard	Omni	Power	Omni	Power	Master

JUMPER SETTING PLC EXTENSION BOARD LCC1

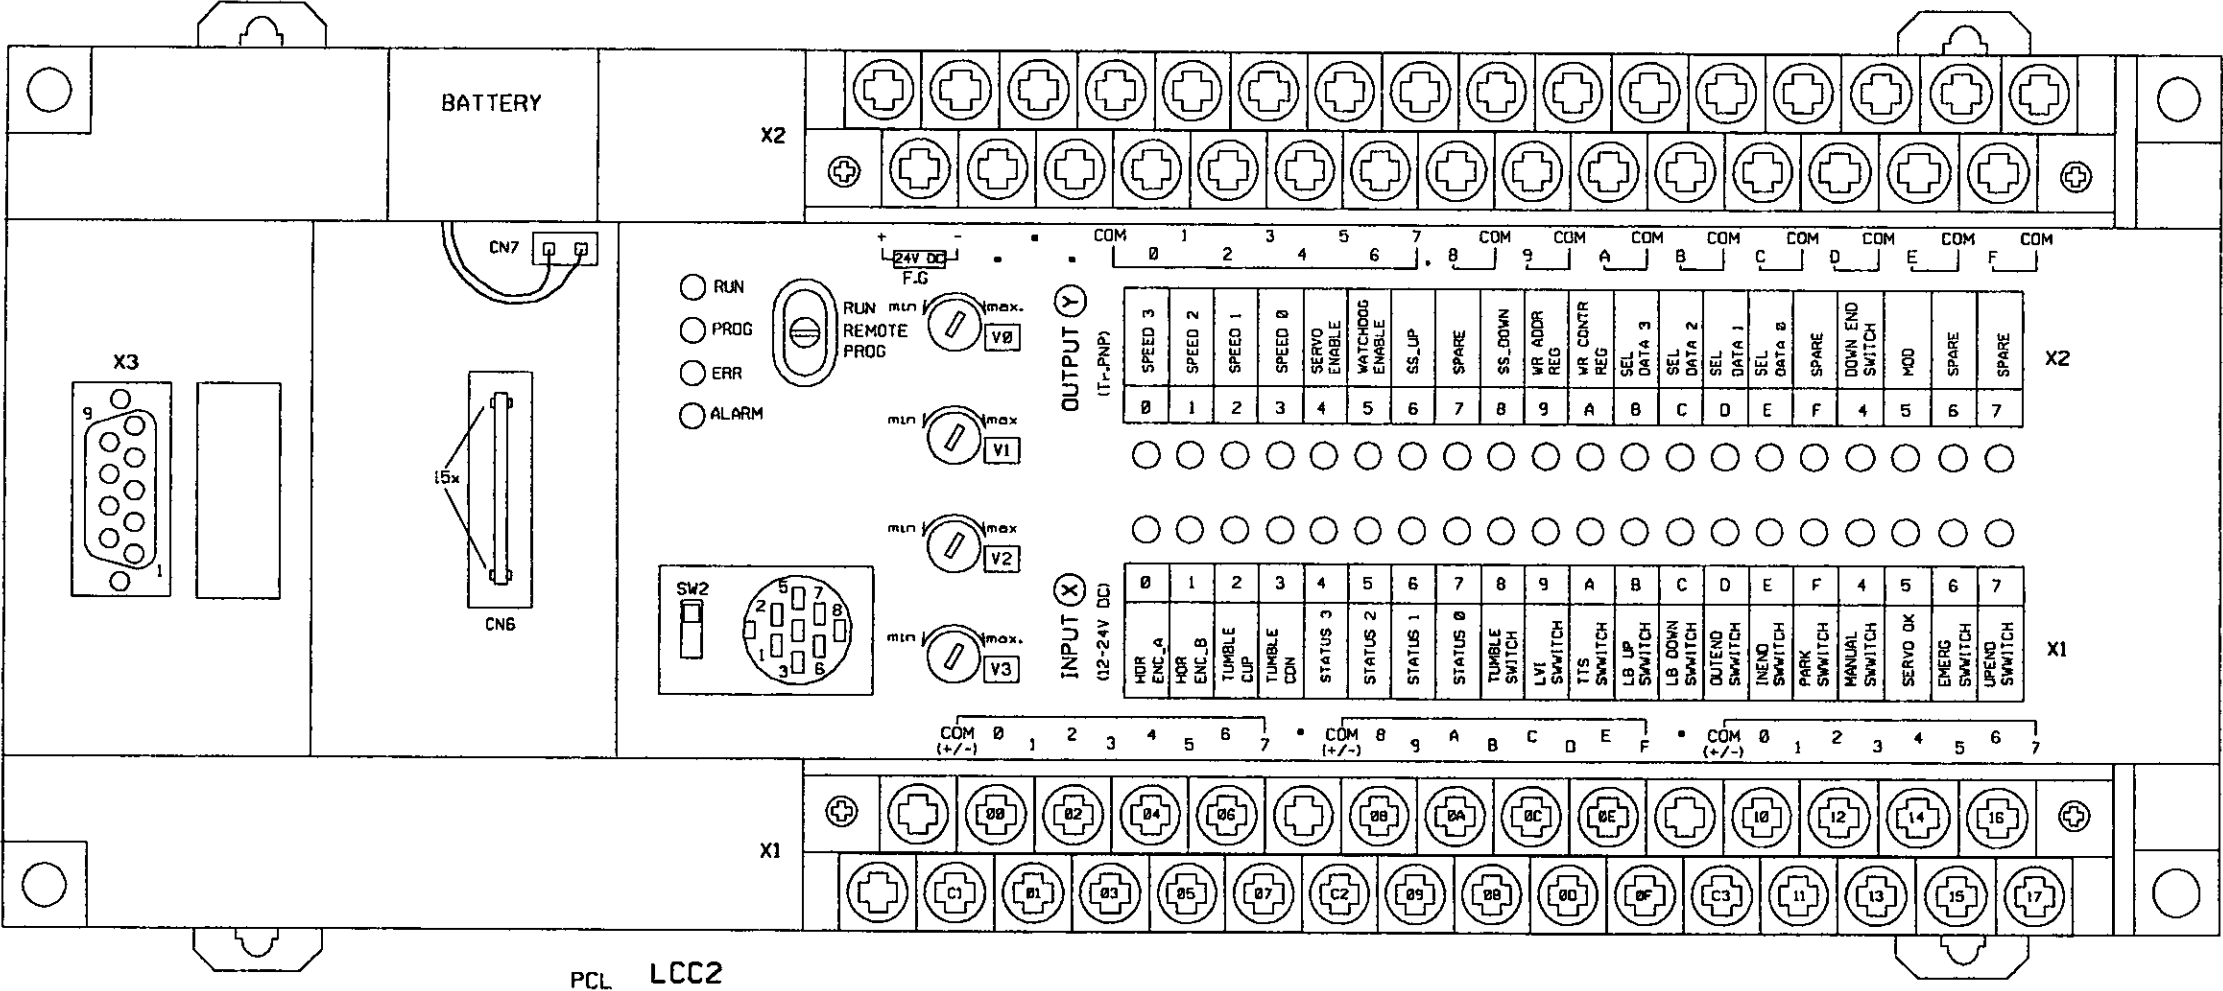

Intera 05 T	Intera 1.0 T	Intera 1.6 T
Standard	Omni	Power
Standard	Omni	Power
Standard	Omni	Master

JUMPER SETTING
PATIENT SUPPORT Intera
PLC LCC2

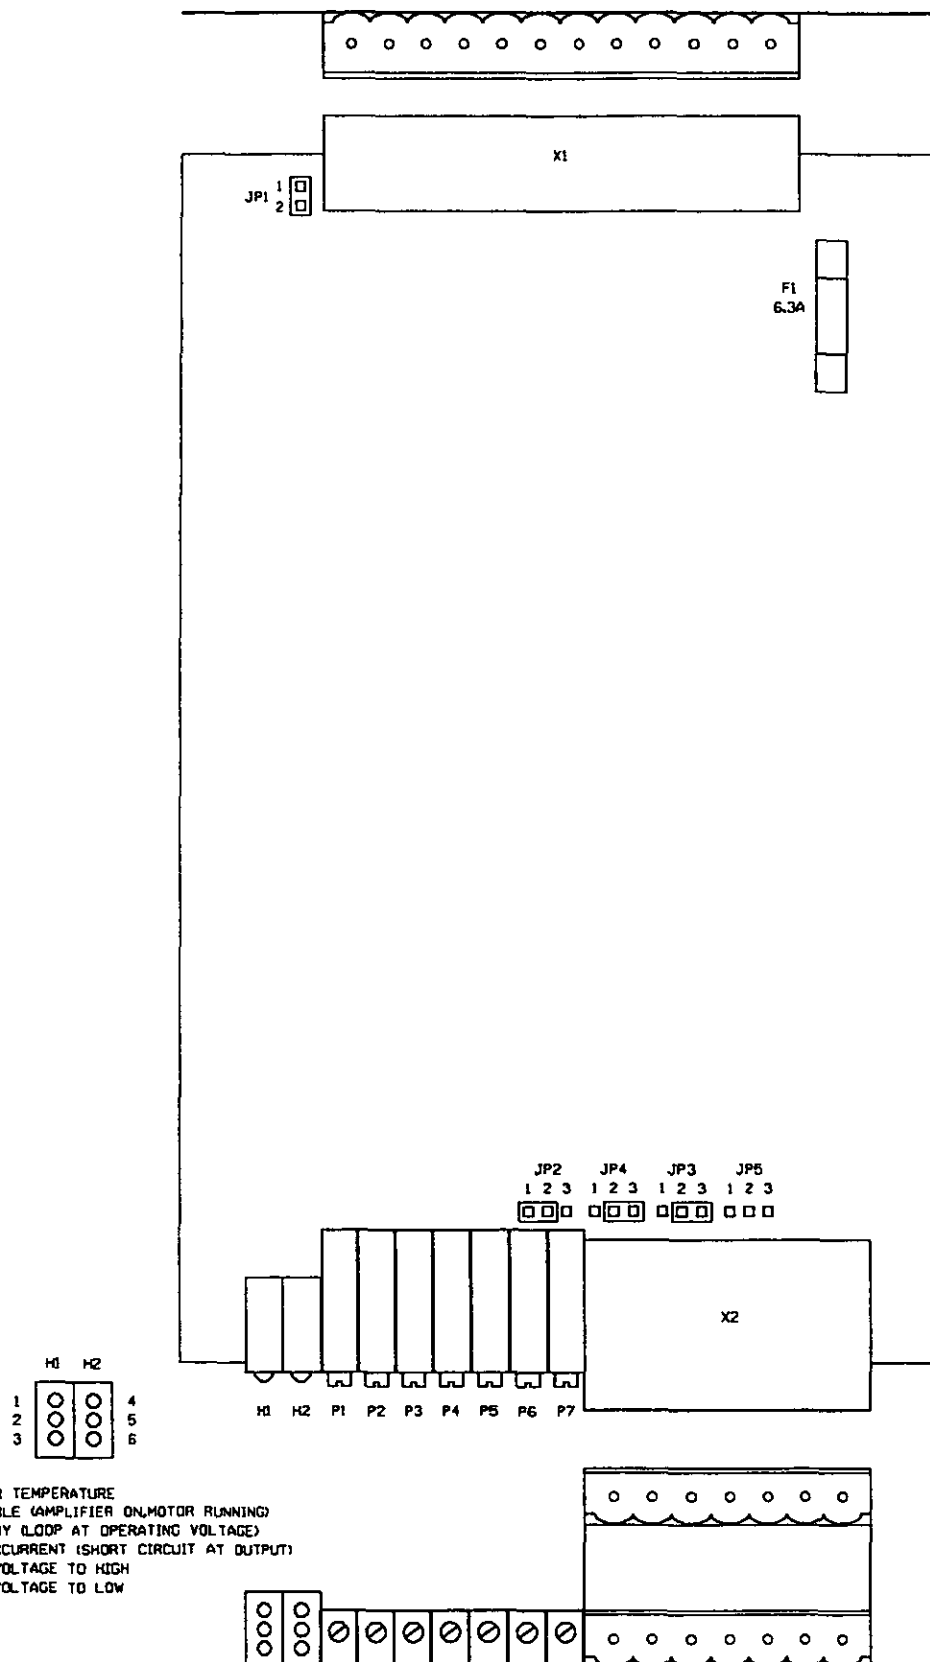

- 1 = OVER TEMPERATURE
2 = ENABLE (AMPLIFIER ON, MOTOR RUNNING)
3 = READY (LOOP AT OPERATING VOLTAGE)
4 = OVERCURRENT (SHORT CIRCUIT AT OUTPUT)
5 = DC VOLTAGE TO HIGH
6 = DC VOLTAGE TO LOW




Intera 0.5 T			Intera 1.0 T			Intera 1.5 T		
Standard	Onus	Power	Onus	Power	Master			

JUMPER SETTING PATIENT SUPPORT Intera SERVO AMPLIFIER BOARD LCC3

MR/Intera-DRW-71


00.0

Z3-5.5

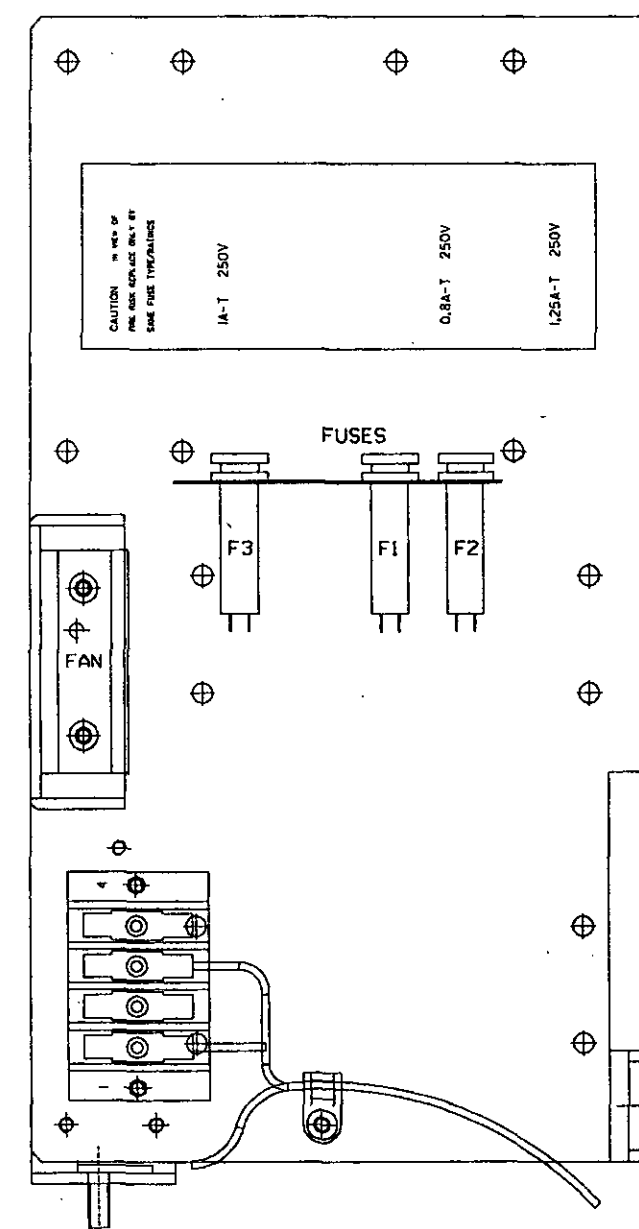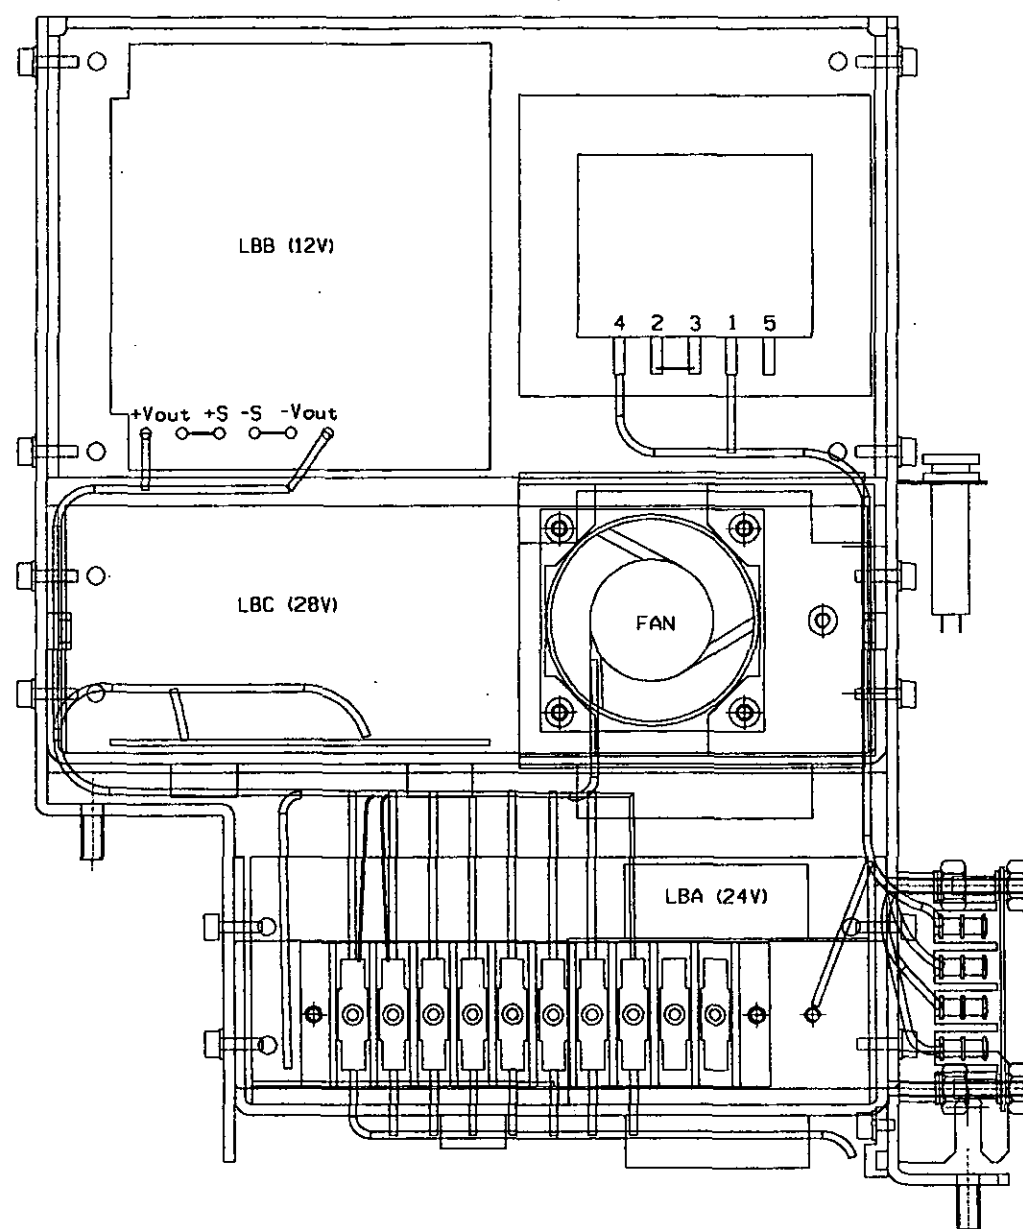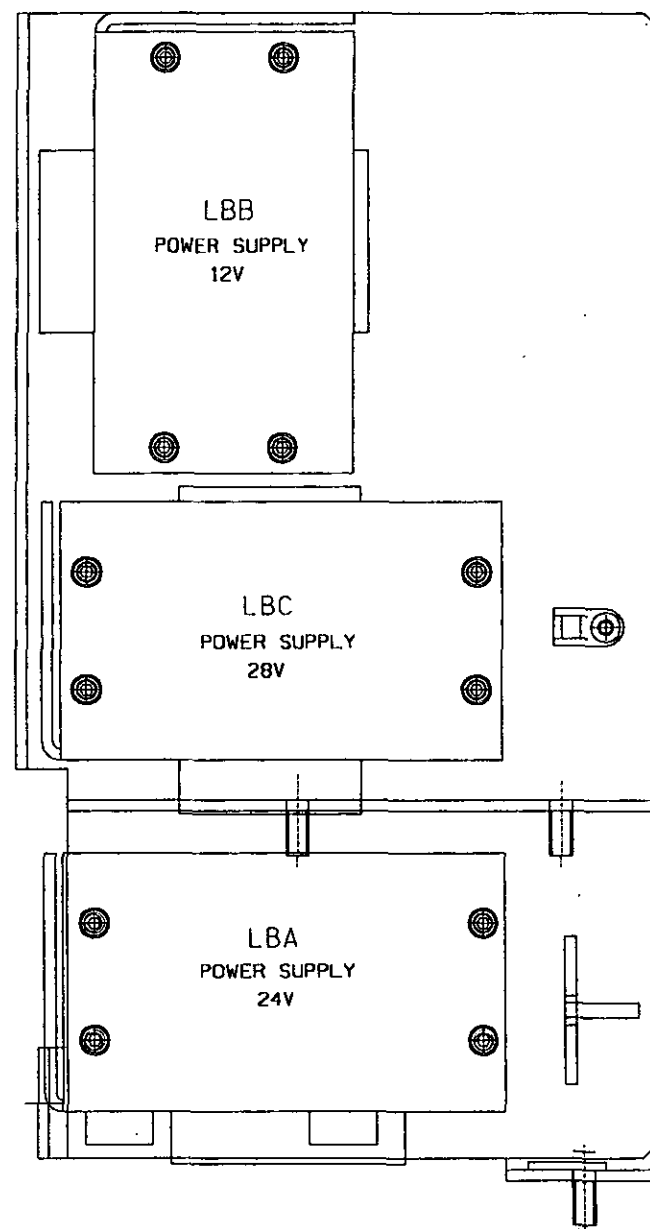



Intera 0.5 T	Intera 1.0 T		Intera 1.5 T		
Standard	Omni	Power	Omni	Power	Master

JUMPER SETTING POWER SUPPLY UNIT LB

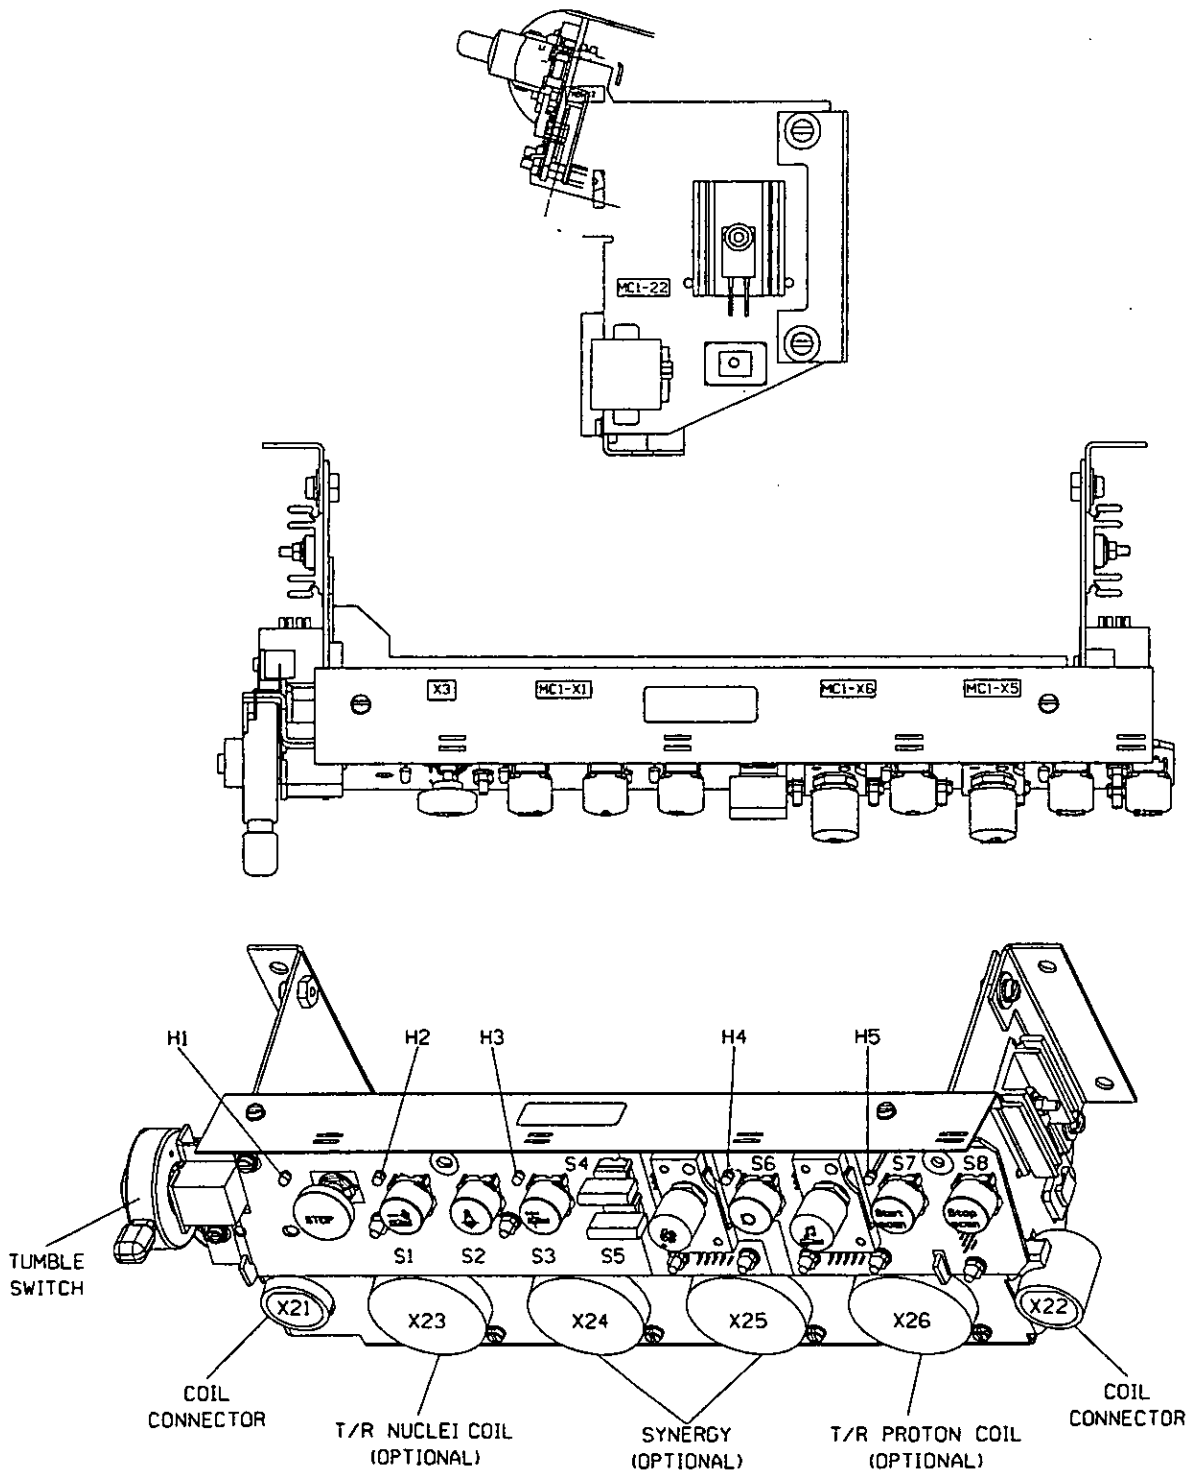


Intera 0.5 T		Intera 1.0 T		Intera 1.5 T	
Standard	Omni	Power	Omni	Power	Master

LAY OUT PATIENT SUPPORT
Intera PICU2 FRONT MC1

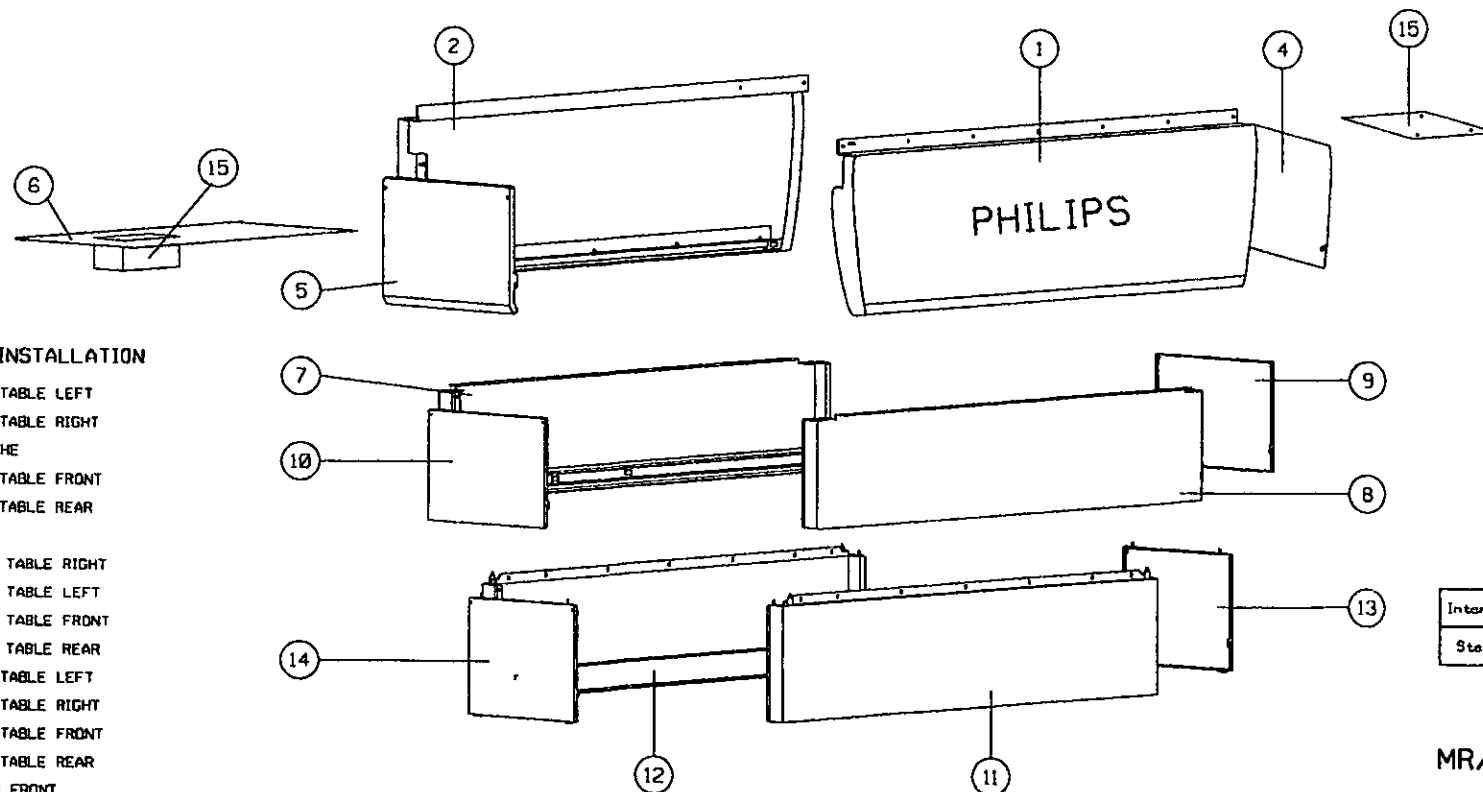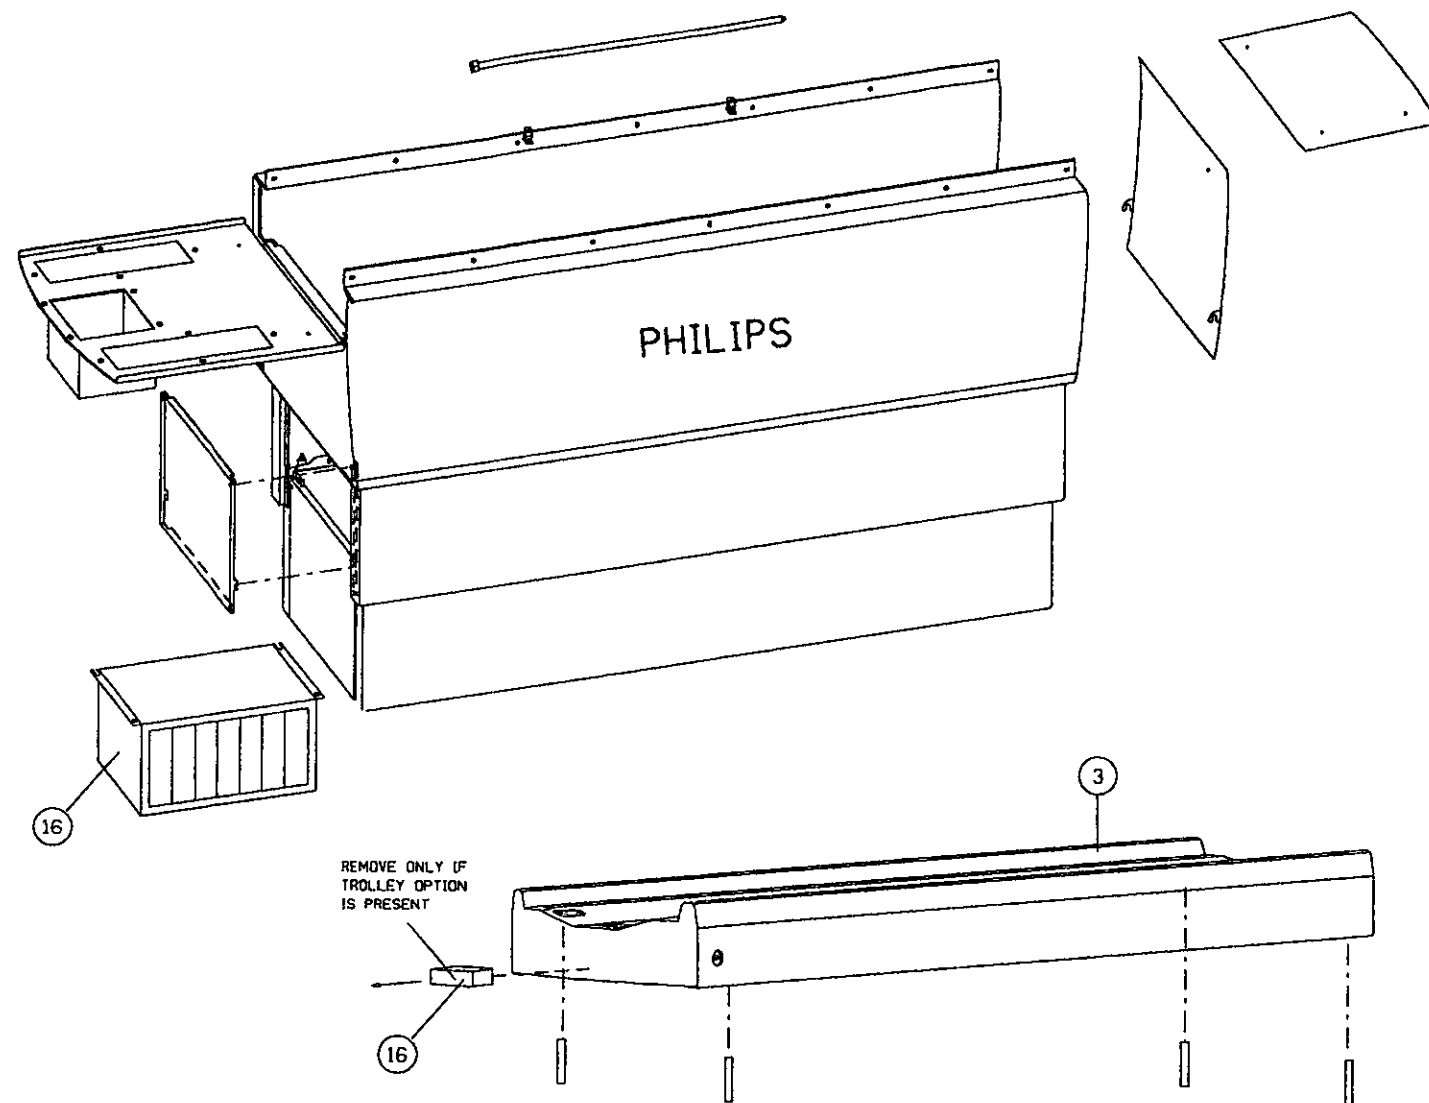

SEQUENCE OF INSTALLATION

- 1 UPPER COVER TABLE LEFT
- 2 UPPER COVER TABLE RIGHT
- 3 TABLE STRETCHER
- 4 UPPER COVER TABLE FRONT
- 5 UPPER COVER TABLE REAR
- 6 COVER HDU
- 7 MIDDLE COVER TABLE RIGHT
- 8 MIDDLE COVER TABLE LEFT
- 9 MIDDLE COVER TABLE FRONT
- 10 MIDDLE COVER TABLE REAR
- 11 LOWER COVER TABLE LEFT
- 12 LOWER COVER TABLE RIGHT
- 13 LOWER COVER TABLE FRONT
- 14 LOWER COVER TABLE REAR
- 15 BOTTOM COVER FRONT
- 16 TROLLEY SAFETY CAP
- 17 PHYSIOLOGY COVER

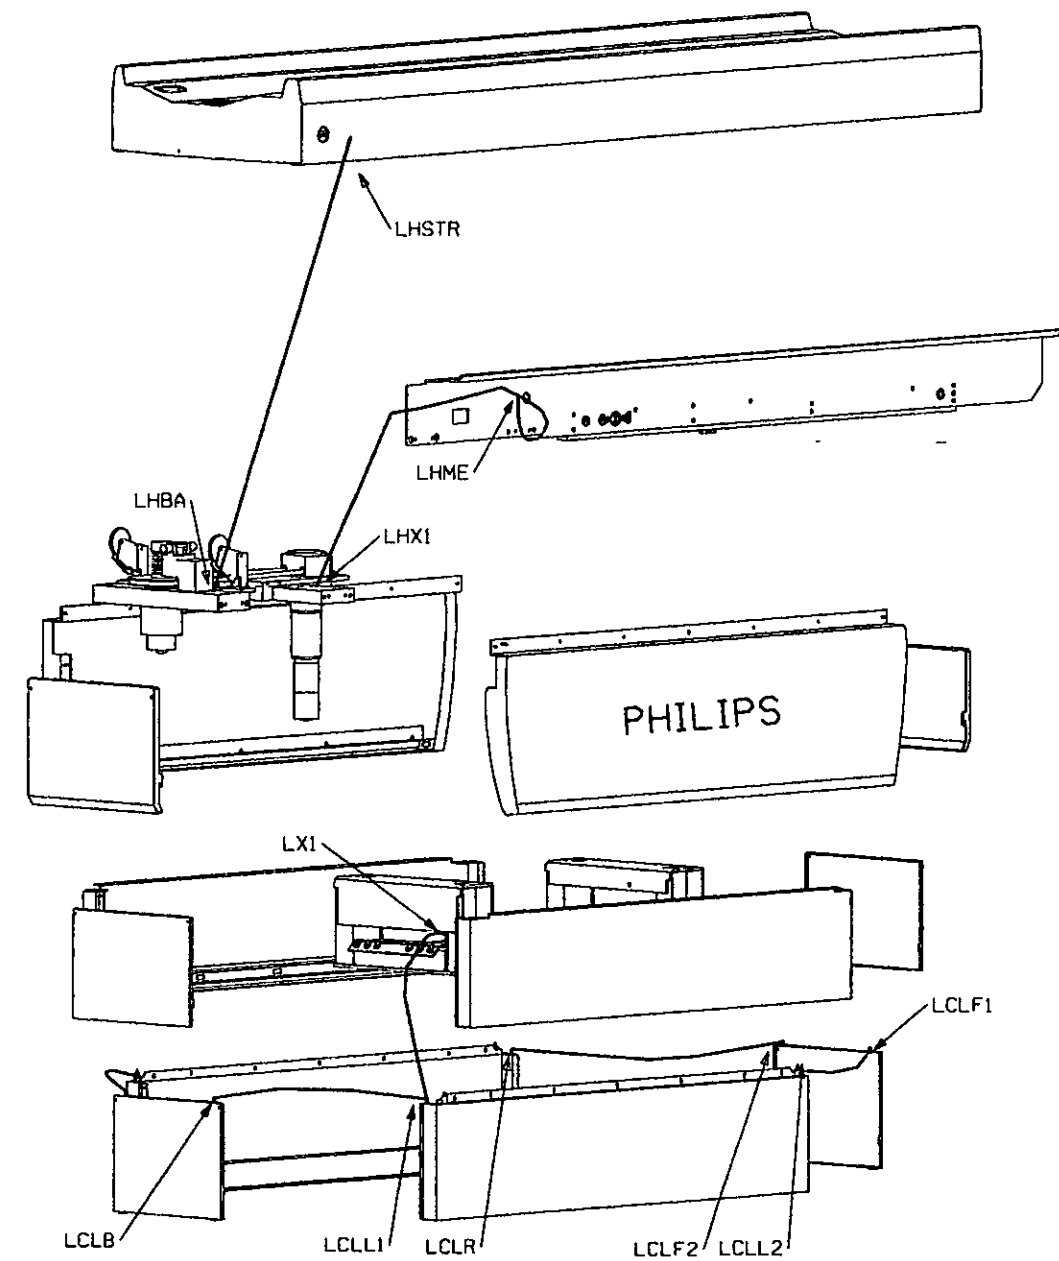

EARTH WIRES



Intera 85 T	Intera 120 T	Intera 15 T
Standard	Omni	Power
	Omni	Power
		Master

COVERS
PATIENT SUPPORT Intera L.

MR/Intera-DRW-71

99.0

Z3-5.8

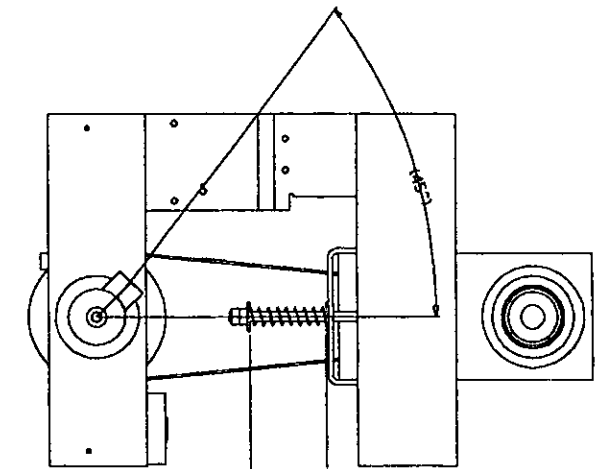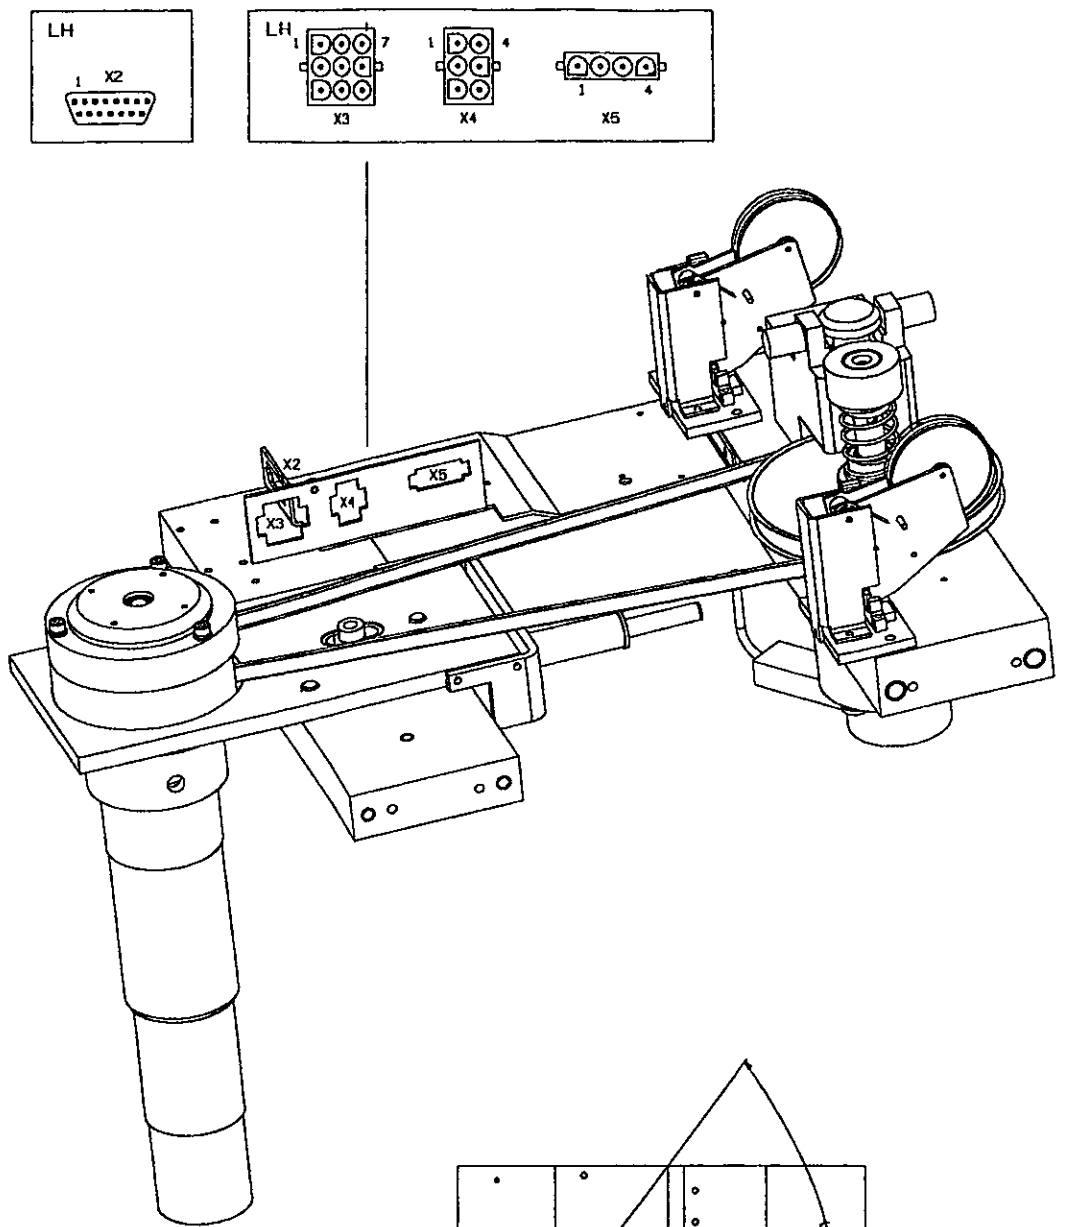

BOTTOM VIEW HDU

42 +/- 1mm	1.51
52 +/- 1mm	1.01
57 +/- 1mm	0.5



HORIZONTAL DRIVE UNIT LH
PATIENT SUPPORT Intera

Intera 0.5 T		Intera 1.0 T		Intera 1.5 T		
Standard		Omni	Power	Omni	Power	Master

MR/Inter-a-DRW-71

99.0

Z3-5.9

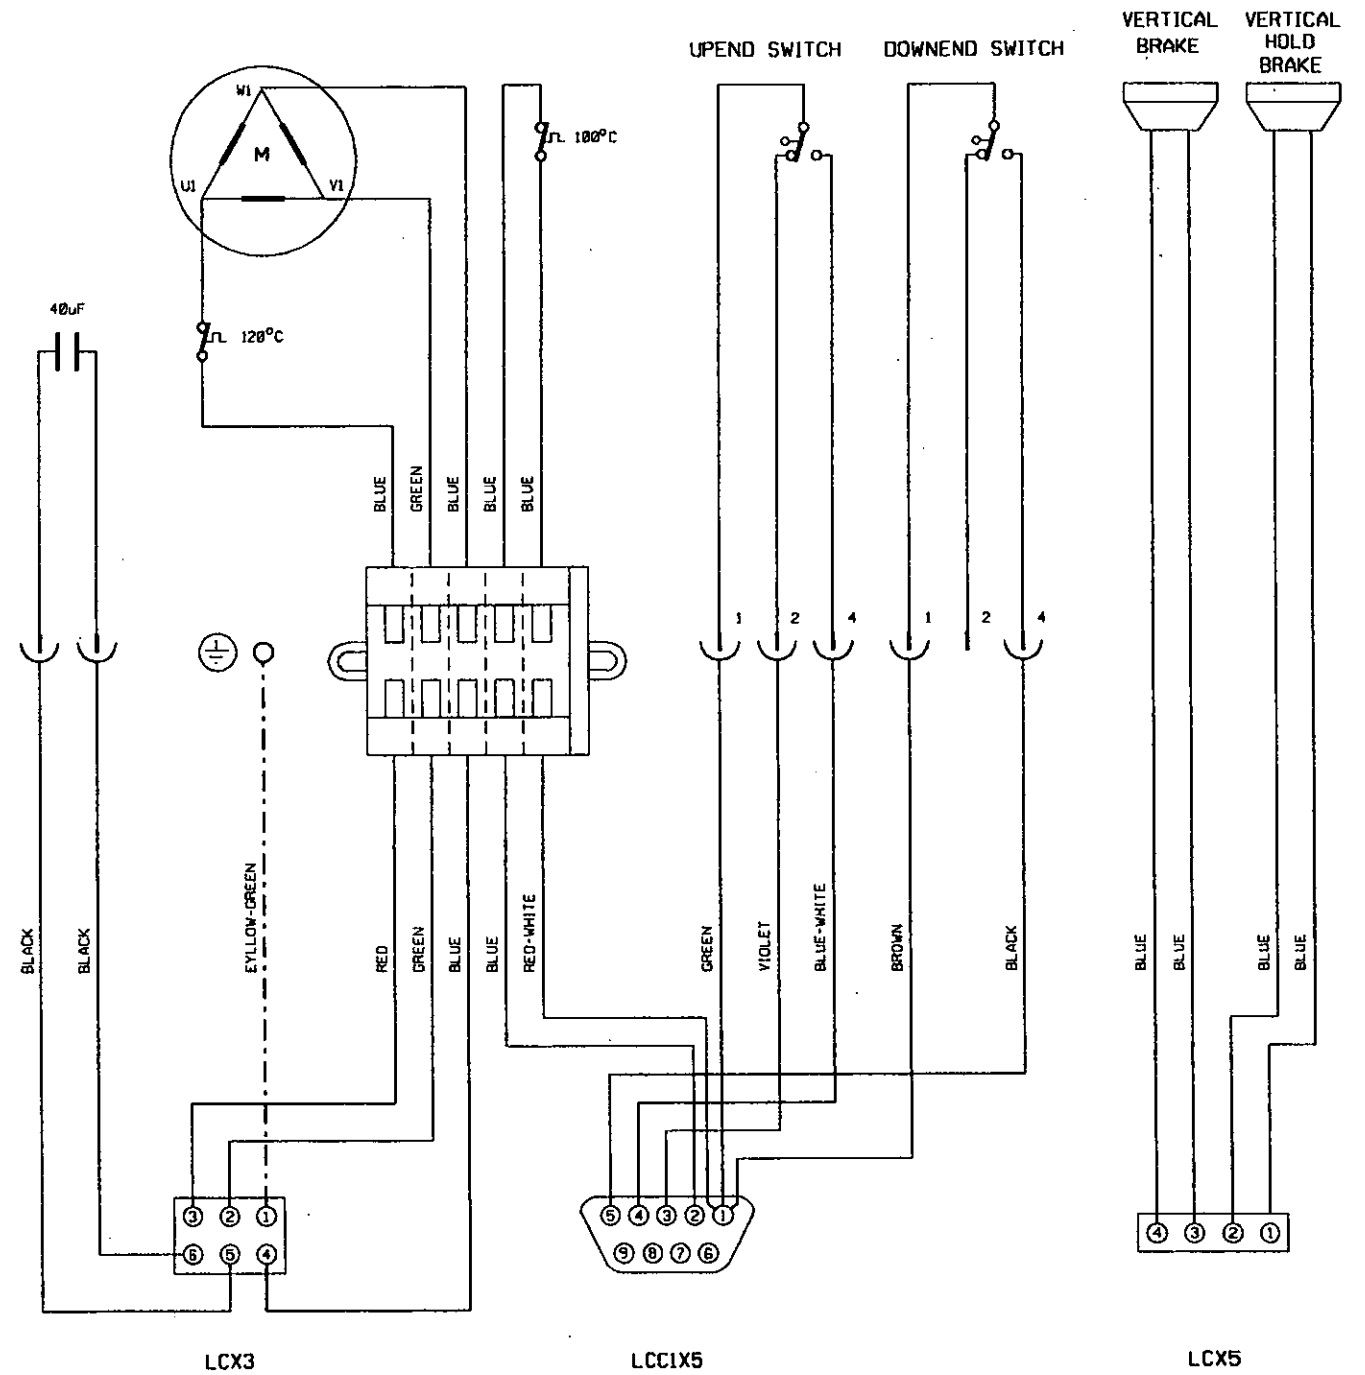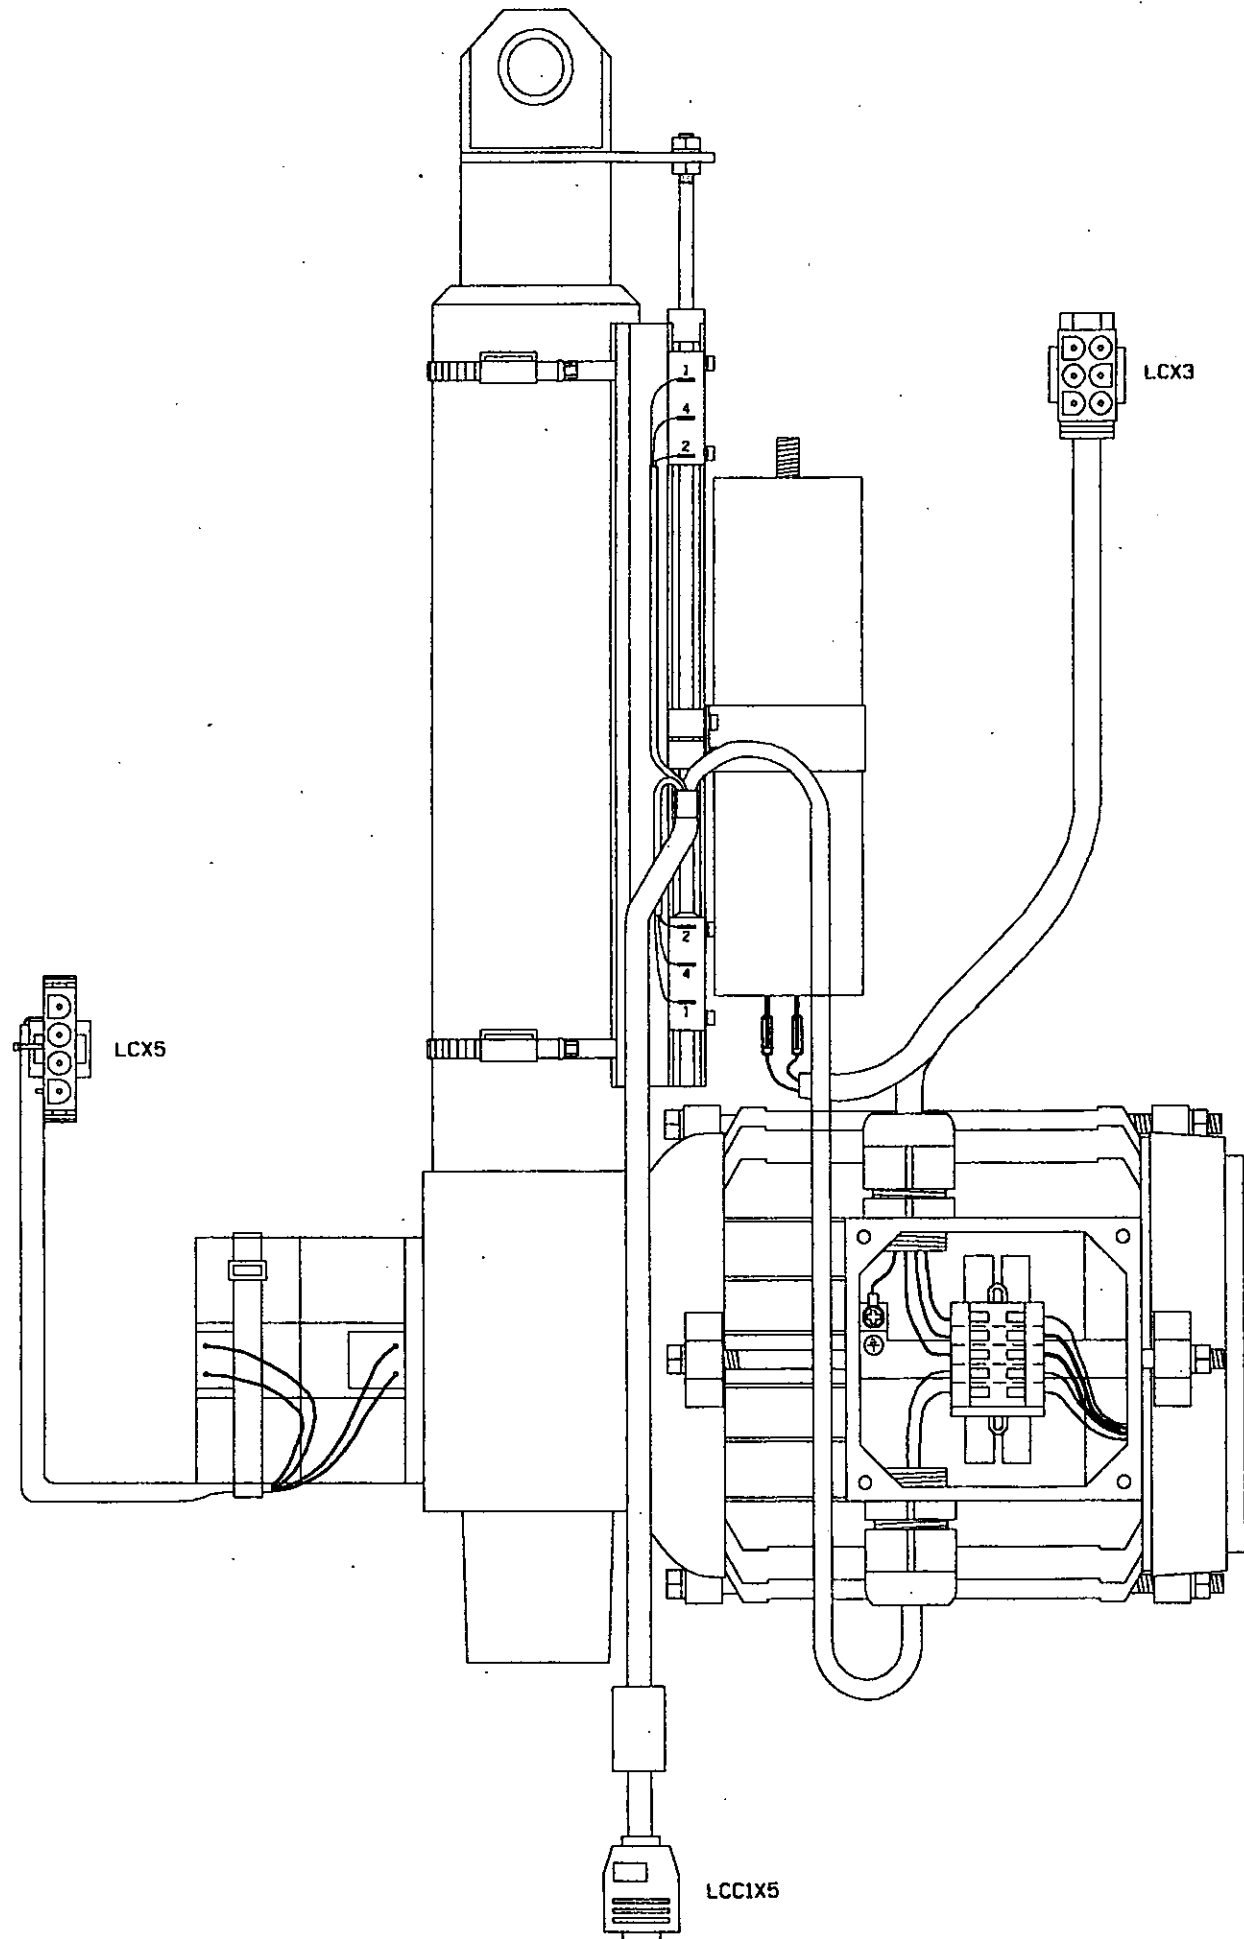


Intera 0.5 T		Intera 1.0 T		Intera 1.5 T	
Standard	Omni	Power	Omni	Power	Master

VERTICAL ACTUATOR LA PATIENT SUPPORT Intera

MR/Intera-DRW-71



99.0

Z3-5.10

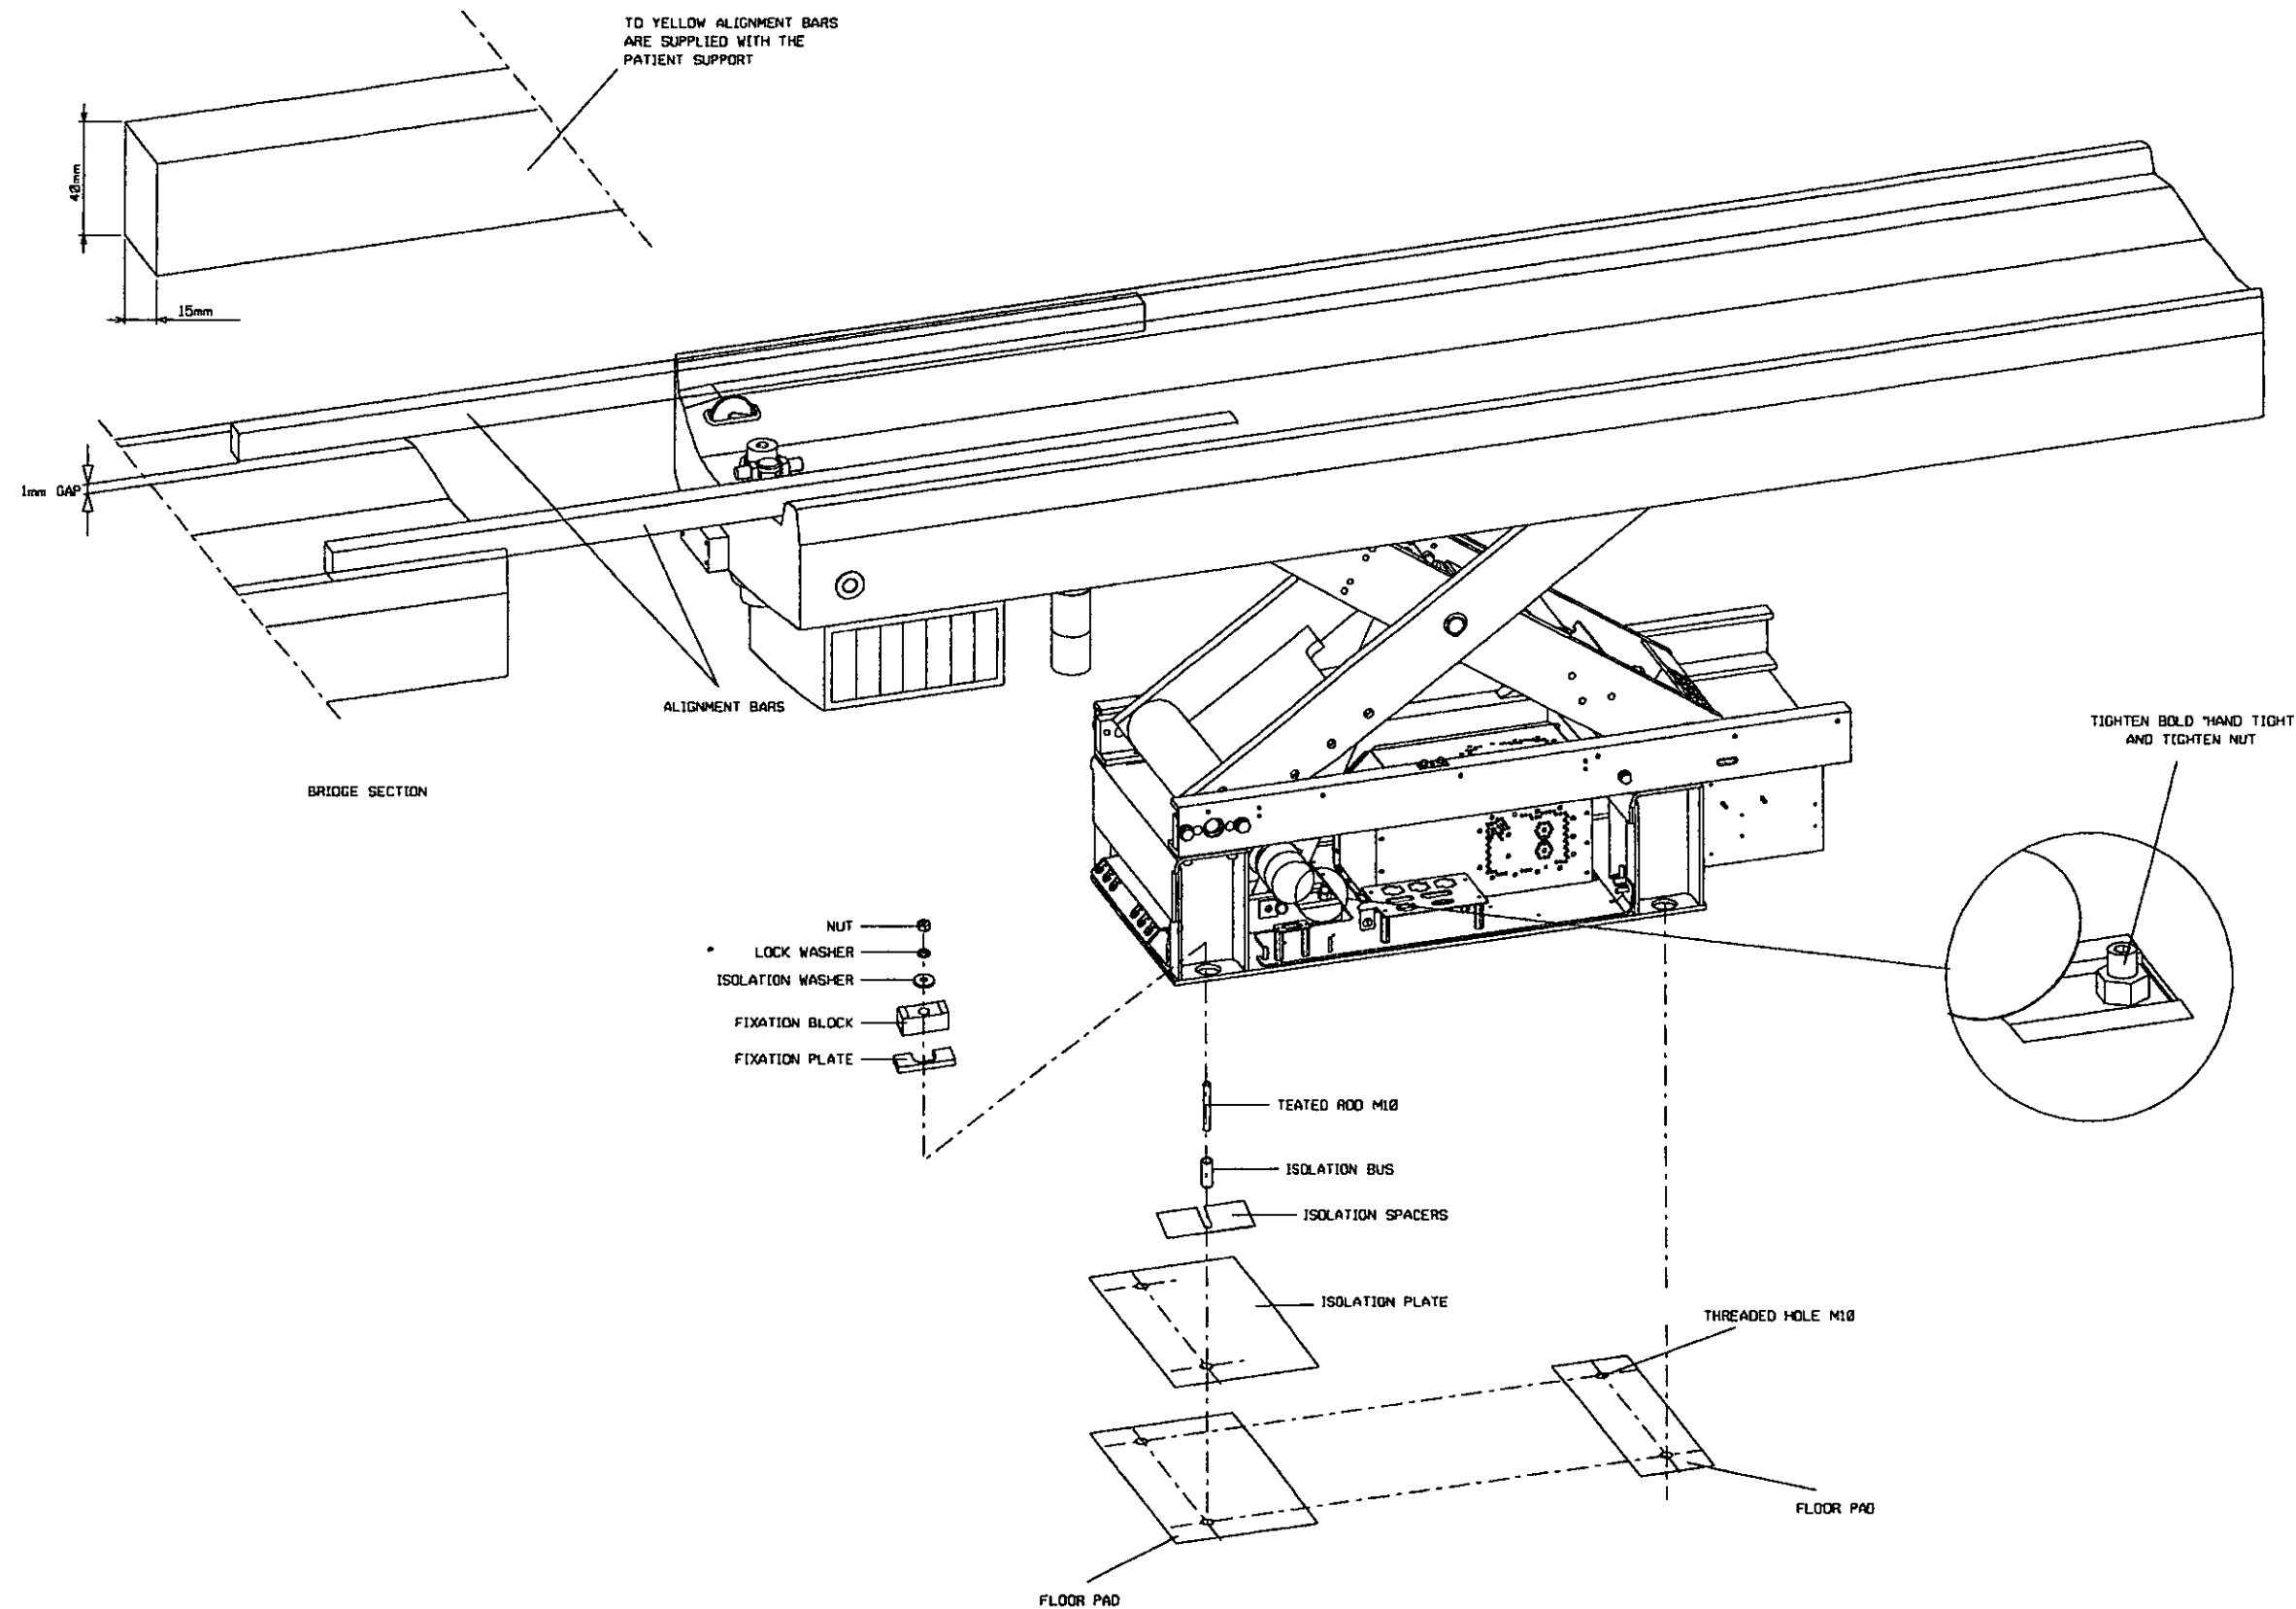

Intera 85 T	Intera 1.0 T	Intera 1.5 T
Standard	Omni Power	Omni Power Master

MECHANICAL INSTALLATION
PATIENT SUPPORT Intera L.

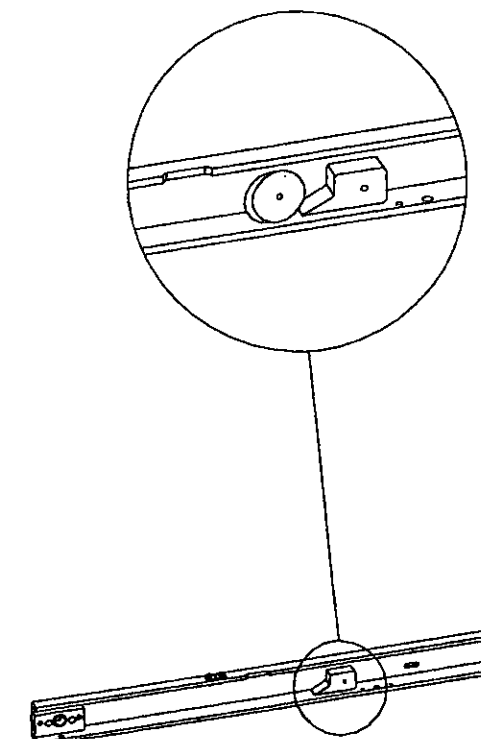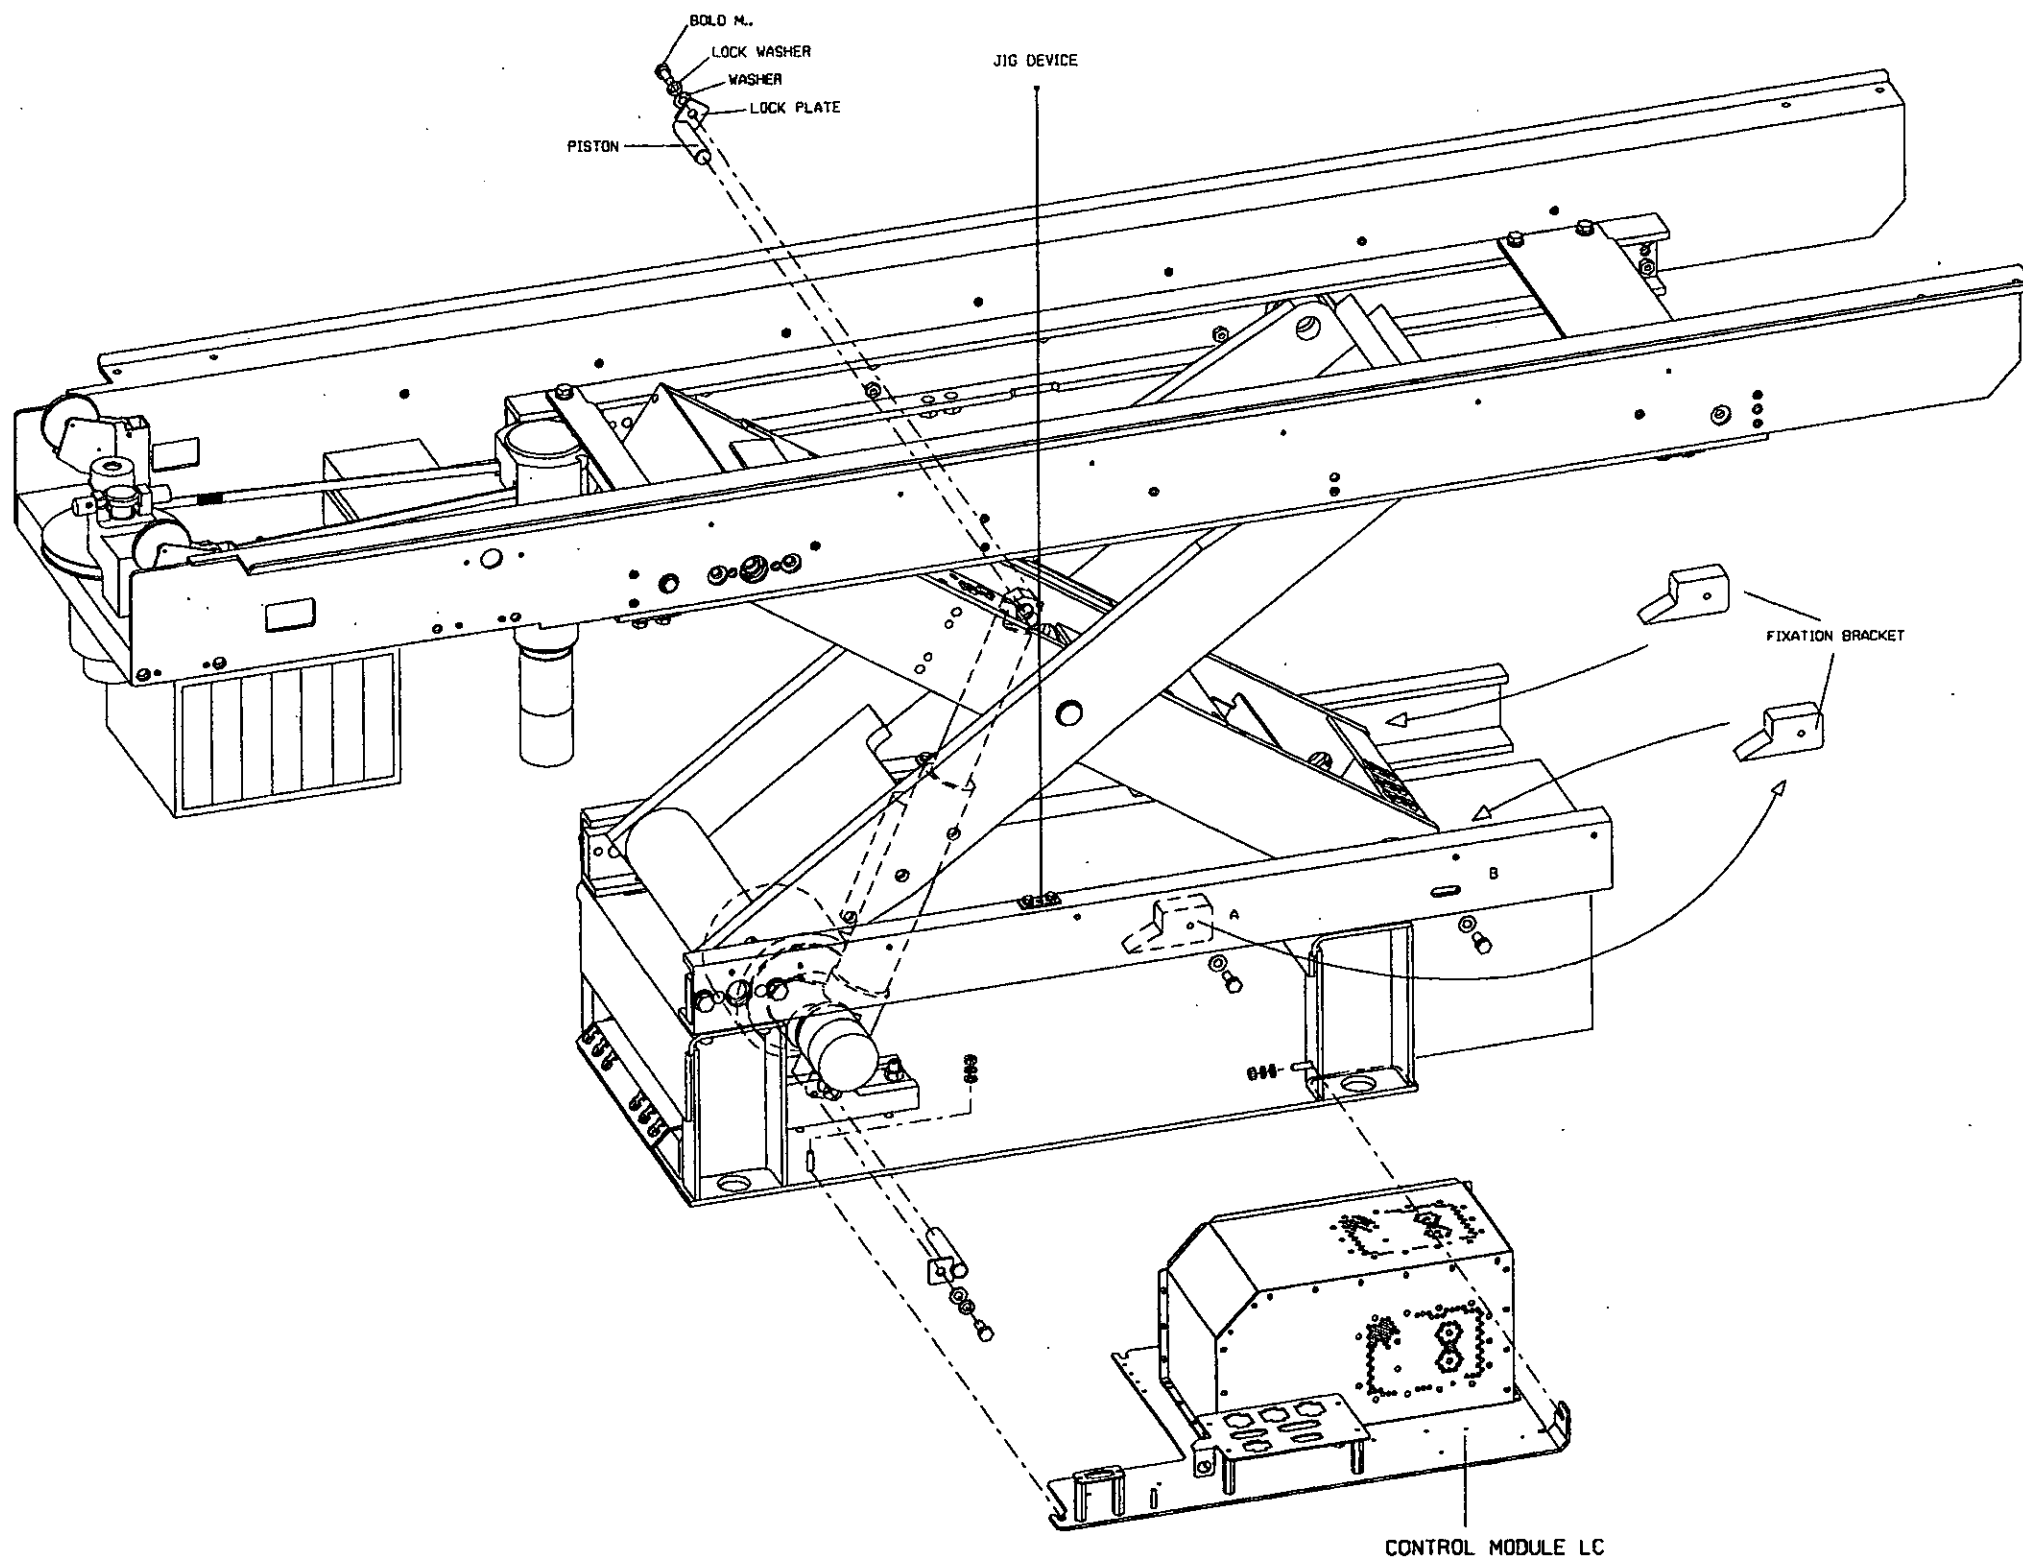

Intera 0.5 T			Intera 1.0 T			Intera 1.5 T		
Standard	Omni	Power	Omni	Power	Master			

VERTICAL ACTUATOR REPLACEMENT PATIENT SUPPORT Intera