

Intera 0.5 T		Intera 1.0 T		Intera 1.5 T	
Standard	Omni	Power	Omni	Power	Master

Section 21.11

Video option

CONTENTS

1.	STANDARD VIDEO OPTION.....	2
1.1.	HARDWARE INSTALLATION.....	2
2.	SOFTWARE INSTALLATION	4
2.1.	CHECK/RECONFIGURE ASW	4
2.2.	CHECK/RECONFIGURE TSW	5

Intera 0 5 T		Intera 1 0 T		Intera 1 5 T	
Standard	Omni	Power	Omni	Power	Master

1. STANDARD VIDEO OPTION

To install the standard-video option (50 Hz PAL, 60 Hz NTSC) for Gyroscan systems, you have to install an additional video board (labeled IIM_VIDEO1_VO board) in the IIM. This optional board can be ordered from the catalogue. You do not need a software key for this option.

1.1. HARDWARE INSTALLATION

The IIM is located in the backend miscellaneous box, which is placed inside the operator equipment cabinet.

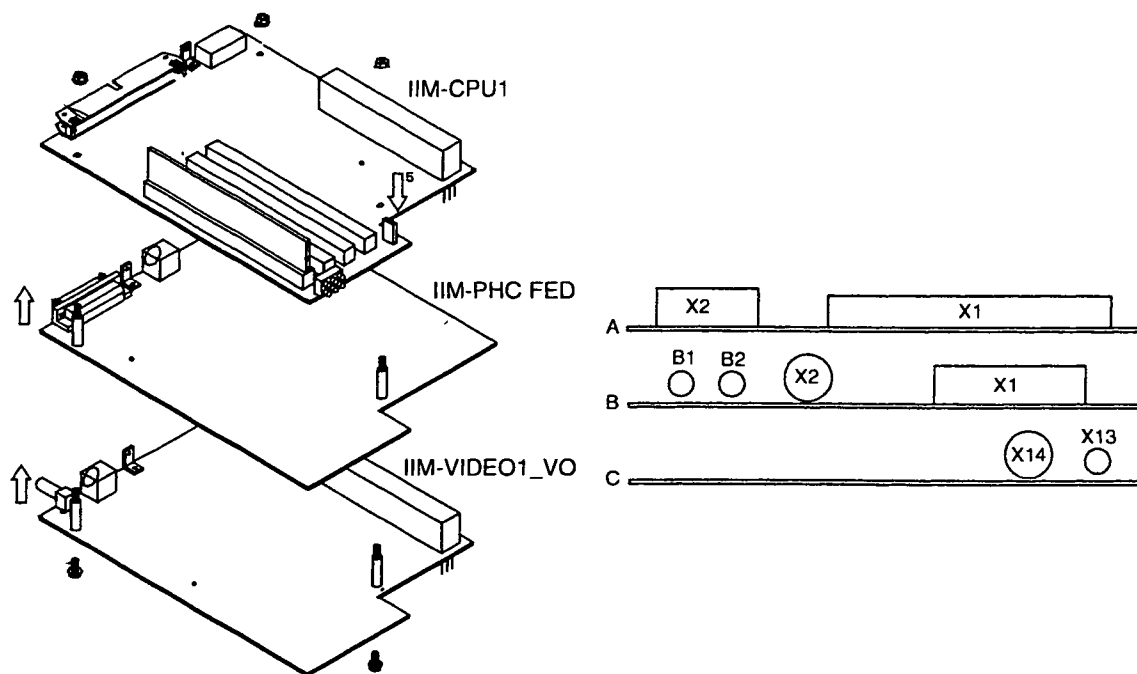
1. Shutdown the system and switch it off completely
2. The IIM is located in the center of the backend miscellaneous box. Loosen the four screws at the front to remove the IIM assembly from the backend miscellaneous box.
3. Carefully slide the IIM assembly towards you and remove the cables from the rear of the IIM assembly
4. Remove the front cover from the IIM assembly (2 screws).

CAUTION

To prevent E.S.D. damage to the P.C. boards, use the antistatic kit.

5. Figure 1 gives an overview of the stack of P.C. boards of the IIM. Carefully remove the stack from the IIM assembly.
6. Loosen the spacers between the IIM boards. Mount the IIM_VIDEO1_VO board underneath the IIM_PHC/FED board.
7. Re-install the IIM stack into the IIM assembly. Mount the front cover to the IIM.
8. Reconnect the cables to the IIM, including cables BE1C: X13 and BE1C: X14 to the new IIM_VIDEO1_VO board.
9. Re-install the IIM assembly into the backend miscellaneous box. Check that the sticky fingers are not damaged
10. Tighten the front screws of the IIM cover.
11. Switch on and boot the system.

Intera 0.5 T		Intera 1.0 T		Intera 1.5 T	
Standard	Omni	Power	Omni	Power	Master

Figure 1 Mounting the boards in the IIM

GR62 DRW

Intera 0.5 T		Intera 1.0 T		Intera 1.5 T	
Standard	Omni	Power	Omni	Power	Master

2. SOFTWARE INSTALLATION

2.1. CHECK/RECONFIGURE ASW

Change the configuration of the Image Interface Module (IIM) in the Gyrotool configuration database.

1. Login with user GYROTOOL
2. Select: Modify System Configuration
3. Select: Console Configuration
4. Select: Image Interface Module
5. A table is displayed in which you must fill out the correct information. Refer to Table 1.

Field	Value	Possible values
Hardcopy board	HC1 or PHC (see Note)	None, HC1, PHC
FED board	Set according to option	No, Yes
Hardcopy/FED board	Set according to option	No, Yes
Video board	YES	No, Yes
Video standard	Set according to used video system: NTSC or PAL	None, NTSC/60Hz, PAL/50Hz
Memory size (MB)	Set according to option	8,16,24,32,64,96,128

Table 1: IIM configuration

NOTE

*Even when you do NOT connect a hard copy camera:
 - fill out **HC1 or PHC** in the Hardcopy board field,
 - fill out a camera protocol in the Camera Protocol field.
 This is necessary for correct functioning of the video board.*

6. Select: <PROCEED>
7. Select: copy facilities
8. A table is displayed in which you must fill out the correct information. Refer to Table 2.

Field	Value	Possible values
Camera protocol	3M969 (see Note)	None, 3M831, 3M852,
Write to Disk	Set according to option	Enable, disable
Video out	Set according to option	None, NTSC/60Hz, Pal/50 Hz

Table 2

Intera 0.5 T		Intera 1.0 T		Intera 1.5 T	
Standard	Omni	Power	Omni	Power	Master

9. Select: <PROCEED> to validate the selections.
10. Select: <CANCEL>
11. Select: <EXIT>
12. Select: Exit from GYROTOOL

2.2. CHECK/RECONFIGURE TSW.

Change the configuration of the TSW configuration database (HWCONF.DAT)

1. Login with user TSW.
2. Edit the TSW configuration file:
 - Enter: CONFIG
 - Enter: EDIT
3. Fill out for IIM_VIDEO1_VO:
827 IIM 0 BOARD 2 type = IIM_VIDEO1_VO
4. For the Video option configure:
830 IIM 0 Video standard [PAL,NTSC] = **Fill out according to preferred setting**
831 IIM 0 Video color [YES,NO] = **Fill out according to preferred setting**
5. Enter: <Control> Z
6. Enter: **Exit**
7. Select: <RETURN>
8. Enter: **TIIM**
9. **Run Functional Automatic**

You can stop now if the IIM tests pass successfully.
In case of errors, proceed with step 10.

The ASW configuration data for the IIM is checked against the configuration data in the TSW configuration file. If the IIM configuration in TSW is not correctly set, you will see this in the TSW script when executing TIIM.

In this case, update HWCONF.DAT as follows

10. Enter: **CONF**
11. Enter: **UPDATE**
12. During the update procedure, the settings from the Gyrotool configuration database are copied into the HWCONF.DAT file.

After you have updated the HWCONF.DAT file, the initial (default) settings in HWCONF.DAT have been restored. This means that the settings you changed in step 1-6 have been erased.

To fix the problem, re-configure HWCONF.DAT file.

To do so, re-edit the TSW configuration file as described in steps 1 to 6.

13. Enter: **Run Functional Automatic**
No errors are allowed in this test.
14. Select: <RETURN>
15. Enter: **quit** to quit the TIIM test
16. Enter: **logout** to exit TSW