

syngo CT Workplace

CT

Troubleshooting Guide

syngo CT Workplace

Troubleshooting Guide

This document is valid for:

© Siemens 2002

The reproduction, transmission or use of this document or its contents is not permitted without express written authority. Offenders will be liable for damages. All rights, including rights created by patent grant or registration of a utility model or design, are reserved.

Print No.: CT00-000.840.01.10.02
Replaces: CT00-000.840.01.09.02

English
Doc. Gen. Date: 05.08

Document revision level

The document corresponds to the version/revision level effective at the time of system delivery. Revisions to hardcopy documentation are not automatically distributed.

Please contact your local Siemens office to order current revision levels.

Disclaimer

The installation and service of equipment described herein is to be performed by qualified personnel who are employed by Siemens or one of its affiliates or who are otherwise authorized by Siemens or one of its affiliates to provide such services.

Assemblers and other persons who are not employed by or otherwise directly affiliated with or authorized by Siemens or one of its affiliates are directed to contact one of the local offices of Siemens or one of its affiliates before attempting installation or service procedures.

1 **Testing and troubleshooting the IES** 4

 Safety information. 4

 Overview. 6

 Block diagram 6

 Troubleshooting tips 7

 Power supply. 7

 Temperature, Environmental conditions 7

 Handling diskette 7

 Mass Storage Devices 8

 Testing the Ethernet switch. 8

 Interpreting Eventlog messages 8

 DVD drive 10

 Battery on motherbord 11

 VolPro board (optional) 11

2 **Changes to previous version** 13

3 **Index** 14

Safety information

The following instructions contain important safety information as well as information about the tools to be needed.

** WARNING**

[hz_serdoc_F13G01U12M02]

Avoid accident and injury or damage of parts.

Risk of accident and injury!

- ⇒ Read and observe the “General safety notes” and the “Product-specific safety notes”.

** WARNING**

[hz_serdoc_F13G01U05M08]

Dangerous voltages may be present. The ON/OFF switch does not disconnect the ICS/IES from the line voltage.

Risk of electric shock!

- ⇒ Remove the power plug from the grounded power outlet.

** WARNING**

[hz_serdoc_F12G02U07M02]

The UPS contains its own energy source (batteries). The parts supplied with UPS power (ICS/IES/IRS) may still have power even when the UPS is not connected to an AC supply (power off status).

Risk of electrical shock from the UPS!

- ⇒ Switch off UPS power by switching off the relevant circuit breakers.
- ⇒ Secure the system against unintended switch-on (e.g. block breaker against switching on and/or mark breaker against switch on).

** CAUTION**

[hz_serdoc_F13G08U01M01]

CE conformity of system will no longer be valid when using other parts than itemized in the spare parts catalogue.

Risk of damage or data loss!

- ⇒ Only components itemized as assemblies in the spare parts catalogue will be used.

 WARNING

[hz_serdoc_F13G01U14M01]

Non-permissible or faulty manipulations or changes to the hardware or software can cause system malfunctions. This can cause injury and/or damage to the equipment.

Risk of accident and injury or damage!

- ⇒ Do not manipulate or modify hardware.
- ⇒ Use only original spare parts shown the spare parts catalogue.
- ⇒ The use or installation of software not approved by Siemens is strictly prohibited.

 WARNING

[hz_serdoc_F13G01U12M01]

Failure to observe the guidelines specified in this document may lead to serious injury or loss of life.

Risk of accident and/or injury!

- ⇒ The guidelines contained in this document have to be strictly followed.

 CAUTION

[hz_serdoc_F13G01U02M01]

Only approved service tools should be used during replacement and troubleshooting.

Risk of injury!

- ⇒ Use only approved tools.

Overview

Block diagram

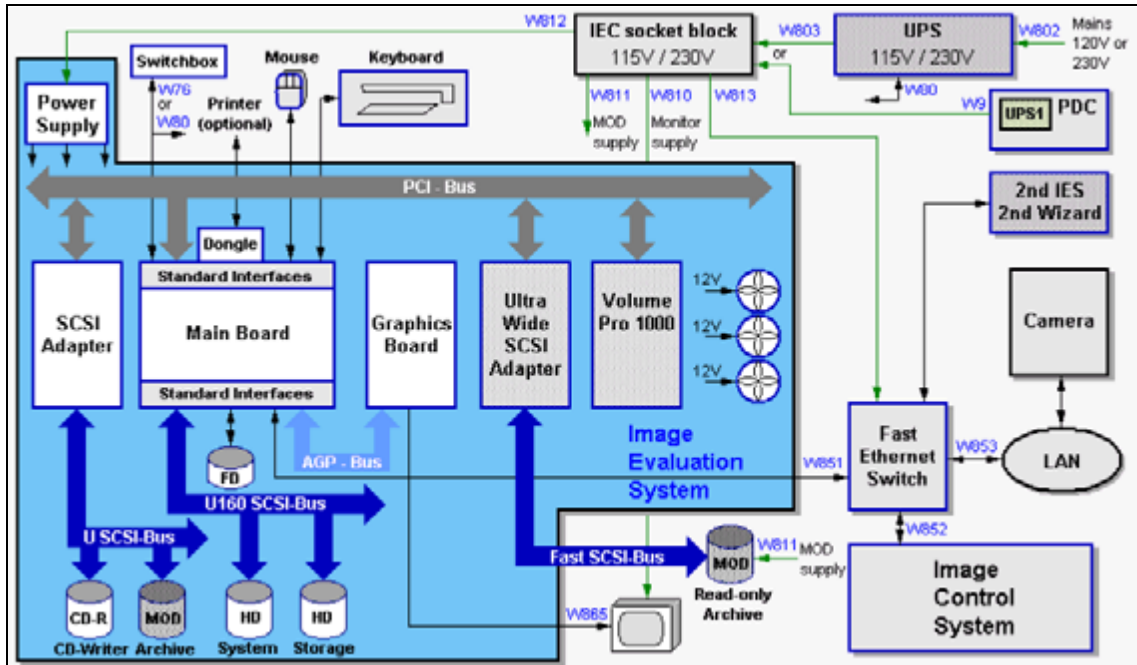


Fig. 1: Block Diagram

NOTE

This block diagram gives a principle overview of internal and external Wizard components and may differ between the various CT systems. The IES 8E contains a Quadro Fx5600 instead of the (optional) VolPro 1000.

Troubleshooting tips

Power supply

- The power-on indicator remains dark after you have switched on the device.
 - Power cord incorrectly connected
Make sure that the power cable is correctly connected to the computer and to the grounded power outlet.
 - Power supply overloaded
Pull the power plug of the server out of the power outlet.
Wait a few seconds and plug the power plug into the power outlet again.
Switch on the computer.

Temperature, Environmental conditions

- Overheating inside the server cabinet.
 - Check the room temperature. Check the fans. Check the filter of the server cabinet.

NOTE

The IES generates no temperature warning. In case of overheating, the computer is switched off. This is indicated in most cases by a blue monitor screen.

- Noisy fan for ICS/IES types 5 and 6 installed outside IMS container

NOTE

The adaption is permitted only for computers which are located outside the IMS containers and therefore get sufficient cooling.

- If the system is running, select System-> End-> Shut down system .
Switch on the ICS or IES, then press F2 to get into the Bios setup.
enter the BIOS password.
Go to the " Advanced " tab card , select Hardware Monitoring and press Enter .
Select " Fan Speed Control " and press Enter .
Change the status to Auto - Never set the status to Silent, since it switches off the fan and the Tower gets to be too hot.
Press F10 Confirm the saving with yes (The computer boots again)

Handling diskette

- You cannot read or write to the floppy disk.
 - Check whether the write protection of the floppy disk is activated.
 - Check that the cables of the floppy disk drive are properly connected.

Mass Storage Devices

- Drives do not show up or are reported as "dead" at system boot.
 - SCSI cabling is incorrect.
Make sure the SCSI cable connection, jumpers and the SCSI channel assignment still correspond to the original status.
- An added external drive does not show up or is reported as defective.
 - The drive was probably installed with its power supply switched off.
Reinstall the drive with the drive switched on.
 - If the hard disk drive continues to be reported as defective, replace the IES.
- Error messages appear on the screen.
 - The error messages are described in the applicable programs being used.

Testing the Ethernet switch

- No connection is available to the ICS.
 - The network cord is incorrectly connected.
Make sure that the network cable is correctly connected to the server and to the switch.
 - The IES Switch port (interface) is defective.
Switch the port (unplug from the old port and connect to an unused port).
 - The power indicator is not on.
Make sure that the power cable is correctly connected to the switch and to the grounded power outlet.

Interpreting Eventlog messages

Typically, only error messages of the domain "System" lead to actual HW problems; warnings and info messages can be disregarded.

Error message sources and possible hardware origins:

Tab. 1 Error message sources

Suspected HW component	Source
Network	NETLOGON BROWSER Rdr RemoteAccess EI59x E100B
Mouse	Mouclass
IRS connection	devmc
SCSI host adapters or devices	aic78xx disk cdrom
-any-	Service Control Manager

Typical error messages:

Tab. 2 Typical Error messages

Source	Event	Type	Description	Possible Reason, Action
E100B	5003	Error	Could not find an adapter	Check the board mounting in the slot. Known problem: Ethernet adapter is sometimes not detected during the boot phase. Action: Reboot (with and without switching off the PC before rebooting). Action: Check the adapter with and without the Ethernet cable with "ControlPanel.Network.Adapters.Intel...Adapter.Properties.Test".
aic78xx	15	Error	The device \Device\ScsiPortX is not ready for access yet	

Source	Event	Type	Description	Possible Reason, Action
cdrom	15	Error	The device \Device\CdRomX is not ready for access yet	
Disk	11	Error	The driver detected a control- ler error on \Device\Hard- diskX\PartitionY	Action: Check proper cabling, termination of SCSI bus and SCSI power supply, or check the device. HarddiskX numbers are typi- cally set in the order of SCSI target ID's. Partition 0 refers to the whole disk Partition 1 refers to the first par- tition on the disk
Disk	7	Error	The device \Device\Hard- diskX\PartitionY has a bad block	Consider using chkdsk and later perhaps recover.
Service- Control- Manager	7000	Error	--different--	Typically indicates that a driver was not able to start because of HW problems. The description should lead to the defective component.
Save- Dump	1001	Info	--different--	System crash with memory dump (if enabled)
UPS	3230	Warning	A power failure was detected at the server	
UPS	3234	Warning	Power has been restored	

DVD drive

NOTE

This trouble shooting guide is valid for IES Tower 7 upwards.

Symptoms in case of error

- The cover does not open.
- The DVD drive does not eject.
- LED does not shine.

- DVD does not write or read any data.

⇒ Exchange the DVD drive.
(see “Replacements of Parts”)

Battery on motherboard

NOTE

This trouble shooting guide is valid for IES Tower 7 upwards.

Symptom in case of error

- It is not possible to boot the computer anymore.
- The system date is changing without any external impact.
- There is an entry in the BIOS event log: “Battery voltage too low”

⇒ Exchange the battery on the motherboard.
(see “Replacements of Parts”)

VolPro board (optional)

NOTE

The test is only available for:

- Somaris5 VB30 and higher versions.
- Somaris7 VA10 and higher versions.

Tower IES 8E uses a Quadro Fx5600 instead of the VolPro, so the VolPro test doesn't apply for that model.

1. Open Windows Explorer.
2. Open folder **c:\ProgramFiles(X86)\VolumePro1000\diagnostics**.
3. Double click on **VpDiag.exe** to start the VolPro diagnostics.

4. The following screen output appears:

```
*****
*** VP1000 Diagnostics Version 3.2
*** VP1000 Driver Version 0.3.40003
*****

Number of VP1000 boards found in the system is 1

ID Part Number Description
-----
0 40-0367-02 VolumePro 1000, 512MB
1 40-0367-03 VolumePro 1000, 1GB
2 40-0367-04 VolumePro 1000, 2GB
3 40-0368-03 VolumePro 1000S, 1GB
```

Other available VolPro boards will be listed.

Select the top level assembly for board-0 from the list above.

Enter a number of the ID field or press enter to accept the default (-1): Enter **2** ↵ for syngo CT workplace (Tower IES 7D)

Enter the serial number for board-0 (0): ↵

Information regarding the VolPro card is displayed.

vpdiag> Enter **runalltests** ↵

Additional information regarding the tests is displayed.

vpdiag> Enter **exit** ↵ to leave the test environment

5. The test result is logged under **c:\ProgramFiles(X86)\VolumePro1000\diagnostics\Board-<serial#>.log**.
6. If a VolumePro board is defective, include the above log file (e.g. on floppy) with the returned board.

Chapter	Change	Reason
1	IES 8E added	Change 517971

H	hz_serdoc_F12G02U07M02.....	4
	hz_serdoc_F13G01U02M01.....	5
	hz_serdoc_F13G01U05M08.....	4
	hz_serdoc_F13G01U12M01.....	5
	hz_serdoc_F13G01U12M02.....	4
	hz_serdoc_F13G01U14M01.....	5
	hz_serdoc_F13G08U01M01.....	4