INSTALLER: LEAVE THIS MANUAL WITH THE APPLIANCE.

CONSUMER: RETAIN THIS MANUAL FOR FUTURE REFERENCE.

NEVER LEAVE CHILDREN OR OTHER AT RISK INDIVIDUALS ALONE WITH THE APPLIANCE.



# INSTALLATION AND OPERATING INSTRUCTIONS

CERTIFIED UNDER CANADIAN AND AMERICAN NATIONAL STANDARDS: CSA 2.22, ANSI Z21.50 FOR VENTED GAS FIREPLACES.

CERTIFIED FOR CANADA AND UNITED STATES USING ANSI/CSA METHODS.

### SAFETY INFORMATION

# **AWARNING**

If the information in these instructions are not followed exactly, a fire or explosion may result causing property damage, personal injury or loss of life.

- Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.
- WHAT TO DO IF YOU SMELL GAS:
- Do not try to light any appliance.
- Do not touch any electrical switch; do not use any phone in your building.
- Immediately call your gas supplier from a neighbour's phone. Follow the gas supplier's instructions.
- If you cannot reach your gas supplier, call the fire department.
- Installation and service must be performed by a qualified installer, service agency or the supplier.

This appliance may be installed in an aftermarket, permanently located, manufactured home (USA only) or mobile home, where not prohibited by local codes.

This appliance is only for use with the type of gas indicated on the rating plate. This appliance is not convertible for use with other gases, unless a certified kit is used.



# GI3600-N NATURAL GAS

GI3600-P PROPANE

# **▲ WARNING**



HOT GLASS WILL CAUSE BURNS.

DO NOT TOUCH GLASS UNTIL COOLED.

NEVER ALLOW CHILDREN TO TOUCH GLASS.









Wolf Steel Ltd., 24 Napoleon Rd., Barrie, ON, L4M 0G8 Canada /
103 Miller Drive, Crittenden, Kentucky, USA, 41030
Phone (705)721-1212 • Fax (705)722-6031 • www.napoleonfireplaces.com • ask@napoleonproducts.com

1 Holic (100)/121-1212 - Lax (100)/122-0001 - www.hapoleoniiiepiaces.com - ask@hapoleonipioudets.com

# TABLE of CONTENTS

### PG 2-5 INTRODUCTION

Warranty

General Instructions

**General Information** 

Care of Glass, & Plated Parts

## 5 INSTALLATION

### 6-7 FINISHING

Brick panels

Log Placement/Charcoal Embers

Louvre Installation Logo Placement

## 7 OPERATION / MAINTENANCE

Spill Switch

Venting Action Check

8 OPERATION / MAINTENANCE CONT'D

Operating Instructions

Maintenance

9 BLOWER SYSTEM

Blower Replacement Instructions

9 ADJUSTMENTS

Pilot Burner Adjustment Venturi Adjustments

10-11 REPLACEMENTS

Ordering Replacement Parts

Replacement Parts Accessories / Options

12-13 TROUBLE SHOOTING GUIDE

14 SERVICE HISTORY

# PLEASE RETAIN THIS MANUAL FOR FUTURE REFERENCE

### WARNING

- Do not burn wood or other materials in this fireplace.
- Adults and especially children should be alerted to the hazards of high surface temperatures and should stay away to avoid burns or clothing ignition. Supervise young children when they are in the same room as the fireplace.
- Due to high temperatures, the fireplace should be located out of traffic and away from furniture and draperies.
- Clothing or other flammable material should not be placed on or near the fireplace.
- Any safety screen or guard removed for servicing must be replaced prior to operating the fireplace.
- It is imperative that the control compartments, burners and circulating blower and its passageway in the fireplace and venting system are kept clean. The fireplace and its venting system should be inspected before use and at least annually by a qualified service person. More frequent cleaning may be required due to excessive lint from carpeting, bedding material, etc. The fireplace area must be kept clear and free from combustible materials, gasoline and other flammable vapours and liquids.
- Under no circumstances should this fireplace be modified.
- This fireplace must not be connected to a chimney flue pipe serving a separate solid fuel burning appliance.
- Do not use this fireplace if any part has been under water. Immediately call a qualified service technician to inspect the fireplace and to replace any part of the control system and any gas control which has been under water.
- Do not operate the fireplace with the glass door removed, cracked or broken. Replacement of the glass should be done by a licensed or qualified service person.
- Do not strike or slam shut the fireplace glass door.

NAPOLEON gas fireplaces are manufactured under the strict Standard of the world recognized ISO 9001: 2000 Quality Assurance Certificate.

NAPOLEON products are designed with superior components and materials, assembled by trained craftsmen who take great pride in their work. The burner and valve assembly are leak and test-fired at a quality test station. The complete fireplace is thoroughly inspected by a qualified technician before packaging to ensure that you, the customer, receives the quality product that you expect from NAPOLEON.

### NAPOLEON GAS FIREPLACE PRESIDENT'S LIFETIME LIMITED WARRANTY

The following materials and workmanship in your new NAPOLEON gas fireplace are warranted against defects for as long as you own the fireplace. This covers: combustion chamber, heat exchanger, stainless steel burner, phazer<sup>TM</sup> logs and embers, ceramic glass (thermal breakage only), gold plated parts against tarnishing, porcelainized enamelled components and aluminum extrusion trims.

Electrical (110V and millivolt) components and wearable parts such as blowers, gas valves, thermal switch, switches, wiring, remote controls, ignitor, gasketing, and pilot assembly are covered and NAPOLEON will provide replacement parts free of charge during the first year of the limited warranty.

Labour related to warranty repair is covered free of charge during the first year. Repair work, however, requires the prior approval of an authorized company official. Labour costs to the account of NAPOLEON are based on a predetermined rate schedule and any repair work must be done through an authorized NAPOLEON dealer.

### CONDITIONS AND LIMITATIONS

NAPOLEON warrants its products against manufacturing defects to the original purchaser only -- i.e., the individual or legal entity (registered customer) whose name appears on the warranty registration card filed with NAPOLEON -- provided that the purchase was made through an authorized NAPOLEON dealer and is subject to the following conditions and limitations:

This factory warranty is nontransferable and may not be extended whatsoever by any of our representatives.

The gas fireplace must be installed by a licenced, authorized service technician or contractor. Installation must be done in accordance with the installation instructions included with the product and all local and national building and fire codes.

This limited warranty does not cover damages caused by misuse, lack of maintenance, accident, alterations, abuse or neglect and parts installed from other manufacturers will nullify this warranty.

This limited warranty further does not cover any scratches, dents, corrosion or discolouring caused by excessive heat, abrasive and chemical cleaners nor chipping on porcelain enamel parts, mechanical breakage of PHAZER™ logs and embers, nor any venting components used in the installation of the fireplace.

NAPOLEON warrants its stainless steel burners against defects in workmanship and material for life, subject to the following conditions: During the first 10 years NAPOLEON will replace or repair the defective parts at our option free of charge. From 10 years to life, NAPOLEON will provide replacement burners at 50% of the current retail price.

In the first year only, this warranty extends to the repair or replacement of warranted parts which are defective in material or workmanship provided that the product has been operated in accordance with the operation instructions and under normal conditions.

After the first year, with respect to this President's Limited Lifetime Warranty, NAPOLEON may, at its discretion, fully discharge all obligations with respect to this warranty by

refunding to the original warranted purchaser the wholesale price of any warranted but defective part(s).

After the first year, NAPOLEON will not be responsible for installation, labour or any other costs or expenses related to the reinstallation of a warranted part, and such expenses

After the first year, NAPOLEON will not be responsible for installation, labour or any other costs or expenses related to the reinstallation of a warranted part, and such expenses are not covered by this warranty.

Notwithstanding any provisions contained in this President's Limited Lifetime Warranty, NAPOLEON'S responsibility under this warranty is defined as above and it shall not in any event extend to any incidental, consequential or indirect damages.

This warranty defines the obligations and liability of NAPOLEON with respect to the NAPOLEON gas fireplace and any other warranties expressed or implied with respect to this

This warranty defines the obligations and liability of NAPOLEON with respect to the NAPOLEON gas ineplace and any other warranties expressed of implied with respect to this product, its components or accessories are excluded.

NAPOLEON neither assumes, nor authorizes any third party to assume, on its behalf, any other liabilities with respect to the sale of this product. NAPOLEON will not be responsible for: over-firing, downdrafts, spillage caused by environmental conditions such as rooftops, buildings, nearby trees, hills, mountains, inadequate vents or ventilation, excessive venting configurations, insufficient makeup air, or negative air pressures which may or may not be caused by mechanical systems such as exhaust fans, furnaces, clothes dryers, etc.

Any damages to fireplace, combustion chamber, heat exchanger, brass trim or other component due to water, weather damage, long periods of dampness, condensation, damaging chemicals or cleaners will not be the responsibility of NAPOLEON.

The bill of sale or copy will be required together with a serial number and a model number when making any warranty claims from your authorized dealer. The warranty registration card must be returned within fourteen days to register the warranty.

NAPOLEON reserves the right to have its representative inspect any product or part thereof prior to honouring any warranty claim.

# GENERAL INSTRUCTIONS

THIS GAS FIREPLACE SHOULD BE INSTALLED AND SER-VICED BY A QUALIFIED INSTALLER to conform with local codes. Installation practices vary from region to region and it is important to know the specifics that apply to your area,

for example: in Massachusetts State:

- The fireplace damper must be removed or welded in the open position prior to installation of a fireplace insert or gas log.
- The appliance off valve must be a "T" handle gas cock.
- · The flexible connector must not be longer than 36 inches.
- The appliance is not approved for installation in a bedroom or bathroom unless the unit is a direct vent sealed combustion product.
- WARNING: This product must be installed by a licensed plumber or gas fitter when installed within the commonwealth of Massachusetts.

In absence of local codes, install to the current National Fuel Gas Code, ANSI Z223.1, or the current CAN/CGA B149, Installation Codes.

Purge all gas lines with the glass door of the fireplace removed. Assure that a continuous gas flow is at the burner before installing the door.

Under extreme vent configurations, allow several minutes (5-15) for the flame to stabilize after ignition

# Altitudes greater than 4000ft. require a minimum vent run of 12ft.

The fireplace and its individual shutoff valve must be disconnected from the gas supply piping system during any pressure testing of that system at test pressures in excess of 1/2 psig (3.5 kPa). The fireplace must be isolated from the gas supply piping system by closing its individual manual shutoff valve during any pressure testing of the gas supply piping system at test pressures equal to or less than 1/2 psig (3.5 kPa).

A 1/8 inch NPT plug, accessible for test gauge connection, must be installed immediately upstream of the gas supply connection to the stove.

This fireplace must be connected to any accepted lined chimney system listed to ULC-S635M (in Canada) or UL-1777 (in USA). The venting connection must be in compliance with the vent manufacturers installation instructions.

The draft hood must be installed so it is in the same atmospheric pressure zone as the combustion air inlet to the fireplace.

Provide adequate ventilation and combustion air. Provide adequate accessibility clearance for servicing and operating the fireplace. Never obstruct the front opening of the fireplace.

This insert must be recessed into a vented noncombustible woodburning fireplace (prefabricated or masonry) only.

The minimum fireplace size in which the heater is to be installed is:

# HEIGHT 17½ inches WIDTH 25½ inches DEPTH 16½ inches

The minimum distance, from the bottom of a combustible mantle projecting 6" maximum from the wall to the top of the unit, is 8".

The fireplace, when installed, must be electrically connected and grounded in accordance with local codes. In the absence of local codes, use the current CSA C22.1 CANADIAN ELECTRICAL CODE in Canada or the ANSI/NFPA 70 NATIONAL ELECTRICAL CODE in the United States. The blower power cord must be connected into a properly grounded receptacle. The grounding prong must not be removed from the cord plug.

## **GENERAL INFORMATION**

FOR YOUR SATISFACTION, THIS FIREPLACE HAS BEEN TEST-FIRED TO ASSURE ITS OPERATION AND QUAL-ITY! Maximum input is 24,000 BTU/hr for natural gas and 22,000 BTU/hr for propane. When the fireplace is installed at elevations above 4,500ft, and in the absense of specific recommendations from the local authority having jurisdiction, the certified high altitude input rating shall be reduced at the rate of 4% for each additional 1,000ft. Maximum output for natural gas is 15,900 BTU/hr and 16,000 BTU/hr for propane. Minimum inlet gas supply pressure is 4.5 inches water column for natural gas and 11 inches water column for propane. This fireplace is certified for bedroom and bedsitting room installation. Maximum inlet gas pressure is 7 inches water column for natural gas and 13 inches water column for propane. Manifold pressure under flow conditions is 3.5 inches water column for natural gas and 10 inches water column for propane.

# No external electricity (110 volts or 24 volts) is required for the gas system operation.


Expansion / contraction noises during heating up and cooling down cycles are normal and to be expected. Change in flame appearance from "HI" to "LO" is more evident in natural gas than in propane.


# CARE OF GLASS AND PLATED PARTS


Do not use abrasive cleaners to clean plated parts. Buff lightly with a clean dry cloth. The glass is 3/16" ceramic glass available from your Napoleon / Wolf Steel Ltd. dealer. **Do not substitute materials**. Clean the glass after the first 10 hours of operation with a recommended gas fireplace glass cleaner. Thereafter clean as required.

**Do not clean glass when hot!** If the glass is not kept clean permanent discolouration and / or blemishes may result.

GI3600

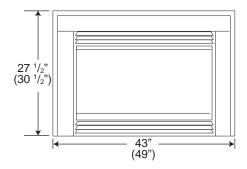

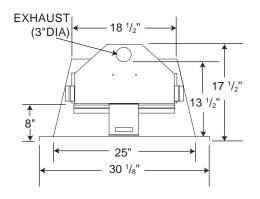

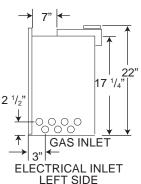

### FIGURE 1

# INSTALLATION

Clean out ashes from the inside of the wood-burning fireplace. Make sure that the chimney and wood-burning fireplace are in a clean and sound condition and constructed of noncombustible materials. If necessary have any repair work done by a qualified person before installing the insert. Remove the existing fireplace damper or lock into an open position.

Using screws, attach the fireplace warning tag (W385-0199) to the inside of the firebox of the fireplace into which the insert is being installed.

WARNING: THIS FIREPLACE HAS BEEN CONVERTED FOR USE WITH A GAS FIREPLACE INSERT ONLY AND CANNOT BE USED FOR BURNING WOOD OR SOLID FUELS UNLESS ALL ORIGINAL PARTS HAVE BEEN REPLACED AND THE FIREPLACE IS RE-APPROVED BY THE AUTHORITY HAVING JURISDICTION.

ATTENTION: CE FOYER À ETE CONVERTI AFIN D'ETRE UTILISE SEULEMENT COMME FOYER ENCASTRE AU GAZ ET NE PEUT ETRE UTILISE POUR BRULER DU BOIS OU TOUT AUTRE COMBUSTIBLE SOLIDE, SANS QUE TOUTES LES PIECES ORIGINALES AIENT ETE REMPLACEES ET QUE LE FOYER SOIT APPROUVE DE NOUVEAU PAR LES AUTORITES AYANT JURIDICTION. W385-0199

The sheet-metal parts of the fireplace, in which the gas fireplace insert is to be installed, must not be cut.


If the wood-burning factory-built fireplace has no gas access hole(s) provided, an access hole of 1½ inch or less may be drilled through the lower sides or bottom of the fireplace in a proper workman like manner. This access hole must be plugged with non-combustible insulation after the gas supply line has been installed.

Ensure that existing chimney cleanouts fit properly.


The refractory, glass doors, screen rails, screen mesh and log grates may be removed from the fireplace before installing the gas fireplace insert.

Smoke shelves, shields and baffles may be removed if attached by mechanical fasteners.

The ventilation openings in the fireplace may be obstructed by the backer plates, aluminium trim etc. but these parts are not to be applied so as to have an airtight seal. Line the chimney with a 3" or 4" diameter approved liner. With a 4" liner, an increaser must be connected between the dilution draft hood and the liner. Chimney installation must conform to both national and local code requirements. The liner must be continuous from the fireplace to the chimney cap.

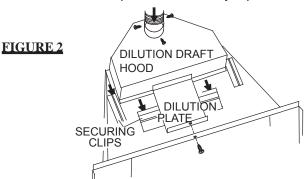

Remove the securing screw from the front of the dilution plate. Push the dilution draft hood out of the securing clips and attach the liner using 3 screws equally spaced. Pack insulation around the liner at the damper area to prevent air flow from entering the chimney. Move the insert into the centre of the woodburning fireplace making sure that the dilution draft hood inserts back into its securing clips. Level using the four leveling screws located front and back on either side of the fireplace base. Leveling the insert will eliminate rocking or excessive noise when the fan is in operation. Replace the securing screw to the front of the dilution plate.

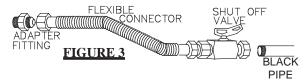

Install rigid black pipe, a flex connector, if local codes permit, or 1/2" type L, copper tubing with a 3/8" to 1/2" adapter and a shut off valve to the fireplace. Seal and tighten securely. The adapter will be required between the gas valve and the copper tubing or flex connector. **Do not kink flexible connector!** Check for gas leaks by brushing on a soap and water solution. **Do not use open flame!** 

An on/off switch has been included and can be located at the right side trim. For ease of accessibility, this switch may be replaced with a wall switch or substituted with a millivolt thermostat that may be installed in a convenient location on any wall. Route a 2 strand solid core millivolt wire through the electrical hole located at the bottom right side of the unit. The recommended maximum lead length depends on wire size:

MAX. LENGTH
100 feet
60 feet
40 feet

Attach the two leads to terminals 1 and 3 located on the gas valve.



Do not connect the gas valve to electricity (110 volts or 24 volts).

The insert can be equipped with a flashing kit to close off most fireplace openings. Mount the flashing inside the unit's outer shell using 4 securing screws. The flashing and trim are available in many finishes to accent any room decor. Objects placed in front of the fireplace should be kept a minimum of 48" away from the front face.

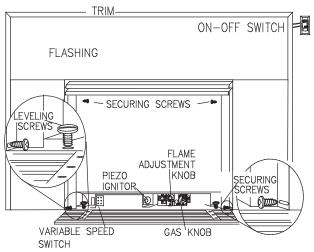


FIGURE 5

# **FINISHING**


## FIBRE FIREBRICK PANELS

To give your insert that authentic masonry fireplace look, optional fibre firebrick panels are available at your Napoleon / Wolf Steel Ltd. dealer. Complete installation and maintenance instructions are included with the kit.

# LOG PLACEMENT

**PHAZER**<sup>™</sup> logs and charcoal embers, exclusive to Napoleon Fireplaces, provide a unique and realistic glowing effect that is different in every installation. Take the time to carefully position the charcoal embers for a maximum glowing effect.

1. Place the front log onto the main burner, pushing it as close as possible to the burner ports without blocking/covering them. The left and right spacing between the log ends and the burner ports should be equal.

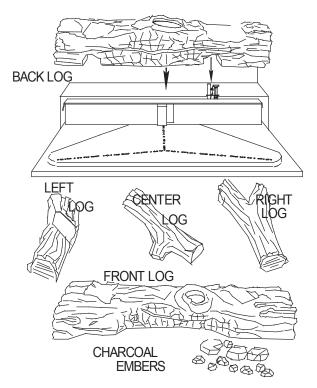

### FIGURE 6

### YOU MAY FIND IT EASIER TO PLACE SOME CHAR-COAL EMBERS BENEATH THE FRONT LOG NOW.

- 2. Place the back log onto the step located at the back of the combustion chamber. The notch situated at the lower right of the back log should be centered evenly above the pilot assembly.
- **3.** While supporting the back log, to prevent it from falling forward, set the three smaller logs into the pockets and grooves of the front and back logs, respectively.

Log colours may vary. During the initial use of the fireplace, the colours will become more uniform as colour pigments burn in during the heat activated curing process.


POSITIONING THE LOGS IMPROPERLY WILL CAUSE FLAME IMPINGEMENT AND CARBONING.

### CHARCOAL EMBERS

Randomly place the embers beneath the front log, covering all of the burner area beneath the hollowed out section of the log. Place the remaining embers along the front. Keep ember dust away from burner ports to avoid plugging them.

Fine dust found in bottom of bag not to be used.


**PHAZER**<sup>™</sup> logs and charcoal embers glow when exposed to direct flame. Use only certified **PHAZER**<sup>™</sup> logs and charcoal embers available from your Napoleon / Wolf Steel Ltd. dealer.

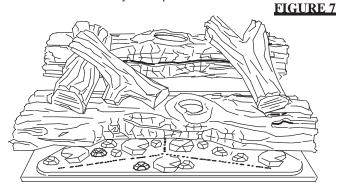

# FLUSH LOUVRE KIT, GI-1L


### **UPPER LOUVRES**

Insert the back edge of the upper louvre into the upper louvre clips.

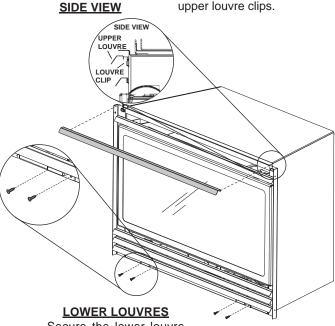

Secure the lower louvre assembly to the insert, using the 4 screws supplied.

## LOGO PLACEMENT

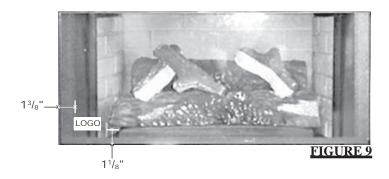


Remove the backing of the logo supplied and place on the glass viewing area, as indicated.

# OPERATION / MAINTENANCE

### SPILL SWITCH

This is a thermally activated switch, attached to the back of the unit and extending up into the dilution draft hood, which senses the change in temperature and shuts down the gas valve in the event of a severe downdraft of air or a blocked or disconnected vent.

It acts as a safety shut-off to prevent a build up of carbon monoxide or an explosion of unburnt gases during start up. If the flue is blocked or has no "draw", the spill switch will automatically shut off the supply of gas within about 5-10 minutes. TAMPERING WITH THE SWITCH CAN RESULT IN CARBON MONOXIDE (CO) POISONING AND POSSIBLE DEATH.

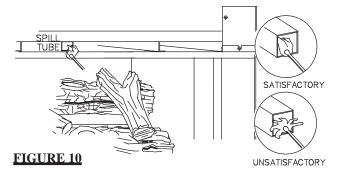

### **VENTING ACTION CHECK**

A CHECK FOR CORRECT VENTING ACTION MUST BE MADE BEFORE THE INSTALLED INSERT IS LEFT WITH THE CUSTOMER.

Test after installing the unit into a vented non-combustible fireplace in the following manner:

- 1. Close all doors and windows in the room; start exhaust fans in the home; turn fireplace blower off.
- 2. Set controls to "high" and light the unit.
- **3.** Wait 5 minutes. Light a match and hold it to the spill tube opening.
- 4. Venting action is satisfactory if smoke is drawn into the spill tube. Venting action is unsatisfactory if the flame and smoke are not drawn into the tube.
- **5.** If venting action is unsatisfactory, turn the unit off, wait 10 minutes and try again. If the smoke or flame is still not drawn into the spill tube, turn the unit off and check for vent blockage or restriction. If necessary, consult with a qualified air quality specialist.

When lit for the first time, the fireplace will emit a slight odour for a few hours. This is a normal temporary condition caused by the curing of the logs and the "burn-in" of internal paints and lubricants used in the manufacturing process and will not occur again. Simply open a window to sufficiently ventilate the room.

After extended periods of non-operation such as following a vacation or a warm weather season, the fireplace may emit a slight odour for a few hours. This is caused by dust particles in the heat exchanger burning off. Open a window to sufficiently ventilate the room.

### FOR YOUR SAFETY READ BEFORE LIGHTING:

- A This fireplace has a pilot which must be lit by hand while following these instructions exactly.
- B Before lighting, smell all around the fireplace area for gas and next to the floor because some gas is heavier than air and will settle on the floor.
- C Use only your hand to push in or turn the gas control knob. Never use tools. If the knob will not push in or turn by hand,
- do not try to repair it. Call a qualified service technician. Force or attempted repair may result in a fire or explosion.
- **D** Do not use this fireplace if any part has been under water. Immediately call a qualified service technician to inspect the unit and replace any part of the control system and any gas control touched by water.


### WHAT TO DO IF YOU SMELL GAS:


- Do not try to light any appliance.
- Do not touch any electrical switch; do not use any phone in your building.
- Immediately call your gas supplier from a neighbour's phone. Follow the gas supplier's instructions.
- If you cannot reach your gas supplier, call the fire department.

### LIGHTING INSTRUCTIONS

- "off" unless the knob is depressed.
- 2.Turn off all electrical power to the stove.
- 3. Turn the gas knob clockwise to off.
- **4.**Wait 5 minutes for any gas in the combustion chamber to escape. Continue to the next step if you do NOT smell any 10.lf your insert is equipped with a flame adjustment valve, gas. If you smell gas, STOP! and follow the instructions in push and turn the knob to "high". "What to do if You Smell Gas" listed above.
- clockwise to off.
- **6.**Locate the pilot situated in front of the rear log.
- 7.Turn the gas knob counter-clockwise to "pilot" posi- 12.Turn on all electrical power to the insert. tion.

- 1.Stop! Read all the safety information above. When lighting 8.Depress and hold the gas knob while lighting the pilot with and re-lighting, the gas knob cannot be turned from "pilot" to the push button ignitor. Keep the knob fully depressed for one (1) minute, then release. If the pilot does not continue to burn, repeat steps 3 through 7.
  - 9. With the pilot lit, turn the gas knob counter-clockwise to "on" position.
- 11.If your insert is equipped with a remote "on-off" switch, the 5.If the unit is equipped with a flame adjustment valve, turn main burner may not come on when you turn the gas valve to "on" or "high". The remote switch must be in the "on" position as well to ignite the main burner.

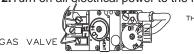

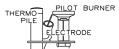

## TO TURN OFF GAS

1. Turn off all electrical power to the unit if service is to be performed.

2. Push in gas control knob slightly and turn clockwise to off. DO NOT FORCE.

# **MAINTENANCE**

# TURN OFF THE GAS AND ELECTRICAL POWER BEFORE SERVICING THE FIREPLACE.


CAUTION: Label all wires prior to disconnection when servicing controls. Wiring errors can cause improper and dangerous operation. Verify proper operation after servicing. This insert and its venting system should be inspected before use and at least annually by a qualified service person. The fireplace area must be kept clear and free of combustible materials, gasoline or other flammable vapours and liquids. The flow of combustion and ventilation air must not be obstructed.

- 1. In order to properly clean the burner and pilot assembly, remove the logs to expose both assemblies.
- 2. Keep the control compartment, logs, burner, air shutter opening and the area surrounding the logs clean by vacuuming or brushing, at least once a year.

- 3. Check to see that all burner ports are burning. Clean out any of the ports which may not be burning or are not burning properly.
- 4. Check to see that the pilot flame is large enough to engulf the thermopile on one leg and reaches toward the burner on the other leg.
- 5. Replace the cleaned logs.
- 6. Check to see that the main burner ignites completely on all openings when the gas knob for the burner is turned on. A 5 to 10 second total light-up period is satisfactory. If ignition takes longer, consult your Napoleon dealer / distributor.
- 7. Check that the door gasketing is not broken or missing. Replace if necessary.

# BLOWER SYSTEM

The Napoleon gas fireplace insert comes standard with a blower, a heat sensor, variable on/off speed control and a power cord. Because the blower is thermally activated, when turned on, it will automatically start approximately 15 minutes after lighting the fireplace and will run for approximately 30 minutes after the fireplace has been turned off. Use of the fan increases the output of heat. Air, drawn in through the lower louvre access door, is driven up the back of the firebox, and exhausted as hot air between the upper louvres.

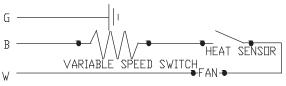


### FIGURE 11

Drywall dust will penetrate into blower bearings causing irrepairable damage and must be prevented from coming into contact with the blower or its compartment.

Any damage resulting from this condition is not covered by the warranty policy.

# **BLOWER REPLACEMENT INSTRUCTIONS**


- Turn off the gas and electric power to the unit.
- Remove the upper glass bracket. Loosen the lower glass bracket and remove the glass.
- · Remove the logs.
- Remove the burner assembly.
- Remove the eight screws holding the access door in place on the control assembly (located at the back of the burner support).
- Remove the four screws holding the blower duct and slide it forward from beneath the burner support.
- Disconnect the electrical connectors at the blower.
- · Remove the blower.

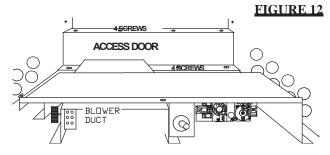

# ADJUSTMENTS

# PILOT BURNER ADJUSTMENT


- 1. Remove the pilot adjustment cap.
- 2. Adjust the pilot screw to provide properly sized flame.
- 3. Replace the adjustment cap.

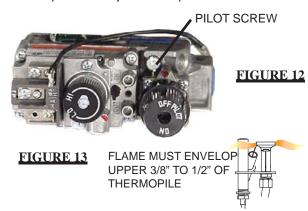

# **VENTURI ADJUSTMENT**

Natural gas models have air shutters set at 1/16 (.063") inch open. Propane gas models have air shutters set at 3/8 (.375) inch open. Closing the air shutter will cause a more yellow flame, but can lead to carboning. Opening the air shutter will cause a more blue flame, but can cause flame lifting from the burner ports. The flame may not appear yellow immediately; allow 15 to 30 minutes for the final flame colour to be established.

AIR SHUTTER ADJUSTMENT MUST ONLY BE DONE BY A QUALIFIED GAS INSTALLER!

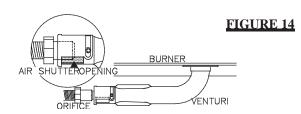

# REPLACEMENTS

Contact your dealer for questions concerning prices and availability of replacement parts. Normally all parts can be ordered through your Napoleon dealer or distributor.

FOR WARRANTY REPLACEMENT PARTS, A PHOTOCOPY
OF THE ORIGINAL INVOICE WILL BE REQUIRED TO
HONOUR THE CLAIM.

\* IDENTIFIES ITEMS WHICH ARE NOT ILLUSTRATED. FOR FURTHER INFORMATION, CONTACT YOUR NAPOLEON DEALER.

When ordering replacement parts always give the following information:


- 1. Model & Serial Number of Fireplace
- 2. Installation date of fireplace
- 3. Part Number
- 4. DESCRIPTION OF PART
- 5. FINISH

# REPLACEMENT PARTS

# 1 2 3 4 5 6 7* 8* 9 9 10 10 11 11 12 13 14 15 15 16 17* 19* 20 21 22* 23* 25*	W725-0036 W725-0037 W100-0058 W100-0057 W455-0025 W455-0084 W357-0001 W680-0004 W010-0364 W456-0042	LOG SET ASSEMBLY C/W CHARCOAL EMBERS BACK LOG FRONT LOG RIGHT LOG LEFT LOG CENTER LOG CHARCOAL EMBERS NAPOLEON LOGO NATURAL GAS VALVE - REMOTE RBT SHAW PROPANE GAS VALVE - REMOTE RBT SHAW PROPANE GAS PILOT ASSEMBLY **18 NATURAL GAS PILOT ASSEMBLY **18 NATURAL GAS PILOT INJECTOR **10 PROPANE GAS PILOT INJECTOR PIEZO IGNITER - CHANNEL THERMOPILE BURNER ASSEMBLY **42 DMS NATURAL GAS BURNER ORIFICE **54 DMS PROPANE GAS BURNER ORIFICE DOOR GLASS W/ TOP GASKET GLASS GASKET (2 PC - SIDE) GLASS GASKET (TOP) THERMAL SENSING SWITCH REPLACEMENT BLOWER VARIABLE SPEED SWITCH C/W KNOB UPPER GLASS BRACKET LOWER GLASS BRACKET BURNER ON/OFF SWITCH
---	--	--

### **ACCESSORIES**

#	PART #	DESCRIPTION
	<b>OPENINGS S</b>	MALLER THAN 27" X 42":
26	GI-900B6	DELUXE 6" FLASHING KIT - POLISHED BRASS
26	GI-900AB6	DELUXE 6" FLASHING KIT - ANTIQUE BRASS
26	GI-900K6	DELUXE 6" FLASHING KIT - BLACK
26 26	GI-900SS6 GI-909S6	DELUXE 6" FLASHING KIT - STAINLESS STEEL DELUXE 6" PORCELAIN FLASHING KIT - ALMOND
26	GI-909S6 GI-909K6	DELUXE 6" PORCELAIN FLASHING KIT - ALMOND  DELUXE 6" PORCELAIN FLASHING KIT - BLACK
26	GI-909F6	DELUXE 6" PORCELAIN FLASHING KIT - BLACK DELUXE 6" PORCELAIN FLASHING KIT - GREEN
		MALLER THAN 30" X 48":
26	GI-900B9	DELUXE 9" FLASHING KIT - POLISHED BRASS
26	GI-900AB9	DELUXE 9" FLASHING KIT - ANTIQUE BRASS
26	GI-900K9	DELUXE 9" FLASHING KIT - BLACK
26	GI-900SS9	DELUXE 9" FLASHING KIT - STAINLESS STEEL
26	GI-909S9	DELUXE 9" PORCELAIN FLASHING KIT - ALMOND
26	GI-909K9	DELUXE 9" PORCELAIN FLASHING KIT - BLACK
26	GI-909F9	DELUXE 9" PORCELAIN FLASHING KIT - GREEN
FOR	<b>OPENINGS S</b>	MALLER THAT 28" X 47":
27	GI-93K	BASIC FLASHING KIT - BLACK
27	GI-93PB	BASIC FLASHING KIT - POLISHED BRASS
28*	GI-92PB	2" TRIM FOR GI-93K
		MALLER THAN 26" X 42":
27	GI-63K	BASIC FLASHING KIT - BLACK
27	GI-63PB	BASIC FLASHING KIT - POLISHED BRASS
27	GI-63AB	BASIC FLASHING KIT - ANTIQUE BRASS
28*	GI-2PB	2" TRIM FOR GI-63K
28* PER	GI-2PB -TRM	2" TRIM FOR GI-63K GOLD ACRYLIC TRIM
28* PER 29*	GI-2PB -TRM W470-0002	2" TRIM FOR GI-63K GOLD ACRYLIC TRIM ENAMEL TOUCH UP AND BRUSH (SPECIFY COLOUR)
28* PER 29* 30*	GI-2PB -TRM W470-0002 W690-0001	2" TRIM FOR GI-63K GOLD ACRYLIC TRIM ENAMEL TOUCH UP AND BRUSH (SPECIFY COLOUR) MILLIVOLT THERMOSTAT
28* PER 29* 30* 31*	GI-2PB -TRM W470-0002 W690-0001 W660-0011	2" TRIM FOR GI-63K GOLD ACRYLIC TRIM ENAMEL TOUCH UP AND BRUSH (SPECIFY COLOUR) MILLIVOLT THERMOSTAT HANDHELD REMOTE WITH DIGITAL READOUT / THERMOSTATIC
28* PER 29* 30* 31* 32*	GI-2PB -TRM W470-0002 W690-0001	2" TRIM FOR GI-63K GOLD ACRYLIC TRIM ENAMEL TOUCH UP AND BRUSH (SPECIFY COLOUR) MILLIVOLT THERMOSTAT HANDHELD REMOTE WITH DIGITAL READOUT / THERMOSTATIC WALL SWITCH & 20FT WIRE
28* PER 29* 30* 31*	GI-2PB -TRM W470-0002 W690-0001 W660-0011 GD660	2" TRIM FOR GI-63K GOLD ACRYLIC TRIM ENAMEL TOUCH UP AND BRUSH (SPECIFY COLOUR) MILLIVOLT THERMOSTAT HANDHELD REMOTE WITH DIGITAL READOUT / THERMOSTATIC
28* PER 29* 30* 31* 32* 33	GI-2PB -TRM W470-0002 W690-0001 W660-0011 GD660 GI-777KT	2" TRIM FOR GI-63K GOLD ACRYLIC TRIM ENAMEL TOUCH UP AND BRUSH (SPECIFY COLOUR) MILLIVOLT THERMOSTAT HANDHELD REMOTE WITH DIGITAL READOUT / THERMOSTATIC WALL SWITCH & 20FT WIRE DECORATIVE BRICK PANELS
28* PER 29* 30* 31* 32* 33	GI-2PB -TRM W470-0002 W690-0001 W660-0011 GD660 GI-777KT GI-787KT	2" TRIM FOR GI-63K GOLD ACRYLIC TRIM ENAMEL TOUCH UP AND BRUSH (SPECIFY COLOUR) MILLIVOLT THERMOSTAT HANDHELD REMOTE WITH DIGITAL READOUT / THERMOSTATIC WALL SWITCH & 20FT WIRE DECORATIVE BRICK PANELS DECORATIVE BRICK PANEL FOR BAY DOOR
28* PER 29* 30* 31* 32* 33 34 35	GI-2PB -TRM W470-0002 W690-0001 W660-0011 GD660 GI-777KT GI-787KT GIBS	2" TRIM FOR GI-63K GOLD ACRYLIC TRIM ENAMEL TOUCH UP AND BRUSH (SPECIFY COLOUR) MILLIVOLT THERMOSTAT HANDHELD REMOTE WITH DIGITAL READOUT / THERMOSTATIC WALL SWITCH & 20FT WIRE DECORATIVE BRICK PANELS DECORATIVE BRICK PANEL FOR BAY DOOR BAY SCREEN BAY GLASS BAY DOOR ASSEMBLY
28* PER 29* 30* 31* 32* 33 34 35 36 37 38	GI-2PB -TRM W470-0002 W690-0001 W660-0011 GD660 GI-777KT GI-787KT GIBS GIBG GI360B-KT GI-LB36G	2" TRIM FOR GI-63K GOLD ACRYLIC TRIM ENAMEL TOUCH UP AND BRUSH (SPECIFY COLOUR) MILLIVOLT THERMOSTAT HANDHELD REMOTE WITH DIGITAL READOUT / THERMOSTATIC WALL SWITCH & 20FT WIRE DECORATIVE BRICK PANELS DECORATIVE BRICK PANEL FOR BAY DOOR BAY SCREEN BAY GLASS BAY DOOR ASSEMBLY BAY WINDOW LOUVRES - GOLD
28* PER 29* 30* 31* 32* 33 34 35 36 37 38 38	GI-2PB -TRM W470-0002 W690-0001 W660-0011 GD660 GI-777KT GI-787KT GIBS GIBG GI360B-KT GI-LB36G GI-LB36PB	2" TRIM FOR GI-63K GOLD ACRYLIC TRIM ENAMEL TOUCH UP AND BRUSH (SPECIFY COLOUR) MILLIVOLT THERMOSTAT HANDHELD REMOTE WITH DIGITAL READOUT / THERMOSTATIC WALL SWITCH & 20FT WIRE DECORATIVE BRICK PANELS DECORATIVE BRICK PANEL FOR BAY DOOR BAY SCREEN BAY GLASS BAY DOOR ASSEMBLY BAY WINDOW LOUVRES - GOLD BAY WINDOW LOUVRES - POLISHED BRASS
28* PER 29* 30* 31* 32* 33 34 35 36 37 38 38 38	GI-2PB -TRM W470-0002 W690-0001 W660-0011 GD660 GI-777KT GI-787KT GIBS GIBG GI360B-KT GI-LB36G GI-LB36PB GI-LB36AB	2" TRIM FOR GI-63K GOLD ACRYLIC TRIM ENAMEL TOUCH UP AND BRUSH (SPECIFY COLOUR) MILLIVOLT THERMOSTAT HANDHELD REMOTE WITH DIGITAL READOUT / THERMOSTATIC WALL SWITCH & 20FT WIRE DECORATIVE BRICK PANELS DECORATIVE BRICK PANEL FOR BAY DOOR BAY SCREEN BAY GLASS BAY DOOR ASSEMBLY BAY WINDOW LOUVRES - GOLD BAY WINDOW LOUVRES - POLISHED BRASS BAY WINDOW LOUVRES - ANTIQUE BRASS
28* PER 29* 30* 31* 32* 33 34 35 36 37 38 38 38 38	GI-2PB -TRM W470-0002 W690-0001 W660-0011 GD660 GI-777KT GI-787KT GIBS GIBG GI360B-KT GI-LB36G GI-LB36G GI-LB36AB GI-LB36AB	2" TRIM FOR GI-63K GOLD ACRYLIC TRIM ENAMEL TOUCH UP AND BRUSH (SPECIFY COLOUR) MILLIVOLT THERMOSTAT HANDHELD REMOTE WITH DIGITAL READOUT / THERMOSTATIC WALL SWITCH & 20FT WIRE DECORATIVE BRICK PANELS DECORATIVE BRICK PANEL FOR BAY DOOR BAY SCREEN BAY GLASS BAY DOOR ASSEMBLY BAY WINDOW LOUVRES - GOLD BAY WINDOW LOUVRES - POLISHED BRASS BAY WINDOW LOUVRES - ANTIQUE BRASS BAY WINDOW LOUVRES - BLACK
28* PER 29* 30* 31* 32* 33 34 35 36 37 38 38 38 38 38	GI-2PB -TRM W470-0002 W690-0001 W660-0011 GD660 GI-777KT GI-787KT GIBS GIBG GI360B-KT GI-LB36G GI-LB36PB GI-LB36AB GI-LB36K GI-LB36K GI-LB36K	2" TRIM FOR GI-63K GOLD ACRYLIC TRIM ENAMEL TOUCH UP AND BRUSH (SPECIFY COLOUR) MILLIVOLT THERMOSTAT HANDHELD REMOTE WITH DIGITAL READOUT / THERMOSTATIC WALL SWITCH & 20FT WIRE DECORATIVE BRICK PANELS DECORATIVE BRICK PANELS DECORATIVE BRICK PANEL FOR BAY DOOR BAY SCREEN BAY GLASS BAY DOOR ASSEMBLY BAY WINDOW LOUVRES - GOLD BAY WINDOW LOUVRES - POLISHED BRASS BAY WINDOW LOUVRES - ANTIQUE BRASS BAY WINDOW LOUVRES - BLACK BAY WINDOW LOUVRES - STAINLESS STEEL
28* PER 29* 30* 31* 32* 33 34 35 36 37 38 38 38 38 38 38	GI-2PB -TRM W470-0002 W690-0001 W660-0011 GD660 GI-777KT GIBS GIBG GI360B-KT GI-B366B GI-LB36PB GI-LB36AB GI-LB36K GI-LB36K GI-LB36SS GI-LB36SS GI-LLG	2" TRIM FOR GI-63K GOLD ACRYLIC TRIM ENAMEL TOUCH UP AND BRUSH (SPECIFY COLOUR) MILLIVOLT THERMOSTAT HANDHELD REMOTE WITH DIGITAL READOUT / THERMOSTATIC WALL SWITCH & 20FT WIRE DECORATIVE BRICK PANELS DECORATIVE BRICK PANEL FOR BAY DOOR BAY SCREEN BAY GLASS BAY DOOR ASSEMBLY BAY WINDOW LOUVRES - GOLD BAY WINDOW LOUVRES - POLISHED BRASS BAY WINDOW LOUVRES - POLISHED BRASS BAY WINDOW LOUVRES - ANTIQUE BRASS BAY WINDOW LOUVRES - BLACK BAY WINDOW LOUVRES - STAINLESS STEEL GOLD PLATED LOUVRES UPPER & LOWER
28* PER 29* 30* 31* 32* 33 34 35 36 37 38 38 38 38 38 39	GI-2PB -TRM W470-0002 W690-0001 W660-0011 GD660 GI-777KT GI-787KT GIBS GIBG GI360B-KT GI-B36G GI-LB36PB GI-LB36AB GI-LB36SS GI-LB36SS GI-LLG GI-LK	2" TRIM FOR GI-63K GOLD ACRYLIC TRIM ENAMEL TOUCH UP AND BRUSH (SPECIFY COLOUR) MILLIVOLT THERMOSTAT HANDHELD REMOTE WITH DIGITAL READOUT / THERMOSTATIC WALL SWITCH & 20FT WIRE DECORATIVE BRICK PANELS DECORATIVE BRICK PANEL FOR BAY DOOR BAY SCREEN BAY GLASS BAY DOOR ASSEMBLY BAY WINDOW LOUVRES - GOLD BAY WINDOW LOUVRES - POLISHED BRASS BAY WINDOW LOUVRES - ANTIQUE BRASS BAY WINDOW LOUVRES - BLACK BAY WINDOW LOUVRES - BLACK BAY WINDOW LOUVRES - STAINLESS STEEL GOLD PLATED LOUVRES UPPER & LOWER FLUSH LOUVRES & DOOR TRIM - BLACK
28* PER 29* 30* 31* 32* 33 34 35 36 37 38 38 38 39 39 39	GI-2PB -TRM W470-0002 W690-0001 W660-0011 GD660 GI-777KT GI-787KT GIBS GIBG GI360B-KT GI-LB36G GI-LB36G GI-LB36AB GI-LB36K	2" TRIM FOR GI-63K GOLD ACRYLIC TRIM ENAMEL TOUCH UP AND BRUSH (SPECIFY COLOUR) MILLIVOLT THERMOSTAT HANDHELD REMOTE WITH DIGITAL READOUT / THERMOSTATIC WALL SWITCH & 20FT WIRE DECORATIVE BRICK PANELS DECORATIVE BRICK PANEL FOR BAY DOOR BAY SCREEN BAY GLASS BAY DOOR ASSEMBLY BAY WINDOW LOUVRES - GOLD BAY WINDOW LOUVRES - POLISHED BRASS BAY WINDOW LOUVRES - BLACK BAY WINDOW LOUVRES - BLACK BAY WINDOW LOUVRES - STAINLESS STEEL GOLD PLATED LOUVRES UPPER & LOWER FLUSH LOUVRES & DOOR TRIM - BLACK FLUSH LOUVRES & DOOR TRIM - POLISHED BRASS
28* PER 29* 30* 31* 32* 33 34 35 36 37 38 38 38 39 39 39 39	GI-2PB -TRM W470-0002 W690-0001 W660-0011 GD660 GI-777KT GIBS GIBG GI360B-KT GI-B36GB GI-LB36GB GI-LB36AB GI-LB36AB GI-LB36KB GI-LB36KB GI-LB36KB GI-LB36KB GI-LB36KB GI-LB36KBB GI-LB36KBBBBBBBBBBBBBBBBBBBBBBBBBBBBBBBBBBB	2" TRIM FOR GI-63K GOLD ACRYLIC TRIM ENAMEL TOUCH UP AND BRUSH (SPECIFY COLOUR) MILLIVOLT THERMOSTAT HANDHELD REMOTE WITH DIGITAL READOUT / THERMOSTATIC WALL SWITCH & 20FT WIRE DECORATIVE BRICK PANELS DECORATIVE BRICK PANEL FOR BAY DOOR BAY SCREEN BAY GLASS BAY DOOR ASSEMBLY BAY WINDOW LOUVRES - GOLD BAY WINDOW LOUVRES - POLISHED BRASS BAY WINDOW LOUVRES - ANTIQUE BRASS BAY WINDOW LOUVRES - BLACK BAY WINDOW LOUVRES - BLACK BAY WINDOW LOUVRES - STAINLESS STEEL GOLD PLATED LOUVRES UPPER & LOWER FLUSH LOUVRES & DOOR TRIM - BLACK FLUSH LOUVRES & DOOR TRIM - POLISHED BRASS FLUSH LOUVRES & DOOR TRIM - ANTIQUE BRASS
28* PER 29* 30* 31* 32* 33 34 35 36 37 38 38 38 39 39 39 39 39 39	GI-2PB -TRM W470-0002 W690-0001 W660-0011 GD660 GI-777KT GI-787KT GIBS GIBG GI360B-KT GI-LB36G GI-LB36AB GI-LB36AB GI-LB36K GI-LB36K GI-LB36K GI-LB36K GI-LB36SS GI-LLG GI-LLK GI-1LK GI-1LKB GI-1LAB GI-1LAB	2" TRIM FOR GI-63K GOLD ACRYLIC TRIM ENAMEL TOUCH UP AND BRUSH (SPECIFY COLOUR) MILLIVOLT THERMOSTAT HANDHELD REMOTE WITH DIGITAL READOUT / THERMOSTATIC WALL SWITCH & 20FT WIRE DECORATIVE BRICK PANELS DECORATIVE BRICK PANEL FOR BAY DOOR BAY SCREEN BAY GLASS BAY DOOR ASSEMBLY BAY WINDOW LOUVRES - GOLD BAY WINDOW LOUVRES - POLISHED BRASS BAY WINDOW LOUVRES - ANTIQUE BRASS BAY WINDOW LOUVRES - BLACK BAY WINDOW LOUVRES - STAINLESS STEEL GOLD PLATED LOUVRES UPPER & LOWER FLUSH LOUVRES & DOOR TRIM - POLISHED BRASS FLUSH LOUVRES & DOOR TRIM - ANTIQUE BRASS
28* PER 29* 30* 31* 32* 33 34 35 36 37 38 38 38 39 39 39 39	GI-2PB -TRM W470-0002 W690-0001 W660-0011 GD660 GI-777KT GIBS GIBG GI360B-KT GI-B36GB GI-LB36GB GI-LB36AB GI-LB36AB GI-LB36KB GI-LB36KB GI-LB36KB GI-LB36KB GI-LB36KB GI-LB36KBB GI-LB36KBBBBBBBBBBBBBBBBBBBBBBBBBBBBBBBBBBB	2" TRIM FOR GI-63K GOLD ACRYLIC TRIM ENAMEL TOUCH UP AND BRUSH (SPECIFY COLOUR) MILLIVOLT THERMOSTAT HANDHELD REMOTE WITH DIGITAL READOUT / THERMOSTATIC WALL SWITCH & 20FT WIRE DECORATIVE BRICK PANELS DECORATIVE BRICK PANEL FOR BAY DOOR BAY SCREEN BAY GLASS BAY DOOR ASSEMBLY BAY WINDOW LOUVRES - GOLD BAY WINDOW LOUVRES - POLISHED BRASS BAY WINDOW LOUVRES - ANTIQUE BRASS BAY WINDOW LOUVRES - BLACK BAY WINDOW LOUVRES - BLACK BAY WINDOW LOUVRES - STAINLESS STEEL GOLD PLATED LOUVRES UPPER & LOWER FLUSH LOUVRES & DOOR TRIM - BLACK FLUSH LOUVRES & DOOR TRIM - POLISHED BRASS FLUSH LOUVRES & DOOR TRIM - ANTIQUE BRASS

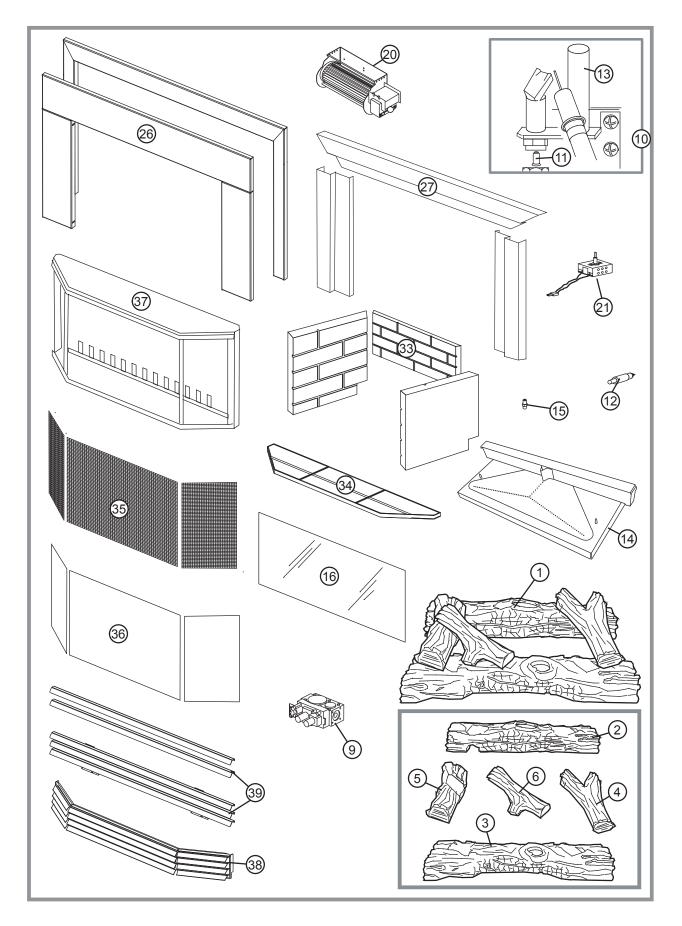

# TROUBLE SHOOTING GUIDE

BEFORE ATTEMPTING TO TROUBLESHOOT, PURGE YOUR UNIT AND INITIALLY LIGHT THE PILOT AND THE MAIN BURNER WITH THE GLASS DOOR REMOVED.

SYMPTOM	PROBLEM	TEST SOLUTION
Pilot goes out when the	System is not correctly purged.	- purge the gas line with the glass door removed.
gas knob is released.	Out of propane gas.	- fill the tank.
	Pilot flame is not large enough	- turn up the pilot flame.
	Pilot flame is not engulfing the thermopile.	- gently twist the pilot head to improve the flame pattern around the thermopile.
	Thermopile shorting.	<ul> <li>clean thermopile and valve connection.</li> <li>check that thermopile insulation is not frayed and grounding out on the housing or the burner support.</li> <li>replace thermopile.</li> <li>replace valve.</li> </ul>
	Faulty thermopile.	- replace.
	Faulty valve.	- replace.
Pilot will not light.	No spark at pilot burner	<ul> <li>check that the wire is connected to the push button ignitor.</li> <li>check if the push button ignitor needs tightening.</li> <li>replace pilot assembly if the wire insulation is broken or frayed.</li> <li>replace pilot assembly if the ceramic insulator is cracked or broken.</li> <li>replace the push button ignitor.</li> </ul>
	Spark gap is incorrect	- spark gap should be 1/16" to 1/8" from the electrode tip and the pilot burner. Light the pilot with a match and adjust the electrode tip to the required spark gap and proper location.
PIEZO IGNITER PILOT THERMOPILE BURNER	No gas at the pilot burner	<ul> <li>check that the manual valve is turned on.</li> <li>check the pilot orifice for blockage.</li> <li>replace the valve.</li> <li>call the gas distributor.</li> </ul>
	Out of propane gas	- fill the tank.
Pilot goes out while standing; Main burner is in 'OFF' position.	Gas piping is undersized.	<ul> <li>turn on all gas appliances and see if pilot flame flutters, diminishes or extinguishes, especially when main burners ignite.</li> <li>Monitor supply pressure.</li> <li>check if supply piping size is to code. Correct all undersized piping.</li> </ul>
Pilot burning; no gas to main burner; gas	Wall switch is defective	- connect a jumper wire across the wall switch terminals; if the main burner lights, replace the wall switch.
knob is on; wall switch is on.	Wall switch wiring is defective.	- disconnect the switch wires from the valve & connect a jumper wire across terminals 1 and 3; if the main burner lights, check the wires for defects and/or replace wires.
	Main burner orifice is plugged.	- remove stoppage in orifice.
	Remote gas valve operator is defective.	- connect a jumper wire across terminals 1 and 3; if main burner does not light, replace gas valve.
Main burner flame is a blue, lazy, transpar-	Insufficient secondary air.	- increase fresh air supply (open door, window, add make-up air supply)
ent flame.	Downdraft or blockage in chimney.	<ul> <li>remove blockage.</li> <li>check that chimney is installed to building codes (3ft above highest roof line or 2ft higher than any portion of a building within a horizontal radius of 10ft of the chimney.)</li> </ul>

SYMPTOM	PROBLEM	TEST SOLUTION
Main burner goes out;	Refer to "Main burner goes out; p	ilot stays on"
pilot goes out.	Chimney down-drafting	- wait ten minutes. Shut off all exhaust fans in the house (ie: kitchen and bathrooms), furnace, and clothes dryer. Open windows and/or doors. Start fireplace and monitor its operation. Close doors and windows and start appliances as before; room is in negative pressure; increase fresh air supply.
	Chimney is blocked	- check for chimney blockage.
	Liner disconnected from insert.	- re-attach liner.
	Faulty spill switch.	- replace.
Main burner goes out; pilot stays on.	Pilot flame is not large enough or not engulfing the thermopile.	- turn on pilot flame. Gently twist the pilot head to improve the flame pattern aroung the thermopile.
	Thermopile shorting.	- clean thermopile and thermopile connection to valve.
Carbon is being de- posited on glass, logs or combustion cham-	Air shutter has become blocked	- ensure air shutter opening is free of lint or other obstructions.
ber surfaces.	Flame is impinging on the logs or combustion chamber.	<ul> <li>check that the logs are correctly positioned.</li> <li>open air shutter to increase the primary air.</li> <li>check the input rate: check the manifold pressure and orifice size as specified by the rating plate values.</li> <li>check that the door gasketing is not broken or missing and that the seal is tight.</li> <li>check that both 4" and 7" vent liners are free of holes and well sealed at all joints.</li> <li>check that minimum rise per foor has been adhered to for any horizontal venting.</li> </ul>
Remote wall switch is in off position;	Wall switch is mounted upside down.	- reverse.
main burner comes on when gas knob is	Remote wall switch is grounding.	- replace.
turned to "ON" position.	Remote wall switch wire is grounding.	- check for ground (short); repair ground or replace wire.
Exhaust fumes	Faulty valve.	- replace.
smelled in room, head- aches.	Fireplace is spilling.	<ul> <li>check for chimney blockage.</li> <li>check that chimney is installed to building code.</li> <li>room is in negative pressure; increase fresh air supply.</li> </ul>
Carbon is being deposited on glass, logs or combustion chamber surfaces.	Flame is impinging on the logs or combustion chamber.	<ul> <li>check that the logs are correctly positioned.</li> <li>open air shutter to increase the primary air.</li> <li>check the input rate: check the manifold pressure and orifice size as specified by the rating plate values.</li> </ul>
White / grey film forms.	Sulphur from fuel is being deposited on glass, logs or combustion chamber surfaces.	<ul> <li>clean the glass with a recommended gas fireplace glass cleaner. DO NOT CLEAN GLASS WHEN HOT.</li> <li>If deposits are not cleaned off regularly, the glass may become permanently marked.</li> </ul>

	Th	Appliance Solis heater must be serviced	Appliance Service History This heater must be serviced annually depending on usage.	
Date	Dealer Name	Service Technician Name	Service Performed	Special Concerns

# 16

NOTES	

l'44.	

1.64 -----

	Q.	<b>Historique d'ent</b> et appareil doit être entretenu	Historique d'entretien Wolf Steel Cet appareil doit être entretenu annuellement selon son usage.	
Date	Détaillant	Nom du technicien	Travail effectué	Problèmes particuliers

MOTAMYS

**PROBLEM** 

Une pellicule blanche ou grise se forme.	Le soufre du combustible se dépose sur la vitre, les bûches ou sur les parois de la chambre de combustion.	<ul> <li>nettoyez la vitre avec un nettoyeur recommandé. NE PAS NETTOYER LORSQU'ELLE EST CHAUDE.</li> <li>si vous ne nettoyez pas les dépôts régulièrement, la vitre risque de rester marquée en permanence.</li> </ul>
On détecte l'odeur des gaz de combus- tion dans la pièce; maux de tête.	L'encastré refoule les gaz de combustion dans la pièce.	<ul> <li>vérifiez si la cheminée ne serait pas bloquée.</li> <li>vérifiez si la cheminée est installée conformément au code du bâtiment.</li> <li>pression négative dans la pièce; augmentez l'apport d'air frais.</li> </ul>
	Soupape défectueuse.	- remplacer.
du gaz est tourné à "ON".	Le fil de l'interrupteur mural cause un court-circuit.	- vériflez si le fil est bien mis à la terre; réparez ou rem- placez le fil.
principal s'allume lorsque le bouton	L'interrupteur mural cause un courtcircuit.	- remplacer.
L'interrupteur mural est à OFF"; le brûleur	L'interrupteur mural est raccordé à l'envers.	- raccordez à l'endroit.
	TIOTEDIQUIO	<ul> <li>vérifiez le débit d'alimentation; vérifiez que la pression du collecteur et la grandeur de l'injecteur soient telles que spécifiées sur la plaque d'homologation.</li> <li>vérifiez que les joints de la porte ne sont pas brisés ou manquants et qu'ils sont étanches.</li> <li>vérifiez si les conduits d'évent de 4" et de 7" ne sont pas troués et qu'ils sont bien scellés à tous les joints.</li> <li>vérifiez si l'élévation minimale par pied est conforme pour toute èvacuation horizontale.</li> </ul>
oûches ou les parois de la chambre de combustion.	La flamme effleure les bûches ou les parois de la chambre de combustion.	<ul> <li>vérifiez si les bûches sont positionnées correctement.</li> <li>ouvrez l'ouverture du volet d'air pour augmenter le volume d'air primaire.</li> </ul>
Ou carbone se dé- pose sur la vitre, les	Le volet d'air est bloqué.	- assurez-vous que l'ouverture du volet d'air n'est pas bloquée par des fibres ou autres obstructions.
	La thermopile cause un court- circuit.	- nettoyez la thermopile et la connexion de la thermopile à la borne de la soupape.
Le brûleur principal s'éteint; la veilleuse reste allumée.	La flamme de la veilleuse n'est pas assez puissante ou n'enveloppe as la thermopile.	- tallumez la veilleuse. Tournez légèrement la tête de la veilleuse pour améliorer la flamme autour de la thermopile.
	Faulty spill switch.	- remplacer.
	La gaine de la cheminée n'est plus raccordée à l'encastré.	- raccordez à l'encastré.
	La cheminée est bloquée.	- enlevez ce qui obstrue.
s'éteint; la veilleuse s'éteint.	.Ы cheminée refoule.	<ul> <li>attendez 10 minutes. Arrêtez tous les ventilateurs d'évacuation dans la maison (p. ex. : cuisine et salle de bain), la fournaise et la sécheuse à linge. Ouvrez les fenêtres et/ou les portes. Allumez le foyer et surveillez son fonctionnement. Fermez les portes et les fenêtres et allumez les autres appareils comme portes et les fenêtres et sous pression négative, augmentez l'apport d'air frais.</li> <li>l'apport d'air frais.</li> </ul>
Le brûleur principal	Référez-vous à "LE BRÛLEUR PI	SINCIPAL S'ÉTEINT; LA VEILLEUSE RESTE ALLUMÉE".
paresseuse et trans- parente.	La cheminée refoule ou est bloquée.	<ul> <li>enlevez ce qui obstrue.</li> <li>vériflez si la cheminée est installée conformément aux exigences du code du bâtiment (3 pieds au-dessus de la ligne de toiture et 2 pieds plus haute que tout obstacle ou partie de toit situés dans un rayon de 10 pieds de la cheminée.</li> </ul>
La flamme du brûleur principal est bleue, paresseuse et trans-	Le volume d'air secondaire est insuffisant.	<ul> <li>augmentez l'apport d'air frais (ouvrez une porte, une fenêtre, ajoutez une autre source d'alimentation en air).</li> </ul>

TEST SOLUTION


# GUIDE DE DEPANNAGE

AVANT D'ESSAYER DE RÉGLER LE PROBLÈME, PURGEZ L'APPAREIL EN COMMENÇANT PAR ALLUMER LA VEILLEUSE ET LE BRÛLEUR PRINCIPAL AVEC LA PORTE VITRÉE RETIRÉE.

**PROBLÈME** 

SOLUTIONS

	Le contrôle de la soupape de gaz est défectueux.	<ul> <li>reliez un fil de dérivation entre les bornes 1 et 3. Si le brûleur principal ne s'allume pas, remplacez la soupape de gaz.</li> </ul>
	L'injecteur du brûleur principal est bloqué.	- débloquez l"injecteur.
bouton du gaz est à "ON";l'interrupteur mural est à "ON".	Le raccordement de l'interrupteur mural est défectueux.	- débranchez les fils de l'interrupteur de la soupape et reliez un fil de dérivation entre les bornes 1 & 3; si le brûleur principal s'allume, vérifiez si les fils ne sont pas défectueux et/ou remplacez les fils.
La veilleuse brûle; pas de gaz au brûleur principal; le	L'interrupteur mural est dé- fectueux.	<ul> <li>reliez un fil de dérivation entre les bornes de l'interrupteur mural.</li> <li>ral; si le brûleur principal s'allume, remplacez l'interrupteur mural.</li> </ul>
La veilleuse s'éteint alors qu'elle est en attente; le brûleur prin- cipal est à "OFF".	La conduite de gaz est trop petite.	<ul> <li>allumez fous les appareils au gaz et vérifiez si la flamme de la veilleuse vacille, diminue ou s'éteint, surtout quand le brûleur principal s'allume. Vérifiez la pression d'alimentation.</li> <li>vérifiez si la grosseur de la conduite d'alimentation est con- forme aux codes. Remplacez foutes les conduites trop petites.</li> </ul>
_	Plus de propane.	- remplissez le réservoir.
ALERAMONIA ALERANA STRUCTURE OF THE STRU	Pas de gaz au brûleur de la veilleuse.	<ul> <li>vérifiez si la soupape manuelle est ouverte.</li> <li>vérifiez si l'injecteur de la veilleuse est bloqué.</li> <li>remplacez la soupape.</li> <li>contactez le fournisseur de gaz.</li> </ul>
	La longueur de l'étincelle est incorrecte.	<ul> <li>la longueur de l'étincelle devrait être de 1/16" à 1/8" entre la pointe de l'électrode et le brûleur de la veilleuse. Allumez la veilleuse avec une allumette et réglez la pointe de l'électrode à la longueur d'étincelle requise et à la bonne position.</li> </ul>
.9/I V .91/I		<ul> <li>remplacez l'assemblage de la veilleuse si l'isolant du fil est brisé ou effiloché.</li> <li>remplacez l'assemblage de la veilleuse si l'isolateur de céramique est craqué ou brisé.</li> <li>remplacez le bouton-pression d'ignition.</li> </ul>
La veilleuse ne s'allume pas.	Aucune étincelle au brûleur de la veilleuse.	<ul> <li>vérifiez si le fil est raccordé au bouton-pression d'ignition.</li> <li>vérifiez si le bouton-pression d'ignition doit être resserré.</li> </ul>
	Faulty valve.	- remplacer.
	Faulty thermopile.	- remplacer.
	La thermopile cause un court- circuit.	<ul> <li>nettoyez la thermopile et la connexion à la borne de la soupape.</li> <li>vérifiez si l'isolant de la thermopile est effiloché et crée une mise à la terre avec la structure du foyer ou le support du brûleur.</li> <li>remplacez la soupape.</li> <li>remplacez la soupape.</li> </ul>
	La flamme de la veilleuse n'enveloppe pas la thermopile.	<ul> <li>tournez légèrement la tête de la veilleuse pour améliorer la flamme autour de la thermopile.</li> </ul>
		- augmentez la flamme de la veilleuse.
est relâché.	Plus de propane.	- remplissez le réservoir.
La veilleuse s'éteint quand le bouton du gaz	Le système n'est pas purgé correctement.	- purgez la conduite de gaz avec la porte vitrée retirée.

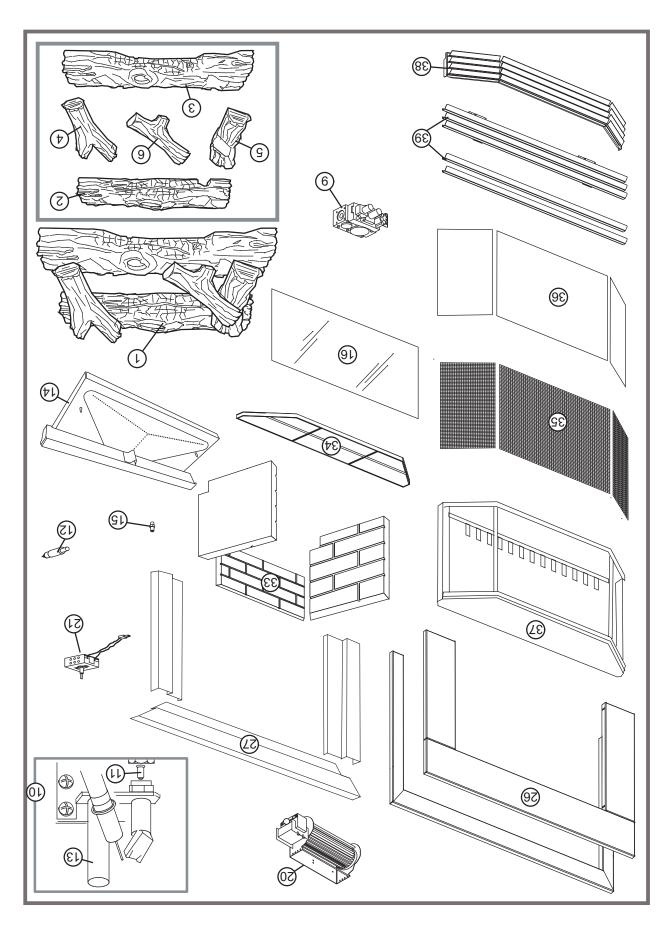

# **3EPLACEMENT**

Lorsque vous commandez des pièces, donnez toujours l'information suivante :

**VCCESSOIRES** 

- 1. MODÈLE ET NUMÉRO DE SÉRIE DU FOYER
- 3. NUMÉRO DE LA PIÈCE
- 4. DESCRIPTION DE LA PIÈCE 5. LE FINI

# Contactez votre détaillant pour les questions concernant les prix et la disponibilité des pièces de rechange. Normalement, toutes les pièces peuvent être commandées chez votre détaillant Napoléon.

### POUR UN REMPLACEMENT DE PIÈCE US GARANTIE, UNE PHOTOCOPIE DE LA FACTURE ORIGINALE SERA REQUISE AFIN DE POUVOIR HONORER LA DEMANDE.

\* IDENTIFIE LES ARTICLES QUI NE SONT PAS ILLUSTRÉS. POUR PLUS D'INFORMATION CONTACTEZ VOTRE DÉTAILLANT NAPOLÉON.

IÈCES DE RECHANGE	LISTE DES P
DESCRIPTION	N. DE BIECE

PORTE - ACIER INOXYDABLE BROSSÉ		
PORTE - LAITON ANTIQUE PERSIENNES AFFLEURANTES & MOULURE DE	GI-1LSS	39
PORTE - LAITON POLI PERSIENNES AFFLEURANTES & MOULURE DE	GI-1LAB	39
PORTE - NOIRES PERSIENNES AFFLEURANTES & MOULURE DE	GI-1LPB	39
PERSIENNES AFFLEURANTES & MOULURE DE	GI-1LK	38
PERSIENNES PLAQUEES OR - SUPÉRIEURES & INFÉRIEURES	el-116	38
PERSIENNES EN BAIE - ACIER INOXYDABLE BROSSÉ	CI-FB3922	38
<b>DERSIENNES EN BAIE - NOIRES</b>	CI-LB36K	38
PERSIENNES EN BAIE - LAITON ANTIQUE	GI-LB36AB	38
PERSIENNES EN BAIE - LAITON POLI	CI-LB36PB	38
PERSIENNES EN BAIE - PLAQUÉES OR	CI-LB36G	38
EPÇADE EN BAIE	CI360B-KT	35
EN BAIE VITRE POUR ENSEMBLE DE FENÊTRE EN BAIE	CIBC	36
PARE-ETINCELLES POUR ENSEMBLE DE PORTE	CIBS	32
FENËTRE EN BAIE		
PANNEAUX DÉCORATIFS SIMILI-BRIQUES POUR	GI-787KT	34
PANNEAUX DECORATIFS SIMILI-BRIQUES	GI-777KT	33
ADVANTAGE PLUS INTERRUPTEUR MURAL & 20 PIEDS DE CÂBLE	CD 990	32
- TÉLÉCOMMANDE MANUELLE À BATTERIE	1100-099W	31
(SPĒCIFIEZ LA COULEUR) THERMOSTAT MILLIVOLT	1000-069M	30
PEINTURE ÉMAIL POUR RETOUCHES ET PINCEAU	W470-0002	56
ACRYLIQUE DORÉE		
MOULURE DE 2" POUR GI-63K	GI-2PB	*82
CONTOUR DE BASE - LAITON ANTIQUE	GI-63AB	72
CONTOUR DE BASE - LAITON POLI	GI-63PB	72
CONTOUR DE BASE - NOIR	GI-63K	72
RES PLUS PETITES QUE 26" X 42" :		
MOULURE DE 2" POUR GI-93K	GI-92PB	*82
CONTOUR DE BASE - LAITON POLI	GI-93PB	72
CONTOUR DE BASE - NOIR	CI-93K	72
RES PLUS PETITES QUE 28" X 47" :		
CONTOUR DE LUXE DE 9" - PORCELAINE ÉMAILLÉE VERTE	GI-909F9	56
CONTOUR DE LUXE DE 9" - PORCELAINE ÉMAILLÉE NOIRE	CI-606K6	56
CONTOUR DE LUXE DE 9" - PORCELAINE ÉMAILLÉE AMANDE	6S606-I5	56
CONTOUR DE LUXE DE 9" - ACIER INOXYDABLE BROSSÉ	GI-900829	56
CONTOUR DE LUXE DE 9" - NOIR	CI-900K9	56
CONTOUR DE LUXE DE 9" - LAITON ANTIQUE	GI-900AB9	56
CONTOUR DE LUXE DE 9" - LAITON POLI	CI-600B6	56
RES PLUS PETITES QUE 30" X 48" :	R LES OUVERTU	POU
CONTOUR DE LUXE DE 6" - PORCELAINE ÉMAILLÉE VERTE	9 <del>1</del> 606-I9	56
CONTOUR DE LUXE DE 6" - PORCELAINE ÉMAILLÉE NOIRE	GI-909K6	56
CONTOUR DE LUXE DE 6" - PORCELAINE ÉMAILLÉE AMANDE	9\$606-15	56
CONTOUR DE LUXE DE 6" - ACIER INOXYDABLE BROSSÉ	9SS006-ID	56
CONTOUR DE LUXE DE 6" - NOIR	GI-900K6	56
CONTOUR DE LUXE DE 6" - LAITON ANTIQUE	GI-900AB6	56
CONTOUR DE LUXE DE 6" - LAITON POLI	9B00	CI-9

ENSEMBLE DE CONVERSION PL - GN

ENSEMBLE DE CONVERSION GN - PL

1610-921W \*0#

40\* W175-0172

Т

	ІИТЕЯВИРТЕИЯ D'ÉCOULEMENT	9000-099/M	<b>∑</b> 2∗	
'ÀRRÊ'	INTERRUPTEUR DE BRÛLEUR MARCHE	6000-099M	<b>∠</b> 4∗	
	SUPPORT INFÉRIEUR DE VITRE	6700-080W	23*	
	SUPPORT SUPÉRIEUR DE VITRE	W080-0062	22*	
	BONTON			
ΛEC	A 318AIRAN 3883TIN Á RUSTAURRELE A	KB 32	2۱*	
	SOUFFLERIE	CZ-225	20	
	THERMODISQUE	Z000-069W	6١	
	JOINT D'ÉTANCHÉITÉ - SUPÉRIEUR	W562-0011	81	
(	JOINT D'ÉTANCHÉITÉ (2 PIÈCES - CÔTÉ	W562-0012	۷١	
	D'ÉTANCHÉITÉSUPÉRIEUR			
	VITRE DE PORTE AVEC JOINT	W010-0440	9١	ı
	INJECTEUR DE BRÛLEUR #54 - PL	M426-0054	٩l	ı
	INJECTEUR DE BRÛLEUR #42 - GN	W456-0042	٩l	
	BRÜLEUR	W010-0364	カレ	
	THERMOPILE	1000-089M	13	
	ALLUMEUR PIÉZO	M357-0001	15	
	INJECTEUR DE VEILLEUSE #10 - PL	W455-0084	L L	
	INJECTEUR DE VEILLEUSE #18 - GN	W455-0025	11	
	ASSEMBLAGE DE LA VEILLEUSE - GN	7500-001W	10	
	ASSEMBLAGE DE LA VEILLEUSE - PL	W100-0058	10	
	SOUPAPE - PL	W725-0037	6	
	SOUPAPE - GN	W725-0036	6	
	LOGO NAPOLÉON	W385-0245	*8	
	BRAISES DE CHARBON DE BOIS	W220-0001	×۷	
	BÛCHE CENTRALE	6000-3E1W	9	
	BÛCHE GAUCHE	M135-0016	9	
	BÛCHE DROITE	M135-0015	₽	
	BÛCHE AVANT	W135-0052	3	
	BŮCHE ARRIÈRE	M135-0007	7	
	CHARBON DE BOIS			
DE	ENSEMBLE DE BÛCHES AVEC BRAISES	CF-610	l	


**DONK TES ONNEKLINKES BETILES ONE 51... X 45... # N. DE BIỆCE DESCKIBLION** 

# DE SONFFLERIE

### REMPLACEMENT DE LA SOUFFLERIE

de vitre inférieur et retirez la vitre.

- Retirez le brûleur. Retirez les bûches.
- Retirez les huit vis qui retiennent la porte d'accès (située
- et glissez le conduit vers l'avant du dessous du support à • Retirez les quatre servant à fixer le conduit de la soufflerie derrière le support à brûleur).
- Débranchez les connecteurs sur la soufflerie.
- Retirez la soufflerie.
- Enlevez le capuchon de la vis de la veilleuse.
- Ajustez la vis de la veilleuse pour obtenir une flamme

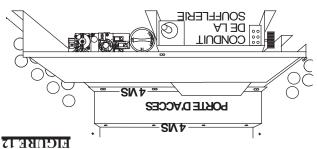

par l'arrière de la chambre de combustion, est réchauffé et pénètre par les ouvertures des persiennes inférieures, monte de la soufflerie accroît le débit de chaleur. L'air frais ambiant environ 30 minutes après l'arrêt de l'encastré. L'utilisation 15 minutes après l'allumage de l'encastré et fonctionnera à "ON", elle se mettra automatiquement en marche environ est actionnée par la chaleur donc lorsque l'interrupteur est

 Coupez l'alimentation électrique et en gaz à l'appareil. sort par les ouvertures des persiennes supérieures.

- Retirez le support de vitre supérieur. Desserrez le support




ce problème ne sera pas couvert par la garantie. soufflerie ou son compartiment. Tout dommage causé par devez éviter que cette poussière n'entre en contact avec la de la soufflerie causant des dommages irréparables. Vous La poussière de gypse pénétrera dans le roulement à billes

# REGLAGE

# <u>RÉGLAGE DU VENTURI</u>

allouez de 15 à 30 minutes pour que la couleur finale de la du brûleur. La flamme peut ne pas être jaune immédiatement; est bleue et plus elle aura tendance à se détacher des orifices des dépôts de carbone. Plus le volet est ouvert, plus la flamme est fermé, plus la flamme est jaune et aura tendance à causer propane, le volet d'air est réglé à 3/8" (0,375"). Plus le volet

LE GAZ SEULEMENT! PAR UN TECHNICIEN/INSTALLATEUR QUALIFIÉ POUR LE RÉGLAGE DU VOLET D'AIR DOIT ÊTRE EXÉCUTÉ flamme se stabilise.

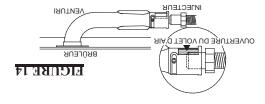

# AGE DE LA VEILLEUSE

avec une ouverture de 1/16" (0,063"); pour les modèles au use.Pour les modèles au gaz naturel, le volet d'air est réglé Remettez en place le capuchon de la vis de la veillede taille normale.



THERMOPILE DE 3/8" À 1/2' SUPÉRIEURE DE LA ENVELOPPER LA PARTIE LA FLAMME DOIT

EIGNBE 13

D N'utilisez pas cet encastré si une partie quelconque a canisme pourrait causer un feu ou une explosion. qualifié. Forcer le bouton ou tenter de réparer le mé-

appelez le service des incendies.

tonchée par l'eau.

système de contrôle et du contrôle du gaz qui aurait été qualifié pour l'inspecter et pour remplacer toute pièce du été submergée. Contactez immédiatement un technicien

pas de le réparer. Appelez un technicien

Certains gaz sont plus lourds que l'air et se déposeront au plancher afin de vous assurer qu'il n'y a pas de fuite de gaz. B Avant d'allumer, sentez autour de l'encastré et près du manuellement tout en suivant ces instructions à la lettre. A Cet appareil est muni d'une veilleuse qui doit être allumée

de contrôle du gaz. N'utilisez jamais d'outils. Si le bouton C N'utilisez que votre main pour enfoncer ou tourner le bouton niveau du plancher.

N'allumez aucun appareil.

dessus. Durant l'allumage et le réallumage, le bouton de contrôle du gaz ne peut tourner de "PILOT" à "OFF" à pendant que vous allumez la veilleuse en appuyant sur le 1. Arrêtez! Lisez les recommandations de sécurité ci-

9. Lorsque la veilleuse est allumée, tournez le bouton de contrôle du gaz vers la gauche à VOI".

la soupape de gaz à "ON" ou à "HIGH". L'interrupteur brûleur principal peut ne pas s'allumer lorsque vous tournez 11.Si votre encastré est muni d'un interrupteur à distance, le "HOH" à notuod el tournez le bouton à "HIGH"

principal s'allume. à distance doit aussi être à "ON" pour que le brûleur

eur marche/arrêt et un cordon d'alimentation. La soufflerie

vitesse variable avec contrôle thermostatique, un interrupt-

L'encastré Napoléon est offert de série avec une soufflerie à

 $\Sigma$  Vérifiez si les joints d'étanchéité de la porte ne sont pas

l'allumage prend plus de temps, consultez votre détaillant

d'allumage total de 5 à 10 secondes est satisfaisant. Si

lorsque le bouton de contrôle du gaz est à "ON". Un temps

6. Vérifiez si le brûleur principal allume sur tous les orifices

puissante pour envelopper la thermopile et qu'elle atteigne

4. Assurez-vous que la flamme de la veilleuse est assez

isent des flammes. Nettoyez tous les orifices qui n'ont pas 3. Assurez-vous que tous les orifices des brûleurs produ-

bûches, le volet d'air et l'espace entourant les bûches propres

de flamme ou dont la flamme ne brûle pas adéquatement.

brisés ou manquants. Remplacer si nécessaire.

Remettez en place les bûches nettoyées.

le brûleur par le deuxième déflecteur.

l'aspirateur, au moins une fois l'an.

vers la droite jusqu'à 🖊 "OFF". NE FORCEZ PAS.

2. Enfoncez légèrement le bouton de contrôle du gaz et tournez

12. Remettez l'alimentation électrique à l'encastré.

en brossant ou en passant

Napoléon.

10.Si votre encastré est muni d'une soupape d'ajustement de

Si vous ne pouvez pas rejoindre votre fournisseur de gaz,

veilleuse ne reste pas allumée, répétez les étapes 3 à 7. gaz enfoncé pendant une (1) minute, puis relâchez-le. Si la bouton-pression d'ignition. Gardez le bouton de contrôle du

**INSTRUCTIONS D'ALLUMAGE** 

**ENTRETIEN** 

INSTRUCTIONS POUR COUPER LE GAZ

DE CYS

SOUPAPE

Ne touchez à aucun interrupteur électrique; n'utilisez aucun

téléphone dans votre immeuble.

De la maison d'un voisin, appelez immédiatement votre

# fournisseur de gaz et suivez ses instructions.

# n'enfonce pas ou ne tourne pas manuellement, n'essayez

# QUE FAIRE SI VOUS DÉTECTEZ UNE ODEUR DE GAZ:

POUR VOTRE SÉCURITÉ, LISEZ CE QUI SUIT AVANT D'ALLUMER L'ENCASTRÉ :

doivent pas être obstrués. Les apports d'air comburant et d'air de convection ne d'essence ou autres liquides et vapeurs inflammables. être gardé propre et libre de matériaux combustibles,

utilisation et au moins une fois l'an par un technicien de

d'évacuation devraient être inspectés avant la première

un mauvais fonctionnement et être dangereux. Assurez-

vous d'identifier chacun des fils avant de les débrancher.

ATTENTION : Lors de l'entretien des contrôles, assurez-

PROCEDER A L'ENTRETIEN DE L'ENCASTRE

L'ALIMENTATION ÉLECTRIQUE AVANT DE

COUPEZ L'ALIMENTATION EN GAZ ET

nu is lianeque à l'alimentation électrique à l'appareil si un

7. Tournez le bouton de contrôle du gaz vers la gauche

6. Localisez la veilleuse située devant la bûche arrière. flamme, tournez le bouton vers la droite 🦳 à "OFF".

5. Si l'appareil est muni d'une soupape d'ajustement de

tectez une odeur de gaz, **ARRÊTEZ!** et suivez les instructions ci-dessus "Que faire si vous détectez une

de combustion puisse s'échapper. Continuez à l'étape suivante si vous NE SENTEZ PAS de gaz. Si vous de

4. Attendez (5) minutes pour que le gaz dans la chambre

3. Tournez le bouton de contrôle du gaz vers la droite 2. Coupez l'alimentation électrique à l'encastré.

Enfoncez et maintenez le bouton de contrôle du gaz

travail d'entretien doit se faire.

"TOJI9" ƙ

."zeg əb ruəbo

"440" ƙ 🖊

moins de l'enfoncer.

.8

Une réinstallation incorrecte des fils peut occasionner

fois l'entretien terminé. Cet encastré et son système

vous que l'encastré fonctionne adéquatement une

service qualifié. L'espace entourant le foyer doit

2. Gardez le compartiment des contrôles, le brûleur, les faut retirer les bûches afin de dégager les deux ensembles. 1. Pour nettoyer le brûleur et la veilleuse adéquatement, il


апоятра.

6

**⊢-**ОМЯ∃НТ

# MISE EN PLACE DU LOGO

.èupibni'up Retirez le papier dorsal du logo et placez-le sur la vitre tel

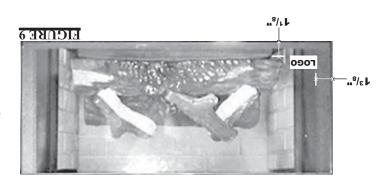

# FONCTIONNEMENT /

# FONCTIONNEMENT DE L'EVACUATION VÉRIFICATION DU BON

ET AVANT DE QUITTER LE CLIENT. L'ÉVACUATION DE L'APPAREIL APRÈS L'INSTALLATION

Testez après avoir installé l'appareil dans un foyer ventilé

: ətnevius noşet al əb əlditeudmoəni

éteignez la soufflerie de l'encastré. faites fonctionner les ventilateurs d'évacuation de la maison; 1. Fermez toutes les portes et les fenêtres de la pièce;

3. Attendez 5 minutes. Allumez une allumette et tenez-la 2. Réglez les contrôles à "HIGH" et allumez l'appareil.

de l'évacuation est insatisfaisant si la fumée et la flamme ne mée est attirée dans le tube de retour d'air. Le fonctionnement 4. Le fonctionnement de l'évacuation est satisfaisant si la fudevant l'ouverture du tube de retour d'air.

nécessaire, consultez un inspecteur qualifié. aurait pas de blocage ou une obstruction dans l'évacuation. Si dans le tube de retour d'air, éteignez l'appareil et vérifiez s'il n'y veau. Si la fumée et la flamme ne sont toujours pas attirées éteignez l'appareil, attendez 10 minutes puis essayez de nou-5. ISi le fonctionnement de l'évacuation est insatisfaisant, sont pas attirées dans le tube.


# **ІИТЕЯВИРТЕИЯ D'ÉCOULEMENT**

tuyau de cheminée bloqué ou défait. de gaz dans l'éventualité d'un violent refoulement ou d'un Il détecte les variations de température et ferme la soupape l'arrière de l'appareil et qui se prolonge dans le coupe-tirage. Ceci est un interrupteur actionné par la chaleur qui est fixé à

dui suivent. automatiquement l'arrivée de gaz dans les 5 à 10 minutes est bouché ou ne tire pas, l'interrupteur d'écoulement coupera gaz non brûlés durant l'allumage. Si le tuyau de cheminée cumulations de monoxyde de carbone ou une explosion de Il agit comme un interrupteur de sécurité pour éviter des ac-

MONOXYDE DE CARBONE ET PEUT ETRE MORTEL. PEUT PROVOQUER UN EMPOISONNEMENT PAR TOUTE MODIFICATION APPORTÉE À L'INTERRUPTEUR

ON DOIT VERIFIER LE BON FONCTIONNEMENT DE

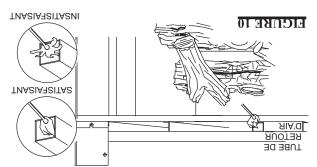

ouvrez une fenêtre pour aérer la pièce. brûlant dans l'échangeur de chaleur. Dans les deux cas, heures. Ceci est causé par des particules de poussière peut qu'une légère odeur se dégage pendant quelques comme à la suite de vacances ou à la fin de l'été, il se Après de longues périodes sans utiliser l'encastré,

de fabrication; elle ne se reproduira plus. tures et lubrifiants internes utilisés dans le processus conditionnement des bûches et l'évaporation des pein-Cela est une condition normale temporaire causée par le dégagera une légère odeur pendant quelques heures. Lorsqu'il est allumé pour la première fois, l'encastré


# **TES FINITIONS**

# **BKAISES DE CHARBON DE BOIS**

éloignée des orifices du brûleur afin de ne pas les bloquer. Gardez la poussière des braises de charbon de bois bûche. Placez le reste des braises le long de l'avant. toute la section du brûleur sous la partie creuse de la Eparpillez les braises sous la bûche avant en recouvrant

### N'utilisez pas la fine poussière qui reste au fond du sac.


 $N^{u}\ddot{t}$ ilisez que des braises de charbon de bois et des bûches certifiées **PHAZER**^{TM} Idisponibles chez votre détaillant rougeoient lorsqu'elles sont exposées à une flamme directe. Les bûches  ${\it PHAZER}^{TM}$  et les braises de charbon de bois

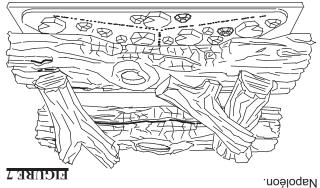

### PERSIENNES AFFLEURANTES GI-1L

# PERSIENNES SUPÈRIEURES

pattes de retenue supérieures. persienne supérieure dans les Insérez le rebord arrière de la

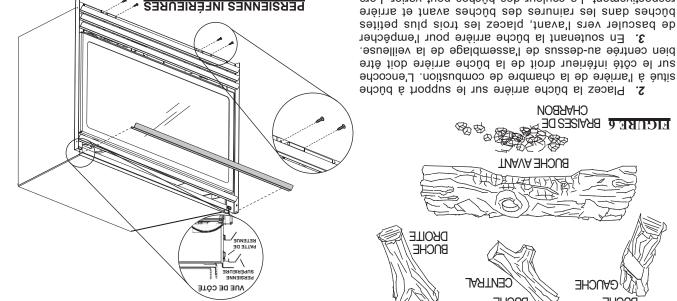

des 4 vis fournies.

**SIDE NIEM** 

inférieures à l'encastré à l'aide

Fixez l'ensemble de persiennes


# **DÉCORATIFS SIMILI-BRIQUES INSTALLATION DES PANNEAUX**

Les instructions d'installation et d'entretien sont incluses avec optionnels sont disponibles chez votre détaillant Napoléon. foyer en maçonnerie, des panneaux décoratifs simili-briques Pour donner à votre encastré une véritable apparence de

### DISPOSITION DES BÛCHES

 $m{1}$ . Placez la bûche avant sur le brûleur, la poussant le de charbon de bois pour obtenir le meilleur effet possible. installation. Prenez le temps de bien installer les braises descent réaliste et unique qui est différent dans chaque exclusives aux foyers Napoléon, créent un effet incan-Les bûches PHAZERMD et les braises de charbon de bois,

DE CHARBON DE BOIS SOUS LA BÜCHE AVANT MAIN-IL SERA PLUS FACILE DE PLACER QUELQUES BRAISES tés de la bûche et les orifices du brûleur devraient être égaux. recouvrir. Les espacements gauche et droit entre les extrémiplus près possible des orifices du brûleur sans les bloquer/

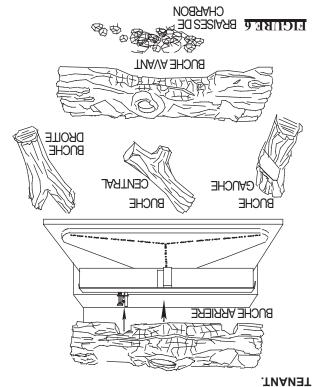

NE SONT PAS PLACÉES CORRECTEMENT. UNE DIMINUTION DE FLAMME SI LES BÛCHES IL SE PRODUIRA DES DÉPÔTS DE CARBONE ET


deviendront plus uniformes à mesure que leurs pig-ments sont "absorbés" pendant le procédé de "cuisson".

de la première utilisation de l'encastré, les couleurs

respectivement. La couleur des bûches peut varier. Lors

: lif ub endilso

Vous pouvez installer un contour autour de l'encastré afin de couvrir la plupart des ouvertures de foyer. Fixez le contour au bord intérieur du caisson à l'aide de quatre vis de fixation. Les contours et les moulures sont disponibles en plusieurs finis pour s'agencer au décor de votre pièce. Les objets placés devant l'encastré doivent être gardés à une distance d'au moins 48" de la face vitrée de l'appareil.

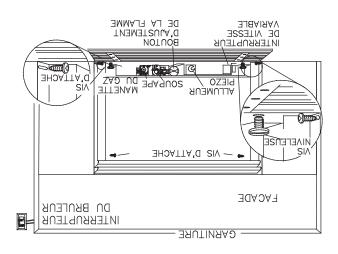


### EICHKE 2

Un interrupteur marche/arrêt est inclus avec l'appareil et peut être installé du côté droit de l'ensemble de moulures. Pour faciliter l'accès, cet interrupteur peut être remplacé par un interrupteur mural ou un thermostat millivolt qui peut être installé dans endroit pratique. Passez un fil millivolt à deux brins (noyau solide) dans l'ouverture électrique située du côté prins (noyau solide) dans l'ouverture dectrique située du côté inférieur droit de l'appareil. La longueur maximale dépend du inférieur droit de l'appareil. La longueur maximale dépend du


St ealibre
calibre 16
calibre 14
<u>DIAMÈTRE DU FIL</u>

Branchez les deux brins aux bornes 1 et 3 situées sur la soupape de gaz.

EICNBE 4

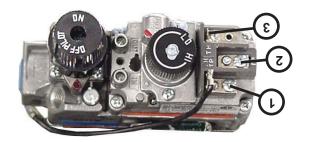


Ne raccordez pas la soupape de gaz à l'alimentation électrique (110 volts ou 24 volts).

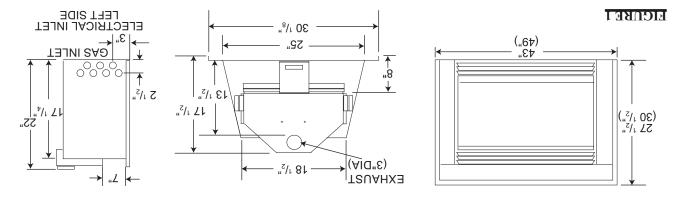

# **NOITAJJATSNI**

Installez une gaine approuvée de 3" ou 4" de diamètre à l'intérieur de la cheminée. Avec une gaine de 4", un agrandisseur doit être raccordé entre le coupe-tirage et la gaine. L'installation de la cheminée doit être conforme aux exigences des codes nationaux et locaux. La gaine doit être continue de l'encastré jusqu'au chapeau de la cheminée.

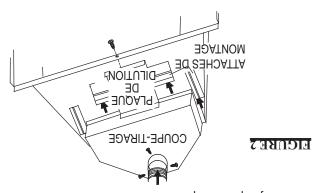

Enlevez la vis de fixation du devant de la plaque de dilution. Poussez le coupe-tirage hors des attaches de montage et fixez la gaine à l'aide de trois vis espacées également. Bourrez la gaine à l'aide de trois vis espacées également. Bourrez de l'isolant autour de la gaine dans la section du registre afin d'empêcher l'arrivée d'air dans la cheminée. Placez l'encastré au centre du toyer à bois en vous assurant que le coupe-tirage est réinséré dans les attaches de montage. Mettez à niveau en réglant les quatre vis de réglage situées à l'avant et à l'arrière, de chaque côté de a pase de l'encastré. En mettant l'encastré à niveau, on limine les balancements et le bruit excessif lorsque la soufflerie est en marche. Remettez en place la vis de fixation sur le est en marche. Remettez en place la vis de fixation sur le devant de la plaque de dilution.



Installez un tuyau noir rigide, un raccord flexible, si les codes locaux le permettent, ou un tuyau de cuivre de type L de 1/2" avec une bague d'ajustement de 3/8" à 1/2" et une soupape de sectionnement à l'encastré. Scellez et serrez solidement. Une bague d'ajustement est requise entre la soupape de gaz et le taccord flexible. Ne pliez pas le raccord tuyau de cuivre ou le raccord flexible. Ne pliez pas le raccord soupape de gaz et le soupape de gaz et le soupape de cuivre ou le raccord flexible. Ne pliez pas une flamme nue solution d'eau savonneuse. N'utilisez pas une flamme nuel solution d'eau savonneuse. N'utilisez pas une flamme nuel

Retirez les cendres de l'intérieur du foyer à bois. Assurez-vous que la cheminée et le foyer à bois sont propres et en bon état et construits de matériaux incombustibles. Si nécessaire, faites faire les travaux de réparation par une personne qualifiée avant d'installer l'encastré. Enlevez le registre du foyer à bois existant ou fixez-le en position ouverte.

existant ou fixez-le en position ouverte. À l'aide de vis, fixez l'étiquette d'avertissement (W385-0199) à l'intérieur de la chambre de combustion du foyer existant,

dans lequel l'encastré sera installé.

hermétiquement les ouvertures.

WARNING: THIS FIREPLACE HAS BEEN CONVERTED FOR USE WITH A GAS FIREPLACE MUSERT OF CORIGINAL PARD SANDOT BE USED FOR BURNING WOOD OR SOLID FUELS UNLESS ALL ORIGINAL PARTS HAVE BEEN REPLACED AND THE FIREPLACE IS RE-APPROVED BY THE AUTHORITY HAVING JURISDICTION.

ATTENTION: CE FOYER A ETE CONVERTI AFIN D'ETRE UTILISE SEULEMENT COMME

ATTENTION: CE FOYER A ETE CONVERTI AFIN D'ETRE UTILISE SEULEMENT COMME POYER COMBUSTIBLE SOLIDE, SANS QUE TOUTES LES POUS BRULES D'ENDONTES AND OUT ON THE LE FOVER COMBUSTIBLE SOLIDE, SANS QUE TOUTES LES PICES ORIGINALES DEUD REMPLACEES ET QUE LE FOYER SOIT APPROUVE DE NOUVEAU PAR LES AUTORITES AND TOUTES LES PROVERS DE L'AUTORITES AND TOUTES LES PROVERS DE L'AUTORITES AND TOUTES LES PROVERS DE L'AUTORITES AND TOUTES DE L'AUTORITES DE L'

ces pièces ne doivent pas être installées de façon à sceller les plaques de fond, les moulures en aluminium etc. mais ouvertures de ventilation du foyer peuvent être obstruées par être retirés s'ils sont fixés avec des attaches mécaniques. Les Les tablettes de fumée, les écrans et les déflecteurs peuvent retirés du foyer existant avant d'installer l'encastré au gaz. rideau pare-étincelles et les supports à bûches peuvent être Les briques réfractaires, les portes vitrées, la glissière, le porte de la trappe de ramonage existante soit bien fermée. d'alimentation en gaz a été installé. Assurez-vous que la doit être bourré d'isolant incombustible une fois que le tuyau les côtés inférieurs ou le plancher du foyer. Ce trou d'accès moins peut être pratiqué selon les règles du métier à travers branchement du gaz, un trou d'accès de 1 ½ pouce ou Si le foyer à bois ne possède pas de trou d'accès pour le l'encastré sera installé, ne doivent pas être sectionnés. Les composants en tôle du foyer existant, dans lequel

### bustible d'une projection maximale de 6" et le dessus de TLe dégagement minimal entre le bas d'une tablette com-

pas la pointe de mise à la terre de la fiche du cordon ché dans une prise adéquatement mise à la terre. Ne retirez Unis. Le cordon d'alimentation de la soufflerie doit être bran-IE NATIONAL ELECTRICAL CODE ANSI/NFPA 70 aux États-CODE ÉLECTRIQUE CANADIEN CSA C22.1 au Canada ou l'absence de codes locaux, utilisez la version courante du trique et mis à la terre conformément aux codes locaux. En Lorsque installé, l'encastré doit être branché au circuit élecl'appareil est 8".

# INFORMATION GÉNÉRALE

est 15 900 BTU/h et avec le propane, le rendement maximal supplémentaires. Le rendement maximal avec le gaz naturel devra être réduit au taux de 4 % pour chaque 1 000 pieds compétente locale, l'indice certifié du débit à haute altitude en l'absence de recommandations spécifiques de l'autorité foyer est installé à des élévations dépassant 4 500 pieds, et le gaz naturel et 22 000 BTU/h pour le propane. Lorsque le ET SA QUALITÉ! Le débit maximal est 24 000 BTU/h pour À L'ESSAI POUR CONFIRMER SON FONCTIONNEMENT POUR VOTRE SATISFACTION, CET ENCASTRÉ A ÉTÉ MIS

qean bour le gaz naturel et 10 pouces de colonne d'eau pour collecteur lorsque le gaz circule est 3,5 pouces de colonne 13 pouces de colonne d'eau pour le propane. La pression au en gaz est 7 pouces de colonne d'eau pour le gaz naturel et d'eau pour le propane. La pression maximale d'alimentation de colonne d'eau pour le gaz naturel et 11 pouces de colonne La pression minimale d'alimentation en gaz est 4,5 pouces est 16 000 BTU/h.

Cet encastré est approuvé pour installation dans les chambres le propane.

à coucher et les chambres studio.

24 volts) n'est requise pour le fonctionnement du Aucune alimentation électrique externe (110 volts ou

la flamme de "LO" ést plus évident pour le gaz naturel la flamme de  $\mbox{\sc mathematical}$ maux et il faut s'y attendre. Le changement d'apparence de cycles de chauffage et de refroidissement sont tout à fait nor-Les bruits causés par l'expansion et la contraction lors des système.

PLAQUÉES SOIN DE LA VITRE ET DES PIÈCES

dne bont le gaz propane.

d'alimentation.

Par la suite, nettoyez aussi souvent qu'il le faudra, sinon la commandé après les dix premières heures de fonctionnement. matériaux substituts. Nettoyez la vitre avec un nettoyeur redisponible chez votre détaillant Napoléon. N'utilisez pas de sec. L'encastré est muni d'une vitre en céramique de 3/16" plaquées, polissez légèrement à l'aide d'un linge propre et N'employez pas de détergent abrasif pour nettoyer les pièces

NE PAS NETTOYERLORSQU'ELLE EST CHAUDE! vitre risque de rester marquée en permanence.

# INSTRUCTIONS GÉNÉRALES

en se as àirilaud Ruatallaten qualifié en se CET ENCASTRÉ AU GAZ DEVRAIT ÊTRE INSTALLÉ ET

conformant aux codes locaux.

fiques qui s'appliquent à votre région, l'autre. Il est donc important de connaître les normes spéci-Les pratiques d'installation peuvent varier d'une région à

p. ex. : dans l'état du Massachusetts :

position ouverte avant d'installer un encastré ou un ensemble de • Le registre du foyer doit être enlevé ou bloqué en le soudant en

- La soupape de sectionnement doit être un robinet à gaz avec bûches à gaz.
- .T ne eèngioq enu
- Le raccord flexible ne doit pas mesurer plus que 36 pouces.
- Cet appareil n'est pas approuvé pour installation dans une cham
- avec une chambre de combustion scellée à évacuation directe. bre à coucher ou une salle de bain à moins d'être un appareil
- AVERTISSEMENT : Ce produit doit être installé par un plombier
- EN L'ABSENCE DE CODES LOCAUX, L'INSTALLATION Commonwealth du Massachusetts. certifié ou un installateur pour le gaz lorsque installé dans le

ADA OU LE NATIONAL FUEL GAS CODE, ANSI Z223.1 GAZ CAN/CGA-B149 DANS SA VERSION POUR LE CAN-DOIT ETRE CONFORME AU CODE D'INSTALLATION DU

l'extrême, laissez plusieurs minutes (5-15) à la Lorsque les configurations d'évacuation sont à brûleur est continue avant de réinstaller la porte. vitrée retirée. Assurez-vous que l'arrivée de gaz au Purgez toutes les conduites de gaz avec la porte POUR LES ÉTATS-UNIS.

Des altitudes de plus de 4 000 pieds requièrent une flamme pour se stabiliser après l'allumage.

Un bouchon NPT de 1/8", accessible pour le raccordement gaz lorsque la pression est de 1/2 lb/po2 (3,5 kPa) ou moins. pendant tout essai de pression du système d'alimentation en en gaz en fermant la soupape de sectionnement manuelle (3,5 kPa). Le foyer doit être séparé de la ligne d'alimentation système lorsque les pressions d'essai excèdent 1/2 lb/po2 d'alimentation en gaz pendant les essais de pression de ce La soupape de l'encastré doit être débranchée de la ligne course d'évent d'un minimum de 12 pieds.

la pression atmosphérique soit la même que celle à la prise de la cheminée. Le coupe-tirage doit être installé pour que doit être conforme aux instructions d'installation du fabricant UL-1777 (aux Etats-Unis). Le raccordement de l'évacuation homologué selon la norme ULC-S635M (au Canada) ou Ce foyer doit être raccordé à un système de cheminée gainée, du branchement de l'alimentation en gaz à l'encastré.

d'un manomètre, doit être installé immédiatement en amont

tretenir et opérer l'encastré. N'obstruez jamais l'ouverture tion et de dilution. Prévoyez un accès suffisant pour en-Assurez-vous d'une quantité suffisante d'air de combusd'air comburant du foyer.

Le foyer dans lequel l'encastré est installé doit possèder les incombustible (préfabriqué ou en maçonnerie) seulement. Cet appareil doit être encastré dans un foyer à bois ventilé sur le devant de l'encastre.

dimensions minimales suivantes:

PROFONDEUR: 16 ½ POUCES LARGEUR: 25 ½ POUCES; HAUTEUR: 17 ½ POUCES;

Les foyers au gaz MAPOLEON sont fabriqués conformément aux normes strictes du Certificat d'Assurance de la

Qualité mondialement reconnu ISO 9001: 2000.

technicien qualifié avant d'être emballé pour garantir que vous, le client, recevez le produit de qualité dont vous vous Juite et d'allumage à une station de test de qualité. One jois assemblé, chaque joyer est soigneusement inspecté par un aritisans qualifiés qui sont fiers de seur travail. Le brûseur et se montage de sa soupape subissent un test de détection de Les produits WAPOLÉON sont conçus avec des composants et des matériaux de qualité supérieure, assemblés par des

# GARANTIE À VIE LIMITÉE DU PRÉSIDENT DES FOYERS AU GAZ NAPOLÉON

MOTIONS de MAPOLEON.

et les moulures d'extrusion en aluminium. thermique seulement), les pièces plaquées or contre le ternissement, les composants en porcelaine émaillée de chaleur, le brûleur en acier inoxydable, les bûches PhazerMD et les braises, la vitre en céramique (cassure contre les défauts tant que vous en êtes le propriétaire. Ceci couvre : la chambre de combustion, l'échangeur Les matériaux survants et la fabrication de votre nouveau foyer au gaz NAPOCEON sont garantis

gratuitement les pièces de rechange durant la première année de la garantie limitée. l'allumeur, les joints d'étanchéité et l'assemblage de la veilleuse sont couverts et NAPOLEON fournira soupapes de gaz, l'interrupteur thermique, les interrupteurs, l'installation électrique, les télécommandes, Les composants électriques (110V et millivolt) et les pièces soumises à l'usure tels que les souffleries, les

représentant autorisé NAPOLÉON. nu b seinestation de tarif spiration de réparation doit être accompli par l'entremise d'un autorisé de la compagnie. Les coûts de main-d'oeuvre à la charge de NAPOLEON sont basés sur un première année. Cependant, les travaux de réparations nécessitent l'approbation préalable d'un représentant Les coûts de main-d oeuvre relatifs aux réparations garanties sont couverts gratuitement durant la

## **CONDITIONS ET LIMITATIONS**

NAPOLÉON garantit ses produits contre les défauts de fabrication à l'acheteur d'origine seulement --- c.-à-d. l'individu ou la personne morale (client inscrit) dont le nom apparaît sur le carte d'enregistrement de garantie déposée auprès de NAPOLÉON --- à condition que l'achat ait été fait par l'entremise d'un détaillant NAPOLÉON autorisé et sous réserve

Cette garantie du fabricant n'est pas transférable et ne peut être prolongée ou étendue par aucun de nos représentants qu'elle qu'en soit la raison.

cous les codes d'incendie et de construction locaux et nationaux. Le toyer au gaz doit être installateur un installateur ou entreprent ou entreprent qualitie. L'installation doit être faite conformement aux instructions d'installation incluses avec le produit et à

de pieces d'autres tabricants annuera cette garantie. Cette garantie limitée ne couvre pas les dommages causés par un manyais usage, un mandue d'entretien, un accident, des altérations, des abus ou de la négligence et l'installation

Cette garantie limitée ne couvre pas non plus les égratignures, les bossellements, la corrosion ou la décoloration causés par une chaleur excessive, des produits d'entretien chimiques et abrasifs ou l'écalliage des prèces en porceisine émaillée, le bris par manipulation des buches PhazerMD et des braises ou tout composant de ventillation utilisé dans

MAPOLEON, garantit à vie ses brûleurs en acier inoxydable contre les défauts de fabrication et de matériau sous réserve des conditions sujvantes : durant les dix premières an-

à 50 % du prix de détail courant. rées, NAPOLEON remplacera ou réparera selon notre option les pièces défectueuses gratuitement. Après les dix premières années, NAPOLEON fournira les brûleurs de rechange

à la condition que le produit ait été utilisé conformément aux instructions de fonctionnement et dans des conditions normales. Au cours de la première année seulement, cette garantie s'applique à la réparation ou au remplacement des pièces garanties dont les matériaux ou la fabrication sont défectueux

cette garantie en remboursant à l'acheteur d'origine le prix de gros de toute pièce garantie qui est défectueuse. Après la première année, concernant cette Garantie à Vie Limitée du Président, NAPOLÉON peut, à sa discrétion, se libérer entièrement de toutes obligations en ce qui concerne

Nonobstant toutes les dispositions contenues dans cette Garantie Limitée à Vie du Président, la responsabilité de NAPOLÉON sous cette garantie est définie comme ci-dessus et de telles dépenses ne sont pas convertes par cette garantie. Après la première année, MAPOLÉON ne sera pas responsable de l'installation, de la main-d'oeuvre ou autres coûts ou dépenses relatives à la réinstallation d'une pièce garantie

et elle ne s'appliquera à aucun dommage accidentel, consécutif ou indirect.

ce produit, ses composants ou accessoires est exclue. Cette garantie définit l'obligation et la responsabilité de NAPOLÉON en ce qui concerne le foyer au gaz NAPOLÉON. Toute autre garantie énoncée ou implicite en ce qui concerne

ancysmilistion on des évents inadequats, une configuration dévacuation excessive, un apport d'air insuffisant ou des pressions négatives qui peuvent ou non être causés par des autrentision ou des pressions négatives qui peuvent ou non être causés par des AAPOLEON n'endosse ni n'autorise aucun tiers à assumer en son nom, toute autre responsabilité concernant la vente de ce produit. NAPOLEON ne sera pas responsable d'une

systèmes mécaniques tels que les ventilateurs d'évacuation, les fournaises, les sécheuses de linge, etc.

La facture ou une copie sera requise ainsi que le numéro de série et le numéro de modéle lors d'une réclamation auprès de votre détaillant autorise. La carte d'enregistrement de Tous dommages causés au foyer, à la chambre de combustion, à l'échangeur de chaleur, aux gamitures de laiton ou autres composants par l'eau, les dommages causés par les intempéries, de longues périodes d'humidité, de condensation, des produits chimiques ou produits d'entretien nuisibles ne seront pas la responsabilité de NAPOLÉON.

garantie doit être retournée dans les quatorze jours pour enregistrer la garantie.

# TABLE DES MATIÈRES

### SYSTÈME DE SOUFFLERIE 0 r

Remplacement de la soufflerie

Réglage du venturi

# RÉGLAGES

0 r

Réglage de la veilleuse

# 11-12 RECHANGES

Accessoires / Options Liste des pièces de rechange Procédures de commande

# 13-14 GUIDE DE DÉPANNAGE

# HISTORIQUE D'ENTRETIEN

PG 2-4 INTRODUCTION

Soin de la vitre et des pièces plaquées Information générale Instructions générales Garantie

# 6-7 LES FINITIONS NOITAJJATSNI

Installation des persiennes Disposition des bûches/braises de charbon de bois Installation des panneaux décoratifs simili-briques

### **FONCTIONNEMENT** Mise en place du logo

Vérification du bon fonctionnement de l'évacuation Interrupteur d'écoulement

### **ENTRETIEN** 6

- Ne brûlez pas de bois ou autres matériaux dans ce foyer.
- vêtements ne prennent feu. Surveillez les jeunes enfants lorsqu'ils sont dans la même pièce que le foyer. exposées à des températures élevées. Ils doivent s'en tenir éloignés pour éviter de se brûler ou que leurs Les adultes et particulièrement les enfants doivent être sensibilisés aux risques que représentent les surfaces

**TNEMESSITAEVA** 

VEUILLEZ CONSERVER CE MANUEL POUR CONSULTATION ULTÉRIEURE

- meubles et des rideaux. En raison des températures élevées, le foyer devrait être placé loin des endroits passants et loin des
- Les pare-étincelles ou écrans enlevés pour faire l'entretien devront être remis en place avant d'utiliser le foyer. Les vêtements et autres matériaux combustibles ne doivent pas être posés sur ou près du foyer.
- du foyer doit être gardé libre de tous matériaux combustibles, essence ou autres liquides et vapeurs fréquent pourrait être nécessaire en raison des peluches provenant des tapis, literie, etc. L'emplacement avant la première utilisation et au moins une fois l'an par un spécialiste en entretien. Un entretien plus du foyer ainsi que le système d'évacuation. Le foyer et son système d'évacuation doivent être inspectés Il est primordial de garder propres les compartiments de contrôle, les brûleurs, la soufflerie, les bouches d'air
- Ce foyer ne devra être modifié en aucun cas.
- à combustible solide. Ce foyer ne doit pas être raccordé au conduit d'une cheminée desservant un autre appareil de chauffage
- de service qualifié • N'utilisez pas ce foyer si une partie quelconque a été submergée. Contactez immédiatement un technicien
- aurait été submergée. pour inspecter l'appareil et pour remplacer toute pièce du système de contrôle ou du contrôle du gaz qui
- devra être effectué par un technicien de service certifié ou qualifié. • Ne pas opérer le foyer lorsque la porte vitrée est enlevée, fissurée ou brisée. Le remplacement de la vitre
- Ne frappez pas et ne claquez pas la porte vitrée du foyer.

inflammables.

INSTALLATEUR : LAISSEZ CE MANUEL AVEC L'APPAREIL.

NE LAISSEZ PAS LES ENFANTS ON AUTRES INDIVIDUS À RISQUE SEULS À PROXIMITÉ DE L'APPAREIL PROPRIETAIRE : CONSERVEZ CE MANUEL POUR CONSULTATION ULTERIEURE.

# **D'OPÉRATION** T3 NOITALLATSNI'Q INSTRUCTIONS



VENTILÉS. HOMOLOGUE SELON LES NORMES NATIONALES CANADIENNES ET AMÉRICAINES, CSA 2.22 ET ANSI 221:50 POUR LES FOYERS À GAZ

**PROPANE** G13600-P SA5 JARUTAN C13900-N

CONSIGNES DE SECURITE CERTIFIÉ POUR LE CANADA ET LES ÉTATS-UNIS SELON LES MÉTHODES ANSI/CSA

des blessures corporelles ou des pertes de vie. s'ensuivre, causant des dommages matériels, lettre, un incendie ou une explosion pourraient Si ces instructions ne sont pas suivies à la

liquides et vapeurs inflammables à proximité de cet ap-- N'entreposez pas et n'utilisez pas d'essence ou autres

- : QUE FAIRE SI VOUS DÉTECTEZ UNE ODEUR DE GAZ : pareil ou tout autre appareil.
- N'allumez aucun appareil.
- Ne touchez à aucun interrupteur électrique;
- Appelez immédiatement votre fournisseur de gaz n'utilisez aucun téléphone dans votre immeuble.
- Si vous ne pouvez pas rejoindre votre fournisseur d'un téléphone voisin. Suivez ses instructions.
- installateur qualifié, une agence d'entretien ou le L'installation et l'entretien doivent être faits par un de gaz, appelez le service des incendies.

Cet appareil peut être installé dans une maison fournisseur.

règlements locaux le permettent. préfabriquée (mobile) déjà instalée à demeure si les

conversion est utilisée. peut être converti à d'autres gaz, sauf si une trousse de gaz indiqué sur la plaque signalétique. Cet appareil ne Cet appareil doit être utilisé uniquement avec le type de







ENFANTS TOUCHER LA VITRE. **NE JAMAIS LAISSER LES** 

NANT QU'ELLE AIT REFROIDI.

**NE PAS TOUCHER LA VITRE** 

DES BRÜLURES. LA VITRE CHAUDE CAUSERA

ERTISSEME









Téléphone 705-721-1212 • Télécopieur 705-722-6031 • www.napoleonfoyers.com • ask@napoleon.on.ca 103 Miller Drive, Crittenden, Kentucky, USA, 41030 Wolf Steel Ltd., 24 Napoleon Rd., Barrie, ON, L4M 0G8 Canada /

\$ 00.01 W415-0061 / C / 11.28.11 1.22B