

TECHNICAL BULLETIN



MODEL/DERIVATIVE:
MINI

No: 0012
Ref: R0809bu
Issue: 2
Date: 26.07.95

AFFECTED RANGE:
All versions up to engine number 12A... 317971.

PROBLEM:
OIL LEAK FROM EXTERNAL OIL PIPE CONNECTION - OLIVE

Oil leaking from external oil pipe to cylinder block via tube nut connection.

CAUSE:
Torque relaxation of tube nut

ACTION:
(This Bulletin replaces Mini Bulletin item 63 dated 07.04.93)

MANUAL VERSIONS


Remove external oil pipe completely, dismantle to retrieve tube nuts, discard pipe and both rubber seals.

Completely clean cylinder block, filter housing and tube nut mating threads.

Assemble new pipe part number LQP10033 and original tube nuts with new rubber seal part number LZB10017 to filter end (1 in illustration), and modified aluminium olive part number LZV100080 to cylinder block end, (2 in illustration).

Fit oil pipe to block and oil filter housing, ensure pipe is fully inserted into cavity recesses (see illustration inset), engage tube nut threads and apply "Loctite Lock'N Seal 242" to exposed threads and tighten tube nuts by hand alternating 1/4 turn at a time so as to avoid over stressing pipe in any one direction.

Finally tighten each tube nut with a suitable open ended spanner .

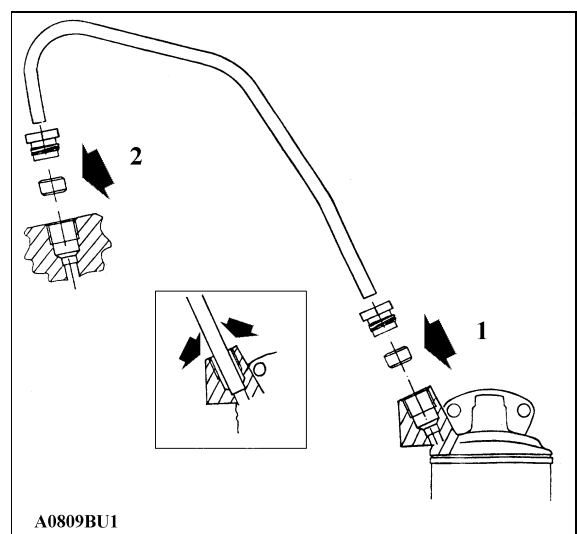

AUTOMATIC VERSIONS

As per Manual Versions, for oil pipe to cylinder block fitment. For opposite pipe connection (adapter to gearbox). Apply Loctite "Lock'N Seal 242", to existing fitting, no additional modified seal is used.

Again tighten progressively as described for Manual Versions.

Note: Due to location of tube nut (cylinder block end), the use of a 'Crows Foot' or cranked ended spanner will be beneficial.

When tight, the underside of the tube nut at the filter head end will make contact with housing, unlike the block end which is now prevented from making contact with block face due to the aluminium olive which does not compress.

PARTS INFORMATION:

LQP10033 - Pipe oil - filter to crankcase (Manual)

LQP10038 - Pipe oil - filter to crankcase (Automatic)

LZB10017 - Seal (rubber) - pipe - 1 off (Manual only)

LZV100080 - Aluminium Olive-External Oil Pipe-1 off- (Manual & Automatic)

Loctite - Lock'N Seal - 242

WARRANTY CLAIMS:

Manual and Automatic

Use Complaint Code: 2A5N

Use S.R.O.: 12.60.88/33

Time allowed: 0.40 hour