

TECHNICAL BULLETIN



MODEL/DERIVATIVE:
Mini

Bulletin N°: **0041**
CDS. ref: **X8414bu**
Issue: **1**
Date: **10.02.99**

AFFECTED RANGE:
Option fit and all 'Mini 40th Anniversary' vehicles

RADIO/CD HEAD UNIT INTRODUCTION - ENTERING SECURITY CODE AND REGION

A new combined radio/CD head unit has been introduced into the vehicle range starting with the above limited edition models. These new head units have a unique method of security code entry and a radio region requirement.

CAUSE:
All new head units are fitted with the default radio region - 'AREA EUROPE' irrespective of destination country. For vehicles outside of the UK or Europe, the required radio region will have to be entered.

ACTION:
Before releasing new vehicle to customer, ensure radio has been set correctly. In addition to the familiar security code, a change to the default radio region will be required on vehicles which go to markets outside UK and Europe.

ENTERING SECURITY CODE: (ALL VEHICLES)

1. Turn radio on, 'CODE' will be displayed.
2. Use preset buttons 1 to 4 to enter each digit of the code.

Example:

CODE = 1234


Press preset button 1 - until '1' appears in display

Press preset button 2 - until '2' appears in display

Press preset button 3 - until '3' appears in display

Press preset button 4 - until '4' appears in display

3. When the correct 4 digit code is displayed, press the '▷' tuning button, a radio station will now appear and radio is operational.

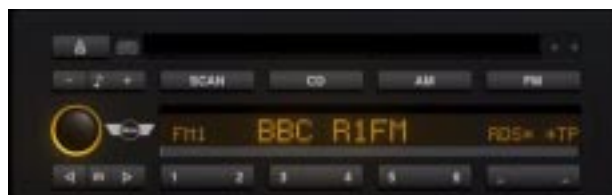

NOTE: If an incorrect code is entered three consecutive times, a delay period of 1 hour commences, during this delay period 'WAIT' appears in the display. DO NOT switch radio off (leave ignition switched to position 1), at the end of the delay period, 'CODE' reappears in the display and the correct code can be entered.

ENTERING RADIO REGION:

(VEHICLES OUTSIDE UK AND EUROPE ONLY)

The procedure for entering the radio region is as follows:

1. Enter security code as described above.
 2. Turn radio 'off'.
 3. Within 8 seconds of turning radio back on, press the 'm' button until display changes (this should be between 5 - 15 seconds).
 4. Using the '—' button (adjacent to tone control button), cycle through the display options until the region 'AREA EUROPE' is displayed (this is the pre-installed default radio region).
 5. Press 'preset 1' button until the required country region is displayed, i.e. 'AREA JAPAN'.
 6. Press the '▷' button, the display will blink indicating new radio region has been stored.
-

PARTS INFORMATION:

Not required

WARRANTY CLAIMS:

Not required