
L7 7-track looper for the M8 · cheatsheet

A = EDIT B = OPT

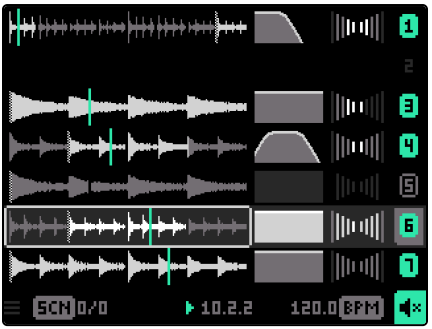

- **Tracks 7–1**, top to bottom: **waveform** (bright part plays), **filter**, **volume** (level, balance, meter), then the track's button (filled: playing, outlined: muted).
- **Status row**: scene SCN 3/7, clock (bar.beat.step), tempo, and the **action button**, which shows what A will do.
- The small icon at the bottom left: the **menu** (projects, export, storage mode).

MOVE

▲ ▼ ◀ ▶	Select a row / a cell
Off any edge	The menu, once you let go; back the same way
◀ + ▶ held	Switch screens from anywhere (press both together)

TRACKS

A empty track	Record from the next bar line (clock stopped: starts it, bar 1). Again: stop at the bar's end; within a beat after a bar line, there
A other track	While one records: stop it, the next starts where it ends
A full track	Mute / unmute (held + ▲ ▼: swipe; back: undo)
SHIFT + A	Cut clip / paste onto an empty track / cancel a recording
SHIFT + ◀ ▶	Previous / next recording on the card
B + A empty track	Resample: record what you hear (needs a clip playing)

Loops are whole bars, up to 32. A metronome clicks in a new project until the first loop is done.

STATUS ROW WITH A

Scene cell	A next scene (on release) · SHIFT + A duplicate it
Clock cell	A play / stop · B + A (any cell) metronome on/off
Tempo cell	A tap tempo · SHIFT + A audio follow

CLOCK

START	Play from 1.1.1 / stop
SHIFT + START	Restart from 1.1.1
MIDI / USB	Follows a clock's tempo, Start and Stop; sends its own

ADJUST: HOLD B + ARROWS

CELL	◀ ▶	▲ ▼
Waveform	Move the range (tap twice: by its length)	Range longer / shorter (twice: ×2 / ½)
Wave +A	Nudge ¼ beat (held: 10 ms steps)	Move it
Filter	Move the band	Wider / narrower
Volume	Balance	Volume (3.75 dB steps)
Track	B + A + ▲ ▼: move a track with a clip	
Clock	Master volume ▲▼, balance ◀ ▶ (all projects)	
Tempo	±0.1 BPM	±1 BPM

B twice: reset the cell (whole loop, filter open, unity, centre; clock: master 100%; tempo: the scene's).

SCENES

SHIFT + ▲ ▼	Next / previous scene, on the bar line after you let go of SHIFT
…twice, hold	To the copy of the last (N+1*) / the empty one (0*)
SHIFT + B twice	Duplicate the scene
SHIFT B A	Cut the scene (in that order)
B SHIFT A	Paste it after this one

Changes save into the scene as you go.

MENU

A on a card	Load it (playing: on the next bar line, its card flashes until then). Hold: back to the looper too
A empty card	New project, straight to the looper
A loaded card	Back to the looper
SHIFT + A	Cut project / paste into an empty slot
Export	Ableton Live set in /L7/EXPORTS
Storage mode	The card as a USB drive; any key to exit

B works as A in the menu.

Hold the power key to switch off: everything is saved first.

Full guide: L7 User Guide.pdf