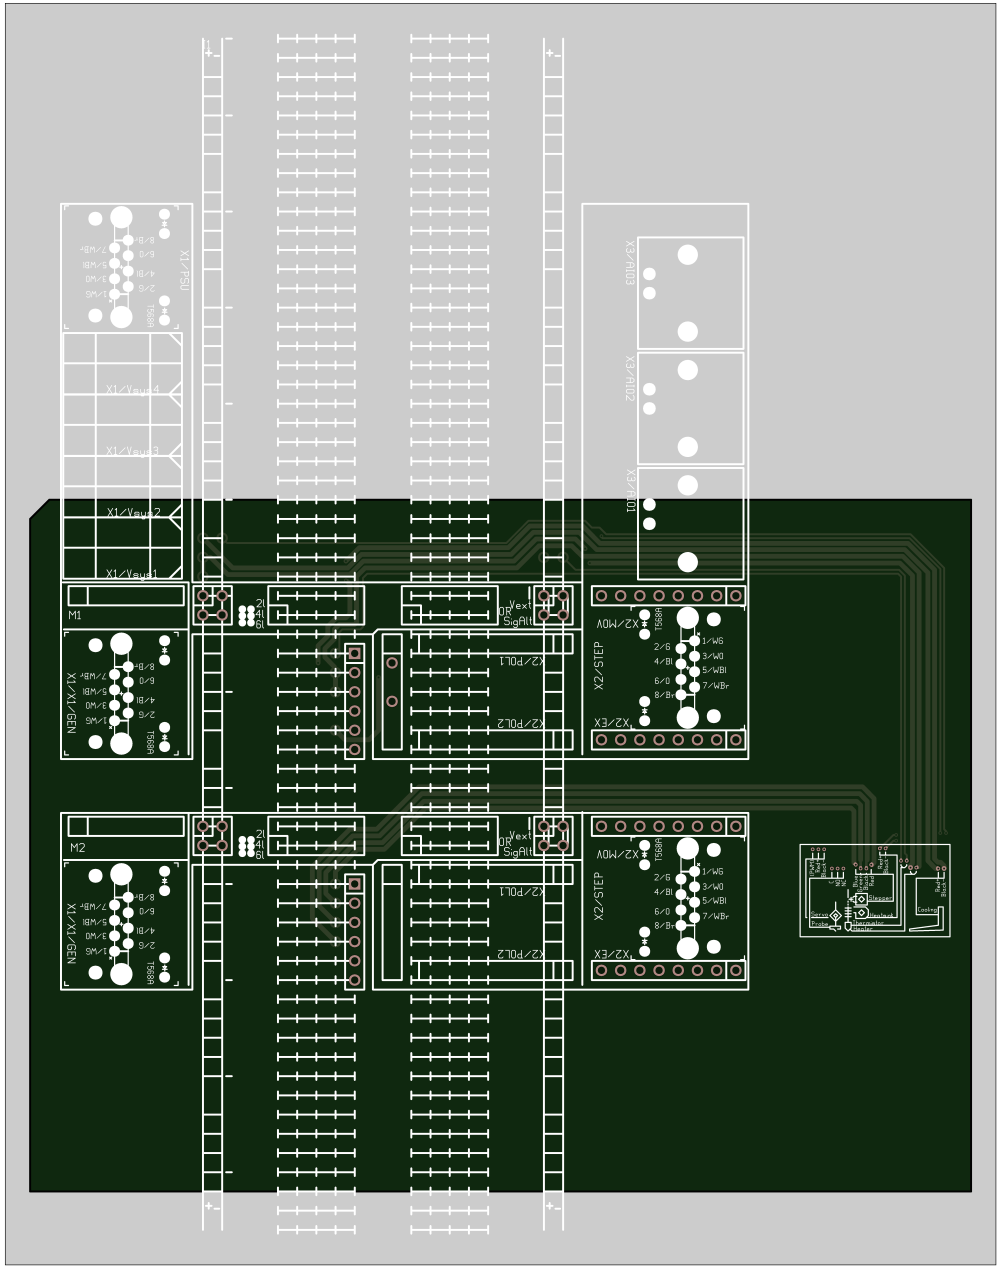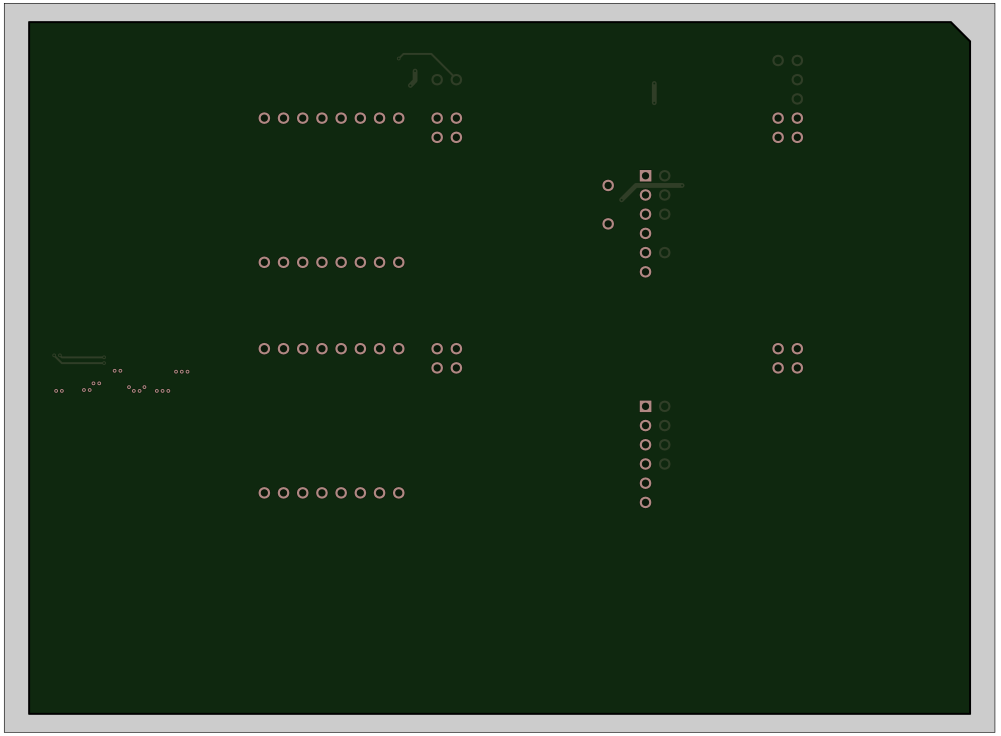
X1/PSU
X1/Vaux4
X1/Vaux3
X1/Vaux2
X1/Vaux1
M1
X1/X1/GEN
M2
X1/X1/GEN
X2/POL1
X2/POL2
X2/POL1
X2/POL2
Vext
OR
SigAlt
X2/MOV
X2/STEP
X2/EX
X2/MOV
X2/STEP
X2/EX
X3/MOT1
X3/MOT2
X3/MOT3
Reset
Mode
Servo
Heater
Cooling