TankMatic™ L1

Installation and Operation Manual

Non-Intrusive ‘Dry Run’ Pump Protector (supports up to 7 tanks)

Date: 20 March 2026

Contents

1 Prerequisites ..... - 4 -
1.1 Tools ..... - 4 -
1.2 Site resources ..... - 4 -
1.3 Kit contents ..... - 4 -
2 Installation onto the Tank ..... - 6 -
2.1 Powering and Testing ..... - 6 -
2.2 Mark and clean the external wall ..... - 6 -
2.3 Install the components ..... - 6 -
3 General Use ..... - 9 -
3.1 Calibration ..... - 9 -
3.2 Startup colour codes ..... - 10 -
3.3 Troubleshooting ..... - 10 -

List of Abbreviations

- SPL - SuperMation Products Limited.
- UI - User Interface.

Models Applicable:

- L1.

1 Prerequisites

Safety is crucial so please ensure proper safety rules and use of tools are followed. The details of these are outside the scope of this document. SPL is not liable for any injuries or damages incurred due to incorrect installation.

1.1 Tools

Before installation, ensure the following tools are available:

1. Hot glue gun (minimum 60Watt) for full size (11mm / 0.43inch) sticks.
2. Extension cord (length depends on the location of the target tank and nearest power receptacle).
3. Ladder or scaffolding for tanks installed at significant height.
4. Clean, lint-free, cloth and rubbing alcohol in a spray bottle.

1.2 Site resources

The following are needed for the installation at the tank:

1. One available 120VAC 3 pin NEMA power receptacle. This is used by the water pump.
2. The tank outer surface must be dry with no trace of moisture. Please do not install in drizzle/rain.

1.3 Kit contents

The kit contains all that is needed for a full installation as listed below:

1. One TankMatic L1 relay module.
2. One TankMatic L1 sensor module. External sensor pads (up to 6) are dependent on the client's order.
3. One power cord 10 foot long for sensor.
4. One hot glue stick 11mm x 270mm.
5. One nameplate sticker.

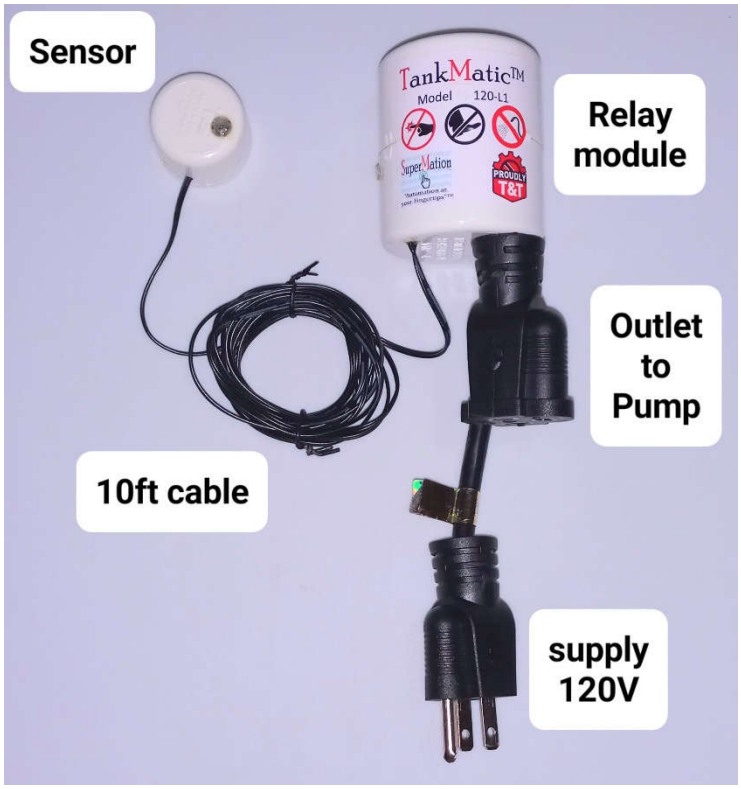
Sensor
TankMatic™
Model 120-L1
SuperMation
PROUDLY T&T
Relay module
Outlet to Pump
10ft cable
supply 120V

2 Installation onto the Tank

The product is designed for plastic (polypropylene) water storage tanks. Ceramic, concrete, metal and silicone tank walls are not compatible with the product. The maximum power ratings for 1-phase pump motors are shown below:

Voltage (V)	Horsepower (HP)	Kilowatt (kW)
110 to 120	1.25	0.93
220 to 240	2.5	1.86

The motor nameplate running current must not exceed 11 Amps.

2.1 Powering and Testing

The 120VAC plug needs to be inserted into the power receptacle used by the water pump and ensure the LEDs are active. The water pump will plug into the receptacle at the relay module.

The sensor LED will be red prior to installation and the relay LED will flash once every 6 seconds. To test the unit, press firmly the sensor base (opposite side of the LED) to anywhere on the tank below the water level and the LED will be green. For the first power-up of the product, the relay module LED will go solid blue and an audible click will be heard: the pump may activate depending on the discharge line pressure.

2.2 Mark and clean the external wall

Identify the sensor installation location(s) then clean using rubbing alcohol. Ideally at least 12 inches from the base of the tank to ensure a reserve volume of water is always available to the pump.

2.3 Install the components

Ensure your hot glue gun is hot enough that some glue dribbles from the nozzle. Use hot glue to secure the relay module to the power receptacle housing.

Apply a ring of glue directly behind the sensor (and a square of glue behind sensor pads if ordered) and press onto the tank at the location(s) in sub-section 2.2.

If the installation was incorrectly done, spray the cooled glue with rubbing alcohol and let soak for 2 minutes. Pull off the component and peel off traces of the glue. Repeat the installation properly.

The above picture shows a typical installation of the relay module glued onto the pump's power receptacle.

The above pictures show the sensor (without external sensor pads) on a tank. The left picture indicates no water at the senor, the right picture shows water has risen above the sensor.

3 General Use

3.1 Calibration

Calibration is recommended for reliable operation. To perform a calibration ensure the water level is above the sensor, wait 30 seconds after power-up and connect to the product's WiFi network, for example:

SSID: TM1 (the number may be different if multiple products are installed).

Password: 1234567890

To perform a calibration with custom sensitivity, access its UI on your phone's browser app. In your browser app address bar enter the follow local address: 192.168.4.1 or scan the below QR code.

The UI will load as shown below for a tank with water above the sensor.

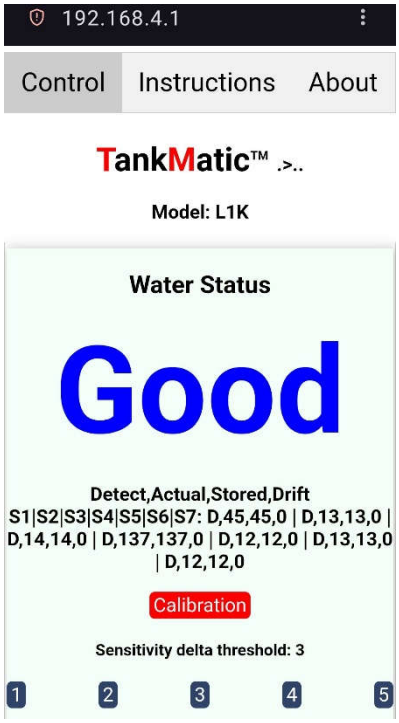

The individual sensors' data is shown: D for detected and – for no detection. The product has one internal sensor and supports 6 external sensor pads each with a 10 foot long cable. Distances between the tanks will determine the feasibility of multiple sensors.

Tap the Calibration button, type Yes and tap OK. The sensor LED will flash white. It is now calibrated and the relay will activate immediately if this was the first power-up.

The sensitivity delta threshold is default at 3. This is suitable for most polypropylene tanks. Smaller values can be used for thicker walled tanks, typically very tall tanks. Higher values can be applied to thin walled tanks.

3.2 Startup colour codes

The product LEDs has colour codes for the sensor and relay modules.

Sensor	
Green	Water detected at the sensor(s). If external sensor pads are installed, water must be present at all sensors.
Red	At least one sensor is above the water level. Use the UI to determine which sensor(s) have not detected water.
White flash	Calibration in progress. Use only when the water level is above the sensor.
Yellow flash	Phone or tablet has just connected to the product.
Relay	
Rapid rate flashing	Power-up has occurred and the relay is searching for the sensor.
Medium rate flashing	The relay is reconnecting to the sensor.
One flash every 6 seconds	No water detected and the relay has turned off the pump.
Solid	Water detected and the relay has enabled the pump. The motor will run depending on the pump's pressure switch.
Two flash every 6 seconds	5 minute safety delay-on when the water level has risen above the sensor. After this delay the LED will go solid and enable the pump. To bypass this time delay (not recommended), unplug the relay module then plug again into the receptacle. The product will power up and enable the pump immediately if the water level is above the sensor.

3.3 Troubleshooting

High pressure water jets onto the tank may cause a false positive indication if the tank's water is below the sensor(s). When the tank outer surface dries, the product will properly detect the internal level.

If the relay LED is solid colour and the pump is not running, turn on a water faucet to allow the pump pressure switch to power the motor. If the pump does not run, contact SPL.

On a known full tank of water, if the sensor shows red, perform calibration as sub-section 3.1. The LED should be green. If it is not green, check the adhesion of the sensor(s) onto the tank wall. If adhesion is good and the LED is not green, contact SPL.