


TankMatic™ R1

Installation and Operation Manual

7+ Sensor Non-Intrusive Water Level Monitor with Remote Access

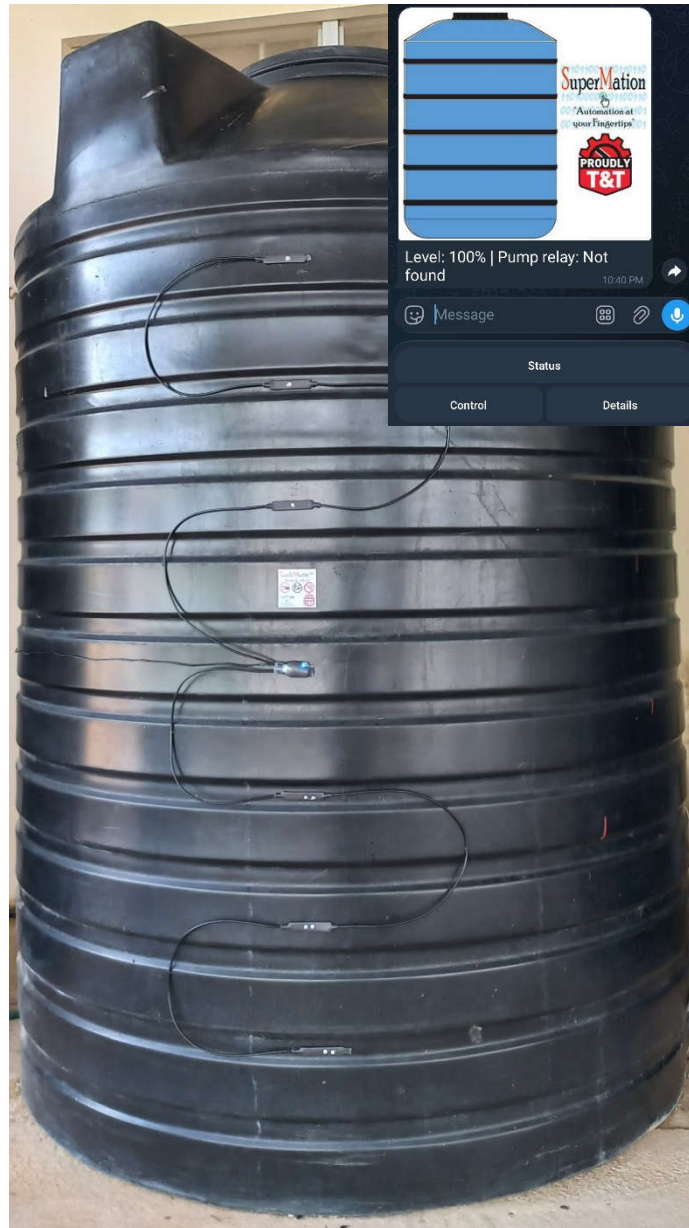

Date: 15 July 2026

Contents

1	Prerequisites	- 4 -
1.1	Tools	- 4 -
1.2	Site resources	- 4 -
1.3	Kit contents	- 4 -
2	Connect the product to the WiFi network.....	- 5 -
2.1	Power up.....	- 5 -
2.2	Enter WiFi credentials.....	- 5 -
2.3	Find the product's profile in Telegram.....	- 6 -
2.4	Notifications	- 6 -
2.4.1	Add or remove Users	- 6 -
2.4.2	Enable or disable notifications.....	- 7 -
3	Installation onto the Tank	- 8 -
3.1	Powering	- 8 -
3.2	Install the components	- 8 -
3.2.1	Visualizer bar.....	- 10 -
3.2.2	Pump Dry-Run Protection Relay	- 10 -
4	Calibration and General Use	- 12 -
4.1	Calibration.....	- 12 -
4.2	Use	- 12 -
4.2.1	LED colours.....	- 13 -
4.3	Troubleshooting	- 14 -

List of Abbreviations

- IOM – Installation and Operation Manual.
- IP - Internet Protocol.
- MQTT - Message Queuing Telemetry Transport.
- QR - Quick Response.
- SPin - SuperMation Products identification number.
- SPL - SuperMation Products Limited.
- UI - User Interface.
- URL - Uniform Resource Locator or website link.

Models Applicable:

- R1.
- Visualizer Bar.
- Pump 'Dry-Run' protection relay.

1 Prerequisites

Safety is crucial so please ensure proper safety rules and use of tools are followed. The details of these are outside the scope of this document. SPL is not liable for any injuries or damages incurred due to incorrect installation.

1.1 Tools

Before installation, ensure the following tools are available:

1. Hot glue gun (minimum 60Watt) for full size (11mm / 0.43inch) sticks.
2. Extension cord (length depends on the location of the target tank and nearest power receptacle).
3. Ladder or scaffolding for tanks installed at significant height.
4. Clean, lint-free, cloth and rubbing alcohol in a spray bottle.

1.2 Site resources


The following are needed for the installation at the tank:

1. One available 120VAC NEMA power receptacle at the target tank(s).
2. WiFi 2.4GHz network (signal strength should be -70dBm or stronger). Internet for remote access and notifications.

1.3 Kit contents

The kit contains all that is needed for a full installation as listed below:

1. One TankMatic hub with 1 internal and external sensor pads.
2. Node(s) each with 1 internal and external sensor pads (dependent on the order).
3. One 120V power cord.
4. One hot glue stick 11mm diameter.
5. One nameplate sticker.

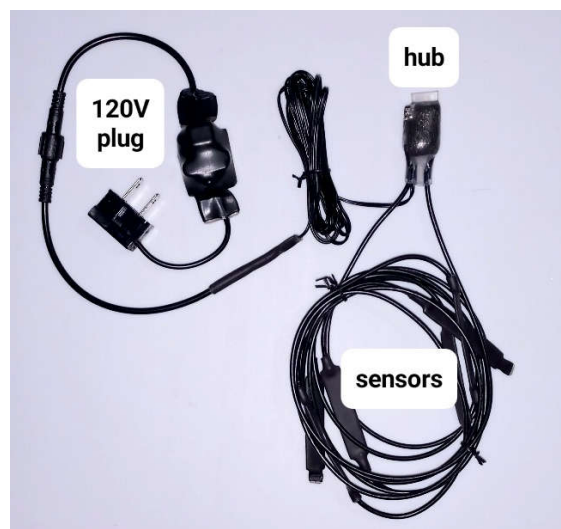

2 Connect the product to the WiFi network

2.1 Power up

Insert the 2 prong power plug into a 120VAC receptacle, preferably within 20 feet of the WiFi router.

2.2 Enter WiFi credentials

The Hub will flash purple for approximately 30 seconds then flash cyan for 120 seconds. This pattern will repeat until it successfully connects to a router. The cyan flashes indicate it is in configuration mode. Use your phone to connect to its private network:

SSID: TM1 (the number may be different if multiple products are installed).

Password: 1234567890

When connected use the UI URL in the receipt email or scan the below QR code (this works only when connected to the R model private network):



The UI will load, tap on the **About** tab then scroll down to the WiFi credentials section:

TankMatic™ >...

Model: 7S-120-R1K

Normal mode: Mrj +++.. (-57dBm)

WiFi credentials

Scan WiFi

Saved SSID | Password: Mrj | [REDACTED]

Step 1A tap the relevant SSID:

1: Mrj | -57

2: ARRIS-D638 | -61

3: CarMatic | -86

4: Amplia-CC1D | -86

5:

Or step 1B for hidden SSID: **Save SSID**

Step 2 Password: **Save password**

There are 5 buttons showing the discovered SSIDS followed by their signal strength in dBm (the strongest signal is at button 1). Tap the button of the relevant SSID or enter your hidden SSID manually, tap the **Save SSID** button, then tap the back button on your phone. Enter the relevant password then

tap the **Save password** button. The product will restart into normal mode. It will flash purple several times. If the credentials are correct and the router accepts the product, the light will turn yellow or green.

If the product did not connect successfully, repeat this sub-section (3.2) and carefully re-enter the credentials. If the saved SSID and password are correct and connection is not successful, please check the WiFi router settings.

2.3 Find the product's profile in Telegram


Use the provided URL in the receipt email to add the product in Telegram. Tap the **Start** button and the keyboard menu will now be visible. Do not share this information with unauthorized individuals.

The product must be used at least once every 6 months or else the profile is remove by the Telegram network. The sales agreement does not cover reprogramming of the product.


2.4 Notifications

2.4.1 Add or remover Users

While connected to the WiFi router, use the UI URL in the receipt email. If using an Android phone, you may need to wait approximately 5 minutes before this address resolves. A faster method is to tap the **Details** button in the Telegram chat keyboard: the address will be shown in blue text (see example below). Please bookmark both the UI URL and numerical IP addresses in your browser app.

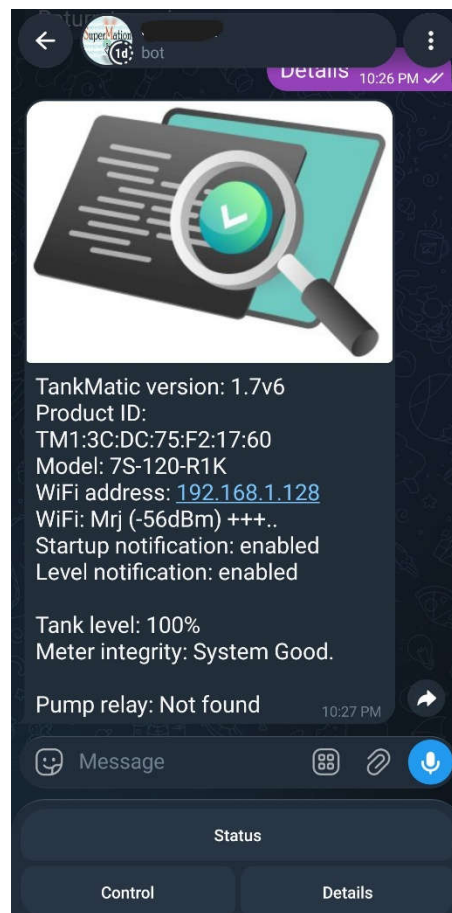

In the detailed UI (see sub-section 3.2), in the Control tab scroll down to the Notifications via Telegram section.

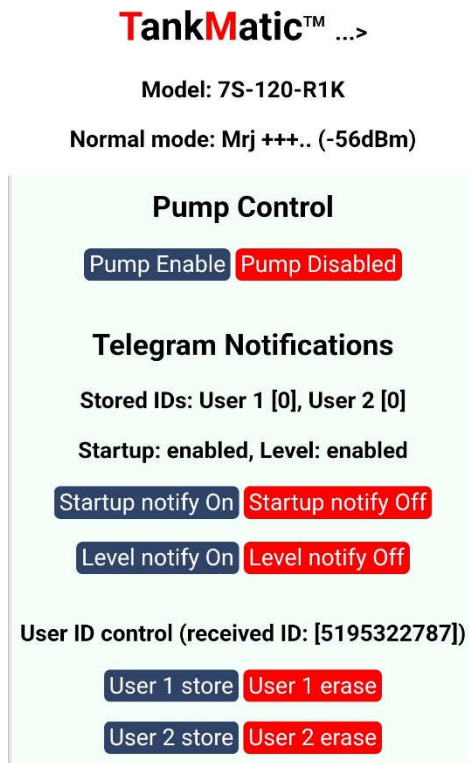

In Telegram tap the **Status** button, wait for a response and tap **User 1 store** button. A second user can be added by sharing the Telegram program, tapping the **Status** button and tapping **User 2 store** button. Either user can be removed by tapping the **erase** buttons and typing Yes at the prompt.

2.4.2 Enable or disable notifications

In sub-section 3.4.1, tap on the **Notify On/Off** buttons to enable or disable the startup and level change notifications. Both are enabled by default. Also in the Telegram chat, tap on the **Notifications** buttons to perform the same functions.

3 Installation onto the Tank

The product is designed for plastic (polypropylene) water storage tanks. Ceramic, concrete, metal and silicone tank walls are not compatible with the product. It is strongly recommended to install onto a full tank. The tank outer surface must be dry with no trace of moisture. Please do not install in drizzle/rain.

3.1 Powering

The 120VAC plug needs to be inserted into a nearby receptacle as in the example below.



Hot glue can be used to secure the wire to the tank surface, pipes and concrete walls for example. The LED(s) will go active. On a full tank, the Hub (and Node(s) if ordered) LEDs should be blue. The LED(s) will flash purple a couple times then turn green if there is water at the top sensor. At this time you should get a message from Telegram if you were added as a user for notifications. You should receive notifications in the Telegram app as the sensors read the water level. Tapping the **status** button will give the estimated water level. If the tank is partially full, at least one LED, will not be solid blue.

3.2 Install the components

Please wear silicone gloves or finger protectors. If hot glue gets on the skin, do not rip it off! Spray rubbing alcohol onto the glue and it will de-bond for easy removal.

All components should be placed equally apart. When all locations are identified, clean thoroughly with rubbing alcohol.

For tanks significantly taller than 102 inches from fill port to base, additional Nodes are recommended.


Ensure your hot glue gun is hot enough that some glue dribbles from the nozzle. Starting with the Hub, apply a rectangle of glue at the sensor area (behind the LED). Ensure the cables are oriented downward

or to the side (never upwards). Firmly press the hub onto the cleaned tank surface and hold for 20 seconds. Each sensor pad requires a line of glue on the side opposite the dot marker. The 7 sensors model has the upper sensors with one dot and goes above the Hub, the lower sensors has two dots and goes below. The 5 sensors model has a single dot on the sensor pads.



If the installation was incorrectly done, spray the cooled glue with rubbing alcohol and let soak for 2 minutes. Carefully pry off the component and peel off traces of the glue. Repeat the installation properly.

If purchased, apply the same technique to the Node(s) and its external sensor pads.

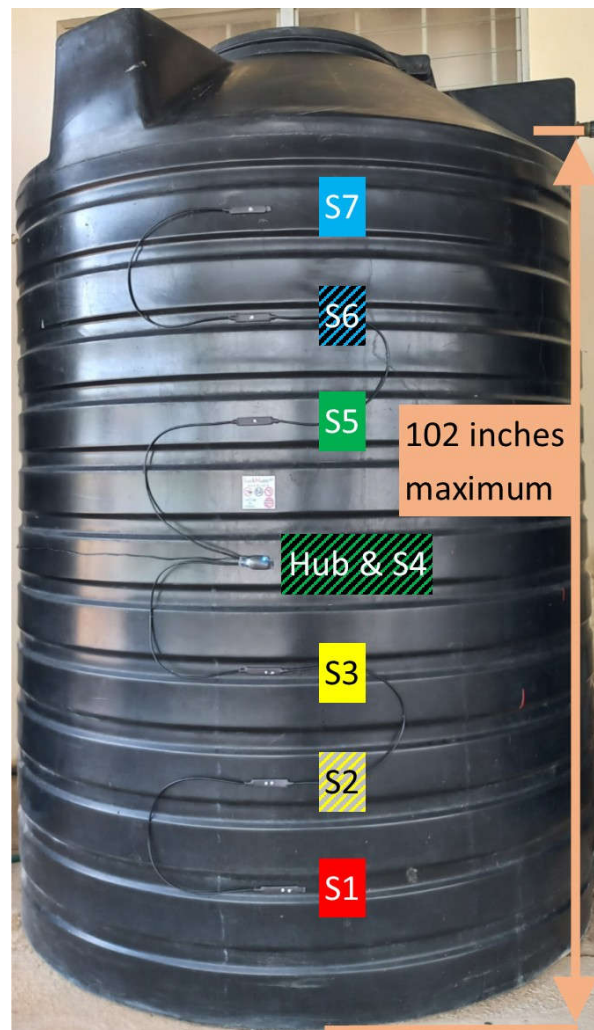

The above shows a typical installation. The sensor colours indicate the LED response. A patterned colour means the LED will flash once per second.

3.2.1 Visualizer bar

The visualizer is a LED bar that allows for easy reading of the water level. A full tank shows all green. As the water drops, the top LEDs will change to red. An empty tank will be shown as all red. Installation is via hot glue to the rear of the bar and its power supply unit.



The above picture shows a full tank.

3.2.2 Pump Dry-Run Protection Relay


The protection relay prevents dry-run damage to the pump. The relay plugs into the power outlet and the pump plugs into the relay. When the level goes critical, the pump will be turned off. When the level rises above the lowest sensor pad, the pump will be enabled after approximately 2 minutes (the pump running depends on its pressure sensor/switch).



The relay has an LED to indicate its state. Red is pump off. Green is pump enabled. Purple means reconnecting to the level monitor. The UI has controls for the relay in the Control tab.



Via telegram the pump can be enabled or disabled when the Control button is tapped.

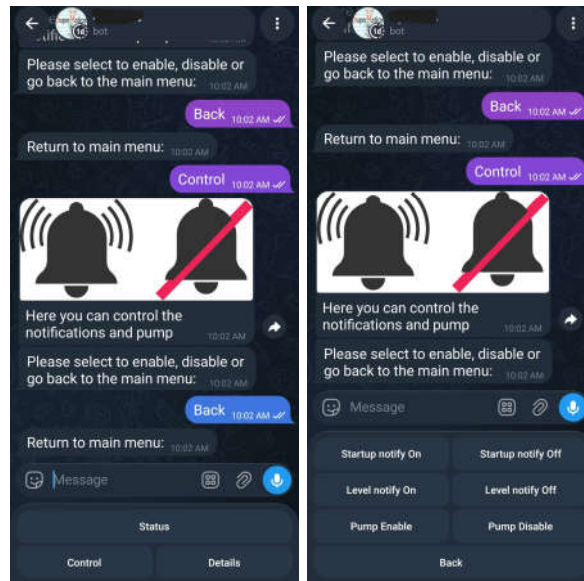

When the Status or Details buttons are used, the pump relay state is displayed at the bottom of each response.



4 Calibration and General Use

4.1 Calibration

After installation, calibration of the system is recommended. If the tank is not full, do not perform the calibration. Wait until the tank is completely full i.e. the float valve has shut off the water inside the tank.

TankMatic™ ..>.

Model: 7S-120-R1K

Normal mode: Mrj +++.. (-57dBm)

Configuration

Command:

Sensors: Detect,Actual,Stored,Drift

[HUB]123|4|567: DDD,5272,5277,-5 |
D,319,320,-1 | DDD,3311,3312,-1

(Lower, Hub, Upper) Delta | Deviation

30, 30, 30 | 3, 3, 3

Delta

Normal mode: Mrj +++.. (-57dBm)

Calibration

(Lower, Hub, Upper) Delta | Deviation

30, 30, 30 | 3, 3, 3

Delta

(Use smaller Delta values for thicker walled tanks)

5 10 15 20 25

30 35 40 45 50

Deviation Tweak

1 3 5

Channel

Lower Hub Upper

In the detailed UI (see sub-section 3.2), in the About tab scroll to the bottom, tap the **Calibration** button, type **Yes** and tap **OK**. The Hub and Node LEDs will flash white. At the end of calibration the LED(s) will go solid blue. The product is ready for use.

The Delta and Deviation Tweak should be left at their default values. As a general rule, the factory defaults are suitable for standard design tanks, 400 to 1000 Gallons (taller or slim profile tanks may require adjustment of the values since these have thicker walls).

- Higher values of Delta are useful for thinner walled or short tanks.
- Higher values of Deviation Tweak are for thicker walled or tall tanks. If too many Telegram notifications are being sent (i.e. water level sits exactly between two sensors), changing the value to 1 will stabilize the reading.

4.2 Use


The product can be accessed:

1. Locally via its UI on your phone browser app
2. Remotely using the Telegram app.
3. Remotely using the data stream. This is for clients with a custom monitoring system and is useful for fleet management of tanks.

4.2.1 LED colours

The product provides colour changing LED(s) depending on the water level within the tank. The Hub and Node(s) each displays their own 8 level colour scheme. The table and picture below shows the indications for a 7 sensor installation.

Level (%)	Sensor	Colour
100	S7	Blue
86	S6	Blue Flash
71	S5	Green
57	S4	Green Flash
43	S3	Yellow
29	S2	Yellow Flash
14	S1	Red
Critical	NONE	Red Flash

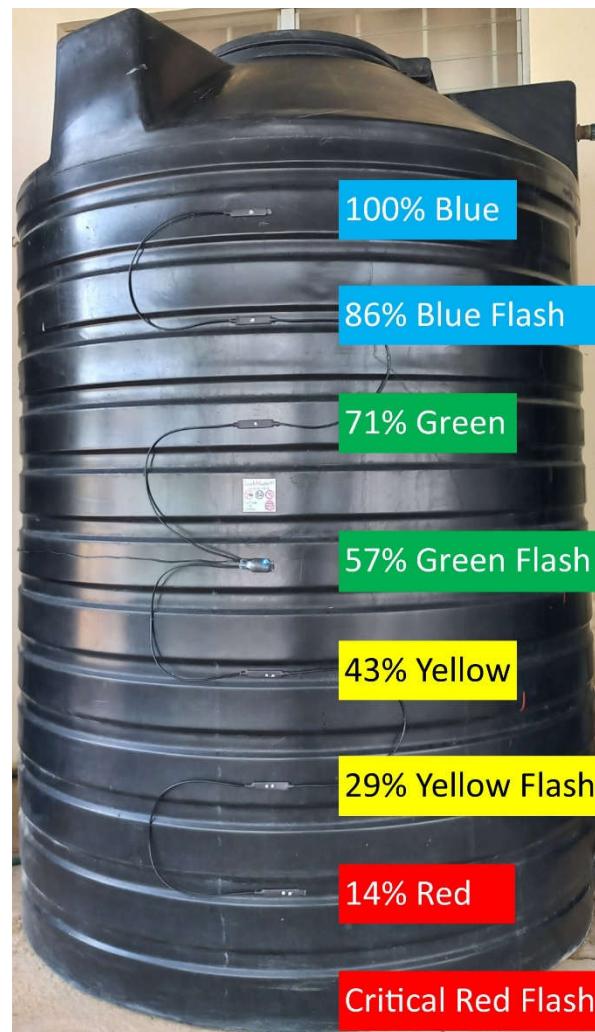

4.3 Troubleshooting

Please read the below to remedy issues prior to contacting SPL:

- High pressure or large flow of water onto the tank may cause a false indication of water when tank's water level is below the sensor(s). When the tank outer surface dries, the product will properly detect the internal level.
- If the product keeps going into configuration mode (cyan flashes) after successful installation, please check the WiFi router settings (some routers limit the number of connected clients). So long as the saved SSID password are correct, there is no need to re-enter the WiFi credentials; the product will reconnect when the router allows it. Typically a power cycle will solve most issues.
- If the product keeps losing connection to the internet, check that your WiFi router/extender is working properly and not rejecting the product from the network.
- If there are too many notifications being sent within a short time period, the water level may be sitting as the threshold between two sensors. Changing the Deviation Tweak to 1 may stabilize the reading.
- High current loads on the same outlet as the product (for example arc welders, heavy cutting saws etc.) may cause malfunction or damage.