



16

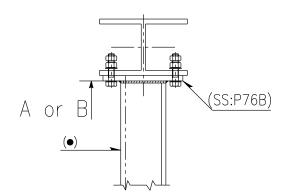

NOTE:

P76A shall be used when the local axis of section of support is parallel to the GLOBAL axis of structural beam ${\sf P}$



NOTE:

P76B shall be used when the local axis of section of support is perpendicular to the GLOBAL axis of structural beam

