



16

(5a)

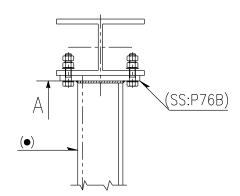

NOTE:

P76A shall be used when the local axis of section of support is parallel to the GLOBAL axis of structural beam



NOTE:

P76B shall be used when the local axis of section of support is perpendicular to the GLOBAL axis of structural beam

