




10

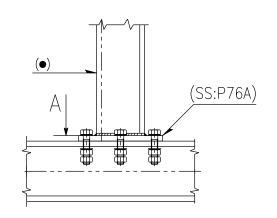

NOTE:

 $\mbox{P76A}$ shall be used when the local axis of section of support is parallel to the GLOBAL axis of structural beam



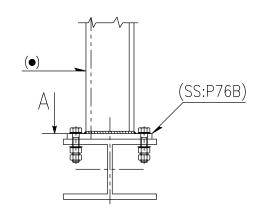

NOTE:

P76B shall be used when the local axis of section of support is perpendicular to the GLOBAL axis of structural beam

