



6. HOW TO DISASSEMBLE

1. Lower Cover

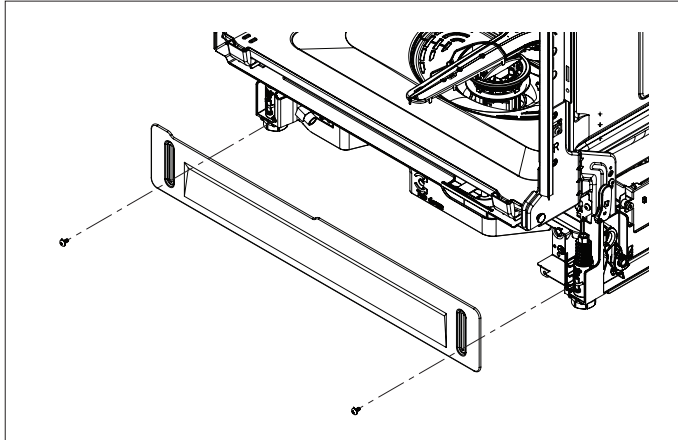

1) Remove the front 2 screws.


2-1. Front Cover Assembly

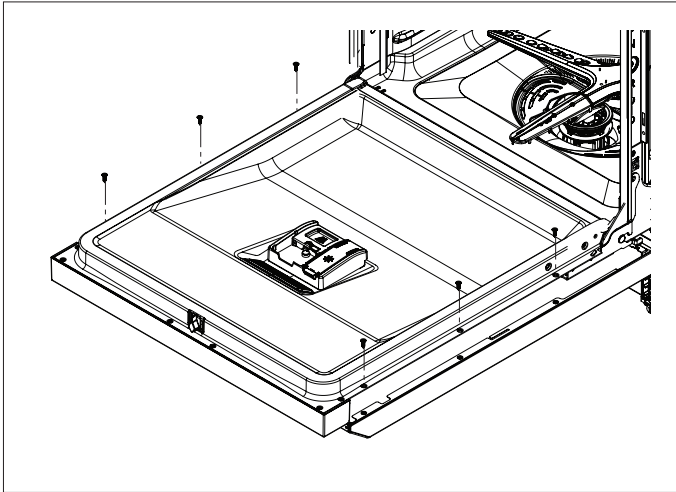

1) Front Cover


- ① Open the door.
- ② Remove the 6 screws.

2-2. Control Panel Assembly

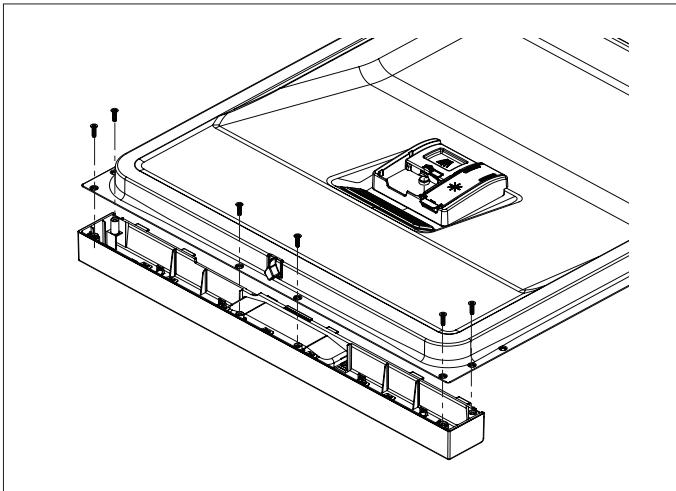

1) Control Panel Assembly


- ① Remove the 6 screws.
- ② Remove the wire connections.
- ③ Remove the Handle.

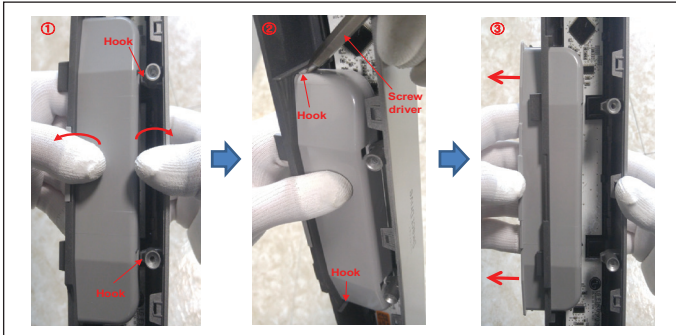

2) How to disassemble Handle.


- ① Pull the handle forward to separate from hook.
- ② Push the 2 hooks. (Left & Right)
- ③ Remove the Handle.

2-3. Door Liner Assembly

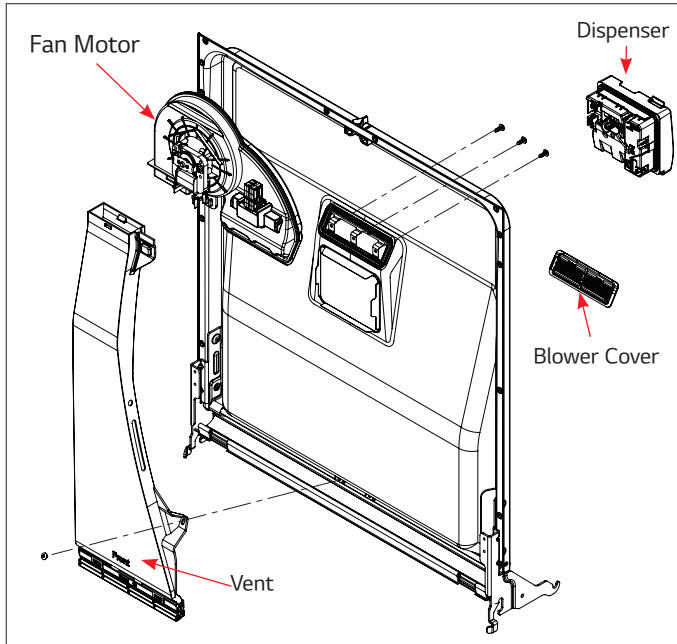


1) Blower Assembly

- ① Remove the screw.
- ② Remove the vent from Fan motor.
- ③ Disconnect the connector.
- ④ Open the Door.
- ⑤ Remove the Blower cover
 - Insert flat head screwdriver in hole (A).
 - Rotate flat head screwdriver slowly.

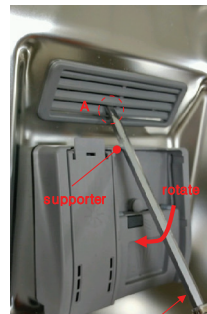

- ⑥ Remove the 3 screws.


※ Be careful not to damage blower cover.

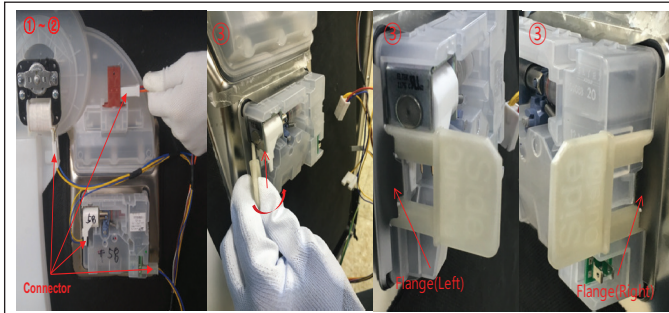

2) Dispenser Assembly

- 3) How to use the Dispenser service Jig
 - Remove the Dispenser

- ① Close the Door.
 - ② Disconnect Electrical wire connectors from dispenser.
 - ③ Insert the two side pieces into the inside of the dispenser.
 - ④ Insert the bottom piece.
 - ⑤ After all three pieces have been inserted, open the door and pull the dispenser from the bottom up and pull out.
- When pulling out the dispenser from the door, lift slightly the bottom of dispenser inside, then remove the "Bottom" jig.

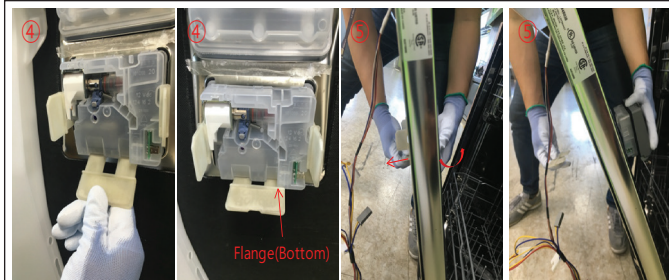

※ Be careful injury on your hand.




1) Assemble New Dispenser

- ① Verify the status of the flanges on the inner door.
- ② Place the support jig then insert the new dispenser.
- ③ Make sure that all flanges fit properly into the dispenser hooks.

※ Be careful injury on your hand.


2-4. Door Spring

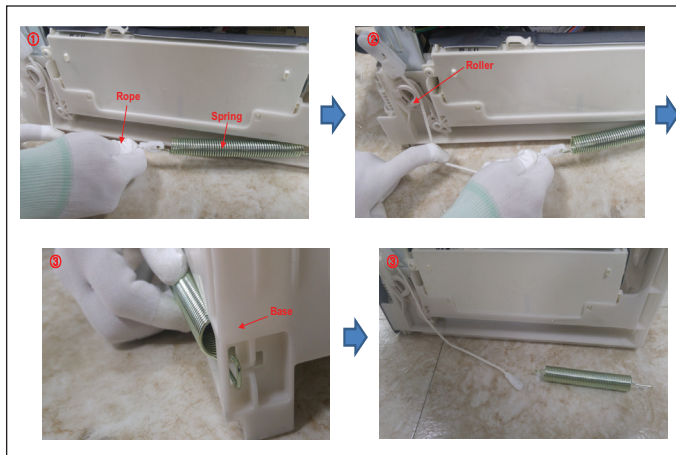

1) Replace the Door Spring

- ① Pull the Rope and Spring.
- ② Remove the Rope from the Roller.
- ③ Remove the Spring from the Base.

2-5. Door Liner

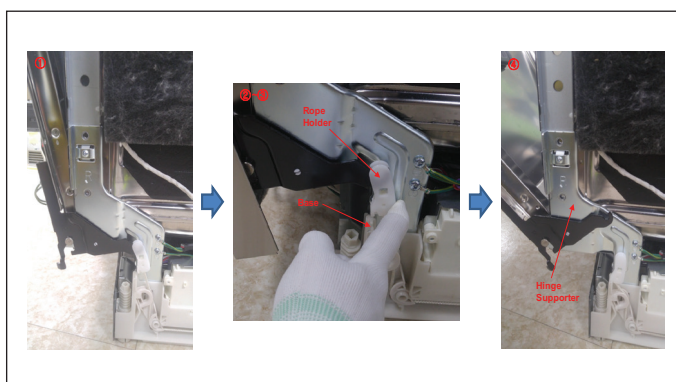


1) Door Liner

- ① Open the door.
- ② Press the Rope Holder.
- ③ Put Rope Holder into the Base.
- ④ Pull the Door Liner and take it off from the Hinge Supporter.

※ Be careful Door can drop.


3. Lower Frame

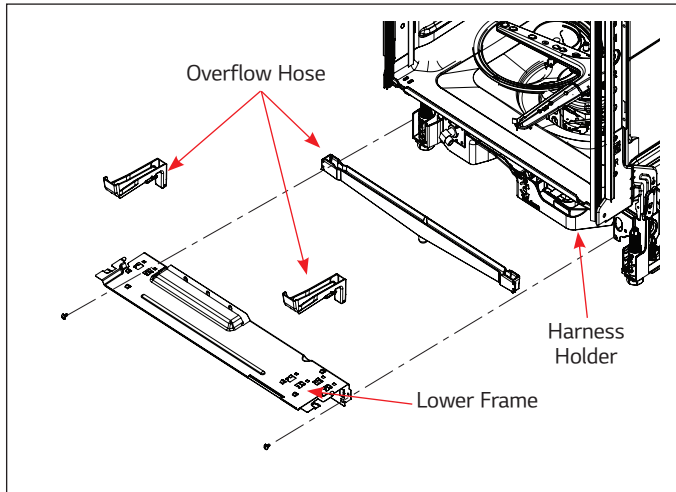

- ① Remove 2 screws.
- ② Press the holder hook as shown in figure.
- ③ Remove the Harness Holder.
- ④ Remove the Overflow Hose from the Lower Frame.


※ Be careful the Overflow Hose should not be lost and damage.

4. Tub Assembly

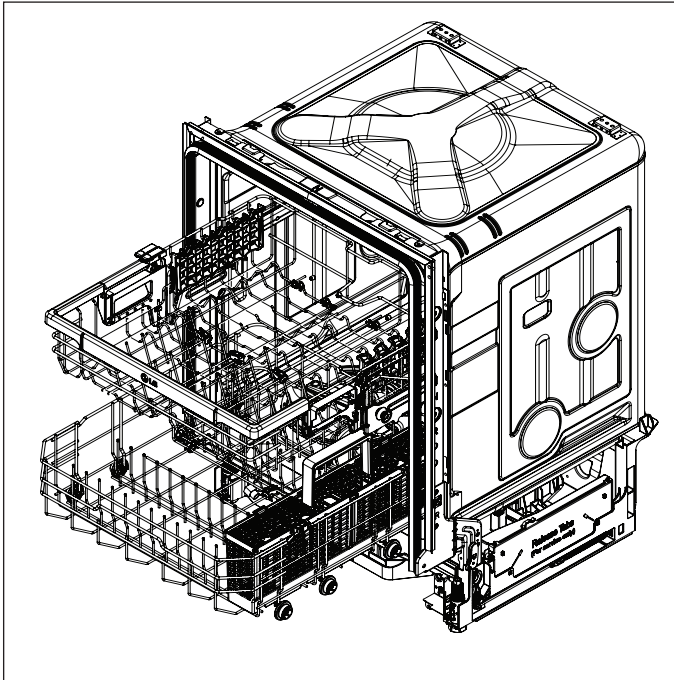


1) Rack

- ① Remove all Racks.

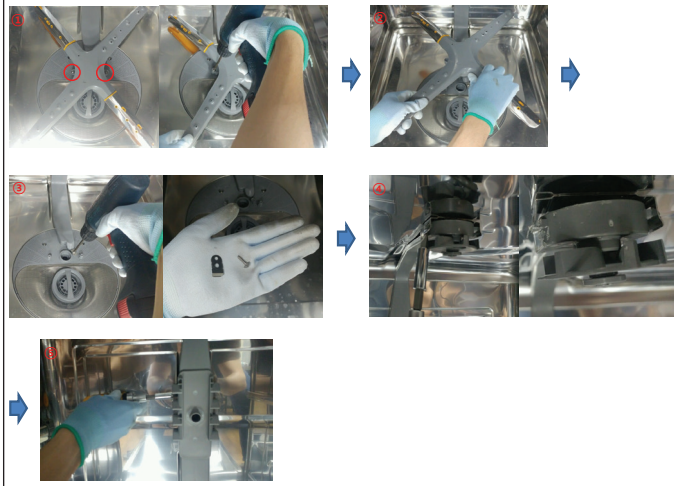

2) Nozzle Guide & Water Guide

- ① Remove the 2 screws on the Lower Nozzle.
- ② Pull up the Lower Nozzle and remove.
- ③ Remove the screw on the Water Guide.
- ④ Remove the Water Guide from the Tub Bracket (Top).
- ⑤ Remove the Water Guide from the Tub Bracket (Center).

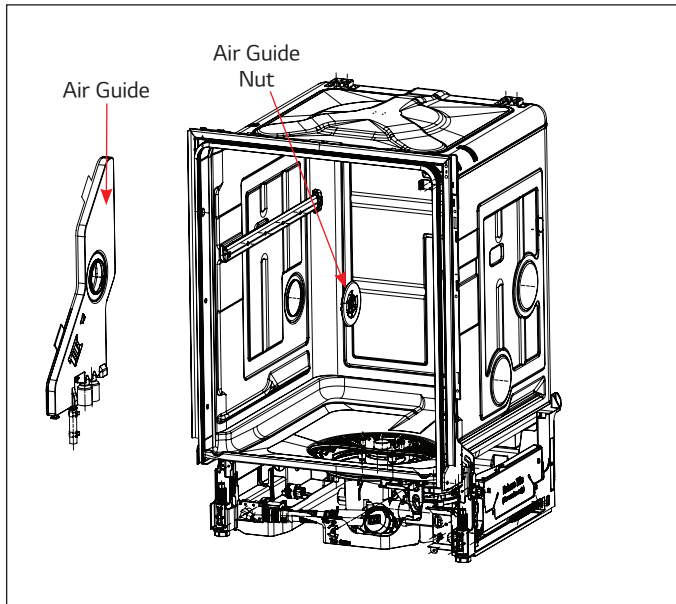

3-1) Air Guide Assembly

① Turn the Air Guide Nut counterclockwise.


※ Be careful the rubber packing of Air Guide Assembly should not be lost.

② Disconnect the connector.

③ Remove the Clamp on the Inlet Hose.

④ Remove the Air Guide from Drain Hose.


※ Be careful the rubber packing of Drain Hose should not be lost and twist.

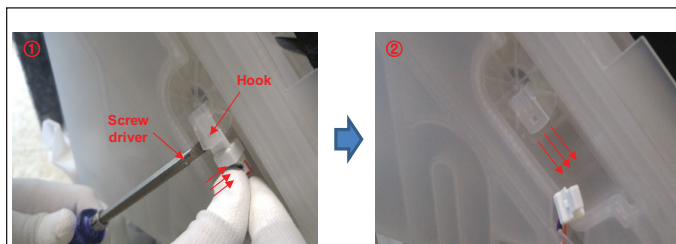

3-2) How to disassemble Hall sensor.

① Push the sensor and lift up the hook.

② Remove the Hall sensor

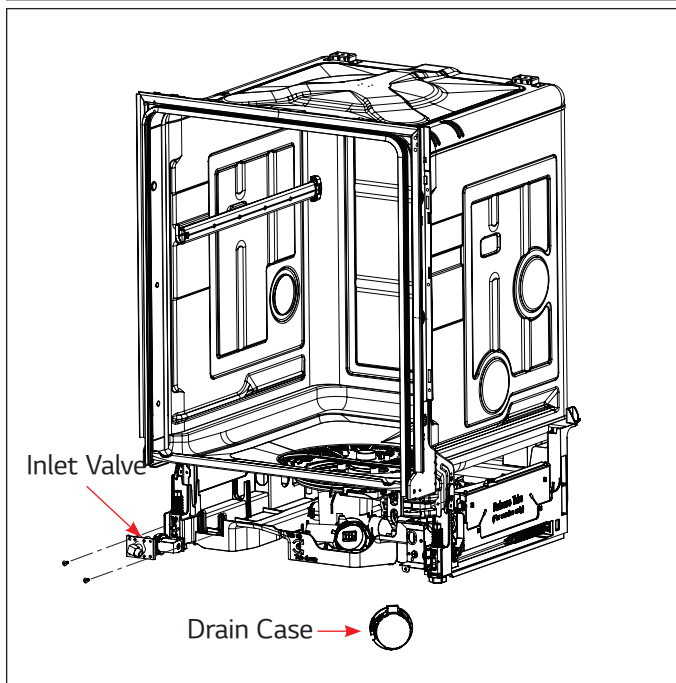

4) Inlet Valve

① Remove the 2 screws.

② Disconnect the connector.


③ Reemove the Clamp on the Inlet valve.

④ Remove the Inlet Valve.

5) Drain Motor

① Disconnect the connector.


② Turn the Drain Case clockwise and remove.

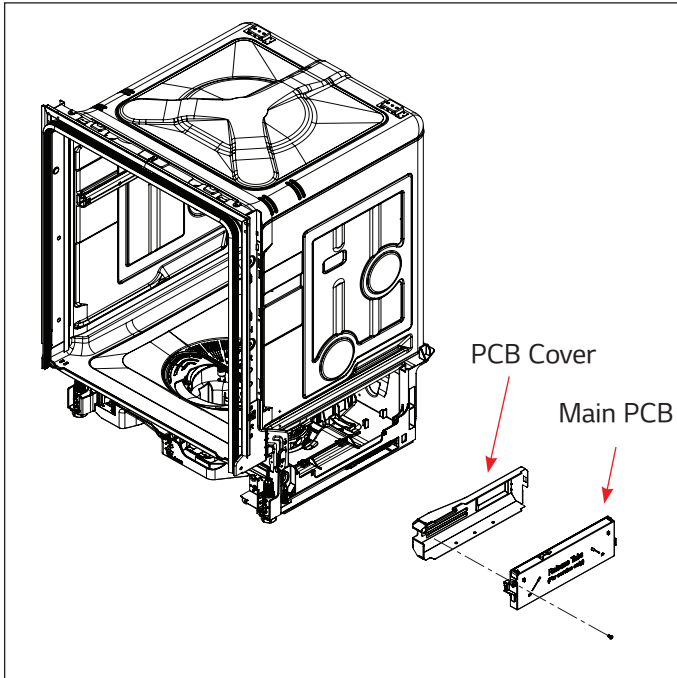

6) Main PCB

- ① Press the hook and remove the PCB.
- ② Remove the screw and take the PCB Cover off.
- ③ Disconnect the connector.

※ Be careful Please Pull the Main PCB Slowly and carefully

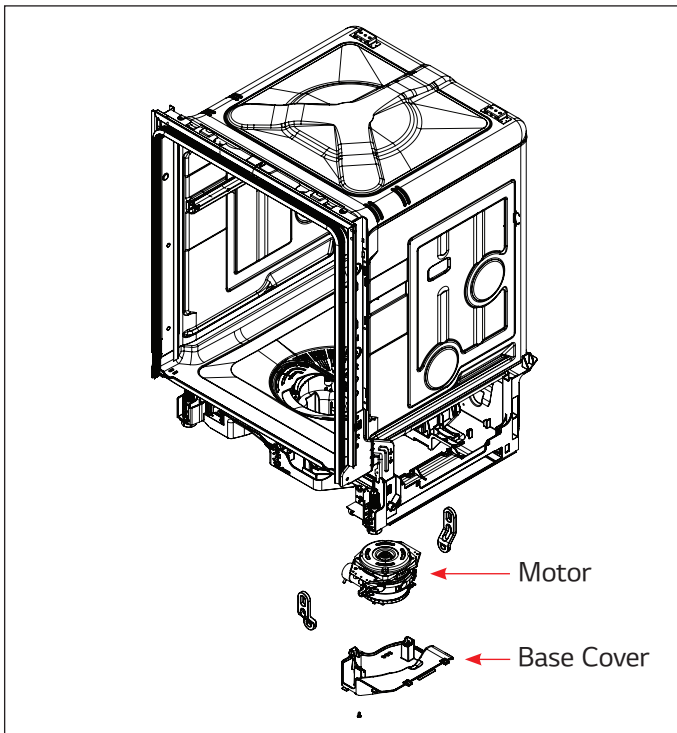


7) Pump Case Assembly

- ① Lay the product down on the floor.


※ Be careful Leakage can happen.

- ② Remove the Base Cover.
- ③ Remove the wire on the Motor.
- ④ Disconnect the connector.
- ⑤ Remove the Hose Clamp.
- ⑥ Remove the Rubber Holder.
- ⑦ Remove the Pump Assembly.
- ⑧ Remove the Earth screw.

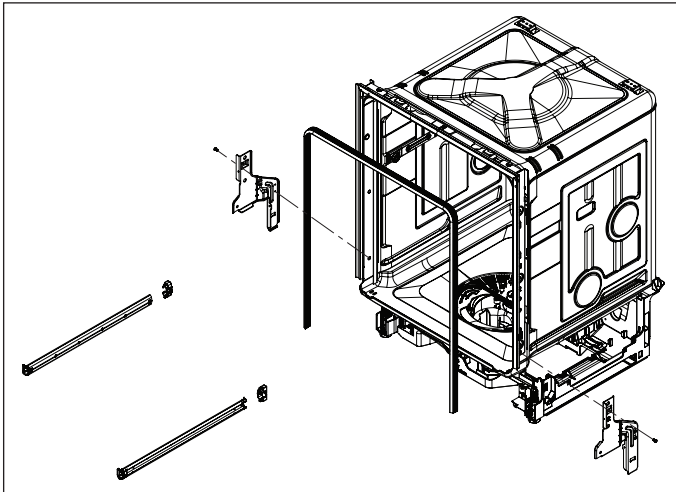


8) Hinge Supporter & Rail Assembly

- ① Remove the Hinge Supporter screw.
- ② Remove the Hinge supporter from Base hook.
- ③ Rotate the screwdriver, after slide it into the gap between Stopper Roller and Rail Roller.

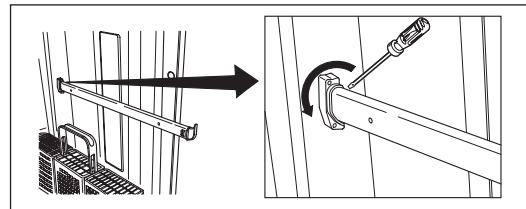


Rotate the screwdriver. After slide it into the gap between Roller and Rail Roller.

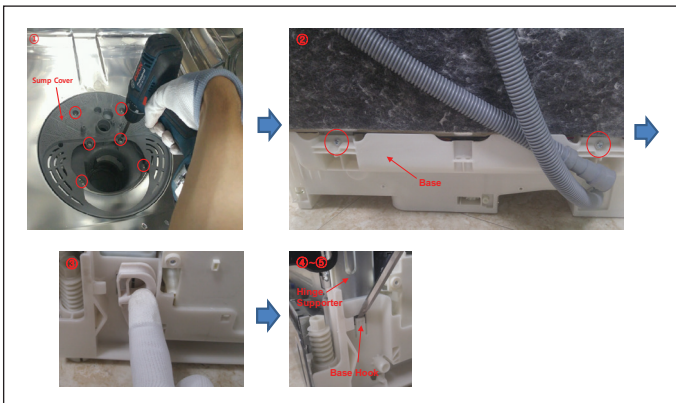

9) Sump & Base

- ① Remove the 6 screws on the sump cover.
- ② Remove the 2 screws on the base.
- ③ Remove the Roller.
- ④ Remove the Hinge supporter from Base hook.
- ⑤ Pull the Tub upside and take it off.

5. Sump Assembly

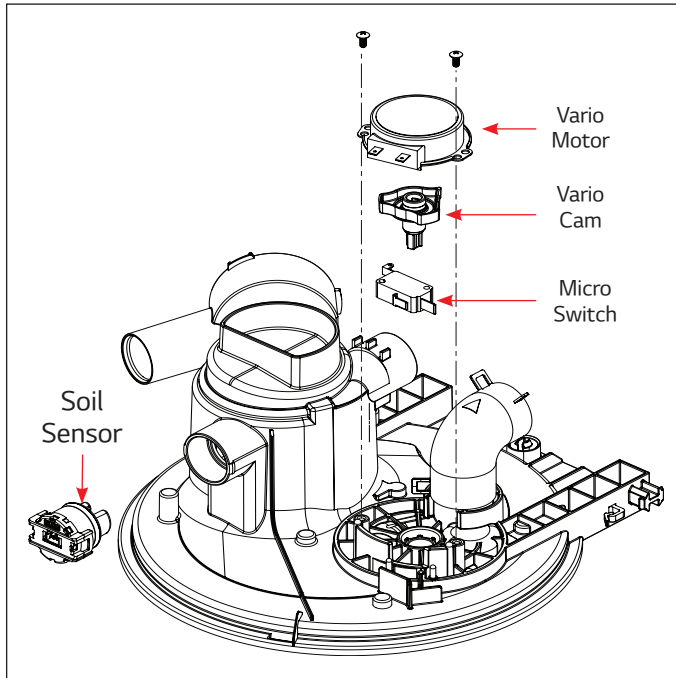


1) Vario Motor & Vario Cam

- ① Remove 2 screws for Vario Motor
- ② Pull the Vario Motor/Cam and Micro switch.

2) Soil Sensor

- ① Remove the wire connections.
- ② Pull up Soil sensor

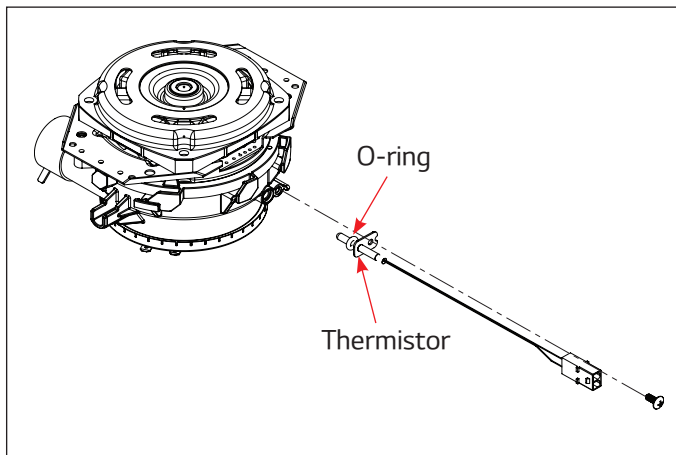

3) Thermistor

- ① Remove the screw.
- ② Pull the Thermistor and O-ring.