

FIELD SERVICE REPORT

Technical Maintenance & Equipment Inspection

Report ID: SR-20260927-184557

Date: 2026-09-27

1. CLIENT & SITE DETAILS

Client Name: 56456456
Contact Person: jkvfghgc

Site / Branch: yutyuit
Contact Phone: jkhoui hgou

2. MACHINE SPECIFICATIONS

Equipment Model: iohiy8
Operating Hours: 29

Serial Number: ihioho
Service Type: Commissioning & Setup

3. ISSUE DESCRIPTION & ROOT CAUSE

ilyfdultdxultdutsdtud

4. ACTIONS TAKEN & REMARKS

ukfilydflyudtdoutdftuotyfuofy

5. REPLACED / REQUIRED SPARE PARTS

Part Number	Description	Qty	Status
54545545648		1	Installed
54545545648		1	Installed
5+4564		1	Installed
54545545648		1	Installed

6. SITE & FAULT PHOTOGRAPHIC EVIDENCE (10 Photos)

Service Training Section 6 Page 17 40. No function 41. No function 42. Feedback of alternator circuit voltage power unit/pump motor 43. Feedback phase voltage L2 from power unit 1A1 44. Output, relay driver 1 (relay S20 relay light) 45. Output, relay driver 2 (relay S93 optional function) 46. ISO-L, LDC reference 47. CAN/L connection power unit 1A1, 1A2 48. No function 49. ISO-L for diagnosis, function 50. Supply voltage 15 V for joystick 51. Enable feedback signal from power unit 2A1 52. Coding signal ISO-SB 53. Reference brake signal switch ISO transverse and position 54. Signal from this pedal switch ISO (parame trans additionally ISO) 55. No function 56. Channel A, speed sensor 1B0 57. Signal from steering sensor 3B1 58. No function 59. No function 60. Supply voltage 15 V for accelerator 61. Feedback phase voltage L1 from power unit 1A2 62. Feedback phase voltage L3 from power unit 1A1 63. Output, relay driver 3 (actuator of steering four wheel) 64. Output, relay driver 4 (charging relay K2) 65. ISO-L for LDC diagnosis 66. CAN/L connection power unit 1A1, 1A2 67. No function 68. ISO-L for diagnosis, function 69. Feedback phase voltage for joystick 70. Negative supply voltage for joystick 71. Negative supply voltage for joystick 72. Coding signal 2 (no function) 73. Signal for speed reduction, function 74. Acceleration signal from direction sensor, single-axis/1013 75. Channel B, speed sensor 1B1 76. No function 77. No function 78. No function 79. Feedback phase voltage L2 from power unit 1A2 80. Drive signal joystick Whirling/steering 81. Drive signal joystick Whirling 82. Drive signal joystick aux. hydraulics 1 83. No function 84. Signal sensor isolation LDC from compatible instrument 85. Input signal from sensor ISO steering control valve 86. No function 87. Coil activation/proportional valve 2V8 aux. hydraulics 1A 88. LDC F8 PWM	Service Training Section 6 Page 18 89. Drive signal joystick aux. hydraulics 2 90. No function 91. No function 92. No function 93. Signal for solenoid-controlled speed reduction LDC 94. No function 95. No function 96. No function 97. Coil activation/proportional valve 2V5 aux. hydraulics 1B 98. Reference signal joystick Whirling/steering 99. Reference signal joystick Whirling 100. Reference signal joystick aux. hydraulics 1 101. Channel A, speed sensor 3B0 102. No function 103. No function 104. No function 105. Coil activation/proportional valve 2V9 aux. hydraulics 2A 106. Reference signal joystick aux. hydraulics 2 107. No function 108. No function 109. No function 110. No function 111. No function 112. Coil activation/proportional valve 2V2 Whirling 113. Coil activation/proportional valve 2V1 aux. hydraulics 2B 114. Negative supply voltage for transverse, valve coil activation 115. Coil activation, safety valve, bearing 2V10 116. Battery positive for safety relay LDC 117. Positive supply voltage, valve coils 118. Coil activation/proportional valve 2V1 bearing 119. Coil activation/proportional valve 2V3 forward Whirling 120. Coil activation/proportional valve 2V4 backward Whirling 121. LDC F8 PWM	Service Training Section 6 Page 19 Coding of the power units (adjustment of motor) is made via the cable harness. The coding signal (negative battery signal) is available at the 29-pin connector Connection 14 Connection 15 Connection 16 Tractor motor, right 1A1 Pump motor, left 1A2 Pump motor 2A1 C 0 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29	Service Training Section 6 Page 20 Enabling of power units The power units control their assigned motors independently. The power units are controlled via the CANbus network. Via the CANbus, each power unit receives information about the desired torque and the required motor speed. For safety reasons, the motor unit can enable the power units separately. This is effected via a negative signal which is sent to the corresponding power unit by the control system. Power unit 1A1 Power unit 1A2 Power unit 2A1 Power unit 1A1 Power unit 1A2 Power unit 2A1 Speed sensors Due to the operating principle of the motor, the speed is measured by the control system. Each motor is equipped with a speed sensor via which speed and sense of rotation of the motor are determined. The speed sensor is connected to the corresponding power unit. The information is sent via CANbus to the control system via the internal CANbus. For safety reasons, the speed signals are additionally sent to the control system via the separate lines. Speed sensor 151 tractor motor, right Speed sensor 152 tractor motor, left Speed sensor 2B0 pump motor X13-51 channel A X13-52 channel B X13-56 channel A X13-101 channel A
---	--	--	---

Technical Maintenance & Equipment Inspection

Service Training

connector
of the power modules in the area of the heat

- Alternately tighten the M10 x 30 hexagon socket screws. The tightening torque is 25 - 35 Nm.
- Screw-on main-current leads (battery and motor leads) and braided screen at the power section. Tightening torque for battery and motor leads: 8 - 10 Nm, for braided screen: 3 - 5 Nm.

NOTE: Be sure to tighten the M10 x 30 hexagon socket screws with the correct torque to ensure good contact of the power modules with the supporting surface. After 30 min tighten the hexagon socket heads screws once more alternately as the layer of heat conduction paste may change over this period.

4.3.2 POWER UNIT

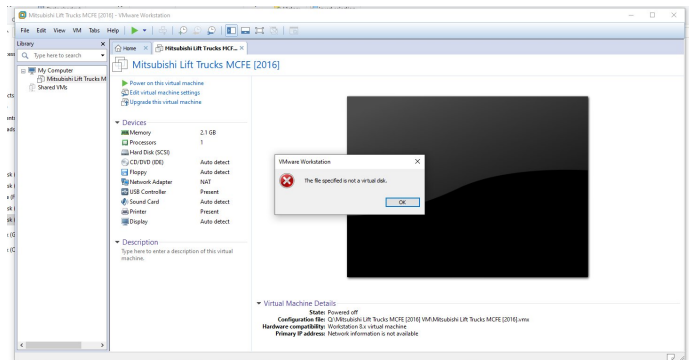


A detailed view of the device's internal mechanism for setting the depth of the cut. It shows a sliding component with a scale and a locking screw, labeled with the number 2.

1 Negative connection of power unit



 WWT-059
 WWT-060
 WWT-061
 WWT-062
 WWT-063-063
 WWT-064
 WWT-065
 WWT-066
 WWT-067
 WWT-068
 WWT-069
 WWT-070
 WWT-071
 WWT-072
 WWT-073
 WWT-074-074
 WWT-075
 WWT-076
 WWT-077
 WWT-078
 WWT-079-079
 WWT-080
 WWT-081
 WWT-082
 WWT-083
 WWT-084
 WWT-085-085
 WWT-086
 WWT-087
 WWT-088
 WWT-089
 WWT-090-090
 WWT-091
 WWT-092
 WWT-093
 WWT-094
 WWT-095
 WWT-096

[illegible]

FIELD SERVICE REPORT

Technical Maintenance & Equipment Inspection

WEEK	Names / Date	Sunday	Monday	Tuesday	Wednesday	Thursday	Friday	Saturday	Weekly Focus / Notes
WK 36	Dates ->	06-Sep	07-Sep	08-Sep	09-Sep	10-Sep	11-Sep	12-Sep	
36	Karlous	galaxy	ibn sina october	sallya	memfis	otuka			
36	Jayel	cocacola	cocacola	cocacola	cocacola	cocacola			
36	Emad	galaxy	cocacola	ibn sina suet fans, saudi market	cocacola	db world			
36	Abdelhaseer	cocacola	cocacola	cocacola	cocacola	cocacola			
36	Mina	cocacola	cocacola	ibn sina suet fans, saudi market	cocacola	db world			
36	Yousef	cocacola	ibn sina october	sallya	memfis	otuka			

Get file content

ParametersSettingsCode viewTestingAbout

Site Address *

https://jungherrich.sharepoint.com/sites/ServicePortal/Technical_Service_Information2/Technical%20Service%20Info/Forms/AllItems.aspx

File Identifier *

Select a fileSharePointNo items

Advanced parameters

Showing 1 of 1Show allClear all

Infer Content Type

Yes

Connected to MohamedAbdullah@MCV-EG.com. Change connection

7. VERIFICATION & SIGN-OFF

Service Engineer: 6685464

Customer Representative: jlhfutkdytsdydjxyrf

Signature: _____ -

Signature: _____ -