



Background: With the Zettle Reader 2 we are introducing a new type of Bluetooth called Bluetooth Low Energy (BLE). This enable us to do in app pairing i.e. everything related to the Zettle Reader is done in app and Zettle Reader 2 **will not be visible in Bluetooth settings**

The Zettle Reader 2 can be connected from the SDK:


Zettle Settings > Card readers.

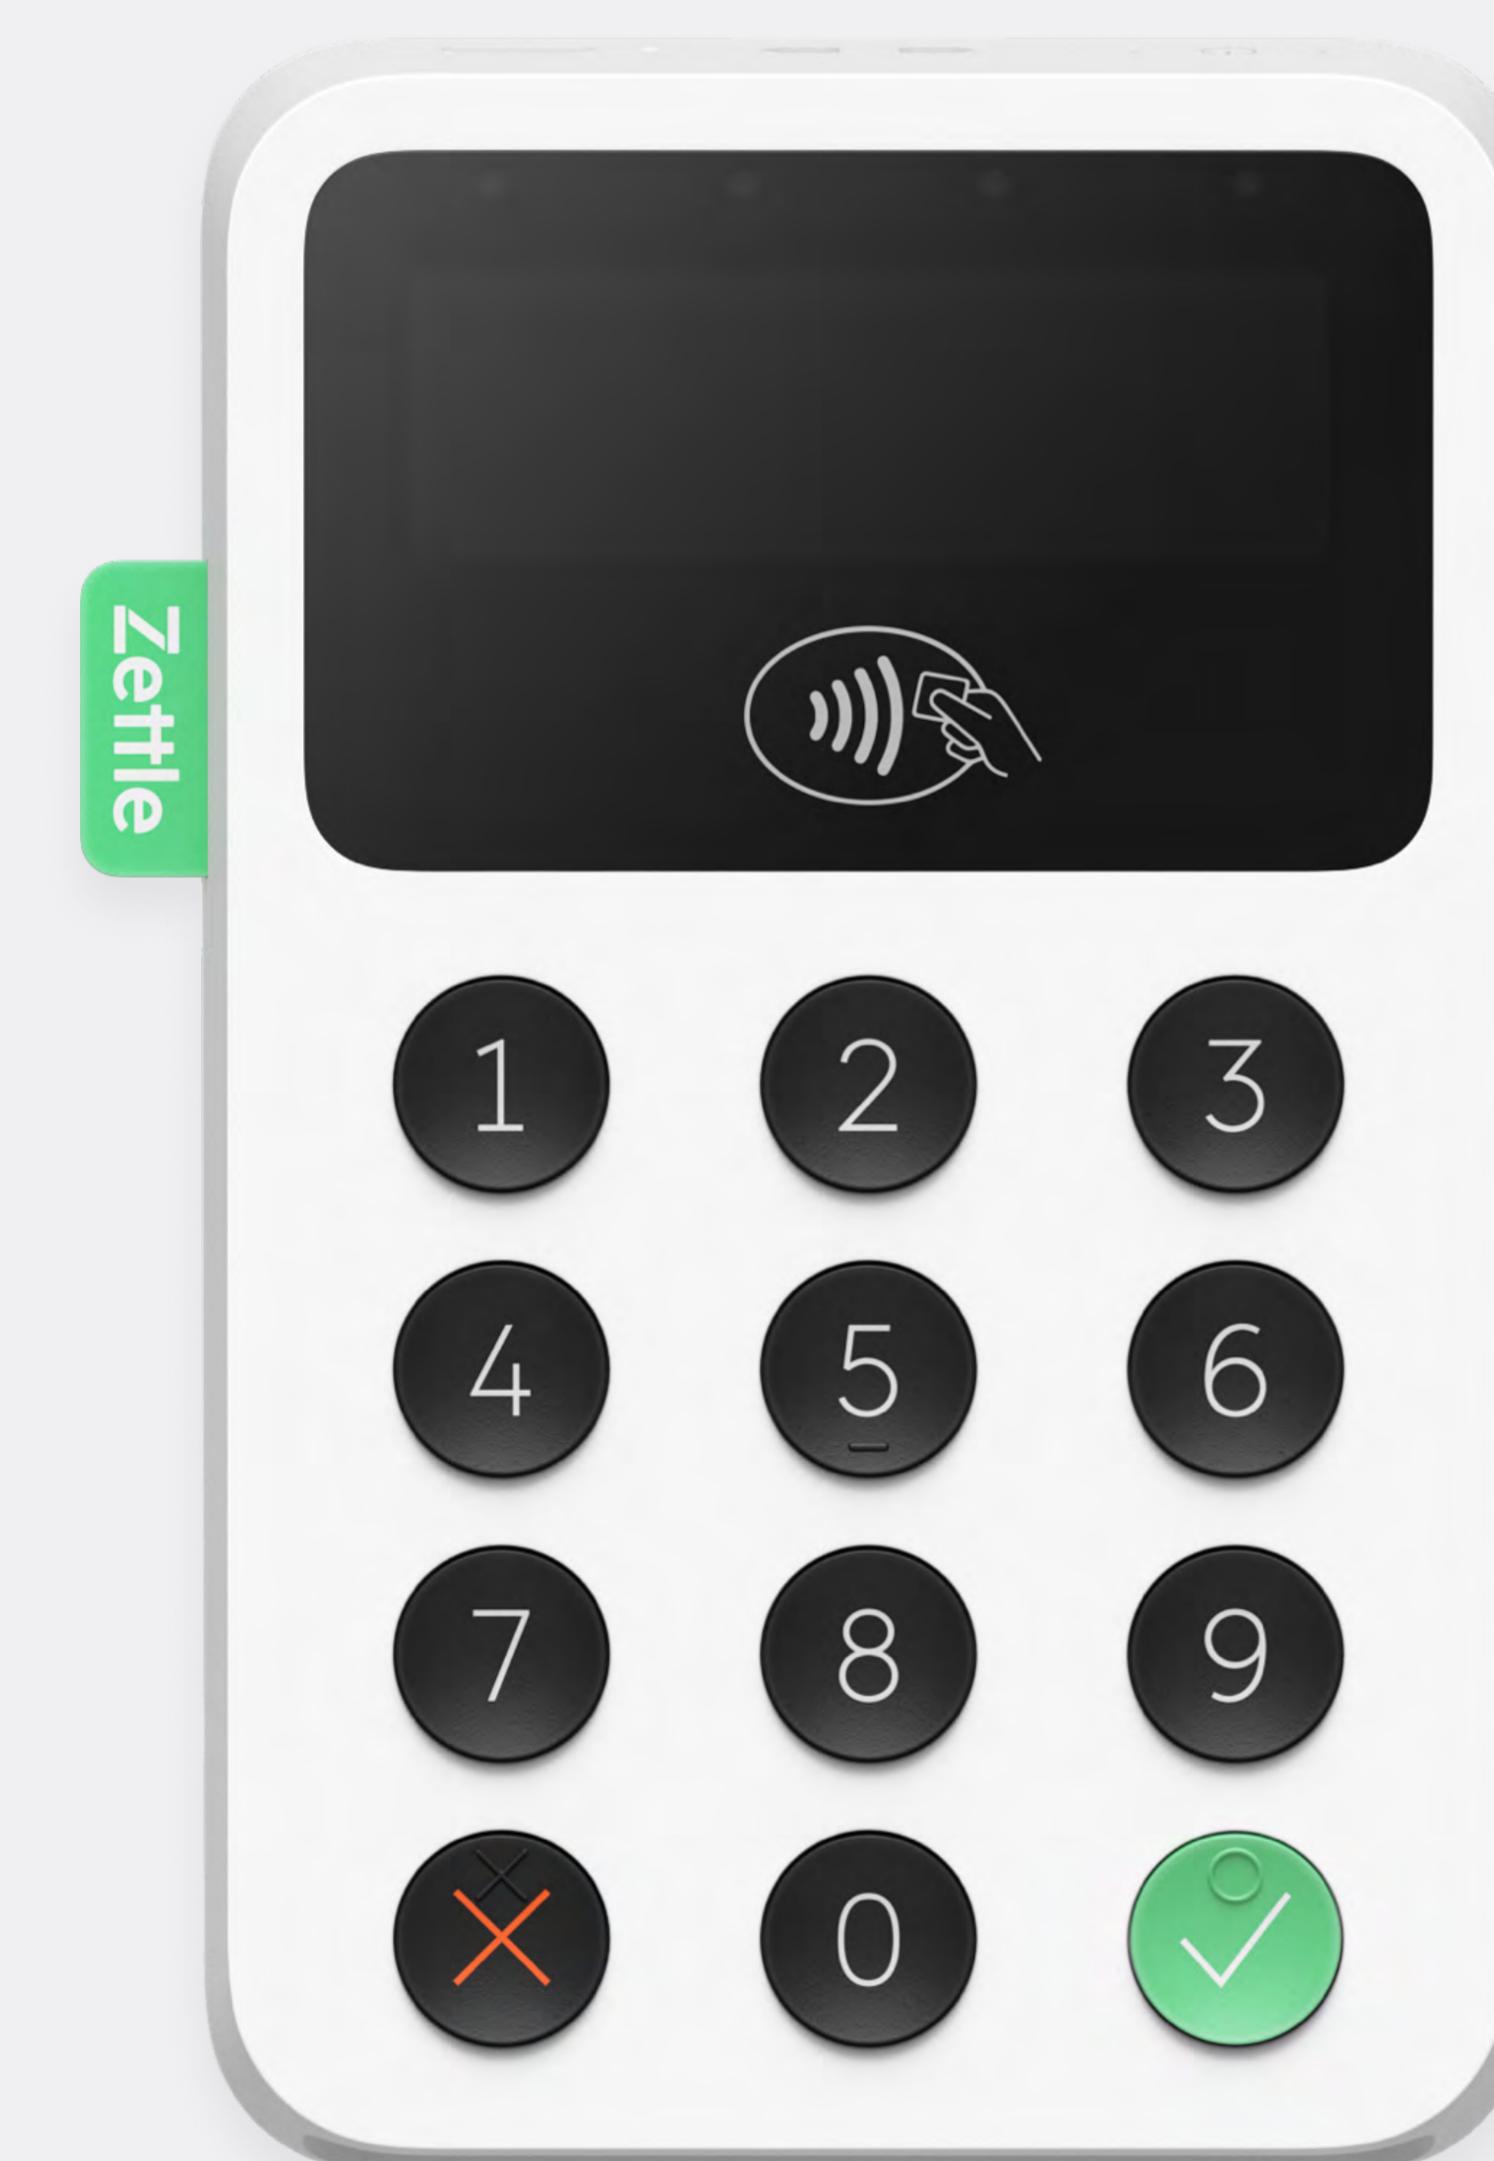

Zettle reader 2

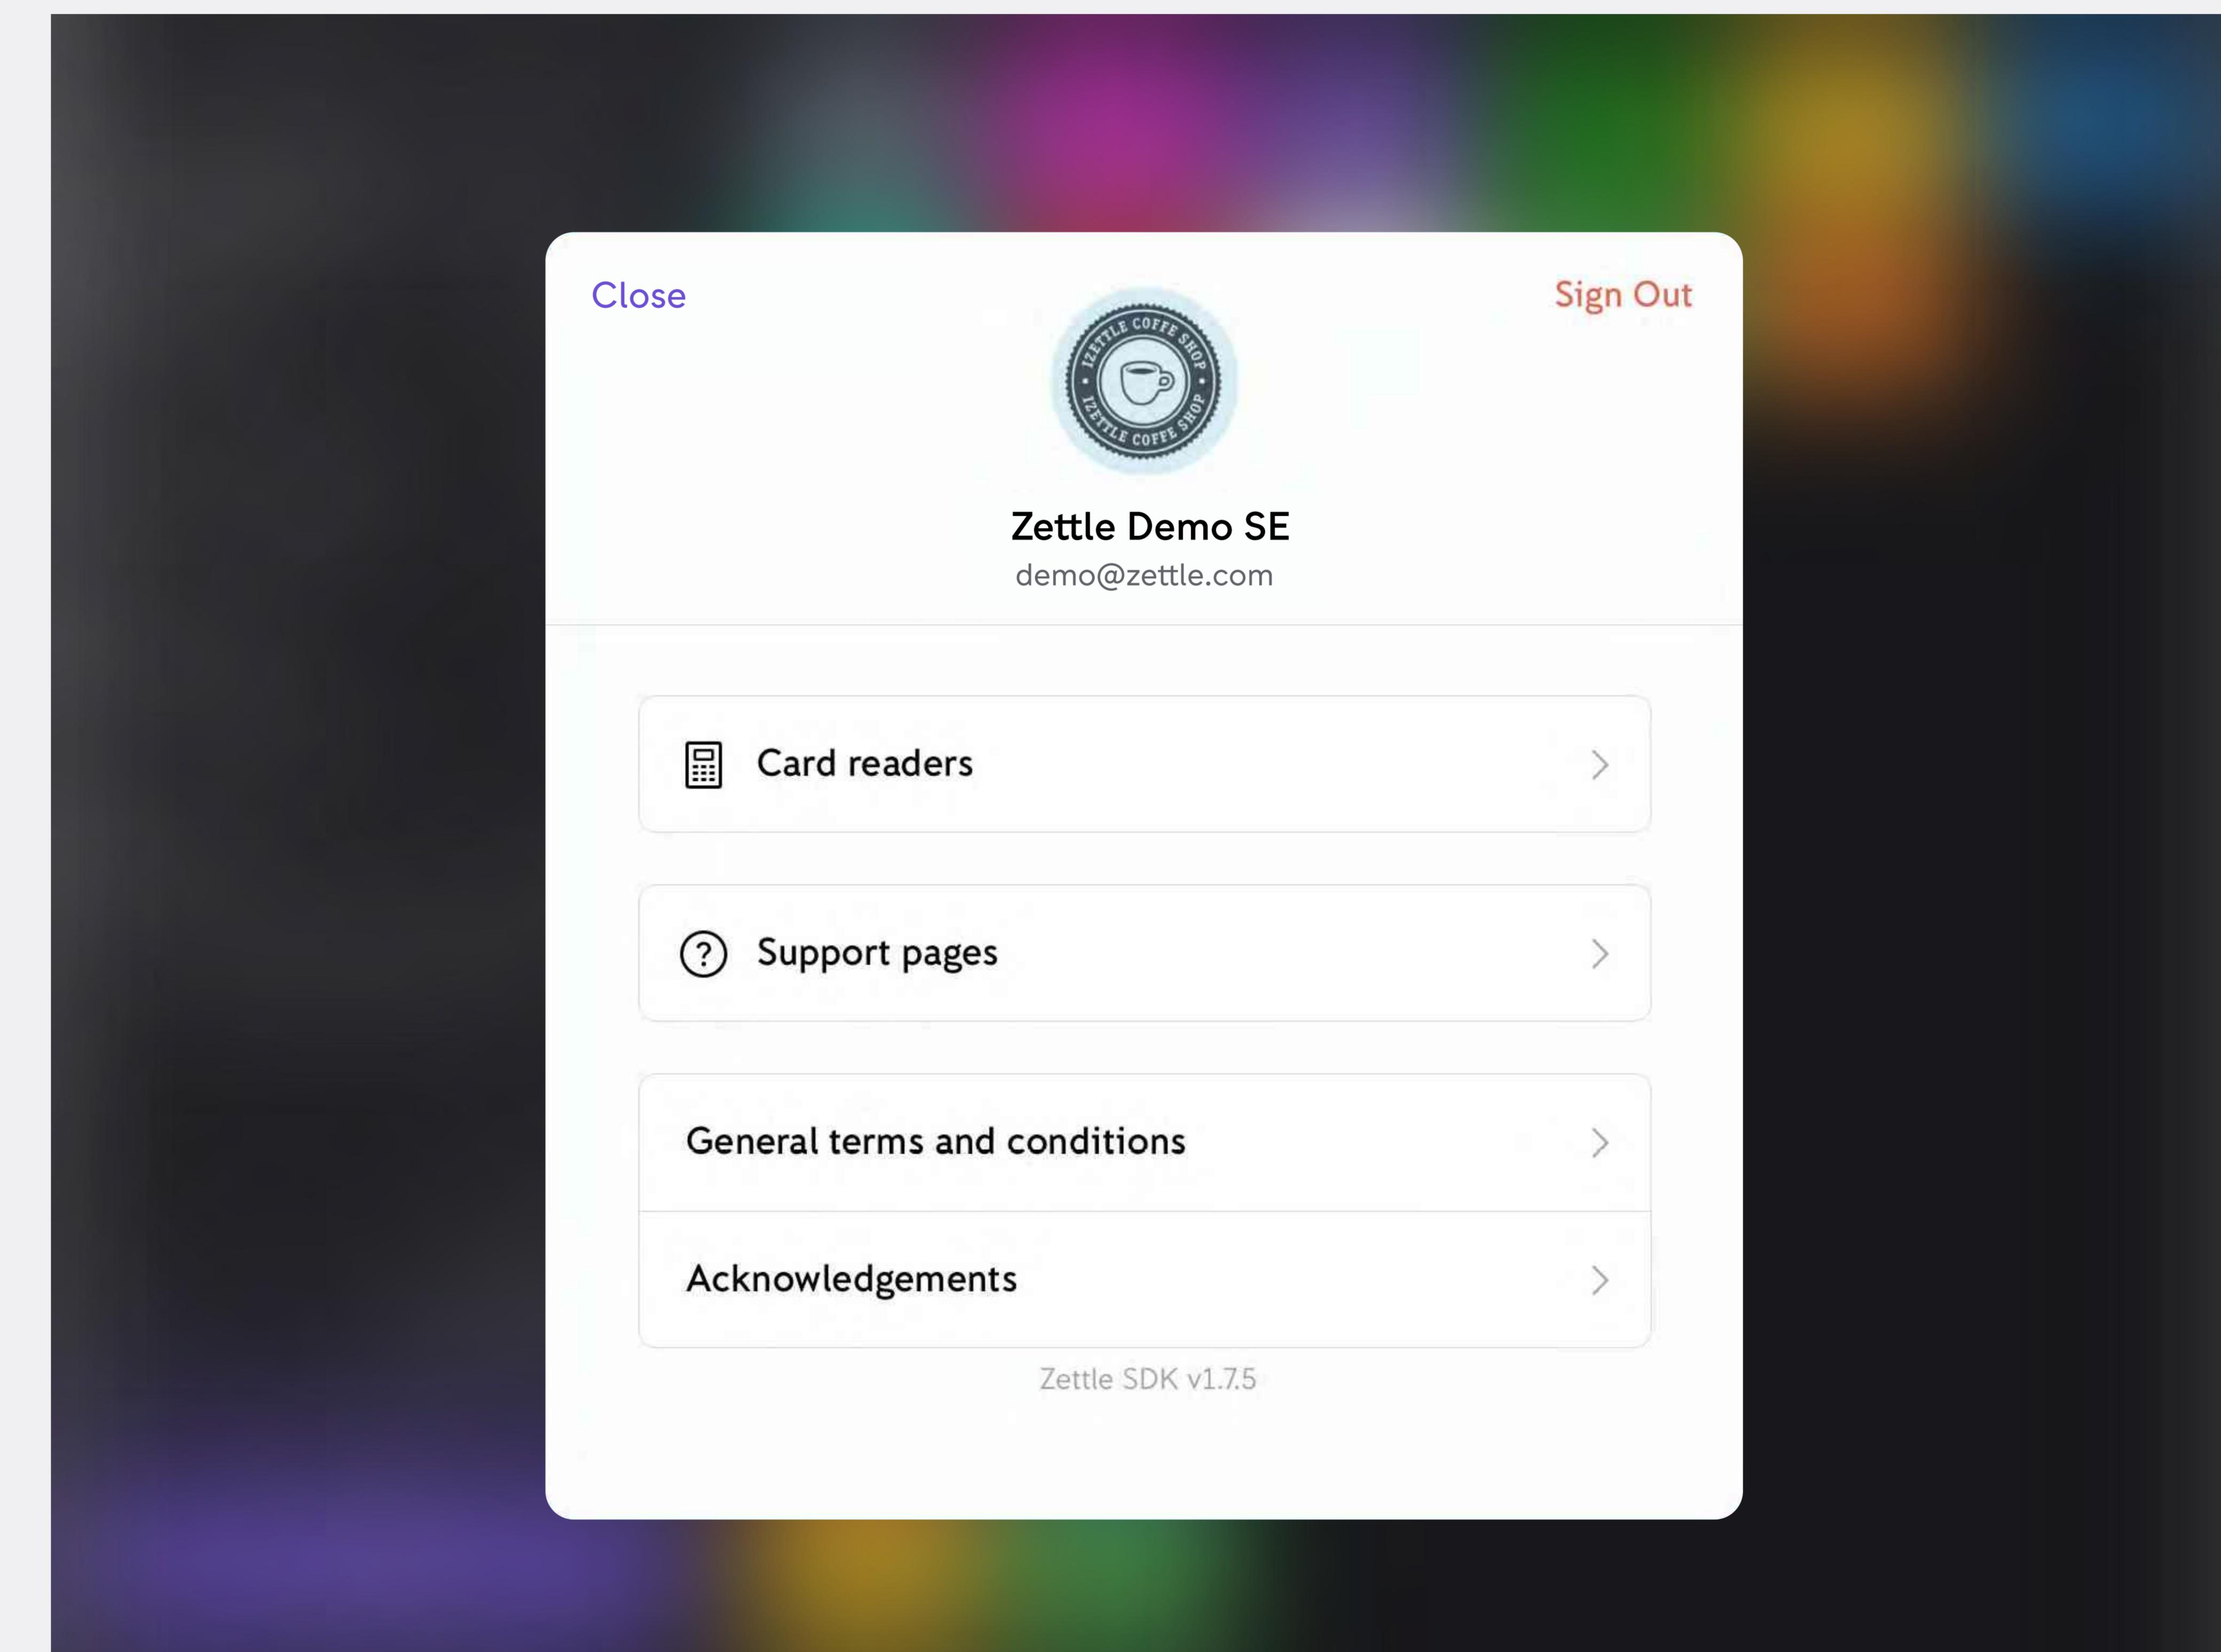


In app pairing

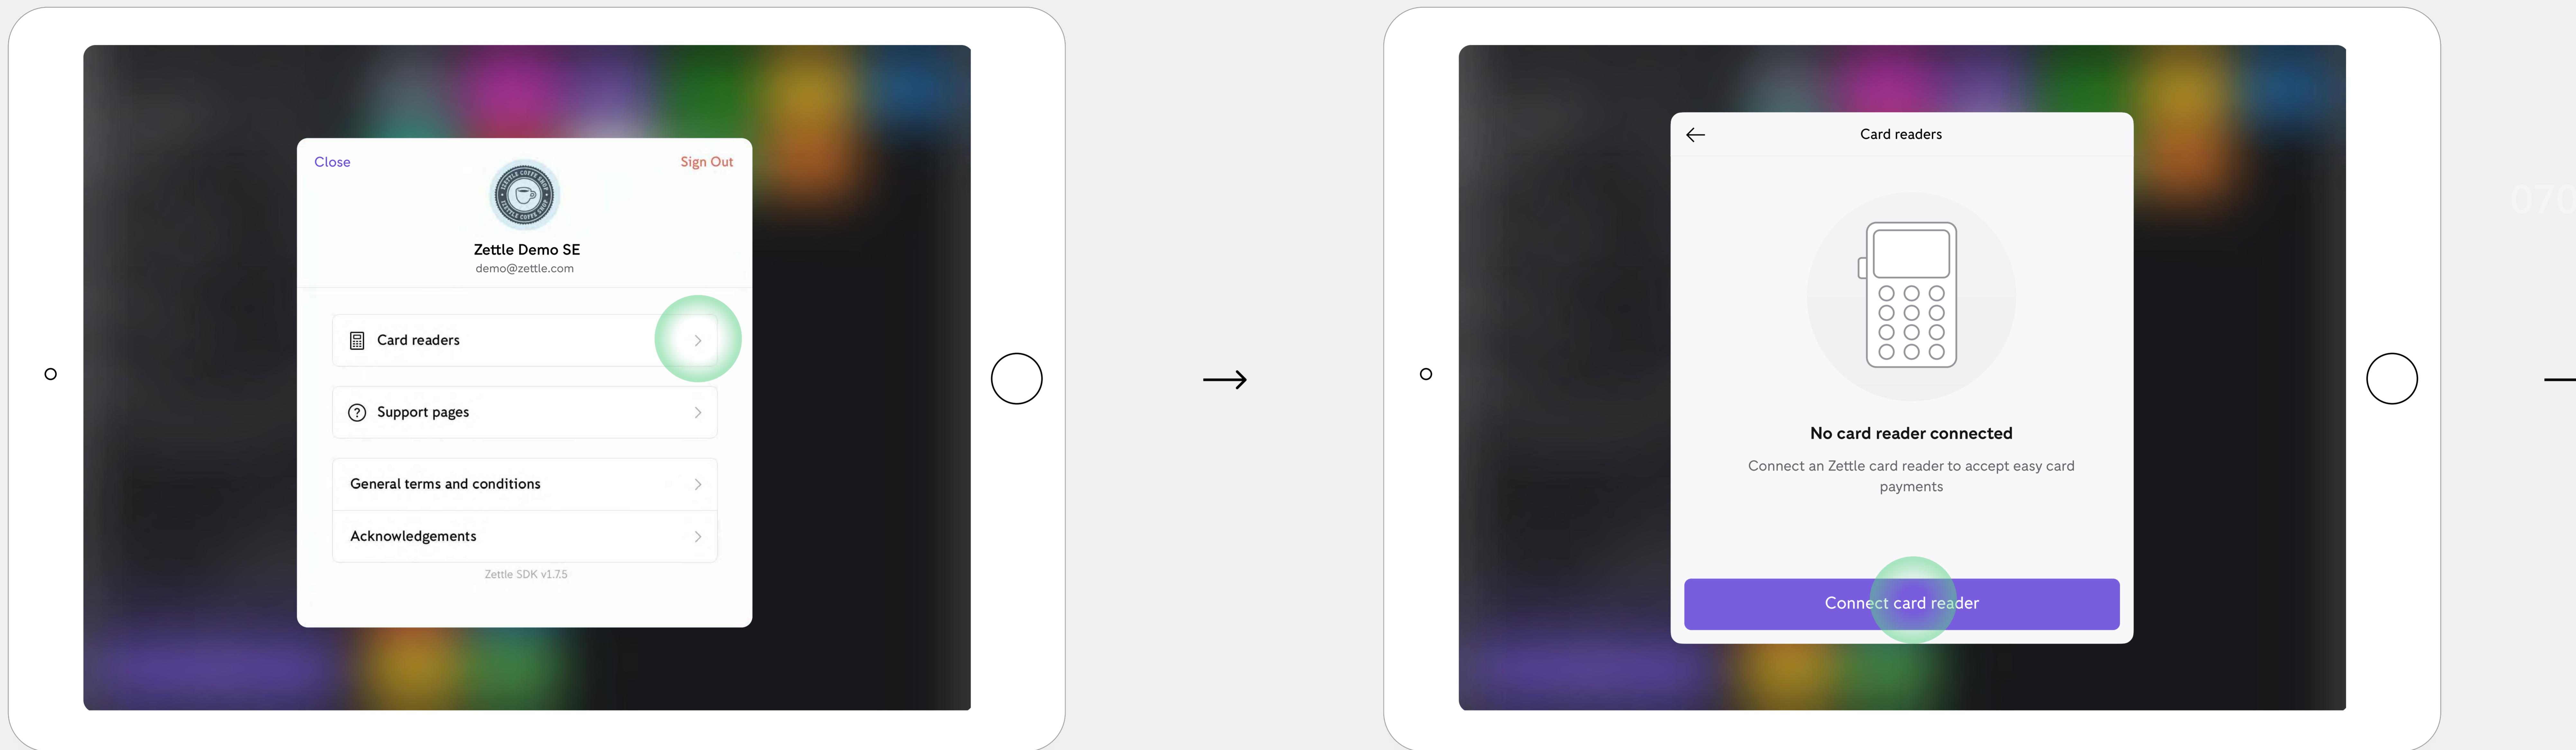

The Zettle Reader 2 can be connected from the SDK:
Zettle Settings > Card readers.

Tap “Connect card reader”.

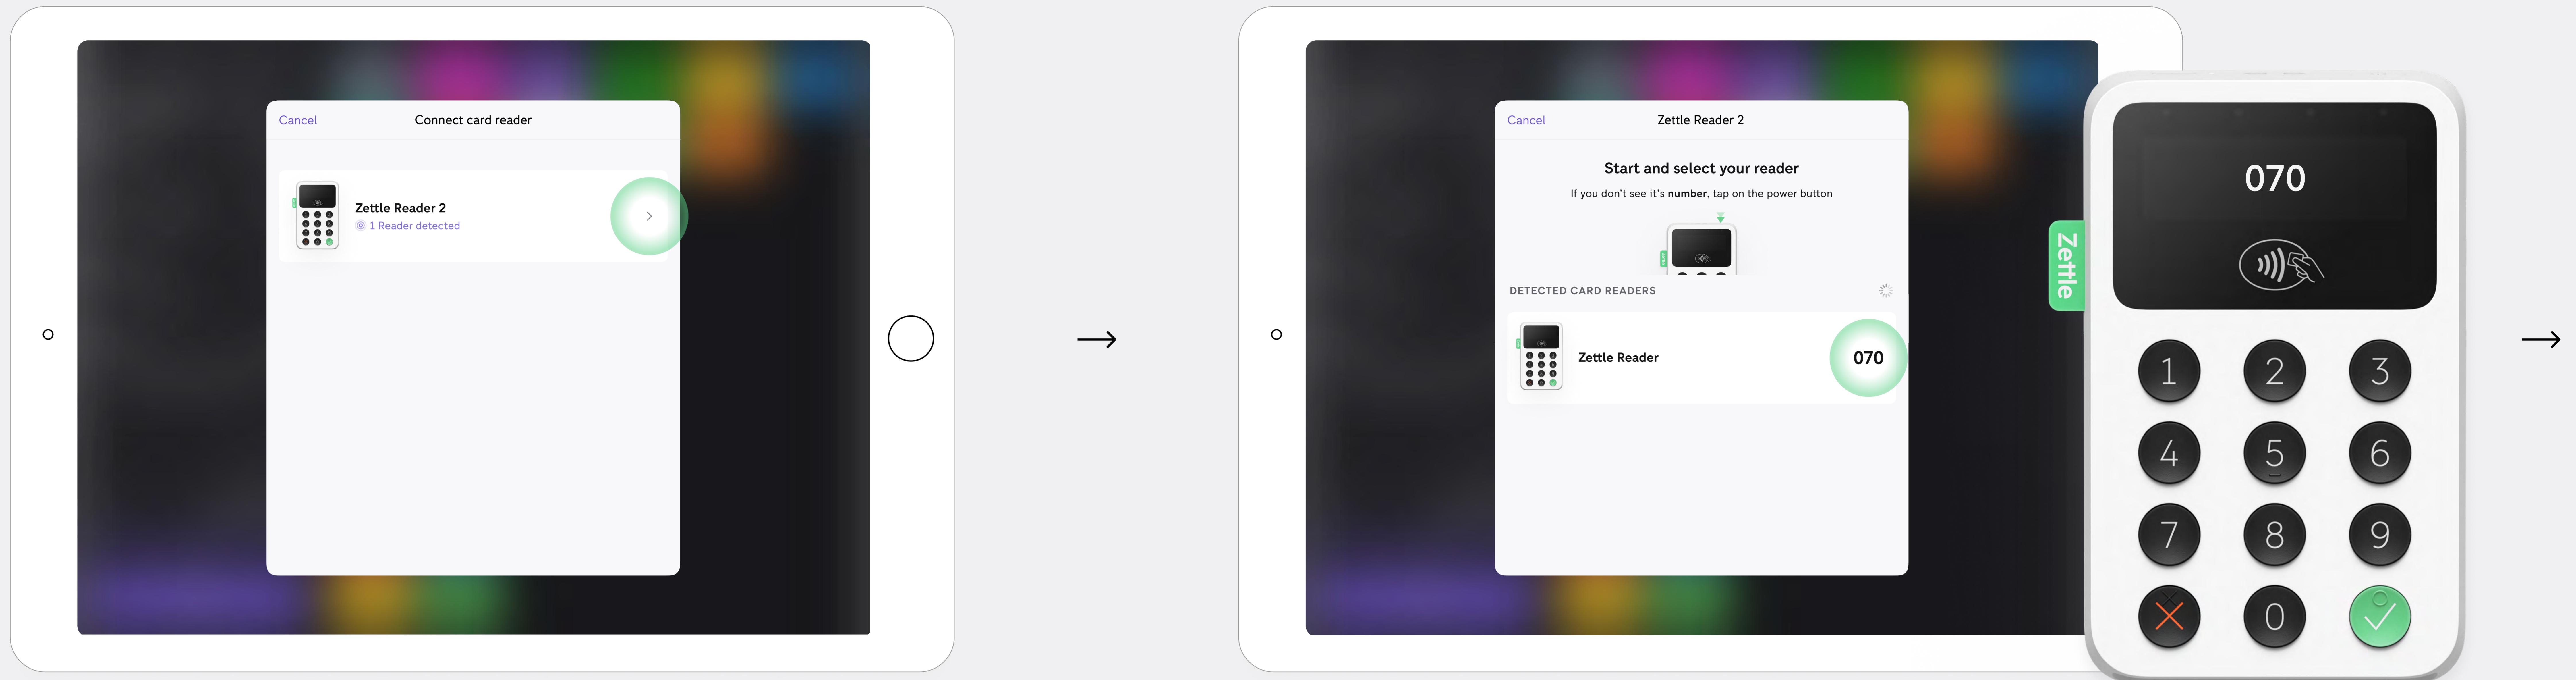


Select Zettle reader 2

(Other card readers can be connect from iOS Bluetooth settings)


The user is asked to turn on the Zettle Reader 2 for it to be detected. Detected readers will appear in a list.

The number in the app should correlate to the number in the reader display.

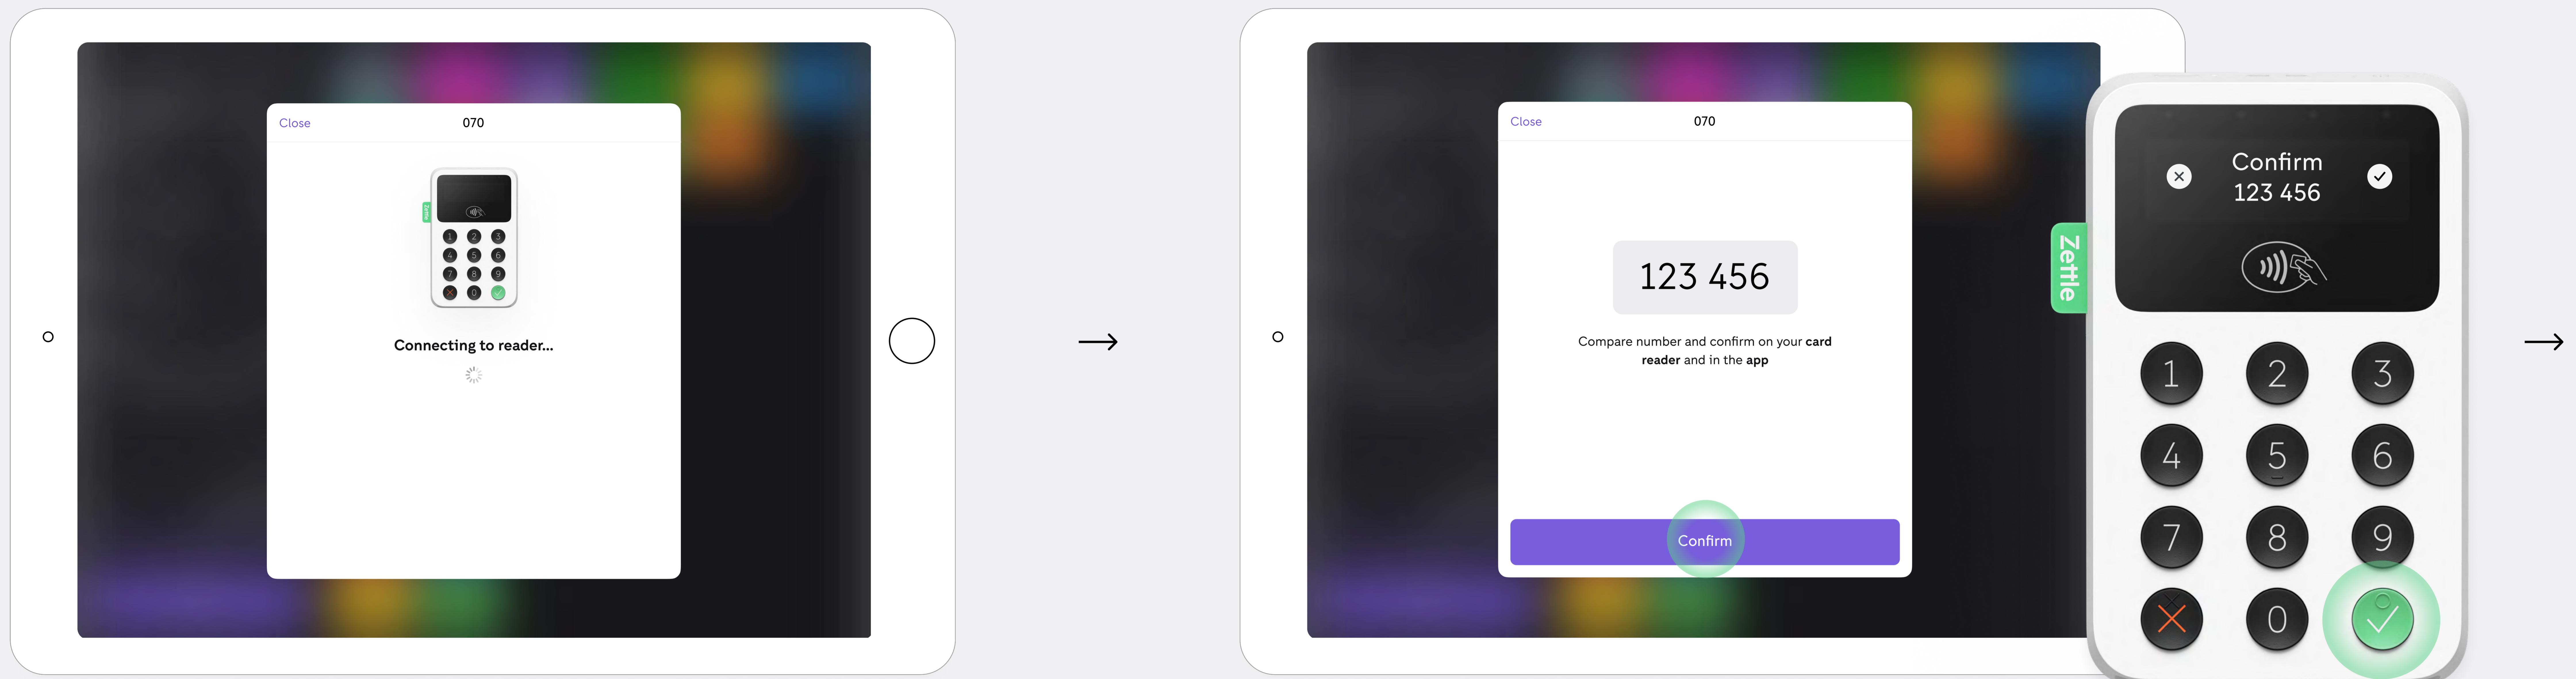

When a reader is selected the BLE pairing is initialized.

When a connection is established the user will be asked to compare numbers in the app and in the card reader display and to confirm **on both devices**.

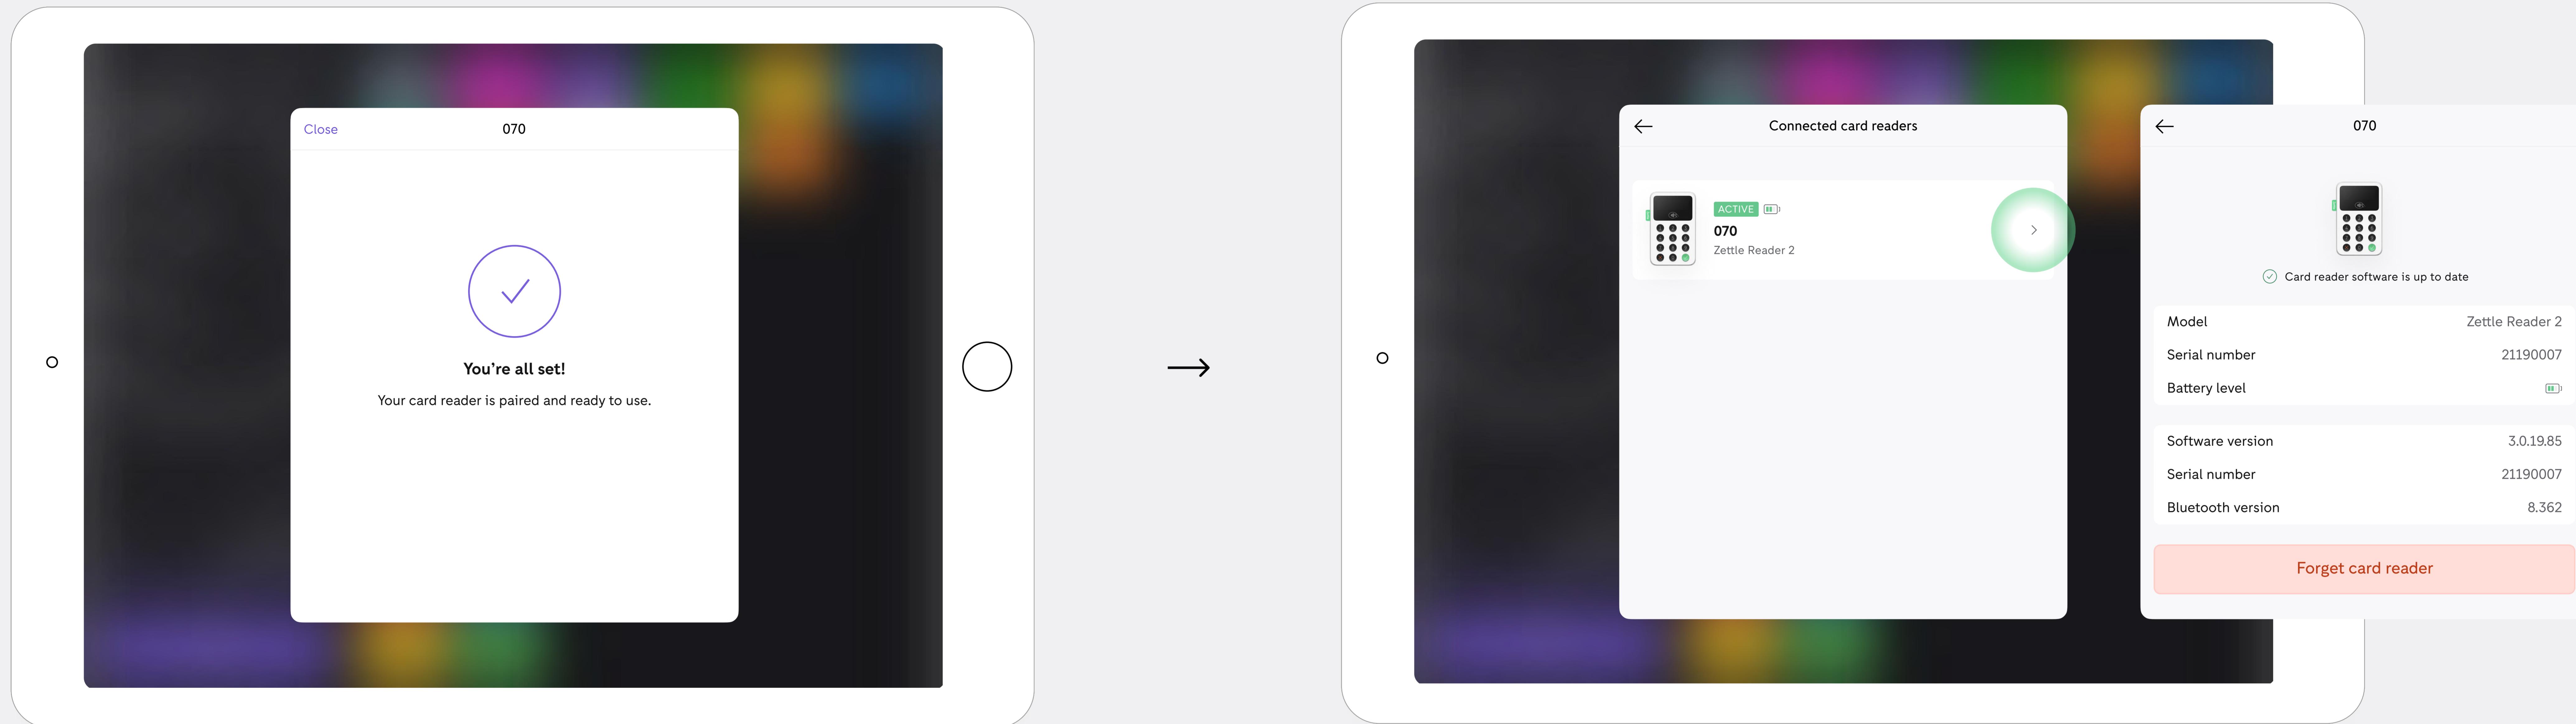

When confirmed the pairing is done...

...the reader is shown in the “Connected card readers view”.

“Forget reader” can be found in the “Card reader detail view”.
Forgetting card readers will no longer be done from iOS Bluetooth settings.