



Audio / Sonus — Trinity

ISD2100 digital audio • MODI-Audio-Sonus-PREVIEW.uf2

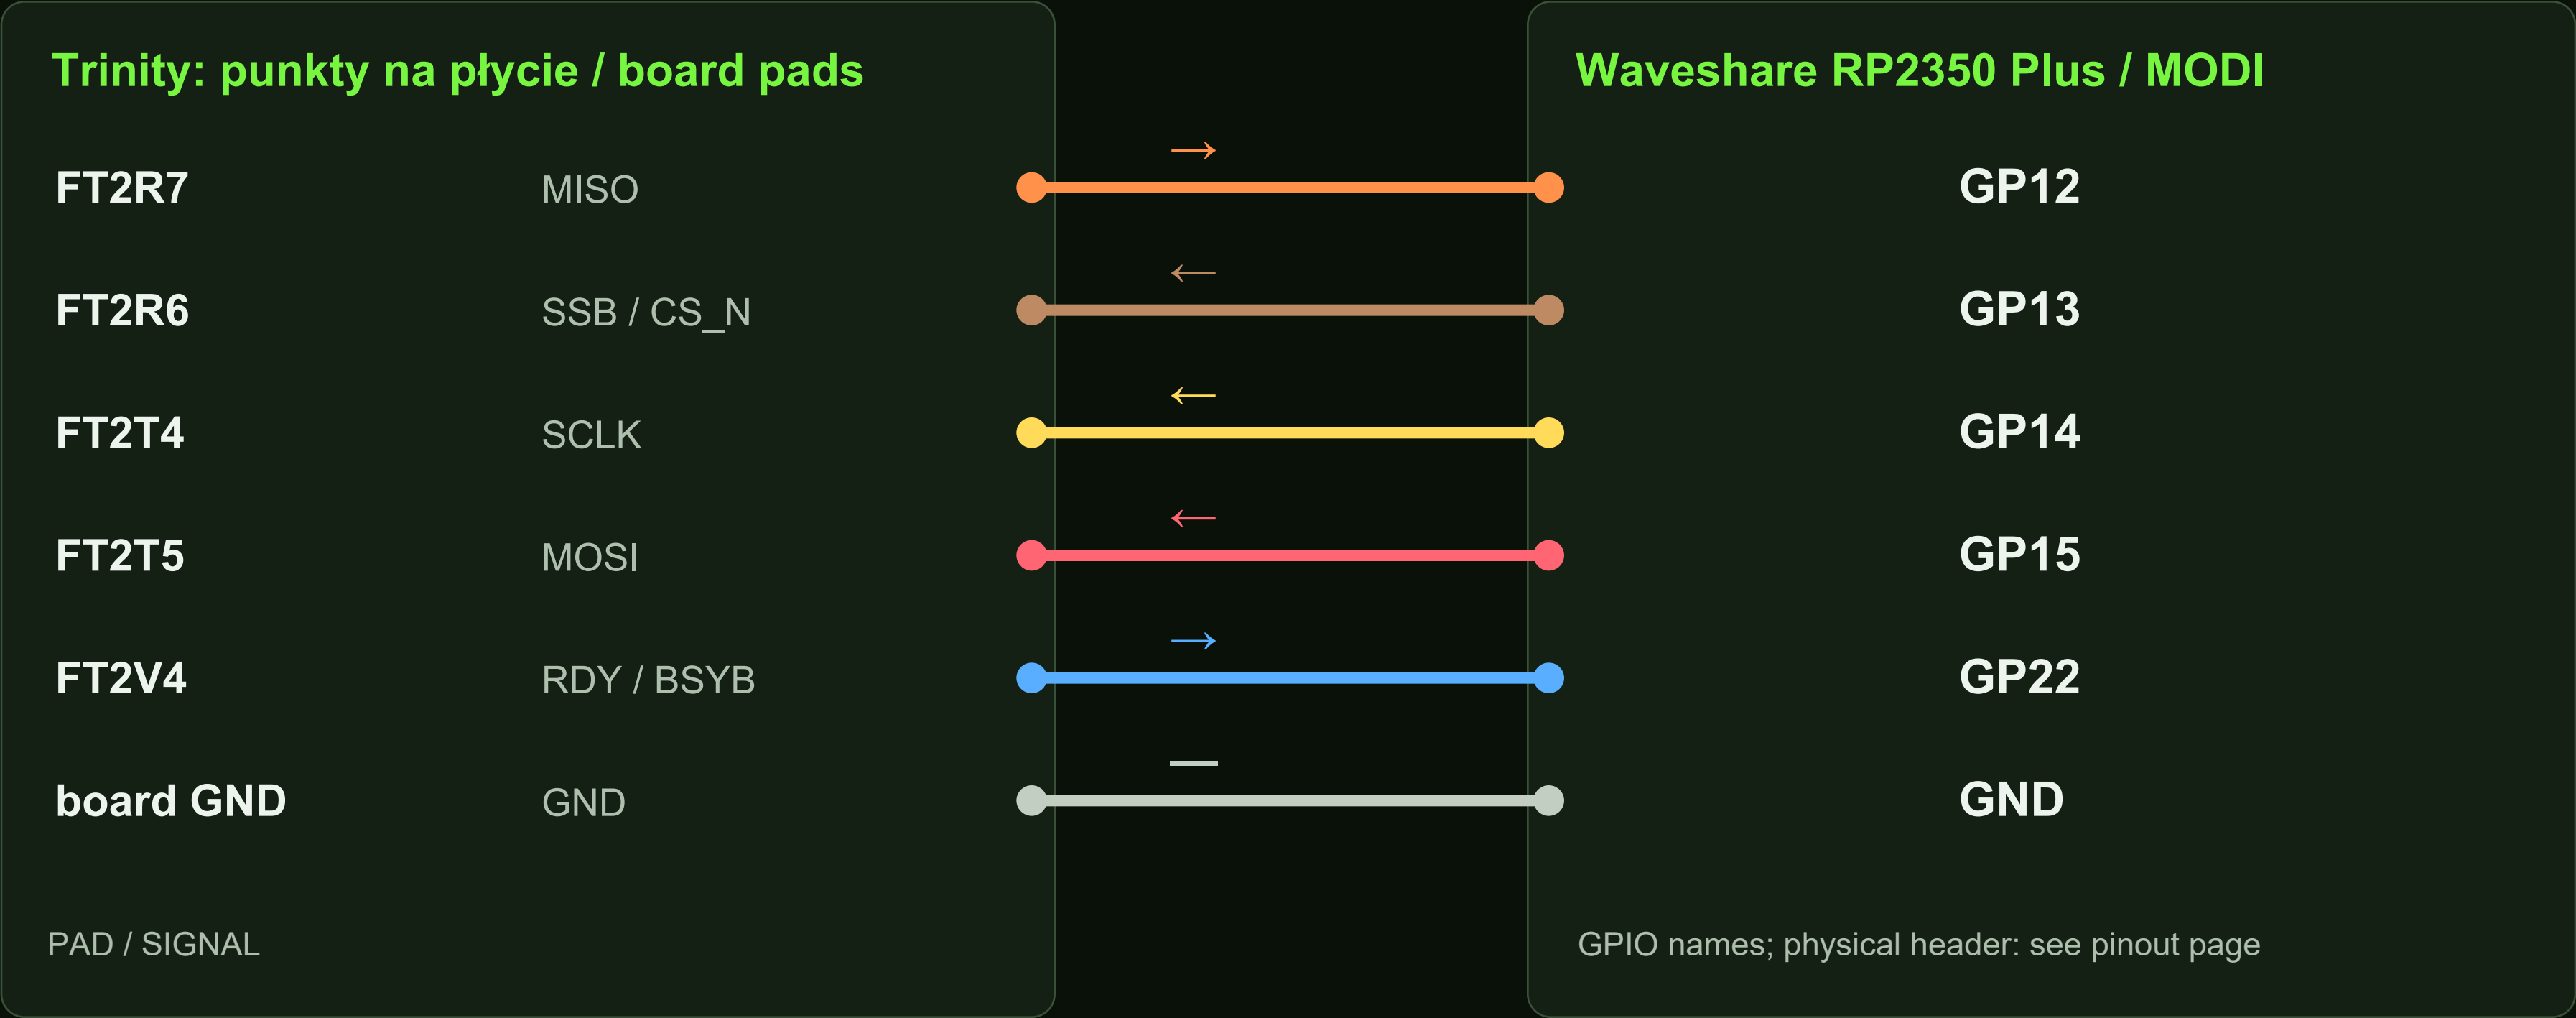

Audio / Sonus — Corona

ISD2100 digital audio • verify J2C2 A/B markings on the actual revision

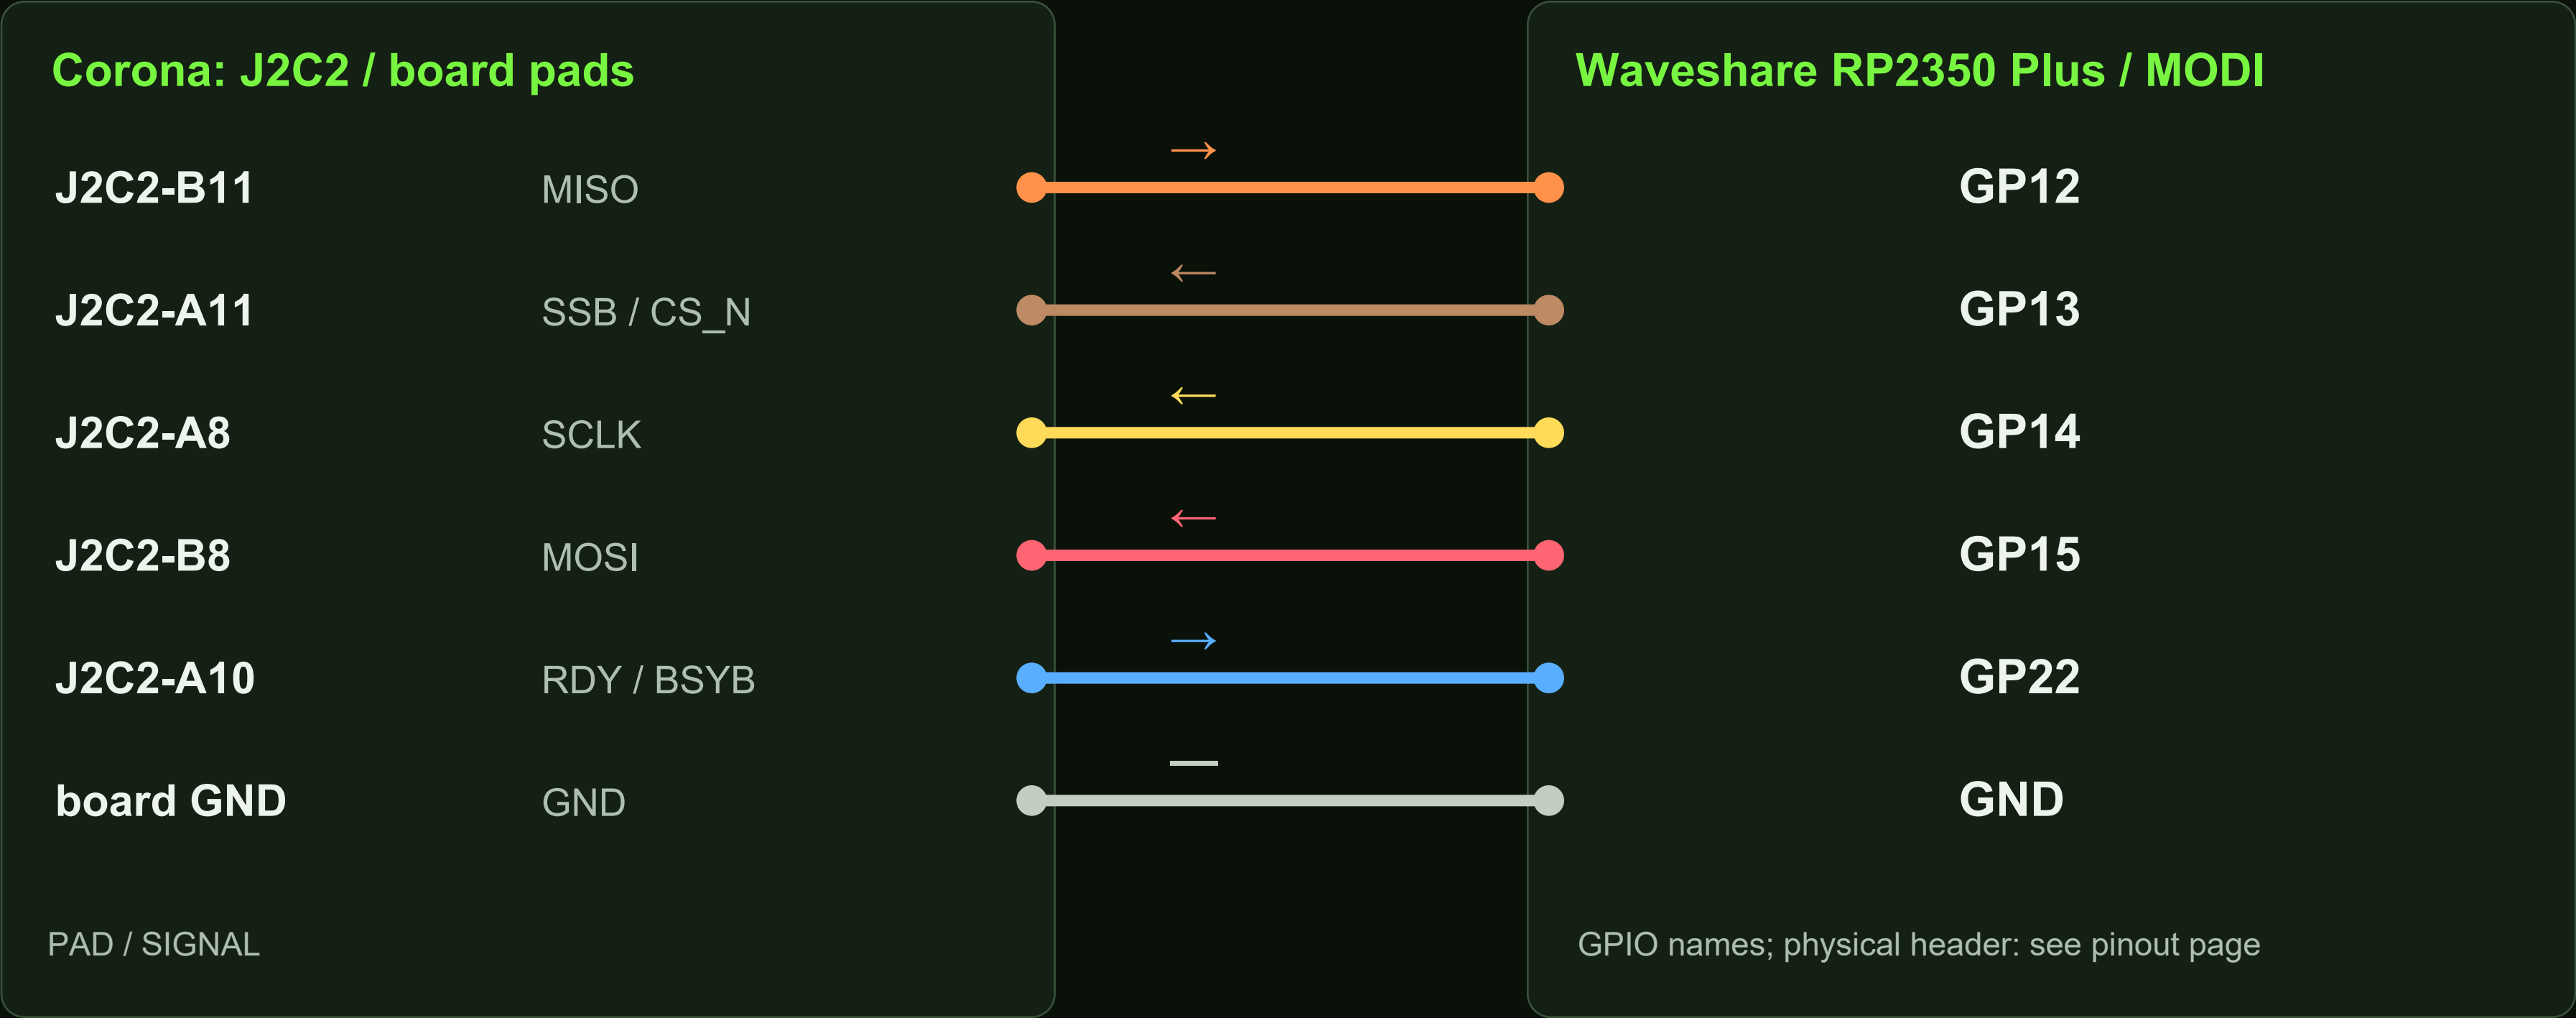

3.3 V logic • Target supply separately • RDY MUST connect to GP22


Kolory pomocnicze diagramu / illustrative colours; match labels, not colours of a different cable.

Schemat połączeń / connection map. Pozycje padów sprawdź dla rewizji / verify pad locations.

Reference: github.com/X360Tools/PicoFlasher • README: Audio / Sonus SPI wiring


DirtyJTAG — X360ACE V3

Xilinx variant only • V3+ / V4 / V5 are different Gowin devices

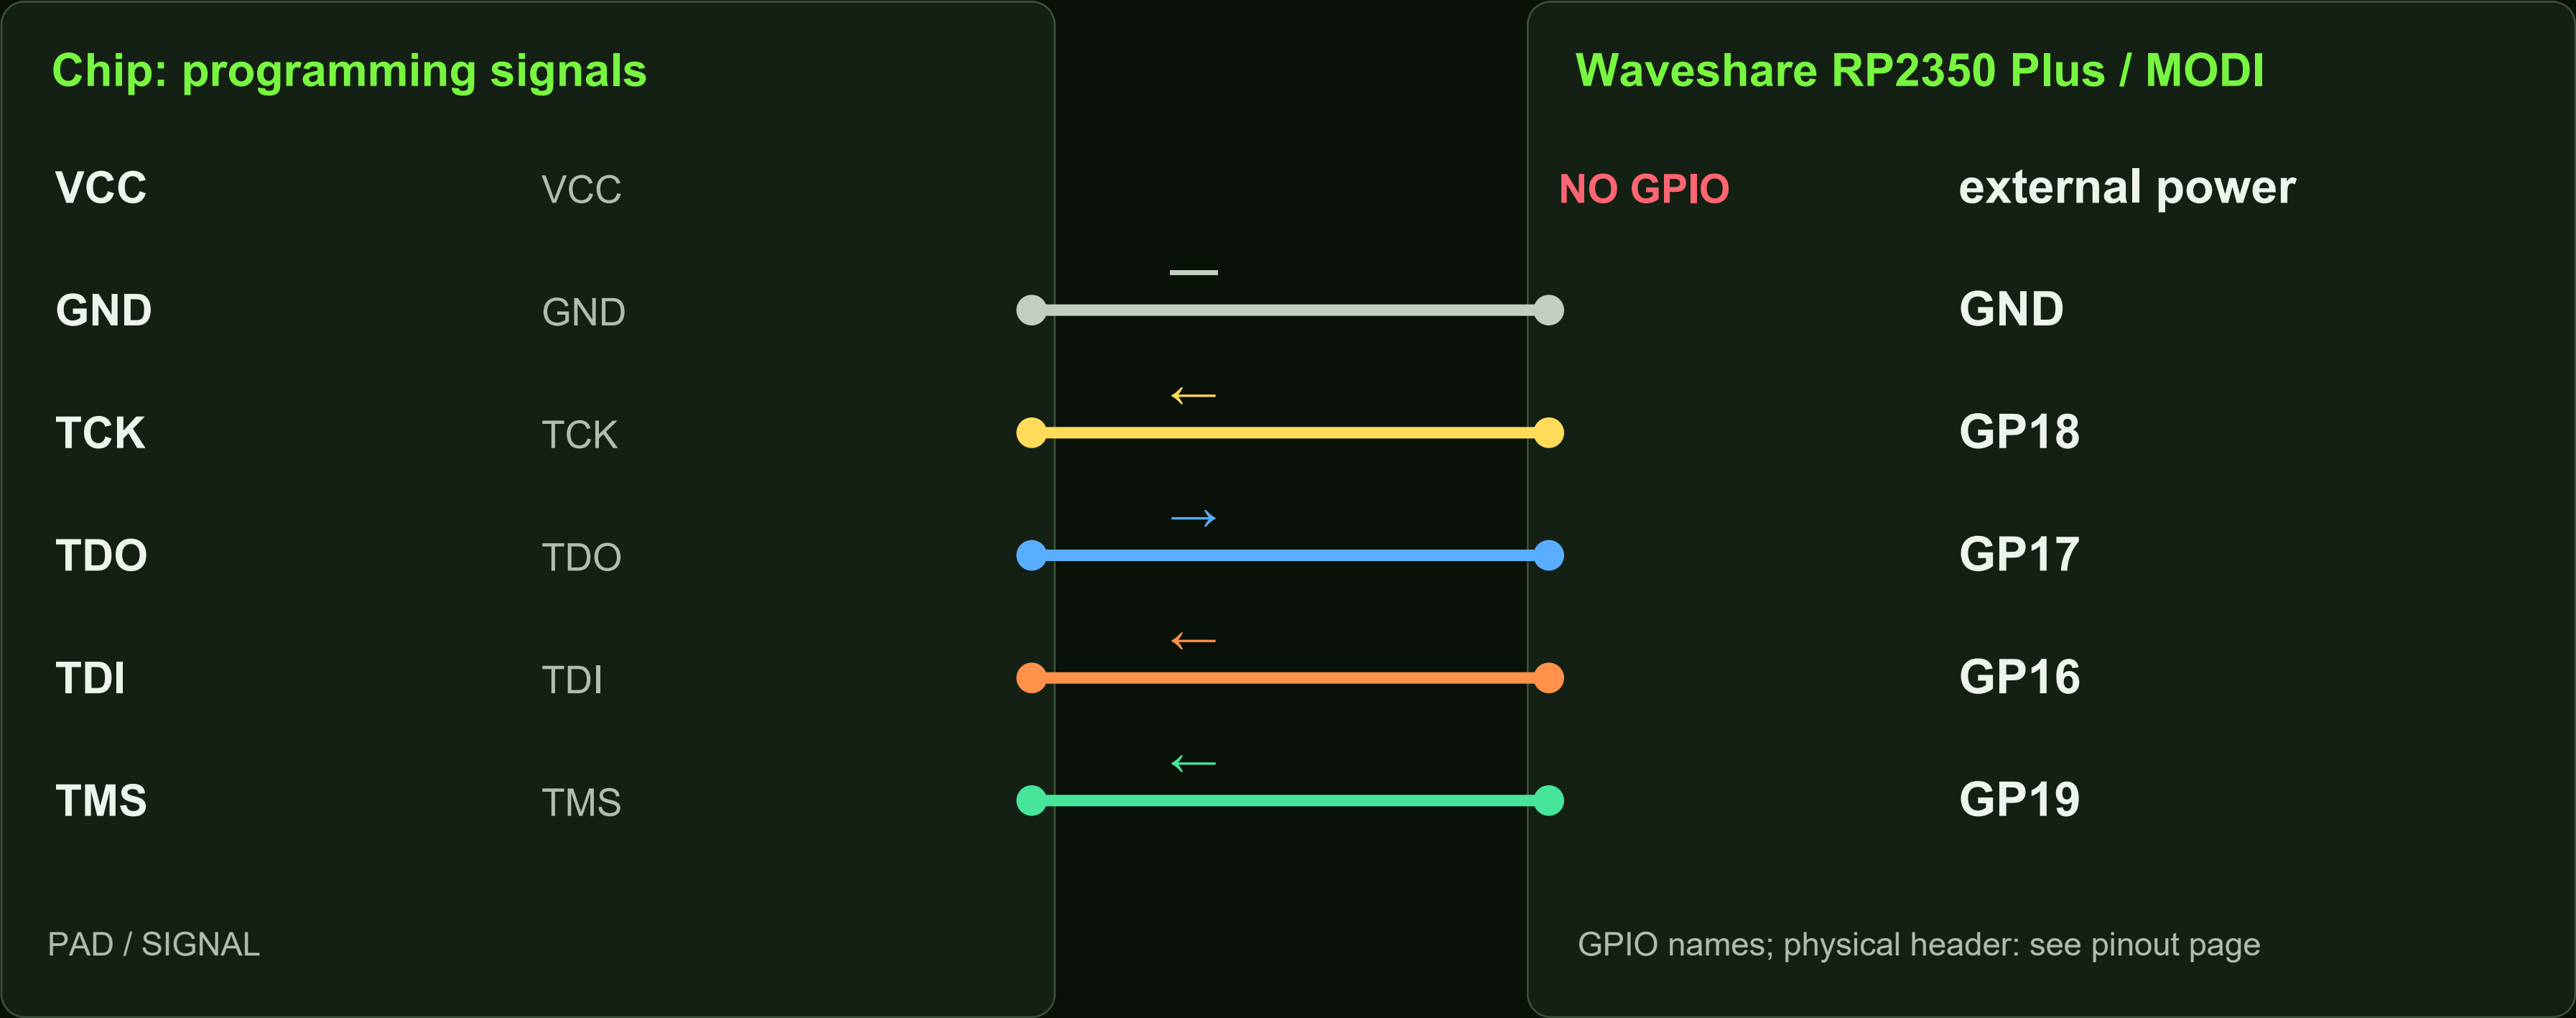


DirtyJTAG — CoolRunner

Set PRG switch if present • confirm revision and matching SVF/XSVF

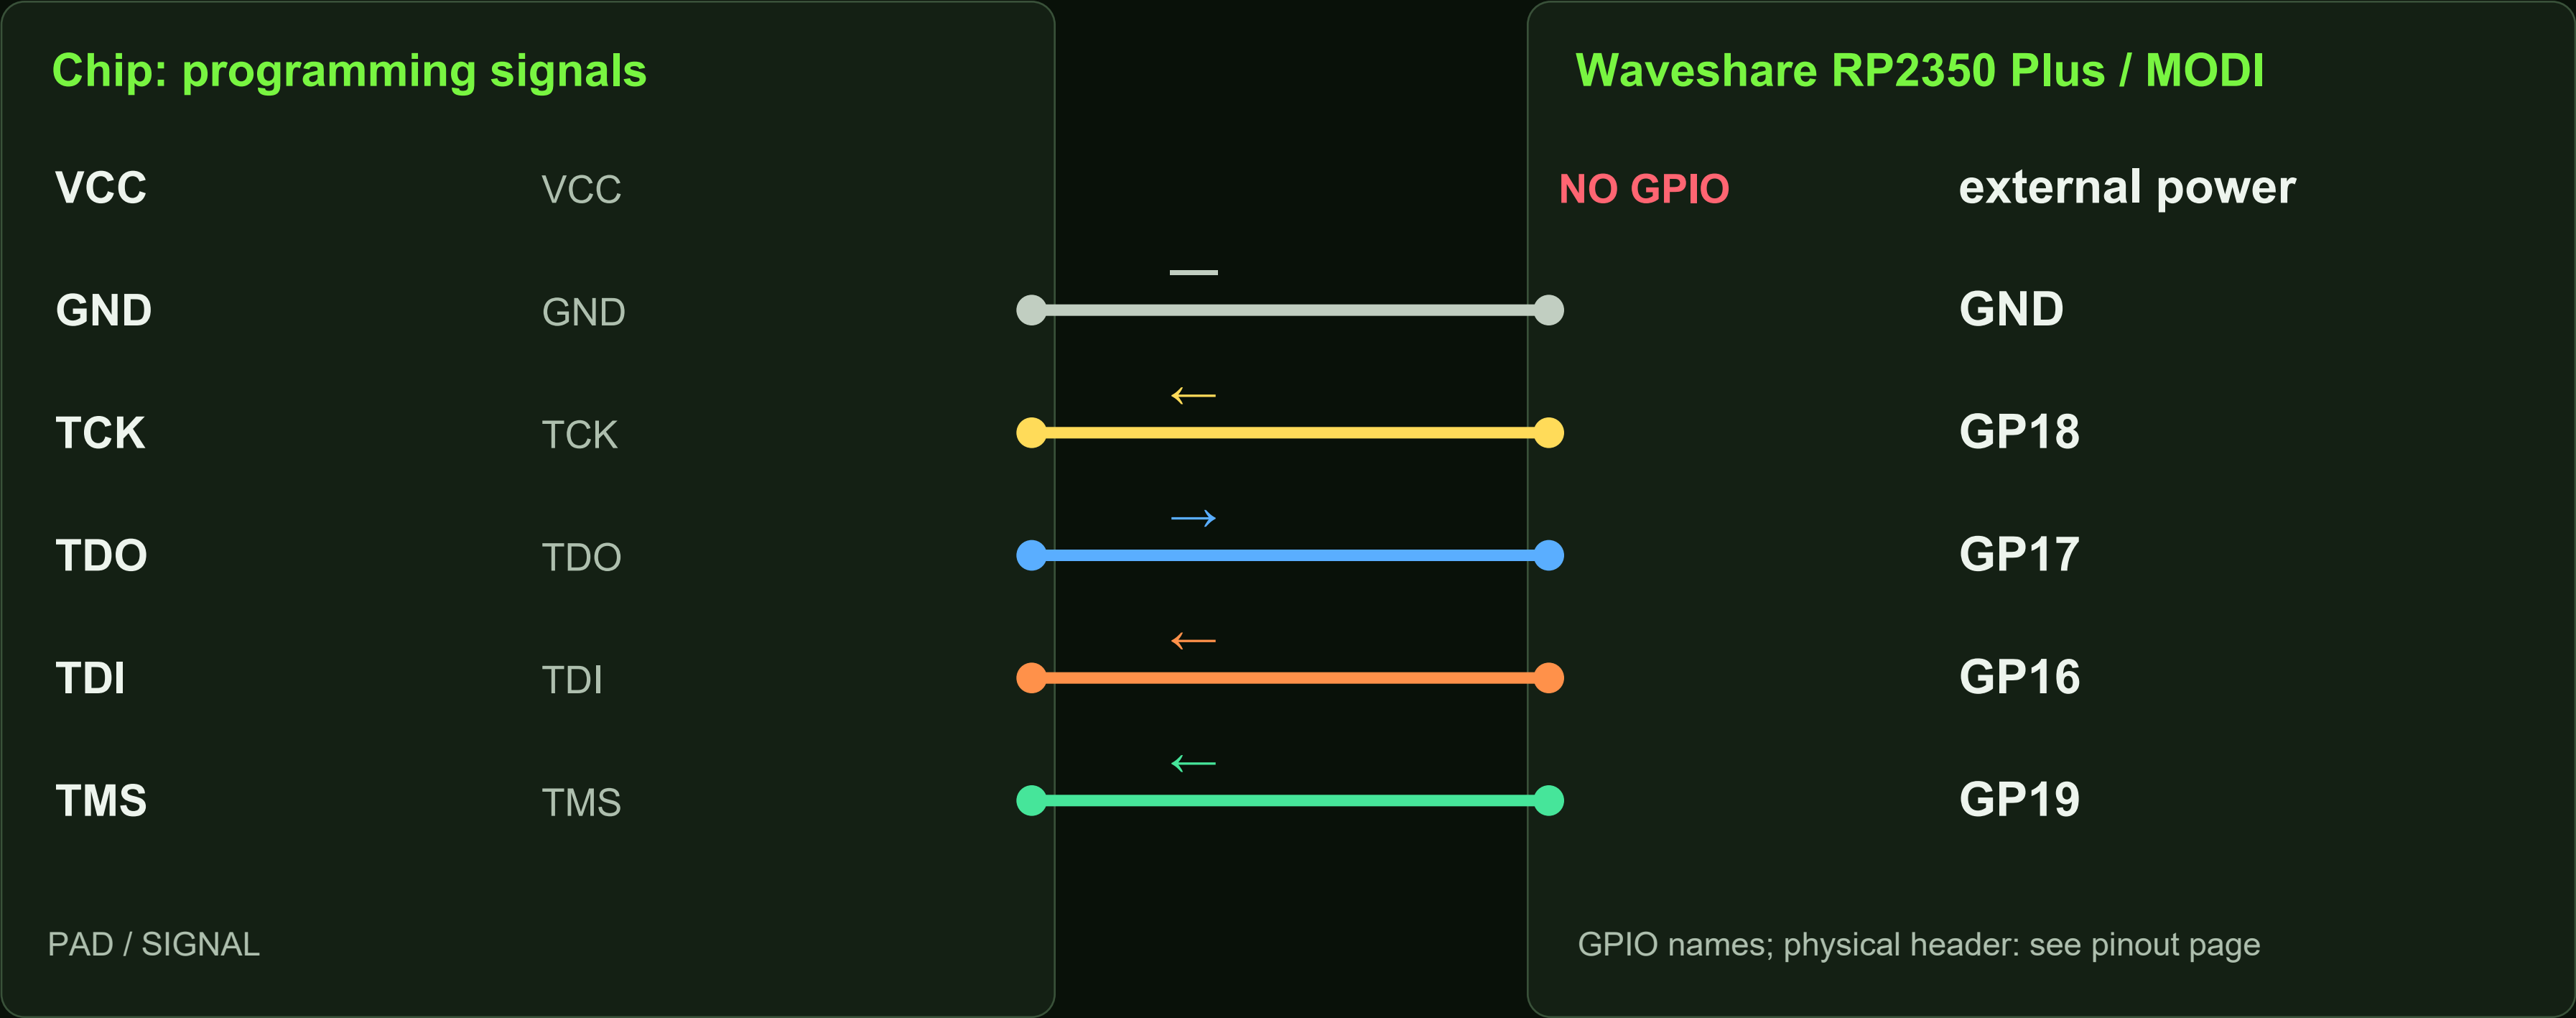

DirtyJTAG — Matrix Glitcher

Connect by printed pad labels • physical pad order varies with revision

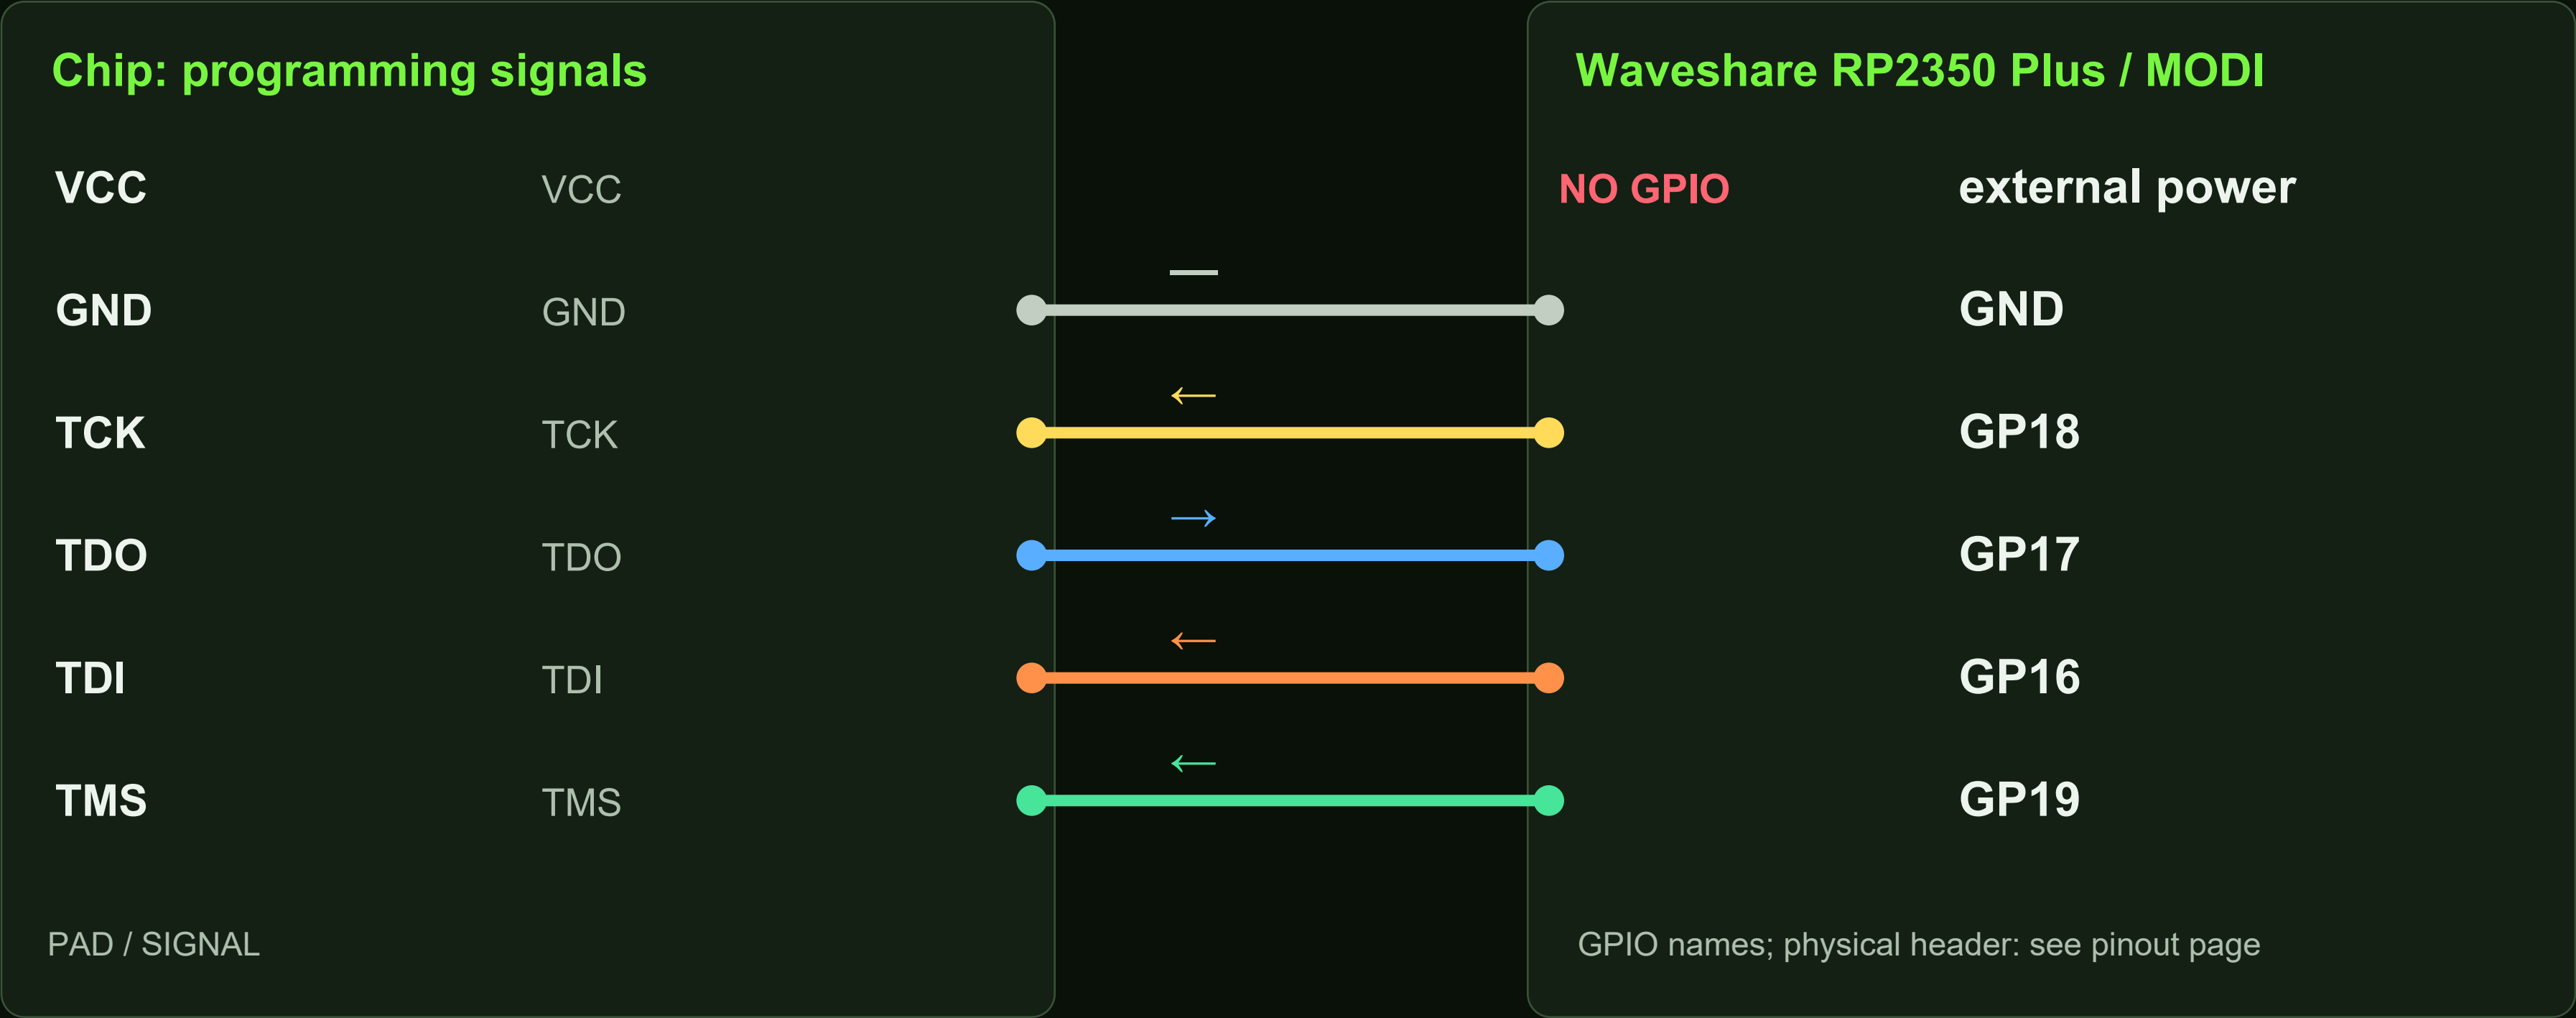

MODI FLASHSHIP / PRE-FINAL

X360ACE family — compatibility

DirtyJTAG preview currently uses xsvftool: SVF / XSVF

ACE V3 / Xilinx

JTAG: TDI, TDO, TCK, TMS + GND

Use the ACE V3 diagram and timing file.

Software preview: physical tests pending.

Start at 100 kHz; scan IDCODE first.

ACE V3+ / V4 / V5 / Gowin

Different programming pad layout.

.fs programming needs a Gowin backend.

NOT implemented in this preview.

Do not apply ACE V3 wiring by position.

Nie zgadujemy padów Gowin / No unverified Gowin pad positions are shown.

Family label alone does not establish a matching timing file, device ID or programming voltage.

Physical validation and the separate Gowin integration remain release gates.

Schemat połączeń / connection map. Pozycje padów sprawdź dla rewizji / verify pad locations.

Reference: consolemods.org/wiki/Xbox_360:Programming_Gowin-based_X360ACE_Chips

RP2350 Plus — additional headers

Rear view / tył • USB at top • labels take priority over position

AUDIO

GP12 = MISO

GP13 = SSB / CS_N

GP14 = SCLK

GP15 = MOSI

GP22 = RDY / BSYB

GND = GND


LIVE INPUTS

GP9 = UART RX

GP10 = SMB_CLK

GP11 = SMB_DATA

VBUS
VSYS
GND
3V3_EN
3V3
ADC_VREF
GP28
AGND
GP27
GP26
RUN
GP22
GND
GP21
GP20
GP19
GP18
GND
GP17
GP16

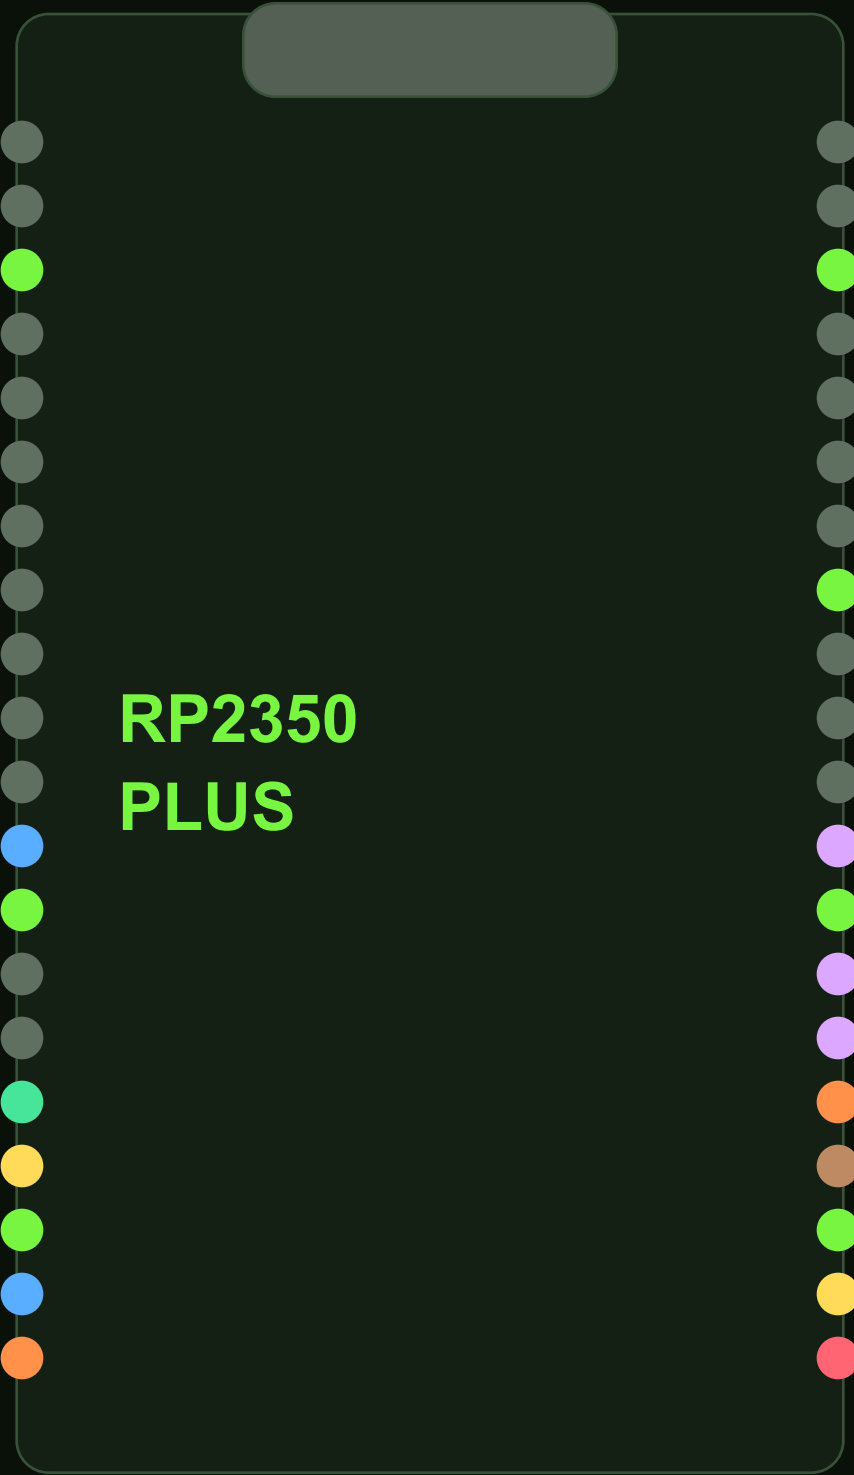

DIRTYJTAG

GND = GND

GP18 = TCK

GP17 = TDO

GP16 = TDI

GP19 = TMS

GP20 = SRST (optional)

GP21 = TRST (optional)

One active UF2 profile at a time • Audio / DirtyJTAG cannot run together with LIVE in this build.

No 5 V / RS-232 on GPIO • Target power separately • GND must be common.

Schemat połączeń / connection map. Pozycje padów sprawdź dla rewizji / verify pad locations.

References: user rear-board photo • frozen MODI firmware GPIO definitions