


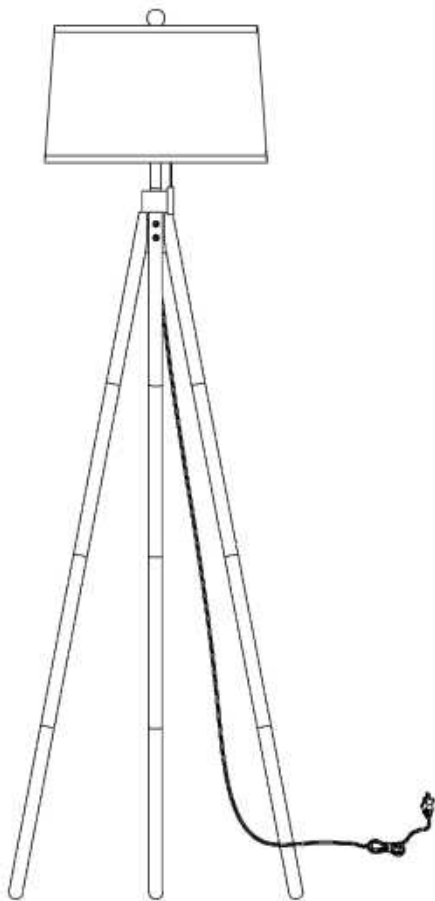

MOFFE

Wooden Floor Lamp

Model . No : MO-FL03

Instruction Manual

Welcome to MOFFE

Thank you for choosing **MOFFE**.

At MOFFE, we believe great lighting is more than illumination — it's about creating atmosphere, comfort, and balance in your space. Our wooden floor lamps are designed to feel warm, calm, and natural, blending seamlessly into everyday living.

Each lamp features an integrated base and solid wood pole, with the power cord routed cleanly through the center of the structure. This unified design allows the lamp to be assembled by simply twisting each section into place — no tools, no exposed wiring, and no unnecessary complexity.

Finished with a matching wooden pull switch, every detail is designed to feel cohesive, tactile, and intentional.

Because this product is crafted from real solid wood, natural variations in wood grain, color, and texture are expected and are not considered defects. Minor marks may also occur during shipping due to the nature of solid wood.

If you have any questions or concerns, or if your lamp arrives with unexpected damage, please contact us at any time. We are always here to help and will make it right.

We hope this lamp brings warmth, balance, and quiet confidence into your home.

Tips: Please unplug the power cord when not in use for an extended period.



SOLID WOOD



HAND CARVED



NATURAL GRAIN



BUILT TO LAST

Designed with Intention · Crafted by Hand



LINEN FABRIC SHADE

Simple and elegant, softens the light and creates a calm atmosphere.



WOOD PULL SWITCH

Smooth to the touch and easy to operate.



SOLID WOOD POLE

Crafted from solid wood with natural grain, strong, stable, and built to last.




BLACK & WOOD CONTRAST

A refined contrast of black metal and warm wood brings modern craftsmanship to life.




REAL SOLID WOOD

Made from real solid wood, preserving the natural grain and texture of the tree.

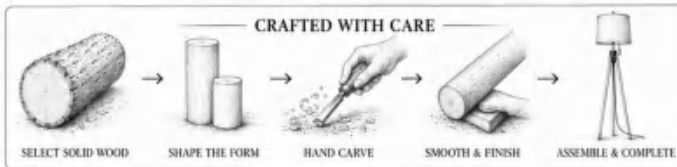

Dimension

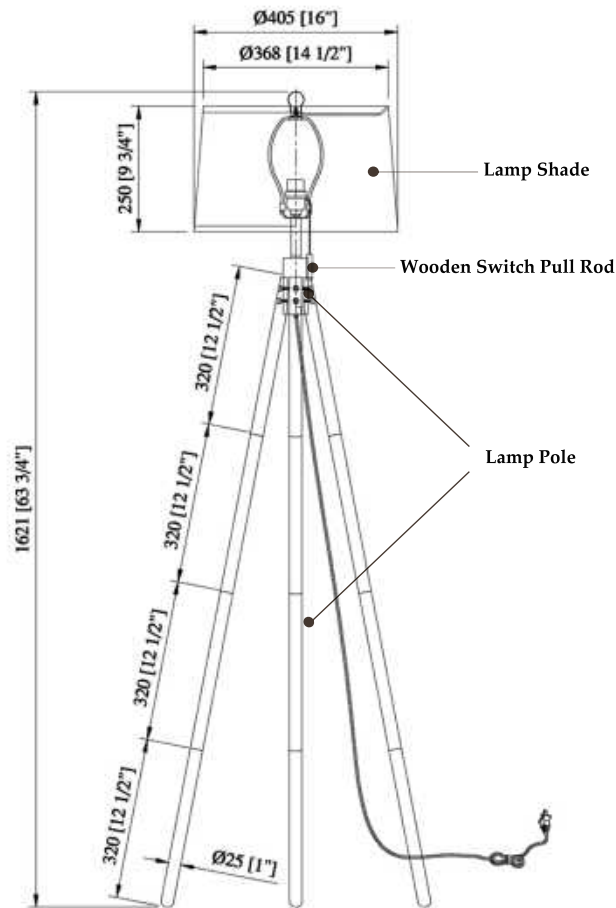

Safety Instructions



Do not operate the lamp if the cord or plug is damaged.
Inspect regularly and discontinue use if any damage is found.



Keep away from water, moisture, and damp environments.
Avoid placing the lamp in areas exposed to water or humidity.



Use only within the recommended wattage.
Do not exceed the maximum wattage indicated on the socket.



Always unplug before cleaning or maintenance.
Ensure the lamp is turned off and unplugged before handling or cleaning.



For indoor use only.
This lamp is designed for indoor environments. Do not use outdoors.

CRAFTED WITH CARE.
DESIGNED FOR EVERYDAY LIVING.




Specification

Brand	MOFFE
Model	MO-FL03
Product Type	Floor Lamp
Bulb Base	E26
Voltage	AC 110–120V / 60Hz
Wattage	12 W
Brightness	1200 Lumens
Color Temperature	3000K (Warm White)/4500K (Neutral White)/6500K (Daylight)
Switch Type	Pull Chain Switch
Materia	Wood + Metal + Fabric
Pull Chain Length	Approx.6"
Cord Length	Approx. 71"
Product Size	63.8"H × 16"D (Shade), 19.7"D (Base)

Safety Instructions

- Please read the user manual before use.
- Recommended for indoor use. It is not waterproof.
Please do not bend the lamp head violently to avoid damage when adjusting its angle.
- Do not let children climb or hang on the lamp.
- Disconnect the power when cleaning or when not in use.
- Do not exceed the rated voltage. The recommended voltage for the US is AC 110-120V,60 Hz.
- Do not plug or unplug the power cord with wet hands.
- Please stop using the product if any defects are found.
- Do not use this product in humid environments or at high temperatures.

Package Contents

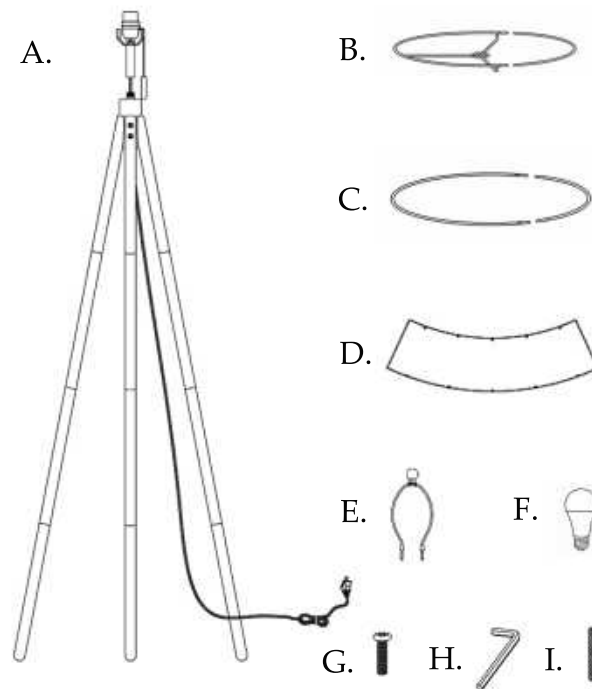

A . Floor Lamp Body × 1

F . E26 Light Bulb × 1

B . Upper Support Ring × 1

G . Screw × 6

C . Lower Support Ring × 1


H . Allen Wrench × 1

D . Lamp Shade × 1

I . Cable Ties × 3

E . Harp × 1

Product Structure

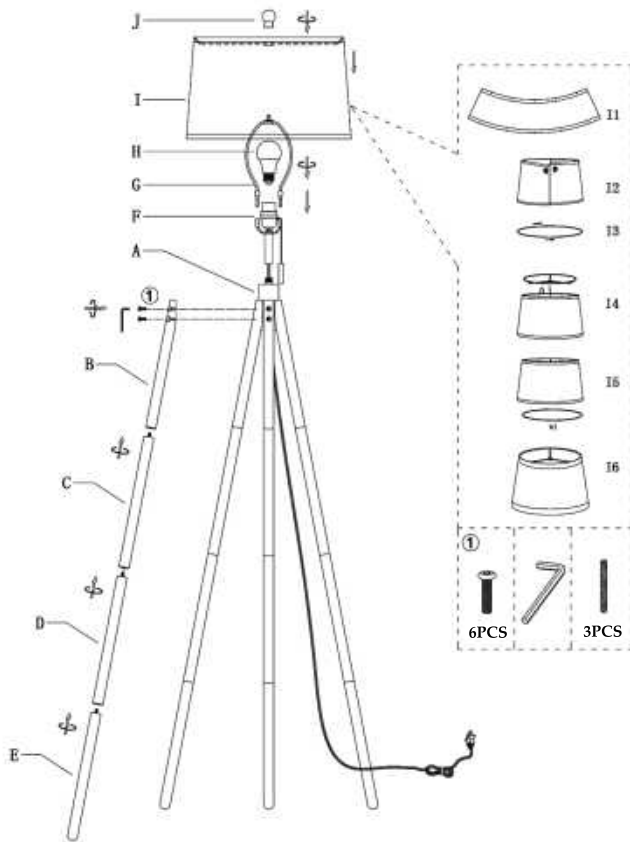

Integrated Structure Design

Power cord, socket, wooden pole, and support arms are unified into a single structure.

Installation Steps (Letter-Matched)

Step 1 – For easier assembly, attach the legs starting from the top(A) and work downward. Connect the wooden sections A → B → C → D → E. (Use the included Allen wrench to tighten them securely.)

Step 2 – Attach the harp (G). Screw in the bulb (H).

Step 3 – Assemble the lampshade components in order (I-1) → (I-6) to form the complete shade (I).

Step 4 – Place the assembled lampshade (I) onto the lamp, then secure it with the finial on top (J).

Step 5 – Use the included cord clips to secure the power cord neatly along the lamp leg.

Step 6 – Secure the power cord neatly along the lamp leg with the included cord clips.

Step 7 – Plug the lamp into a standard outlet and pull the switch to turn the lamp on or off.

Important Notes

Hand-tighten all parts. Do not overtighten.

Pull the wooden switch straight down to turn the lamp on or off.

Install Demonstration



Installation Code

Maintenance & Cleaning

1. Unplug the lamp before cleaning.
2. Wipe with a soft, dry cloth. Use a slightly damp cloth if needed, then dry immediately.
3. Do not use chemical or abrasive cleaners.
4. Avoid prolonged exposure to moisture, heat, or direct sunlight.
5. Use E26 LED bulbs only (Max 60W equivalent).
6. Natural wood variations in grain and tone are normal.

Troubleshooting

If your lamp is not working as expected, please check the following before contacting us.

The lamp does not turn on

- Ensure the lamp is plugged into a working outlet.
- Make sure an E26 LED bulb is installed correctly.
- Pull the wooden switch firmly to confirm it is fully engaged.

The light flickers

- Use an E26 LED bulb only (Max 60W equivalent).
- Gently tighten the bulb to ensure proper contact.

The lamp feels unstable

- Ensure all wooden sections are hand-tightened securely.
- Place the lamp on a flat, level surface.

The lampshade is not level

- Reinstall the lampshade and adjust the locking ring until centered.

Wood grain or color variation

- Natural variations in grain and tone are normal and part of the design.

Warranty (1-year Period)

The manufacturer's warranty is void under the following circumstances, including but not limited to:

- Improper or inadequate maintenance or modification..Accident, misuse, abuse, contamination, or other external causes,The use of unspecified voltage or accessories.
- Loss or damage in transit.
- Damage that occurs as a result of failure to follow the instructions.
- This warranty does not apply to expendable or consumable parts.
- **Register your product with us to receive an extended 1-year warranty.**



Registration QR Code

Customer Service

If you have any questions, concerns, or receive a product with unexpected damage, please contact us before initiating a return.

Our customer support team typically responds within 24 hours.

Email : Moffeservice@outlook.com

Website URL : <https://www.moffex.com/>

*Because this product is crafted from real solid wood, natural variations in wood grain, color, and texture are expected and are not considered defects. Minor marks may also occur during shipping due to the nature of solid wood.

*For defective products or returns, please contact us with your order number within the specified warranty period. Do not dispose of any product parts, as they may be required for inspection or repair.

Notice:



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.