

Still need help?

Remember, your *LP280/290 User's Guide* includes comprehensive instructions on setting up and operating your projector.

I Nothing appears on the screen.

Make sure you have plugged in the power cable, removed the lens cap, and pressed the Power button on the projector's keypad or remote.

2 All I see is the InFocus screen.

Make sure the computer cable is connected between the computer and the projector. Try pressing the laptop activation keys once more. Sometimes you need to press them twice to make the image appear on the screen. If you also have a video device plugged into the projector, try pressing the Source/Select button on the keypad or the Computer button on the remote.

3 There's no computer image on the screen.

The projector may be having a hard time synchronizing with the computer signal. Try pressing the Menu button on the projector keypad or remote to open the menus. Highlight Reset in the Basic menu, then press Select. See the User's Guide for more information.


4 The computer image fills the screen, but the text is fuzzy and hard to read.

Try setting your laptop's resolution to the projector's native resolution (Start/Settings/Control Panel/Display/Settings tab, select 800x600 for LP280, 1024x768 for LP290). See the User's Guide for help with the menus.

5 I can only see part of the computer image on the screen.

Try setting your laptop's resolution to the projector's native resolution. With some laptop computers, it's necessary to disable the laptop display to do this. You use the activation keys to show the image only on the screen.

6 How do I play a video through the projector?

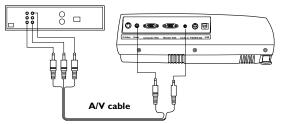

Need to talk to someone?

Contact InFocus Technical Support.

- ⇒ In North America, call InFocus at +1 (800) 799-9911 between 6 a.m. and 6 p.m. PST, Monday-Friday.
 - -Or-

Call +1 (888) 592-6800 after hours or weekends (a fee-per-instance charge may apply).

- ⇒ In Europe, call InFocus in The Netherlands at +31 (35) 6474010.
- ⇒ In Asia, call InFocus in Singapore at +65 353-9449.
- ⇒ Elsewhere, call +1 (503) 685-7224.
- ⇒ Go to our Web site at www.infocus.com/service for information and an E-mail form for Technical Support.

SAFETY INSTRUCTIONS

Please read and follow all safety instructions provided in this quick start and your User's Guide BEFORE using your projector. Failure to comply with safety instructions may result in fire, electrical shock, or personal injury and may damage or impair protection provided by equipment. Please save all safety instructions.

Safety Definitions

Warning: Statements identify conditions or practices that could result in permanent personal injury.
 Caution: Statements identify conditions or practices that could result in damage to your equipment.

Safety Symbols



Attention: For information about usage of a feature, please refer to the User's Guide.



Warning: Hot surface. Do not touch.



An arrow pointing to lamp door of the projector.

Safety Terms:

Warning: Don't look directly into the lens when the projector is turned on.



 Warning: To replace the lamp, turn off the projector and unplug the power cord. To avoid burns, wait 60 minutes before opening the lamp housing. Follow all instructions provided in the User's Guide.



Warning: Please use the power cord provided. Connect the power cord to a receptacle
with a protective safety (earth) ground terminal.

- Warning: Refer all service to qualified service personnel. Servicing your own projector will void the warranty.
- Caution: Don't block ventilation openings.
- Caution: Don't set liquids on the projector. Spilled liquids may damage your projector.
- Caution: Don't place the projector on a hot surface or in direct sunlight.
- **Caution:** Do not drop the projector. Transport the projector in an InFocus-approved case; see the User's Guide for a list of cases.