Railway Crossing Gate Safety State Machine

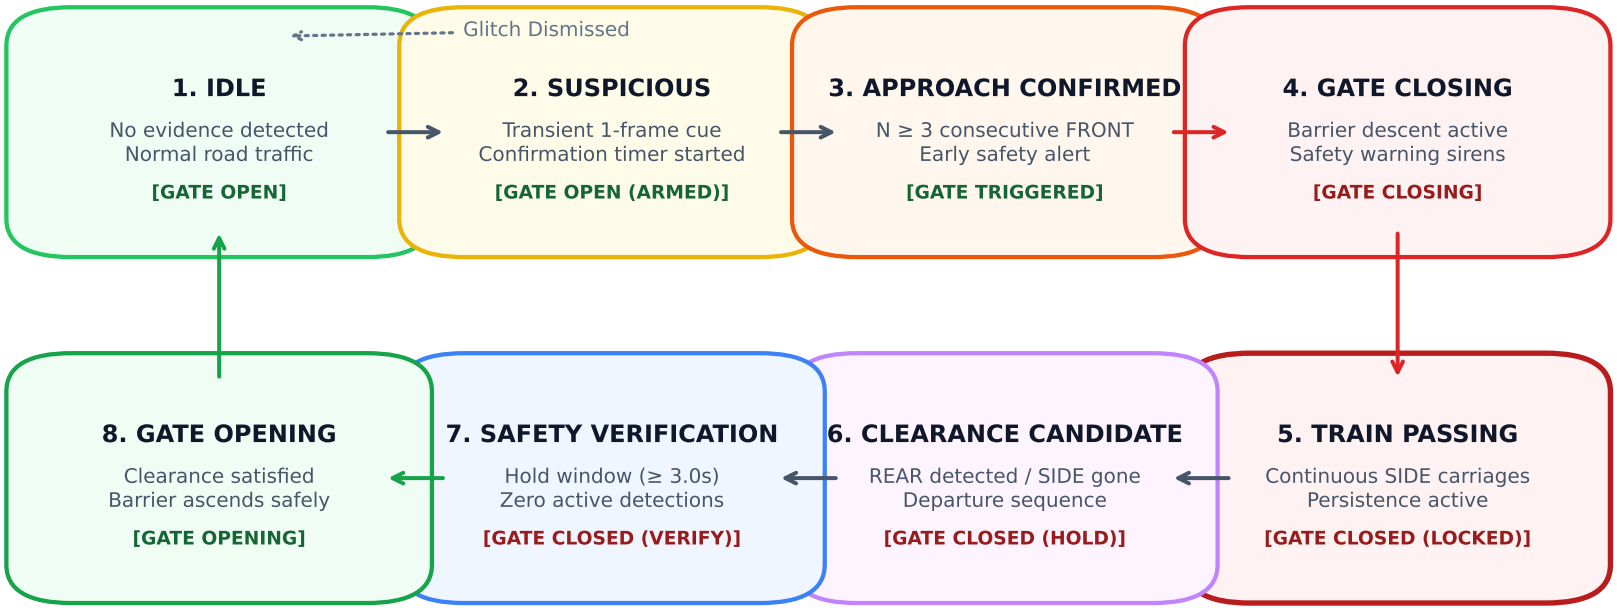

CORE SAFETY INVARIANT: All ambiguous states and dropouts default to KEEPING GATE CLOSED.
Gate opening requires affirmative multi-stage temporal verification.