

How set the controller with PWM signal control


Notice:

Please don't modify the controller configuration before test, and if you want modify the configuration, please save the factory original configuration file to your compute at first, in case you make some wrong configuration, you can import the original configuration to your controller.

Controller Model: KYDBL4850-2E, KYDBL4875-2E

The standard controller with analog signal 0-5V control, If you need PWM signal control, after connect the controller to computer successfully, please check below steps:


1. Set the Priority 2 at Pulse width

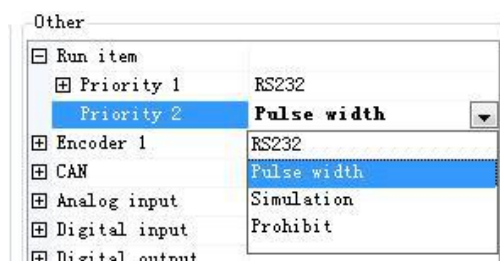

2. Disable the analog signal

Ain1 for motor 1, set "No action"

Ain2 for motor 2, set "No action"

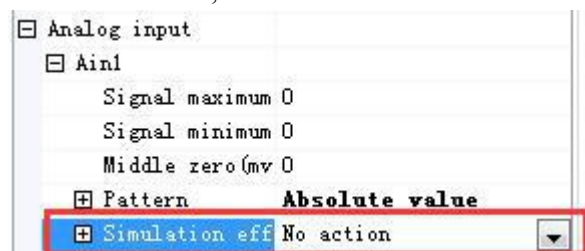

3. Set the parameter for PWM signal

Pulse1 for motor 1

Pulse2 for motor 2

If you use RC signal control, please choose "Pulse width", set the signal according to the Remote Control specification. In general, the 2.4G model airplan remote control signal is 1000-1500-2000.

If use frequency mode, set the Minimum signal to 0, Maximum signal to 5000, the controller will adjust the speed with 0-5000Hz.

If use Duty ratio mode, set the Min signal to 0, Max signal to 5000, then the frequency will be 250Hz (recommended frequency), the controller will adjust the speed with duty cycle 0-100%.

Pulse	
Plus1	
Maximum signal	2000
Minimum signal	1000
Intermediate z	1500
+ Pattern	Disable
+ Pulse function	Disable
PINA_12	Pulse width
+ Plus2	Frequency
+ Plus3	Duty ratio
+ Plus4	Sensor

Pulse	
Plus1	
Maximum signal	2000
Minimum signal	1000
Intermediate z	1500
+ Pattern	Pulse width
+ Pulse function	For motor commands
PINA_12	No action
+ Plus2	For motor commands
+ Plus3	For feedback
+ Plus4	

4. Save the configuration to controller.
5. Re-power the controller, try with PWM signal.