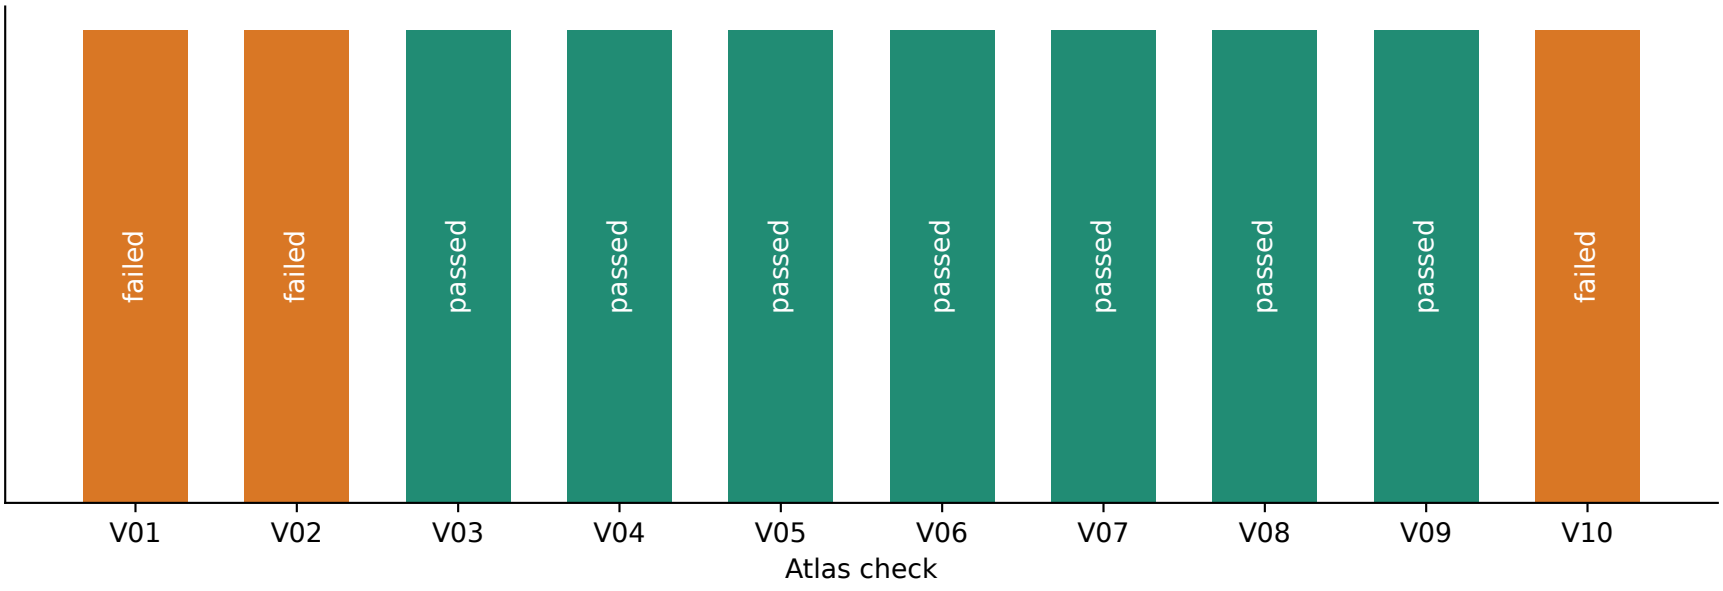
Verification overview
failed
failed
passed
passed
passed
passed
passed
passed
passed
failed
V01
V02
V03
V04
V05
V06
V07
V08
V09
V10
Atlas check