


WARMBOOT

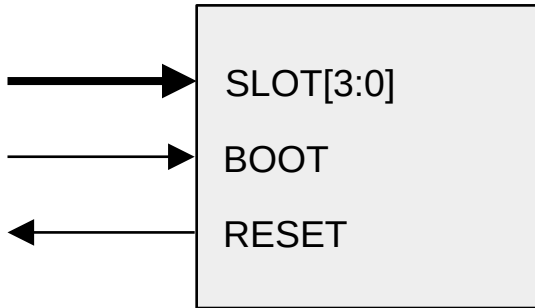

BOOT only triggers if the fabric is configured.

SLOT selects which bitstream is loaded.

RESET is asserted during reconfiguration.