


User Guide

Find a structure, run an inspection, read the BCI score, and get the report out — everything you need to use spanSense day to day, walked through step by step with real screenshots of the current app.

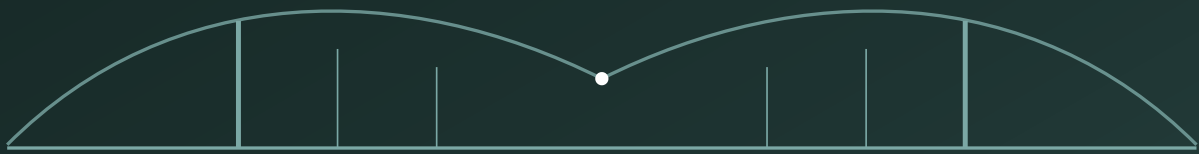

Contents

A map of this guide.

01	Getting Started	3
02	The Map — Finding a Structure	4
03	Viewing Previous Inspections	5
04	Running an Inspection, Step by Step	6
05	Understanding BCI Scores	8
06	twinView — 3D Digital Twin	9
07	Reports & Exporting Data	10
08	Inspection Planning & Scheduling	11
09	Dashboard — Portfolio Overview	12
10	Your Account & Preferences	13

01 — Getting Started

A quick orientation before your first inspection.

Log in with the account your admin gave you — you'll land on the Map. Its top bar just holds the logo, a search box, the night-mode toggle, your account icon, and Contact Us; the links to **Dashboard**, **Database**, **Planning**, and **twinView** live in a collapsible sidebar on the left edge instead — hover it to expand. Once you move to any of those other pages, that same set of links moves up into a floating navbar at the top. The account icon's shape tells you your role at a glance: a magnifying glass for inspectors, a checked user for engineers, a shield for admins.

Your role decides what you can do

ROLE	CAN DO
Inspector	Find structures, run inspections, upload photos, view reports and planning
Engineer	Everything an inspector can, plus approve/reject submitted inspections and edit a structure's inspection schedule
Admin	Everything an engineer can, plus full system access

The general workflow

- 1 **Find** your structure on the Map
- 2 **Run** a new inspection, or open an existing one from Previous Inspections
- 3 **Save** it — the BCI score is calculated automatically as you go
- 4 An **engineer reviews** it from the Dashboard's Pending Review queue
- 5 **Export** a report whenever you need one, from the structure card or Database


Tip: you don't need to finish an inspection in one sitting — every wizard step has a **Save Draft** option that picks up right where you left off.

02 — The Map — Finding a Structure


The map is your home screen after login, and the starting point for almost everything.

Structures are plotted with a type-coded icon (bridge, footbridge, culvert, retaining wall, or sign gantry) and a condition-coded ring color — the same colors used everywhere else in the app, so a glance at the map already tells you which structures need attention.

- 1 Use the **search bar** at the top to jump straight to a named structure, or the sidebar filters on the left to narrow by type or condition
- 2 **Click a marker** to open its structure card: photo, BCI average score, last inspected date, span/length/year/type
- 3 From the card, choose **New Inspection**, **Previous Inspections**, or **Documents**

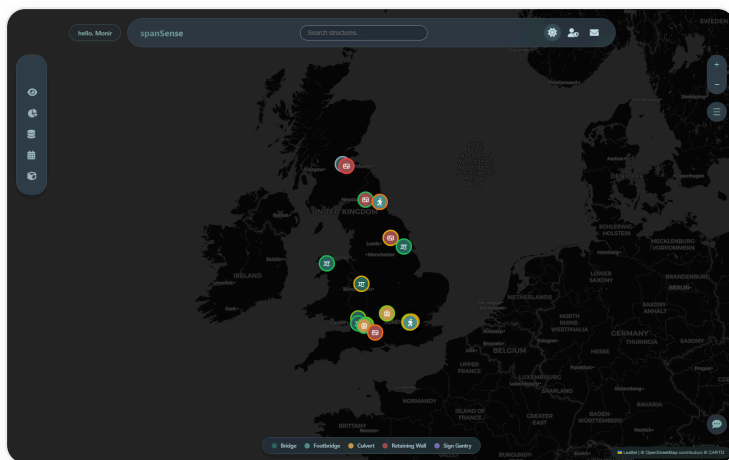

Every structure plotted by type icon and condition-coded ring

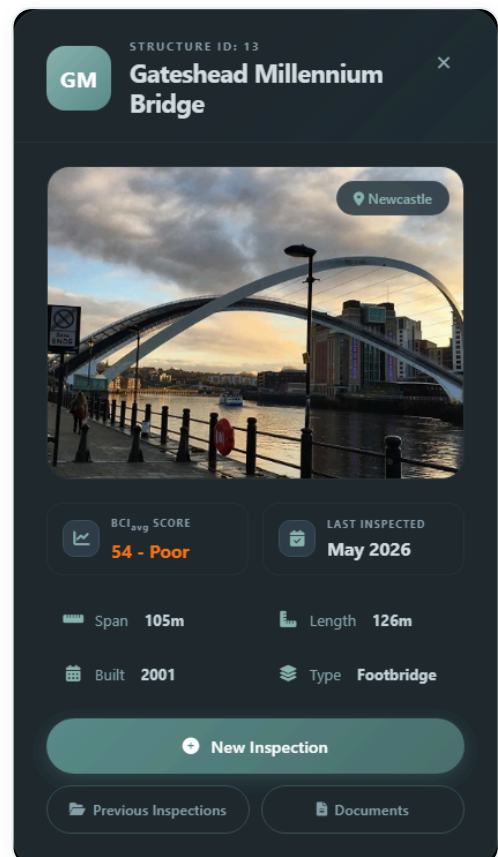

Click a marker to open its structure card

03 — Viewing Previous Inspections

Every past inspection for a structure, in one searchable list.

Previous Inspections (opened from the structure card) shows the full record for that structure: total inspection count, the last inspection date, and the current BCI average with its trend against the one before it.

- Filter by **Principal (PI)**, **General (GI)**, or **Superficial (SI)**
- Search across every recorded inspection for that structure
- Each row shows the inspector, date, and both **CRIT** and **AV** scores
- Use the row's icons to download the **PDF report**, **edit** the inspection, or generate a **BCI Proforma**
- Click **+ New Inspection** to start the next one straight from here

TF

PREVIOUS INSPECTIONS

Thames Footbridge

Structure ID: 11

TOTAL
2

LAST INSPECTION
May 2026

CURRENT BCI AVERAGE
72 ↓ 13

✓ All

Principal (PI)

General (GI)

Superficial (SI)

Search inspections...

2026
MAY 31

PRINCIPAL

Monir Khan

CRIT
79

AV
72



2023
JUN 27

PRINCIPAL

Monir Khan

CRIT
100

AV
85



 Click any inspection to view full details

Close

+ New Inspection

Filter, search, and act on any past inspection for this structure

04 — Running an Inspection, Step by Step

The wizard is two steps: metadata, then defect logging element by element.

Step 1 — Metadata

Confirm the inspection type (GI/PI/SI), date, and inspector, then move on to the element checklist.

Step 2 — Log each element

- 1 Every inspectable element is listed as a row. Click one and choose **Add Defect**, **No Defects**, or **Not Inspected** (with a reason)
- 2 For a defect, set **Severity** (1 Minor → 5 Emergency) and **Extent** (A isolated → E extensive) — a live preview shows the BCI impact as you adjust them, before you save
- 3 Mark **Works Required** — No, Yes, or Monitor — and attach a photo if useful
- 4 If a rating is a big improvement over what was last recorded for that element, a confirmation prompt double-checks it before saving — a quick safeguard against typos
- 5 **Save** the defect and move to the next row, or **Save Draft** at any point to finish later

S

Severity 1–5

Minor · Moderate · Severe · Critical · Emergency

E

Extent A–E

How much of the element is affected, isolated to extensive

W

Works Required

No, Yes, or Monitor — flags it for the planning programme

✓

Conclusions


A short written summary once every element is done

Finishing up

Once every element is logged, add your **Conclusions** and hit **Save** — the BCI average and critical scores are calculated automatically from what you've logged, no manual math required. The inspection then enters the review queue for an engineer to approve.

04 — Inside the Add Defect Modal

A closer look at the previous-defects panel, the live BCI preview, the severity guide, and moving between defects — all without leaving the modal.

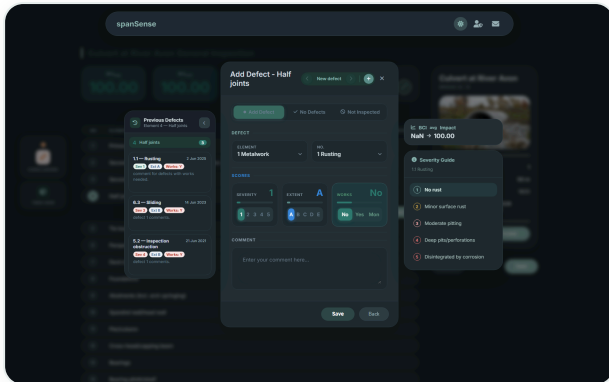

Previous Defects — and copying one in

Open a defect for an element that's had one logged before, and a **Previous Defects** panel appears beside the modal — collapsed to a slim tab until you expand it. Each past defect shows as a card (Severity/Extent/Works badges, date, comment), three most recent first with a **Load more** option for the rest. Click a card to copy it straight into the form — severity, extent, works, cost, remedial works, and comment all fill in together, with a **"From <date>"** badge confirming it's a copy. Adjust what's changed, then save.

The Add Defect modal in night mode — Previous Defects expanded on the left with real history, Severity Guide flyout on the right

Not the same as the table's Copy icon: the Copy/Edit icons on an already-logged row duplicate a defect you've just saved in *this* inspection — Previous Defects pulls from history instead.

Live BCI Impact preview

Move the Severity or Extent stepper and the **BCI_avg Impact** panel recalculates instantly — current score on the left, what it would become on the right. It uses the same calculation that produces the final report score, so there's no surprise once you save: red means your change makes the structure's score worse, green means it improves.



Severity Guide

Not sure what separates a 3 from a 4? This panel spells out all five levels in plain language for the exact defect type and number picked, with your current selection highlighted.

LVL	1.1 RUSTING
1	No rust
2	Minor surface rust
3	Moderate pitting
4	Deep pits/perforations
5	Disintegrated by corrosion

Moving between defects


No need to close the modal to work through an element's defects:

- Use the ◀/▶ arrows in the modal header to step between defects already logged for this element — a **"Defect X of N"** counter shows where you are, and each move auto-saves what you were editing
- Click + to start logging another new defect on the same element without closing the modal

05 — Understanding BCI Scores

BCI_{av} and BCI_{crit} are calculated for you — no formula, no spreadsheet.

BCI_{av} is the overall average condition across every element in the inspection. **BCI_{crit}** is the score of the single worst-condition element — the one that actually drives risk decisions. Both fall into the same five bands used everywhere in the app:

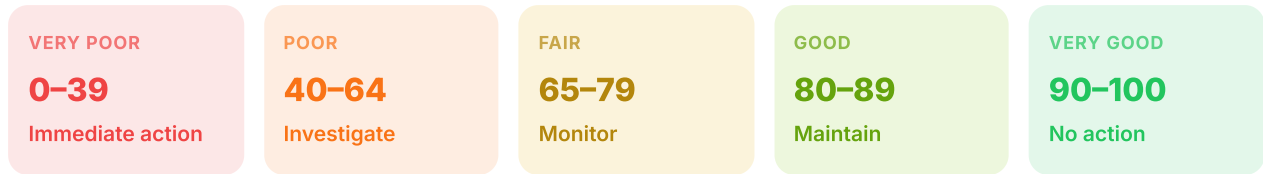


You'll see this exact banding in three places: the structure card, the Add Defect modal's live impact preview, and the Dashboard's BCI Score Distribution chart. twinView's condition panel is a bit coarser — it colors the score as just Critical, Fair, or Good, so treat it as a quick at-a-glance signal rather than the precise five-band read.

Where to find it: the structure card shows the current average; Previous Inspections shows CRIT and AV per inspection; twinView shows both, plus how they've changed since the last inspection.

06 — twinView — 3D Digital Twin

A 3D model of the structure, built from real span and condition data.

- 1 Pick a structure from the **Live Twin** selector at the top left
- 2 **Drag to orbit**, scroll to zoom — toggle **Structure**, **Sensors**, **Defects**, and **Works Required** layers on or off
- 3 The **Condition** card shows current BCI avg/crit; **Inspection Status** below it shows the trend against the previous inspection
- 4 Use the **Inspection History** timeline to jump to any past inspection and see the model as it was then

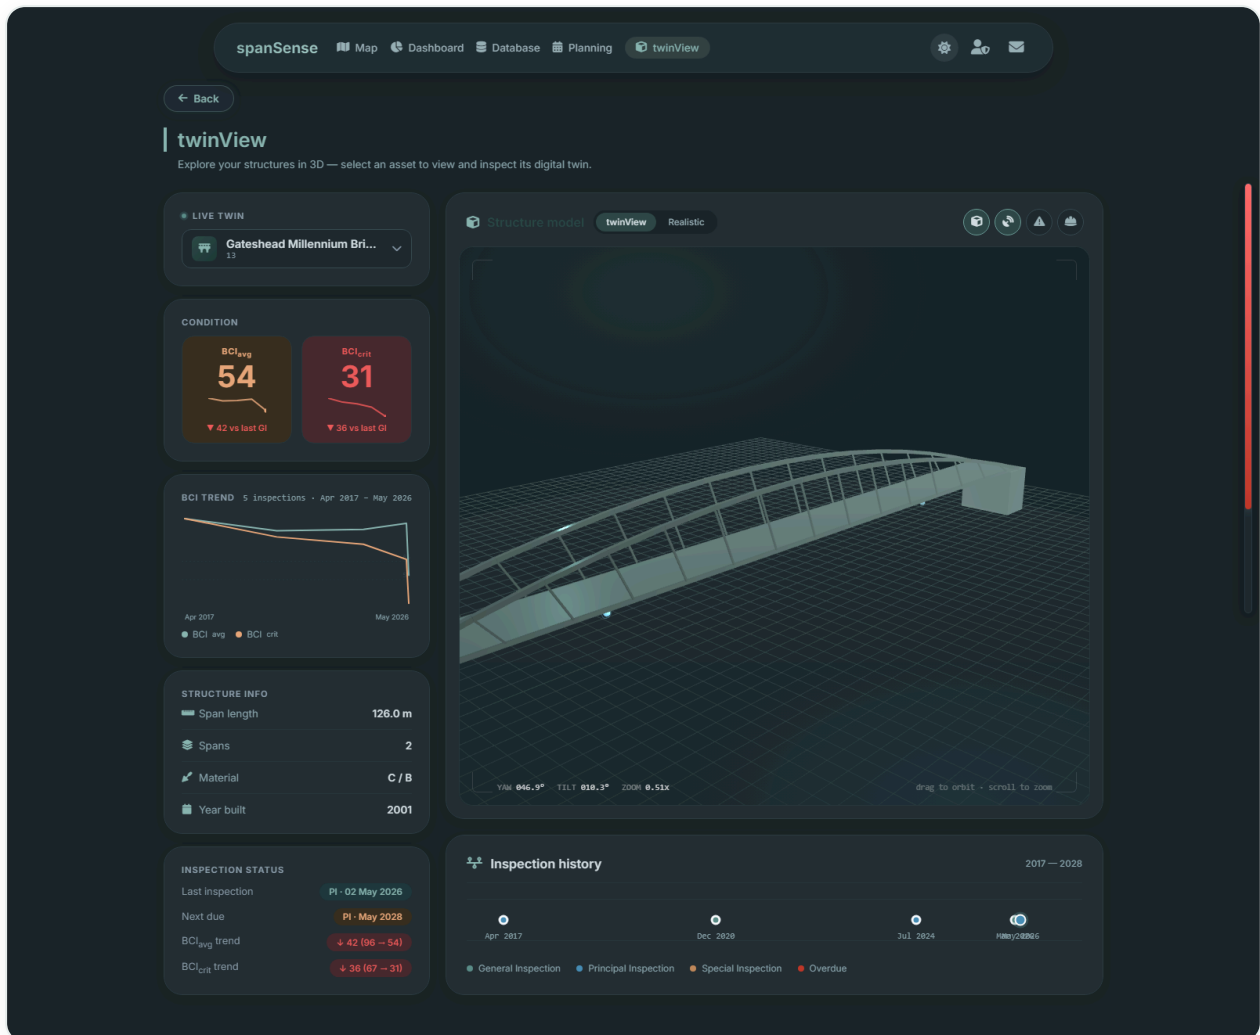


Orbit and zoom the 3D model; the condition trend is right there in Inspection Status

07 — Reports & Exporting Data

Generate a report from one inspection, or export your whole stock from Database.

- **Inspection PDF / BCI Proforma** — generated straight from a saved inspection, in Previous Inspections or the inspection itself
- **Structure records** — CSV, JSON, or XML from Database, filterable by structure type
- **Inspection records** — CSV, PDF, or XLSX, with a column picker so you only export what you need
- **Report files** — PDF or DOCX summary documents

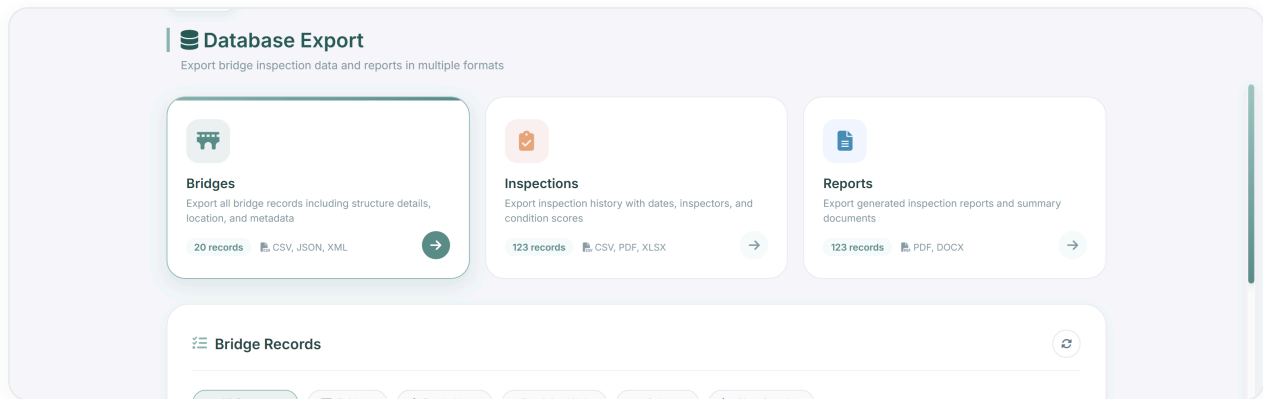

Choose a category, pick a format, and export — filters and a column picker are below


08 — Inspection Planning & Scheduling

Never miss the next inspection — and it's tailored per structure.

By default, every structure follows a 2-year General Inspection / 6-year Principal Inspection cycle, alternating GI, GI, PI. Planning shows this as a **Month** calendar, a **Year** grid, or a multi-year **Gantt** view — click any inspection chip in Month or Year view to open its schedule editor directly.

Editing a structure's schedule

- 1 Click the **pencil icon** next to any structure in the Gantt view (or an inspection chip in Month/Year view)
- 2 Set a custom **GI** or **PI frequency** in years if this structure needs a different cycle than the default
- 3 Or set a **next inspection due** date directly, if you need to move just the next one without changing the ongoing cycle
- 4 **Save** — every calendar view updates immediately

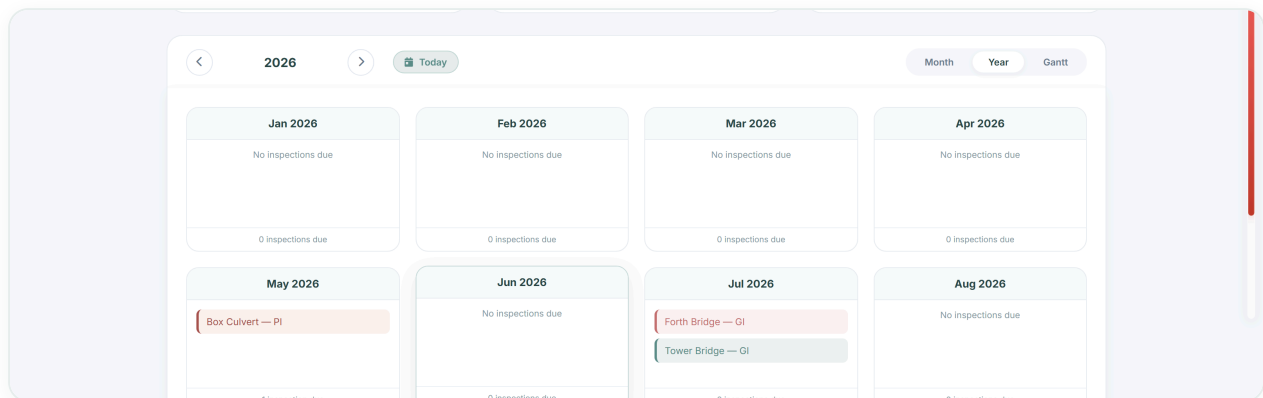


Year view — overdue inspections in red, upcoming in teal, principal inspections stand out separately

09 — Dashboard — Portfolio Overview

Your whole stock at a glance — every card is clickable.

- **Total Assets** and **High-Risk Structures** — live counts, click to jump to the relevant chart or table
- **BCI Avg / Crit** — portfolio-wide condition, computed from every structure's latest inspection
- **Pending Review** — engineers and admins only; click to jump straight to the review queue
- **Asset Inventory**, **Average BCI by Type**, and **BCI Score Distribution** charts below

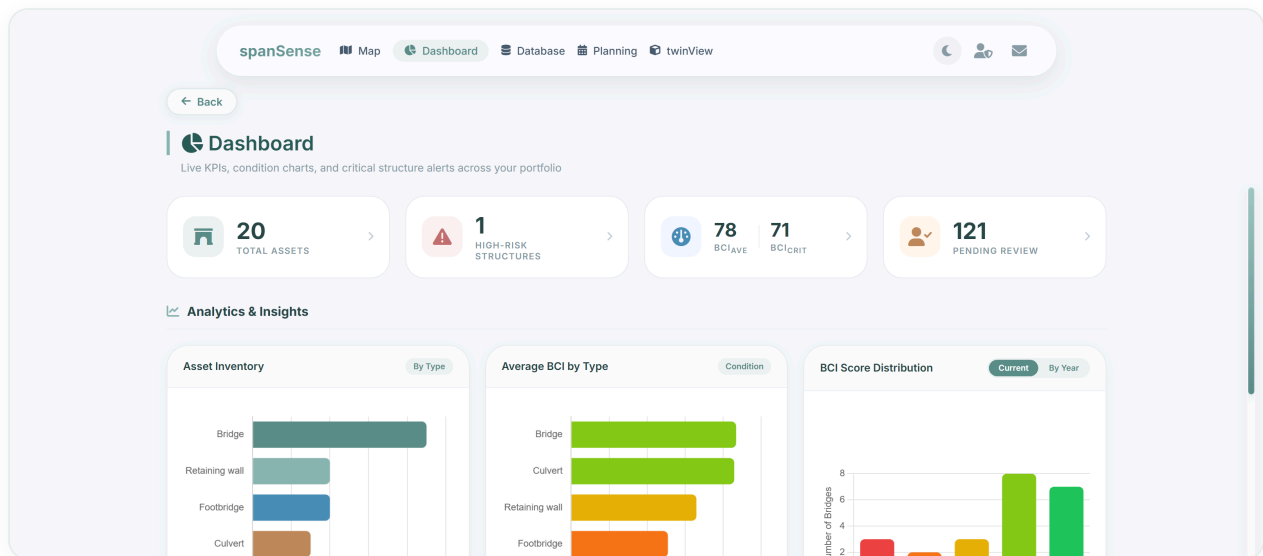

Four live metric cards and the Analytics & Insights charts below

If you're an engineer or admin

The **Pending Review** section further down lists every inspection awaiting a decision. Search, filter by type, or toggle "Critical only," then click **Review** to approve or reject with a comment — or open the full inspection first if you want to check the detail before deciding.

10 — Your Account & Preferences

Open Account from any navbar to update your details or preferences.

**Profile Details**
Name, email, and organisation details

**Security**
Change your password from here

**Night Mode**
Toggle from any navbar — your choice is remembered

**Greeting**
The Map greets you by name once you're signed in

**Account**
Manage your profile, security settings, and preferences



Monir Khan
Admin · joined January 2026
Admin Verified

Sign Out

Profile Details

First Name
Monir

Last Name
Khan

Email Address
m.khan@spansense.io

Security

Password
Last changed 3 months ago

Current password

Your real profile, role, and join date — loaded from your account, not a placeholder

Stuck on something this guide didn't cover? Use **Contact Us** from any navbar — someone will get back to you.