

To : SGRID-UGRID users

Subject : Manual to plot SGRID and/or UGRID map-files with QGIS

From : Jan Mooiman

Date : 2026-08-11

Contents

1	Release Notes	2
2	Menu bar	2
2.1	File	2
2.1.1	Open GRID	2
2.1.2	Open HisCF	2
2.2	Output	2
2.2.1	Show map output	3
2.2.2	PlotCFTS	4
2.3	Map output settings	5
2.4	Help	6
2.4.1	User Manual	6
2.4.2	About	7
3	QGIS panels	7
3.1	Layer panel	7
3.2	Log messages panel	7
4	Examples figures	8
4.1	Example scalar field	8
4.2	Example vector field	8
5	Source	9

1 Release Notes

Table 1: Table with green header

	Release	Description
1	0.30.00	- Upgrade to QGIS4.

2 Menu bar



Figure 1: The menu bar of the SGRID_UGRID plugin

2.1 File




Figure 2: Menu → File

2.1.1 Open GRID

When selecting this option, you can choose netCDF files which meet the SGRID (no padding) or UGRID standard. Example files are the mesh- and map-files of the D-Flow FM program (<*_net.nc>, <*_map.nc>). The map-file contain time-series.

2.1.2 Open HisCF

When selecting this option, you can choose netCDF files that meet the Climate and Forecast (CF) history file standard (Feature type "timeSeries"). Example files are the history output files of the program D-Flow FM (<*_his.nc>).

2.2 Output





Figure 3: Menu → Output

2.2.1 Show map output

After selecting *Output*→*Show map output* the window **Map Output Animation** will open, see as example [Figure 4](#).

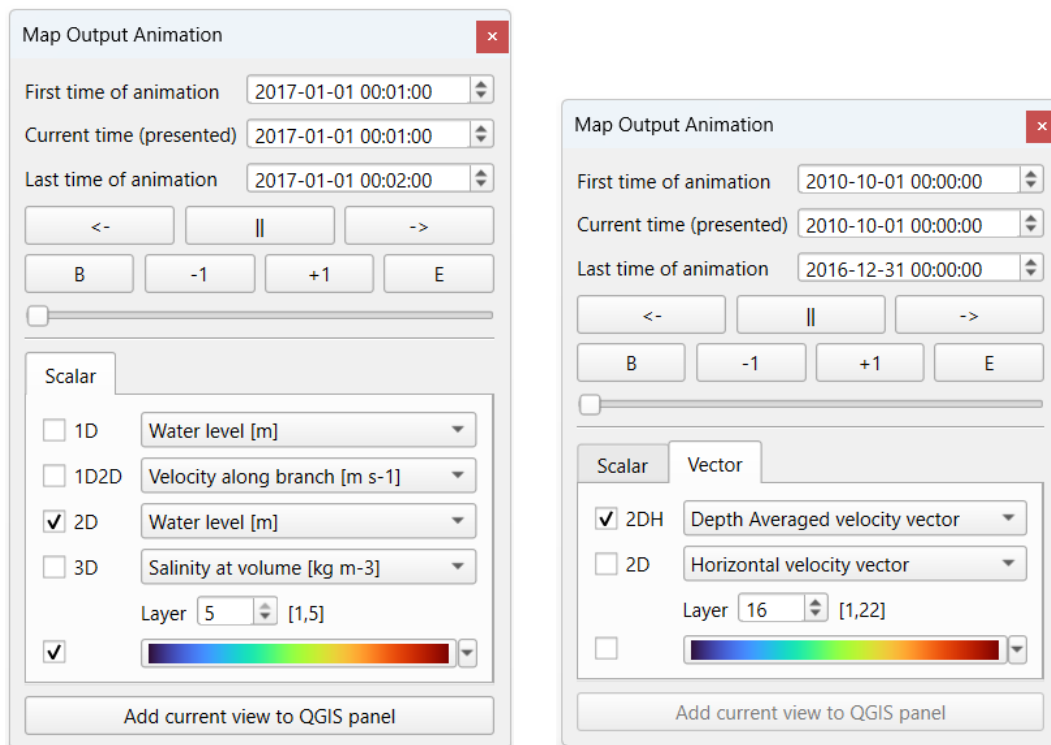

(a) Layout scalar quantities.

(b) Layout vector quantities.

Figure 4: Map Output Animation window for scalars and vector.

After pressing the **right** mouse button in this window, the window **Map Output Settings** will appear (see [section 2.3](#) and [Figure 8](#)).

The colorramp can be changed by using the QGIS standard operations on color-ramps.

Add current view to QGIS layer panel

This button is only enabled for scalar quantities.

After pressing the button *Add current view to QGIS panel* a window **Add current view to QGIS layer panel** will appear. In this window you can specify the layer name which will be presented in the QGIS layer panel, see [Figure 5](#)

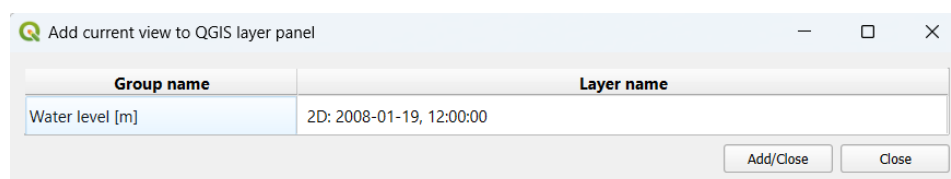


Figure 5: Window Add current view to QGIS layer panel

After pressing the button *Add* the layer will be added to the layer panel. Pressing the *Quit* button will close the window.

2.2.2 PlotCFTS

After selecting *Output*→*PlotCFTS* the program PlotCFTS will start, see as example [Figure 6](#). Select from the menubar of the PlotCFTS program menu option *Help* →*User Manual* to open the user manual for the program PlotCFTS.

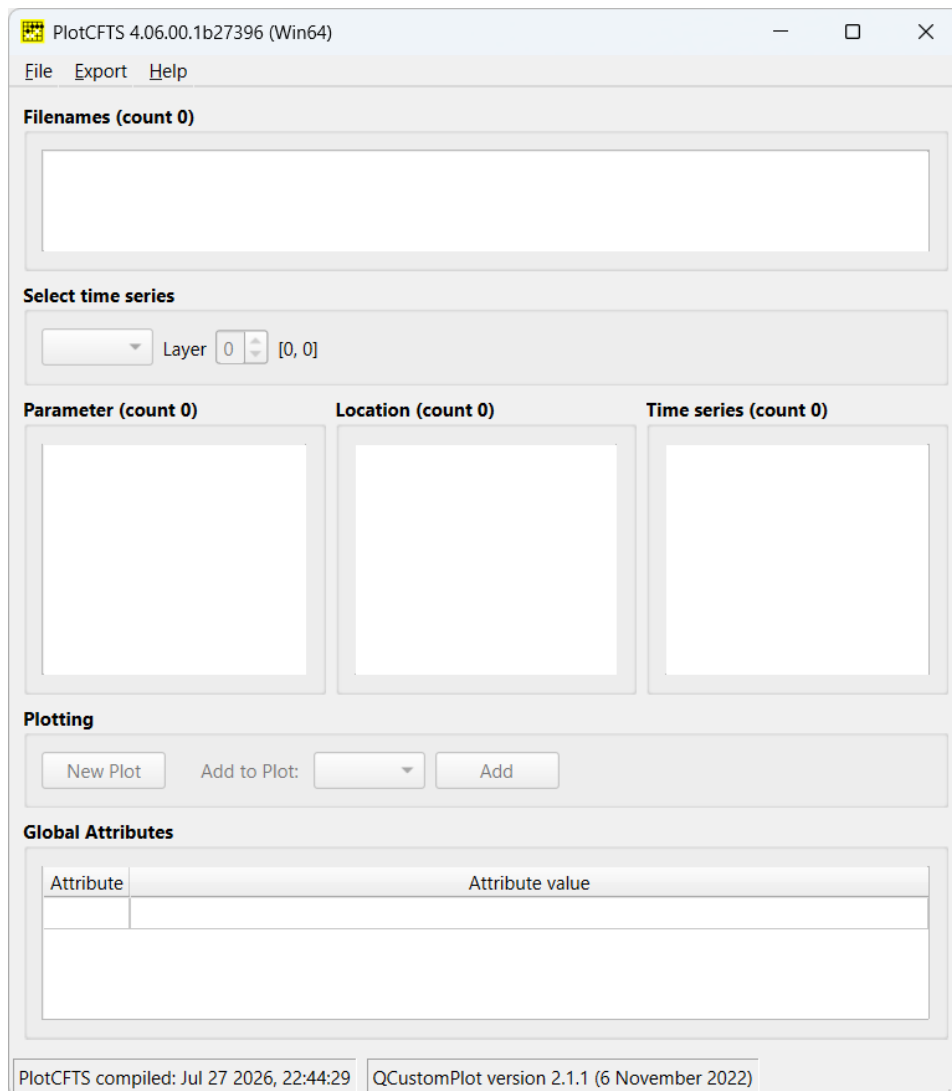


Figure 6: Main window of the PlotCFTS program.

2.3 Map output settings

Settings for the presentation of scalars and vectors.




Figure 7: Menu → Settings

When selecting this option some settings for the presentation of the variables via the window **Map Output Animation** can be set. This window will also pop up when using the right mouse button within the window **Map Output Animation**.

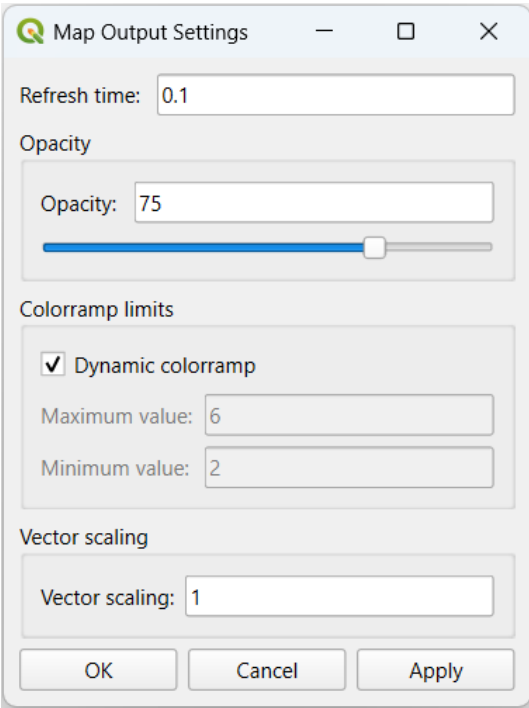


Figure 8: Window **Map Output Settings**

The following quantities can be specified in the window presented by [Figure 8](#):

Refresh rate	Specify the refresh rate, in seconds, of the images during animation.
Opacity	
Opacity	Specify the opacity of the iso patches for the scalars by a integer number [%] or by the slider, the range of the permitted values is: 0 - 100 [%]. Zero means fully transparent.
Colormap limits	
its	

Dynamic color-ramp

checked

Colorramp limits are determined by the minimum and maximum value of the scalar. These values reach their extreme values after all timestep are visualised.

unchecked

Maximum value: specify the maximum value for the scalar.

Minimum value: specify the minimum value for the scalar.

Vector scaling

Vector scaling

The vector of length 1 (ex. 1 [m/s]) is scaled with this factor. The drawing length is based on the averaged cell size.

2.4 Help




Figure 9: Menu → Help

2.4.1 User Manual

Shows the user manual

Manual to plot SGRID and/or UGRID map-files with QGIS

To : SGRID-UGRID users

Subject: Manual to plot SGRID and/or UGRID map-files with QGIS

From : Jan Mooiman

Date : 2026-08-11

Figure 10: SGRID_UGRID user manual

2.4.2 About

Shows the about box.

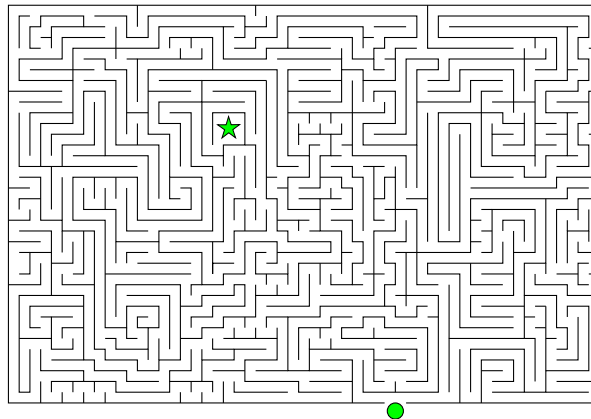


Figure 11: About box

3 QGIS panels

Some QGIS panels are shown after reading a netCDF map-file.

3.1 Layer panel

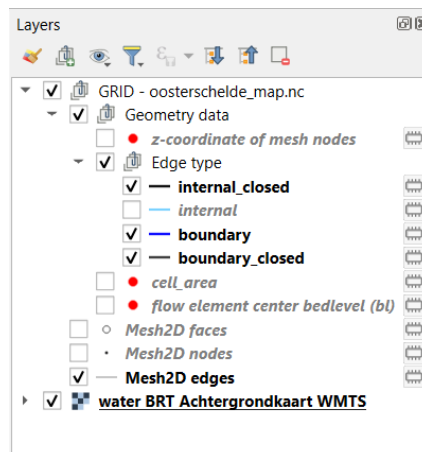


Figure 12: The QGIS layer panel after reading a netCDF map-file.

3.2 Log messages panel

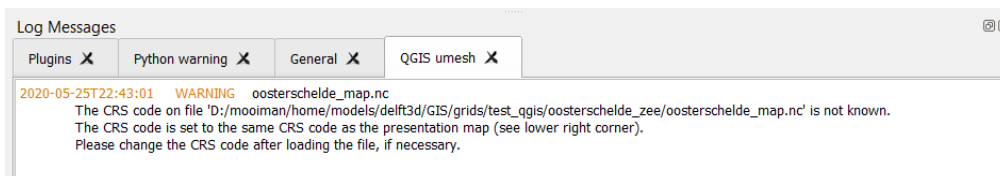


Figure 13: The QGIS layer panel after reading a netCDF map-file.

4 Examples figures

Examples are given for a scalar field (Depth averaged velocity magnitude) and the corresponding vector field (arrow and direction).

4.1 Example scalar field

These fields are given on the output files of D-Flow FM.

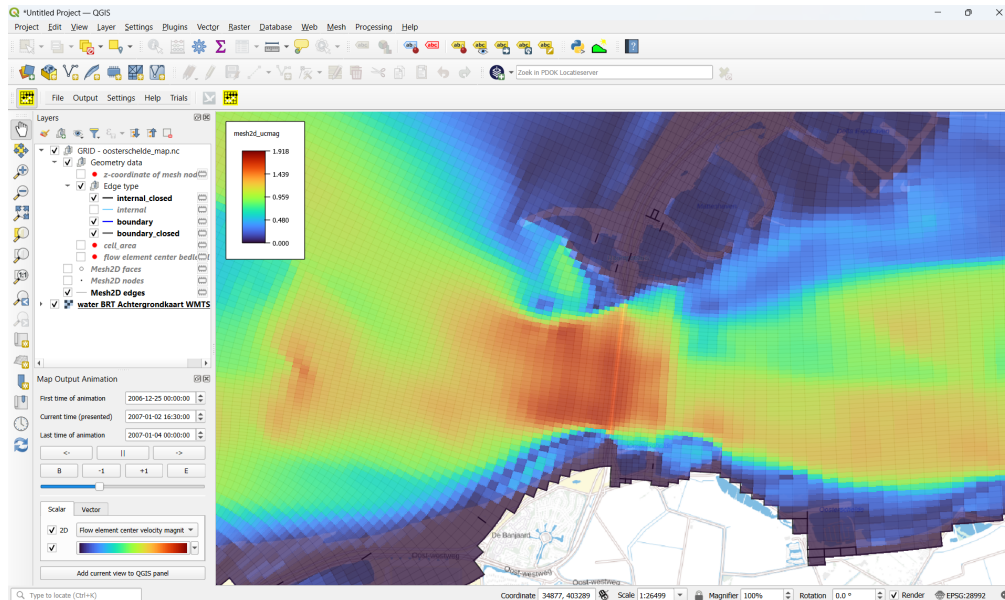


Figure 14: Depth averaged velocity, magnitude.

4.2 Example vector field

These fields are not given on the output files of D-Flow FM. So the postprocessing program (SGRID_UGRID) need to compute the quantities of the vector field, like vector arrows and vector direction.

The "velocity magnitude" is given on the output file of D-Flow FM and thus computed by D-Flow FM.

The quantity "velocity magnitude" is therefor available in the tab *Scalar*

Manual to plot SGRID and/or UGRID map-files with QGIS

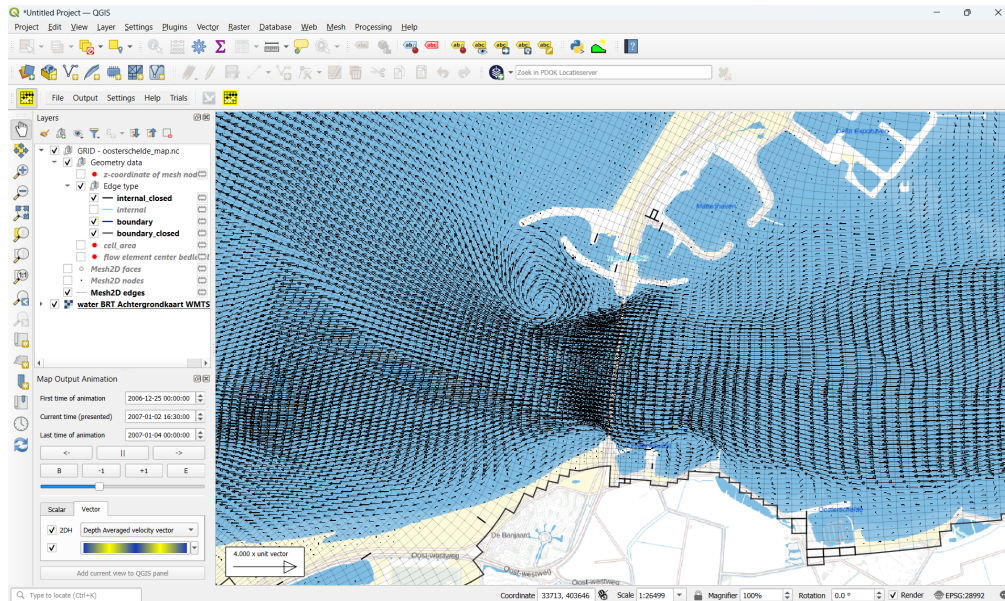


Figure 15: Depth averaged velocity, vector.

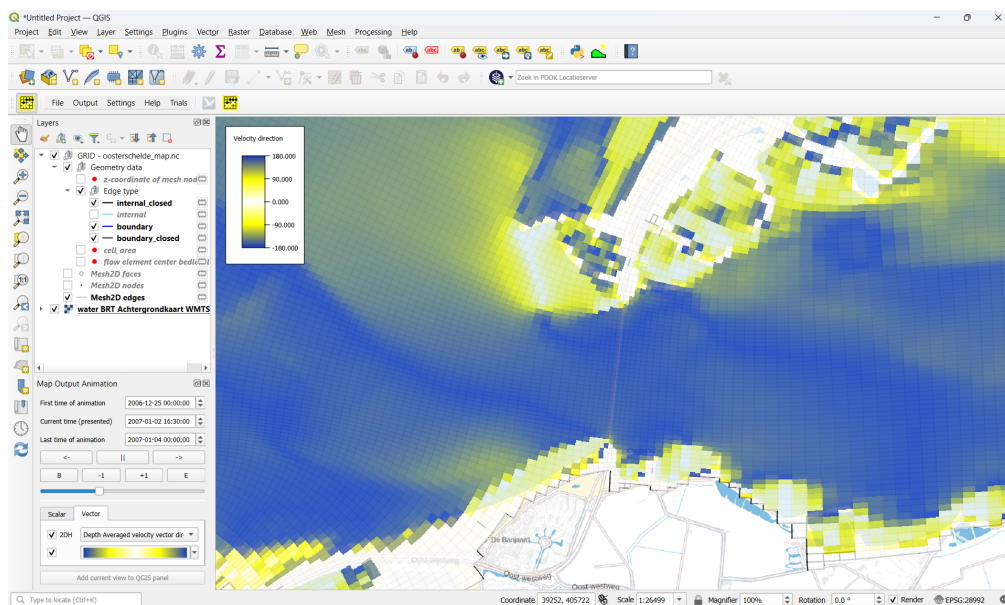


Figure 16: Depth averaged velocity, direction.

5 Source

The source code is available on GitHub:

https://github.com/mooiman/qgis_sgrid_ugrid