


Tetra Routine Vertiv

Send results to Orna Farrell <orna.farrell@eir.ie>


Call SMC to let them know you are about to open the Tetra cabinet.
1800 407 000 →
(1) Front Office →
(3) Managed Services

Switch off VPN and Wi-Fi (offline) (clear the cache)



Open Network Settings: ncpa.cp1
Change IP address to: 192.168.100.99
Admin password is needed for this change.

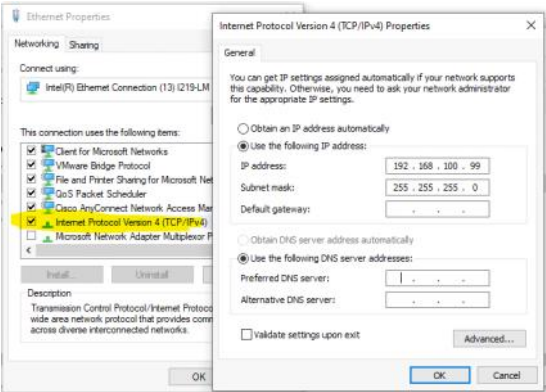

Connect CAT5 cable to the laptop and Vertiv

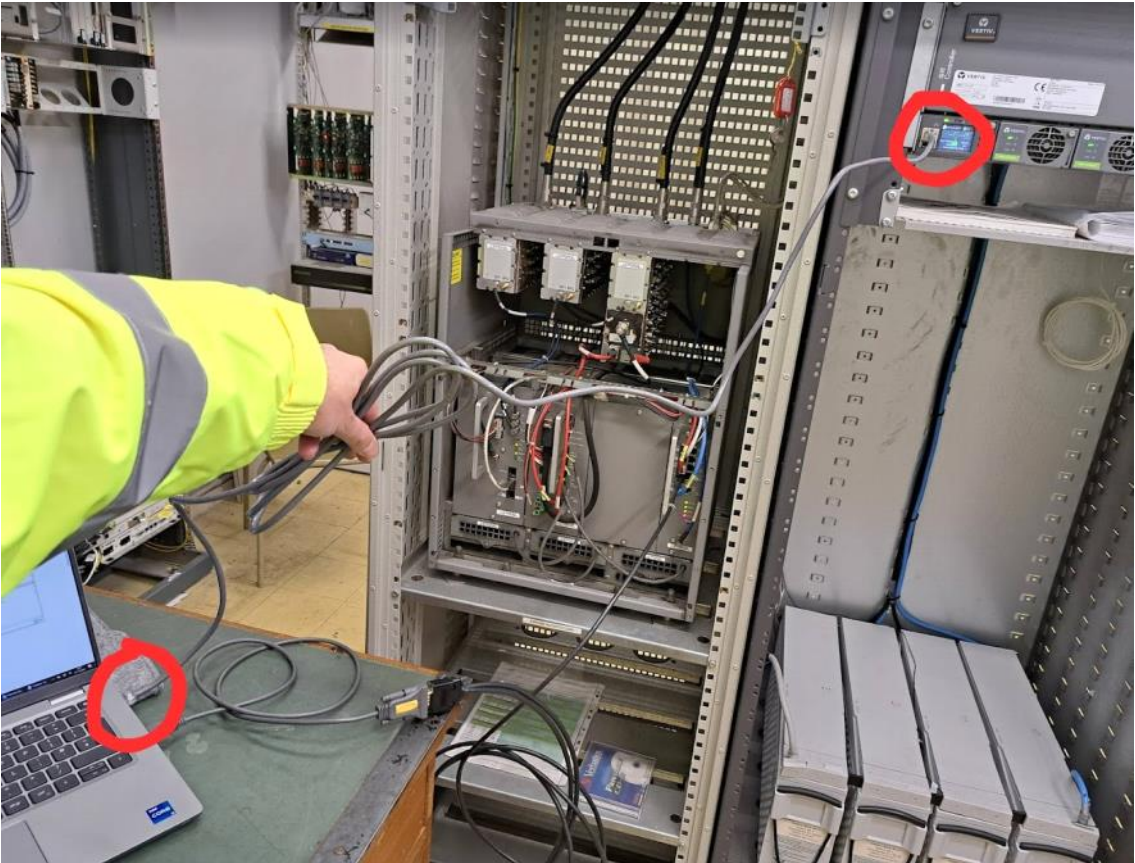


Connect the serial to USB cable + black "Tetra" cable to the USB on the laptop and the other end to the Site Controller → Service port

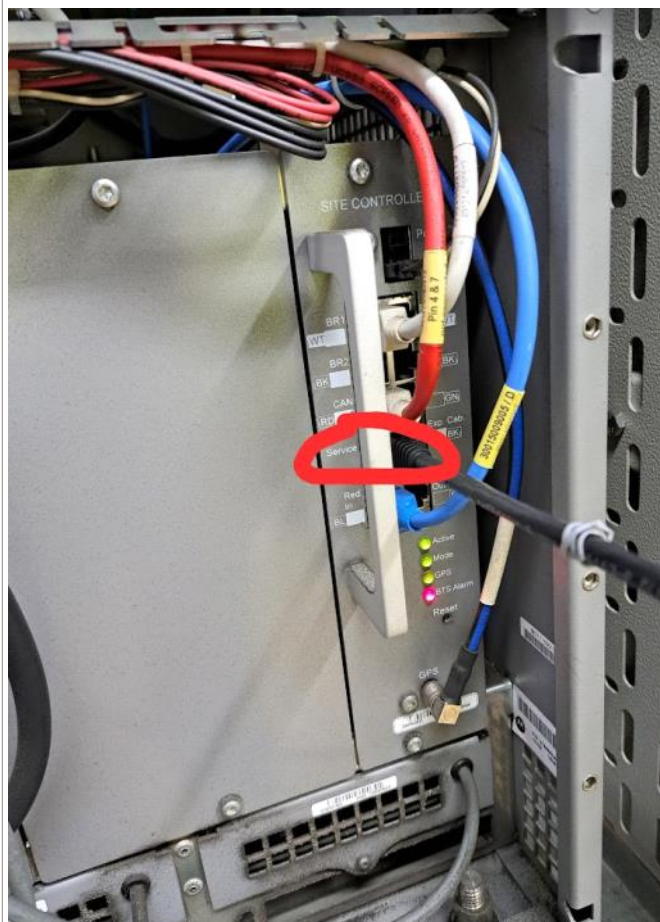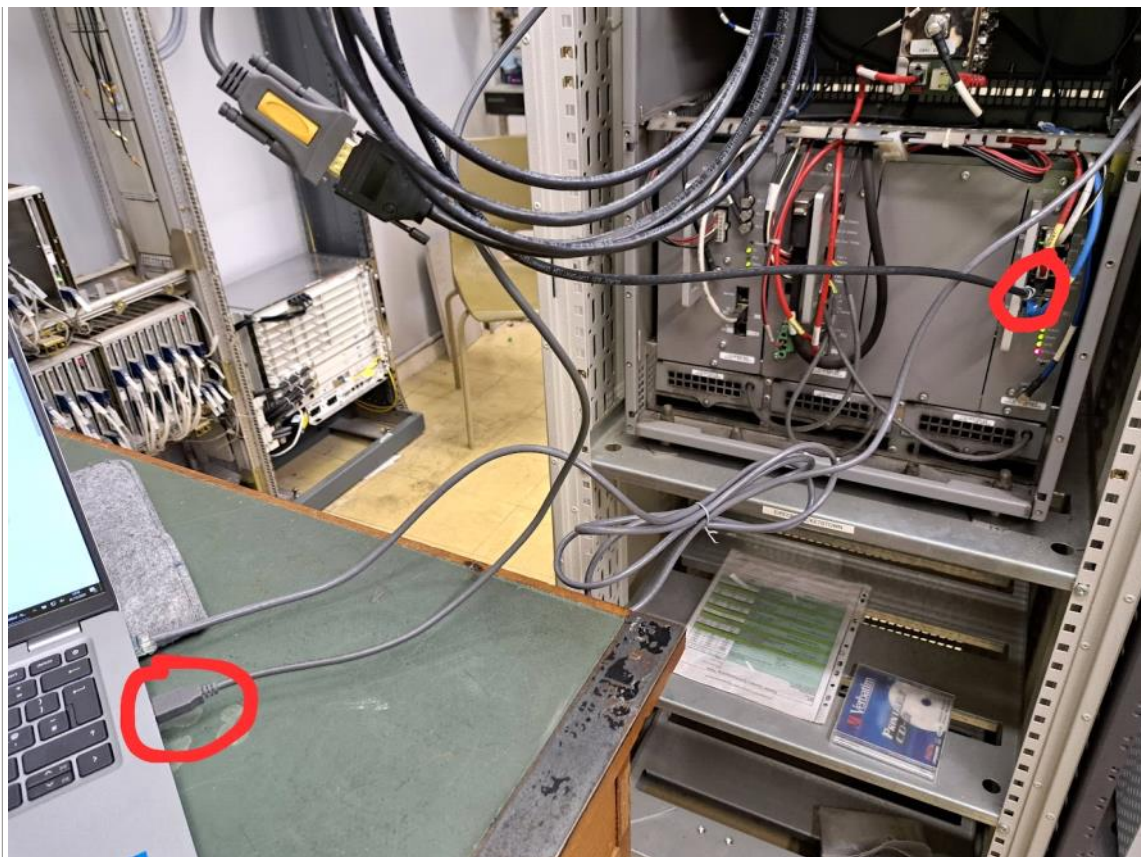

Login to the
<http://192.168.100.100>

Login: admin
Password: 640275

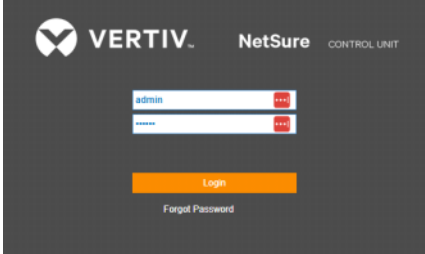


The flow of the electricity before discharge.



Check if the battery capacity is correct
Settings → Quick Settings → Battery1 Rated Capacity

For 1 set of Batteries is 100 Ah
For 2 sets of Batteries is 200 Ah

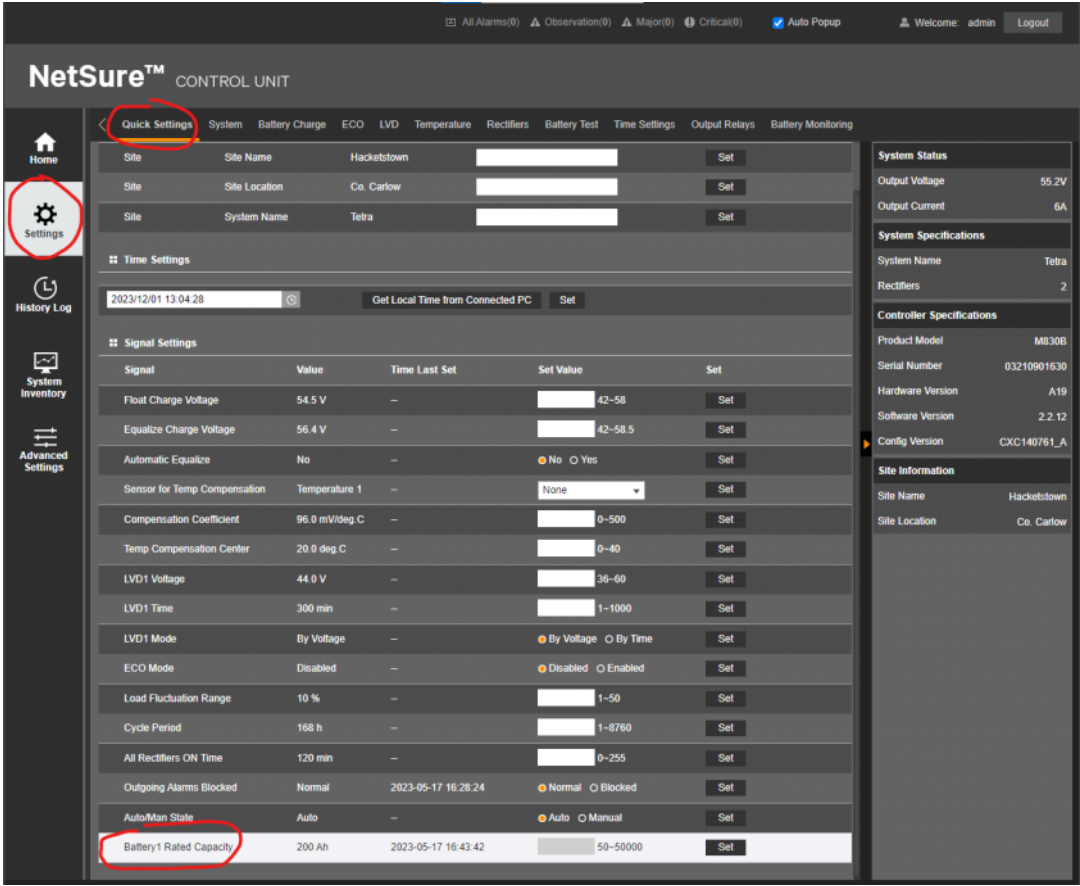

Change the Battery Current Limit to: 0.15 C10

Settings → Battery Charge → Battery Current Limit

Home

Settings

History Log

System Inventory

Advanced Settings

NetSure™

CONTROL UNIT

Quick Settings

System

Battery Charge

ECO

LVD

Temperature

Rectifiers

Battery Test

Time Settings

Output Relays

Battery Monitoring

Battery Charge

Signal	Value	Time Last Set	Set Value	Set
Number of Battery Shunts	1	--	0	Set
Very High Battery Temp Action	Lower Voltage	--	☒ Disabled ☐ Lower Voltage	Set
Very High Temp Voltage	49.0 V	--	45-55	Set
Low Capacity Level	75 %	--	25-100	Set
Float Charge Voltage	54.5 V	--	42-58	Set
Equalize Charge Voltage	56.4 V	--	42-58.5	Set
Battery Current Limit	0.25 C10	--	0.1-1	Set
Over Current Setpoint	1.00 C10	--	0.3-1	Set
Automatic Equalize	No	--	☒ No ☐ Yes	Set
Equalize Start Current	0.060 C10	--	0.04-0.08	Set
Equalize Start Capacity	80.0 %	--	0-99	Set

Change the Block Voltage Diff(Mid) to: 0.5 V

Settings → Battery Monitoring → Block Voltage Diff(Mid)

Home

Settings

History Log

System Inventory

Advanced Settings

NetSure™

CONTROL UNIT

Quick Settings

System

Battery Charge

ECO

LVD

Temperature

Rectifiers

Battery Test

Time Settings

Output Relays

Battery Monitoring

Battery Monitoring

Signal	Value	Time Last Set	Set Value	Set
Voltage Type	Mid point	--	48(Block4)	Set
Number of Used Blocks	2	--	0-8	Set
Block Voltage Diff(Mid)	0.20 V	--	0.5 0-4	Set

Check the setting in the:

Settings → Battery Test

End Test Voltage: 46.4 V
End Test Time: 63 min
End Test Capacity: 30 %
Record Threshold: 0.05 V

Home

Settings

History Log

System Inventory

Advanced Settings

NetSure™

CONTROL UNIT

Quick Settings

System

Battery Charge

ECO

LVD

Temperature

Rectifiers

Battery Test

Time Settings

Output Relays

Battery Monitoring

Battery Test

Signal	Value	Time Last Set	Set Value	Set
AC Fail Test	Disabled	--	☒ Disabled ☐ Enabled	Set
Constant Current Test	Disabled	--	☒ Disabled ☐ Enabled	Set
Constant Current Test Current	9999.0 A	--	1-9999	Set
Test Voltage Level	45.0 V	--	43-53.5	Set
End Test Voltage	46.4 V	--	43.2-53.5	Set
End Test Time	60 min	--	10-1440	Set
End Test Capacity	30.0 %	--	0-100	Set
Record Threshold	0.050 V	--	0.05-1	Set
No. of Scheduled Tests per Year	0	--	0-12	Set
Planned Test 1	01-01 00	--	01-01 00 01-01 00-12-31 23	Set

Take the battery reading before the test:

Start the test

Settings → Battery Test → Battery Test Control

Choose **Start** and click **Set**

Home

Settings

History Log

System Inventory

Advanced Settings

NetSure™ CONTROL UNIT

Quick Settings

System

Battery Charge

ECO

LVD

Temperature

Rectifiers

Battery Test

Time Settings

Output Relays

Battery Monitoring

Battery Test

Signal	Value	Time Last Set	Set Value	Set
AC Fail Test	Disabled	—	☒ Disabled ☐ Enabled	Set
Constant Current Test	Disabled	—	☒ Disabled ☐ Enabled	Set
Constant Current Test Current	9999.0 A	—	1-9999	Set
Test Voltage Level	45.0 V	—	43-53.5	Set
End Test Voltage	46.4 V	—	43.2-53.5	Set
End Test Time	63 min	2023-12-01 14:49:23	10-1440	Set
End Test Capacity	30.0 %	—	0-100	Set
Record Threshold	0.050 V	—	0.05-1	Set
No. of Scheduled Tests per Year	0	—	0-12	Set
Planned Test 1	01-01 00	—	01-01 00 01-01 00-12-31 23	Set
Planned Test 2	01-01 00	—	01-01 00 01-01 00-12-31 23	Set
Planned Test 3	01-01 00	—	01-01 00 01-01 00-12-31 23	Set
Planned Test 4	01-01 00	—	01-01 00 01-01 00-12-31 23	Set
Planned Test 5	01-01 00	—	01-01 00 01-01 00-12-31 23	Set
Planned Test 6	01-01 00	—	01-01 00 01-01 00-12-31 23	Set
Planned Test 7	01-01 00	—	01-01 00 01-01 00-12-31 23	Set
Planned Test 8	01-01 00	—	01-01 00 01-01 00-12-31 23	Set
Planned Test 9	01-01 00	—	01-01 00 01-01 00-12-31 23	Set
Planned Test 10	01-01 00	—	01-01 00 01-01 00-12-31 23	Set
Planned Test 11	01-01 00	—	01-01 00 01-01 00-12-31 23	Set
Planned Test 12	01-01 00	—	01-01 00 01-01 00-12-31 23	Set
Lowest Capacity for Battery Test	99 %	—	70-100	Set
Battery Test Control	Stop	2023-10-05 14:20:03	☐ Stop ☒ Start	Set

2 observation alarms will show up:

1. Battery Discharge
2. Manual Test

Also the electricity flow has change:
- Coming from Mains
- Coming from the batteries

Home

Settings

History Log

System Inventory

Advanced

NetSure™ CONTROL UNIT

Power System

Details

Efficiency Tracker

Index

Alarm Level

Relative Device

Signal Name

Sample Time

1

OA ▲

Battery Group

Battery Discharge

2023/12/04 14:10:35

2

OA ▲

Battery Group

Manual Test

2023/12/04 14:09:58

Mains

Rectifier

DC

0A

0KW

6.2A

-6A

Output Current: 6A

System Specifications

System Name: Tetra

Rectifiers: 2

Controller Specifications

Product Model: M830B

Serial Number: 03210901630

Hardware Version: A19

Software Version: 2.2.12

Config Version: CXC140761_A

Take the battery readings:

Battery 1

Min / no of battery	Temperature	1	2	3	4
0 min					
5 min					
10 min					
20 min					
30 min					
40 min					
50 min					
60 min					

Battery 2

Min / no of battery	Tempoerature	1	2	3	4
0 min					
5 min					
10 min					
20 min					
30 min					
40 min					
50 min					
60 min					

After the test the battery will start charging again.
The 2 alarms will disappear too.




C:\ProgramData\Microsoft\Windows\Start Menu\Programs\Dimetra Service Software

"BTS Service Software"

MTS2
Sys*mgr234%^

admin
factory

status eas -p9

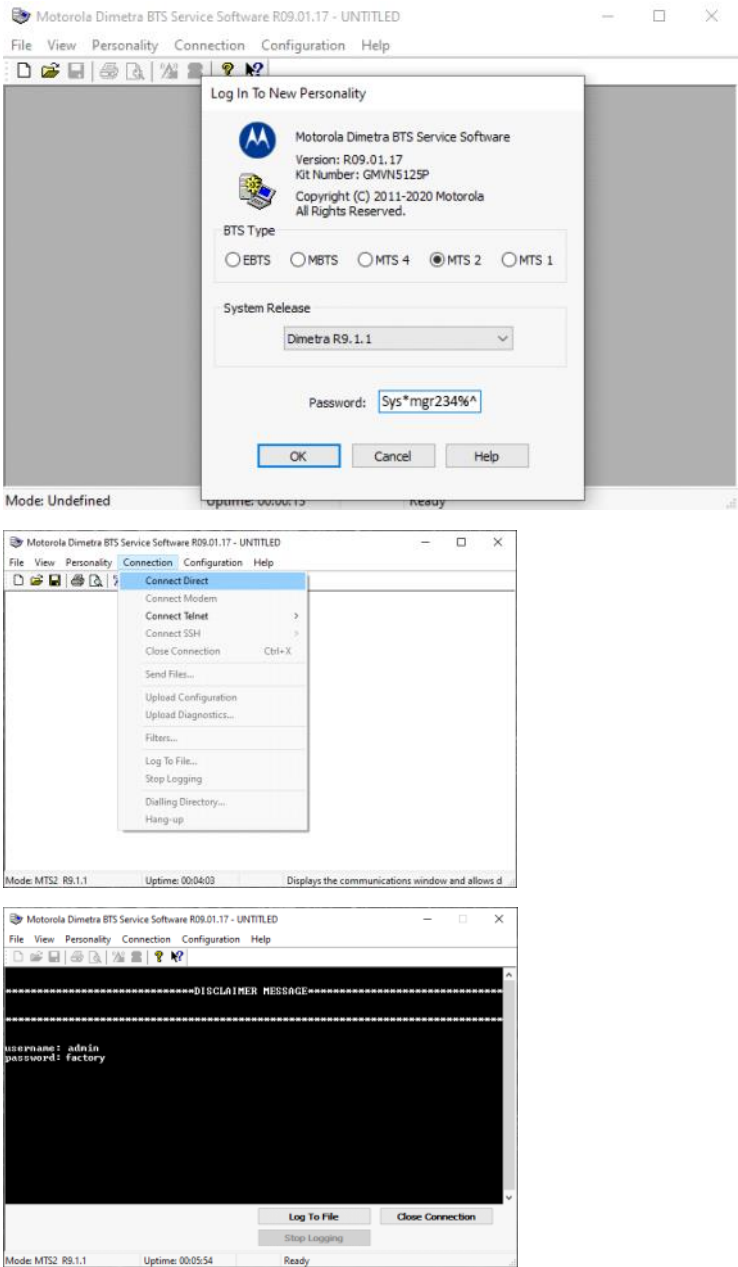


Faults Mapping



Critical: E1B1 - DO5



Under Voltage 1: E1B1 - DO4
Under Voltage 2: E1B1 - DO4
Mains Failure: E1B1 - DO1

Temperature: E1B1 - DO3

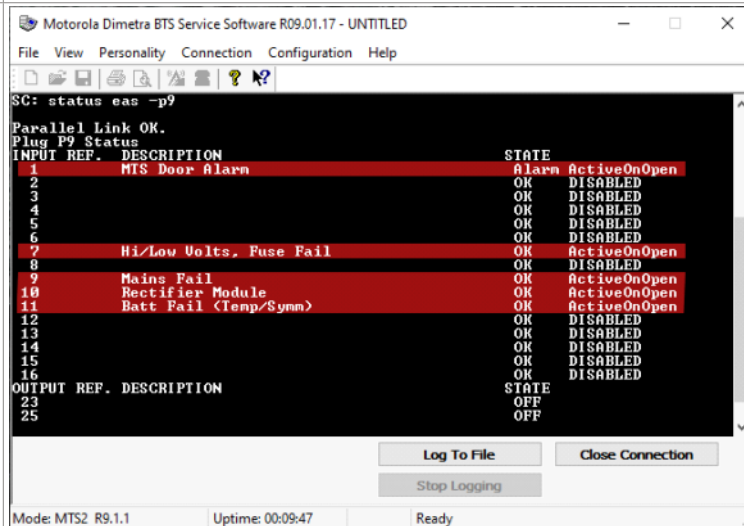




status eas -p9

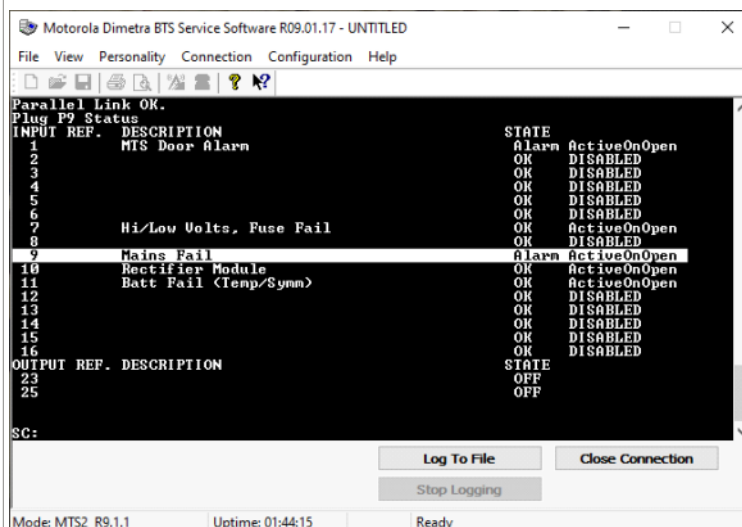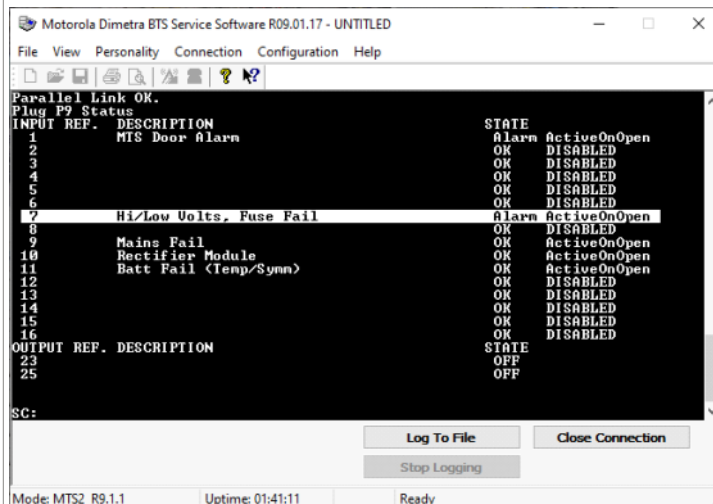

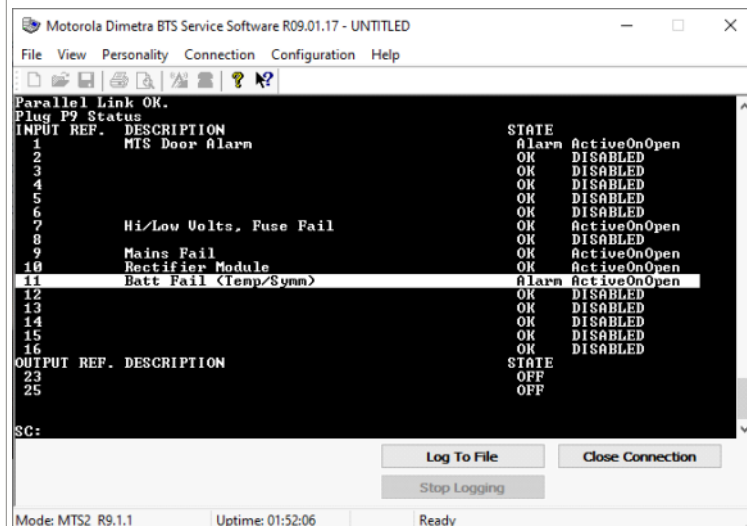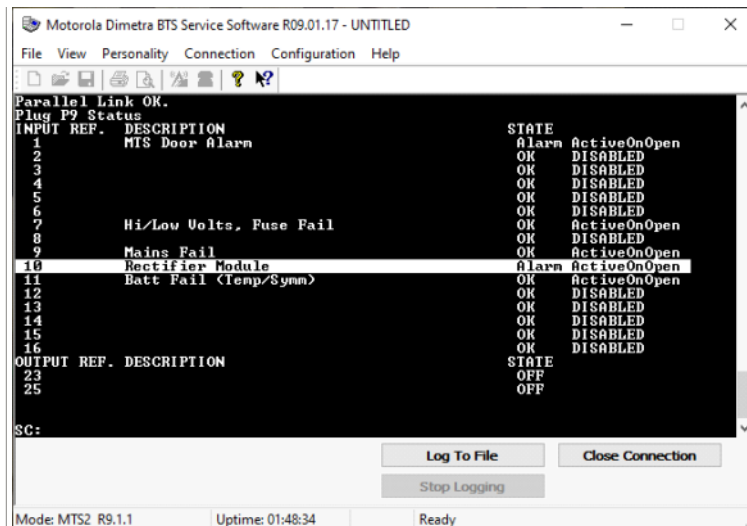


Alarms Test

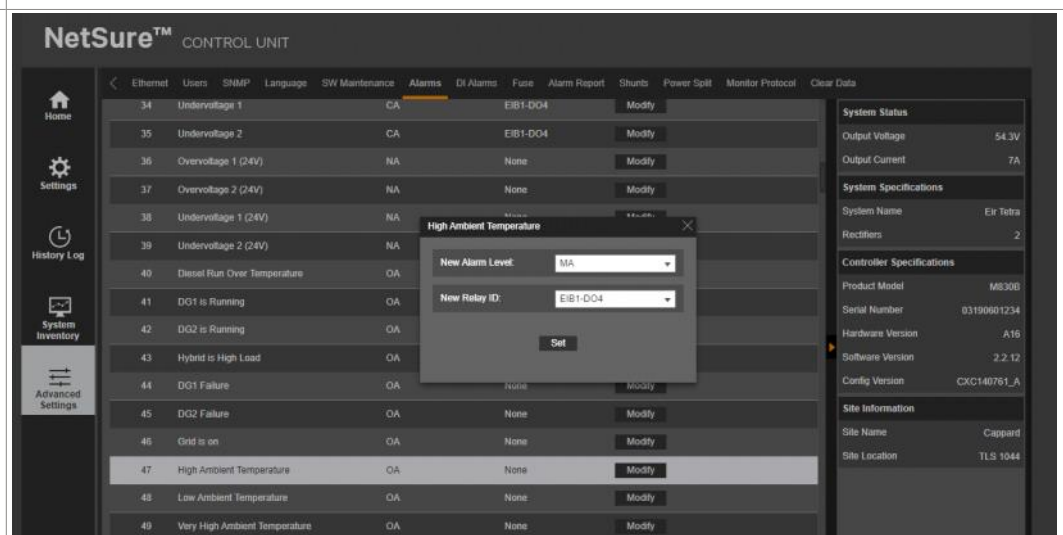

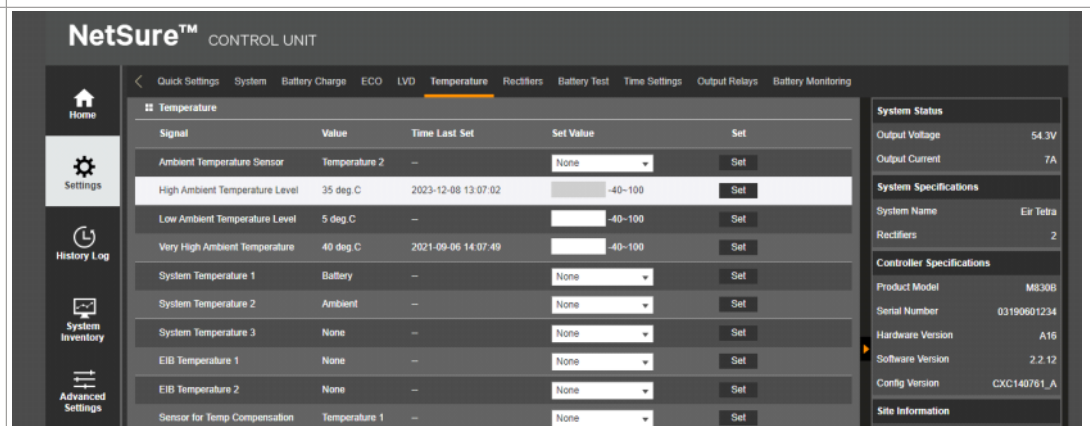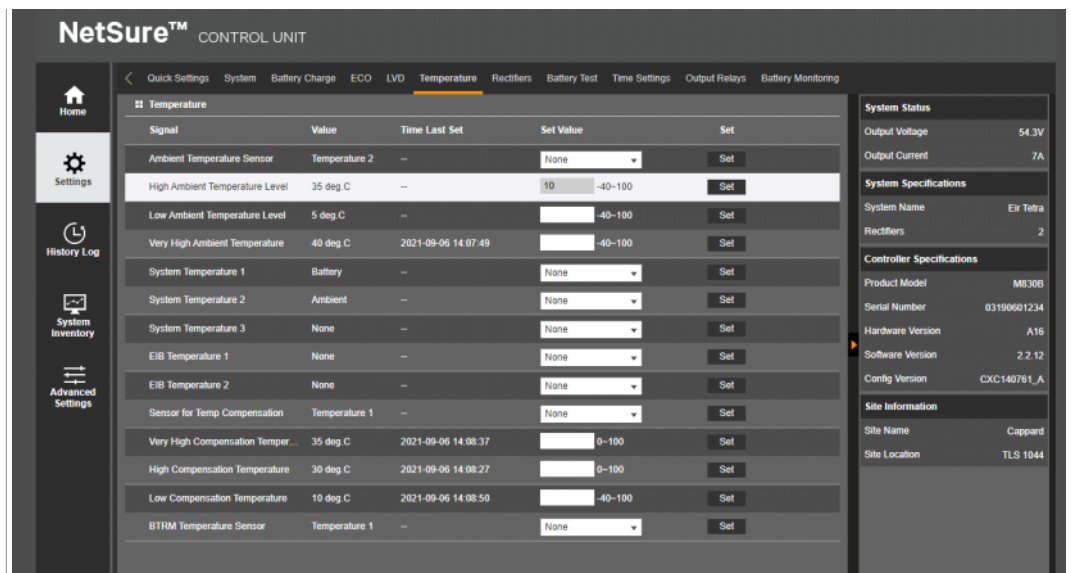

Take down all serial numbers:

Send results to Orna Farrell
[<orna.farrell@eir.ie>](mailto:orna.farrell@eir.ie)

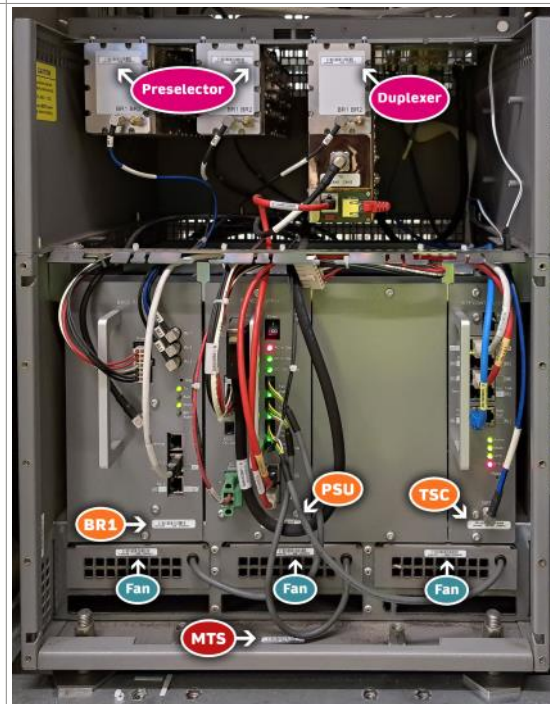

Call SMC to let them know you are closed the Tetra cabinet.
1800 407 000 →
(1) Front Office →
(3) Managed Services