
Inverter Install: The Whole Picture

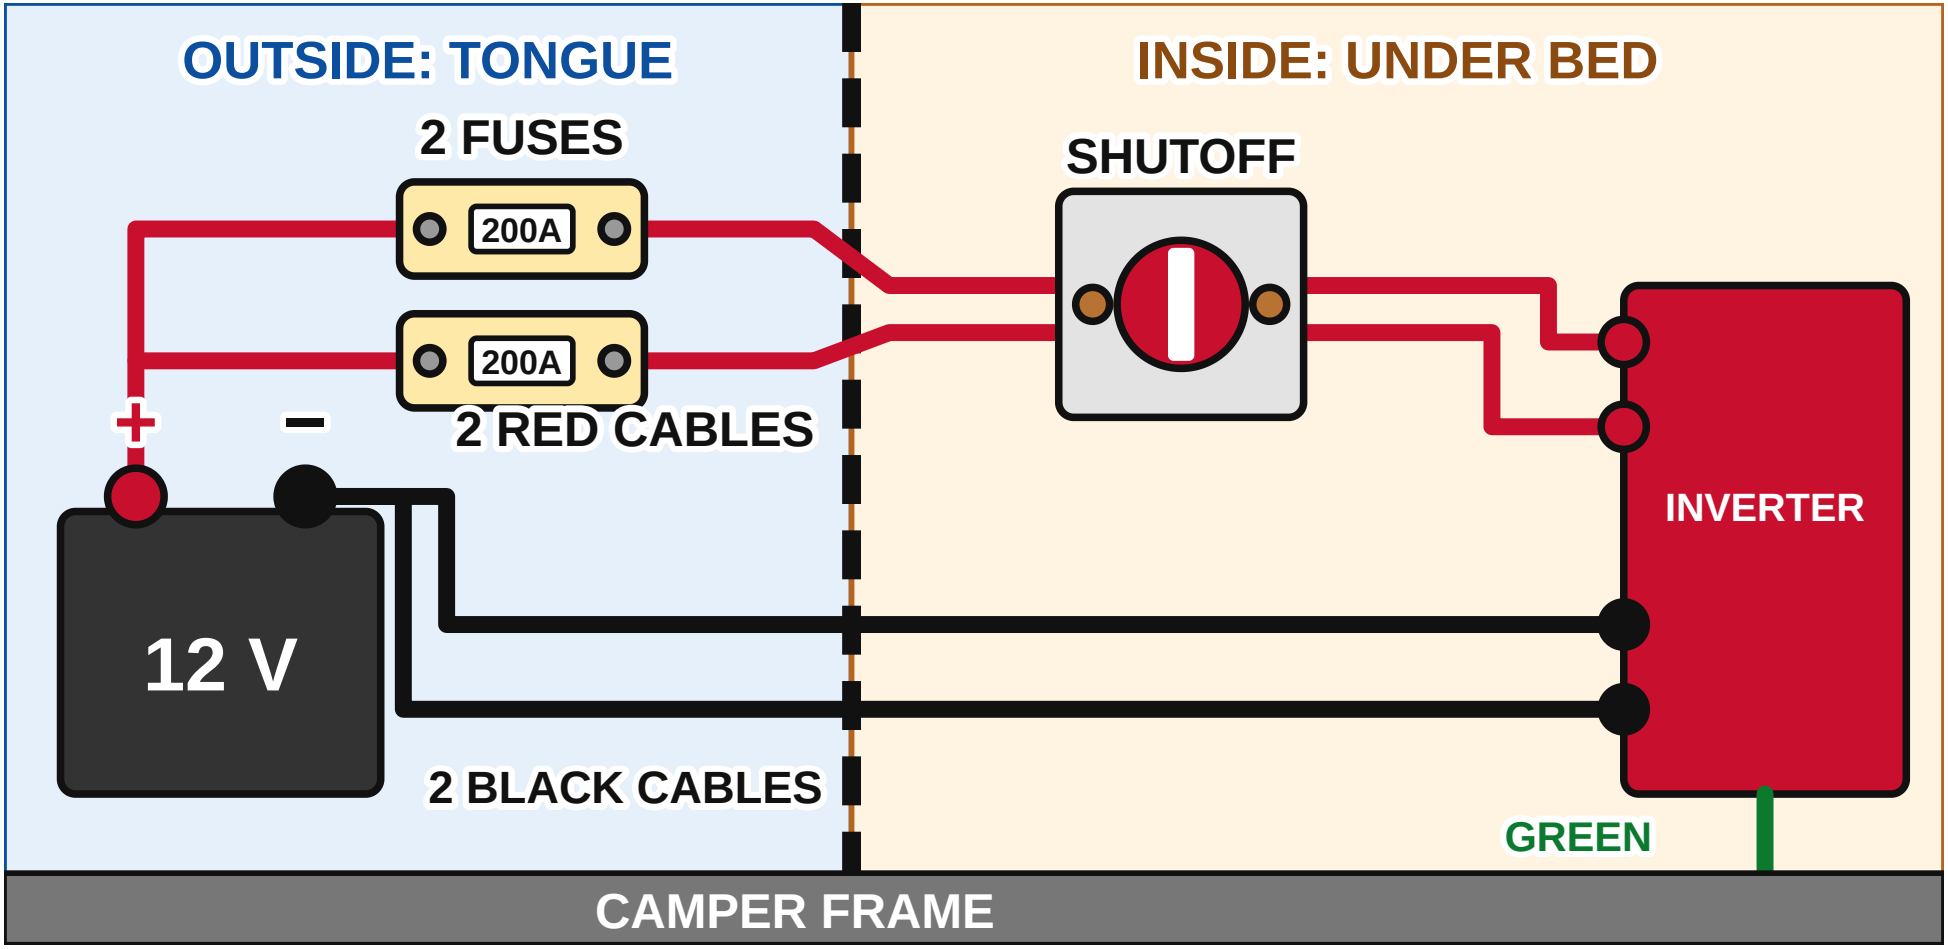

Traveller 3000 W • 2 AWG cables • 100 Ah battery. For outage backup.

Never Do These

NEVER plug the camper's shore cord into the inverter.

NEVER wire it to the camper's breaker panel or plug it into a wall outlet.

NEVER let it run with blocked vents or things packed around it.

NEVER connect the battery before the fuses are ready. Fuses go in **last**.

NEVER count on it to run the roof A/C. Don't rely on it to keep Daisy safe.


Parts to Buy: Power



2

ANL fuse holder with cover


Blue Sea 5005



2 + 2 spares

200 A ANL fuse

Blue Sea 5129 or similar

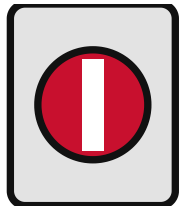

1

300 A shutoff switch


Blue Sea 6006



4 feet

Red 2 AWG copper cable

For the 4 short jumpers

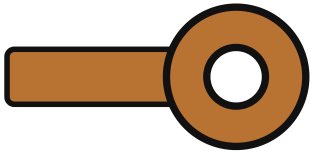

Up to 16

2 AWG copper ring terminals

Measure bolts first: see next page




1 run

Green 6 AWG wire + 2 ring ends

Inverter to frame


Parts to Buy: Finishing

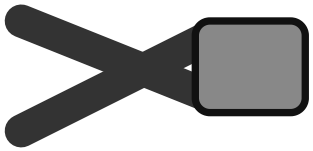

1

Lug crimper + glue-lined heat shrink

Or have a shop crimp them

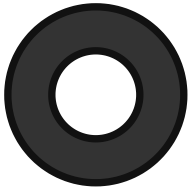

For 4 cables

Sealed grommets + sealant

Keeps out water and propane



About 10

Cable clamps

Stop rubbing when towing



2

Louvered RV vents

For the bed storage



1

APC BE600M1 UPS

Pi, router, gateway



As needed

Heavy extension cords

Inverter to your devices

Which Ring Terminal Goes Where

Spot	Ends	Hole size
Fuse holders	4	**5/16 inch**
Shutoff switch	4	**3/8 inch**
Battery posts	4	**Measure yours**
Inverter posts	4	**Measure yours**

Your new cables may already have good ends that fit. Reuse them where they do.


Check the jacket says **pure copper**. If not, ask me before using them.

Step 1: Test Fit, Before Any Drilling

1. Lay all **4 cables** along the real route, from battery to inverter.
2. Check 5 feet reaches with the fuses and shutoff in the path. Keep some slack.
3. Put the hole where it misses frame rails, wires, water lines and gas lines. **Look under the camper first.**
4. Keep the battery disconnected from the new cables.


> **If 5 feet won't reach, stop and tell me. Longer cable is still fine.**

Step 2: Inverter and Vents

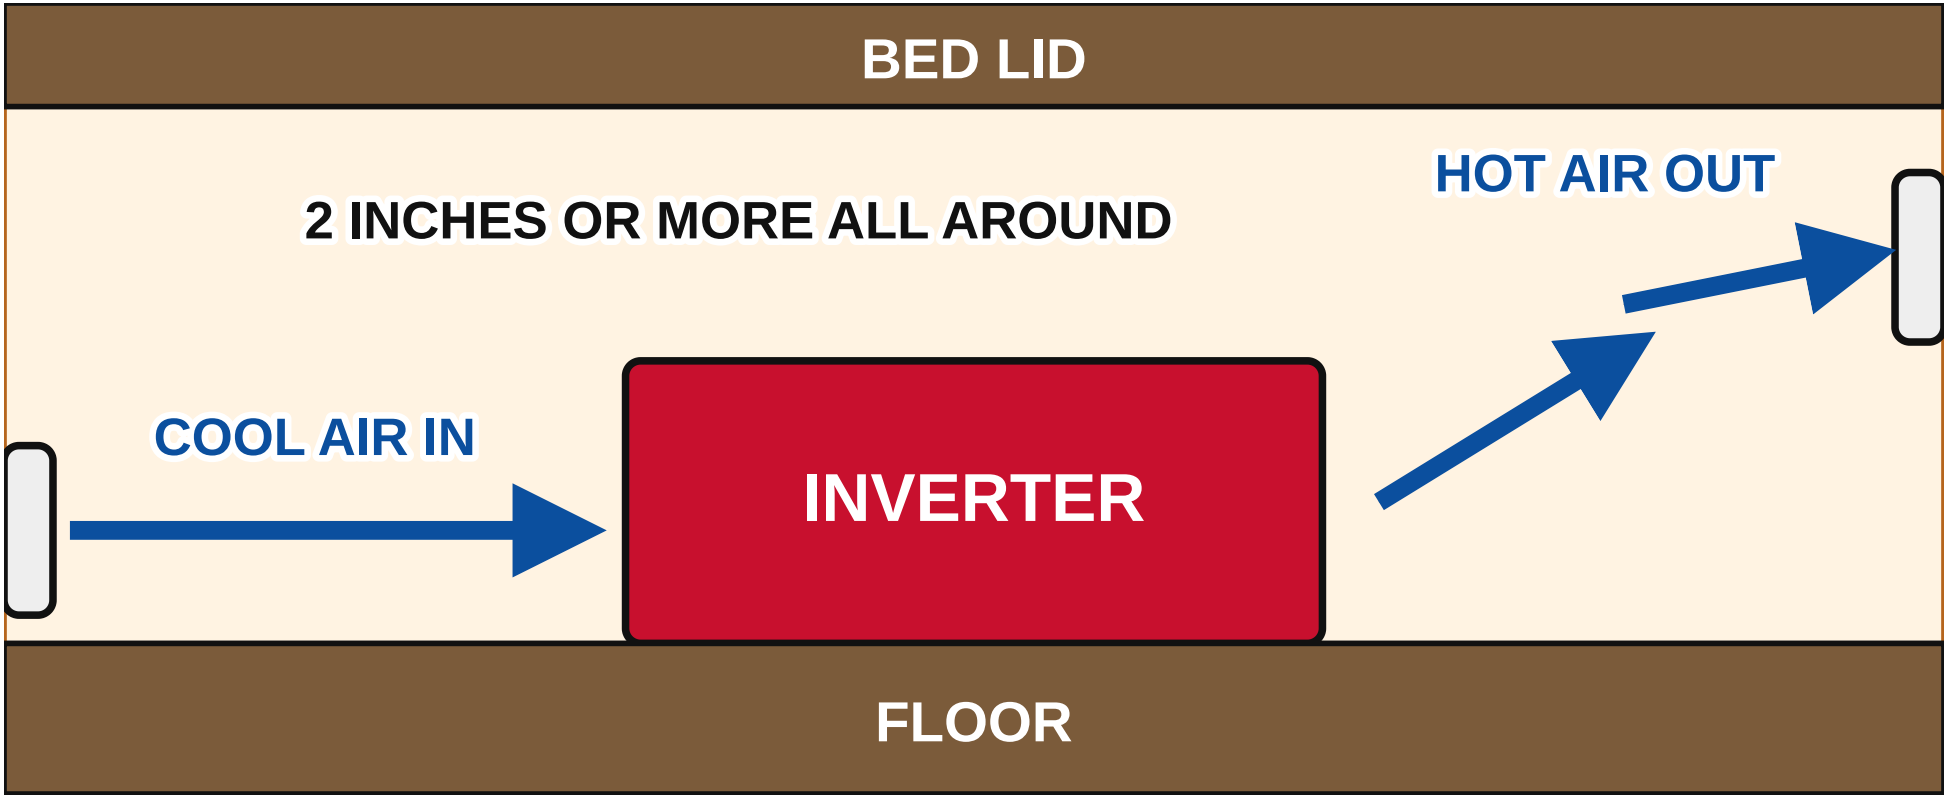


Mount it flat and solid. Screw it down so it can't slide when towing. Keep the front panel where you can see it. Vents go on opposite sides of the compartment.

Step 3: Under the Bed

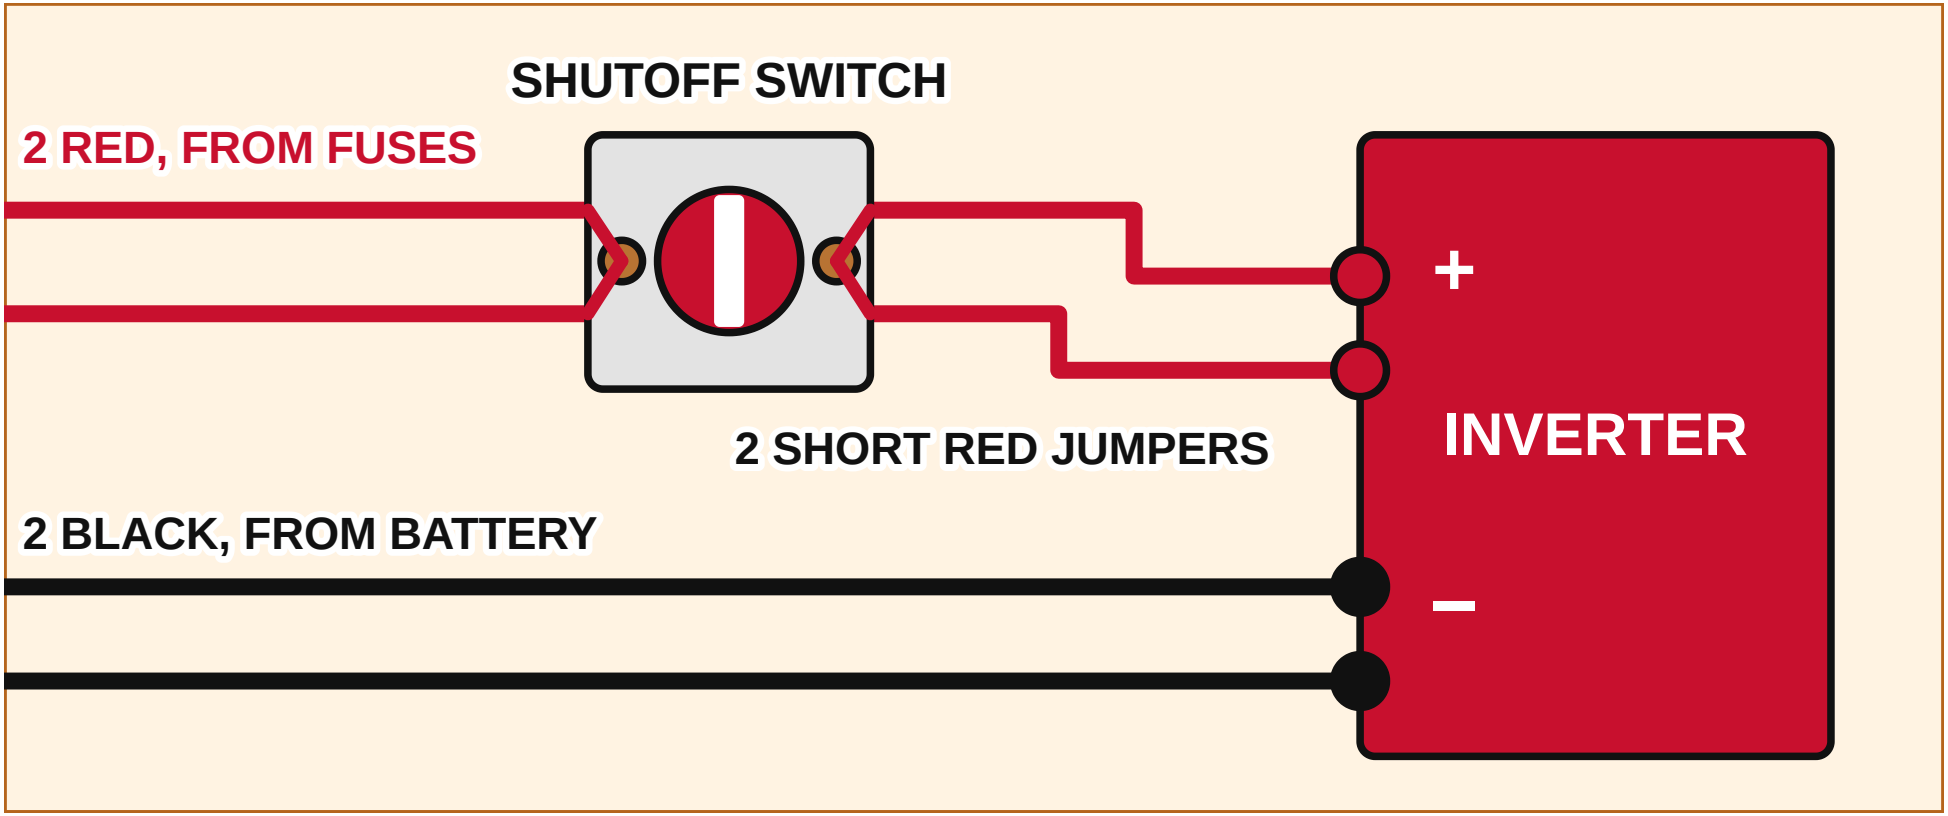

Bolt both reds from the fuses onto one switch stud. Run 2 short jumpers from the other stud to the **2 + posts**. Blacks go to the **2 – posts**. Switch **OFF**.


Step 4: Ground Wire

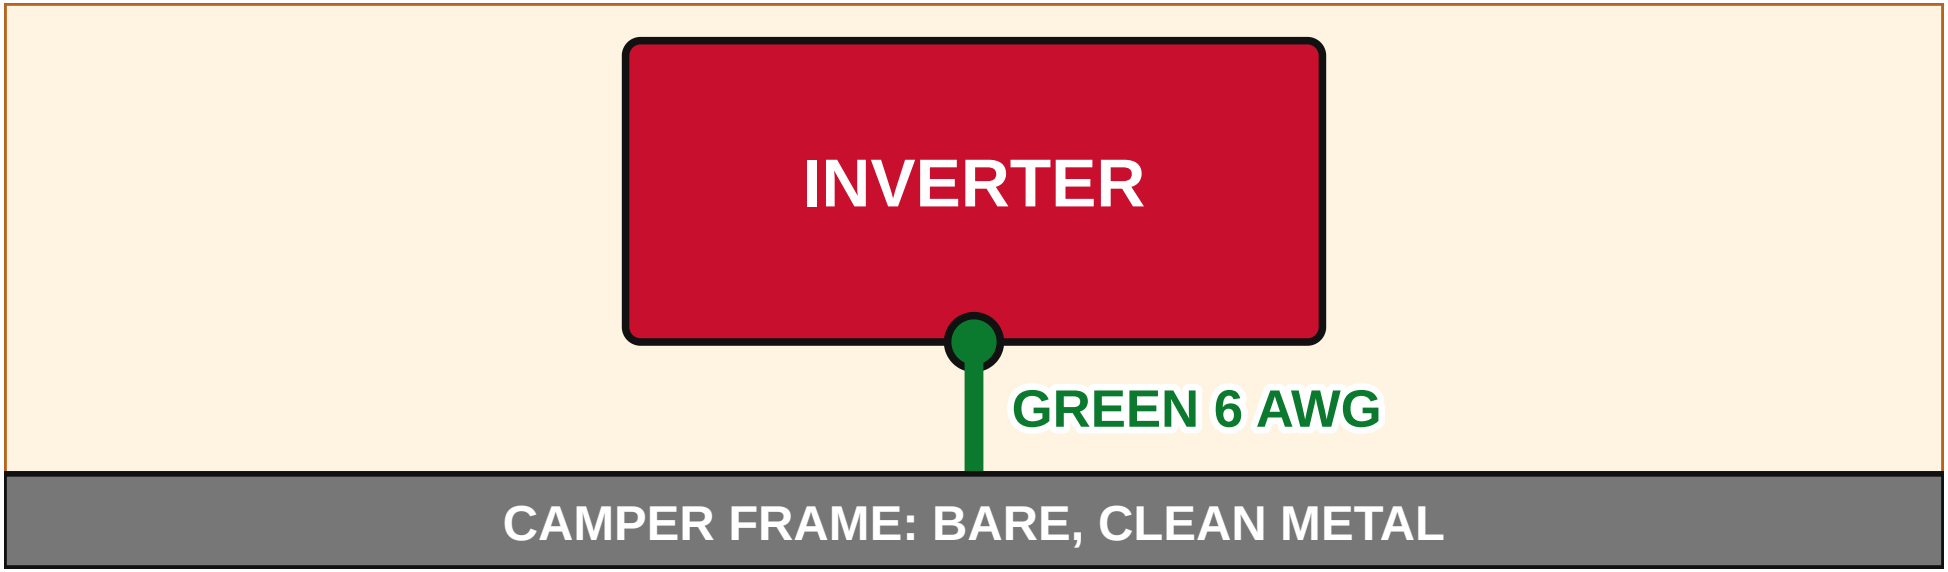

Connect the inverter's ground lug to the frame. Scrape paint off at that spot so metal touches metal, then bolt it tight and coat it to stop rust.

The manual's diagram shows this as "Vehicle Ground".

Step 5: At the Battery

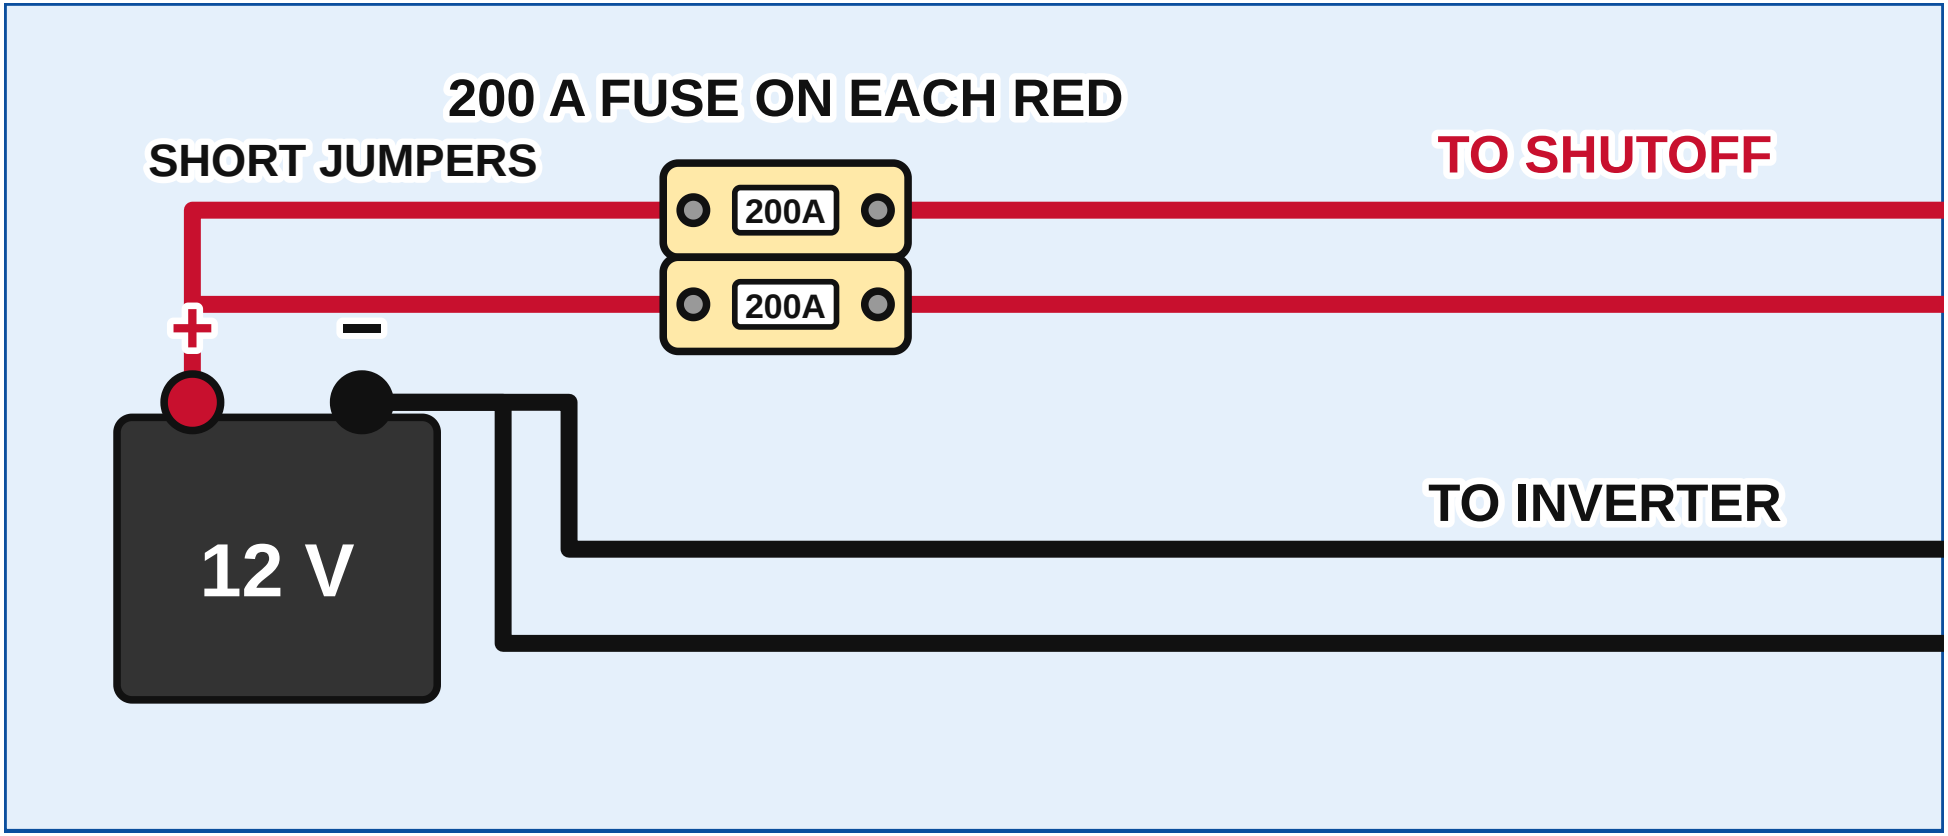

Fuses **out** for now. Mount holders close to the battery, covered from rain, and **away from the propane tanks and regulator**. Seal the wall hole around all 4 cables.

Step 6: Check, Then Fuses Last

1. Inverter **OFF**. Shutoff **OFF**. Nothing plugged in.
2. Tug every cable. Nothing should move.
3. **Check color:** red goes to + at both ends, black goes to −. Reversed cables can ruin it.
4. No flames or sparks near the battery. Wear eye protection.
5. Put in the **2 fuses**. Close their covers.
6. Turn the shutoff **ON**. A small spark inside is normal.

Step 7: First Test

1. Press **Power**. The **green** number should read about **12 to 13** volts.
2. Plug in one small lamp. It should light.
3. Feel the cables and fuses after 10 minutes under load. Warm is okay. **Hot means shut off now.**
4. Try the router and other devices, one at a time.
5. Press **Power** off. Shutoff **OFF**.

> **Tell me what the idle number reads. It helps decide if you can leave it on.**

When the Power Goes Out

1. Shutoff **ON**.
2. Press **Power**. Check the **green** number.
3. Run cords from the inverter to what you need. **Biggest thing first.**
4. Lid open or vents clear.
5. **Turn off at 12.0 volts.**

> **Power back?** Unplug from the inverter. Press Power off. Shutoff OFF.

How Long It Lasts

What's running	About how long
Internet + Pi, 50 W	**Up to 7 hours**
Add TV + fan, 150 W	**3 hours**
300 W	**1.5 hours**
Coffee pot, 900 W	**A few minutes**

These are estimates for a full, healthy battery. Furnace fan and other 12 V items use the same battery, so you'll get less. **Limit: 1500 W per outlet.**

What the Display Means

Green light	Battery volts
Yellow light	Output in kW
Red light	Output in watts
LUP	Battery low. Unplug, turn off, recharge.
OUP	Battery over 15 V. Turn off, check voltage.
OLP	Overload or short. Unplug things.
OCP	Too hot. Clear it, cool 15 minutes.
OPP	Short circuit. Find and fix it.