Sensorius User Guide

Sensorius Automatio Instrumentorum, also called Sensorius AI or Sensorius, is an environmental sensing and automation hub for gardens, greenhouses, grow rooms, small farms, and other places where environmental conditions matter. It gives you live readings, historical graphs, switch control, calibration tools, fully integrated Caelus Weather Forecast, Maria Thun-inspired Biodynamic Calendar, and optional integrations with Home Assistant, WeeWX, and farmOS.

Sensorius can run as a Raspberry Pi hub with directly connected sensors and relays, as well as Wi-Fi Nodus sensors and switches that communicate via a lightweight, open-standard communications protocal, MQTT (Message Queuing Telemetry Transport), as well as Ecowitt Gateways (GW1100/GW1200/GW2000/GW3000) and supported AcuRite PC Connect, Davis Vantage Vue USB datalogger, and Oregon Scientific WMR100-family USB consoles.

Sensorius can also run on macOS, Windows, or Linux as a hub for Wi-Fi Nodus sensors and switches, as well as Ecowitt Gateways (GW1100/GW1200/GW2000/GW3000) and supported AcuRite PC Connect, Davis Vantage Vue USB datalogger, and Oregon Scientific WMR100-family USB consoles. These devices appear together on the same dashboard.

Dashboard Overview

The dashboard is the main operating view. It is where you check current conditions, see switch state, open settings, and review quick trends.

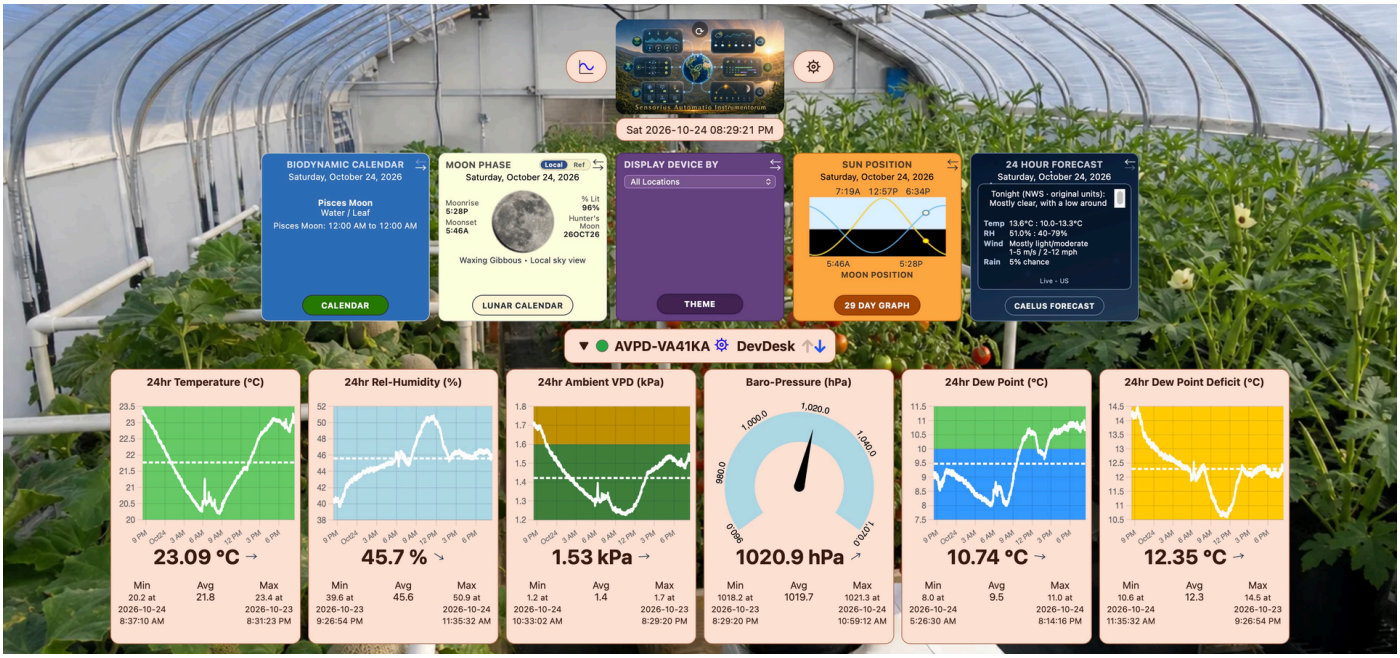

The dashboard example was captured from the running Sensorius app with live metric graphs and gauges and the **Fruit** dashboard theme selected. The Sensor Settings and Switch Settings tile-style panes and the finish examples were captured from Samhain. Most other settings screenshots use example devices and locations with the same warm peach-and-brown palette. Sensor names, locations, metrics, switch channels, forecast source, selected theme, and live values will vary by installation.

The dashboard header centers the Sensorius image between individual pill buttons for the full-screen graph (left) and General Settings (right).

The dashboard presents:

Interface Icons

- The **Graph icon**—a blue line graph on horizontal and vertical axes—opens the full-screen **Sensorius Graphum** workspace.

- The **Settings icon (gear)** to the right of the **Sensorius image** opens General Settings. Other gear icons open settings for the associated sensor or switch, or open the timer control for a Switch Tile.

Sensorius uses the following expand and collapse controls throughout the interface:

- A **right-pointing triangle (►)** means that additional content is collapsed; select it to expand the content.
- A **down-pointing triangle (▼)** means that the content is expanded; select it to collapse the content.

- On desktop, General Settings sections, integration blocks, and other expandable panes use these same right/down disclosure triangles. Phone settings use the menu navigation described below.
- A dashboard Sensor Group shows a disclosure triangle only when it has more than six Sensor Tiles. The first six Sensor Tiles remain visible when the group is collapsed.
- Sensorius Graphum uses **+** to expand a sensor or switch selector and **–** to collapse it. Collapsing a selector does not clear its checked items.

The side-by-side **up/down arrows** beside a Sensor Group or **Switches** heading move that row up or down. Available arrows are blue; unavailable directions are dimmed and disabled. The Switches row starts below the sensor groups and can be moved among them. Row positions are saved in the hub's system settings and restored when the dashboard is reloaded. Expand and collapse controls change only what is visible; they do not change sensor settings, switch state, or saved selections. Reordering sensor groups does not move the Sensorius AI graphic from the top of the dashboard. Tap or click that graphic to refresh the app, including when using an iPhone Home Screen web app.

Dashboard data comes from the latest values in the live runtime cache and from the local database. If a device is offline, the latest stored reading may still be visible, but the online/offline state comes from live device status, MQTT heartbeat or availability messages, and recent packets.

- Buttons for General Settings, the full-screen graph, sensor settings, switch settings, and calendar views.
- Weather, biodynamic, and astronomy information in the top row of tiles.
- A **Sensor Group** for each sensor, containing that sensor's **Sensor Tiles**.
- **Switch Tiles** with live channel state and recent events.

At a Glance Tiles

The default left-to-right order is **Biodynamic Calendar**, **Moon Phase**, **Display Device By**, **Sun Position**, and **Weather Forecast**.

Use the small stacked arrows beside each tile's title to arrange these tiles:

- The upper **left arrow (←)** moves the tile one position to the left.
- The lower **right arrow (→)** moves the tile one position to the right.
- Each click swaps the tile with its neighbor immediately, without reloading the dashboard. At either end, the unavailable direction is dimmed and disabled.

The arrows use contrasting colors to remain visible as tile backgrounds change. Your arrangement is remembered in the current browser for this hub and restored when you reload the dashboard. Other browsers keep their own arrangement. On a narrow screen, the same order runs from top to bottom.

The refresh symbol overlays the top center of the Sensorius AI graphic; click anywhere on that graphic to reload the current dashboard view.

1. The **Maria Thun-inspired Biodynamic Calendar Tile**.

   This tile summarizes the current observer-local biodynamic period. It shows the date, Moon zodiac sign, associated element and plant part, and the current sign's time window. Select **Calendar** to open the full Biodynamic Calendar for month planning, day summaries, guidance, notes, and reports.

2. The **Lunar Calendar Tile**.

The date beneath **Moon Phase** shows the current day at the configured Astral location.

When an eclipse visible from the configured Astral location overlaps the next 24 hours, the Moon Phase tile adds an eclipse line with the eclipse type, local date, and locally visible start and end times. The line remains hidden when no visible eclipse falls in that window. An open dashboard refreshes this eclipse line at each configured-location midnight; reloading the dashboard refreshes it immediately.

Select **Lunar Calendar** on the dashboard's **Lunar Calendar Tile** to open the Caelus observer-local phase timeline: four previous phases, the live Moon and its current details, four upcoming phases with dates, and today's local solar and lunar events. An **Upcoming eclipse** line identifies the next locally visible eclipse in the coming twelve months, including its local date and visibility window. Its lower timeline runs from today's sunrise to the next sunrise, with sunrise and sunset on the Sun row and chronologically interlaced moonrise and moonset markers on the Moon row. Use **Local** beside the calendar title for the observer's sky orientation or **Ref** for a lunar-north-up reference view. The saved choice also controls the Moon disks in the integrated Caelus Forecast Lunar Calendar.

Sun and Moon data may briefly show a loading indicator while astronomy calculations finish. The dashboard automatically retries warming or failed requests; refreshing the page is normally unnecessary.

3. The **Location Tile**.

   Use this tile to filter the dashboard's Sensor Groups and Switch Tiles by their saved location. Select **All Locations** to show every device, or select one location to show only devices assigned there.

4. The **Sun/Moon Position Tile**.

   This tile plots the Sun and Moon across the current observer-local day. It shows the observer-local date below **Sun Position**, followed by the Sun's rise, noon, and set times and the Moon's rise and set times. Select the tile to open the separate 29-day Sun/Moon position and Moon-phase graph. Close that expanded graph with its **×** button, by selecting the graph, or by pressing Escape.

5. The **Caelus Weather Forecast Tile**.

   The observer-local date appears beneath **24 Hour Forecast**. The Live or Cached provider status is centered in the bottom row of the forecast panel, below the precipitation details.

   The **Caelus Weather Forecast Tile** keeps its day-wide forecast summary, while its details include the maximum forecast precipitation chance, labeled as rain or snow from the forecast conditions. Its background reflects the current three-hour forecast window. Clear conditions use a sunny daytime sky or a starry night; cloudy conditions use gray daytime or nighttime skies; and precipitation adds rain streaks to the corresponding gray sky. This tile appearance is independent of the theme selected for the full-screen Caelus display. Day artwork begins 30 minutes before the configured Astral sunrise to represent daybreak; night artwork begins 30 minutes after sunset to include dusk. The station timezone is used, and the boundary is checked once per minute.

Sensor Groups And Sensor Tiles

Each Sensor Group shows the sensor ID or name, its location, and the Sensor Tiles selected for that sensor. Each Sensor Tile represents one sensor metric and its current reading. The 24-hour Sensor Tile micrographs use consistent three-hour local AM/PM ticks, with a month/day marker at midnight. The 24-hour Min and Max

timestamps also use local AM/PM time. Metric names come from the sensor's settings and the measurements that the device reports. Common metrics include temperature, relative humidity, absolute humidity, CO2, VPD, dew point, barometric pressure, soil moisture, soil temperature, soil pH, soil EC, soil nutrients, light, and PPFD.

Each Sensor Tile can appear as:

- **Gauge**: shows the current value against a colored range.
- **6Hr Graph**: shows the last six hours inside the Sensor Tile.
- **24Hr Graph**: shows the last 24 hours inside the Sensor Tile.

Newly onboarded Nodus sensors use **24Hr Graph** for their per-metric display styles. A full day is long enough to show the daily diurnal patterns for heating, cooling, humidity, irrigation, and lighting cycle without opening the full-screen graph, so it is the most useful general-purpose trend view. **General Settings > Display Style** is the system-wide fallback where no per-metric style is supplied; its factory value is **Gauge**. Blank per-metric styles on directly connected local sensors also currently resolve to **Gauge**.

Click a Sensor Tile to cycle **24Hr Graph → 6Hr Graph → Gauge → 24Hr Graph**. This is a convenient temporary view change for the current page. To make the choice persistent, open **Sensor Settings > Sensor Settings**, choose **Gauge**, **6Hr Graph**, or **24Hr Graph** for that metric slot, and click **Save**. **General Settings > Display Style** supplies the fallback when a sensor has no saved style.

The current value comes from the latest reading for that metric. A trend arrow beside it uses recent stored readings rather than comparing only the last two values. Most metrics use a least-squares fit across the latest 19 minutes. Barometric pressure uses up to three hours and identifies a shorter result as provisional. Existing database history populates these windows immediately after startup; Sensorius does not need to collect a new in-memory window. The arrow remains in a learning state until at least six samples cover five minutes.

Pointing up indicates a significant increase, slightly upward indicates a moderate increase, right indicates neutral, slightly downward indicates a moderate decrease, and down indicates a significant decrease. Intermediate rates produce intermediate angles, and the arrow moves smoothly when the dashboard refreshes. Hover over or focus the arrow to see its rate per hour, actual history window, and provisional state.

Trend strength is normalized to the metric's gauge span so unlike units share the same visual language. Pressure uses a narrower meteorological scale. The arrow communicates direction and relative strength, not whether the change is good or bad. The small history graph comes from `/graph-data`, which reads stored samples from the local database for that sensor and metric.

The solid line is the stored reading series. The dashed line is the arithmetic average of the visible graph window, repeated across the window as a reference line; it is not another sensor reading or an automation set point. The Min, Avg, and Max values below each Sensor Tile are calculated from the last 24 hours. Min and Max include their exact timestamps so you can correlate an extreme with a switch event, weather change, irrigation cycle, or equipment problem. Consequently, a six-hour Sensor Tile can show a 24-hour minimum or maximum that lies outside the six hours drawn in that Sensor Tile.

Graph Background Colors And Thresholds

Colored backgrounds use that metric's gauge zones. The colors are metric-specific, not one universal alarm scale. For example:

- Temperature moves from blue for the coldest range, through light blue and green, to yellow and red for hotter ranges.

- Relative humidity uses brown and yellow for dry ranges, light blue for the middle range, and progressively darker blue for wetter ranges.
- CO2 uses green for its central configured range, yellow on either side, and red at the configured extremes.
- AQI progresses from green through yellow, orange, red, purple, and maroon as the index rises.
- VPD uses several moisture-demand bands. The Sensor Tile uses the metric's gauge zones; the full-screen VPD graph uses its dedicated VPD background bands, so its palette is not identical to every Sensor Tile.
- A single-color background, such as barometric pressure's light blue or a light metric's yellow, identifies the metric's scale and does not by itself indicate an alarm.

The boundaries come from Sensorius's gauge-zone configuration for each metric. Changing a zone boundary in that configuration changes where the corresponding background color begins and ends. The standard UI currently exposes gauge size and display style, but not gauge-zone boundary editing. An automation's **Threshold** and **Hysteresis** control when its rule runs; they do not change graph or gauge colors.

Rain Gauge Colors And Historical Limits

Rain accumulation gauges use light blue (`#add8e6`) from 0–20% of the scale, medium blue (`#66b2ff`) from 20–60%, and dark blue (`#0033cc`) from 60–100%. These bands indicate increasing rain amounts, not alarm thresholds.

Rain and location: Check the hub's coordinates in **General Settings > Astral**. Sensorius uses those coordinates for all rain-gauge climate scales on that hub. A sensor's location label (for example, Greenhouse or Garden) does not select a different climate location. GeoIP provides an approximate location; enter the site's latitude and longitude manually when that estimate does not represent where the rain gauge is installed. Changing the hub's coordinates updates the historical scale, not the measured rainfall or stored sensor readings.

Using the hub's Astral latitude/longitude and timezone (manual or GeoIP), Sensorius retrieves daily rainfall from Open-Meteo's Historical Weather API, using ERA5 for the period from January 1, 1991 through the latest available data (normally five days behind today, or earlier if the latest days are not yet published). The gauge maximum is the wettest corresponding period:

Gauge	Historical period used for maximum
Rain, Rain Last 24h, Rain Day	Wettest local calendar day
Rain Week	Wettest seven consecutive days, including across year boundaries
Rain Month	Wettest complete calendar month
Rain Year	Wettest complete calendar year

Daily history approximates the rolling 24-hour gauge; it is not a historical rolling hourly record. `Rain` retains its existing station/interval meaning. The historical series is gridded outdoor rainfall, excludes snowfall, and is not a record measured by your own station. It works independently of the selected forecast provider. Rain Event and Rain Total get the same blue bands but retain their fixed limits; Rain Rate retains its existing scale.

Limits and ticks follow the selected mm/in display units. A completely dry baseline uses a minimum 1 mm span. The needle stops at the scale maximum if a reading exceeds it; the full measured value remains visible numerically. Min/Avg/Max statistics still describe the sensor's last 24 hours, not climate history.

Historical data loads in the background, using default limits while loading or unavailable. Scales update without a page reload or extra text inside the tiles, preserving their original height. A compact location-specific cache survives restarts; on Linux its default path is `/home/<user>/Sensorius/weather_cache/rain_climate.json` (`/Users/<user>/Sensorius/weather_cache/rain_climate.json` on macOS). The cache is checked hourly and refreshed when the historical end date advances. Only complete months and years contribute to their respective maxima; daily and seven-day maxima include recent complete days. Changing the hub location invalidates the active scale. Missing or incomplete history retries later; a previously cached summary for the same location remains usable during a refresh failure, otherwise the existing default limits apply.

Metric Ordering

The system-wide **Metric Set** in **General Settings > Display** controls the initial Sensor Group state. In **Pick 6** mode, the dashboard follows **Metric 1** through **Metric 6** exactly from left to right and initially collapses each Sensor Group after those six Sensor Tiles. Use the disclosure triangle beside the connection indicator to reveal or hide the Sensor Group's remaining known metrics. Sensor Groups with six or fewer Sensor Tiles do not show the triangle. You can therefore establish the operational summary order in **Sensor Settings**. Factory defaults are selected by sensor type and generally put the device's primary measurement first: for example, CO2 is first for a CO2 sensor and Air Quality is first for an AQI sensor. The remaining positions favor closely related temperature, humidity, VPD, dew-risk, pressure, plant, light, or soil measurements for that device.

In **All** mode, Sensorius uses the same ordering but initially expands every Sensor Group. The disclosure triangle can still collapse the group back to its summary of six Sensor Tiles. Collapsed extra tiles release their gauge and graph canvases to keep long-running browser tabs within practical memory limits; they are recreated when the row is expanded. Sensorius does not apply a universal rule that moves CO2, AQI, and every other specialized metric farther right. Nor does it guarantee that barometric pressure is always fifth or that dew point fills the fifth position when pressure is unavailable. Assign **Metric 1-6** when an exact summary convention is important.

Sensor Names, Raspberry Pi Buses, And Locations

A directly connected Raspberry Pi sensor ID has the form `<kind>-<bus>-<hostname>`, for example `avpd-i2c-1-sensorius-demo`. The kind identifies the sensor family, the bus segment identifies the Linux I2C interface used during discovery, and the final segment identifies the hub. `i2c-1` is the normal sensor bus on GPIO2/GPIO3. `i2c-0` is the secondary bus on GPIO0/GPIO1 used for supported plant-probe arrangements. A dual-bus APVPD device is represented by one sensor ID using its primary `i2c-1` descriptor even though its plant probe also uses `i2c-0`.

The technical sensor or switch ID remains the stable identity used by settings, database history, MQTT, and switch keys. **Location** is the friendly, editable place name used to group and filter dashboard Sensor Groups and Switch Tiles and to make automation selectors understandable. A Sensor Group or switch-device heading shows both: use the ID when diagnosing wiring, topics, or stored settings, and use the location when operating the system. Renaming a location does not rename the device or disconnect its history.

Switch Tiles

Switch Tiles show local Raspberry Pi relay channels and remote Nodus switch channels through the same interface. Each Switch Tile represents one channel and has a label, current state, and recent state changes. Sensorius groups switches by location. When multiple devices share a location, the title identifies the first device and shows its settings gear. Each additional device has a centered, full-width divider with its ID, settings gear, and location above its channel labels, styled to match the title. Manual toggles send commands through the shared switch controller. For Nodus switches, commands are sent through MQTT and Sensorius waits for state to return from the device.

The State control is a compact On/Off slider: black with its thumb on the left for Off, green with its thumb on the right for On. Click or tap anywhere on it, or focus it and press Space or Enter, to toggle. While a command is pending, it keeps the last device-reported state, displays the requested On/Off state separately, and blocks repeated clicks until matching device confirmation or a timeout. A rejection or missing confirmation is shown below the slider without changing the last confirmed state. Unconfirmed Ecowitt plugs show **Unknown** until a state report arrives. If an enabled Advanced automation owns a switch channel, Sensorius blocks manual toggles for that channel so the automation remains in control.

Switch state history comes from `sensorius.saiDataLogger.log_switch_event`, not from synthetic sensor readings. This is why switch events can be overlaid on historical graphs.

Each switch channel also has an auto-off timer. Open the timer control with its gear, enter `0` to disable it or 30-9999 seconds, and click **Ok**. The dashboard accepts values in 30-second steps. The setting is runtime state, not persistent switch configuration, so it must be set again after Sensorius restarts. When a manually controlled channel turns on, the countdown starts; at expiry Sensorius sends one Off command and records a timer-originated switch event. Turning the channel off clears the active countdown. Automation-originated state changes do not start the manual auto-off countdown, and an enabled Advanced automation must be disabled before a manual dashboard toggle is allowed.

The Events column shows a compact switch transition graph, using green vertical lines for On events and black vertical lines for Off events, like the switch overlays in the full-screen graph. The plot stays compact, with On/Off color labels beside it and three date/time ticks below it for the start, midpoint, and current time. Each graph starts at **24hr**. Click or tap the graph to cycle **24hr → 6hr → 1hr → 24hr**; each channel keeps its own view while the dashboard remains open. The time axis runs from the selected number of hours ago on the left to Now on the right, and includes every stored transition within that period. The text below the graph always shows the latest recorded state, its date/time, and `manual` or `auto — <rule name>` when recorded, even if that event is outside the selected window. Events without a recorded origin show `origin unavailable`. The color legend appears only in this guide. Hover to see the nearest event's date/time and origin in a tooltip; keyboard users can focus the graph, press Left/Right to inspect event tooltips, and Enter or Space to cycle views. Times use local 12-hour AM/PM display in your browser. A blank graph means no state changes were recorded in that window, not that the switch was Off throughout. If no recorded event is available, the text shows **No recorded state**. A history request failure is shown in the footer tooltip when a previous event is available, or in the footer text otherwise. The graph refreshes persisted history every minute and includes live state updates as commands and device reports arrive. Those same persisted events can be selected as vertical overlays in the full-screen graph.

General Settings

General Settings contains hub-level settings, notifications, system-wide automations, device onboarding, integrations, locations, firmware updates, and maintenance tools.

On phones, General, Sensor, and Switch Settings open with a list of menu items. Tap a row with a **›** to open its view. Sections that expand on desktop become another menu level on mobile, including theme selections inside Display. Use **< Back** at the top to return one level; entered values stay in the form. Back does not save changes. **Save** stays with its original section, and the Display Save button remains available while choosing a theme. The **×** closes the dialog. Opening settings again starts at the menu.

Phone settings use a screen-width view while open. Closing the dialog restores the dashboard's existing scaling. Desktop settings keep their side menus and expand/collapse sections. Settings switch to the compact layout when the window is at most 700 CSS pixels wide. Before phone scaling is enabled, a valid screen width of at most 700 CSS pixels also selects it when the browser reports a coarse (touch-style) pointer. A small or unavailable screen-width report alone does not select phone settings in a wide desktop window, including the Raspberry Pi pywebview desktop.

General Settings Pane

The main pane contains six expandable sections. Open one to review or change its settings. Each section-level **Save** submits and writes only the controls inside that section; values in the other expandable sections are left unchanged.

Astral

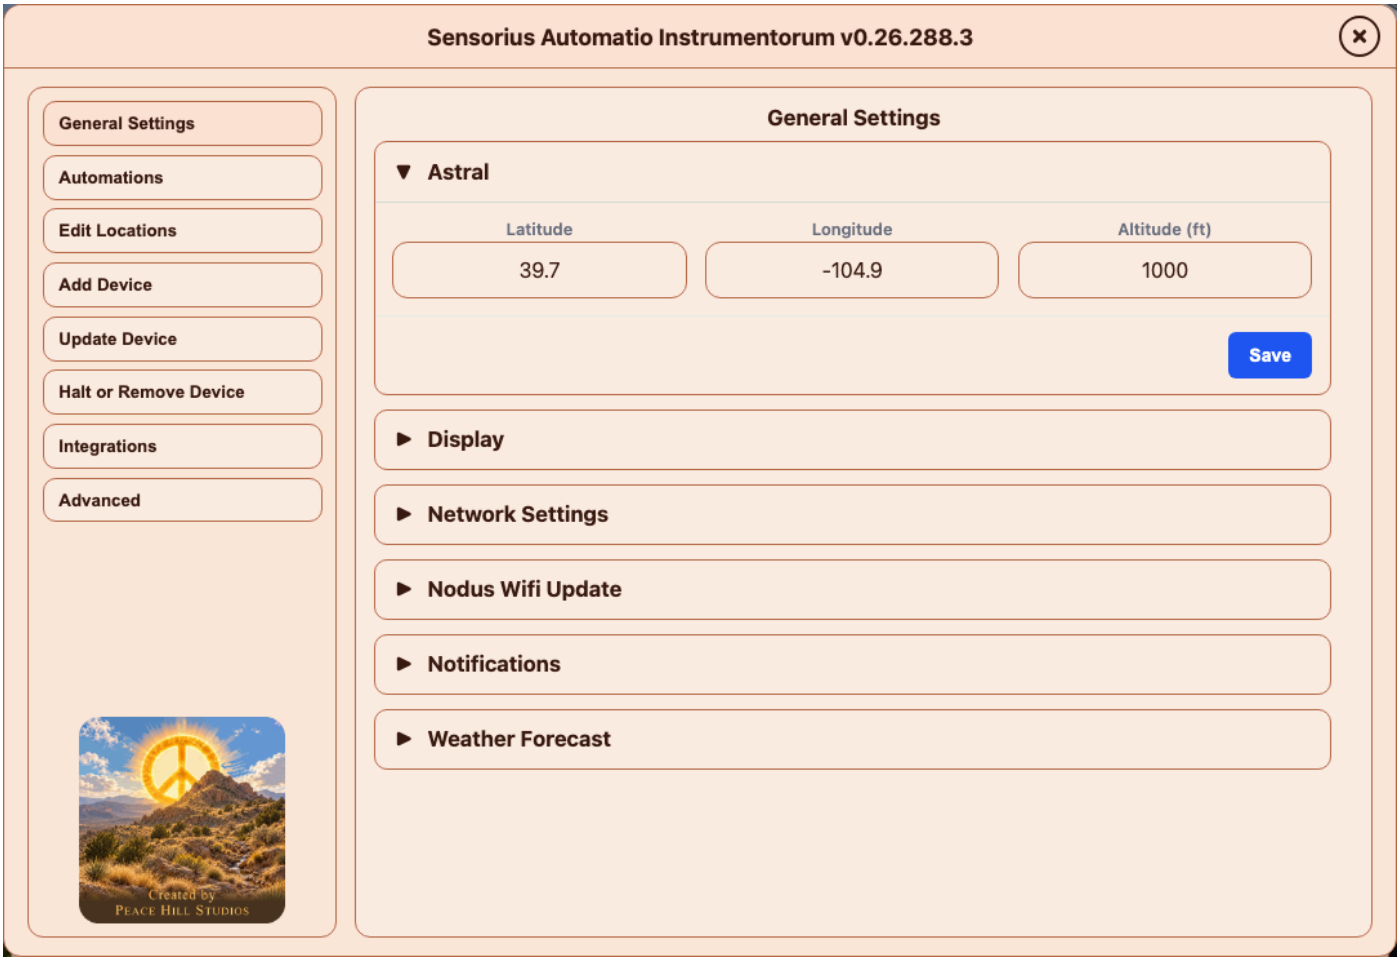

The **Astral** section sets the physical location used for sunrise, sunset, moon, biodynamic, weather, and location-aware automation calculations:

- **Latitude**: leave both Latitude and Longitude empty, then select **Save**, to detect the location automatically.
- **Longitude**: Latitude and Longitude must both be supplied when entering a location manually.
- **Altitude (m)**: altitude in meters. Valid values range from -500 to 10000.
- **Save**: writes the Astral location. Changing it causes dependent calendar and astronomy information to be recalculated.

Display

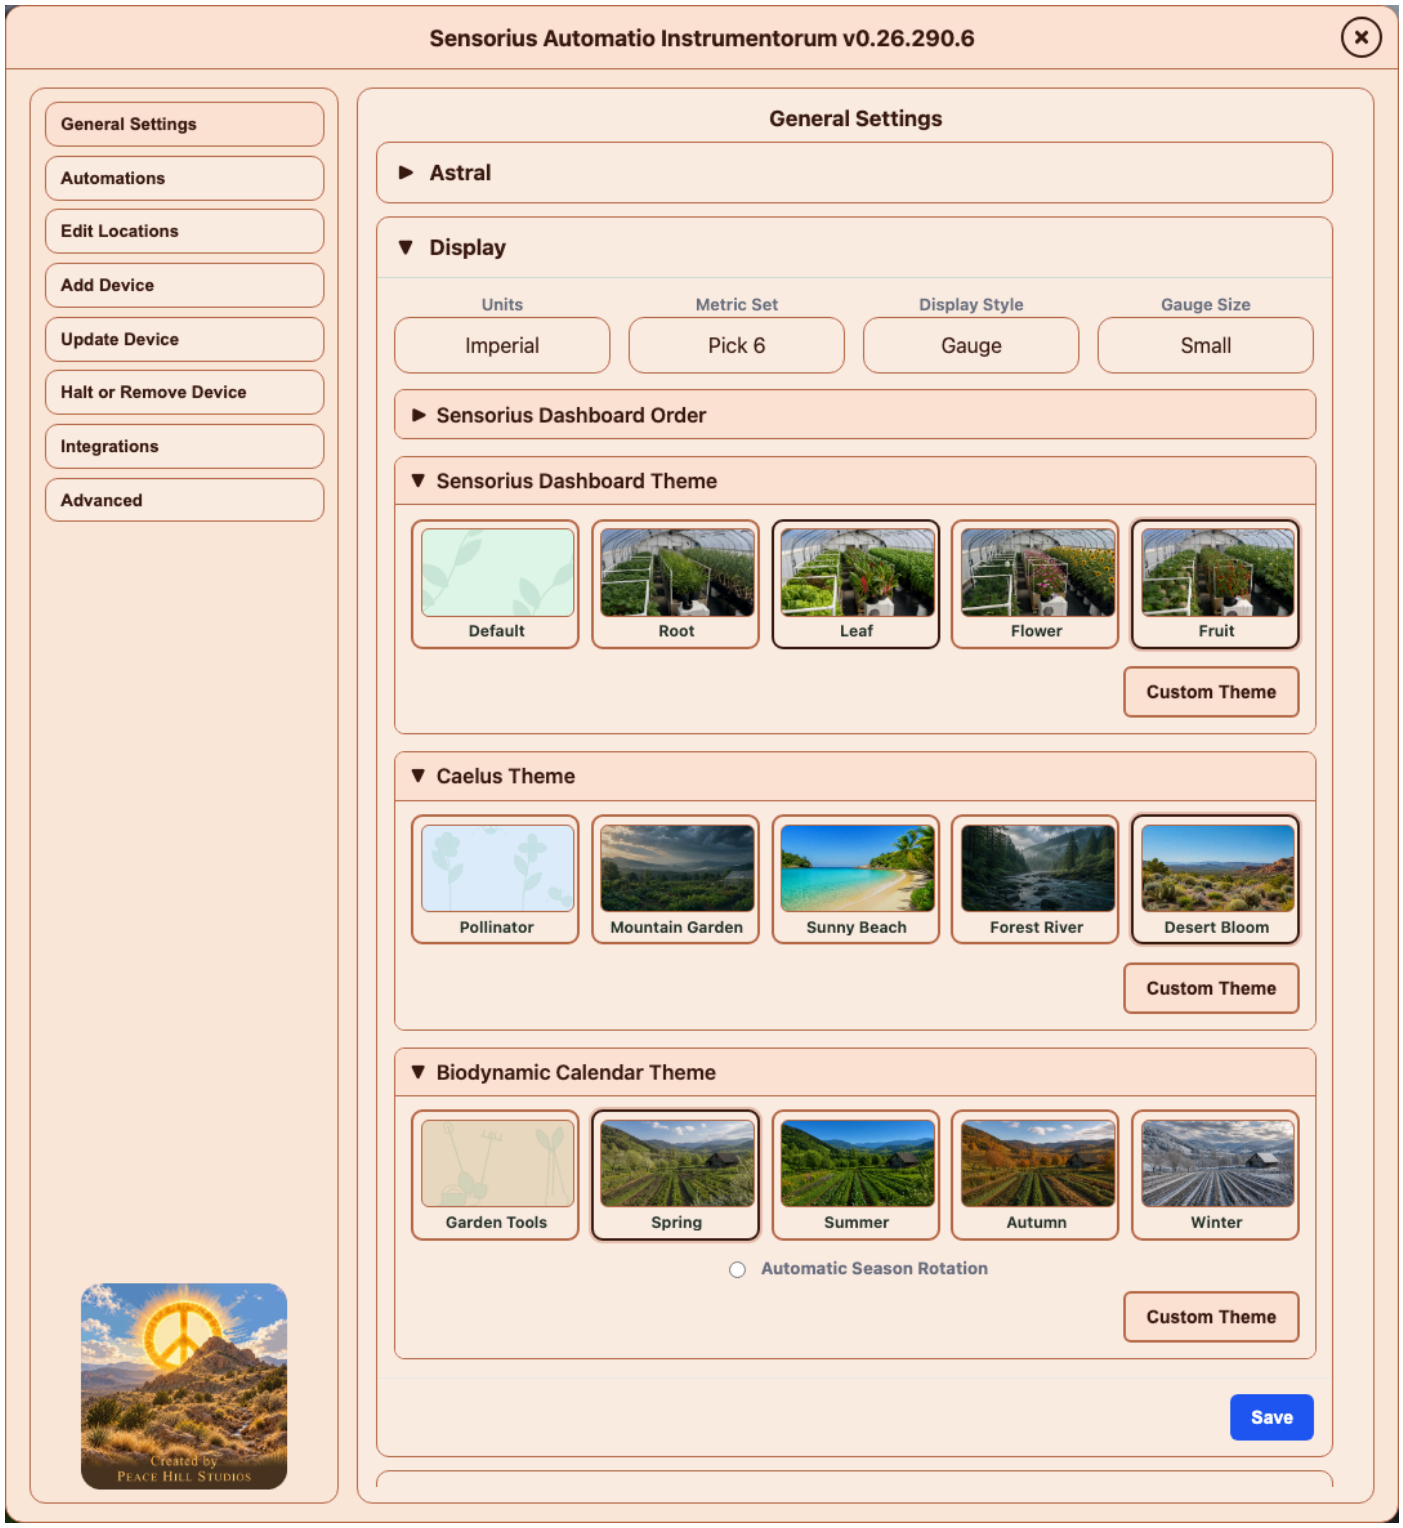

The **Display** section supplies system-wide presentation defaults. The controls appear in the order **Units**, **Metric Set**, and **Display Style**. **Gauge Size** is shown only while **Gauge** is selected. Each of the three theme areas has its own disclosure marker so its thumbnail choices can be expanded or collapsed without moving the section's **Save** button.

Sensorius Dashboard Order, above the theme sections, controls sensor and switch ordering independently. Both default to **Location, then device name (A–Z)**. Select **Keep existing order** to use saved positions instead, then select **Save** to apply the sorting choice.

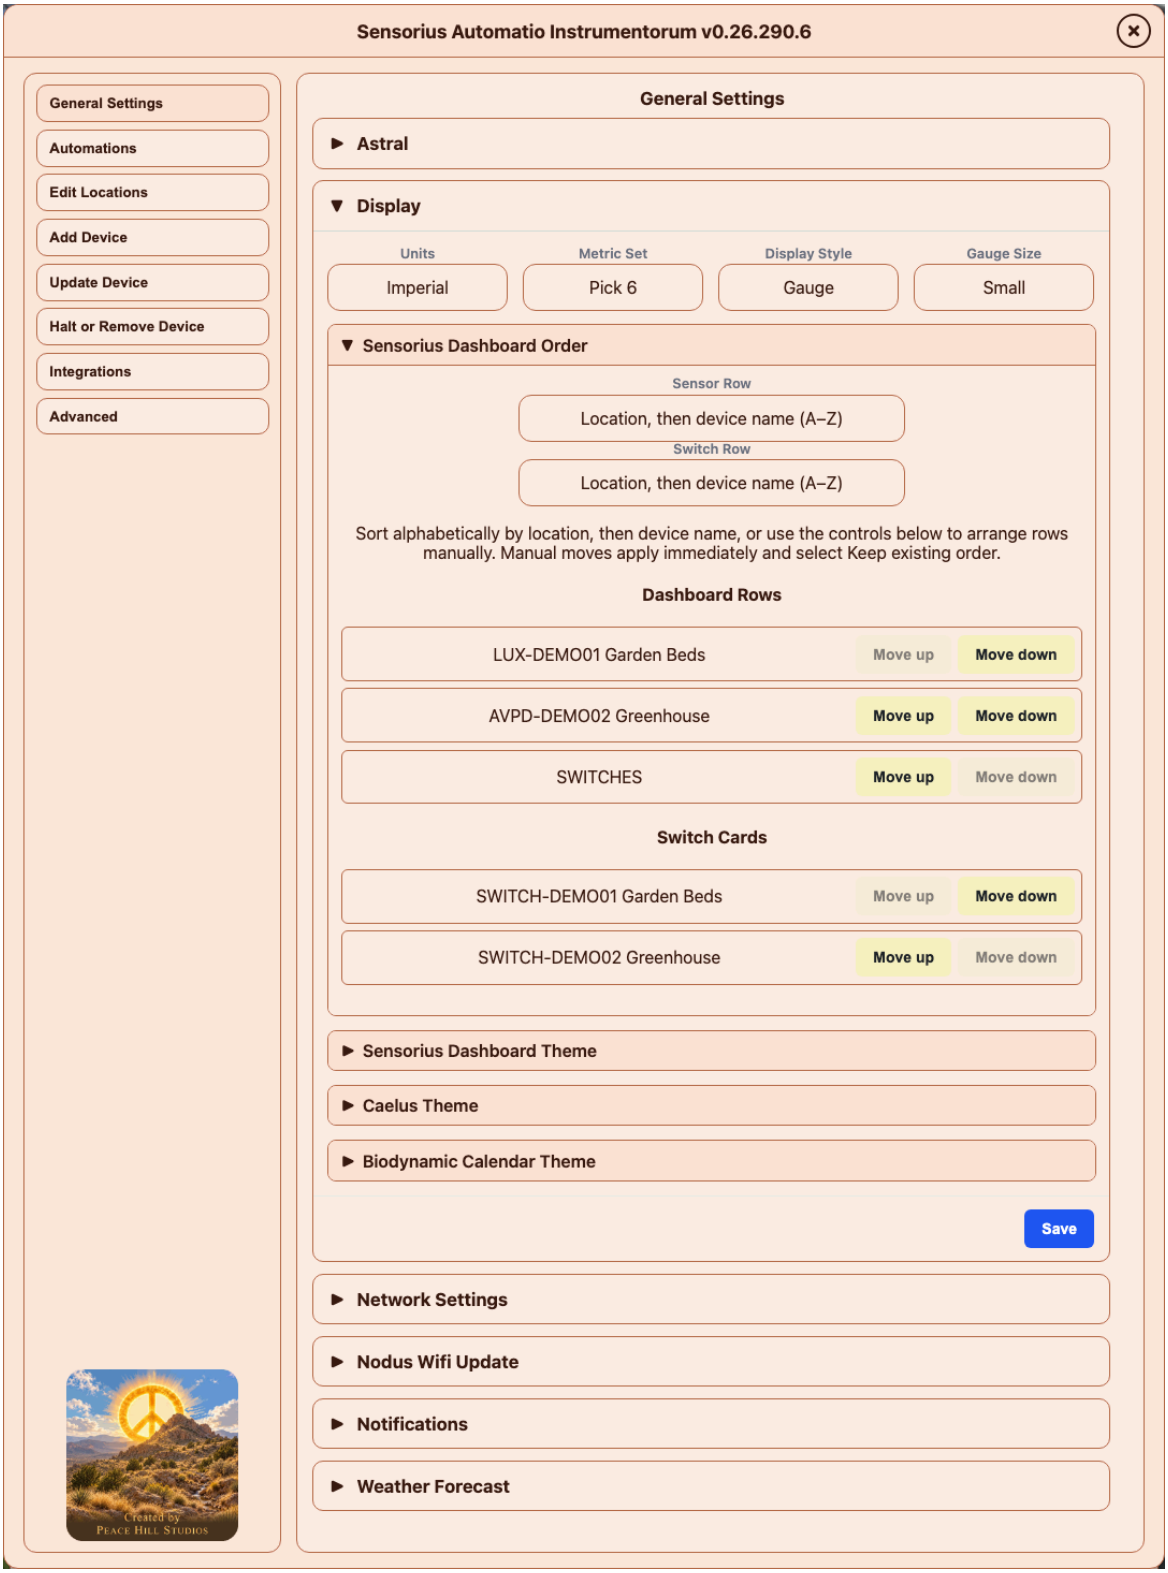

Use **Move up** and **Move down** in this dialog to arrange dashboard rows, including the combined Switches row, or the location-grouped switch cards. Manual moves save immediately and select **Keep existing order** for that row type. On the dashboard, use the sensor or Switches heading's **up/down arrows** for vertical rows, or the

left/right arrows in a switch tile's title for switch cards. Available arrows are blue; unavailable directions are dimmed and disabled.

- **Units**: chooses **Imperial** or **Metric** presentation throughout the dashboard, historical graphs, and Caelus weather forecast. Sensorius converts temperatures, pressure, speed, rainfall, rain rate, and distance when the source unit has a supported equivalent. For example, Imperial displays use °F, inHg, mph, inches, and miles; Metric displays use °C, hPa, km/h, millimeters, and kilometers. Unitless values and measurements without an applicable conversion, such as relative humidity, VPD, CO2, and light, keep their native units. This setting changes labels, values, graph scales, and display zones only. It does not rewrite sensor readings, database history, MQTT payloads, sensor configuration, metric identities, or automation thresholds. Calibration temperature offsets, General Settings altitude, and temperature automation inputs also display in the selected units; saving converts edited values back to the existing storage units. Changing Units does not change when a saved rule triggers. Open forms keep the units printed beside their fields until reopened. Directly connected sensors and current Nodus firmware provide canonical SI readings; older Nodus devices that still publish Fahrenheit- suffixed metrics remain supported.

- **Metric Set**: applies to every Sensor Group on the Sensorius dashboard. **Pick 6** initially shows the six saved metric slots as Sensor Tiles; the Sensor Group's disclosure triangle reveals every additional known metric. **All** starts with those additional Sensor Tiles expanded. Neither option changes sensor settings. Additional metrics use the system **Display Style**.

- **Display Style**: default metric display when a sensor has no saved per-metric style. Options are **Gauge**, **6Hr Graph**, and **24Hr Graph**.

- **Gauge Size**: dashboard gauge size. Options are **Small** and **Large**.

- **Sensorius Dashboard Theme**: five thumbnails select the **Default** leaf pattern or the greenhouse **Root**, **Leaf**, **Flower**, and **Fruit** scenes. The four greenhouse themes use matching pale Earth, Water, Air, and Fire colors for metric and switch cards while retaining dark, high-contrast text. The **Theme** button at the bottom of **Display Device By** hides the dashboard tiles for an unobstructed temporary preview. Choose a theme from the bottom toolbar, then select **Return to Dashboard**; saved settings are not changed by previewing. Select **Custom Theme** to create a named local collection containing one to five individually named background images. The theme section surfaces, selection outline, and Custom Theme action use the active dashboard palette; the Display **Save** button retains its standard blue action color.

- **Caelus Theme**: five thumbnails select the default **Pollinator** pattern, **Mountain Garden**, **Sunny Beach**, **Forest River**, or **Desert Bloom** for the full-screen forecast. Its **Custom Theme** button adds custom forecast backgrounds through the same creator.

- **Biodynamic Calendar Theme**: independently selects the full-screen calendar background and matching card palette. The five themes are **Garden Tools**, **Spring**, **Summer**, **Autumn**, and **Winter**. **Garden Tools** is the default. **Automatic seasonal rotation** is optional and changes at the start of March, June, September, and December in the calendar timezone. Automatic rotation applies only to these built-in seasonal themes. Custom BD themes are static selections and are never substituted by seasonal rotation.

- **Custom Theme images**: accept WebP, JPEG, or PNG files up to 5 MB each. A 16:9 image at 1920 × 1080 is recommended; the minimum accepted size is 320 × 180. Sensorius center-crops, removes image metadata, converts uploads to WebP, and creates a thumbnail. Every image requires a display

name and one of the predefined pale palettes. In the creator, the image selector, preview, and palette selector share one row; the image name and the Add/Remove image actions appear beneath it. The creator uses the active dashboard theme colors. Built-in themes remain read-only; custom collections can be deleted from their theme section.

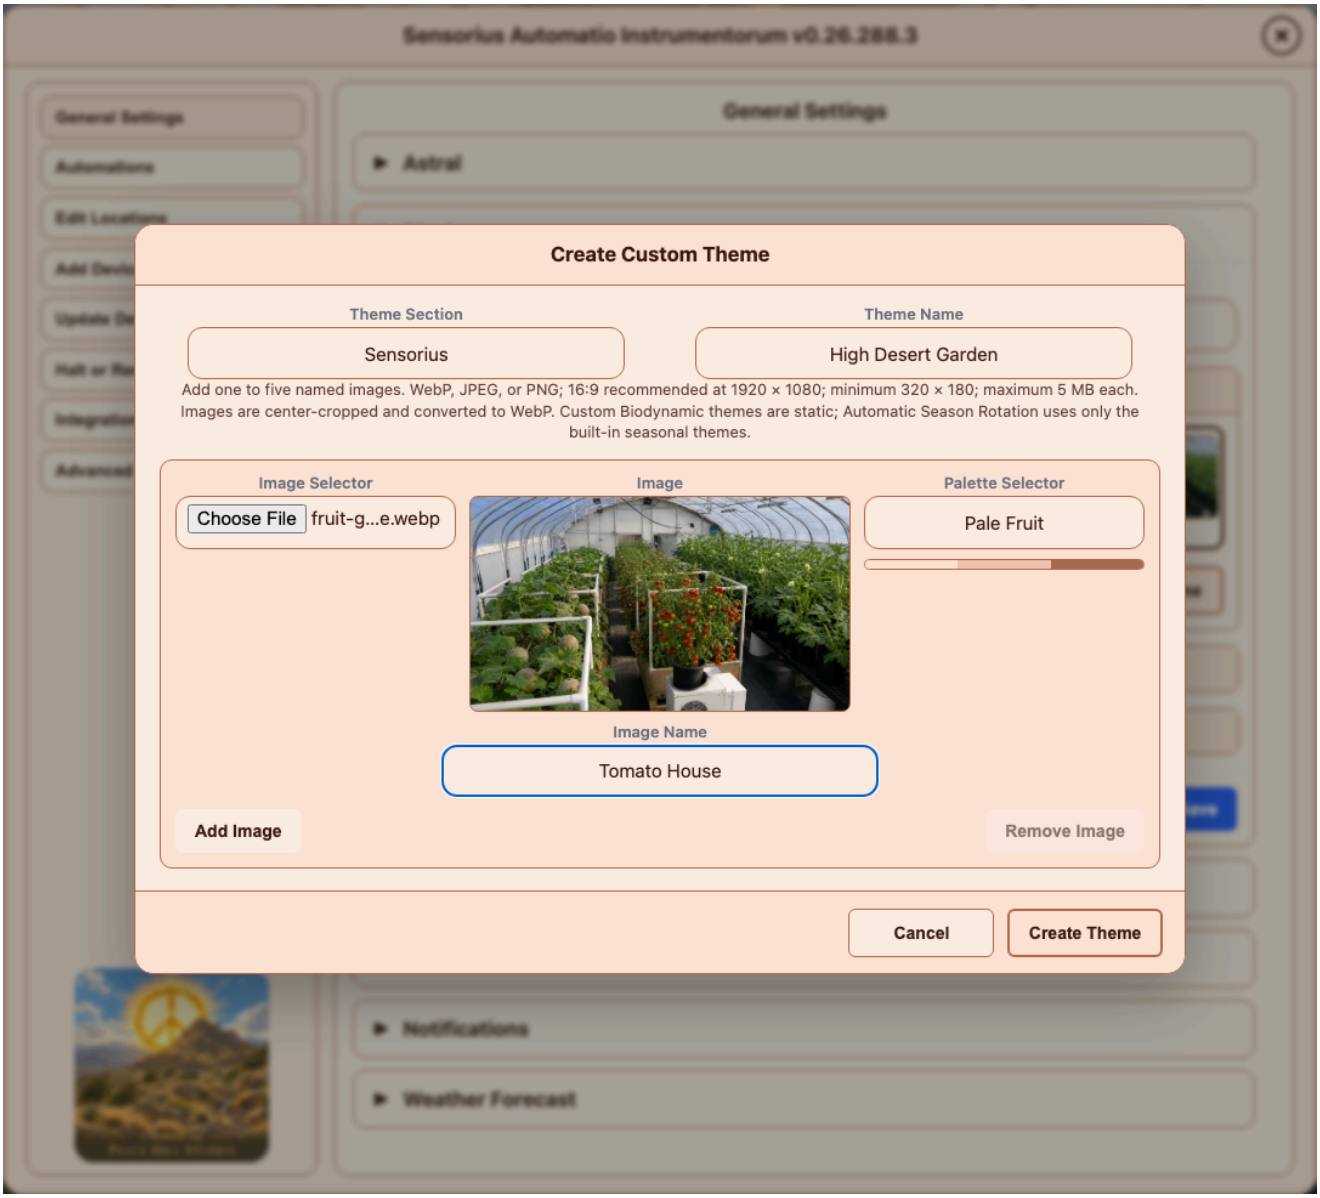

Select **Add Image** to append another image editor. The Add Image action follows the final row, while every removable row keeps **Remove Image** at the right edge.

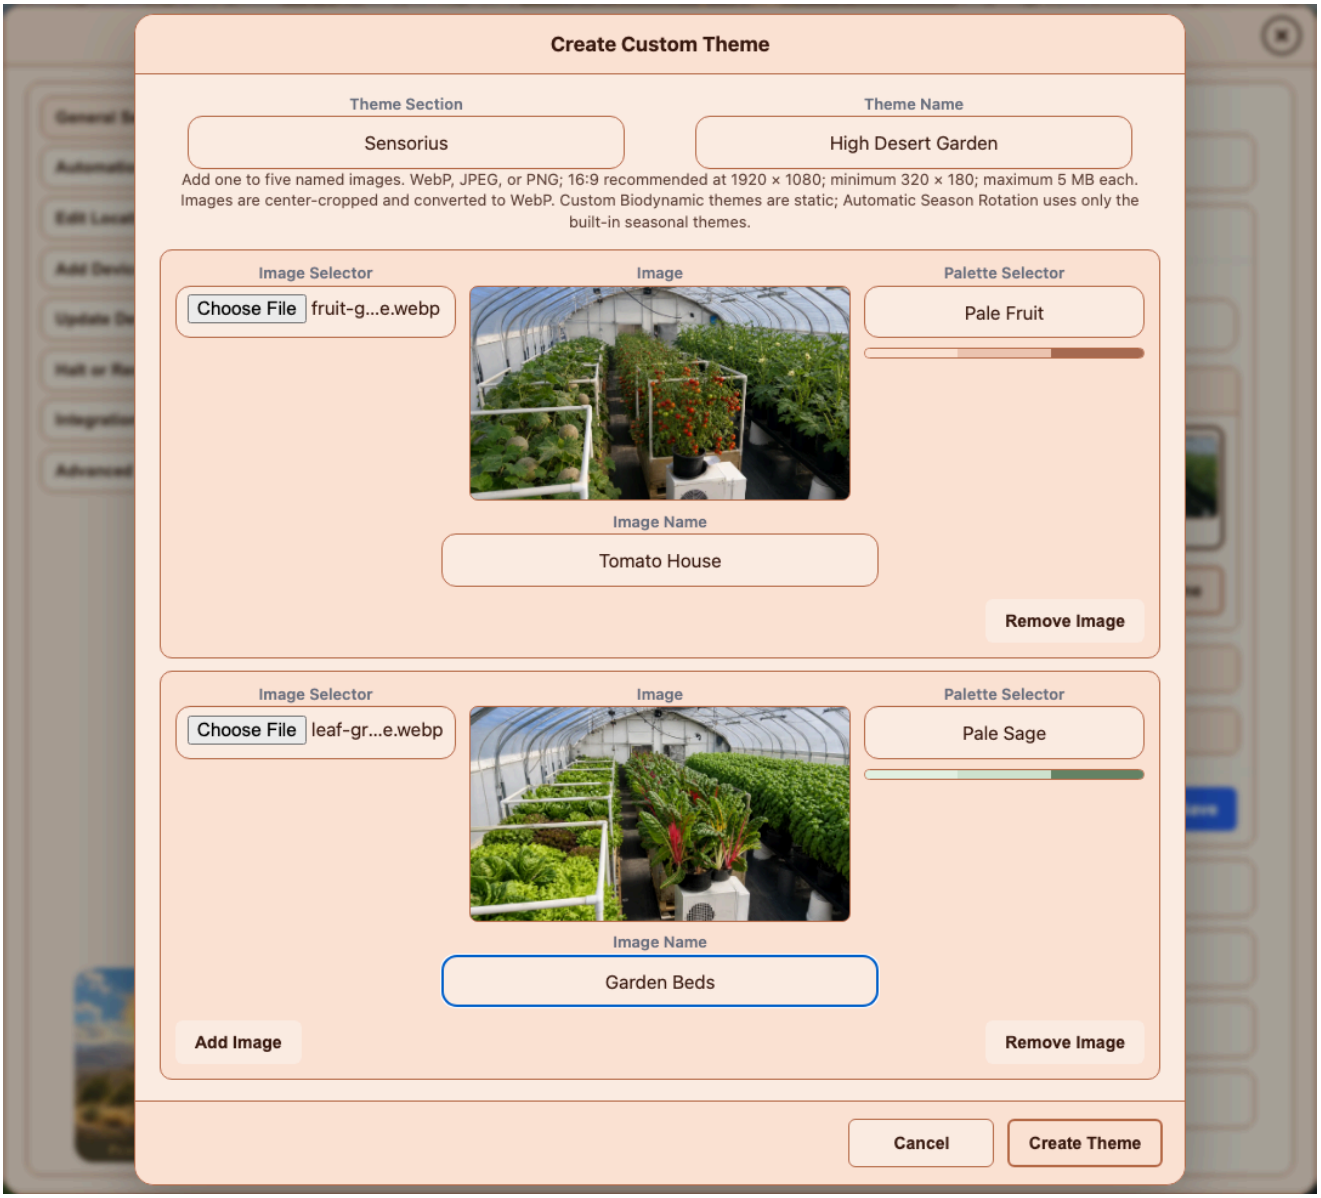

- **Save**: writes the display defaults. Reload the dashboard to see changes that are not applied immediately.

Network Settings

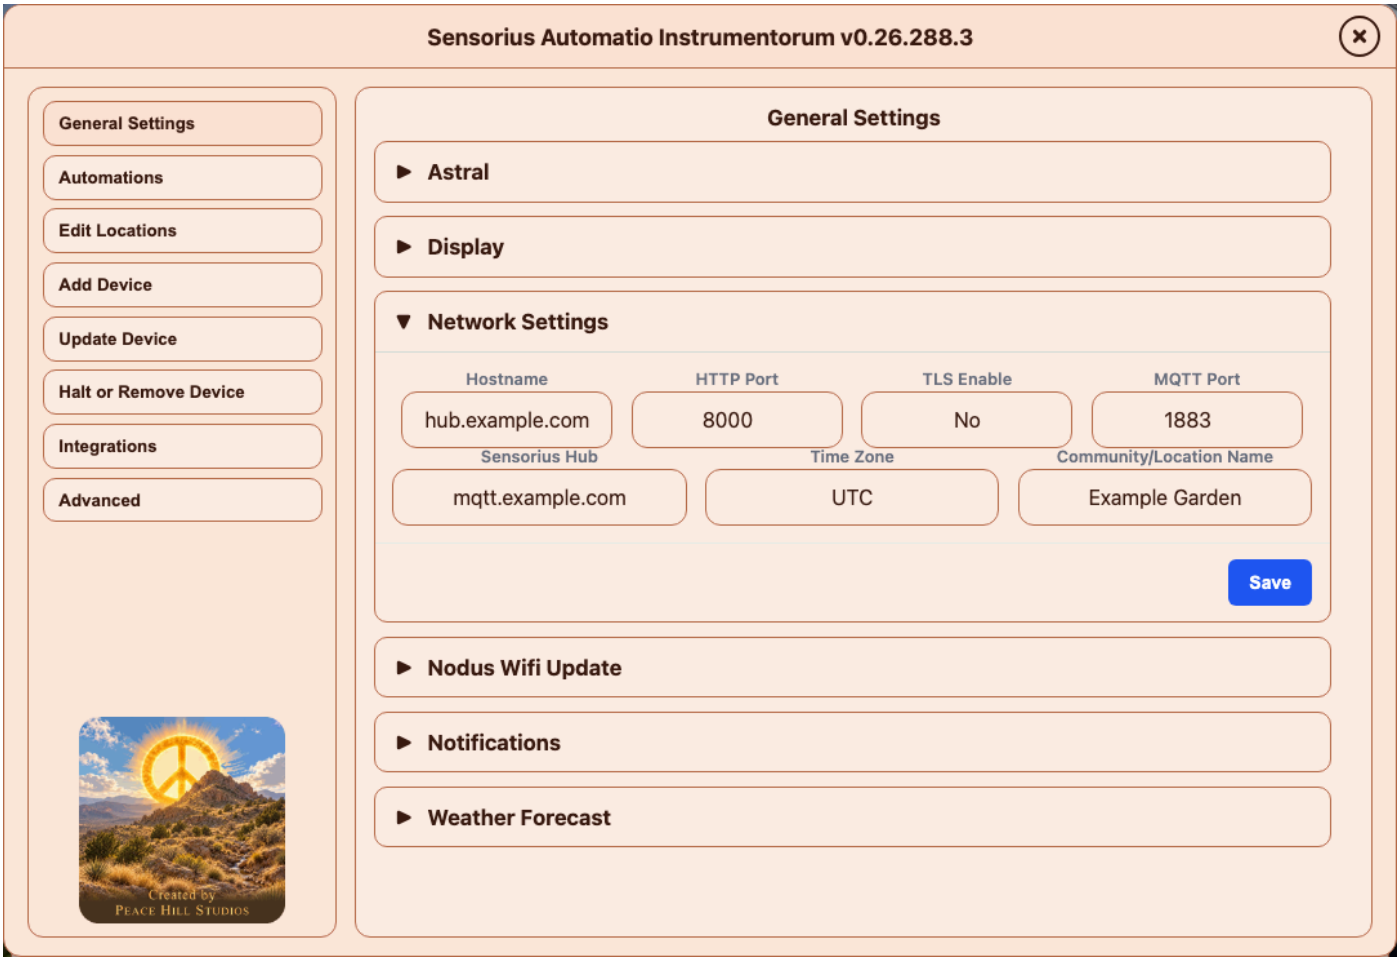

The **Network Settings** section contains the hub and primary MQTT connection settings:

- **Hostname**: read-only host name for this Sensorius hub. It comes from the active system settings and host runtime.
- **HTTP Port**: web UI port. Valid range is 1 to 65535. The default is usually 8000. Changing it may require a restart or opening the new URL.
- **TLS Enable**: MQTT TLS setting for the Sensorius sensor network. Options are **No** and **Yes**. Use Yes only when the broker is configured for TLS.
- **MQTT Port**: MQTT broker port. Valid range is 1 to 65535. Common values are 1883 without TLS and 8883 with TLS.
- **Sensorius Hub**: MQTT broker hostname or IP used by Sensorius and Nodus devices.
- **Time Zone**: IANA timezone name, such as `America/Denver`. It controls dashboard time labels, graph time labels, Astral timing, and calendar day boundaries.
- **Community/Location Name**: optional friendly community or locality shown as the large location heading in Caelus, such as `Silver City`. It does not change the Astral coordinates, timezone, or any sensor/switch location. Leaving it blank uses the default Caelus station label.
- **Circled ×**: closes General Settings and returns to the dashboard.
- **Save**: writes the values in this section.

Nodus Wifi Update

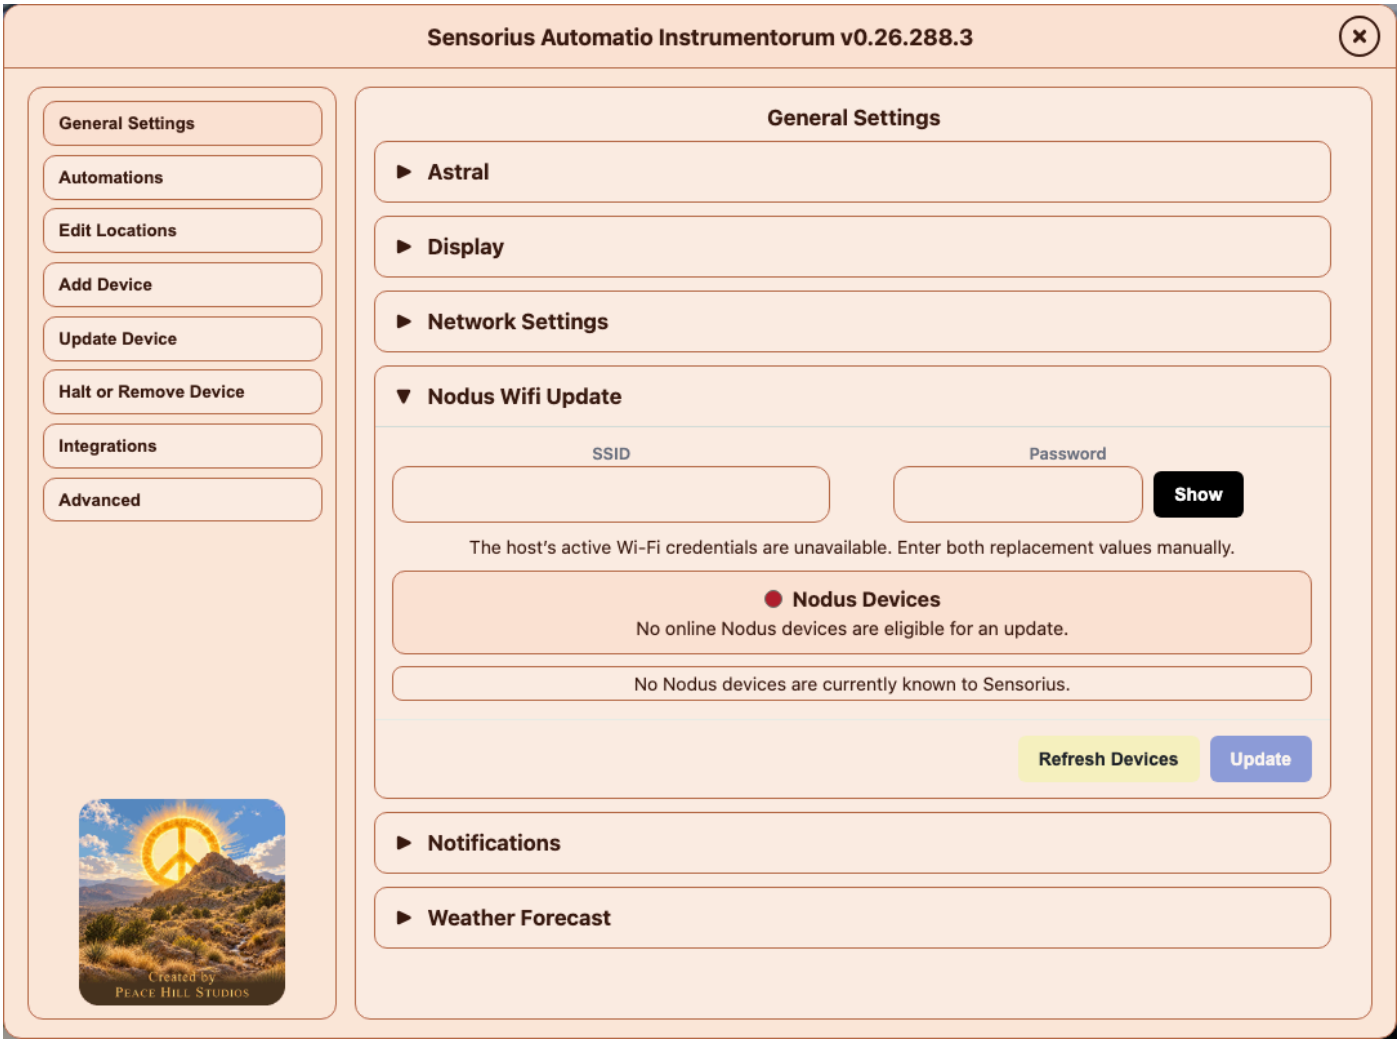

Open the **Nodus Wifi Update** section in the main **General Settings** pane to send a replacement network name and password to connected Nodus devices before changing the router.

Before You Begin

- Keep the router on its existing Wi-Fi credentials until Sensorius finishes the update and reports the result for every expected Nodus.
- Power on every Nodus you intend to update and confirm that each one appears as **online**. An offline Nodus cannot receive the new credentials.
- Have the router administration password available. Also be prepared to reconnect the Sensorius host computer to the replacement Wi-Fi network after the router restarts.

Update Procedure

1. Open **General Settings**, then expand **Nodus Wifi Update**.
2. Wait for the device scan to finish. Check that every Nodus you expect to update is listed as **online**. Resolve missing or offline devices before continuing.

3. Review the **SSID** and **Password** fields. Sensorius attempts to populate them with the host computer's current Wi-Fi credentials when the operating system permits access. The password is masked; select **Show** to inspect it and **Hide** to mask it again. Enter the credentials manually if either field could not be read.
4. Replace the SSID, password, or both with the credentials the router will use after the change. These values are case-sensitive.
5. Select **Update**, review the confirmation list, and confirm the update. **Do not change or restart the router yet.**
6. Sensorius sends the SSID and password one setting at a time to every eligible Nodus, waiting for each setting to be acknowledged and saved. It completes this staging pass before sending restart commands. Only devices that confirm both settings are restarted.
7. Review every per-device result:
    - **Restarting** means the new credentials were saved and the restart command was accepted.
    - **Failed** means the credentials were not confirmed.
    - **Restart failed** means the credentials were saved, but Sensorius could not confirm the restart command.
    - **Skipped** or **unavailable** means the device was not eligible for the update, commonly because it was offline.
8. When all expected devices report **Restarting**, sign in to the router, change its SSID and password to the same values, and allow it to reboot.
9. Reconnect the Sensorius host computer to the replacement Wi-Fi network. A host using a wired Ethernet connection may remain reachable throughout the change.
10. Reopen the Sensorius dashboard and verify that every Nodus returns online. A Nodus may enter AP mode while the router is unavailable and can take one AP restart cycle, typically about 5 to 10 minutes, to rejoin.

If the results are mixed, do not assume the fleet update is complete. Successful devices have already received the new credentials and may be restarting, while failed or skipped devices still use the old credentials. Retry any device that remains reachable, or recover it through Nodus AP mode, before completing the network cutover. After the router change, a Nodus that does not return online must be connected to and corrected through AP mode.

The host credentials are loaded transiently into the form. Both fields are cleared immediately after submission or when the settings window closes. Sensorius does not save either value in hub settings, the database, browser storage, logs, or metadata shadows. The credential-read response and the non-retained MQTT command necessarily carry the values in transit; enable MQTT TLS and protect access to the Sensorius web UI.

Notifications

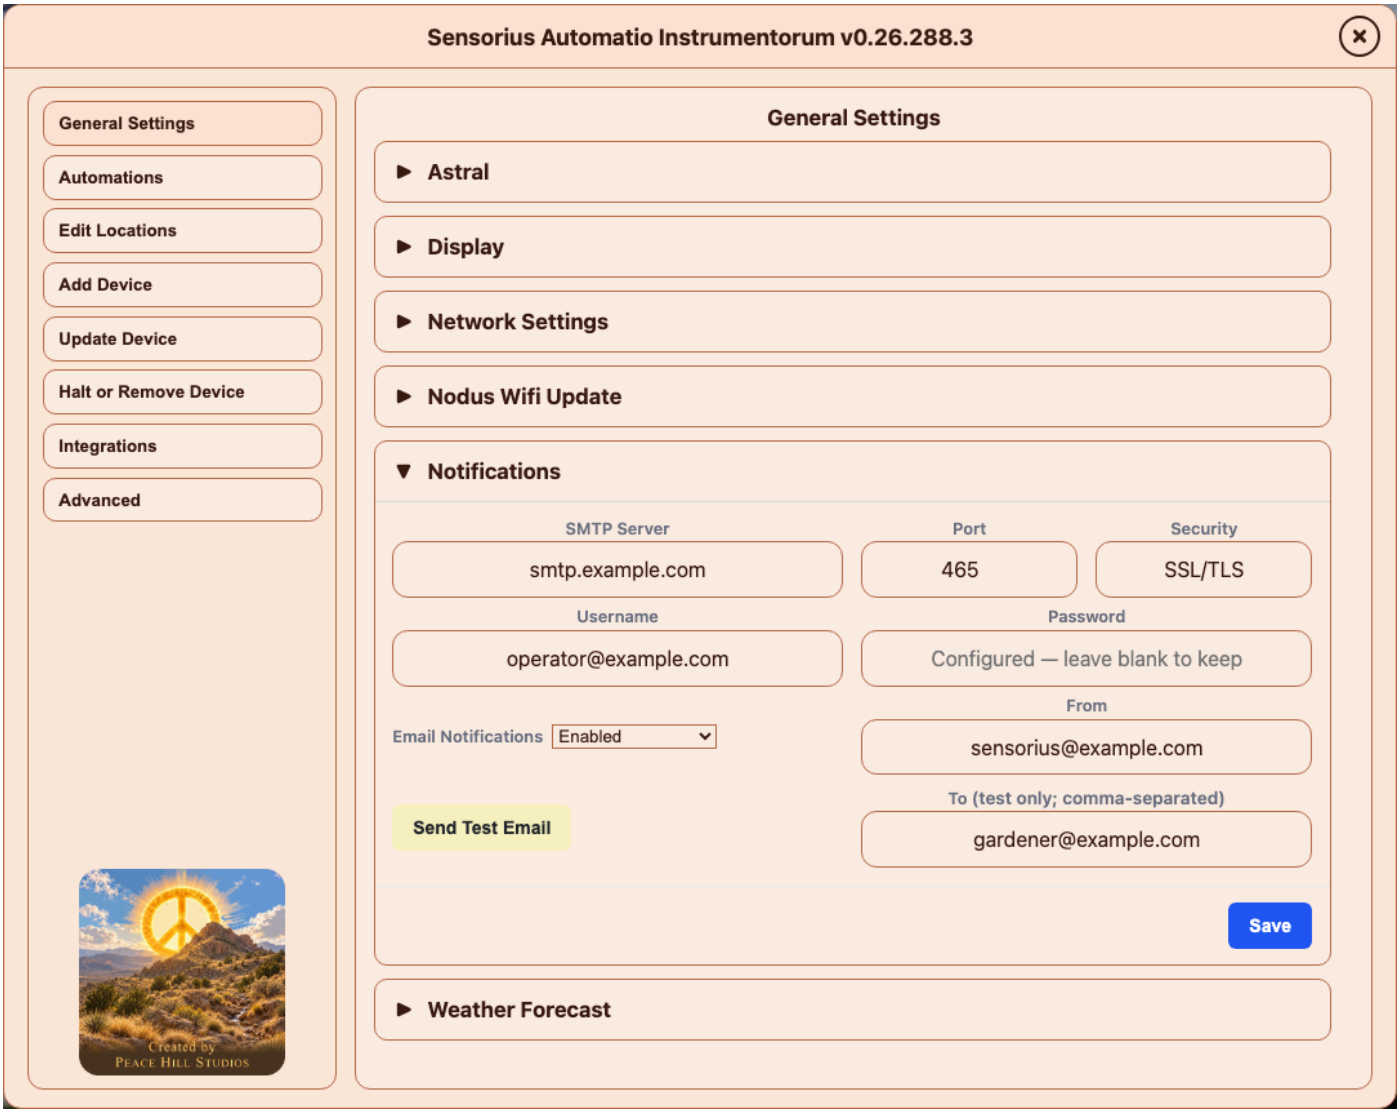

Enable **Email Notifications** and save the SMTP settings before creating a **Notify** action. The automation editor shows **Notify** only while email notifications are enabled. Disabling email notifications hides that actor and prevents automated email delivery, but does not remove saved automations.

The section configures the SMTP server, port, TLS mode, username, App Password, sender address, and enabled state. **To** accepts one or more comma-separated addresses used only by **Send Test Email**. Automation recipients are set on individual **Notify** actions under **General Settings > Automations**. Email connection values are saved in the protected project-root `.env` file.

Configure Gmail for Sensorius

Sensorius sends Gmail messages through Google's authenticated SMTP service. Do not enter the normal password for the Google Account. Google requires an App Password for this type of connection, and App Passwords are available only after 2-Step Verification is enabled.

1. Sign in to the Google Account that Sensorius will use to send notifications. Using a dedicated account for the hub can make access and alert history easier to manage.

2. Open the Google Account **Security** page and enable **2-Step Verification** if it is not already enabled. Complete Google's enrollment and verification prompts.

3. Open Google's App Passwords page. Sign in again if prompted.

4. Enter a descriptive app name such as `Sensorius Hub` and select **Create**.

5. Copy the generated 16-character App Password immediately. Google displays it only once. Sensorius accepts it with or without the spaces shown by Google.

6. In Sensorius, open **General Settings > Notifications** and enter:

    - **SMTP Server**: `smtp.gmail.com`
    - **Port**: `465`
    - **Security**: **SSL/TLS**
    - **Username**: the complete Gmail address, such as `hub@example.com`
    - **Password**: the generated Google App Password, not the account password
    - **From**: normally the same complete Gmail address
    - **Email Notifications**: **Enabled**

7. Enter one test recipient, or multiple comma-separated recipients, in **To**, then select **Send Test Email**. This tests the values currently displayed, so they do not have to be saved first. Check the recipient inbox and spam folder if Sensorius reports success but the message is not visible.

8. After the test succeeds, select **Save**. On later edits, leave **Password** blank to retain the stored App Password.

Port `587` with **STARTTLS** is also supported. Keep the port and security mode paired: use port `465` with **SSL/TLS**, or port `587` with **STARTTLS**. Google documents the SMTP host, authentication, and TLS requirements in its Gmail client settings, and explains App Password creation and restrictions in Google Account Help.

If **App Passwords** is unavailable, confirm that 2-Step Verification is fully enabled. Google may also hide App Passwords for work or school accounts managed by an organization, accounts enrolled in Advanced Protection, or accounts whose 2-Step Verification is configured only with security keys. For a managed Google Workspace account, ask the administrator whether authenticated SMTP and App Passwords are permitted. Google revokes existing App Passwords when the main Google Account password changes; create and save a new App Password if email delivery stops afterward. Revoke the Sensorius App Password from the Google Account when the hub is retired or no longer uses that account.

Weather Forecast

Hourly conditions use the same MET Norway symbol and Open-Meteo weather-code mappings as standalone Caelus; NWS conditions retain the provider's wording. The full-screen Today card covers the remaining local day, and each daily glyph represents the most common hourly condition (ties use the first encountered). Daily summaries describe early skies and the prevailing precipitation period, including snow/sleet and thunderstorms. Nine bundled SVG weather glyphs work offline without an emoji font. Hourly clear and partly cloudy forecasts use moon artwork at night, selected from provider daylight flags or MET day/night symbols. When those are absent, Sensorius calculates solar position at the forecast timestamp and station coordinates, including polar day/night. Incomplete offline records without location or time retain daytime artwork. Daily glyphs use daytime artwork. The icons use Twemoji artwork, with a composed partly cloudy night variant;

forecast condition selection remains aligned with Caelus. MET amounts and probabilities come from the same shortest available forecast period, preserving six- and twelve-hour precipitation totals. When MET omits a probability, Caelus's estimate is used: 5% for no precipitation, 55% below 1 mm, and 85% at or above 1 mm.

Both forecast tiles include a forecast synopsis. Open-Meteo and MET Norway summaries are assembled from hourly conditions, temperature range, maximum wind, and peak precipitation chance, using the selected display units. NWS supplies its own period narrative when available; the period name is shown and its text keeps the provider's original units. If that optional text is unavailable, Sensorius builds the same hourly summary used for the other providers.

The Caelus forecast card also shows temperature, humidity, and wind ranges and hourly humidity and wind alongside precipitation chances. Both cards retain their existing footprint; focus or scroll the synopsis to read longer text. Missing provider values appear as dashes rather than a zero forecast.

The full-screen forecast is titled **Living Weather**, with the Caelus icon and "Created by Peace Hill Studios" beneath the title. The Biodynamic Calendar includes this credit in the central calendar icon. The settings menu displays the Peace Hill Studios image at the bottom.

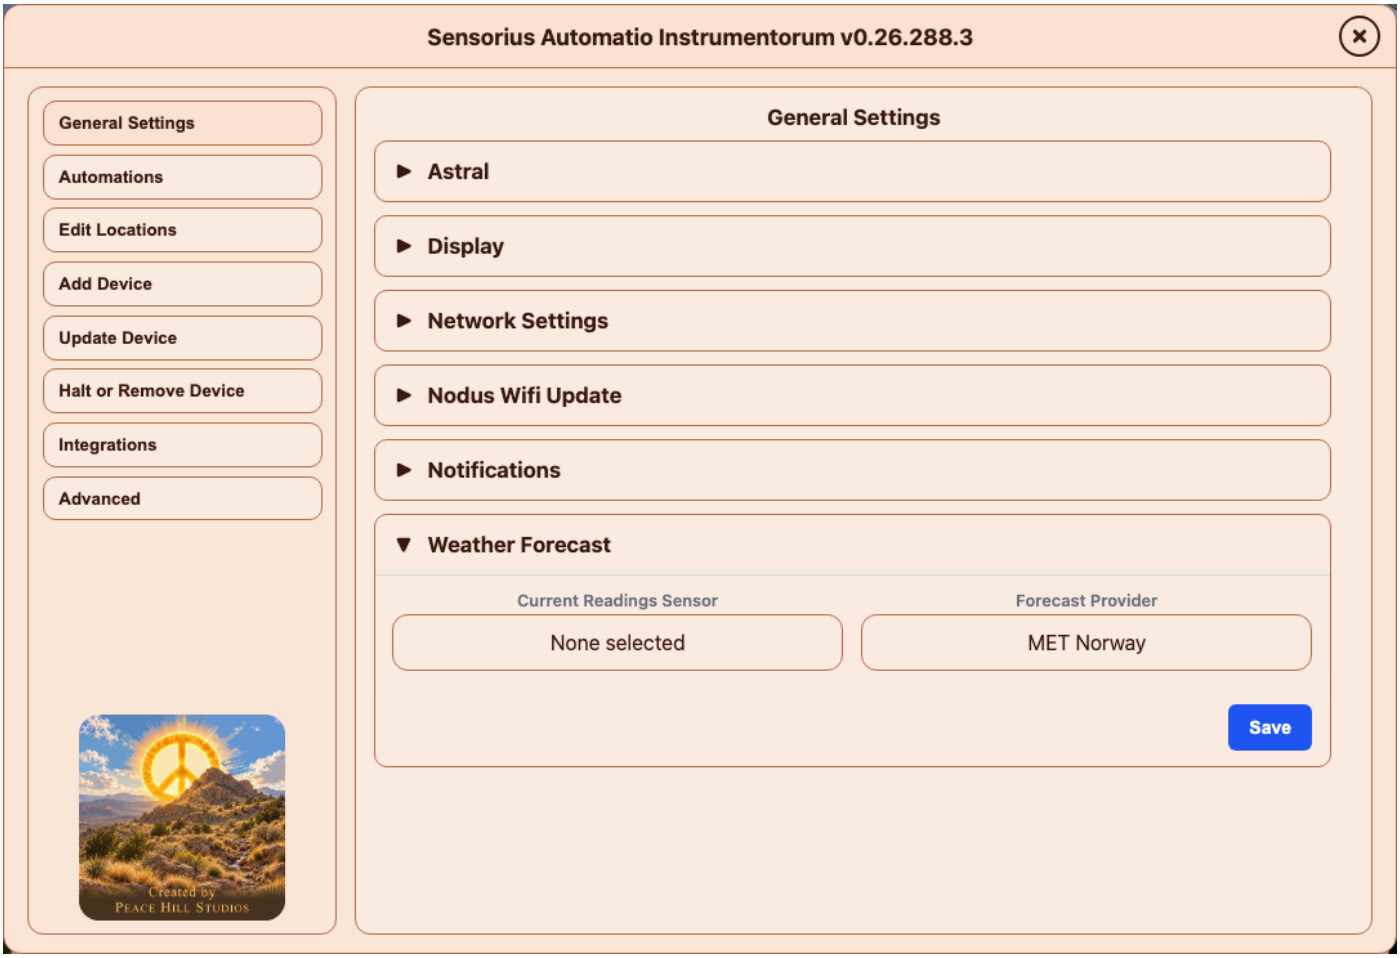

Fields and selectors:

- **Forecast Provider**: selects the forecast source used by the dashboard and Caelus. Options are **MET Norway**, **US · National Weather Service**, **Open-Meteo**, and **Disabled**.

- **Current Readings Sensor**: selects any live sensor in the sensor directory. Directly connected Raspberry Pi sensors remain selectable while their first reading is being collected after startup. If the directory is briefly empty, the selector retries automatically and refreshes whenever Integrations is activated or reopened. Caelus displays that sensor's configured Display Metrics in their saved order. A WeeWX station can therefore supply outdoor temperature, humidity, rain, wind direction, and barometric pressure.
- **Save**: writes `[WeatherForecast]` provider, theme, and sensor selection.

Forecast placement, astronomy, sunrise, and sunset use the latitude, longitude, and timezone under **General Settings > Astral**. The Current Readings panel follows the selected sensor's configured **Display Metrics**. When that sensor reports temperature or relative humidity, the dashboard's 24-hour forecast tile shows the live reading before the forecast range. The temperature reading and range use the selected system display units.

Automations Pane

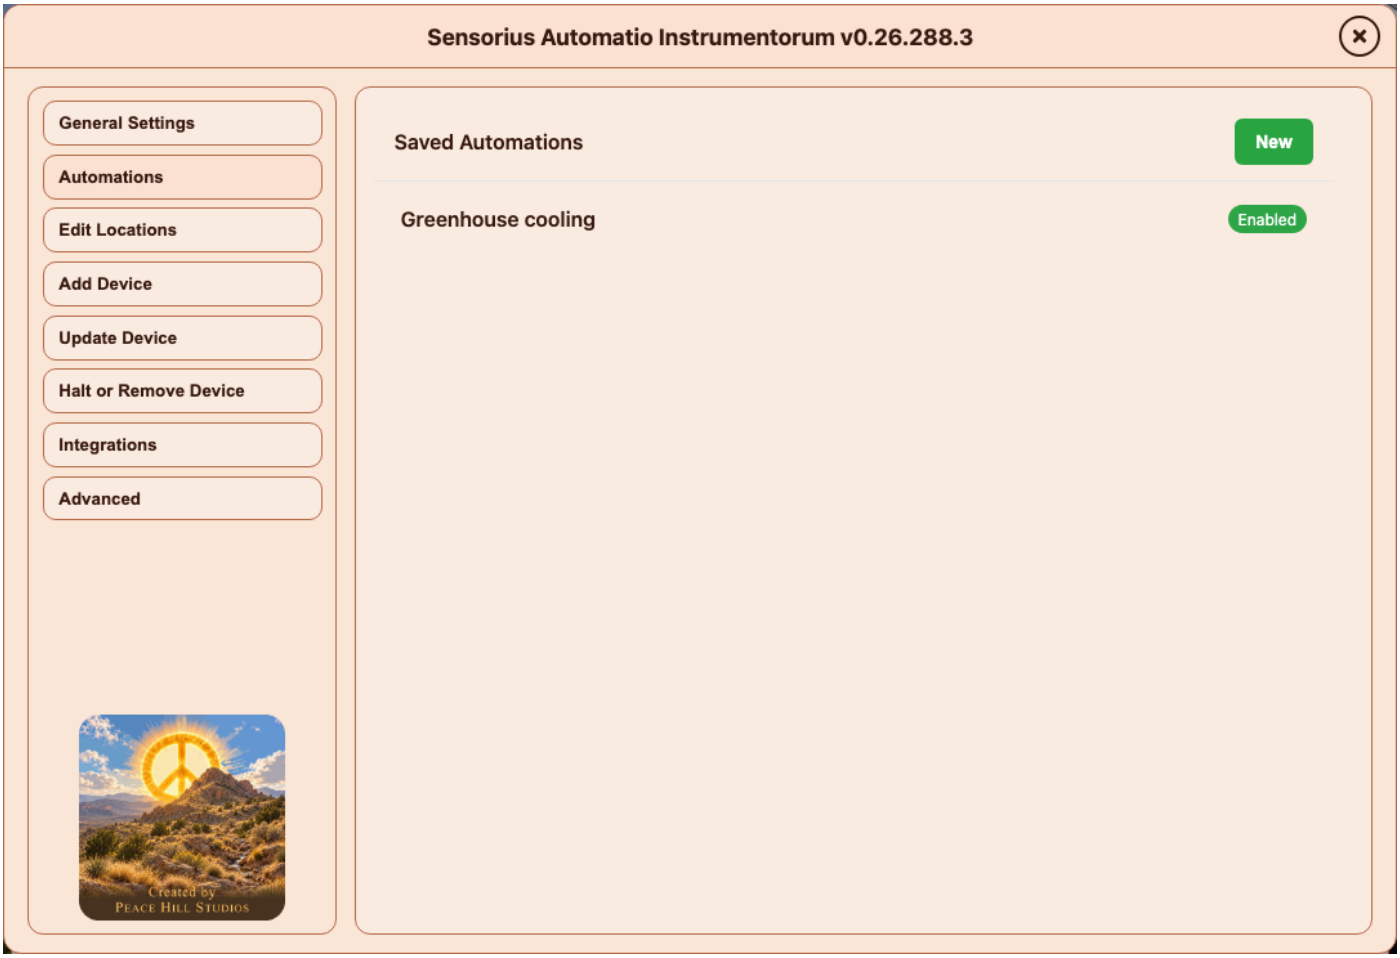

Open **General Settings > Automations**. Automations are configured globally from General Settings and are no longer edited from an individual switch's settings. The saved list shows every automation and whether it is enabled. This also allows a notification-only automation to run when no switch is installed.

Controls:

- **New**: opens a new automation definition.

- **Saved Automations**: returns from the editor to the saved list.
- **Remove**: asks for confirmation, then deletes the selected automation.
- **Enable** in the editor: sets whether the rule is active. Options are **Yes** and **No**.

Automation rules are stored at `/Users/<user>/Sensorius/automation_settings/automations.toml` on macOS or `/home/<user>/Sensorius/automation_settings/automations.toml` on Linux. The General Settings editor loads all saved rules, sensor and metric choices, and the available actor directory. Rules found only at the former path show a **Legacy — open and Save** marker; opening and saving one moves that individual rule to the new path.

Automation Definition

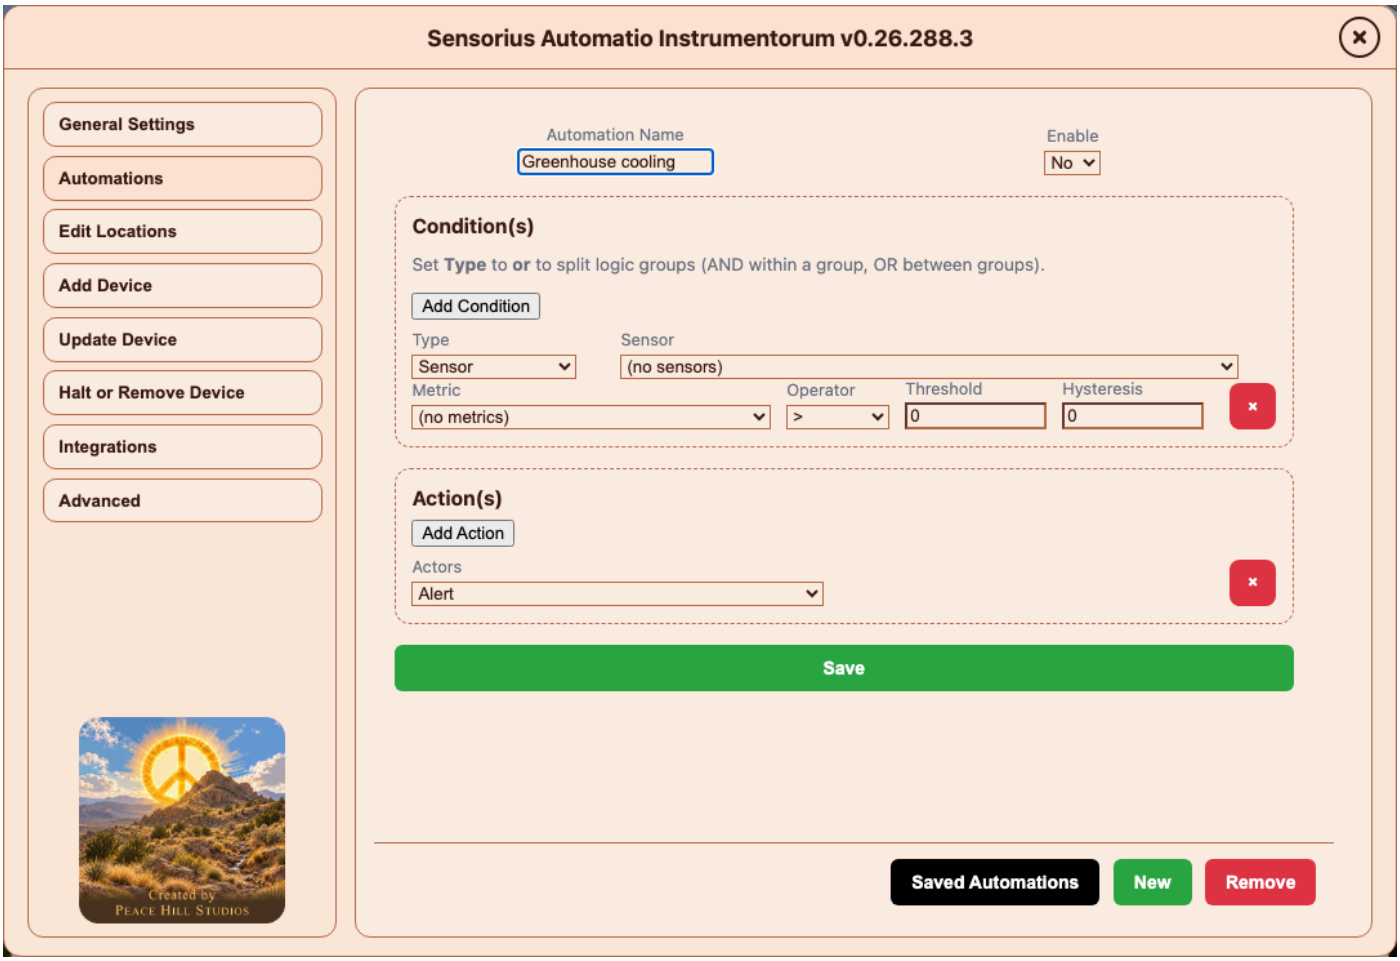

Top-level fields:

- **Automation Name**: friendly name shown in the saved automation list.
- **Enable**: **Yes** activates the automation, **No** saves it but does not run it.
- **Add Condition**: adds another condition row.
- **Add Action**: adds another action row.
- **Save**: saves the automation.

Condition **Type** options:

- **Sensor**: compares a sensor metric to a threshold.
- **Time of Day**: active only inside a daily time window.

- **Timer**: active for a repeated duration, such as 5 minutes every hour.
- **Astral**: uses sunrise or sunset timing from Astral location.
- **Calendar**: triggers at a biodynamic, lunar, seasonal, or selected date/time event.
- **Severe Weather**: active NWS warnings and watches at the Astral location.
- **Or**: separates groups of conditions. Conditions within a group are AND; groups separated by OR are OR.

Sensor Conditions

- **Sensor**: sensor to watch. Options are dashboard-visible sensors.
- **Metric**: metric from the selected sensor.
- **Operator**: comparison operator. Options are `>`, `<`, `==`, and `!=`.
- **Threshold**: numeric value used by the comparison.
- **Hysteresis**: buffer around the threshold to reduce rapid on/off cycling.

Time-of-Day Conditions

- **Start Time**: beginning of the active window.
- **Stop Time**: end of the active window.
- **Days**: weekdays when the condition can be true. Options are Mon through Sun.

Astral Conditions

- **Event**: sunrise/sunset mode. Options are **sunrise to sunset**, **sunset to sunrise**, **sunrise**, and **sunset**.
- **Offset (minutes)**: shifts the event by -120 to 120 minutes. Negative starts before the event; positive starts after.
- **Days**: weekdays when the Astral rule can run.

Timer Conditions

- **Every**: repeat interval. Options are 5 minutes, 15 minutes, 30 minutes, 1 hour, 3 hours, 6 hours, 12 hours, and 24 hours.
- **Duration**: active duration in minutes, from 1 to the selected Every interval minus 1 minute.

Calendar Conditions

Select **Calendar**, then choose **Date/Time**, **BD Transitions**, **Lunar Events**, or **Season** in the selector to its right. A third control selects the event or scheduled date/time:

- **Date/Time**: select a one-time date and time in the timezone shown above the field. This produces a generic Sensorius Calendar alert or event email. It needs no sensor, location, or ephemeris data. Nonexistent or repeated daylight-saving times are rejected; choose another time. A past event is not replayed when Sensorius starts.

- **BD Transitions**: **All**, **Earth/Root**, **Water/Leaf**, **Air/Flower**, or **Fire/Fruit**. The selection refers to the incoming element and plant part.

- **Lunar Events**: **All** or one of **New Moon**, **Waxing Crescent**, **First Quarter**, **Waxing Gibbous**, **Full Moon**, **Waning Gibbous**, **Last Quarter**, or **Waning Crescent**.

- **Season**: **All**, **Imbolc**, **Spring Equinox / Ostara**, **Spring Equilux**, **Beltane**, **Summer Solstice / Litha**, **Lughnasadh / Lammas**, **Autumn Equilux**, **Autumn Equinox / Mabon**, **Samhain**, or **Winter Solstice / Yule**. Solstices/equinoxes fire at their calculated times; traditional cross-quarter festivals fire at local midnight on their observed dates. Names and festival dates follow the configured hemisphere. Equilux fires at sunrise on the local date closest to twelve hours of daylight; it is omitted where no twelve-hour crossing occurs. See Calendar behavior for exact dates and conventions.

Calendar conditions have no offsets. They trigger once when the event occurs, at the next automation evaluation. Lunar events use calculated phase milestone instants; crescent and gibbous milestones are halfway between the main quarter phases. Resolve the Astral location/timezone and enable local calendar ephemeris data first. Startup establishes a baseline without replaying old events.

Choose **Alert** for the existing persistent dashboard notification style, or **Notify** for an event email. BD messages show the transition time and From/To descriptions; BD alerts retain their established colors. Lunar event messages also include phase details, illumination, local location and time, moonrise/moonset, and sunrise/sunset. Calendar Notify sends one event email with no CLEARED follow-up. Lunar emails also embed a Lunar Calendar PNG showing the phase, surrounding phase dates, and local Sun/Moon times. The graphic uses **Local View**, orienting the illuminated edge and lunar surface for your configured location at each phase's event time. The full report remains available as plain text. Older BD Transitions rules open as Calendar → BD Transitions → All. See Calendar behavior for timing and compatibility details.

Actions

- **Actors**: action target. Switch entries are shown as `<switch_id>:<switch_label>` and use the stable channel ID behind the scenes. When email notifications are enabled, **Notify** is also available.
- **Set State**: shown for a switch actor; selects **On** or **Off**.
- **Restore Action**: shown for a switch actor. **To previous state** returns the switch to its previous state when the rule is no longer true. **Leave at set state** leaves the switch where the action put it.
- **Delay Action (secs)**: shown for a switch actor; waits 0 to 60 seconds after the rule becomes true before applying the action.
- **To**: shown for the **Notify** actor. Enter the recipient for this automation. Sensorius sends a **TRIGGERED** email when the automation becomes true and a **CLEARED** email when it becomes false. Each message lists the AND/OR condition groups and their results, current sensor values where applicable, and all configured actions. Delivery uses the global rolling hourly and 24-hour email limits and retries a failed SMTP attempt up to three times. If every attempt fails, connected dashboards display an error toast that remains visible until clicked. Sensorius records the state only after successful email delivery, preventing duplicate messages after a restart while still detecting a changed state after downtime.

Switch actions set absolute states, not toggle or invert commands. All actions in one automation share the same condition groups. **To previous state** is captured when an action actually changes a switch; if the switch is already at the requested state, there is no new previous state for that action to restore.

To alternate two switch channels in one timer automation:

1. Disable the automation.
2. Put the channels in their normal baseline state manually. For example, set Green **On** and Yellow **Off**.
3. In the automation action rows, choose the state wanted during the timer window. For example, set Green **Off** and Yellow **On**.
4. Set **Restore Action** to **To previous state** for both rows.

5. Save and enable the automation.

With that setup, the timer window applies the action states, and the end of the window restores the manually set baseline state.

For critical loads, test automations with harmless equipment first. A short delay and hysteresis can prevent relay chatter when readings hover near a threshold.

If the Astral fields are wrong, biodynamic timing, sunrise/sunset automations, and weather forecast placement may also be wrong.

Edit Locations Pane

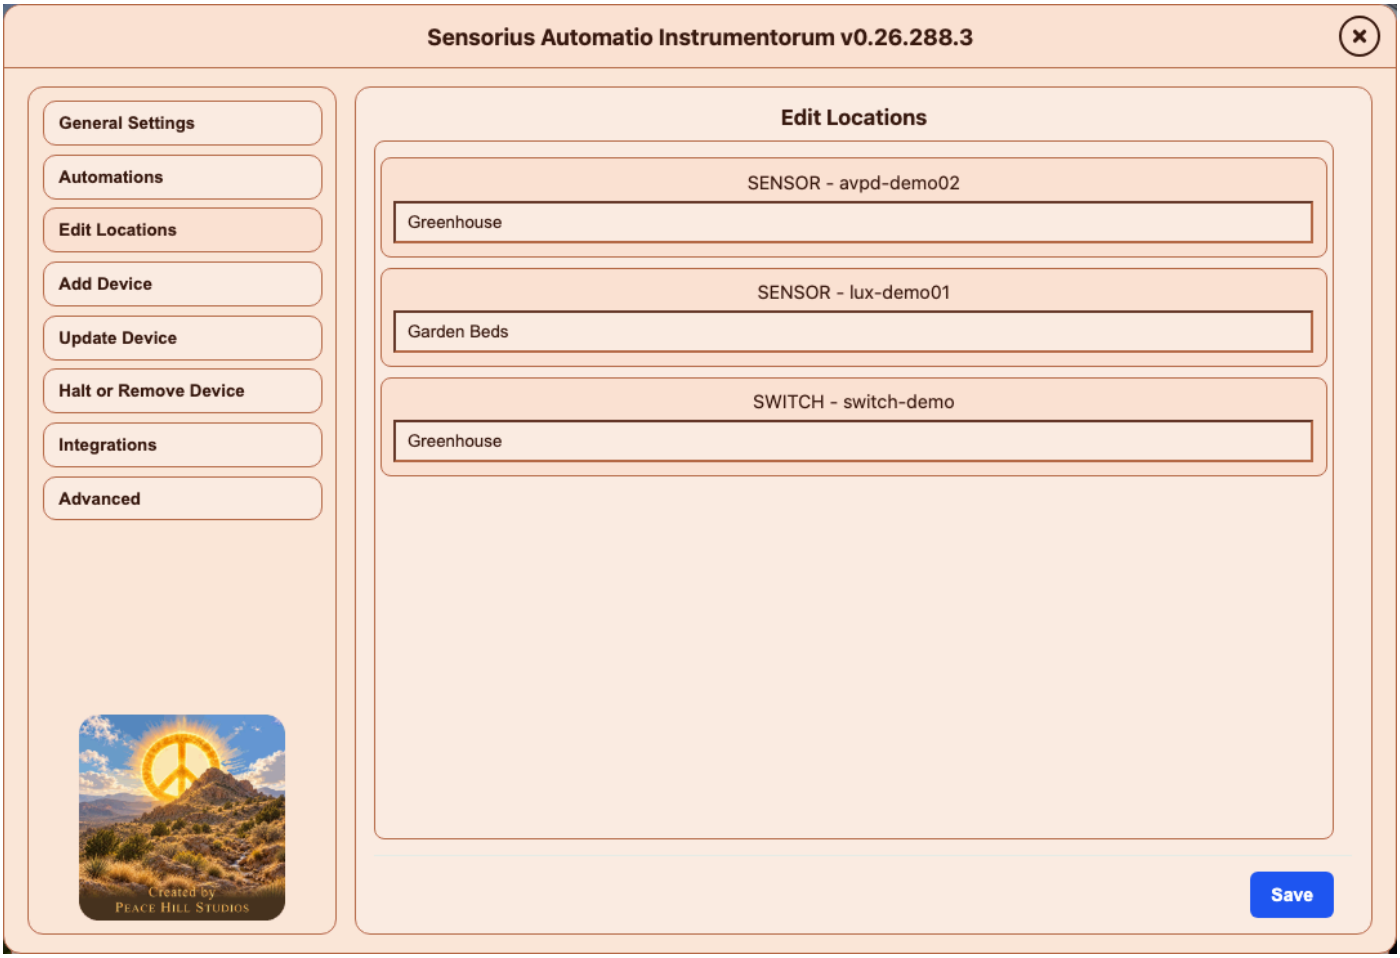

The Edit Locations pane lists sensors and switches together.

Fields:

- **Device row label**: shows whether the row is a sensor or switch and shows its ID. Data comes from sensor and switch settings managers.
- **Location input**: updates that device's location. Sensor rows write to `sensor_settings/<sensor_id>/sensor.toml`; switch rows write to `switch_settings/<switch_id>/switch.toml`.
- **Save**: writes all non-empty location changes.

Locations should describe places people recognize: Greenhouse 1, West Bed, Seedling Bench, Main Pump, Hoop House, or Barn Weather Station. After a location change is saved, Sensorius reloads the dashboard so existing Sensor Group headings, the grouping of Switch Tiles, and the location filter use the new value.

Add Device Pane

Use Add Device to onboard a factory-bootstrapped Nodus device, add a local weather station. The pane contains **Nodus Device** and **Weather Station**. Expand **Weather Station** for **Ecowitt Gateway**, **AcuRite USB Console**, **Davis Vue USB Console**, and **Oregon Scientific USB Console**. Each station section expands and collapses independently. See USB console support for supported hardware and configuration. The descriptions below follow the same order. Screenshots use the running Sensorius app on samhain; private network values are replaced with examples.

Nodus Device

Use the instructions for the platform running Sensorius. Opening the dashboard in a browser on another computer does not change the hub's onboarding method.

Nodus on Linux and Raspberry Pi

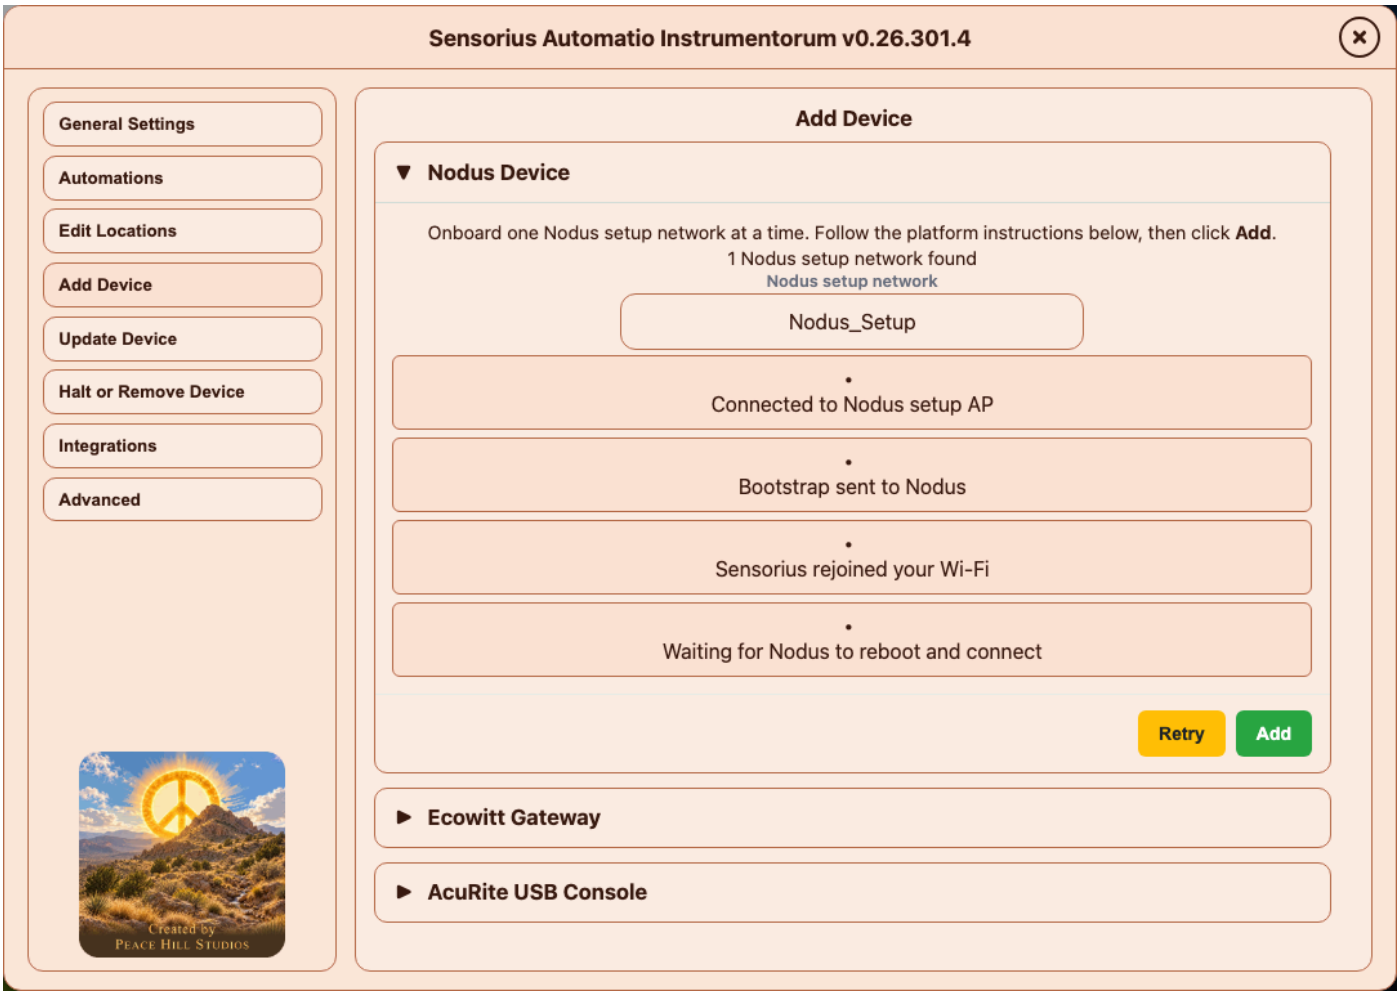

The image previews the Linux/Raspberry Pi workflow using samhain's live page with an example Linux scan response. Samhain itself runs macOS; this is not a physical Linux/Pi onboarding capture. No onboarding was performed.

On Linux and Raspberry Pi, Sensorius scans for the Nodus setup access point, joins it, sends the bootstrap configuration, and restores the previous network. A failed scan leaves Add disabled; confirm that the Nodus AP is broadcasting, then use Retry. For Raspberry Pi deployments that onboard over Wi-Fi, use a 2.4 GHz network path. If the router combines 2.4 GHz and 5 GHz under one SSID, ethernet on the Raspberry Pi is usually the most reliable setup. If Add Device reports `network_control_not_authorized`, the Linux/Raspberry Pi service install did not grant NetworkManager control; use the Operations guide to repair the service authorization.

Before switching Wi-Fi, the page creates a resumable onboarding session. A browser connected through the Pi's Wi-Fi may be temporarily unreachable while the Pi joins the Nodus AP; progress polling resumes after the Pi restores its previous network. Run Sensorius through `sensorius.service`, not a foreground SSH process, during this transition.

Nodus on macOS

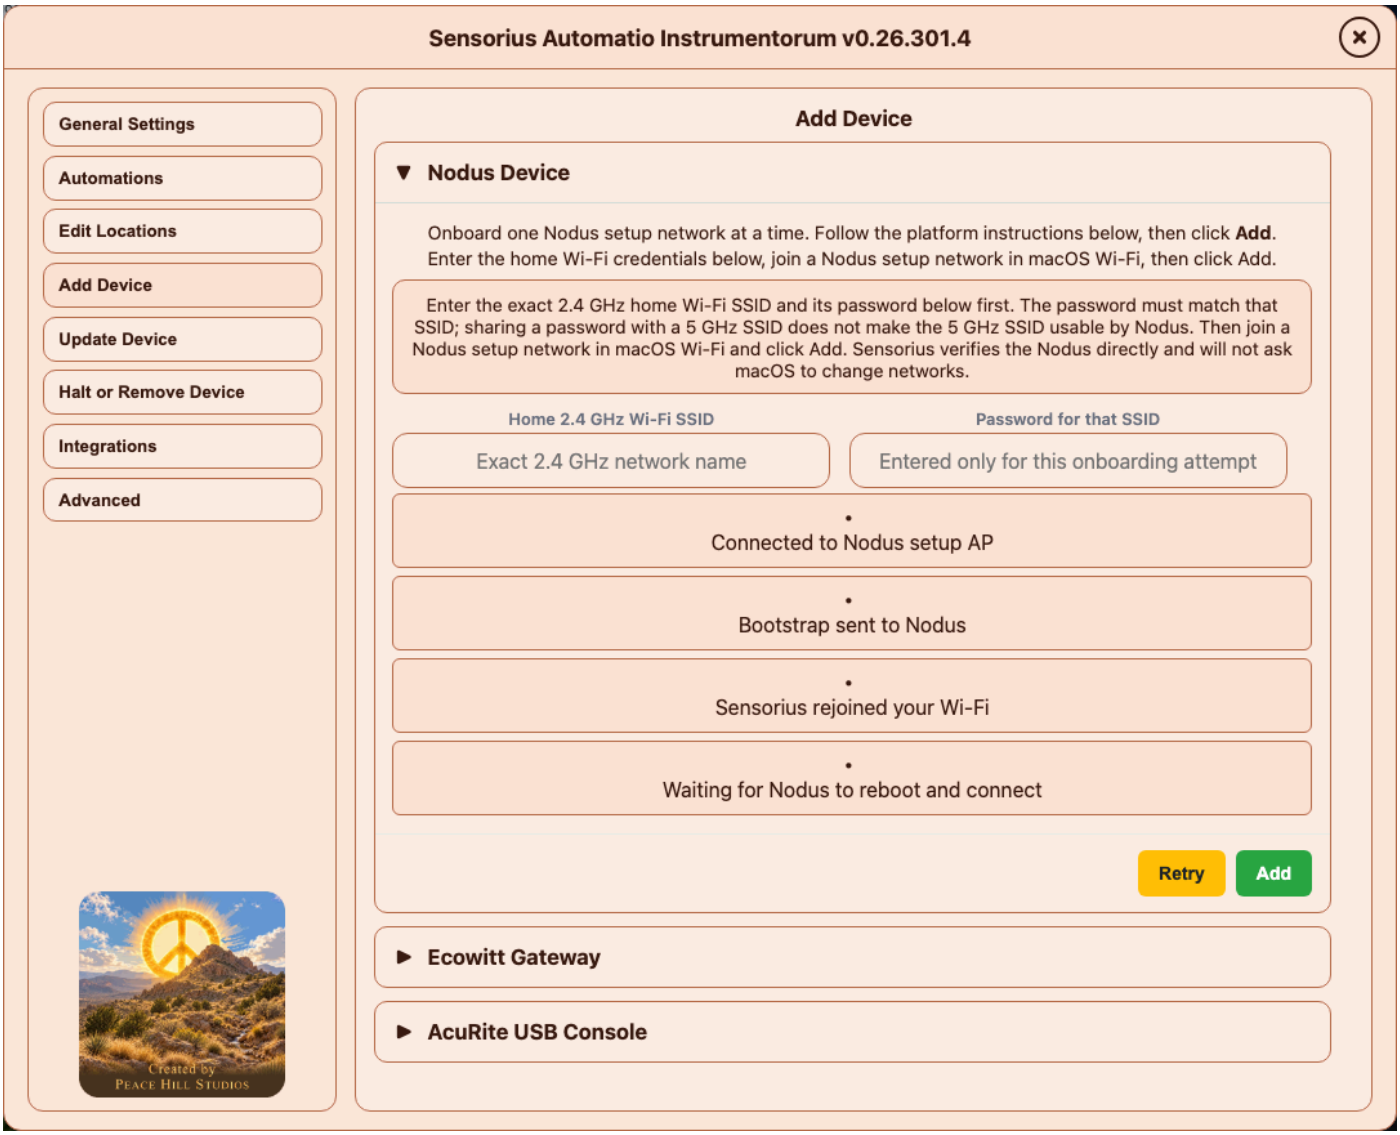

macOS requires administrator authorization when an application changes Wi-Fi networks programmatically and may request the administrator username and password multiple times during one onboarding attempt. Even after the user authorizes those changes, macOS can report stale or incomplete Wi-Fi state. That makes automatic switching less predictable and less user-friendly than a single manual network selection, so Sensorius deliberately leaves the Wi-Fi change to the user.

Enter the exact 2.4 GHz home Wi-Fi SSID and the password for that SSID in Add Device before changing networks. The SSID matters even when a router uses the same password for separate 2.4 GHz and 5 GHz networks; select the 2.4 GHz network because Nodus cannot join a 5 GHz-only SSID. Join the `Nodus-<serial-number>` setup network in macOS Wi-Fi, then return to Sensorius and click Add. A previously used Nodus may appear under Known Networks; a new one may appear under Other.

Sensorius verifies the manual join using the `192.168.4.x` Wi-Fi address and the Nodus `/itaot-meta` endpoint. It does not use `networksetup` to join, inspect, or restore Wi-Fi because current macOS versions can report error `-3900` or stale association state after a successful graphical join. After bootstrap, rejoin the home network in macOS Wi-Fi if it does not reconnect automatically. Ethernet is not required: when Wi-Fi is the Mac's only network connection, keep Sensorius open at `http://127.0.0.1:8000`; the Nodus AP disappears after bootstrap and macOS can then reconnect to the home network. Sensorius waits for the MQTT handshake and the Nodus retries its broker connection until the Mac is reachable. If the AP disappears before its HTTP response reaches Sensorius, Add Device reports that the response was lost and continues waiting for the correlated MQTT hello instead of immediately declaring failure.

Shared Nodus Fields and Status

- **Scanning for Nodus_Setup**: Sensorius scans for the Nodus setup access point.
- **Connected to Nodus setup AP**: confirms Sensorius or the host joined the Nodus setup network.
- **Bootstrap sent to Nodus**: confirms Wi-Fi and broker bootstrap information was sent.
- **Sensorius rejoined your Wi-Fi**: confirms the hub returned to the normal network.
- **Waiting for Nodus to reboot and connect**: waits for the Nodus device to reboot, join Wi-Fi, connect to MQTT, and send its hello/config result.
- **Retry**: retries the current onboarding session.
- **Add**: starts onboarding after the platform-specific setup steps are complete.

The legacy `Nodus_Setup` and `Nodus-Setup` names remain supported. When onboarding reaches Device Online, Sensorius automatically reloads the dashboard so the newly discovered Sensor Group, Sensor Tiles, and Switch Tiles appear without a manual browser refresh.

Ecowitt Gateway

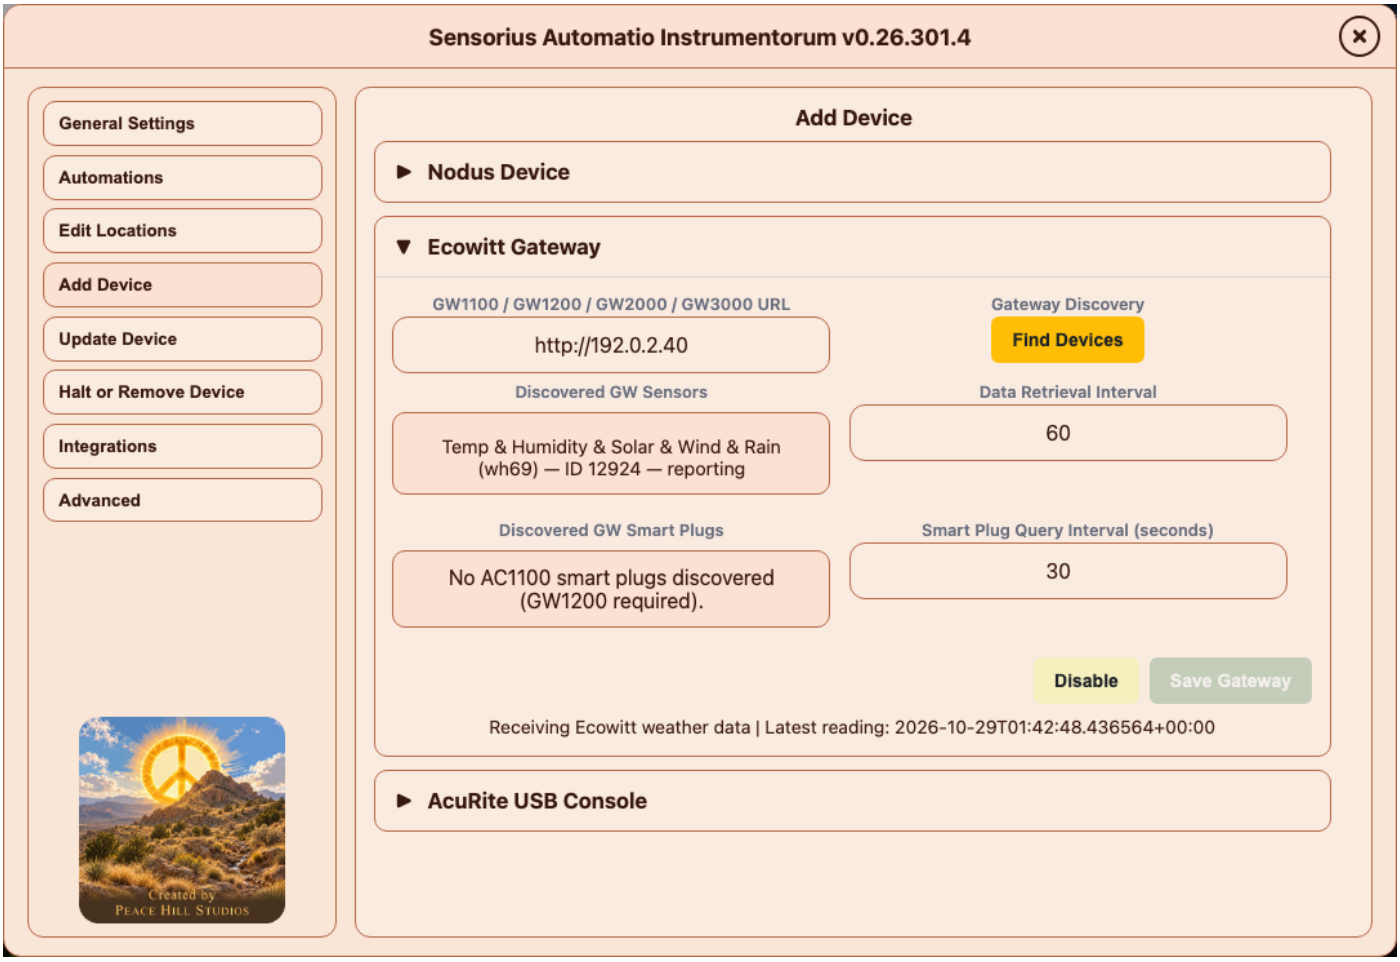

Ecowitt Gateway fields and controls are arranged in two columns:

- **GW1100 / GW1200 / GW2000 / GW3000 URL**: the gateway base address, such as `http://192.168.1.100` or a local hostname. Do not include a path, credentials, query, or fragment.
- **Find Devices**: queries the gateway's read-only version, network, sensor inventory, live-data, and rain-priority endpoints. Both inventory pages are checked; GW1200 gateways also return their registered AC1100 smart plugs.
- **Discovered GW Sensors**: lists registered gateway sensors and whether their data family is present in the current live response. All valid listed sensors and supported additional channels are ingested.
- **Data Retrieval Interval**: weather polling period from 60 through 3600 seconds.
- **Discovered GW Smart Plugs**: lists all paired AC1100 plugs, including offline plugs. AC1100 support in Sensorius requires a GW1200.
- **Smart Plug Query Interval (seconds)**: independent status polling from 15 through 60 seconds, default 30. Weather polling keeps its own interval.
- **Save Gateway**: revalidates the gateway, derives a stable Sensorius station ID from its MAC address, creates station and plug settings, and enables polling.
- **Disable**: stops polling without deleting station settings or historical readings. It also prevents Sensorius plug commands while disabled.

Configure the Ecowitt gateway on the same trusted LAN first. A DHCP reservation is recommended. For an Ambient Weather WS-2000 outdoor array, use a North American 915 MHz GW1200 and confirm that the gateway has registered the WH65/WS69-class array in the Ecowitt app before adding it to Sensorius. The WS-2000 console and GW1200 receive the outdoor array independently; Sensorius connects to the GW1200, not to the Ambient console. Sensorius accepts metric or imperial gateway display units and normalizes stored metric semantics. The local API's unit tags are authoritative; gateway-local unit settings can differ from Ecowitt app display preferences. Sensorius normalizes wind speed into its canonical mph metric, while wind direction drives the compass and 6/24-hour wind roses. As with WeeWX, that combined Sensor Tile's current reading and statistics show wind speed. Weather ingestion is read-only; Sensorius does not change Wi-Fi, sensor registration, calibration, rain settings, MQTT, firmware, weather-service configuration, or gateway units.

Pair each AC1100 with the GW1200 using Ecowitt first, then choose **Find Devices** and **Save Gateway**. Saved plugs appear in the normal dashboard switch cards. Open the switch settings gear to set its location and channel label (default **Plug**). The normal toggle, event list, timers, and Advanced automations apply; manual toggles are blocked while an enabled automation owns the plug.

Sensorius does not send a relay command at startup. Until a successful status query, the dashboard shows **Unknown / Awaiting status**. After a user or Sensorius automation command, status is queried every two seconds, up to five attempts. Only confirmed relay states enter the event list. Periodic queries also record observed changes made using the plug button or Ecowitt app. Changes that happen entirely between queries cannot be recovered. Offline plugs retain their last confirmed state and reject commands. A command confirmation failure is reported instead of assuming the relay changed.

Plug definitions persist at `/home/<user>/Sensorius/switch_settings/<gateway-id>-ac1100-<plug-id>/switch.toml` on Linux or `/Users/<user>/Sensorius/switch_settings/<gateway-id>-ac1100-<plug-id>/switch.toml` on macOS. Discovery preserves user labels, locations, and channel identities. Existing saved plugs survive rediscovery; an unpaired plug becomes unavailable. This integration has simulated API coverage; physical GW1200/AC1100 verification is still required.

GW1200 support is tested against Ecowitt's generic LAN API schema. Because the Ambient-branded WH65B hardware response has not yet been captured, verify the outdoor temperature, humidity, wind, traditional rain, solar/light, and UV readings after installation. Report any missing or mislabeled value together with the gateway firmware version; do not include Wi-Fi credentials or weather service keys. The read-only `/ecowitt/status` response includes `live_metrics`, the normalized metric names accepted during the most recent discovery or poll.

AcuRite USB Console

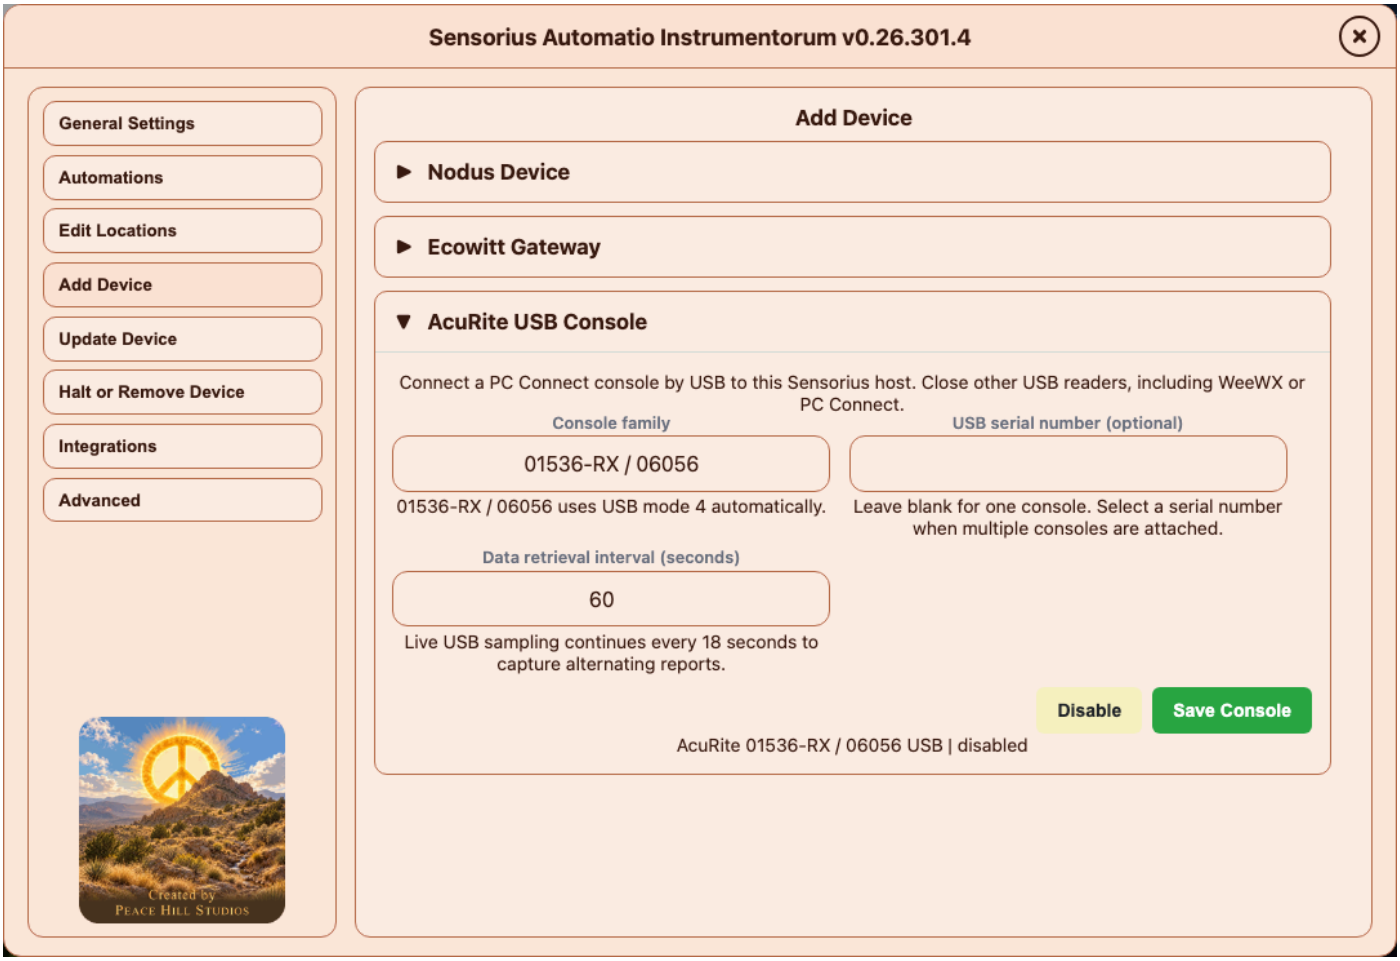

Open **General Settings > Add Device > Weather Station > AcuRite USB Console**. Choose your console family, optionally enter its USB serial, select the retrieval interval, and choose **Save Console**. Supported profiles include 01536-RX/06056, 01025, 01035, 01036/01092/06006, 01525 and 02032/02033/01093/06037. Select mode 4 on consoles with a USB mode setting; the 01536 family uses it automatically. Connect the console to the Sensorius host and close other applications reading its USB interface.

USB sampling continues every 18 seconds to capture alternating weather reports. The console becomes a separate station on the dashboard alongside Ecowitt and Nodus devices. Ecowitt and AcuRite dashboard headers show only the final six characters of their UUID; their full IDs remain in settings and history. For example, `ECOWITT-F85B1B51804C` displays as `ECOWITT-51804C`, and `ACURITE-B6A529FFB882C4F` displays as `ACURITE-882C4F`. **Disable** retains its settings and history. Use the current platform installer for USB dependencies and permissions. See AcuRite USB for setup, supported fields and physical-validation limitations.

Update Device Pane

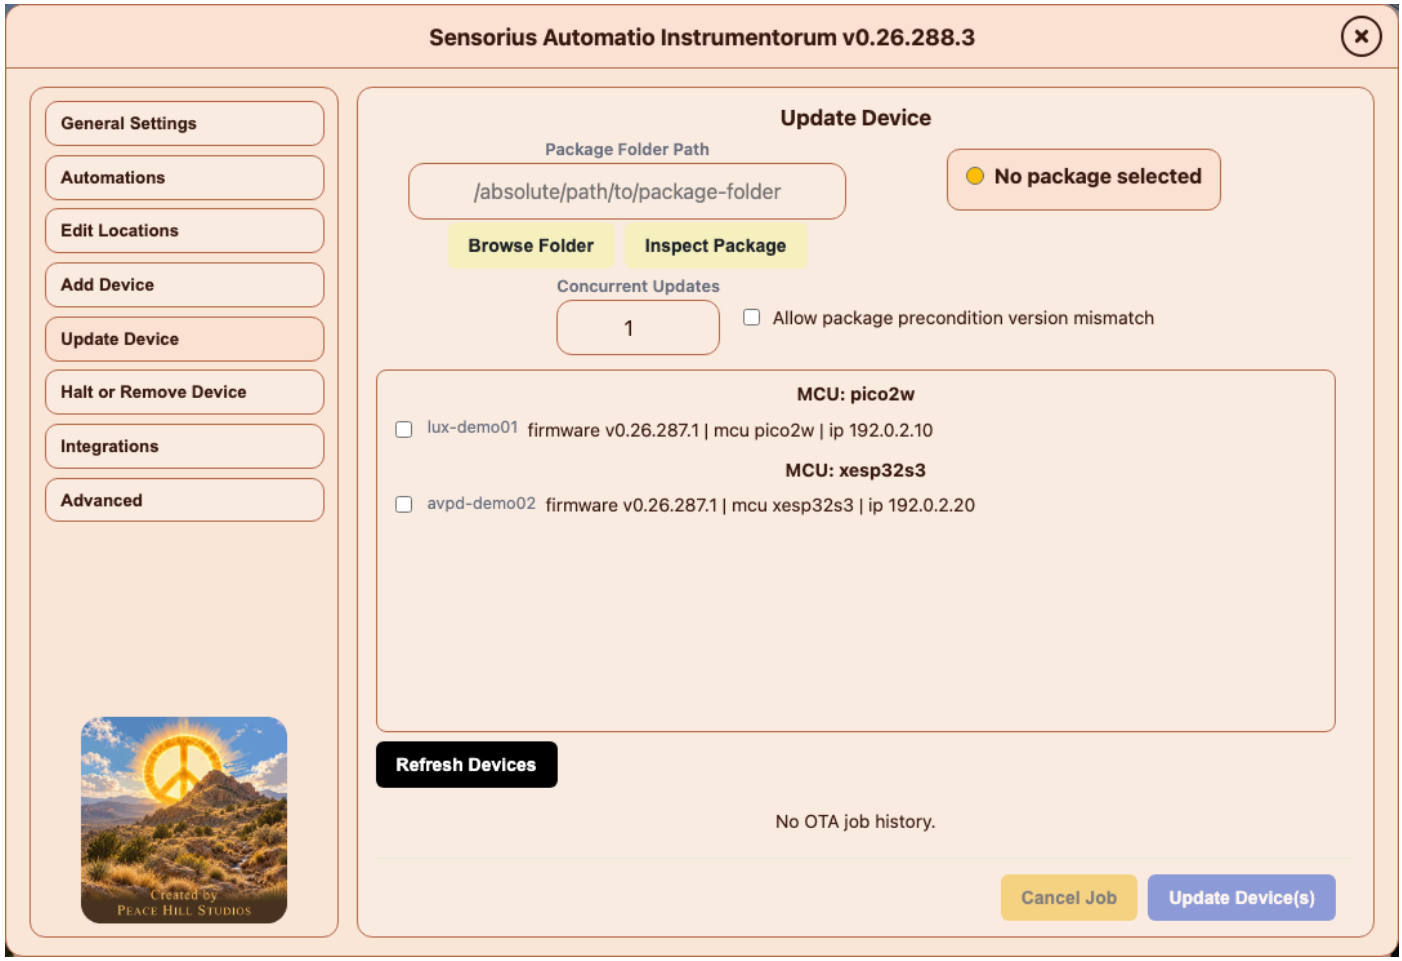

Use Update Device for Nodus over-the-air (OTA) firmware packages.

OTA has been verified for Nodus packages targeting `pico2w` and `xesp32s3`. Packages must declare the correct target platform; Sensorius blocks updates when the package target does not match known device metadata. For Pico 2 W, avoid large single-file compiled updates: command-line OTA testing showed a Nodus-side memory allocation failure while transferring an `app.mpy` larger than about 50 KB.

cPyNodus III package folders use signed `nodus-ota/v2`. Sensorius displays them as authenticated only after verifying `manifest.sig` with an operator-installed trusted public key. Existing cPyNodus II `nodus-ota/v1` package folders remain supported without a cPyNodus II firmware change.

Future Sensorius releases may accept zip uploads, but the current OTA workflow expects the package folder produced by `cPyNodus_II` or `cPyNodus_III`.

Fields and controls:

- **Package Folder**: local OTA package folder produced by `cPyNodus_II` or `cPyNodus_III`, selected from the Sensorius host.
- **Package summary**: package inspection status, protocol, authentication state, and signing key ID after selection or inspection.
- **Package Path**: absolute path to a package on the Sensorius host.
- **Inspect Package**: reads package metadata and validates that Sensorius can use it.

- **Concurrent Updates**: number of devices to update at once. Options are numeric values from 1 to 4.
- **Device list**: Nodus devices available for update.
- **Refresh Devices**: reloads the device list.
- **Job panel**: active update status and progress.
- **Job history**: recent update result information.
- **Cancel Job**: cancels an active update job when available.
- **Update Device(s)**: starts an OTA update for selected devices after a valid package and target selection are available.

Only update devices when power and network are stable.

After prepare, `Nodus OTA mode booting...` may remain visible for up to 150 seconds while the device reboots and reconnects. Routine connection failures during this interval are expected and are not shown. Sensorius makes up to three attempts per file and stops one device update after 30 minutes. If OTA mode does not start or those limits are exhausted, Sensorius requests OTA abort and reports a concise recovery message.

Halt or Remove Device Pane

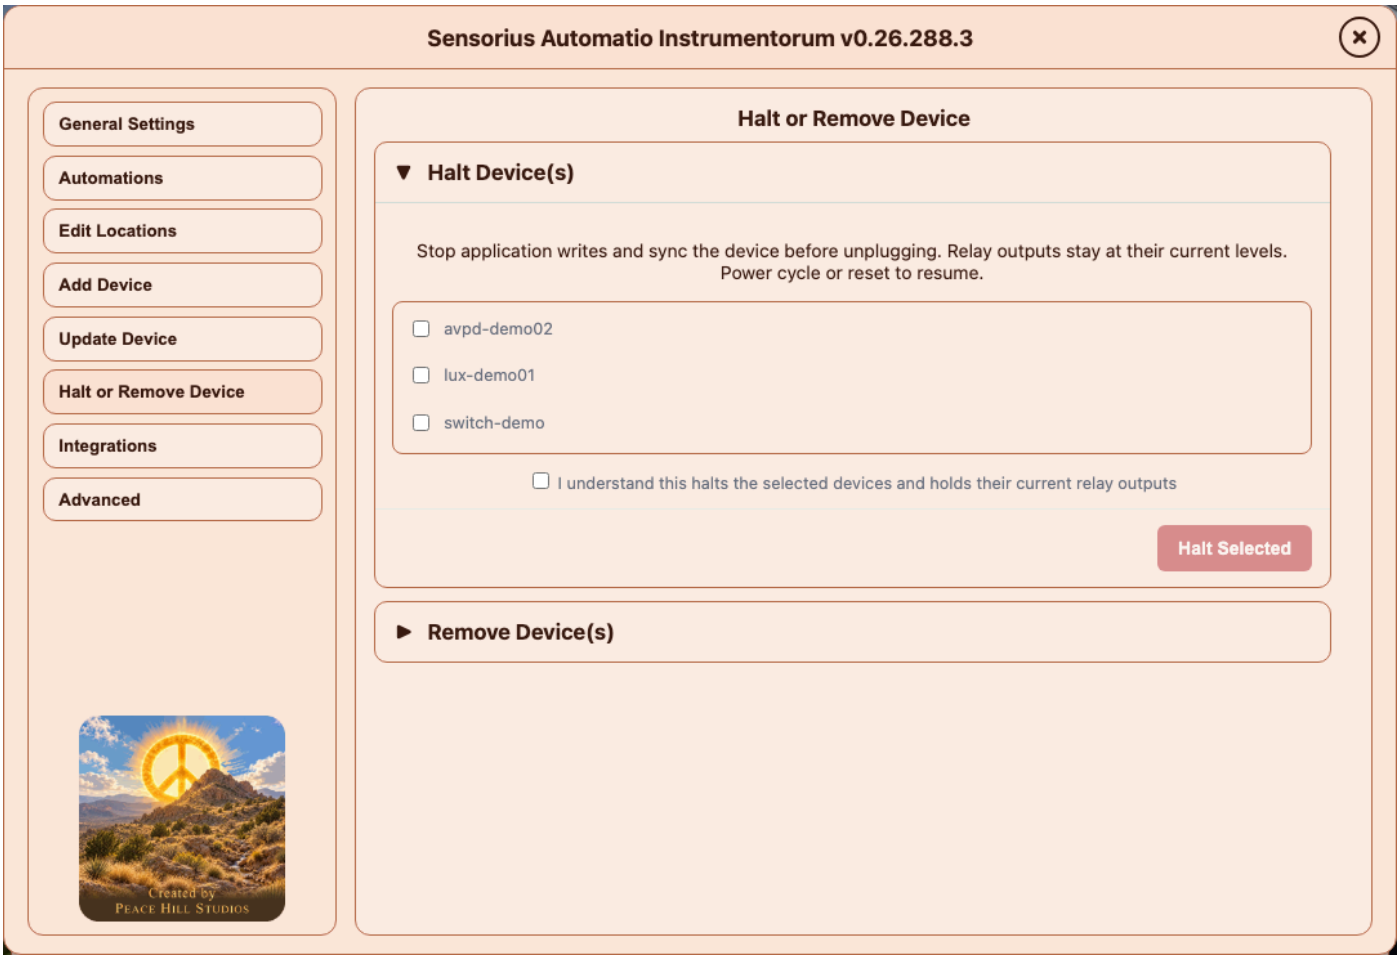

The **Halt or Remove Device** menu contains two collapsible sections. Each section keeps its acknowledgement checkbox and action button at the bottom of the expanded section. Select at least one device and acknowledge the action to enable its button.

Halt Device(s) lists Nodus devices that support halting. **Halt Selected** stops the application and syncs its filesystem while holding current relay outputs. Wait for each device to confirm it has halted before unplugging it. If a device goes offline, times out, or reports an error, do not assume the halt completed. Halt preserves Sensorius settings and history. Power cycle or reset the Nodus to resume operation.

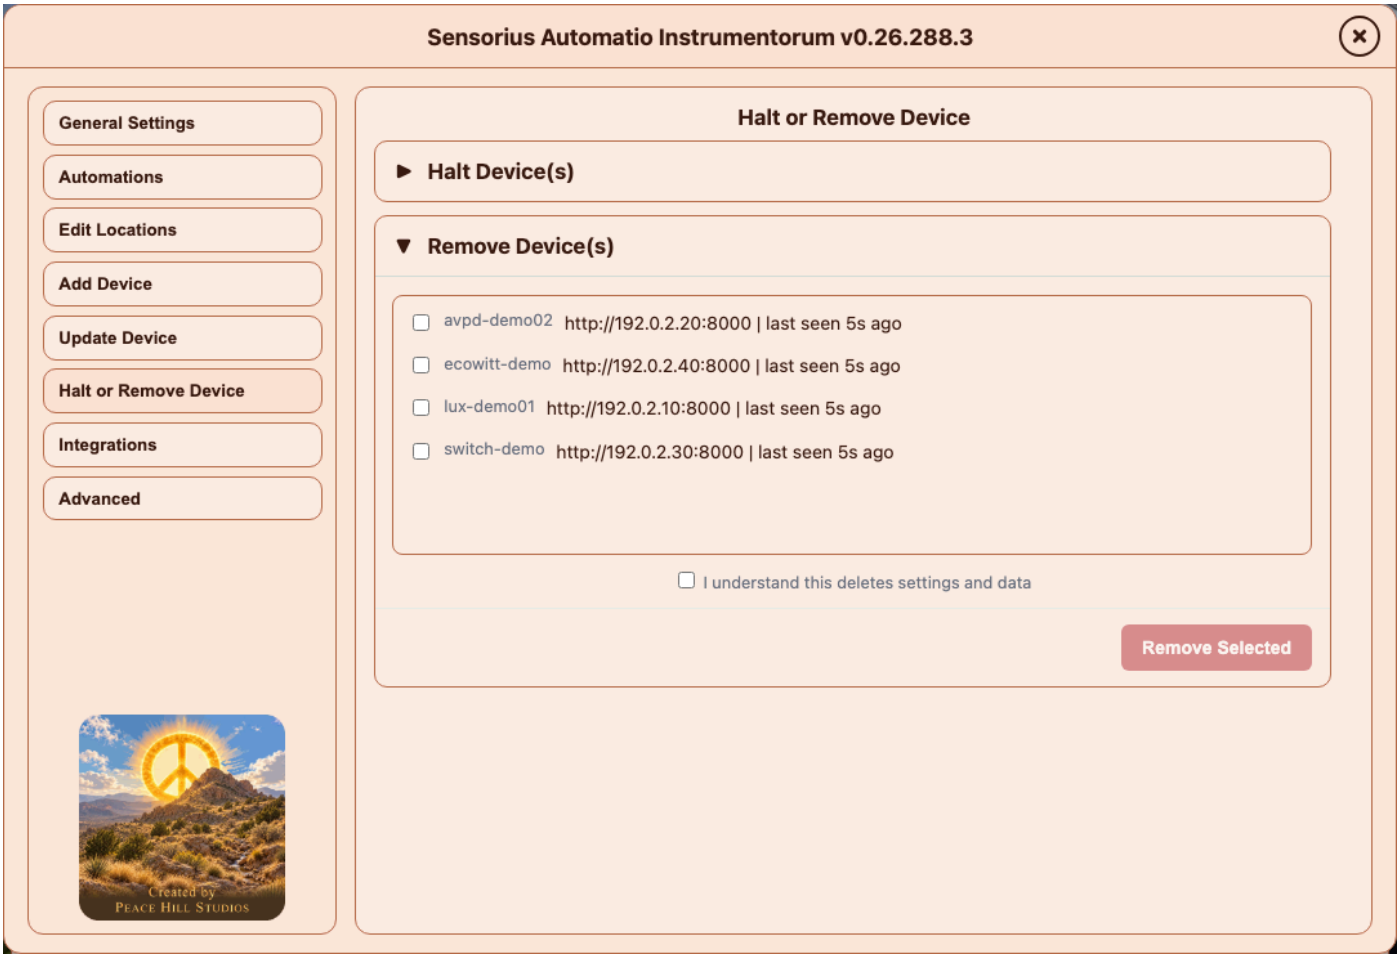

Use **Remove Device(s)** when a sensor or switch should no longer appear in Sensorius.

1. Expand **Remove Device(s)** and select the devices to remove. Device details may include a link to the device and the time since it was last seen.
2. Check **I understand this deletes settings and data**.
3. Click **Remove Selected** and wait for the result. Removing a Nodus device removes its sensors and switches together, including their settings and related history in Sensorius.

A device that remains connected may reappear after removal. Disconnect it or change its connection settings if it should remain absent. To use it again, reconnect it or follow **Add Device**. If removal fails, review the result before trying again; restarting Sensorius also allows removed devices to appear again.

Before removing a device, update any automations, Home Assistant dashboards, farmOS expectations, or written operating procedures that depend on it.

Integrations Pane

General Settings presents Home Assistant, WeeWX, and FarmOS under the **Integrations** menu item. Each integration is an independently expandable block. Scroll the right pane vertically when the expanded blocks exceed the available height.

FarmOS

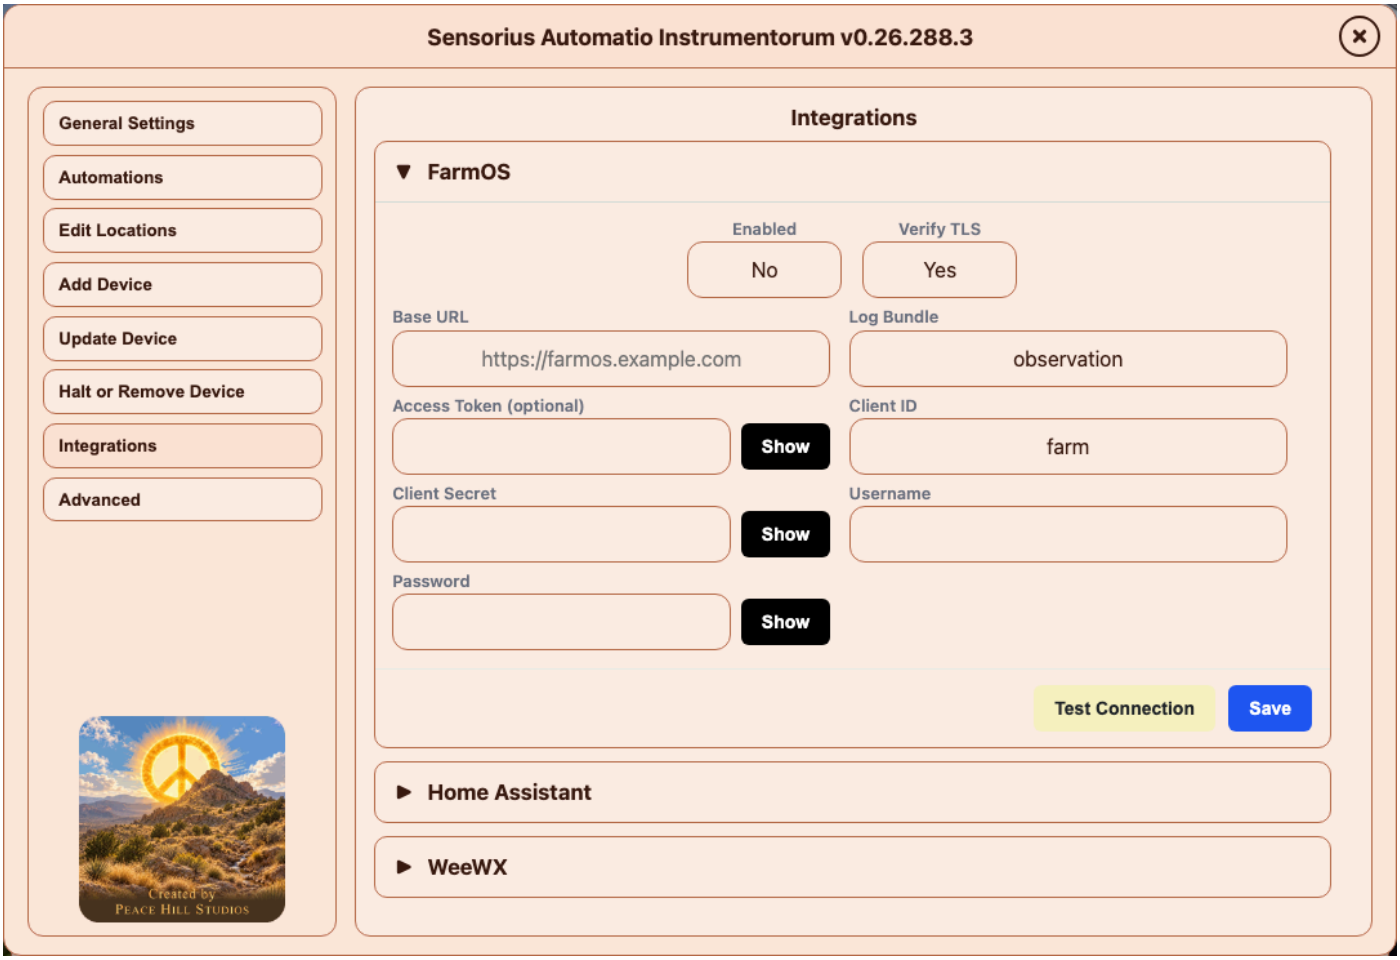

Fields and selectors:

- **Enabled**: turns farmOS export on or off. Options are **No** and **Yes**.
- **Verify TLS**: verifies the farmOS HTTPS certificate. Options are **Yes** and **No**. Leave Yes unless you are testing a private certificate.
- **Base URL**: farmOS site URL, such as `https://farmos.example.com`.
- **Log Bundle**: farmOS log bundle name. Default is `observation`.
- **Access Token (optional)**: static token, if you use token-based auth.
- **Client ID**: OAuth client ID. Default is `farm`.
- **Client Secret**: OAuth client secret.
- **Username**: farmOS username for password-based auth.
- **Password**: farmOS password for password-based auth.
- **Show** buttons: temporarily reveal hidden secret fields in the browser.
- **Test Connection**: calls the farmOS test endpoint and reports success or the last error.
- **Save**: writes the `[FarmOS]` settings.

farmOS export listens for new readings written by Sensorius. Check the FarmOS status if exports stop; it reports enabled state, queue depth, token state, and last error.

Home Assistant

Fields and selectors:

- **Enabled**: turns Home Assistant integration on or off. Options are **No** and **Yes**.
- **Broker**: Home Assistant MQTT broker hostname or IP.
- **TLS Enable**: whether to use TLS for the Home Assistant broker. Options are **No** and **Yes**.
- **Port**: broker port, from 1 to 65535.
- **Username**: MQTT username if required.
- **Password**: MQTT password if required. Stored through Sensorius secret obfuscation.
- **Show**: temporarily reveals the password in the browser.
- **Save**: writes the `[HomeAssistant]` settings.

Expected flow: configure the broker, enable the integration, let Sensorius publish retained discovery topics, then let Home Assistant observe sensors and switches through MQTT.

WeeWX

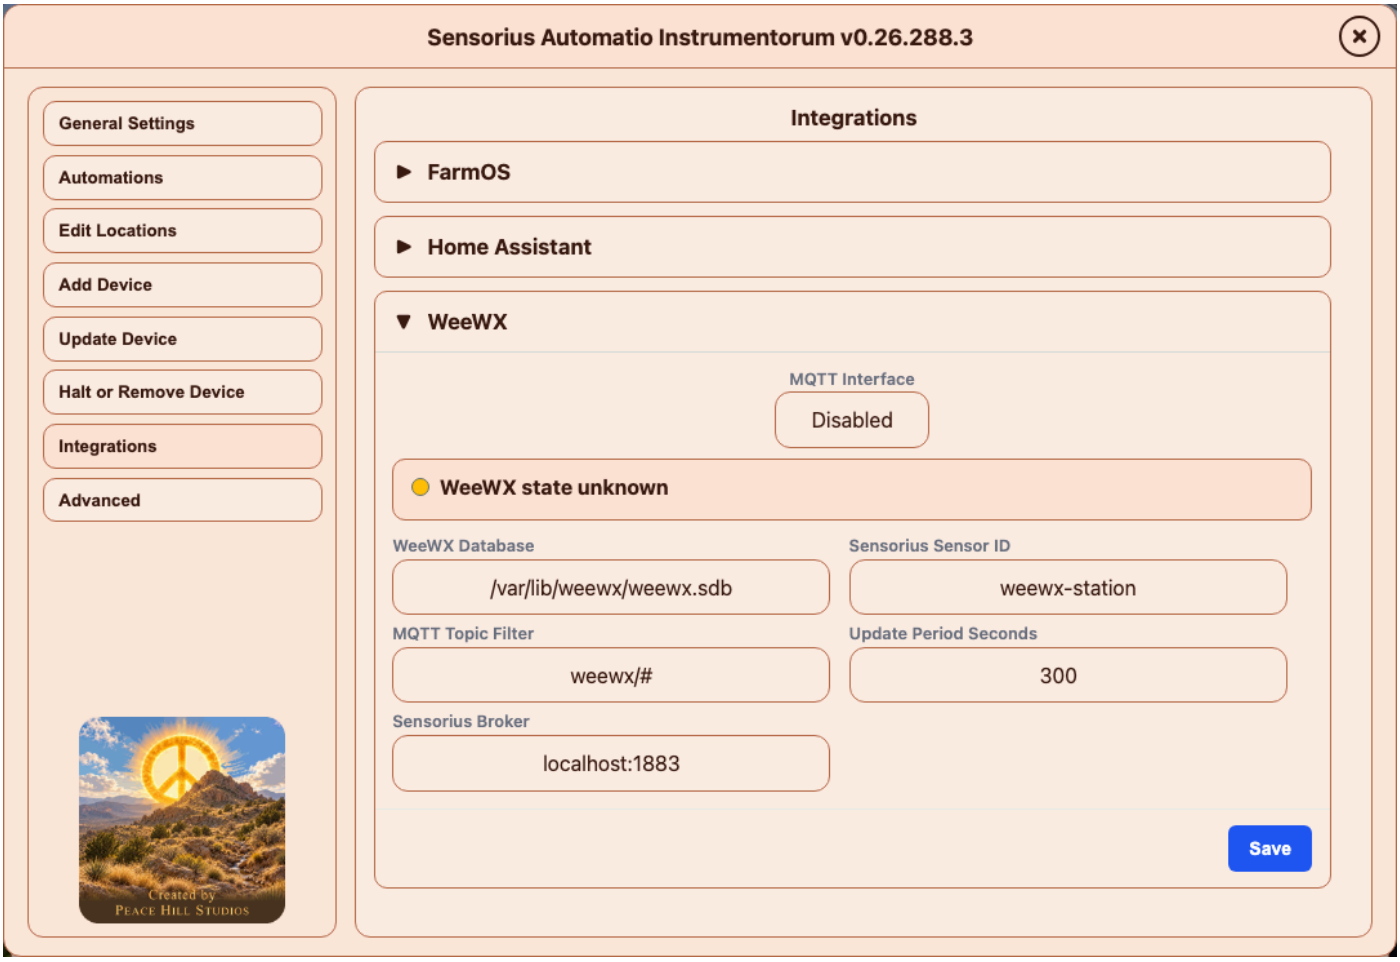

Fields and selectors:

- **MQTT Interface**: enables or disables WeeWX MQTT ingest. Options are **Disabled** and **Enabled**.
- **Runtime state**: shows whether Sensorius is receiving WeeWX data, the latest sample, age, and offline timing.
- **WeeWX Database**: read-only database path, normally `/var/lib/weewx/weewx.sdb` for a WeeWX host.
- **Sensorius Sensor ID**: sensor ID Sensorius uses for WeeWX readings. Default is `weewx-station`.
- **MQTT Topic Filter**: MQTT subscription filter for WeeWX messages. Default is `weewx/#`.
- **Update Period Seconds**: expected update period, from 15 to 3600 seconds.
- **Sensorius Broker**: read-only broker host and port used by Sensorius.
- **Save**: writes the `[WeeWX]` settings and creates WeeWX sensor settings if needed.

When WeeWX runs on the same host and `/etc/weewx/weewx.conf` or `/home/weewx/weewx.conf` is readable, Sensorius records the active station model in the WeeWX station sensor settings. The Sensor Settings **Sensor Info** pane shows it as `Station: <model>`.

The WeeWX station title also shows outdoor sensor battery status when WeeWX supplies `outTempBatteryStatus`: green means OK, red means low, and gray means unknown or offline. This is a status flag, not a remaining battery percentage. Sensorius accepts the flag in MQTT JSON packets or individual field topics, and from the local WeeWX archive when archive ingest is enabled.

If the MQTT topic changes, Sensorius applies the subscription update live when MQTT ingest is running. If MQTT ingest is not running, the saved setting applies when MQTT ingest starts.

Advanced Pane

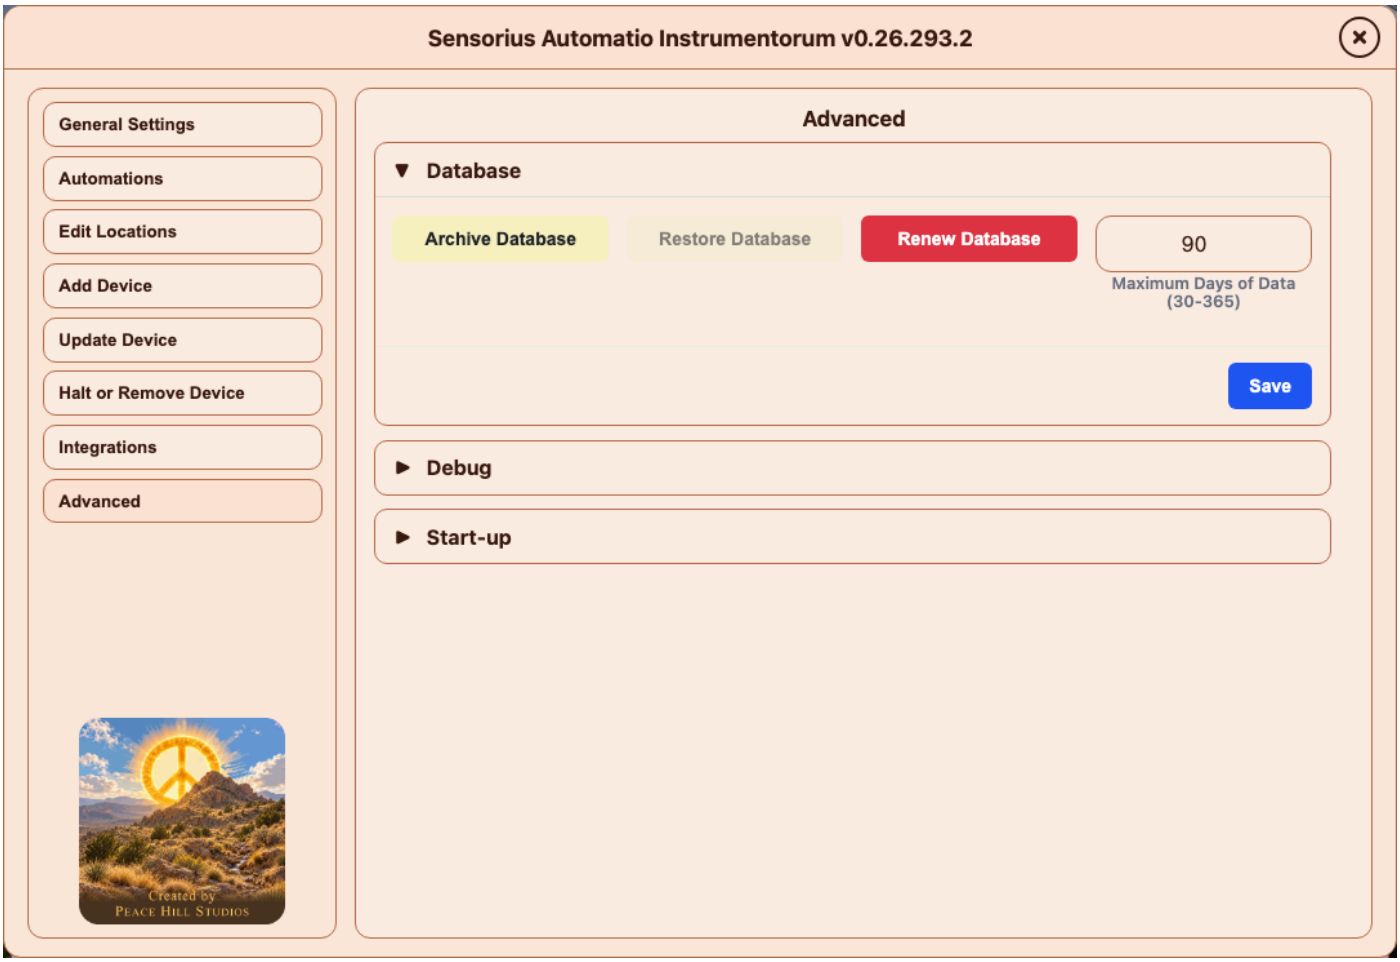

Advanced settings affect startup, logging, and stored data. Change them only when you understand the impact.

Database

The top row contains Archive, Restore, Renew, and the day selector, with their top edges aligned. The retention label appears below the selector, and Save is at the bottom right. On narrow screens, these controls stack in the same order.

- **Archive Database**: creates a consistent SQLite snapshot next to the active database (for example, `/home/<user>/Sensorius/database_archives/` when the database is in `/home/<user>/Sensorius/`) and downloads the `.sqlite3` file to the computer running the browser. The browser's download settings determine where the file is saved. This archive contains database data; it does not include TOML settings.
- **Restore Database**: currently disabled; restoring an archive through the web UI is not yet available.
- **Renew Database**: archives the current SQLite database, deletes the active database files, and creates a new empty database. This is an intentionally drastic recovery action.

- **Maximum Days of Data (30-365)**: database retention window, shown in the rightmost column. Valid range is 30 to 365 days. This affects how much history graphs can show.
- **Save**: saves the Database retention setting. Archive and Renew run separately from Save.

Debug

- **SENSORIUS_FILE_LOG**: enables file logging when checked.
- **SENSORIUS_LOG_LEVEL**: logging detail. Options are **DEBUG**, **INFO**, **WARNING**, **ERROR**, and **CRITICAL**.
- **SENSORIUS_DEBUG_MODULES**: module-specific debug checkboxes. Options are loaded from the app's advanced status endpoint.
- **Save**: writes only the Debug section.

Start-up

- **Auto-start Sensorius on login**: creates or removes an auto-start entry for Sensorius.
- **Auto-start scope**: **User-level (default)** starts for the current user. **System-level** is for system service style installs and may require elevated permissions outside the web UI.
- **Save**: writes only the Start-up section.
- **Restart System**: the red button at the bottom left restarts the Sensorius service, then reloads the dashboard when a new app instance responds. It is enabled only when the running instance belongs to an enabled automatic service: a system or user systemd service on Linux, a launchd service on macOS, or a Sensorius boot/login scheduled task on Windows. A manual launch or a Windows Startup-folder entry alone does not enable it. The operating system must allow the service account to restart its service/task; permission failures are shown in the pane. This restarts Sensorius, not the computer.

Sensor Settings

Open Sensor Settings from the gear in a Sensor Group heading when you need to organize a sensor, choose which Sensor Tiles appear on the dashboard, calibrate readings, or check device health.

Sensor Settings Pane

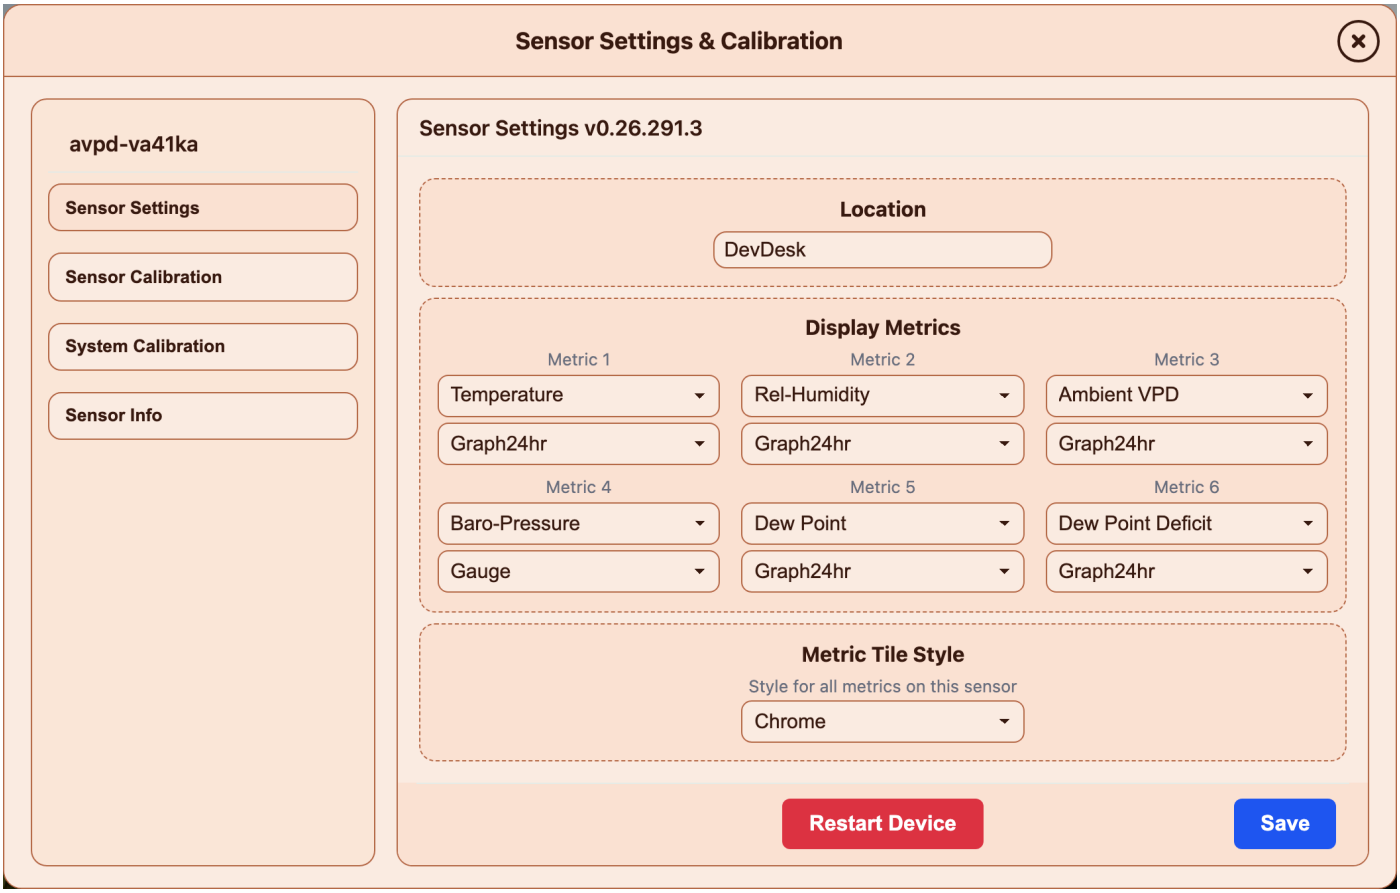

Fields and selectors:

- **Location**: the practical place where the sensor is installed, such as Greenhouse, Seed Rack, Bed 2, Propagation Tent, or North Field. This is saved in that sensor's `sensor.toml` and is also used by the dashboard, location editor, and automation selector labels.
- **Metric 1-6**: dashboard metric slots. Options come from the sensor's available metric list. That list is built from device metadata, known database metrics, and Sensorius gauge configuration.
- **Display Style 1-6**: display style for each selected metric. Options are **Gauge**, **6Hr Graph**, and **24Hr Graph**.
- **Metric Tile Style**: below Display Metrics, choose **Theme**, **Chrome**, **Brass**, or **Mahogany & Brass** for all tiles on this sensor. Theme keeps the current appearance; the other finishes add round metal gauge bezels with matching metal faces and inset graph panels, with a wood panel for Mahogany & Brass. Gauge zones, graph data colors, and the **24Hr Graph → 6Hr Graph → Gauge** click cycle stay the same. The sensor row title uses the same finish. Click **Save** to keep the choice.
- **Circled ×**: closes Sensor Settings and returns to the dashboard.
- **Restart Device**: appears for devices that support remote restart, such as supported Nodus devices. It sends a restart request to the device.
- **Save**: writes only the Sensor Settings pane values to `sensor_settings/<sensor_id>/sensor.toml`. Calibration and Sensor Info pane state are not submitted. For remote Nodus devices, Sensorius also pushes a correlated settings update over MQTT when needed.

Use clear location names. They are visible to nontechnical users and make later automation rules easier to understand.

Metric slot order is authoritative in **Pick 6** mode: Metric 1 is the leftmost Sensor Tile and Metric 6 is the rightmost. Display Style 1 applies to Metric 1, Display Style 2 to Metric 2, and so on. Saving these fields is the supported way to make a dashboard order or display style persistent.

Tile Style Examples

The four finishes use the same readings, gauge zones, and graph colors:

- **Theme** follows the selected dashboard theme.
- **Chrome** adds a silver metal background and raised metal bezels around gauges and inset graph panels.
- **Brass** uses warm gold metal, matching gauge faces, and rivets around the gauge and graph bezels.
- **Mahogany & Brass** combines a dark wood background with brass trim and contrasting cream text. Sensor gauges use brass faces; switch tables and event graphs have brass frames.

These live examples come from Samhain. Theme, Chrome, and Brass are sensor tiles; Mahogany & Brass is a switch location card. Click an image to see it at full size.

Theme	Chrome	Brass	Mahogany & Brass
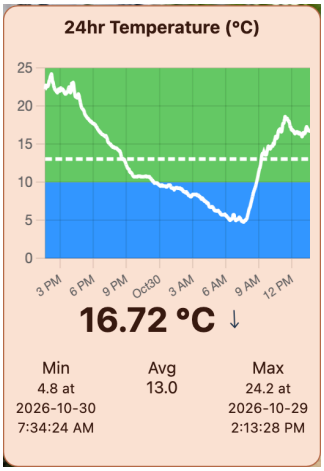	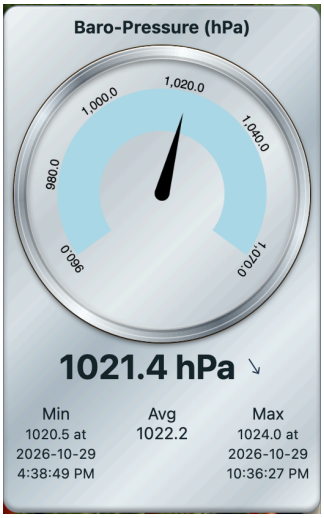	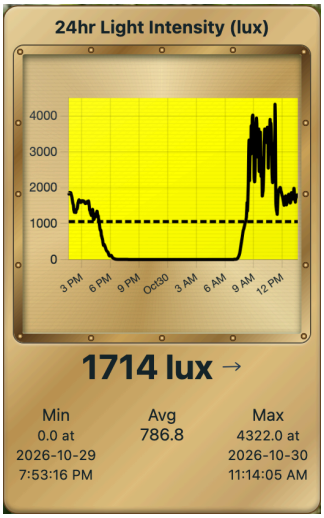	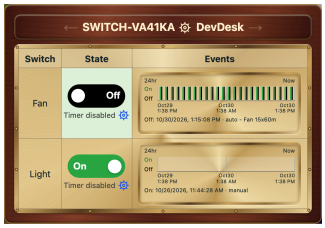

Sensor Calibration Pane

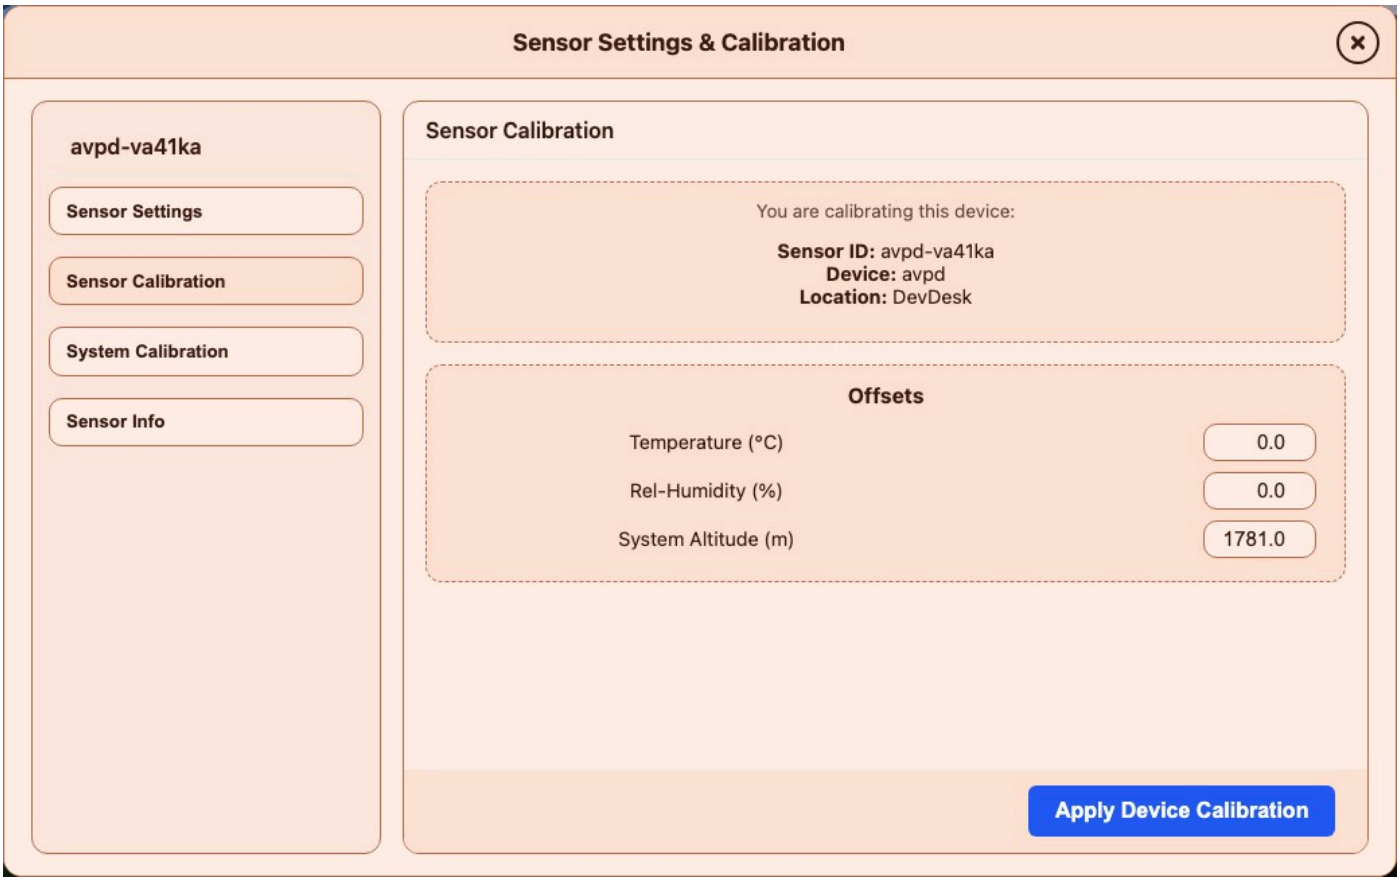

The Sensor Calibration pane adjusts the selected physical device. It is meant for cases where one sensor is consistently high or low compared with a trusted reference.

Common fields and controls:

- **Sensor ID**: the Sensorius identifier for this sensor.
- **Device**: device type or label from local settings or Nodus metadata.
- **Location**: the sensor location from Sensor Settings.
- **Ambient Temperature Offset (C)**: correction added to the ambient temperature channel on APVPD-style devices.
- **Ambient RH Offset (%)**: correction added to the ambient relative humidity channel on APVPD-style devices.
- **Altitude Calibration / Offsets**: device-specific numeric offsets exposed by the sensor. Available fields depend on the sensor type and firmware metadata.
- **Calibrate Plant Sensor**: runs the APVPD plant-sensor calibration routine when the device supports it.
- **Calibrate pH 4.0 / 7.0 / 10.0**: soil-sensor pH buffer calibration buttons. Use the matching buffer solution and wait for the probe to stabilize before applying.
- **Soil Offsets**: manual numeric offsets for soil sensor channels such as pH or other exposed calibration values.
- **Apply Device Calibration**: saves the device calibration. For Nodus devices, the command is sent to the device and the local settings shadow is updated.

Temperature corrections follow the selected Units, including ambient, plant system-calibration results, and soil temperature offsets. An offset is a temperature difference: **+1.8°F correction equals +1°C**, without adding or subtracting 32. System-calibration previews convert readings and correction statistics for display; the computed corrections remain Celsius when applied. The automatic plant calibration routine continues to run in the device's native units.

System Altitude displays feet or meters and is read-only in calibration. Edit it in General Settings > Astral, then apply device calibration. Sensorius stores altitude in meters and sends meters to Nodus. Device-native Nodus calibration and automation screens continue to use their own units; Sensorius' display preference does not change the firmware.

For an AcuRite USB station, Sensor Calibration provides outdoor **Temperature** and **Rel-Humidity** offsets plus read-only **System Altitude**. Corrections apply before storage, including Fahrenheit and derived humidity/VPD metrics. Altitude changes in General Settings apply at the next stored snapshot. **Station Pressure** is the uncorrected local pressure; **Baro-Pressure** is the altitude-corrected sea-level value. Existing history stays unchanged. See AcuRite calibration.

Calibration data comes from the sensor's `Calibration` section, Nodus metadata, and device-specific calibration endpoints. Apply small changes, then watch the dashboard and graphs to confirm the readings now track your trusted reference.

System Calibration Pane

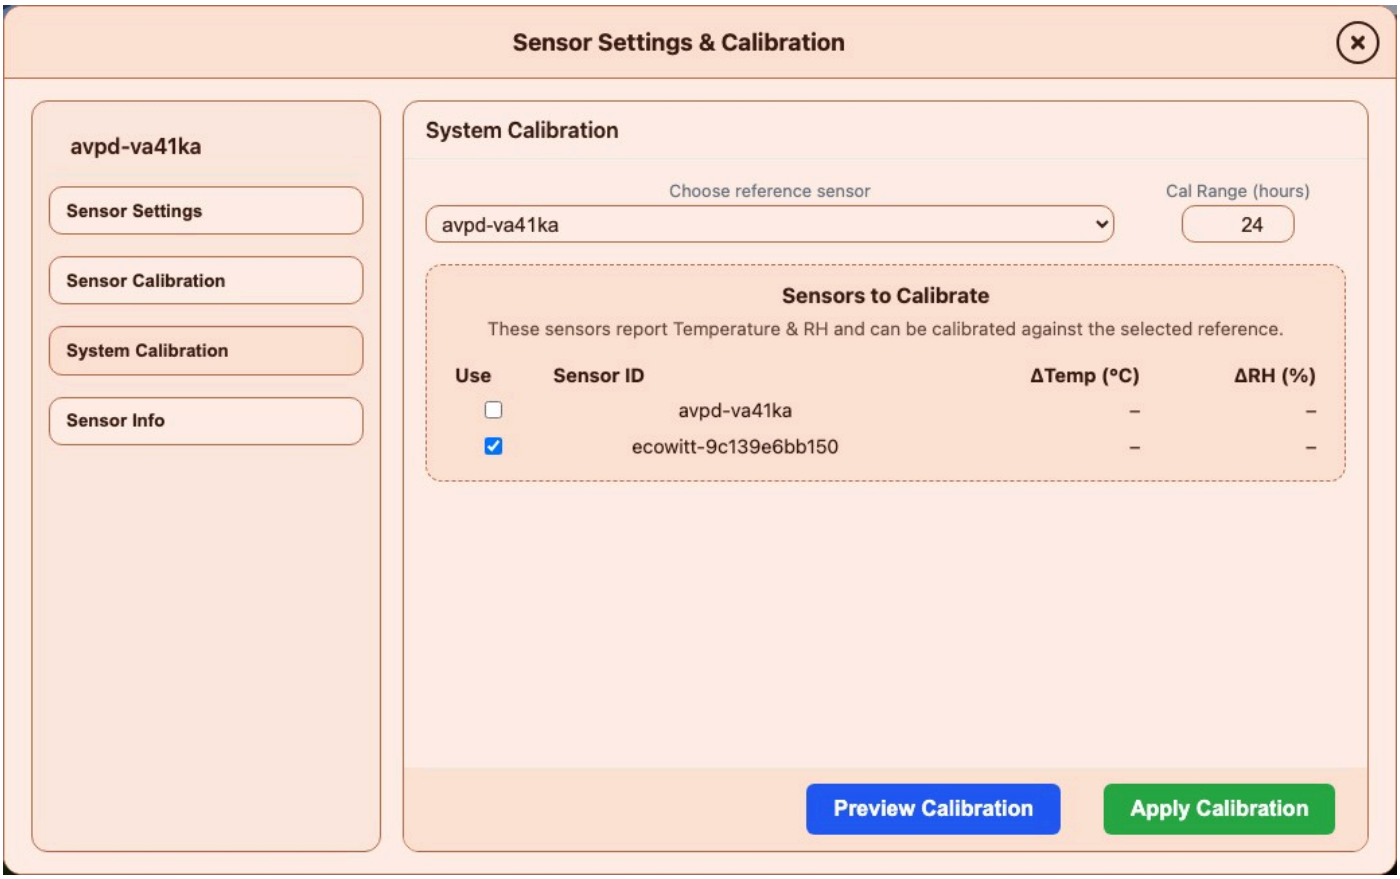

System Calibration compares multiple temperature/RH sensors to a reference sensor over recent history.

Fields and selectors:

- **Choose reference sensor**: the trusted sensor used as the baseline. Options come from sensors that report temperature and relative humidity.
- **Cal Range (hours)**: the history window used for comparison. Options are numeric values from 24 to 72 hours.
- **Use**: checkbox for each candidate sensor. Checked sensors are included in the preview and apply step.
- **Sensor ID**: candidate sensor name.
- **Delta Temp (C)**: previewed temperature correction needed to align with the reference.
- **Delta RH (%)**: previewed relative-humidity correction needed to align with the reference.
- **Preview Calibration**: calculates corrections from stored readings without applying them.
- **Apply Calibration**: applies the previewed corrections. It is disabled until a valid preview is available.

This tool reads historical samples from the SQLite database. It works best when sensors have been near each other long enough to collect comparable data.

Reference sensor choices load when you open **System Calibration**. If loading fails, reopen that pane to retry.

For the best calibration results:

1. Make sure the Nodus sensors have been added to Sensorius.
2. If possible, place a trusted temperature and relative-humidity gauge with the Nodus sensors. A gauge that records 24-hour minimum, average, and maximum values is especially useful.
3. Before deploying the Nodus sensors to their final locations, place them together in an area that experiences meaningful variation, ideally about 10 C of temperature change and 10 percentage points of relative-humidity change within 24 hours.
4. Allow Sensorius to collect temperature and relative-humidity data from the Nodus sensors for at least 24 hours and up to 72 hours.
5. After at least 24 hours, compare each Nodus sensor's 24-hour minimum, average, and maximum values with the trusted gauge. If you do not have a trusted gauge, compare the temperature and relative-humidity graphs and choose the Nodus sensor that appears to provide the best representation as the reference.
6. Select the reference sensor, check each additional sensor that you want to calibrate, and click **Preview Calibration**. Review the corrections, then click **Apply Calibration**.

Sensor Info Pane

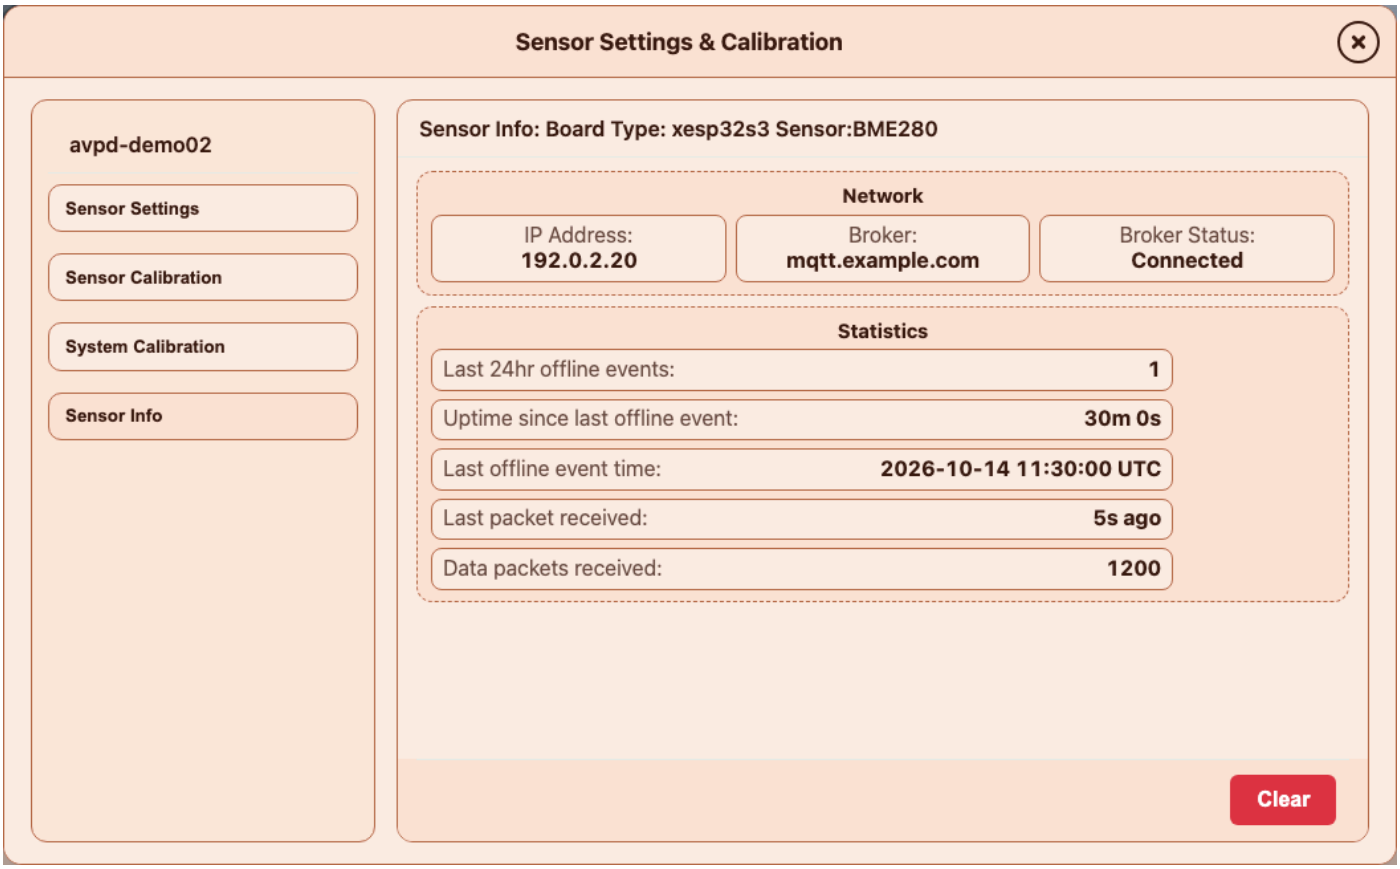

The Sensor Info pane is a health and diagnostics view. Statistics load when you open this pane, so opening Sensor Settings does not wait for historical counters. A loading message appears until they are available; **Clear** becomes available after loading. If loading fails, reopen Sensor Info to retry.

Fields shown:

- **IP Address**: the last known device IP address from Nodus metadata or runtime network information. Local sensors may show Unknown.
- **Broker**: MQTT broker the remote device is using, when known.
- **Broker Status**: remote broker connection status, when reported.
- **Last 24hr offline events**: offline transitions recorded during the last 24 hours.
- **Uptime since last offline event**: time since the latest offline event, or since you cleared local counters.
- **Last offline event time**: timestamp of the last offline event.
- **Last packet received**: age or timestamp of the most recent packet from the sensor.
- **Data packets received**: packet count known to Sensorius.
- **Clear**: clears the browser-side display baseline for these counters. It does not delete historical database rows.

Use this pane when a sensor appears stale, missing, or unstable.

Switch Settings

Switches control things such as pumps, fans, lights, valves, heaters, vents, and other relay-driven equipment. A switch may be a local Raspberry Pi relay board or a remote Nodus switch. Sensorius presents both through the same dashboard and settings screens.

Switch state changes are stored as switch events. These events are available for dashboard state, recent-event lists, full-screen graph overlays, and automation review.

Open Switch Settings from the gear in a switch-device heading when you need to label its Switch Tiles, set the switch location, or check switch health. Create and edit rules separately under **General Settings > Automations**.

Switch Settings Pane

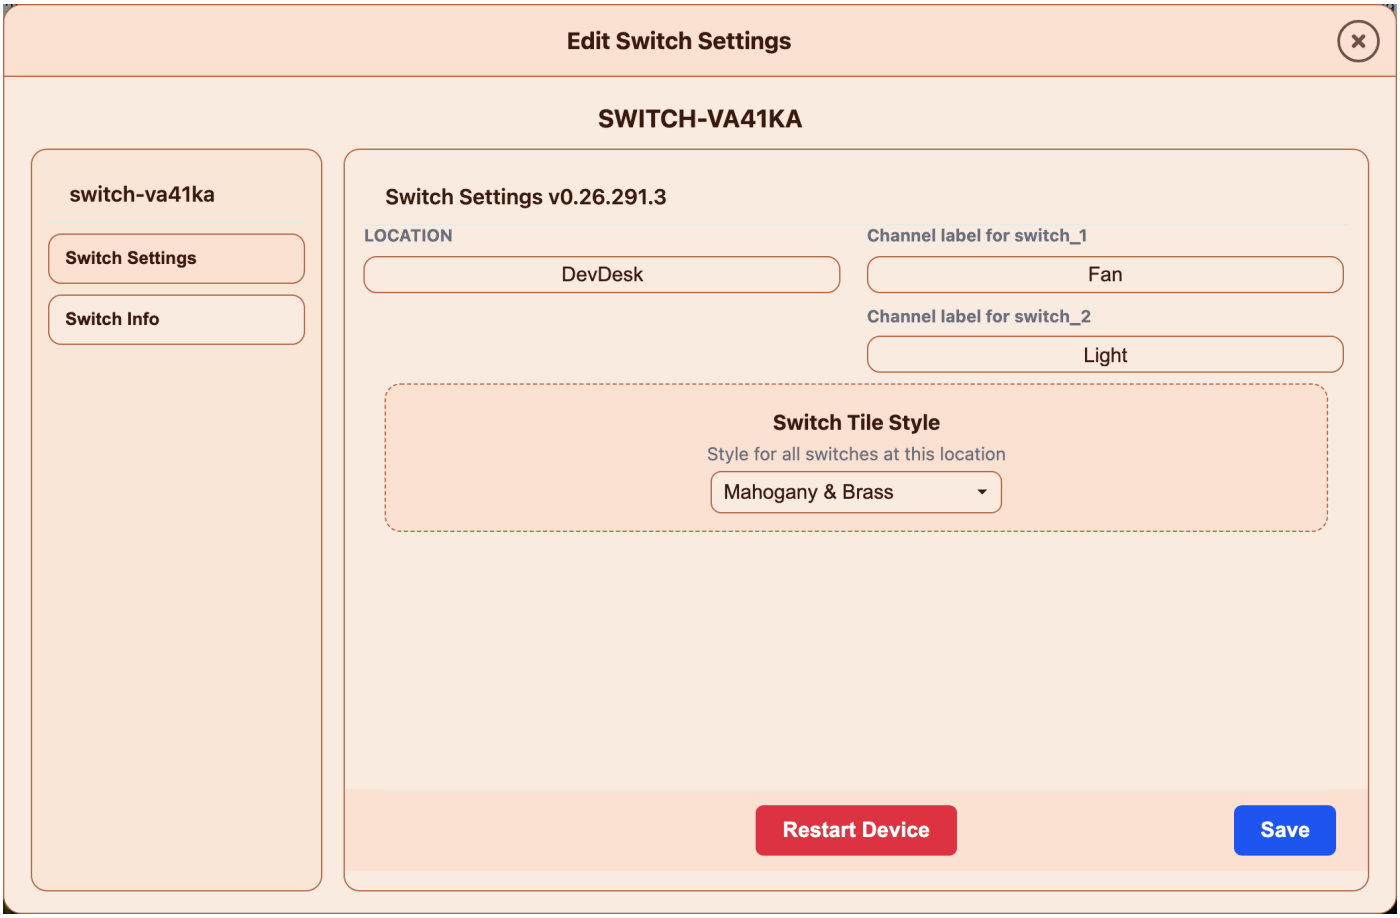

Fields and controls:

- **Location**: where the switch device or relay box is installed. This is saved in `switch_settings/<switch_id>/switch.toml` and is shown on the dashboard and location editor.
- **Channel label for switch_N**: friendly label for each channel, such as Exhaust Fan, Irrigation Pump, Heat Mat, North Vent, or Lights. Labels are saved in switch settings.
- **Switch Tile Style**: choose **Theme**, **Chrome**, **Brass**, or **Mahogany & Brass** for the shared location card. See Tile Style Examples for the four finishes. The finish changes the background, location title, table frame, and event graph frame. The Switches row title uses the common finish when all visible location

cards agree; mixed finishes use Theme. Saving from any switch applies the finish to all switches at that location immediately. A location change reloads the dashboard to regroup cards. Switching, timers, automation ownership, and event colors stay the same.

- **Dashboard timer gear**: opens the channel's manual auto-off timer. Use `0` to disable it or 30-9999 seconds; the dashboard rounds entries to a 30-second step. The value lasts only until Sensorius restarts.
- **Circled ×**: closes Switch Settings and returns to the dashboard.
- **Restart Device**: appears for supported remote switches and sends a restart request.
- **Save**: writes only the Switch Settings pane values. Switch Info is not submitted. For remote Nodus switches, Sensorius also sends a settings update over MQTT when needed.

Keep labels stable for operator clarity, but the internal switch address is the stable `<switch_id>::<channel_id>` key.

Switch Info Pane

The Switch Info pane shows:

- **IP Address**: last known IP address for a remote switch.
- **Broker**: MQTT broker reported by the switch.
- **Broker Status**: remote broker connection status.
- **Last 24hr offline events**: offline transitions during the last 24 hours.
- **Uptime since last offline event**: time since the latest offline event or local clear baseline.
- **Last offline event time**: timestamp of the last offline event.

- **Last packet received**: age or timestamp of the most recent packet.
- **Switch current state, age**: per-channel state and how long that state has been known.
- **Clear**: clears the browser-side display baseline for statistics.

Use this pane when commands do not seem to reach a switch or when a remote relay appears to drop offline.

Sensorius Graphum

Open **Sensorius Graphum** when you want to compare readings over time, investigate spikes, or see whether a switch action changed the environment.

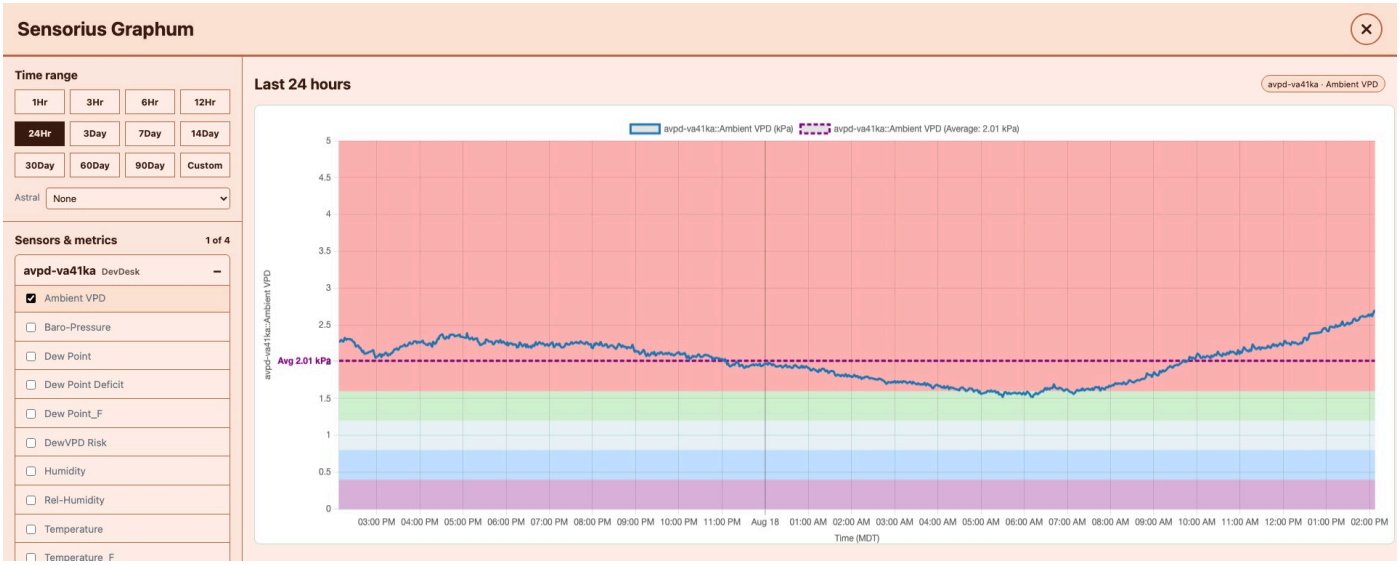

The full-screen graph displays up to four selected observations. The first selected metric uses the left axis, and additional metrics use the right axis. A switch channel counts as an observation and appears as ON/OFF transition markers. When average data is available, a purple dashed line labeled **Average** includes the arithmetic-average value for the selected visible window. The same value appears as a bold purple **Avg** tick at the line's height on its value axis. VPD graphs show VPD range coloring, and some metrics show gauge-zone background bands. These colored bands come from metric display zones, not automation thresholds.

On the dashboard, a WeeWX **Wind Direction** Sensor Tile configured as a **6Hr Graph** or **24Hr Graph** displays a wind rose instead of a direction line. Sixteen direction sectors show how frequently wind arrived from each compass direction. Stacked blue bands show wind speed in **0-5**, **5-15**, **15-30**, and **30+ mph** ranges, progressing from light blue for low speed to dark blue for high speed. The Sensor Tile title changes to **Wind-Rose (6hr)** or **Wind-Rose (24hr)** for the selected graph window and returns to **Wind Direction (deg)** in compass mode.

Each wind rose uses only observations from its selected 6-hour or 24-hour window. Sector lengths are normalized independently: the most frequent direction in that window reaches the outer ring, and the other sectors are scaled relative to it. Therefore, sector lengths should be compared within one rose, not as an absolute scale between the 6-hour and 24-hour roses. The center label gives the dominant compass direction and its actual percentage of samples for the selected window.

The large **mph** value below the rose is the latest wind-speed reading and may change as live station data arrives. The **Min**, **Avg**, and **Max** row is intentionally fixed to the trailing 24 hours in both wind-rose views; it does not change to a 6-hour summary when the 6-hour rose is selected.

Switch event overlays appear as vertical lines. The legend shows which colors mean ON and OFF for each selected switch channel.

Sensorius Graphum Controls

The graph button opens the full-screen workspace directly. On phones in portrait or landscape, the chart spans the screen width at the top, followed by Time Range and then Sensor Metrics and Switch selections. Scroll down to reach the controls; all available time ranges are shown without a separate clipped selector pane. Closing Graphum restores the dashboard's existing scaling.

On desktop, the controls remain in the scrollable left pane:

- **Time range**: select **1Hr**, **3Hr**, **6Hr**, **12Hr**, **24Hr**, **3Day**, **7Day**, **14Day**, **30Day**, **60Day**, or **90Day**. Available longer ranges depend on the configured database-retention period. Select **Custom** to enter an exact start and end date and time.
- **Astral**: select **None**, **Sun**, **Moon**, or **Sun & Moon** to control the optional Astral position panel shown with the graph.
- **Sensors & metrics**: select the **+** beside a sensor to expand it, then check one or more metrics. Each device location appears to the right of its stable device ID. Select **–** to collapse the sensor without changing its checked metrics.
- **Switches**: expand a switch and check a channel to overlay its ON/OFF transitions on the selected metric history. The switch location appears to the right of its stable device ID. A switch overlay accompanies at least one sensor metric; it does not form a graph by itself.
- **Selection count**: sensor metrics and switch channels share a maximum of four selections. At **4 / 4**, unchecked boxes are disabled. Clear any checked item to free a slot.

Checked items also appear as labeled chips above the chart, so the active graph can be confirmed without reopening a collapsed group. Every selection or time change redraws the graph automatically; there is no separate **Graph It** step. The first selected metric uses the left value axis and subsequent metrics use separate right-side axes. Switch channels appear as colored transition markers.

While the workspace is open, new sensor readings trigger a refresh through the dashboard's live-update path, switch events trigger an immediate refresh, and a 15-second fallback refresh keeps the graph current if a live notification is missed. Hidden or closed graphs do not poll, and a newer refresh cancels any older graph request still in progress. Graph selections are temporary and are not saved as named graph sets. Select **×** in the upper-right to close the workspace and return to the dashboard.

Use switch overlays to answer practical questions: whether a fan cooled the greenhouse, whether irrigation raised soil moisture, or whether lights changed VPD.

Severe Weather (US NWS)

When **US · National Weather Service** is selected, Sensorius checks the Astral location against NWS coverage and polls for official warnings and watches. During an active warning/watch, the dashboard forecast content and **Caelus Forecast** button turn orange. Caelus replaces the daily forecast statement with the event type,

start/end times, expected duration, affected area and NWS instructions. Normal presentation returns at cancellation or expiry.

To act on these events, create an automation with the **Severe Weather** condition and choose any existing actor. **Alert** displays the detailed message; **Notify** emails it when email is enabled. Each automation/actor triggers only once per event, including across NWS updates and hub restarts. You can dismiss an Alert toast without it appearing again for that event. The orange forecast indication remains until the weather warning ends. Advisories, statements, test messages, and other forecast providers do not activate this condition. See Severe Weather automation behavior for delay, reversion, and delivery details.

Caelus Weather Forecast

Select **6 Day Forecast** on the dashboard forecast tile to open the integrated Caelus full-screen weather display at `http://<sensorius-host>:8000/weather-forecast`. Select the circled **×** in the upper-right to close the forecast and return to the Sensorius dashboard. Select **Theme** beside the **Living Weather** heading to hide the forecast tiles and preview the five scenery choices from the bottom toolbar. Select **Return to Forecast** to restore the saved Caelus theme.

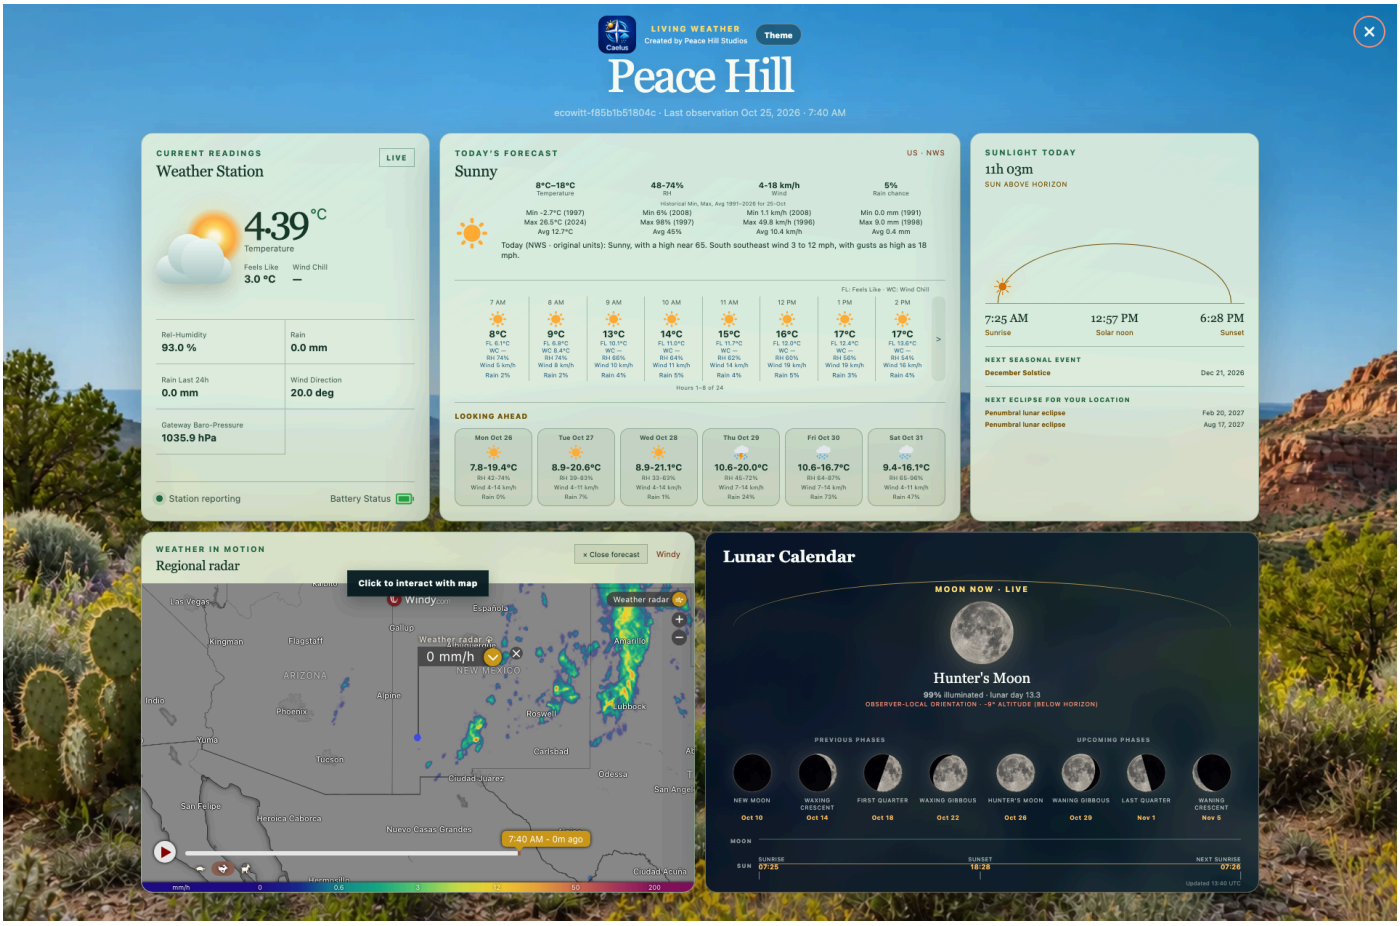

The weather display uses the existing Sensorius Astral latitude, longitude, timezone, and optional Community/Location Name. Its top row presents the selected sensor's latest current readings, the canonical Sensorius forecast, and the sunrise/sunset daylight track. Hourly forecast times use the local 12-hour AM/PM clock. The sunlight tile also shows the next seasonal event, and up to three solar or lunar eclipses visible from the configured Astral location during the next twelve months. A two-column row below pairs the Windy map in

radar view with the Lunar Calendar showing the current Moon and phase cycle. These tiles stack on narrow screens. The display also provides theme-matched six-day details. It reuses the Sensorius forecast and does not maintain a separate settings file or readings database.

For an Ecowitt or WeeWX station with outdoor temperature readings, **Feels Like** and **Wind Chill** appear beneath the primary current reading. Hourly forecasts also show **FL** and **WC** beneath each temperature. Values follow Metric or Imperial display units. Feels Like uses the Steadman shade approximation with outdoor temperature, RH from 0–100%, and nonnegative station wind speed; it does not account for direct sunlight or adjust wind for sensor height. Wind Chill uses the NWS formula only at temperatures at or below 50°F (10°C) with wind above 3 mph (4.83 km/h). Missing or invalid inputs and inapplicable Wind Chill show **—**. Gateway and indoor temperature readings do not qualify. These estimates are calculated for the Caelus display without adding stored readings.

Today's forecast includes a compact **Historical Min, Max, Avg** section beneath its expected ranges, with temperature, RH, wind, and rain in the same column order. These are statistics for the same calendar date at the hub's Astral location, using Open-Meteo/ERA5 historical data independently of the selected forecast provider. Temperature, RH, and wind are averages of daily means; rain is the average daily rainfall total, including dry days, **not a rain probability**. Min and Max use daily lows and highs for temperature, RH, and wind, and daily totals for rain. Each extreme includes its occurrence year; ties show the earliest year. Existing averages-only caches are rebuilt automatically. Units follow the selected Metric or Imperial display.

The date follows the hub's timezone. History starts in 1991 and extends through the latest available data, allowing for ERA5's roughly five-day publication delay; unpublished trailing days are excluded. Each calendar date uses its available daily samples, including recent years; February 29 uses only leap years. The label shows the actual year range and hub-local date, for example **Historical Min, Max, Avg 1991–2026 for 18-Sep**, and its tooltip gives the exact historical cutoff and sample count. These are regional climate estimates, not readings from the selected station. The source link and tooltip explain the baseline. Dashes mean history is still loading or unavailable, never zero. Retrieval is non-blocking. The cache is checked hourly and refreshed as the historical end date advances; a compact calendar-day cache survives restarts at `/home/<user>/Sensorius/weather_cache/weather_climate.json` on Linux or `/Users/<user>/Sensorius/weather_cache/weather_climate.json` on macOS. Updating the hub's location invalidates the active history. The displayed date and statistics refresh automatically, including after the hourly forecast refresh.

The Windy map is initially interaction-locked so the mouse wheel continues to scroll the Caelus page. Select **Click to interact with map** on the map's top border to enable its zoom and pan controls; move the pointer outside the map (or press Escape) to lock it again.

To view Windy's short-term radar nowcast, first select **Click to interact with map**, then use the radar timeline at the bottom of the map. Select a time in the red future portion of the timeline, or select **Play** to animate the observed radar history through the current frame and into the forecast. The future portion is a movement-based radar nowcast for approximately the next hour; move the timeline back to review the observed radar history.

The Windy map is an embedded service, and its selected timeline position may be temporary. Closing Caelus, reloading the page, or selecting **× Close forecast** can return the map to Windy's default current/history view. If that happens, activate the map and select the future portion of the timeline again.

The lunar panel shows the live Moon and its current illumination, lunar age, altitude, and local orientation above the phase milestones. Below it, the four most recent phase milestones appear chronologically on the left, and the next four appear on the right, with each phase's local date below its name. The phase groups stack on narrow screens. Every disk is oriented for the configured Astral location near the Moon's highest point on that date. Full-moon milestones use familiar traditional names such as **Harvest Moon**. Below the phases, a shared timeline runs from today's sunrise to the next sunrise. Sunrise, sunset, and next sunrise appear on the Sun row; moonrise and moonset are chronologically interlaced on the Moon row using the same scale. At high latitudes, unavailable twilight or solar events are shown individually and do not suppress the remaining lunar, seasonal, eclipse, or solar details.

Current Readings displays the selected sensor's configured **Display Metrics** in their saved order, including their standard Sensorius units, and identifies the source by its configured sensor **Location**. This allows a weather station, a Nodus environmental sensor, or a WeeWX station with fewer metrics to use the same full-screen view without requiring weather-only metric names. For Ecowitt and WeeWX stations, the bottom-right footer shows Battery Status using the same OK, low, or unknown indicator as the dashboard. While Caelus remains open, Current Readings follows the selected sensor's collection interval (normally 60 seconds for Nodus and the configured polling interval, 300 seconds by default, for Ecowitt). Today's Forecast refreshes at the top of each hour, while Sunlight Today continues to refresh every 300 seconds.

The hourly strip presents the next 24 hours as one-hour forecasts, with eight hours visible at a time. Use the narrow left and right controls to move the window one hour; each control disappears when its edge is reached. Hourly and daily forecasts show rain or snow chance percentages, while condition icons identify rain or snow when the provider predicts a precipitation type. **Looking Ahead** shows each day's date, weather icon, temperature minimum–maximum, relative humidity minimum–maximum, wind minimum–maximum, and rain or snow chance directly in the daily tiles. Temperature and wind follow the selected display units. These details fit within the existing forecast card.

Biodynamic Calendar Features

The integrated application provides:

- A full-screen Maria Thun based Biodynamic Calendar UI.
- Moon Attributes panel with lunar direction, distance, declination, and eclipse information.
- Planetary Aspects panel with current major aspects and planet zodiac placements from Skyfield.
- Sensorius-managed Astral location and timezone.
- Twelve-Month Overview.
- Planting records with crop details.
- Notes and print reports.
- Sensorius SQLite storage for notes, summaries, planting records, and cache entries.
- A **Theme** button in the header that hides the calendar panels and previews Garden Tools, Spring, Summer, Autumn, and Winter from a bottom toolbar, with Automatic rotation available as a separate control. **Return to Calendar** restores the saved calendar theme.

Integrated calendar fields and controls:

- **Location**: comes from the Astral and Time sections in Sensorius General Settings. Change it there to invalidate and rebuild calendar data.
- **Previous / Next month arrows**: move the main month calendar.

- **Calendar day cells**: taller cells show centered botanical icons matching the standalone Biodynamic Calendar: garlic for Root, kale for Leaf, sunflower for Flower, grapes for Fruit, and sleeping Zs for Rest. Select a day. The selected day drives the Daily Summary, selected facts, notes, and planting context.
- **Twelve-Month Overview**: shows a longer planning range assembled from the shared background cache.
- **Selected Day header**: shows the selected date with its local sunrise and sunset times on the right, followed by its hours of daylight.
- **Daily Summary**: explains the selected day, including biodynamic focus and relevant timing.
- **Midnight rollover**: on the next automatic refresh (normally within one minute), the calendar returns to the current month and selects the new current day in the configured calendar timezone, even if another day was selected. The selected facts, Daily Summary, notes, and planting context update together. Sleeping devices or suspended tabs update when refreshes resume.
- **Plantings**:
  - **Plant**: crop or plant name, such as Tomato.
  - **Variety**: cultivar or variety name.
  - **Focus**: biodynamic plant focus. Options are Auto, Root, Leaf, Flower, and Fruit. Auto lets the app infer the focus from crop information when possible.
  - **Start**: start method. Options are Seed and Transplant.
  - **Start Date**: planned or actual seeding/transplant date.
  - **Harvest**: expected harvest date.
  - **Days to Maturity**: optional number from 1 to 730 days.
  - **Location**: bed, greenhouse, field, tray, or other practical planting location.
  - **Plant Type**: descriptive crop class, such as fruiting vegetable.
  - **Attributes**: free-form notes for spacing, succession, hardening, trellis, harvest window, or other crop details.
  - **Save Planting**: stores or updates the planting record.
  - **Clear**: clears the planting form.
  - **Edit / Delete** in the planting list: updates or removes an existing planting record.
- **Your Notes**: free-form note for the selected day.
- **Save Note**: stores the note for that date.
- **Print**: prints the selected calendar/report view.

Printing Calendar Reports

On the Raspberry Pi desktop shell, **Report** uses the Pi's default CUPS printer. Raspberry Pi deployment offers to configure a permanent driverless network-printer queue. If the printer was connected later, an administrator can rerun `/home/<user>/Sensorius/scripts/setup_rpi_printer.sh` once; ordinary report users do not need to configure the printer for every report.

When the calendar is opened from another computer or mobile device, printing uses that device's browser and printers instead of the Raspberry Pi printer. Saving as PDF also occurs on the device displaying the print dialog.

Before relying on local Pi printing, confirm that its print dialog shows one enabled default destination. If duplicate entries or a disabled destination appear, use the printer troubleshooting section in the Operations guide.

Daily summaries come from Sensorius' biodynamic summary storage and are generated on demand when a day is selected. Browsing future months does not generate summaries for their default day. For the current day, the summary may include a **24hr Forecast** section if weather forecast data is enabled in General Settings.

Mobile Operations

Open Sensorius in your phone's browser or from its Home Screen shortcut, using the same hub address you normally use. The examples below show an iPhone; device names, available metrics, settings, and time ranges depend on your installation. The screenshots show selected views, not every available option. Tap an image to open it at full size.

On Android, open the dashboard in Chrome, open the browser menu, and choose **Add to Home screen** (or **Install app**, when offered). Confirm the name and icon before adding it. Sensorius supplies its logo in standard and adaptive Android icon formats. If an existing shortcut still shows an old or generic icon, remove that shortcut and add it again after reloading the dashboard. Installation options depend on the browser and connection: a local HTTP hub may be offered as a shortcut rather than a standalone installed app. This does not add offline operation; the phone still needs access to the running hub.

Mobile Dashboard

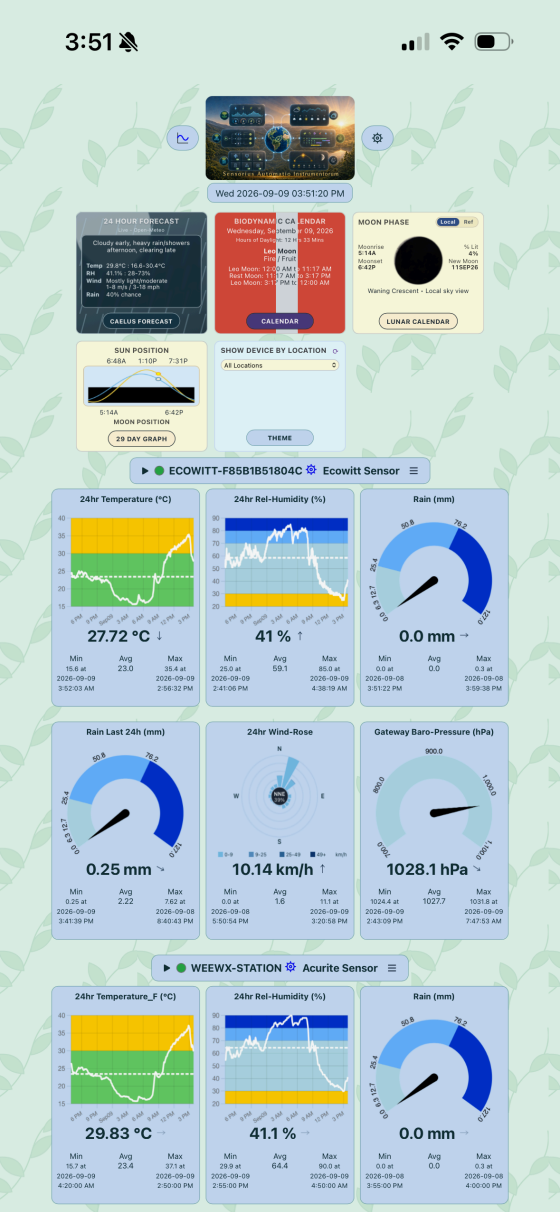

The dashboard is the starting point for readings, settings, and history.

- Tap the **Sensorius AI image** at the top to refresh the app. Save any pending settings changes before refreshing.
- Tap the **graph icon to the left** of the image to open Sensorius Graphum. Tap the **gear to the right** to open General Settings. A gear beside a sensor or switch opens settings for that device.
- Swipe up to see sensor groups and switch tiles farther down the dashboard. Use **Display Device By** to narrow the display, or choose **All Locations** to restore the complete view.
- Tap a sensor group's **disclosure triangle** to reveal or hide its additional metrics. Tap a Sensor Tile to cycle its available graph and gauge views; save a preferred display style in Sensor Settings to make it persistent.
- Use the named buttons on the overview tiles to open Caelus Forecast, the Biodynamic Calendar, the Lunar Calendar, or the 29 Day Graph. These are separate views from Graphum; use their close or return control to come back.

Mobile Settings

The following row illustrates **Settings → General Settings → Display → Sensorius Dashboard Theme**. The same menu-and-Back navigation is used for Sensor Settings and Switch Settings, with options appropriate to each device.

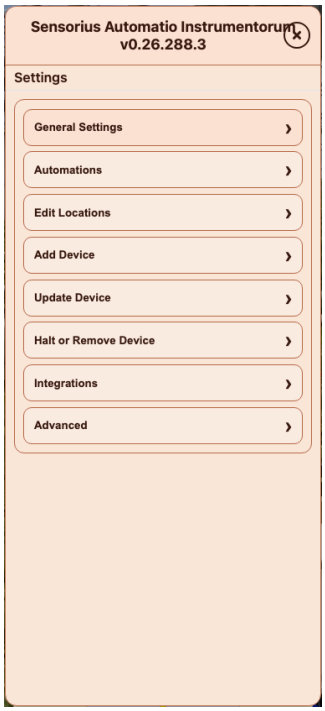

1. Settings menu

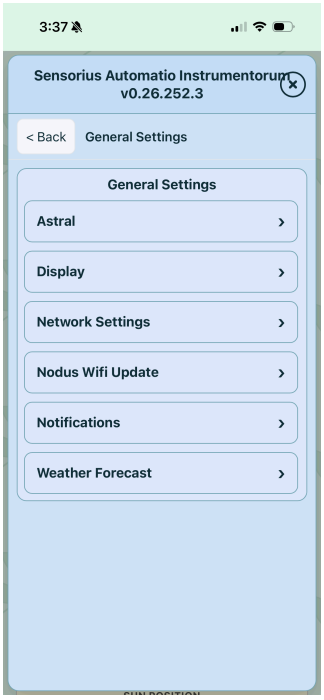

2. General Settings

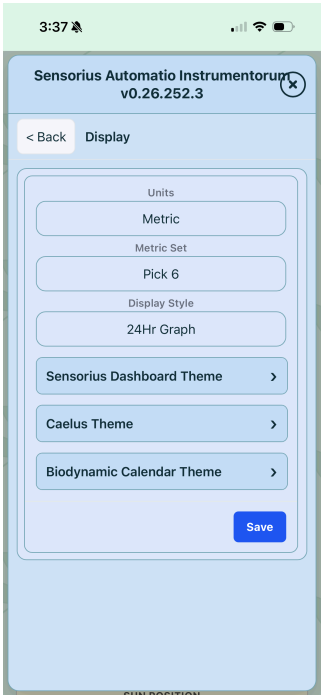

3. Display

4. Theme selection

1. Tap a settings gear, then tap the desired **menu row with a ›**. Some rows open entry fields immediately; others open another menu. Only the selected view is displayed, so the previous menu is no longer beside or above it.
2. Continue through any submenus. For example, choose **General Settings**, then **Display** to change units, the metric set, or the display style. Choose **Sensorius Dashboard Theme** within Display to see its theme choices. Other entries lead to automations, device management, integrations, and advanced settings; use the relevant sections of this guide for those controls.
3. Swipe up within the view to reach fields, choices, and buttons below the visible area. Tap a drop-down to see its available values. If the phone's keyboard covers a control, finish the entry and dismiss the keyboard.
4. Tap the section's **Save** button to apply its changes. Save remains with the section being edited; the Display Save button is also available inside a theme selection view. Save each section you change before moving on.
5. Tap **< Back** at the top to return **one level**. From the theme choices, Back returns to Display; subsequent taps return to General Settings and then the settings menu. Back is navigation, not Save.
6. Tap the **circled ×** to close settings and return to the dashboard. Closing is not Save either. Reopening settings starts at its menu.

Mobile Graphum

Graphum uses the full screen width in both orientations. Its scroll order is **chart → Time range and Astral → Sensors & metrics → Switches**. The landscape example shows the chart area; its selectors are farther down the same view.

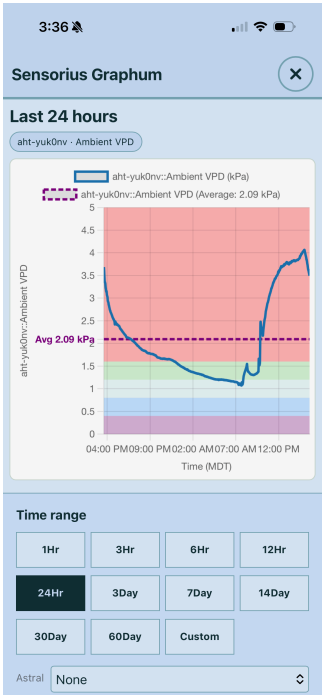

Portrait chart

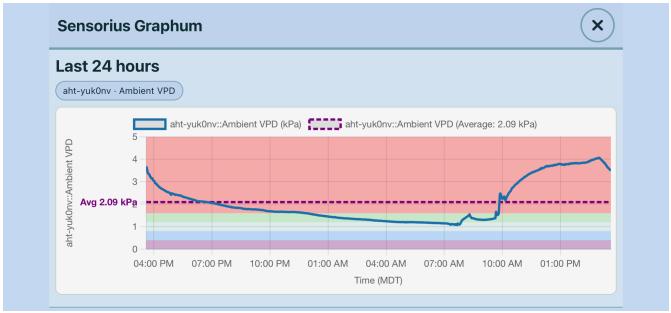

Landscape chart

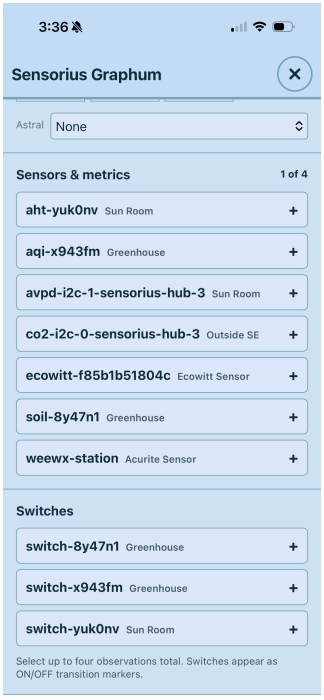

Selectors below the chart

1. Open Graphum using the dashboard's **graph icon**. Swipe up past the chart to reach the controls, including in landscape. The chart and controls scroll together rather than covering each other.
2. Choose a **Time range**. Options run from **1Hr** through longer day ranges; the longest available ranges depend on database retention, so your choices may differ from the screenshot. Choose **Custom** to enter both a start and an end date and time. Use **Astral** to add Sun, Moon, or Sun & Moon positions, or select **None** to omit that panel.
3. Under **Sensors & metrics**, tap a device's **+** to reveal its metrics, then check the measurements to graph. Tap **–** to collapse the list without clearing its checked metrics. Scroll farther down for other devices.
4. To compare switching with sensor history, expand a device under **Switches** and check a channel. Switch selections add ON/OFF transition markers to a sensor graph. Metrics and switch channels share a limit of **four selections**; uncheck an item to make room when the counter reaches four.
5. The chart updates automatically when selections or the time range change. Swipe down to return to the chart and check the selection labels above it. Rotate the phone for a wider landscape graph; you do not need to select the metrics again.
6. Tap the **circled ×** at the top to return to the dashboard. The dashboard returns to its usual scaling when Graphum closes.

Good Operating Habits

- Use names and locations that match how people talk about the garden or farm.
- Test automations with harmless loads before connecting pumps, heaters, valves, or lights.
- Use hysteresis and short delays on threshold rules.
- Watch graphs after calibration changes.
- Keep MQTT broker addresses stable once Nodus devices or Home Assistant depend on them.
- Back up `sensor_settings/`, `switch_settings/`, `system_settings/`, and `sensorius_data.db` before major changes.
- Restart Sensorius after changes that affect startup, host binding, service setup, or MQTT subscriptions when the UI or save message indicates a restart is needed.

Opening Sensorius

If you installed Sensorius as a service, it starts automatically when the host computer starts or restarts. Wait for the host computer or Raspberry Pi to finish starting; the dashboard will appear after a few seconds. Service installs continue running in the background. To restart a Linux or Raspberry Pi systemd service manually, open a terminal and enter:

```
sudo systemctl restart sensorius
```

If you start Sensorius manually, run this from the installed Sensorius folder (the default is `~/Sensorius`):

```
cd ~/Sensorius
.venv/bin/python Sensorius.py
```

The application will start and display the Sensorius dashboard. The first run may take a little longer while it sets up the system's location, database, and calendar data.

The dashboard can also be opened using one of these addresses:

- Same computer: `http://127.0.0.1:8000`
- Local network hostname: `http://<hostname>.local:8000`
- Another device on the same network: `http://<sensorius-host-ip>:8000`

Keep the terminal process running for manual starts.

Keep Sensorius On A Trusted Network

Sensorius is built for a trusted private LAN: a network where you control which people and devices can reach the hub, MQTT broker, and Nodus devices. Being on home Wi-Fi alone does not make every connected device trustworthy; restrict access from guest networks and untrusted devices. Authenticated VPN clients can extend this private access to your phone, tablet, or computer while you are away from home.

Sensorius does not provide a complete login/session boundary around every settings, onboarding, calibration, switch, or maintenance action. The optional web API key protects selected operations, not the whole UI.

Do not expose the Sensorius HTTP or MQTT ports directly to the Internet, including through router port forwarding. Keep the hub and devices behind a firewall and use an isolated IoT VLAN where appropriate.

Remote Access With PiVPN And WireGuard

For access away from home, use a Raspberry Pi on your home network as a VPN gateway with **PiVPN and WireGuard**. The gateway can serve Sensorius hubs on Raspberry Pi, macOS, Windows, or Linux; each hub does not need its own VPN server. Follow the official PiVPN installation guide and WireGuard client guide for setup, mobile QR-code import, and client management.

1. Give the VPN Raspberry Pi a stable LAN address, such as a router DHCP reservation. Choose WireGuard during PiVPN setup and configure a reachable public endpoint; use dynamic DNS if your public IP changes.
2. Forward only the configured WireGuard UDP port (normally `51820`) from your router to the VPN Pi. Keep Sensorius HTTP and MQTT ports private. This requires an inbound-reachable Internet connection; carrier-grade NAT may require an ISP-provided public address or another VPN access method.
3. For access by IP address, choose **Quad9** for VPN-client DNS, or enter `9.9.9.9` and `149.112.112.112` as custom DNS servers. An existing WireGuard client profile can use `DNS = 9.9.9.9, 149.112.112.112` in its `[Interface]` section. Quad9's secure DNS service blocks known malicious domains. Public DNS does not resolve your private LAN device names. For access by hostname as well as IP, use a local DNS resolver that forwards public queries to Quad9, as described below.
4. Create a separate client profile for each phone or tablet with `pivpn add`. Display its QR code with `pivpn -qr`, import it into the WireGuard app, and activate the tunnel. Keep profiles and QR codes private; revoke a lost device with `pivpn remove`.
5. Ensure VPN routes include the target LAN or IoT subnet and firewall rules permit the intended web access. Test from cellular data or another network, then open `http://<sensorius-lan-ip>:8000` in the phone or tablet browser (use your configured HTTP port if different).

Opening the web UI directly in your mobile browser uses its phone or tablet layout. You can reach any Sensorius system, and an `xesp32s3` Nodus running the `nodusweb` profile, by its known LAN IP and configured web port when VPN routing and firewall rules allow it. The Nodus web UI likewise uses its mobile layouts. Reserve device addresses or keep an address list so they are easy to find while away.

Use LAN Hostnames And IP Addresses Through The VPN

PiVPN provides network access; it does not automatically turn device names advertised through mDNS into DNS records. To use names while away, configure your router's local DNS service or a separate resolver such as Pi-hole to answer for your devices. The following example uses resolver `192.168.1.1`, Sensorius `192.168.1.50`, and Nodus `192.168.1.60`; substitute your actual addresses and configured web ports.

1. Reserve the devices' LAN IP addresses in DHCP. In the local resolver, create address records mapping `sensorius.home.arpa` to `192.168.1.50` and `nodus-greenhouse.home.arpa` to `192.168.1.60`. Some routers create DNS records from DHCP reservations, but verify this rather than assuming a device's hostname or display name is registered. If your router cannot serve local records, use a resolver that can. Configure its public-query upstreams to Quad9 (`9.9.9.9` and `149.112.112.112`).
2. During PiVPN installation, choose the local resolver's IP as the custom client DNS server. For an existing installation, edit `/etc/pivpn/wireguard/setupVars.conf` with `sudo nano` and set `pivpnDNS1=192.168.1.1`. Remove any `pivpnDNS2` entry pointing to public DNS. These settings apply to newly generated profiles.

3. Update each existing tunnel's DNS setting in the WireGuard app, or change its imported profile's `[Interface]` section to `DNS = 192.168.1.1` and reimport it. Reconnect the tunnel after changing it. Do not add Quad9 as a second client DNS server: clients may send private-name queries there instead of to your local resolver. Keep Quad9 upstream of the resolver.
4. Ensure the client's `AllowedIPs` includes both the resolver's address and the device subnets. A full tunnel includes these routes; a split tunnel needs them explicitly. Permit DNS traffic (UDP and TCP port `53`) from VPN clients to the resolver, and web traffic to the intended devices. The resolver must accept queries arriving through the VPN. Keep DNS private; do not forward port `53` from the Internet.

See PiVPN's local-hostname guidance and local-resolver integration for additional configuration details.

Use fully qualified DNS names in bookmarks. `home.arpa` is reserved for home-network DNS; these examples require records in your resolver and are not automatic Sensorius or Nodus defaults. If your router uses another domain, use the names it actually serves. A short name such as `sensorius` may work only when the client has the matching DNS search suffix, so prefer `sensorius.home.arpa` across phones, tablets, and computers.

Address example	How it is resolved	Access through a routed VPN
`http://192.168.1.50:8000`	No DNS lookup	Works when routing and firewalls permit it.
`http://sensorius.home.arpa:8000`	Your local DNS resolver	Works with the local record and VPN DNS settings above.
`http://nodus-greenhouse.home.arpa:<web-port>`	Your local DNS resolver	Works for a reachable `nodusweb` device with its own DNS record. Replace `<web-port>`.
`http://sensorius.local:8000`	mDNS on the local network link	Normally works only on the same link when the host advertises that name; ordinary PiVPN routing does not carry mDNS discovery.

The `.local` suffix has special mDNS behavior. Adding a `.local` record to ordinary DNS is not a reliable VPN workaround; use a separate DNS name such as `sensorius.home.arpa` for the same IP. This does not require changing the device's existing mDNS hostname.

Test with home Wi-Fi disabled and the VPN connected: first open the IP URL, then the DNS URL. If the IP works but the DNS name fails, check the record, client DNS setting, resolver access, and any browser secure-DNS setting that bypasses local DNS. From a VPN-connected computer with `nslookup`, `nslookup sensorius.home.arpa 192.168.1.1` should return `192.168.1.50`; then run `nslookup sensorius.home.arpa` to check the client's default resolver. If neither URL works, check tunnel routing, firewall rules, the web server's bind address, and overlapping home/remote LAN subnets before troubleshooting DNS.

RustDesk or Raspberry Pi Connect can also provide remote desktop access. Their desktop sessions display the host's browser layout, which can require scaling, zooming, or panning on a phone or tablet. Prefer WireGuard plus the device's own browser for routine mobile web UI access.

If only the host computer needs the UI, set `SENSORIUS_HTTP_HOST=127.0.0.1` in the installation's `.env` (for example, `/home/<user>/Sensorius/.env`) and restart Sensorius. This host-only bind prevents direct access from other LAN or VPN devices. Treat `.env`, runtime settings, backups, and diagnostic exports as sensitive because stored secrets are not protected by strong encryption.

Where Sensorius Gets Its Information

Live sensor readings come from local Raspberry Pi sensor controllers and from MQTT-discovered Nodus devices. Sensor readings are written to the local SQLite database, `sensorius_data.db`, in the Sensorius process working directory unless the service or caller passes a different database path. Many service installs use the runtime directory, such as `/Users/<user>/Sensorius/sensorius_data.db` on macOS or `/home/<user>/Sensorius/sensorius_data.db` on Linux.

Sensor and switch names, locations, display choices, calibration offsets, and channel labels come from Sensorius settings files under the macOS runtime settings folder:

- System settings: `/Users/<user>/Sensorius/system_settings/<device_id>/settings.toml`
- Sensor settings: `/Users/<user>/Sensorius/sensor_settings/<sensor_id>/sensor.toml`
- Switch settings: `/Users/<user>/Sensorius/switch_settings/<switch_id>/switch.toml`
- Advanced automations: `/Users/<user>/Sensorius/automation_settings/automations.toml`

For Nodus devices, Sensorius also listens for MQTT metadata and state messages. That metadata tells Sensorius what a device is, which readings or channels it provides, whether it is online, and which remote settings can be updated.

Troubleshooting

If a sensor does not appear:

- Confirm Sensorius is running and the dashboard is reachable.
- For Nodus devices, confirm the device is powered, on the expected Wi-Fi, and publishing MQTT metadata.
- Check **Sensor Info** for last packet and offline events.
- Refresh the dashboard after onboarding or metadata changes.

If readings look wrong:

- Confirm the sensor is in the intended location.
- Compare against a trusted reference before calibrating.
- Use **Sensor Calibration** for one device and **System Calibration** for groups of similar temperature/RH sensors.
- Check whether the metric shown is the one you intended in **Sensor Settings > Metric 1-6**.

If switch control does not work:

- Confirm the switch is online in **Switch Info**.
- Check channel labels in **Switch Settings**.
- For Nodus switches, confirm MQTT command and state topics are flowing.
- Check whether an enabled Advanced automation is controlling the same channel.

If graphs have gaps:

- Confirm the sensor was online during the missing period.
- Check whether Sensorius or the host restarted.

- Check database retention in **General Settings > Advanced**.
- Confirm the selected metric exists for the selected sensor.

If Home Assistant does not show entities:

- Confirm Home Assistant integration is enabled.
- Verify broker host, port, TLS, username, and password.
- Confirm Home Assistant's MQTT integration is running.
- Restart Home Assistant or reload MQTT entities if retained discovery was recently changed.

If the Biodynamic Calendar is unavailable:

- Confirm latitude and longitude in **General Settings > Astral**, and confirm the timezone in **General Settings > Network Settings**.
- Confirm the normal Sensorius `/healthz` endpoint responds and that Sensorius can write to its SQLite database.
- If the calendar is still warming, leave Sensorius running for several minutes and verify the Astral location is complete.