
APCmini MK1/MK2 Performance Mode

Installation (Windows / Ableton Live 12)

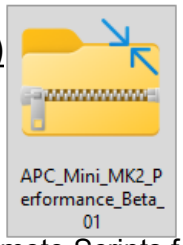



1. Close Ableton Live.

2. Extract the APC Mini MK1 or MK2 beta script ZIP. ---------->

3. Copy the extracted script folder into your Ableton User Library's Remote Scripts folder.
   Common location: " %USERPROFILE%\Documents\Ableton\User Library\Remote Scripts" (If your User Library is elsewhere, use its actual location.)

Copy the folder inside the extracted file into the "remote script" folder ---------->




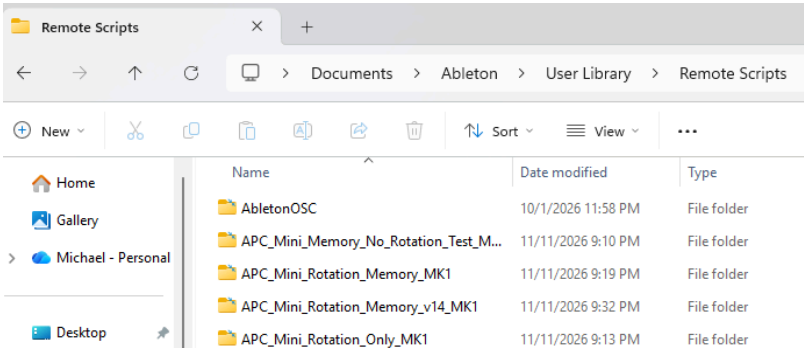

You can see my old versions in here just do the same, copy and paste there

4. Restart Ableton Live.

5. Open Settings > Link, Tempo & MIDI. Select the custom APC Mini MK1 or MK2 script as Control Surface, with the MK1/MK2's appropriate MIDI input/output.

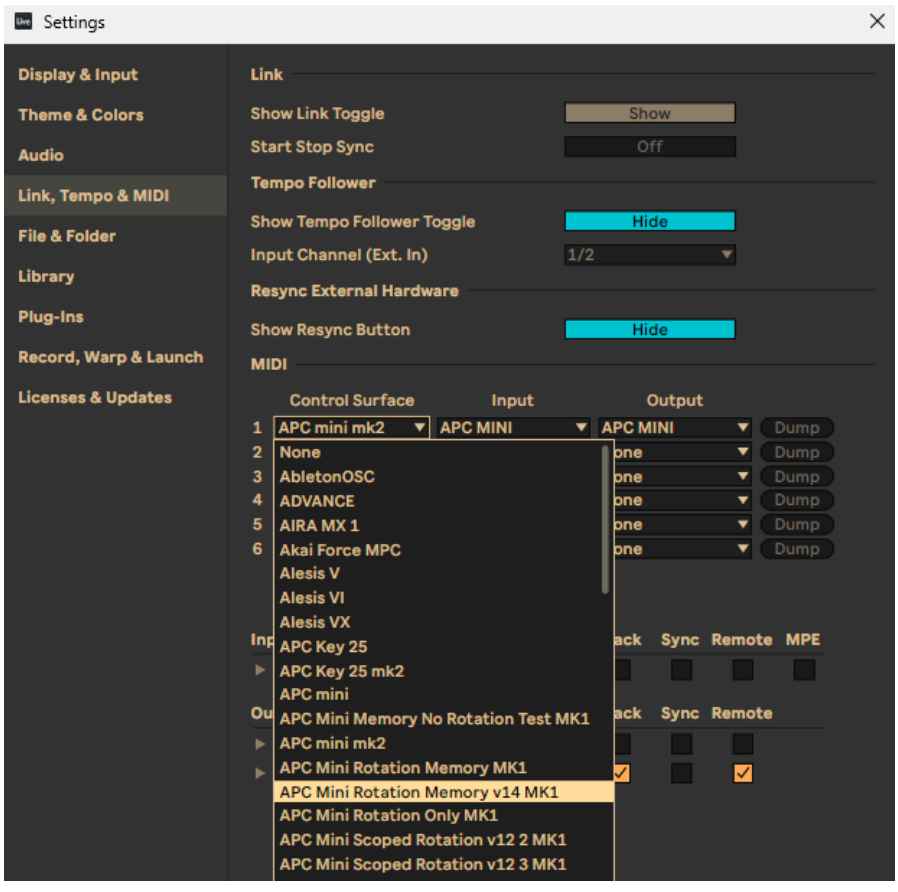

6. Make a disposable Live Set with clips of different lengths, including clips on tracks outside the 8-track red box.




Now you are ready to test the new functions.

IMPORTANT NOTICES

- This is an experimental beta for the unverified MK2. A potential defect has already been identified in the temporary-fill code (tests 8–9). MK1 was tested and passed.
- If test 1 fails, stop testing and switch back to Ableton's **built-in APC Mini MK1/MK2 Control Surface.**
- For failures, note the test number, button sequence, what happened, and Ableton version please.

Guide to New Features

Here are the references, combinations, and new features to each “button”/the APC used for the new features.

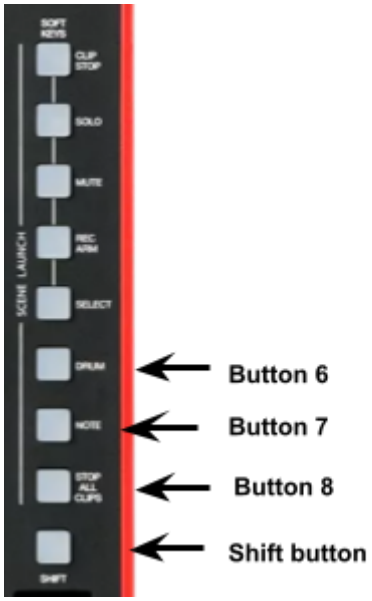

A. NORMAL PLAY / SCOPED SCENES (red box on ableton)

- If you launch a row, it’ll only play what’s in the scoped scene (red box) Tracks outside the box must keep playing unchanged or stay inactive if not launched. If you move the scene (red box), the scene launching should now follow the NEW box.

B. EXCLUSIVE MULTI-CLIP LAUNCH

- COMBINATION: Hold SHIFT -> tap one or more PADs -> release SHIFT.
    - RESULT: Selected clips launch together at Ableton's clip-launch quantization. All other ordinary tracks' clips are stopped. If rotation is active, it is cancelled.
- Try these different things:
    - One pad only.
    - Two pads on different tracks.
    - Three or more pads on different tracks.
    - Two pads on the SAME track: the LAST pad selected wins.
    - Mix of occupied and empty pads: empty pads should not be launched.
- **IMPORTANT**: This is a GLOBAL exclusive launch; it may stop tracks outside the red box. That differs from the scoped SCENE feature.

C. SAVE / RECALL ONE PATTERN

- SAVE: Hold SHIFT + 6 for approximately 1 second, then release.
    - RESULT: Save the currently playing clip combination in one memory slot.
- RECALL: Hold SHIFT -> tap 6 ONCE briefly -> release.
    - RESULT: After a short delay to distinguish double-tap, recall saved clips on the next bar and stop other ordinary clips.
- Try these different things:
    - Save pattern A; switch to pattern B; recall A.
    - Save another pattern; verify it overwrites the first.
    - Recall with no saved pattern: show an empty-memory message, no crash.
    - Recall during rotation: rotation should cancel.
- **LIMIT**: Memory lasts only until script reload/Ableton closes. It is not written into the Live Set.

D. FOUR-BAR A/B ROTATION

- COMBINATION: Start playing pattern A -> hold SHIFT + 6 -> tap PAD(s) for pattern B -> release.
    - RESULT: On the next bar, play B. After four bars, switch to A; after four more bars, back to B; repeat. Tracks present in A but not B, or B but not A, are switched appropriately. Tracks unrelated to either pattern should keep playing.
- Try these different things:
- - One B pad.
- - Several B pads on different tracks.
- - A and B use different clips on the same track.
- - A and B use partly different tracks.

- - Keep an unrelated kick playing throughout.
- - Change tempo while rotating; look for drift or incorrect transitions.
- - Stop Live transport: rotation should cancel rather than unexpectedly restart.

D.1. CANCEL ROTATION WITHOUT SILENCING THE SET

- COMBINATION: Hold SHIFT + 6 -> press 8 (STOP ALL CLIPS) -> release.
    - RESULT: Rotation is cancelled; the clips currently playing should CONTINUE. The normal Stop All Clips command must NOT fire.
- Try during A and during B; listen for any unintended stops.

E. TEMPORARY ONE-SHOT FILL

- COMBINATION: Hold SHIFT + 7 -> tap one or more PADs -> release.
    - RESULT: Play the chosen fill clips exclusively for the length of the LONGEST chosen clip, then restore the previously playing clips. A 1-bar fill should return after 1 bar; mixed 1- and 2-bar fills should return after 2 bars.
- Try these different things:
    - One 1-bar MIDI fill.
    - One 2-bar MIDI fill.
    - Two fills on different tracks with different lengths.
    - Two fills on the same track: last pad wins.
    - Fill on a track that was previously silent.
    - Fill during an existing A/B rotation: finish current bar, play fill, then resume the NEXT rotation pattern.
    - Press a normal pad while a fill is active: pending fill restoration should be cancelled.
- **KNOWN BUG:** The current beta may throw an error while calculating the return timing. Report this as a script defect, not an MK2 hardware failure.

F. NATIVE MK2 DRUM / NOTE MODES — CUSTOM DOUBLE-TAP

- DRUM: Hold SHIFT -> tap 6 twice QUICKLY -> release SHIFT.
    - RESULT INTENDED: Enter Drum Mode; doing it again toggles back to Session Mode. Drum Mode needs an appropriate selected Drum Rack track.
- NOTE: Hold SHIFT -> tap 7 twice QUICKLY -> release SHIFT.
    - RESULT INTENDED: Enter Note Mode; doing it again toggles back to Session Mode.
- Try these different things:
    - Double-tap 6: Drum Mode, then double-tap 6 again: Session Mode.
    - Double-tap 7: Note Mode, then double-tap 7 again: Session Mode.

    - Single tap 6 must RECALL memory, NOT switch to Drum Mode.
    - Single tap 7 must NOT switch modes or trigger a fill.
    - Holding 6 for a second must SAVE, NOT switch modes.
    - SHIFT + 6 + pads must ROTATE, NOT switch to Drum Mode.
    - SHIFT + 7 + pads must FILL, NOT switch to Note Mode.
- **WARNING**: Stock MK2 normally uses a SINGLE Shift+6 or Shift+7 to change modes. Our double-tap override is experimental and may conflict with native behavior.

TESTING PHASE

[ ] 1. STARTUP: MK1/MK2 lights up; red session box appears; normal pads launch clips.

[ ] 2. RED BOX: Each scene button launches only clips in the current 8-track red box. Move the box and retest. Outside tracks keep playing.

[ ] 3. EXCLUSIVE: Hold Shift, select one or multiple clip pads, release Shift. Only the chosen clips play; other playing clips stop.

[ ] 4. MEMORY: Hold Shift + 6 for about 1 second to save playing clips. Change clips; tap Shift + 6 to recall saved pattern.

[ ] 5. A/B ROTATION: Shift + 6 + pad(s) rotates between current clips and selected clips every four bars

[ ] 6. CANCEL ROTATION: Shift + 6 + 8 cancels rotation without stopping the currently playing clips.

[ ] 7. EXCLUSIVE DURING ROTATION: Shift + pad(s) cancels rotation and exclusively launches the new selection.

[ ] 8. FILL: Shift + 7 + pad(s) plays a temporary fill, then restores the previous clips.

[ ] 9. FILL DURING ROTATION: A temporary fill interrupts rotation and then rotation resumes correctly.

[ ] 10. MK2 NATIVE MODES: Double-tap Shift + 6 to enter Drum Mode; double-tap Shift + 7 to enter Note Mode. Confirm pads behave correctly.