
ANUGA User Manual

Release 2.0

Stephen Roberts, Ole Nielsen, Duncan Gray, Jane Sexton
and Gareth Davies

19 May 2015 17:29

©Commonwealth of Australia (Geoscience Australia) and the Australian National University 2004-2010.

Permission to use, copy, modify, and distribute this software for any purpose without fee is hereby granted under the terms of the GNU General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version, provided that this entire notice is included in all copies of any software which is or includes a copy or modification of this software and in all copies of the supporting documentation for such software. This program is distributed in the hope that it will be useful,

but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License (<http://www.gnu.org/copyleft/gpl.html>) for more details.

You should have received a copy of the GNU General Public License along with this program; if not, write to the Free Software Foundation, Inc., 59 Temple Place, Suite 330, Boston, MA 02111-1307

This work was produced at Geoscience Australia and the Australian National University funded by the Commonwealth of Australia. Neither the Australian Government, the Australian National University, Geoscience Australia nor any of their employees, makes any warranty, express or implied, or assumes any liability or responsibility for the accuracy, completeness, or usefulness of any information, apparatus, product, or process disclosed, or represents that its use would not infringe privately-owned rights. Reference herein to any specific commercial products, process, or service by trade name, trademark, manufacturer, or otherwise, does not necessarily constitute or imply its endorsement, recommendation, or favoring by the Australian Government, Geoscience Australia or the Australian National University. The views and opinions of authors expressed herein do not necessarily state or reflect those of the Australian Government, Geoscience Australia or the Australian National University, and shall not be used for advertising or product endorsement purposes.

This document does not convey a warranty, express or implied, of merchantability or fitness for a particular purpose.

ANUGA

Manual typeset with L^AT_EX

Credits:

- ANUGA was developed by Stephen Roberts, Ole Nielsen, Duncan Gray and Jane Sexton. It is currently being developed and maintained by Stephen Roberts and Gareth Davies.

License:

- ANUGA is freely available and distributed under the terms of the GNU General Public Licence.

Acknowledgments:

- Ole Nielsen, James Hudson, John Jakeman, Rudy van Drie, Ted Rigby, Petar Milevski, Joaquim Luis, Nils Goseberg, William Power, Trevor Dhu, Nariman Habil, Gareth Davies, Linda Stals, Matt Hardy, Jack Kelly and Christopher Zoppou who contributed to this project at various times.
- A stand alone visualiser (anuga_viewer) based on Open-scene-graph was developed by Darren Edmundson and James Hudson.
- The mesh generator engine was written by Jonathan Richard Shewchuk and made freely available under the following license. See source code triangle.c for more details on the origins of this code. The license reads

```
/*********************************************
/*
/*      888888888   ,o,           / 888
/*      888    88o88o  "   o8888o  88o8888o  o888888o  888  o888888o
/*      888    888    888     88b 888  888 888 888 888 d888  88b
/*      888    888    888  o88^o888  888  888 "888888"  888 888888888
/*      888    888    888 C888  888 888  888 /     888 q888
/*      888    888    888 "88o^888  888  888 Cb     888 "88oooo"
/*                                         "8oo8D
/*
/* A Two-Dimensional Quality Mesh Generator and Delaunay Triangulator.
/* (triangle.c)
/*
/* Version 1.6
/* July 28, 2005
/*
/* Copyright 1993, 1995, 1997, 1998, 2002, 2005
/* Jonathan Richard Shewchuk
/* 2360 Woolsey #H
/* Berkeley, California 94705-1927
/* jrs@cs.berkeley.edu
/*
/* This program may be freely redistributed under the condition that the
/* copyright notices (including this entire header and the copyright
/* notice printed when the '-h' switch is selected) are not removed, and
/* no compensation is received. Private, research, and institutional
/* use is free. You may distribute modified versions of this code UNDER
/* THE CONDITION THAT THIS CODE AND ANY MODIFICATIONS MADE TO IT IN THE
/* SAME FILE REMAIN UNDER COPYRIGHT OF THE ORIGINAL AUTHOR, BOTH SOURCE
/* AND OBJECT CODE ARE MADE FREELY AVAILABLE WITHOUT CHARGE, AND CLEAR
/* NOTICE IS GIVEN OF THE MODIFICATIONS. Distribution of this code as
/* part of a commercial system is permissible ONLY BY DIRECT ARRANGEMENT
/* WITH THE AUTHOR. (If you are not directly supplying this code to a
/* customer, and you are instead telling them how they can obtain it for
/* free, then you are not required to make any arrangement with me.)
/*********************************************
```

- Pmw is a toolkit for building high-level compound widgets in Python using the Tkinter module. Parts of Pmw have been incorporated into the graphical mesh generator. The license for Pmw reads

"""

Pmw copyright

Copyright 1997-1999 Telstra Corporation Limited,
Australia Copyright 2000-2002 Really Good Software Pty Ltd, Australia

Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the "Software"), to deal in the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, sublicense, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, subject to the following conditions:

The above copyright notice and this permission notice shall be included in all copies or substantial portions of the Software.

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT. IN NO EVENT SHALL THE AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.

"""

Abstract

ANUGA is a hydrodynamic modelling tool that allows users to model realistic flow problems in complex 2D geometries. Examples include dam breaks or the effects of natural hazards such as riverine flooding, storm surges and tsunami.

The user must specify a study area represented by a mesh of triangular cells, the topography and bathymetry, frictional resistance, initial values for water level (called *stage* within **ANUGA**), boundary conditions and operators such as rainfall, stream flows, windstress or pressure gradients if applicable.

ANUGA tracks the evolution of water depth and horizontal momentum within each cell over time by solving the shallow water wave equation governing equation using a finite-volume method.

ANUGA also incorporates a mesh generator that allows the user to set up the geometry of the problem interactively as well as tools for interpolation and surface fitting, and a number of auxiliary tools for visualising and interrogating the model output.

Most **ANUGA** components are written in the object-oriented programming language Python and most users will interact with **ANUGA** by writing small Python programs based on the **ANUGA** library functions. Computationally intensive components are written for efficiency in C routines working directly with Python numpy structures.

CONTENTS

1	Introduction	1
1.1	Purpose	1
1.2	Scope	1
1.3	Audience	1
1.4	Background	2
1.5	Which flow algorithm	2
1.6	Restrictions and limitations on ANUGA	3
1.7	Citing ANUGA	4
1.8	Installation	4
2	Getting Started	5
2.1	A Simple Example	5
2.2	Outline of the Program	5
2.3	The Code	6
2.4	Establishing the Domain	6
2.5	Initial Conditions	7
2.5.1	Elevation	7
2.5.2	Friction	8
2.5.3	Stage	8
2.6	Boundary Conditions	8
2.7	Evolution	10
2.8	Output	10
2.9	How to Run the Code	10
2.10	Exploring the Model Output	11
3	A slightly more complex example	13
3.1	Overview	13
3.2	The Code	13
3.3	Establishing the Mesh	14
3.4	Model Output	15
3.5	Changing boundary conditions on the fly	15
3.6	Output	16
3.7	Flow through more complex topographies	17
4	An Example with Real Data	21
4.1	Overview	21
4.2	The Code	21
4.3	Establishing the Mesh	24
4.4	Initialising the Domain	28
4.5	Initial Conditions	29
4.5.1	Stage	29
4.5.2	Friction	29
4.5.3	Elevation	29

4.6	Boundary Conditions	29
4.7	Evolution	30
4.8	Exploring the Model Output	31
5	ANUGA Validation Tests	37
5.1	Overview	37
5.2	Analytical_exact	37
5.3	Behaviour_only	37
5.4	Case_studies	37
5.5	Experimental_data	39
5.6	Other_references	40
6	Mesh Generation	41
6.1	High Level Mesh Generation Functions	42
6.2	Advanced mesh generation	43
6.2.1	Key Methods of Class Mesh	43
7	The Domain	47
7.1	Key Methods of Domain	47
7.2	Evolution	50
7.3	Diagnostics	50
8	Initial Conditions	55
9	Boundary Conditions	59
9.1	Predefined boundary conditions	59
9.2	User-defined boundary conditions	61
10	Operators and Structures	63
10.1	Culvert operators	64
10.2	User developed operators	65
11	Querying SWW model output files	67
12	Parallel Simulation	69
12.1	The Code	69
12.2	Structure of the Code	73
13	Checkpointing	75
13.1	The Code	75
13.2	Structure of the Code	78
14	ANUGA Public Interface	79
14.1	Documentation	79
14.2	Public vs Private Interface	79
14.3	Other	80
15	ANUGA File Formats	81
15.1	Manually Created Files	81
15.2	Automatically Created Files	81
15.3	SWW, STS and TMS Formats	81
15.4	Mesh File Formats	83
15.5	Formats for Storing Arbitrary Points and Attributes	83
15.6	ArcView Formats	84
15.7	DEM Format	84
15.8	Basic File Conversions	84
16	ANUGA mathematical background	87
16.1	Introduction	87
16.2	Model	87

16.3	Finite Volume Method	87
16.4	Parallel Implementation	89
16.5	Flux limiting	91
16.6	Slope limiting	92
17	Basic ANUGA Assumptions	95
17.1	Time	95
17.2	Spatial data	95
17.2.1	Projection	95
17.2.2	Internal coordinates	95
17.2.3	Polygons	95
A	Supporting Tools	97
A.1	caching	97
A.2	anuga_viewer	98
A.2.1	Installing on Ubuntu	98
A.2.2	Installing on Windows	99
A.2.3	Commands	99
A.3	utilities/polygons	101
A.4	geospatial_data	104
A.5	Miscellaneous Functions	106
A.6	Graphical Mesh Generator GUI	107
A.7	class Alpha_Shape	108
A.8	Numerical Tools	109
B	Glossary	111
Index		113

Introduction

1.1 Purpose

The purpose of this user manual is to introduce the new user to the inundation software system, describe what it can do and give step-by-step instructions for setting up and running hydrodynamic simulations. The stable releases of **ANUGA** and this manual are available on github at http://github.com/GeoscienceAustralia/anuga_core/releases.

A snapshot of the current work in progress is at http://github.com/GeoscienceAustralia/anuga_core.

This manual describes **ANUGA** version 2.0. To check for later versions of this manual go to http://github.com/GeoscienceAustralia/anuga_core/doc/anuga_user_manual.pdf.

1.2 Scope

This manual covers only what is needed to operate the software after installation and configuration. It does not include instructions for installing the software or detailed API documentation, both of which will be covered in separate publications and by documentation in the source code.

The latest installation instructions may be found at: http://github.com/GeoscienceAustralia/anuga_core/INSTALL.rst.

1.3 Audience

Readers are assumed to be familiar with the Python Programming language and its object oriented approach. A good Python tutorial is <https://docs.python.org/2/tutorial>.

Readers also need to have a general understanding of scientific modelling, as well as enough programming experience to adapt the code to different requirements.

1.4 Background

Modelling the effects on the built environment of natural hazards such as riverine flooding, storm surges and tsunami is critical for understanding their economic and social impact on our urban communities. Geoscience Australia and the Australian National University are developing a hydrodynamic inundation modelling tool called **ANUGA** to help simulate the impact of these hazards.

The core of **ANUGA** is the fluid dynamics module, called `shallow_water`, which is based on a finite-volume method for solving the Shallow Water Wave Equation. The study area is represented by a mesh of triangular cells. By solving the governing equation within each cell, water depth and horizontal momentum are tracked over time.

A major capability of **ANUGA** is that it can model the process of wetting and drying as water enters and leaves an area. This means that it is suitable for simulating water flow onto a beach or dry land and around structures such as buildings. **ANUGA** is also capable of modelling hydraulic jumps due to the ability of the finite-volume method to accommodate discontinuities in the solution and the bed (using the latest algorithms (see section 1.5)

To set up a particular scenario the user specifies the geometry (bathymetry and topography), the initial water level (stage), boundary conditions such as tide, and any operators that may drive the system such as rainfall, abstraction of water, erosion, culverts See section 10 for details of operators available in **ANUGA**.

The built-in mesh generator, called `graphical_mesh_generator`, allows the user to set up the geometry of the problem interactively and to identify boundary segments and regions using symbolic tags. These tags may then be used to set the actual boundary conditions and attributes for different regions (e.g. the Manning friction coefficient) for each simulation.

Most **ANUGA** components are written in the object-oriented programming language Python. Software written in Python can be produced quickly and can be readily adapted to changing requirements throughout its lifetime. Computationally intensive components are written for efficiency in C routines working directly with Python numpy structures.

The visualisation tool developed for **ANUGA** is based on OpenSceneGraph, an Open Source Software (OSS) component allowing high level interaction with sophisticated graphics primitives. See [nielsen2005] for more background on **ANUGA**.

1.5 Which flow algorithm

Up to version 2.0 our default flow algorithm assumed a continuous bed. This allowed allowed for a robust algorithm, but did lead to complications associated with well balancing and the introduction of useful structures such as riverwalls.

From version 1.3 we have made available flow algorithms which can use discontinuous bed and have introduced riverwalls for those algorithms. In addition, for those algorithms, it has been much easier to deal with operations that change the bed (such as erosion).

To choose a particular flow algorithm use the following command in your **ANUGA** script:

```
domain.set_flow_algorithm('alg')
```

where `alg` is one of the following:

alg	Description	Comments
DE0	Uses first order timestepping and a fairly diffusive second order spatial approximation.	Very robust, more accurate than 1_5. This is our default algorithm since version 2.0. Useful for standard flow problems and tsunamis.
DE1	Uses second order timestepping and a much less diffusive second order spatial approximation.	More accurate than, but about 1/2 the speed of DE0. Useful for problems with forced waves or tidal flows over many tidal cycles.
DE2	Uses third order timestepping and the same spatial approximation as DE1	Slightly more accurate than DE1. About 1/3 the speed of DE0.
1_5	Uses first order timestepping and similar spatial approximation to DE0.	Very robust, slightly fast than DE0. The default algorithm before version 2.0.
2_0	Uses second order timestepping and similar spatial approximation to DE1.	More accurate than, but about 1/2 the speed of 1_5
2_5	uses third order timestepping and similar spatial approximation to DE1 .	Slightly more accurate than 2_0. About 1/3 the speed of 2_0.

From version 2.0 the default algorithm is DE0. Usually there is no need to change from the default algorithm.

1.6 Restrictions and limitations on **ANUGA**

Although a powerful and flexible tool for hydrodynamic modelling, **ANUGA** has a number of limitations that any potential user needs to be aware of. They are:

- The mathematical model is the 2D shallow water wave equation. As such it cannot resolve vertical convection and consequently not breaking waves or 3D turbulence (e.g. vorticity).
- All spatial coordinates are assumed to be UTM (meters). As such, **ANUGA** is unsuitable for modelling flows in areas larger than one UTM zone (6 degrees wide), though we have run over 2 zones by projecting onto one zone and living with the distortion.
- Fluid is assumed to be inviscid – i.e. no kinematic viscosity included.
- The finite volume is a very robust and flexible numerical technique, but it is not the fastest method around. If the geometry is sufficiently simple and if there is no need for wetting or drying, a finite-difference method may be able to solve the problem faster than **ANUGA**.
- Frictional resistance is implemented using Manning's formula.

1.7 Citing ANUGA

When citing **ANUGA** cite this manual:

Bibtex entry:

```
@manual{anugamanual,
    title={ANUGA User Manual},
    author={Roberts, S and Nielsen, O. and Gray, D. and Sexton, J. and Davies, G.},
    organization={Geoscience Australia},
    year={2015}
}
```

or this article

Bibtex entry:

```
@article{nielsen2005hydrodynamic,
    title={Hydrodynamic modelling of coastal inundation},
    author={Nielsen, O and Roberts, S and Gray, D and McPherson, A and Hitchman, A},
    journal={MODSIM 2005 International Congress on Modelling and Simulation},
    pages={518--523},
    year={2005}
}
```

1.8 Installation

We suggest visiting the page anuga.anu.edu.au or https://github.com/GeoscienceAustralia/anuga_core/blob/master/INSTALL.rst to find up to date instructions on installing **ANUGA** on Ubuntu and Windows.

Getting Started

This section is designed to assist the reader to get started with **ANUGA** by working through some examples. Two examples are discussed; the first is a simple example to illustrate many of the concepts, and the second is a more realistic example.

2.1 A Simple Example

What follows is a discussion of the structure and operation of a script called ‘runup.py’ (which is available in the ‘examples’ directory of ‘anuga_core’).

This example carries out the solution of the shallow-water wave equation in the simple case of a configuration comprising a flat bed, sloping at a fixed angle in one direction and having a constant depth across each line in the perpendicular direction.

The example demonstrates the basic ideas involved in setting up a complex scenario. In general the user specifies the geometry (bathymetry and topography), the initial water level, boundary conditions such as tide, and any forcing terms that may drive the system such as rainfall, abstraction of water, wind stress or atmospheric pressure gradients. Frictional resistance from the different terrains in the model is represented by predefined forcing terms. In this example, the boundary is reflective on three sides and a time dependent wave on one side.

The present example represents a simple scenario and does not include any forcing terms, nor is the data taken from a file as it would typically be.

The conserved quantities involved in the problem are stage (absolute height of water surface), x -momentum and y -momentum. Other quantities involved in the computation are the friction and elevation.

Water depth can be obtained through the equation:

$$\text{depth} = \text{stage} - \text{elevation}$$

2.2 Outline of the Program

In outline, ‘runup.py’ performs the following steps:

1. Sets up a triangular mesh.
2. Sets certain parameters governing the mode of operation of the model, specifying, for instance, where to store the model output.
3. Inputs various quantities describing physical measurements, such as the elevation, to be specified at each mesh point (vertex).
4. Sets up the boundary conditions.
5. Carries out the evolution of the model through a series of time steps and outputs the results, providing a results file that can be viewed.

2.3 The Code

For reference we include below the complete code listing for ‘runup.py’. Subsequent paragraphs provide a ‘commentary’ that describes each step of the program and explains its significance.

```
"""Simple water flow example using ANUGA

Water driven up a linear slope and time varying boundary,
similar to a beach environment
"""

#-----
# Import necessary modules
#-----
import anuga

from math import sin, pi, exp

#-----
# Setup computational domain
#-----
points, vertices, boundary = anuga.rectangular_cross(10, 10) # Basic mesh

domain = anuga.Domain(points, vertices, boundary)      # Create domain
domain.set_name('runup')                                # Output to file runup.swv
domain.set_datadir('.')                                 # Use current folder

#-----
# Setup initial conditions
#-----
def topography(x, y):
    return -x/2                                         # linear bed slope
    #return x*(-(2.0-x)*.5)                           # curved bed slope

domain.set_quantity('elevation', topography) # Use function for elevation
domain.set_quantity('friction', 0.1)        # Constant friction
domain.set_quantity('stage', -0.4)          # Constant negative initial stage

#-----
# Setup boundary conditions
#-----
Br = anuga.Reflective_boundary(domain)      # Solid reflective wall
Bt = anuga.Transmissive_boundary(domain)    # Continue all values on boundary
Bd = anuga.Dirichlet_boundary([-0.2, 0., 0.]) # Constant boundary values
Bw = anuga.Time_boundary(domain=domain,      # Time dependent boundary
                         function=lambda t: [(0.1*sin(t*2*pi)-0.3)*exp(-t), 0.0, 0.0])

# Associate boundary tags with boundary objects
domain.set_boundary({'left': Br, 'right': Bw, 'top': Br, 'bottom': Br})

#-----
# Evolve system through time
#-----
for t in domain.evolve(yieldstep=0.1, finaltime=10.0):
    print domain.timestepping_statistics()
```

2.4 Establishing the Domain

The very first thing to do is import the various modules, of which the **ANUGA** module is the most important.

```
import anuga
```

Then we need to set up the triangular mesh to be used for the scenario. This is carried out through the statement:

```
domain = anuga.rectangular_cross_domain(10, 5, len1=10.0, len2=5.0)
```

The above assignment sets up a 10×5 rectangular mesh, triangulated in a regular way with boundary tags '`left`', '`right`', '`top`' or '`bottom`'.

It is also possible to set up a domain from "first principles" using `points`, `vertices` and `boundary` via the assignment:

```
domain = anuga.Domain(points, vertices, boundary)
```

where

- a list `points` giving the coordinates of each mesh point,
- a list `vertices` specifying the three vertices of each triangle, and
- a dictionary `boundary` that stores the edges on the boundary and associates with each a symbolic tag. The edges are represented as pairs (i, j) where i refers to the triangle id and j to the edge id of that triangle. Edge ids are enumerated from 0 to 2 based on the id of the vertex opposite.

(For more details on symbolic tags, see page 9.)

An example of a general unstructured mesh and the associated data structures `points`, `vertices` and `boundary` is given in Section 6.

This creates an instance of the `Domain` class, which represents the domain of the simulation. Specific options are set at this point, including the basename for the output file and the directory to be used for data:

```
domain.set_name('runup')
domain.set_datadir('..')
```

In addition, the following statement could be used to state that quantities `stage`, `xmomentum` and `ymomentum` are to be stored at every timestep and `elevation` only once at the beginning of the simulation:

```
domain.set_quantities_to_be_stored({
'stage': 2, 'xmomentum': 2, 'ymomentum': 2, 'elevation': 1})
```

However, this is not necessary, as the above is the default behaviour.

2.5 Initial Conditions

The next task is to specify a number of quantities that we wish to set for each mesh point. The class `Domain` has a method `set_quantity`, used to specify these quantities. It is a flexible method that allows the user to set quantities in a variety of ways – using constants, functions, numeric arrays, expressions involving other quantities, or arbitrary data points with associated values, all of which can be passed as arguments. All quantities can be initialised using `set_quantity`. For a conserved quantity (such as `stage`, `xmomentum`, `ymomentum`) this is called an *initial condition*. However, other quantities that aren't updated by the equation are also assigned values using the same interface. The code in the present example demonstrates a number of forms in which we can invoke `set_quantity`.

2.5.1 Elevation

The elevation, or height of the bed, is set using a function defined through the statements below, which is specific to this example and specifies a particularly simple initial configuration for demonstration purposes:

```
def topography(x, y):
    return -x/2
```

This simply associates an elevation with each point (x, y) of the plane. It specifies that the bed slopes linearly in the x direction, with slope $-\frac{1}{2}$, and is constant in the y direction.

Once the function `topography` is specified, the quantity `elevation` is assigned through the simple statement:

```
domain.set_quantity('elevation', topography)
```

NOTE: If using function to set `elevation` it must be vector compatible. For example, using square root will not work.

2.5.2 Friction

The assignment of the friction quantity (a forcing term) demonstrates another way we can use `set_quantity` to set quantities – namely, assign them to a constant numerical value:

```
domain.set_quantity('friction', 0.1)
```

This specifies that the Manning friction coefficient is set to 0.1 at every mesh point.

2.5.3 Stage

The stage (the height of the water surface) is related to the elevation and the depth at any time by the equation:

```
stage = elevation + depth
```

For this example, we simply assign a constant value to `stage`, using the statement:

```
domain.set_quantity('stage', -0.4)
```

which specifies that the surface level is set to a height of -0.4 , i.e. 0.4 units (metres) below the zero level.

Although it is not necessary for this example, it may be useful to digress here and mention a variant to this requirement, which allows us to illustrate another way to use `set_quantity` – namely, incorporating an expression involving other quantities. Suppose, instead of setting a constant value for the stage, we wished to specify a constant value for the *depth*. For such a case we need to specify that `stage` is everywhere obtained by adding that value to the value already specified for `elevation`. We would do this by means of the statements:

```
h = 0.05      # Constant depth
domain.set_quantity('stage', expression='elevation + %f' % h)
```

That is, the value of `stage` is set to $h = 0.05$ plus the value of `elevation` already defined.

The reader will probably appreciate that this capability to incorporate expressions into statements using `set_quantity` greatly expands its power. See Section 8 for more details.

2.6 Boundary Conditions

The boundary conditions are specified as follows:

```

Br = anuga.Reflective_boundary(domain)
Bt = anuga.Transmissive_boundary(domain)
Bd = anuga.Dirichlet_boundary([0.2, 0.0, 0.0])
Bw = anuga.Time_boundary(domain,
                           f=lambda t: [(0.1*sin(t*2*pi)-0.3)*exp(-t), 0.0, 0.0])

```

The effect of these statements is to set up a selection of different alternative boundary conditions and store them in variables that can be assigned as needed. Each boundary condition specifies the behaviour at a boundary in terms of the behaviour in neighbouring elements. The boundary conditions introduced here may be briefly described as follows:

- **Reflective boundary** Returns same stage as in its neighbour volume but momentum vector reversed 180 degrees (reflected). Specific to the shallow water equation as it works with the momentum quantities assumed to be the second and third conserved quantities. A reflective boundary condition models a solid wall.
- **Transmissive boundary** Returns same conserved quantities as those present in its neighbour volume. This is one way of modelling outflow from a domain, but it should be used with caution if flow is not steady state as replication of momentum at the boundary may cause numerical instabilities propagating into the domain and eventually causing **ANUGA** to crash. If this occurs, consider using e.g. a Dirichlet boundary condition with a stage value less than the elevation at the boundary.
- **Dirichlet boundary** Specifies constant values for stage, *x*-momentum and *y*-momentum at the boundary.
- **Time boundary** Like a Dirichlet boundary but with behaviour varying with time.

Before describing how these boundary conditions are assigned, we recall that a mesh is specified using three variables `points`, `vertices` and `boundary`. In the code we are discussing, these three variables are returned by the function `rectangular`. The example given in Section 4 illustrates another way of assigning the values, by means of the function `create_mesh_from_regions`.

These variables store the data determining the mesh as follows. (You may find that the example given in Section 6 helps to clarify the following discussion, even though that example is a *non-rectangular* mesh.)

- The variable `points` stores a list of 2-tuples giving the coordinates of the mesh points.
- The variable `vertices` stores a list of 3-tuples of numbers, representing vertices of triangles in the mesh. In this list, the triangle whose vertices are `points[i]`, `points[j]`, `points[k]` is represented by the 3-tuple `(i, j, k)`.
- The variable `boundary` is a Python dictionary that not only stores the edges that make up the boundary but also assigns symbolic tags to these edges to distinguish different parts of the boundary. An edge with endpoints `points[i]` and `points[j]` is represented by the 2-tuple `(i, j)`. The keys for the dictionary are the 2-tuples `(i, j)` corresponding to boundary edges in the mesh, and the values are the tags are used to label them. In the present example, the value `boundary[(i, j)]` assigned to `(i, j)` is one of the four tags '`'left'`', '`'right'`', '`'top'`' or '`'bottom'`', depending on whether the boundary edge represented by `(i, j)` occurs at the left, right, top or bottom of the rectangle bounding the mesh. The function `rectangular` automatically assigns these tags to the boundary edges when it generates the mesh.

The tags provide the means to assign different boundary conditions to an edge depending on which part of the boundary it belongs to. (In Section 4 we describe an example that uses different boundary tags – in general, the possible tags are entirely selectable by the user when generating the mesh and not limited to '`'left'`', '`'right'`', '`'top'`' and '`'bottom'`' as in this example.) All segments in bounding polygon must be tagged. If a tag is not supplied, the default tag name '`'exterior'`' will be assigned by **ANUGA**.

Using the boundary objects described above, we assign a boundary condition to each part of the boundary by means of a statement like:

```
domain.set_boundary({'left': Br, 'right': Bw, 'top': Br, 'bottom': Br})
```

It is critical that all tags are associated with a boundary condition in this statement. If not the program will halt with a statement like:

```
Traceback (most recent call last):
  File "mesh_test.py", line 114, in ?
    domain.set_boundary({'west': Bi, 'east': Bo, 'north': Br, 'south': Br})
  File "X:\inundation\sandpits\onielson\anuga_core\source\anuga\
    abstract_2d_finite_volumes\domain.py", line 505, in set_boundary
      raise msg
ERROR (domain.py): Tag "exterior" has not been bound to a boundary object.
All boundary tags defined in domain must appear in the supplied dictionary.
The tags are: ['ocean', 'east', 'north', 'exterior', 'south']
```

The command `set_boundary` stipulates that, in the current example, the right boundary varies with time, as defined by the `lambda` function, while the other boundaries are all reflective.

The reader may wish to experiment by varying the choice of boundary types for one or more of the boundaries. (In the case of `Bd` and `Bw`, the three arguments in each case represent the `stage`, *x*-momentum and *y*-momentum, respectively.)

```
Bw = anuga.Time_boundary(domain=domain,
f=lambda t: [(0.1*sin(t*2*pi)-0.3), 0.0, 0.0])
```

2.7 Evolution

The final statement:

```
for t in domain.evolve(yieldstep=0.1, duration=10.0):
    print domain.timestepping_statistics()
```

causes the configuration of the domain to 'evolve', over a series of steps indicated by the values of `yieldstep` and `duration`, which can be altered as required. The value of `yieldstep` controls the time interval between successive model outputs. Behind the scenes more time steps are generally taken.

2.8 Output

The output is a NetCDF file with the extension `.swv`. It contains stage and momentum information and can be used with the **ANUGA** viewer `anuga_viewer` to generate a visual display (see Section A.2). See Section 15 (page 81) for more on NetCDF and other file formats.

The following is a listing of the screen output seen by the user when this example is run:

2.9 How to Run the Code

The code can be run in various ways:

- from a Windows or Unix command line as in `python runup.py`
- within the Python IDLE environment
- within emacs
- within Windows, by double-clicking the `runup.py` file.

2.10 Exploring the Model Output

The following figures are screenshots from the **ANUGA** visualisation tool `anuga_viewer`. Figure 2.1 shows the domain with water surface as specified by the initial condition, $t = 0$. Figure 2.2 shows later snapshots for $t = 2.3$ and $t = 4$ where the system has been evolved and the wave is encroaching on the previously dry bed.

`anuga_viewer` is described in more detail in Section A.2.



Figure 2.1: Runup example viewed with the **ANUGA** viewer

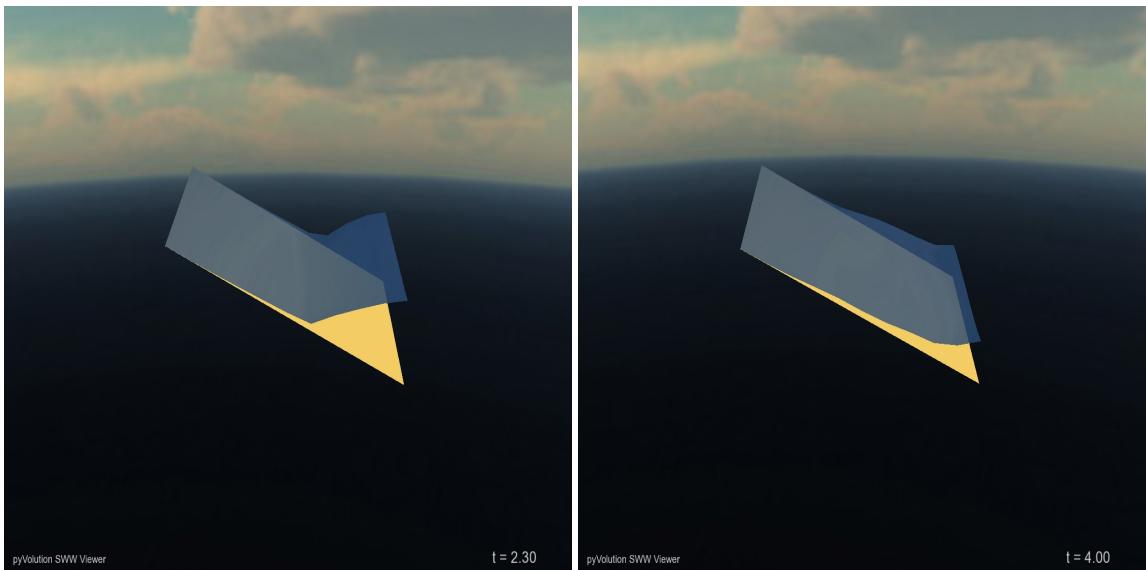


Figure 2.2: Runup example viewed with ANGUA viewer

A slightly more complex example

The next example is about water-flow in a channel with varying boundary conditions and more complex topographies. These examples build on the concepts introduced through the ‘runup.py’ in Section 2.1. The example will be built up through three progressively more complex scripts.

3.1 Overview

As in the case of ‘runup.py’, the actions carried out by the program can be organised according to this outline:

1. Set up a triangular mesh.
2. Set certain parameters governing the mode of operation of the model – specifying, for instance, where to store the model output.
3. Set up initial conditions for various quantities such as the elevation, to be specified at each mesh point (vertex).
4. Set up the boundary conditions.
5. Carry out the evolution of the model through a series of time steps and output the results, providing a results file that can be viewed.

3.2 The Code

Here is the code for the first version of the channel flow ‘channel1.py’:

```
"""Simple water flow example using ANUGA

Water flowing down a channel
"""

#-----
# Import necessary modules
#-----
import anuga

#-----
# Setup computational domain
#-----
# Create a domain with named boundaries "left", "right", "top" and "bottom"
domain = anuga.rectangular_cross_domain(10, 5, len1=10.0, len2=5.0)

domain.set_name('channel1')                                # Output name
```

```

#-----
# Setup initial conditions
#-----
def topography(x, y):
    return -x/10                                # linear bed slope

domain.set_quantity('elevation', topography) # Use function for elevation
domain.set_quantity('friction', 0.01)        # Constant friction
domain.set_quantity('stage',
                    expression='elevation')      # Dry bed

#-----
# Setup boundary conditions
#-----
Bi = anuga.Dirichlet_boundary([0.4, 0, 0])      # Inflow
Br = anuga.Reflective_boundary(domain)           # Solid reflective wall

domain.set_boundary({'left': Bi, 'right': Br, 'top': Br, 'bottom': Br})

#-----
# Evolve system through time
#-----
for t in domain.evolve(yieldstep=0.2, finaltime=40.0):
    domain.print_timestepping_statistics()

```

In discussing the details of this example, we follow the outline given above, discussing each major step of the code in turn.

3.3 Establishing the Mesh

In this example we use a similar simple structured triangular mesh as in ‘runup.py’ for simplicity, but this time we will use a symmetric one and also change the physical extent of the domain. The assignment:

```
points, vertices, boundary = anuga.rectangular_cross(m, n,
                                                    len1=length, len2=width)
```

returns an $m \times n$ mesh similar to the one used in the previous example, except that now the extent in the x and y directions are given by the value of `length` and `width` respectively.

Defining `m` and `n` in terms of the extent as in this example provides a convenient way of controlling the resolution: By defining `dx` and `dy` to be the desired size of each hypotenuse in the mesh we can write the mesh generation as follows:

```

length = 10.0
width = 5.0
dx = dy = 1          # Resolution: Length of subdivisions on both axes

points, vertices, boundary = anuga.rectangular_cross(int(length/dx),
                                                       int(width/dy), len1=length, len2=width)

```

which yields a mesh of `length=10m`, `width=5m` with 1m spacings. To increase the resolution, as we will later in this example, one merely decreases the values of `dx` and `dy`.

The rest of this script is similar to the previous example on page 6.

3.4 Model Output

The following figure is a screenshot from the **ANUGA** visualisation tool `anuga_viewer` of output from this example.



Figure 3.1: Simple channel example viewed with the **ANUGA** viewer.

3.5 Changing boundary conditions on the fly

Here is the code for the second version of the channel flow ‘channel2.py’:

```
"""Simple water flow example using ANUGA

Water flowing down a channel with changing boundary conditions
"""

#-----
# Import necessary modules
#-----
import anuga

#-----
# Setup computational domain
#-----
length = 10.
width = 5.
dx = dy = 1.           # Resolution: Length of subdivisions on both axes

domain = anuga.rectangular_cross_domain(int(length/dx), int(width/dy),
                                         len1=length, len2=width)

domain.set_name('channel2')          # Output name

#-----
# Setup initial conditions
#-----
def topography(x,y):
    return -x/10                  # linear bed slope
```

```

domain.set_quantity('elevation', topography) # Use function for elevation
domain.set_quantity('friction', 0.01)          # Constant friction
domain.set_quantity('stage',
                    expression='elevation') # Dry initial condition

#-----
# Setup boundary conditions
#-----
Bi = anuga.Dirichlet_boundary([0.4, 0, 0])    # Inflow
Br = anuga.Reflective_boundary(domain)         # Solid reflective wall
Bo = anuga.Dirichlet_boundary([-5, 0, 0])      # Outflow

domain.set_boundary({'left': Bi, 'right': Br, 'top': Br, 'bottom': Br})

#-----
# Evolve system through time
#-----
for t in domain.evolve(yieldstep=0.2, finaltime=40.0):
    print domain.timestepping_statistics()

    if domain.get_quantity('stage').\
        get_values(interpolation_points=[[10, 2.5]]) > 0:
        print 'Stage > 0: Changing to outflow boundary'
        domain.set_boundary({'right': Bo})

```

This example differs from the first version in that a constant outflow boundary condition has been defined:

```
Bo = anuga.Dirichlet_boundary([-5, 0, 0])      # Outflow
```

and that it is applied to the right hand side boundary when the water level there exceeds 0m.

```

for t in domain.evolve(yieldstep=0.2, finaltime=40.0):
    domain.write_time()

    if domain.get_quantity('stage').get_values(interpolation_points=[[10, 2.5]]) > 0:
        print 'Stage > 0: Changing to outflow boundary'
        domain.set_boundary({'right': Bo})

```

The `if` statement in the timestepping loop (`evolve`) gets the quantity `stage` and obtains the interpolated value at the point (10m, 2.5m) which is on the right boundary. If the stage exceeds 0m a message is printed and the old boundary condition at tag 'right' is replaced by the outflow boundary using the method:

```
domain.set_boundary({'right': Bo})
```

This type of dynamically varying boundary could for example be used to model the breakdown of a sluice door when water exceeds a certain level.

3.6 Output

The text output from this example looks like this:

```

...
Time = 15.4000, delta t in [0.03789902, 0.03789916], steps=6 (6)
Time = 15.6000, delta t in [0.03789896, 0.03789908], steps=6 (6)
Time = 15.8000, delta t in [0.03789891, 0.03789903], steps=6 (6)
Stage > 0: Changing to outflow boundary
Time = 16.0000, delta t in [0.02709050, 0.03789898], steps=6 (6)
Time = 16.2000, delta t in [0.03789892, 0.03789904], steps=6 (6)
...

```

3.7 Flow through more complex topographies

Here is the code for the third version of the channel flow ‘channel3.py’:

```

"""Simple water flow example using ANUGA

Water flowing down a channel with more complex topography
"""

#-----
# Import necessary modules
#-----
import anuga

#-----
# Setup computational domain
#-----
length = 40.
width = 5.
dx = dy = .1           # Resolution: Length of subdivisions on both axes

domain = anuga.rectangular_cross_domain(int(length/dx), int(width/dy),
                                         len1=length, len2=width)

domain.set_name('channel3')                                # Output name

print domain.statistics()

#-----
# Setup initial conditions
#-----
def topography(x,y):
    """Complex topography defined by a function of vectors x and y."""

    z = -x/10

    N = len(x)
    for i in range(N):
        # Step
        if 10 < x[i] < 12:
            z[i] += 0.4 - 0.05*y[i]

        # Constriction
        if 27 < x[i] < 29 and y[i] > 3:
            z[i] += 2

        # Pole
        if (x[i] - 34)**2 + (y[i] - 2)**2 < 0.4**2:
            z[i] += 2

    return z

```

```

domain.set_quantity('elevation', topography)           # elevation is a function
domain.set_quantity('friction', 0.01)                 # Constant friction
domain.set_quantity('stage', expression='elevation')   # Dry initial condition

#-----
# Setup boundary conditions
#-----
Bi = anuga.Dirichlet_boundary([0.4, 0, 0])          # Inflow
Br = anuga.Reflective_boundary(domain)               # Solid reflective wall
Bo = anuga.Dirichlet_boundary([-5, 0, 0])            # Outflow

domain.set_boundary({'left': Bi, 'right': Bo, 'top': Br, 'bottom': Br})

#-----
# Evolve system through time
#-----
for t in domain.evolve(yieldstep=0.1, finaltime=16.0):
    print domain.timestepping_statistics()

    if domain.get_quantity('stage').\
        get_values(interpolation_points=[[10, 2.5]]) > 0:
        print 'Stage > 0: Changing to outflow boundary'
        domain.set_boundary({'right': Bo})

```

This example differs from the first two versions in that the topography contains obstacles.

This is accomplished here by defining the function `topography` as follows:

```

def topography(x, y):
    """Complex topography defined by a function of vectors x and y."""

    z = -x/10

    N = len(x)
    for i in range(N):
        # Step
        if 10 < x[i] < 12:
            z[i] += 0.4 - 0.05*y[i]

        # Constriction
        if 27 < x[i] < 29 and y[i] > 3:
            z[i] += 2

        # Pole
        if (x[i] - 34)**2 + (y[i] - 2)**2 < 0.4**2:
            z[i] += 2

    return z

```

In addition, changing the resolution to `dx = dy = 0.1` creates a finer mesh resolving the new features better.

A screenshot of this model at time 15s is:

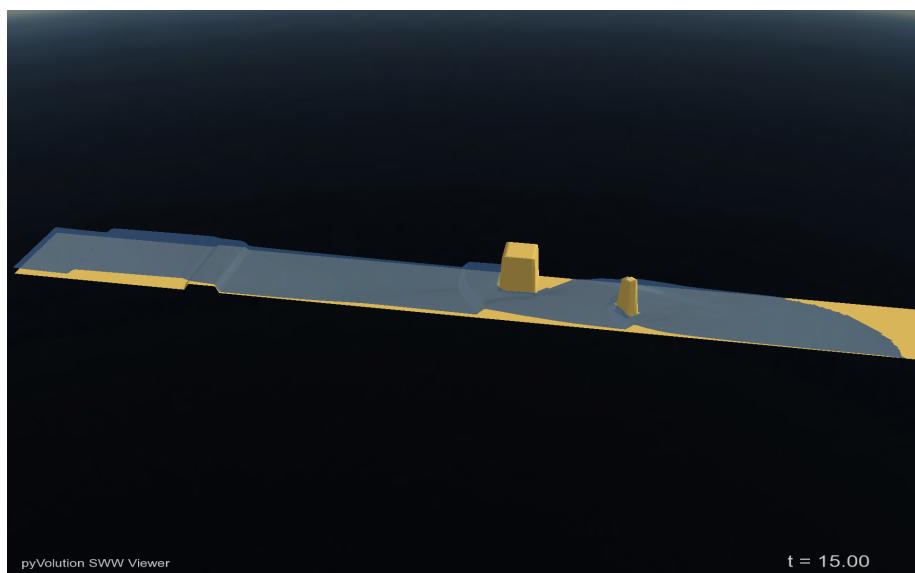


Figure 3.2: More complex flow in a channel

An Example with Real Data

The following discussion builds on the concepts introduced through the ‘runup.py’ example and introduces a second example, ‘runcairns.py’. This refers to a **hypothetical** scenario using real-life data, in which the domain of interest surrounds the Cairns region. Two scenarios are given; firstly, a hypothetical tsunami wave is generated by a submarine mass failure situated on the edge of the continental shelf, and secondly, a fixed wave of given amplitude and period is introduced through the boundary.

Each scenario has been designed to generate a tsunami which will inundate the Cairns region. To achieve this, suitably large parameters were chosen and were not based on any known tsunami sources or realistic amplitudes.

4.1 Overview

As in the case of ‘runup.py’, the actions carried out by the program can be organised according to this outline:

1. Set up a triangular mesh.
2. Set certain parameters governing the mode of operation of the model – specifying, for instance, where to store the model output.
3. Input various quantities describing physical measurements, such as the elevation, to be specified at each mesh point (vertex).
4. Set up the boundary conditions.
5. Carry out the evolution of the model through a series of time steps and output the results, providing a results file that can be visualised.

4.2 The Code

Here is the code for ‘runcairns.py’:

```
"""Script for running a tsunami inundation scenario for Cairns, QLD Australia.
```

```
Source data such as elevation and boundary data is assumed to be available in
directories specified by project.py
The output sww file is stored in directory named after the scenario, i.e
slide or fixed_wave.
```

```
The scenario is defined by a triangular mesh created from project.polygon,
the elevation data and a tsunami wave generated by a submarine mass failure.
```

```
Geoscience Australia, 2004-present
```

```
"""
```

```

#-----
# Import necessary modules
#-----
# Standard modules
import os
import time
import sys

# Related major packages
import anuga

# Application specific imports
import project           # Definition of file names and polygons

time00 = time.time()
#-----
# Preparation of topographic data
# Convert ASC 2 DEM 2 PTS using source data and store result in source data
#-----
# Unzip asc from zip file
import zipfile as zf
if project.verbose: print 'Reading ASC from cairns.zip'
zf.ZipFile(project.name_stem+'.zip').extract(project.name_stem+'.asc')

# Create DEM from asc data
anuga.asc2dem(project.name_stem+'.asc', use_cache=project.cache,
              verbose=project.verbose)

# Create pts file for onshore DEM
anuga.dem2pts(project.name_stem+'.dem', use_cache=project.cache,
               verbose=project.verbose)

#-----
# Create the triangular mesh and domain based on
# overall clipping polygon with a tagged
# boundary and interior regions as defined in project.py
#-----
domain = anuga.create_domain_from_regions(project.bounding_polygon,
                                            boundary_tags={'top': [0],
                                                           'ocean_east': [1],
                                                           'bottom': [2],
                                                           'onshore': [3]},
                                            maximum_triangle_area=project.default_res,
                                            mesh_filename=project.meshname,
                                            interior_regions=project.interior_regions,
                                            use_cache=project.cache,
                                            verbose=project.verbose)

# Print some stats about mesh and domain
print 'Number of triangles = ', len(domain)
print 'The extent is ', domain.get_extent()
print domain.statistics()

#-----
# Setup parameters of computational domain
#-----
domain.set_name('cairns_' + project.scenario) # Name of sww file
domain.set_datadir('..')                      # Store sww output here
domain.set_minimum_storable_height(0.01)        # Store only depth > 1cm
domain.set_flow_algorithm('DE0')

```

```

#-----
# Setup initial conditions
#-----
tide = project.tide
domain.set_quantity('stage', tide)
domain.set_quantity('friction', 0.0)

domain.set_quantity('elevation',
                    filename=project.name_stem + '.pts',
                    use_cache=project.cache,
                    verbose=project.verbose,
                    alpha=0.1)

time01 = time.time()
print 'That took %.2f seconds to fit data' %(time01-time00)

if project.just_fitting:
    import sys
    sys.exit()

#-----
# Setup information for slide scenario (to be applied 1 min into simulation
#-----
if project.scenario == 'slide':
    # Function for submarine slide
    tsunami_source = anuga.slide_tsunami(length=35000.0,
                                            depth=project.slide_depth,
                                            slope=6.0,
                                            thickness=500.0,
                                            x0=project.slide_origin[0],
                                            y0=project.slide_origin[1],
                                            alpha=0.0,
                                            domain=domain,
                                            verbose=project.verbose)

#-----
# Setup boundary conditions
#-----
print 'Available boundary tags', domain.get_boundary_tags()

Bd = anuga.Dirichlet_boundary([tide, 0, 0]) # Mean water level
Bs = anuga.Transmissive_stage_zero_momentum_boundary(domain) # Neutral boundary

if project.scenario == 'fixed_wave':
    # Huge 50m wave starting after 60 seconds and lasting 1 hour.
    Bw = anuga.Transmissive_n_momentum_zero_t_momentum_set_stage_boundary(
        domain=domain,
        function=lambda t: [(60<t<3660)*10, 0, 0])

    domain.set_boundary({'ocean_east': Bw,
                        'bottom': Bs,
                        'onshore': Bd,
                        'top': Bs})

if project.scenario == 'slide':
    # Boundary conditions for slide scenario
    domain.set_boundary({'ocean_east': Bd,
                        'bottom': Bd,
                        'onshore': Bd,
                        'top': Bd})

```

```

#-----
# Evolve system through time
#-----
import time
t0 = time.time()

from numpy import allclose

if project.scenario == 'slide':
    # Initial run without any event
    for t in domain.evolve(yieldstep=10, finaltime=60):
        print domain.timestepping_statistics()
        print domain.boundary_statistics(tags='ocean_east')

    # Add slide to water surface
    if allclose(t, 60):
        domain.add_quantity('stage', tsunami_source)

    # Continue propagating wave
    for t in domain.evolve(yieldstep=10, finaltime=5000,
                           skip_initial_step=True):
        print domain.timestepping_statistics()
        print domain.boundary_statistics(tags='ocean_east')

if project.scenario == 'fixed_wave':
    # Save every two mins leading up to wave approaching land
    for t in domain.evolve(yieldstep=2*60, finaltime=5000):
        print domain.timestepping_statistics()
        print domain.boundary_statistics(tags='ocean_east')

    # Save every 30 secs as wave starts inundating ashore
    for t in domain.evolve(yieldstep=60*0.5, finaltime=10000,
                           skip_initial_step=True):
        print domain.timestepping_statistics()
        print domain.boundary_statistics(tags='ocean_east')

print 'That took %.2f seconds' %(time.time()-t0)

```

In discussing the details of this example, we follow the outline given above, discussing each major step of the code in turn.

4.3 Establishing the Mesh

One obvious way that the present example differs from ‘runup.py’ is in the use of a more complex method to create the mesh. Instead of imposing a mesh structure on a rectangular grid, the technique used for this example involves building mesh structures inside polygons specified by the user, using a mesh-generator.

The mesh-generator creates the mesh within a single polygon whose vertices are at geographical locations specified by the user. The user specifies the *resolution* – that is, the maximal area of a triangle used for triangulation – and a triangular mesh is created inside the polygon using a mesh generation engine. On any given platform, the same mesh will be returned each time the script is run.

Boundary tags are not restricted to ‘left’, ‘bottom’, ‘right’ and ‘top’, as in the case of ‘runup.py’. Instead the user specifies a list of tags appropriate to the configuration being modelled.

In addition, the mesh-generator provides a way to adapt to geographic or other features in the landscape, whose presence may require an increase in resolution. This is done by allowing the user to specify a number of *interior polygons*, each with a specified resolution. It is also possible to specify one or more ‘holes’ – that is, areas bounded by polygons in which no triangulation is required.

In its general form, the mesh-generator takes for its input a bounding polygon and (optionally) a list of interior polygons. The user specifies resolutions, both for the bounding polygon and for each of the interior polygons. Given this data, the mesh-generator first creates a triangular mesh with varying resolution.

The function used to implement this process is `create_domain_from_regions` which creates a `Domain` object as well as a mesh file. Its arguments include the bounding polygon and its resolution, a list of boundary tags, and a list of pairs `[polygon, resolution]` specifying the interior polygons and their resolutions.

The resulting mesh is output to a *mesh file*. This term is used to describe a file of a specific format used to store the data specifying a mesh. (There are in fact two possible formats for such a file: it can either be a binary file, with extension `.msh`, or an ASCII file, with extension `.tsh`. In the present case, the binary file format `.msh` is used. See Section 15 (page 81) for more on file formats.

In practice, the details of the polygons used are read from a separate file ‘`project.py`’. Here is a complete listing of ‘`project.py`’:

```
""" Common filenames and locations for topographic data, meshes and outputs.
This file defines the parameters of the scenario you wish to run.

"""

import anuga

#-----
# Runtime parameters
#-----
cache = False
verbose = True

#-----
# Define scenario as either slide or fixed_wave. Choose one.
#-----
scenario = 'fixed_wave' # Wave applied at the boundary
#scenario = 'slide'      # Slide wave form applied inside the domain

#-----
# Filenames
#-----
name_stem = 'cairns'
meshname = name_stem + '.msh'

# Filename for locations where timeseries are to be produced
gauge_filename = 'gauges.csv'

#-----
# Domain definitions
#-----
# bounding polygon for study area
bounding_polygon = anuga.read_polygon('extent.csv')

A = anuga.polygon_area(bounding_polygon) / 1000000.0
print 'Area of bounding polygon = %.2f km^2' % A

#-----
# Interior region definitions
#-----
# Read interior polygons
poly_cairns = anuga.read_polygon('cairns.csv')
poly_island0 = anuga.read_polygon('islands.csv')
poly_island1 = anuga.read_polygon('islands1.csv')
poly_island2 = anuga.read_polygon('islands2.csv')
poly_island3 = anuga.read_polygon('islands3.csv')
poly_shallow = anuga.read_polygon('shallow.csv')
```

```

# Optionally plot points making up these polygons
#plot_polygons([bounding_polygon, poly_cairns, poly_island0, poly_island1,
#               poly_island2, poly_island3, poly_shallow],
#               style='boundingpoly', verbose=False)

# Define resolutions (max area per triangle) for each polygon
# Make these numbers larger to reduce the number of triangles in the model,
# and hence speed up the simulation

# bigger base_scale == less triangles
just_fitting = False
#base_scale = 25000 # 635763 # 112sec fit
#base_scale = 50000 # 321403 # 69sec fit
base_scale = 100000 # 162170 triangles # 45sec fit
#base_scale = 400000 # 42093
default_res = 100 * base_scale    # Background resolution
islands_res = base_scale
cairns_res = base_scale
shallow_res = 5 * base_scale

# Define list of interior regions with associated resolutions
interior_regions = [[poly_cairns, cairns_res],
                     [poly_island0, islands_res],
                     [poly_island1, islands_res],
                     [poly_island2, islands_res],
                     [poly_island3, islands_res],
                     [poly_shallow, shallow_res]]


#-----
# Data for exporting ascii grid
#-----
eastingmin = 363000
#eastingmax = 418000
eastingmax = 418000
northingmin = 8026600
northingmax = 8145700

#-----
# Data for landslide
#-----
slide_origin = [451871, 8128376]    # Assume to be on continental shelf
slide_depth = 500.

#-----
# Data for Tides
#-----
tide = 0.0

```

Figure 4.1 illustrates the landscape of the region for the Cairns example. Understanding the landscape is important in determining the location and resolution of interior polygons. The supporting data is found in the ASCII grid, `cairns.asc`, which has been sourced from the publically available Australian Bathymetry and Topography Grid 2005, [grid250]. The required resolution for inundation modelling will depend on the underlying topography and bathymetry; as the terrain becomes more complex, the desired resolution would decrease to the order of tens of metres.

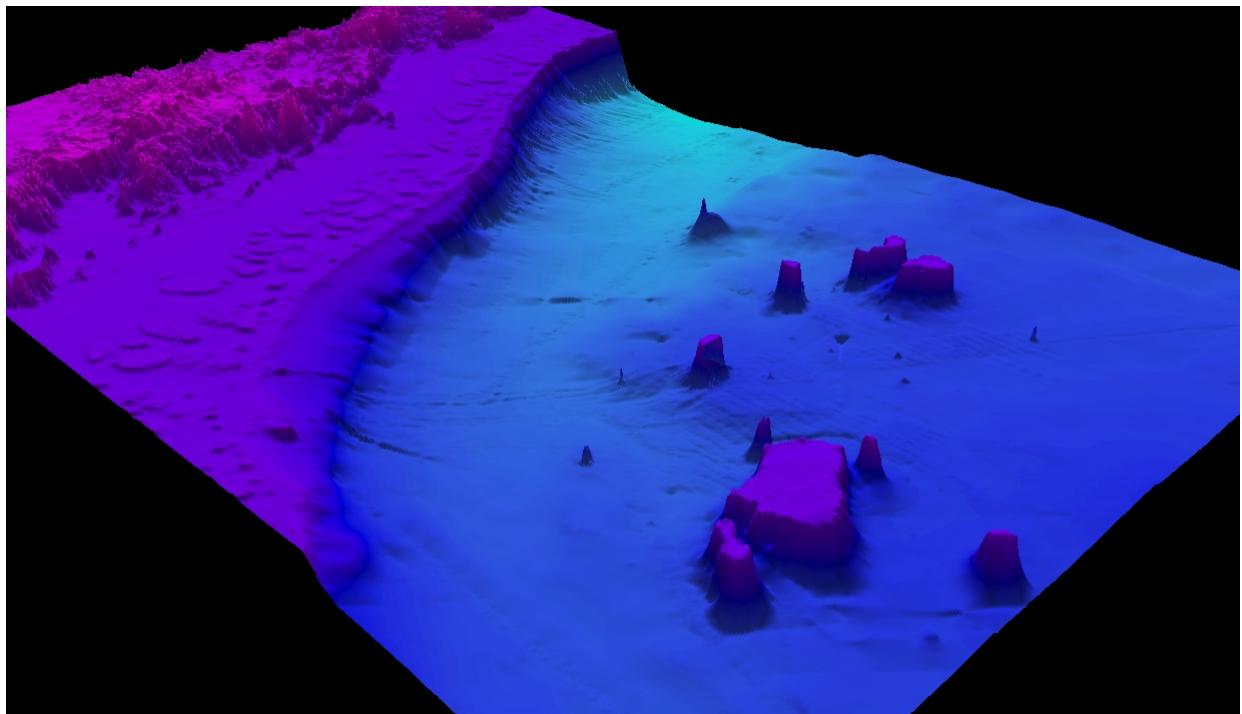


Figure 4.1: Landscape of the Cairns scenario.

The following statements are used to read in the specific polygons from `project.cairns` and assign a defined resolution to each polygon.

```
islands_res = 100000
cairns_res = 100000
shallow_res = 500000
interior_regions = [[project.poly_cairns, cairns_res],
                     [project.poly_island0, islands_res],
                     [project.poly_island1, islands_res],
                     [project.poly_island2, islands_res],
                     [project.poly_island3, islands_res],
                     [project.poly_shallow, shallow_res]]
```

Figure 4.2 illustrates the polygons used for the Cairns scenario.

ANUGA demo Cairns Tsunami Scenario

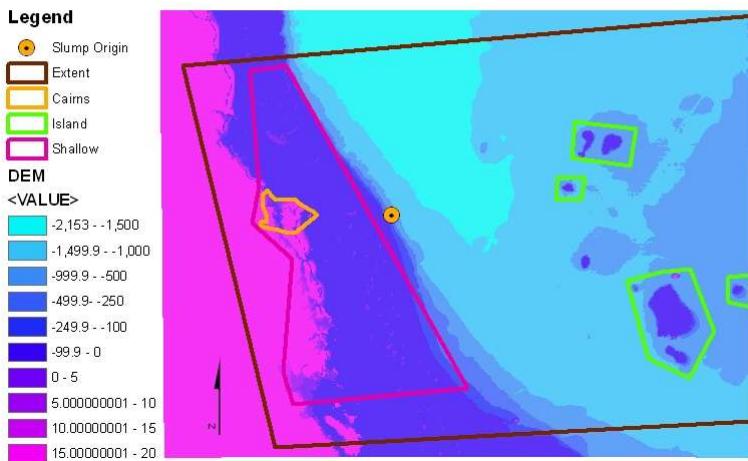


Figure 4.2: Interior and bounding polygons for the Cairns example.

The statement:

```
remainder_res = 10000000
domain = anuga.create_domain_from_regions(project.bounding_polygon,
                                             boundary_tags={'top': [0],
                                                             'ocean_east': [1],
                                                             'bottom': [2],
                                                             'onshore': [3]},
                                             maximum_triangle_area=project.default_res,
                                             mesh_filename=project.meshname,
                                             interior_regions=project.interior_regions,
                                             use_cache=True,
                                             verbose=True)
```

is then used to create the mesh, taking the bounding polygon to be the polygon `bounding_polygon` specified in ‘`project.py`’. The argument `boundary_tags` assigns a dictionary, whose keys are the names of the boundary tags used for the bounding polygon – ‘`top`’, ‘`ocean_east`’, ‘`bottom`’, and ‘`onshore`’ – and whose values identify the indices of the segments associated with each of these tags. The polygon may be arranged either clock-wise or counter clock-wise and the indices refer to edges in the order they appear: Edge 0 connects vertex 0 and vertex 1, edge 1 connects vertex 1 and 2; and so forth. (Here, the values associated with each boundary tag are one-element lists, but they can have as many indices as there are edges) If polygons intersect, or edges coincide (or are even very close) the resolution may be undefined in some regions. Use the underlying mesh interface for such cases (see Chapter 14.2). If a segment is omitted in the tags definition an Exception is raised.

Note that every point on each polygon defining the mesh will be used as vertices in triangles. Consequently, polygons with points very close together will cause triangles with very small areas to be generated irrespective of the requested resolution. Make sure points on polygons are spaced to be no closer than the smallest resolution requested.

4.4 Initialising the Domain

Since we used `create_domain_from_regions` to create the mesh file, we do not need to create the domain explicitly, as the above function does both mesh and domain creation.

The following statements specify a basename and data directory, and sets a minimum storable height, which helps with visualisation and post-processing if one wants to remove water less than 1cm deep (for instance).

```

domain.set_name('cairns_' + project.scenario) # Name of SWW file
domain.set_datadir('.')                      # Store SWW output here
domain.set_minimum_storable_height(0.01)       # Store only depth > 1cm

```

4.5 Initial Conditions

Quantities for ‘runcairns.py’ are set using similar methods to those in ‘runup.py’. However, in this case, many of the values are read from the auxiliary file ‘project.py’ or, in the case of `elevation`, from an auxiliary points file.

4.5.1 Stage

The stage is initially set to 0.0 (i.e. Mean Sea Level) by the following statements:

```

tide = 0.0
domain.set_quantity('stage', tide)

```

It could also take the value of the highest astronomical tide.

4.5.2 Friction

We assign the friction exactly as we did for ‘runup.py’:

```
domain.set_quantity('friction', 0.0)
```

4.5.3 Elevation

The elevation is specified by reading data from a file with a name derived from `project.demname` with the `.pts` extension:

```

domain.set_quantity('elevation',
                    filename=project.demname + '.pts',
                    use_cache=True,
                    verbose=True,
                    alpha=0.1)

```

The `alpha` parameter controls how smooth the elevation surface should be. See section A.7, page 108.

Setting `cache=True` allows **ANUGA** to save the result in order to make subsequent runs faster.

Using `verbose=True` tells the function to write diagnostics to the screen.

4.6 Boundary Conditions

Setting boundaries follows a similar pattern to the one used for ‘runup.py’, except that in this case we need to associate a boundary type with each of the boundary tag names introduced when we established the mesh. In place of the four boundary types introduced for ‘runup.py’, we use the reflective boundary for each of the tagged segments defined by `create_domain_from_regions`:

```

Bd = anuga.Dirichlet_boundary([tide, 0, 0]) # Mean water level
Bs = anuga.Transmissive_stage_zero_momentum_boundary(domain) # Neutral boundary

if project.scenario == 'fixed_wave':
    # Huge 50m wave starting after 60 seconds and lasting 1 hour.
    Bw = anuga.Transmissive_n_momentum_zero_t_momentum_set_stage_boundary(
        domain=domain,
        function=lambda t: [(60<t<3660)*50, 0, 0])
    domain.set_boundary({'ocean_east': Bw,
                         'bottom': Bs,
                         'onshore': Bd,
                         'top': Bs})

if project.scenario == 'slide':
    # Boundary conditions for slide scenario
    domain.set_boundary({'ocean_east': Bd,
                         'bottom': Bd,
                         'onshore': Bd,
                         'top': Bd})

```

Note that we use different boundary conditions depending on the `scenario` defined in ‘`project.py`’.

It is not a requirement in **ANUGA** to have this code structure, just an example of how the script can take different actions depending on a variable.

4.7 Evolution

With the basics established, the running of the ‘evolve’ step is very similar to the corresponding step in ‘`runup.py`’, except we have different `evolve` loops for the two scenarios.

For the slide scenario, the simulation is run for an initial 60 seconds, at which time the slide occurs. We use the function `tsunami_source` to adjust stage values. We then run the simulation until 5000 seconds with the output stored every ten seconds:

```

if project.scenario == 'slide':
    # Initial run without any event
    for t in domain.evolve(yieldstep=10, finaltime=60):
        print domain.timestepping_statistics()
        print domain.boundary_statistics(tags='ocean_east')

    # Add slide to water surface
    if allclose(t, 60):
        domain.add_quantity('stage', tsunami_source)

    # Continue propagating wave
    for t in domain.evolve(yieldstep=10, finaltime=5000,
                           skip_initial_step=True):
        print domain.timestepping_statistics()
        print domain.boundary_statistics(tags='ocean_east')

if project.scenario == 'fixed_wave':
    # Save every two mins leading up to wave approaching land
    for t in domain.evolve(yieldstep=120, finaltime=5000):
        print domain.timestepping_statistics()
        print domain.boundary_statistics(tags='ocean_east')

    # Save every 30 secs as wave starts inundating ashore
    for t in domain.evolve(yieldstep=10, finaltime=10000,
                           skip_initial_step=True):
        print domain.timestepping_statistics()
        print domain.boundary_statistics(tags='ocean_east')

```

For the fixed wave scenario, the simulation is run to 10000 seconds, with the first half of the simulation stored at two minute intervals, and the second half of the simulation stored at ten second intervals. This functionality is especially convenient as it allows the detailed parts of the simulation to be viewed at higher time resolution.

This also demonstrates the ability of **ANUGA** to dynamically override values. The method `add_quantity()` works like `set_quantity()` except that it adds the new surface to what exists already. In this case it adds the initial shape of the water displacement to the water level.

4.8 Exploring the Model Output

Now that the scenario has been run, the user can view the output in a number of ways. As described earlier, the user may run `anuga_viewer` to view a three-dimensional representation of the simulation.

The user may also be interested in a maximum inundation map. This simply shows the maximum water depth over the domain and is achieved with the function `sww2dem` described in Section 15.8). ‘`ExportResults.py`’ demonstrates how this function can be used:

The script generates a maximum water depth ASCII grid at a defined resolution (here 100 m²) which can then be viewed in a GIS environment, for example. The parameters used in the function are defined in ‘`project.py`’. Figures 4.3 and 4.4 show the maximum water depth within the defined region for the slide and fixed wave scenario respectively. **Note, these inundation maps have been based on purely hypothetical scenarios and were designed explicitly for demonstration purposes only.** The user could develop a maximum absolute momentum or other expressions which can be derived from the quantities. It must be noted here that depth is more meaningful when the elevation is positive (depth = stage – elevation) as it describes the water height above the available elevation. When the elevation is negative, depth is measuring the water height from the sea floor. With this in mind, maximum inundation maps are typically “clipped” to the coastline. However, the data input here did not contain a coastline.

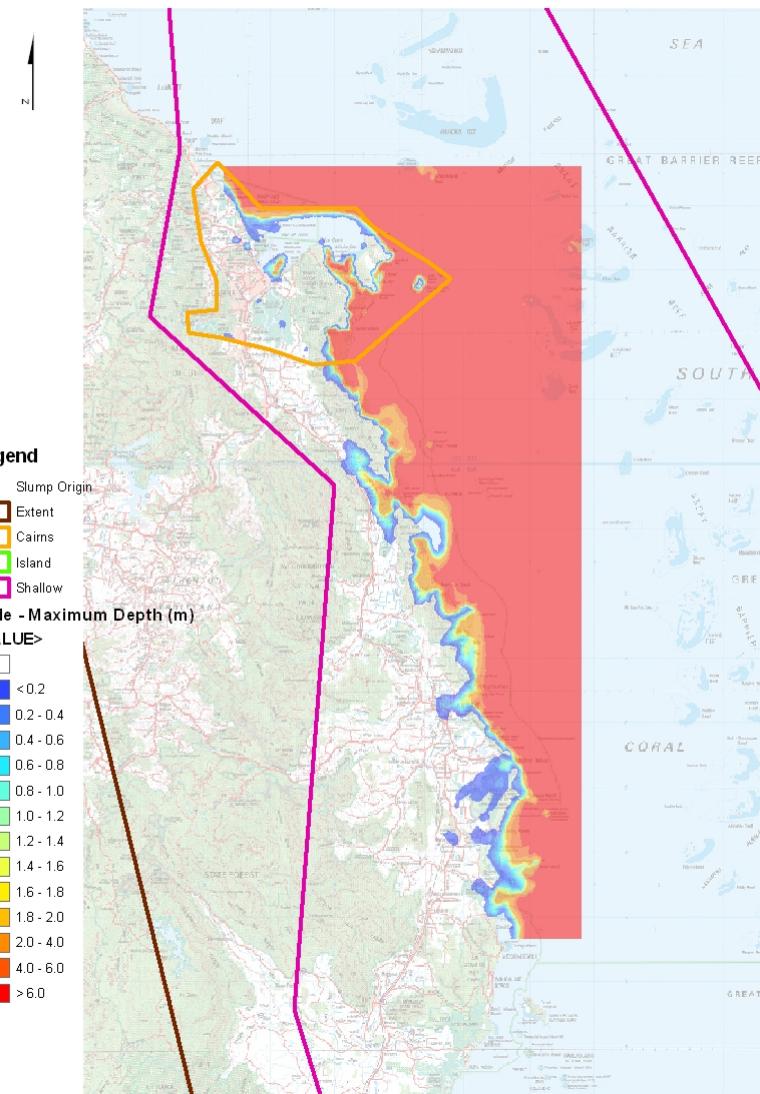


Figure 4.3: Maximum inundation map for the Cairns slide scenario. Note, this inundation map has been based on a purely hypothetical scenario which was designed explicitly for demonstration purposes only.

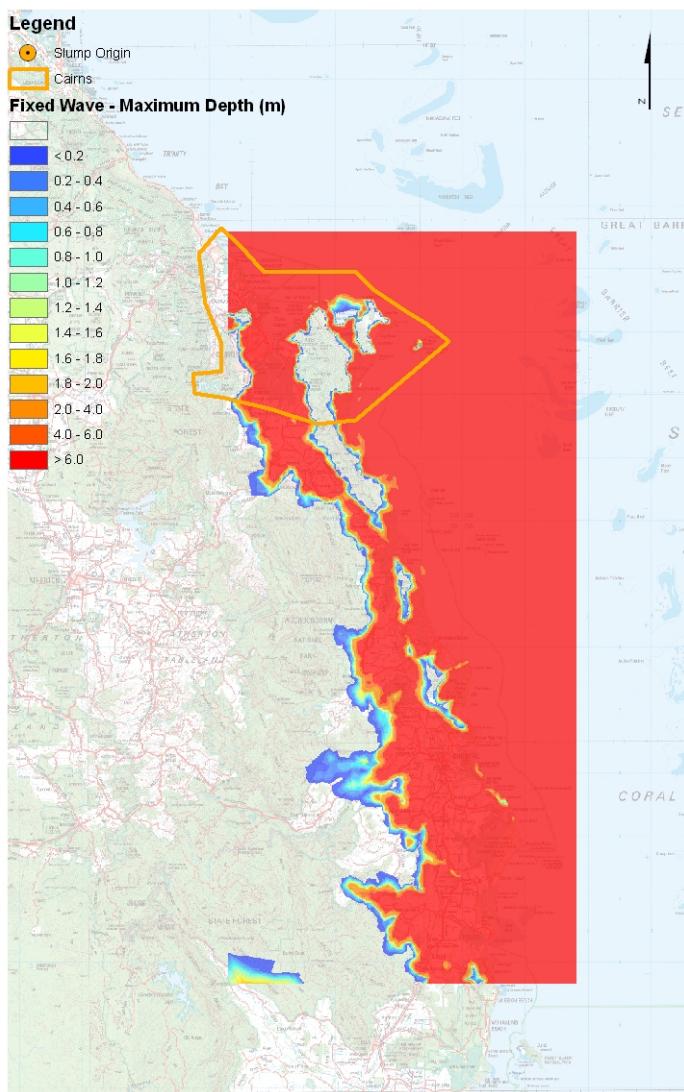


Figure 4.4: Maximum inundation map for the Cairns fixed wave scenario. Note, this inundation map has been based on a purely hypothetical scenario which was designed explicitly for demonstration purposes only.

The user may also be interested in interrogating the solution at a particular spatial location to understand the behaviour of the system through time. To do this, the user must first define the locations of interest. A number of locations have been identified for the Cairns scenario, as shown in Figure 4.5.

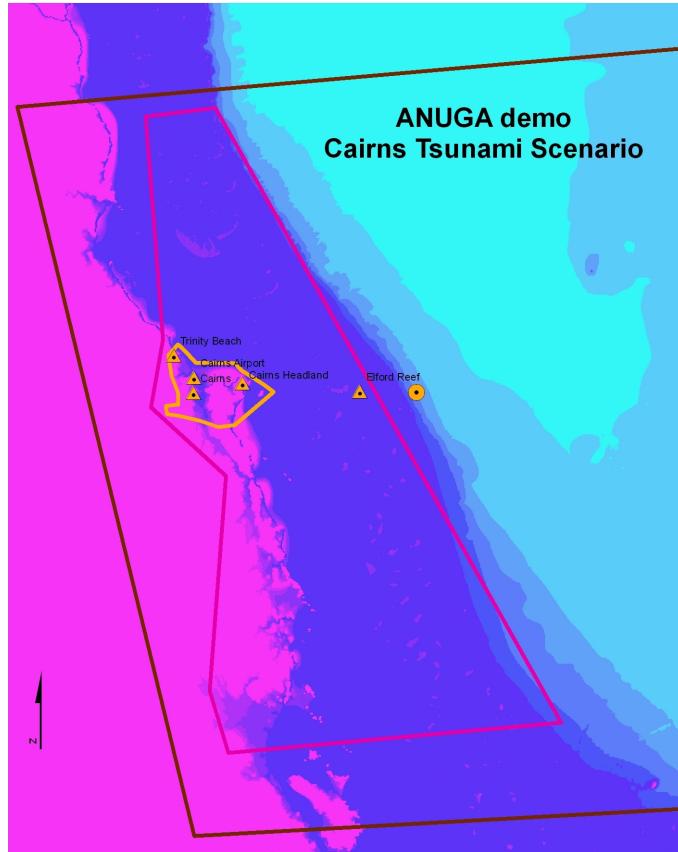


Figure 4.5: Point locations to show time series information for the Cairns scenario.

These locations must be stored in either a .csv or .txt file. The corresponding .csv file for the gauges shown in Figure 4.5 is ‘gauges.csv’:

```
eastng,northing,name,elevation
367622.63,8128196.42,Cairns,0
360245.11,8142280.78,Trinity Beach,0
386133.51,8131751.05,Cairns Headland,0
430250,8128812.23,Elford Reef,0
367771.61,8133933.82,Cairns Airport,0
```

Header information has been included to identify the location in terms of eastings and northings, and each gauge is given a name. The elevation column can be zero here. This information is then passed to the function `sw2csv_gauges` (shown in ‘GetTimeseries.py’ which generates the csv files for each point location. The CSV files can then be used in `csv2timeseries_graphs` to create the timeseries plot for each desired quantity. `csv2timeseries_graphs` relies on `pylab` to be installed which is not part of the standard `anuga` release, however it can be downloaded and installed from <http://matplotlib.sourceforge.net/>

Here, the time series for the quantities stage, depth and speed will be generated for each gauge defined in the gauge file. As described earlier, depth is more meaningful for onshore gauges, and stage is more appropriate for offshore gauges.

As an example output, Figure 4.6 shows the time series for the quantity stage for the Elford Reef location for each scenario (the elevation at this location is negative, therefore stage is the more appropriate quantity to plot). Note the large negative stage value when the slide was introduced. This is due to the double Gaussian form of the initial

surface displacement of the slide. By contrast, the time series for depth is shown for the onshore location of the Cairns Airport in Figure 4.7.

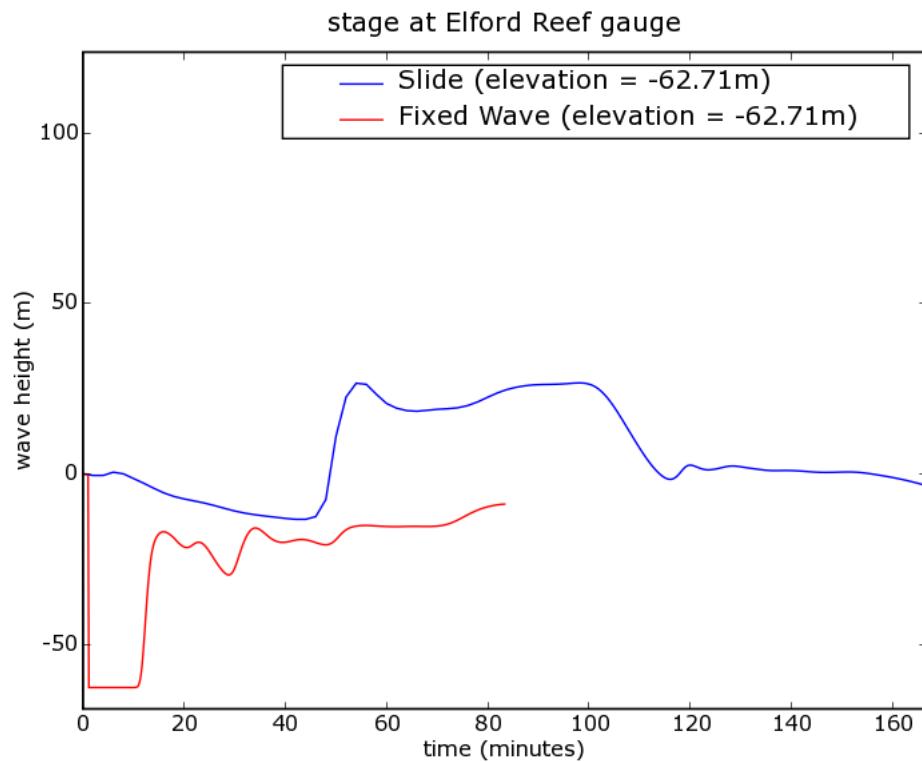


Figure 4.6: Time series information of the quantity stage for the Elford Reef location for the fixed wave and slide scenario.

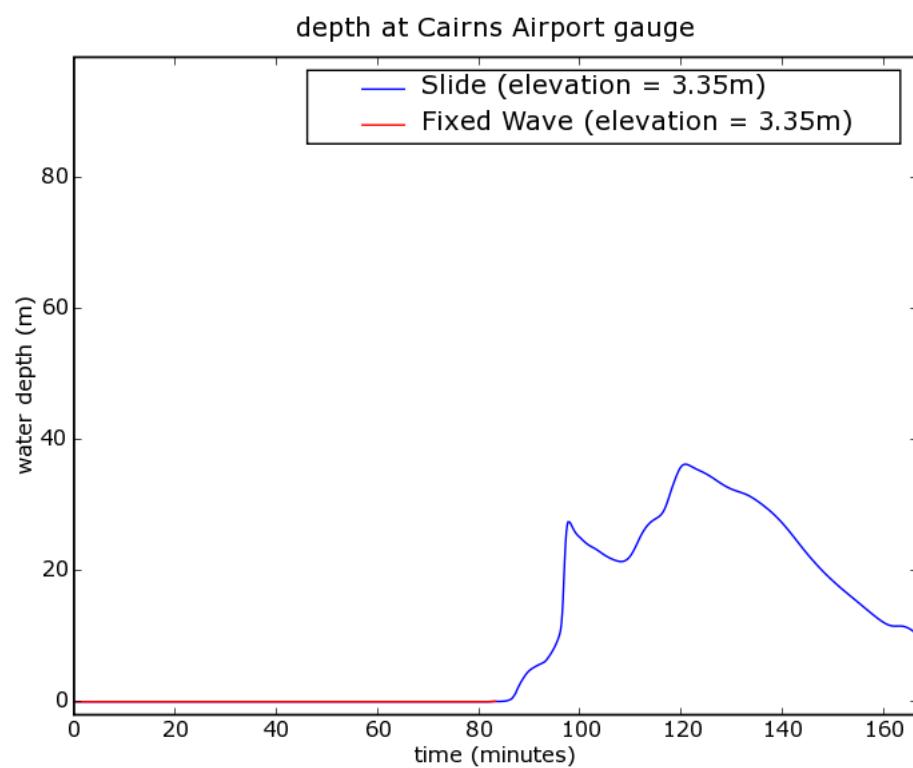


Figure 4.7: Time series information of the quantity depth for the Cairns Airport location for the slide and fixed wave scenario.

ANUGA Validation Tests

5.1 Overview

We have a large suite of validation tests (available from the `validation_tests` directory). From the individual directories, the tests can be run and a report produced, by running the `produce_results.py` script. These scripts take command line options. For instance

```
python produce_results.py -v -np 6
```

will run the tests in verbose mode (produces output) and in parallel using 6 processors (if parallel version of anuga has been setup).

A subset of these validation tests can be run using `run_validations.py` from the `anuga_core` directory.

The validation tests are organised into a number of directories as follows:

- **analytical_exact**: Extensive suite of tests against analytical solutions of the shallow water wave equations.
- **behaviour_only**: Tests against expected “engineering” results.
- **case_studies**: Generally long running simulations which can be tested against measured data.
- **experimental_data**: Simulations of experimental setups. Usually tested against measured data.
- **other_references**: Simulations tested against other simulations.

5.2 Analytical_exact

As an example, the code in the directory `validation_tests/analytical_exact` consider the code in the directory `dam_break_dry`. This code tests **ANUGA** against the standard analytical solution of the dam break problem. For instance Figure 5.1 shows the stage obtained at various times when running this validation test (using the `DE0` algorithm).

5.3 Behaviour_only

Many of the tests in this directory compare the **ANUGA** results against the hydrological model HECRAS. For instance the test `bridge_hecras` compares the stage next to a bridge modelled by HECRAS and **ANUGA**, which is shown in Figure 5.2 .

5.4 Case_studies

These are generally very long running simulations but are typical of real world case studies. The case study `patong` considers a tsunami case study, where as `merewether` and `towradgi` look at flood models.

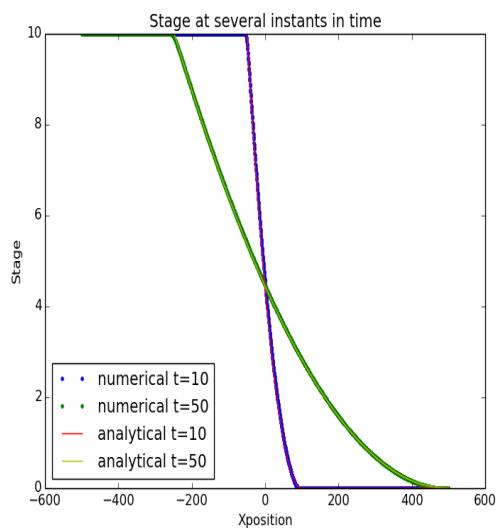


Figure 5.1: Comparison of analytical and computed stage for the dam break dry validation test

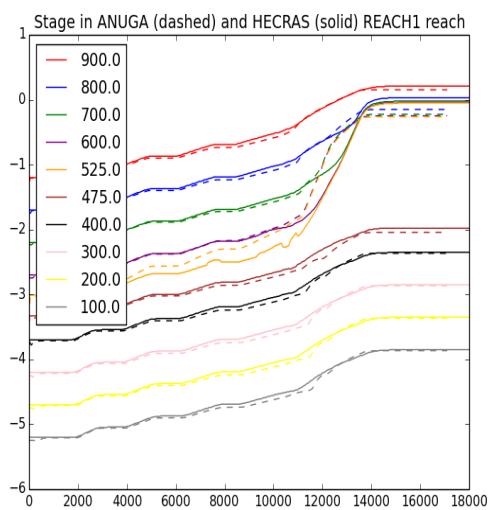


Figure 5.2: Comparison of stage near a bridge modelled by HECRAS and ANUGA

`merewether` is a short simulation (30mins), whereas `patong` and especially `towradgi` will take many 10s of hours to run (consider running in parallel).

Figure 5.3 showing comparison of observed flood height and **ANUGA** modelled flood height, near the Pioneer bridge.

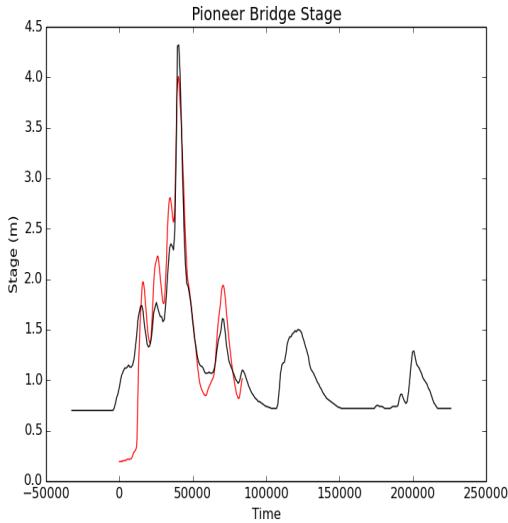


Figure 5.3: Comparison of observed and modelled stage near a bridge in the towradgi simulation

5.5 Experimental_data

This directory contains models in which we have experimental data to validate against. At present we have two studies, `dam_break_yeh_petroff` and `okushiri`.

Figure 5.4 showing comparison of experimentally measured and modelled force on a column in a simulated dam break situation as modelled in directory `experimental_data/dam_break_yeh_petroff`

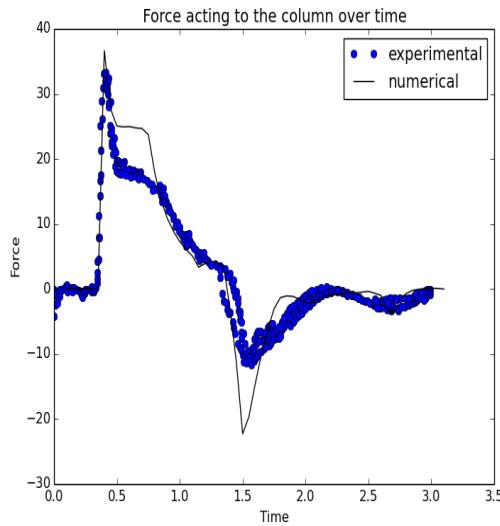


Figure 5.4: Comparison of experimentally measured and modelled force on a column in a simulated dam break situation

5.6 Other_references

Here we are collecting situations where we can compare with other published results. For instance in the directory we present comparison of a 2d **ANUGA** simulation of a circular dam break against a 1d shallow water simulation. Figure 5.5

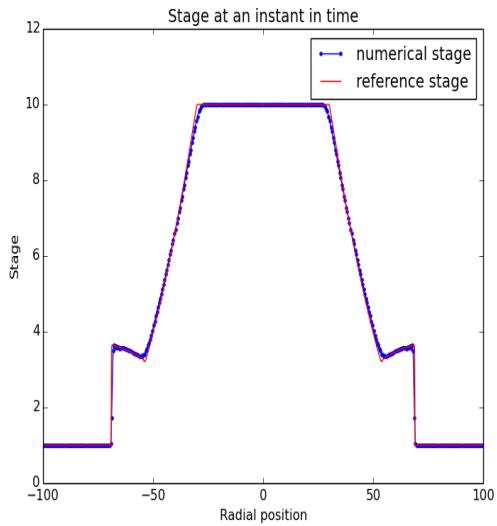


Figure 5.5: Comparison of **ANUGA** 2d simulation and a 1d shallow water simulation of a circular dam break

Mesh Generation

Before discussing the part of the interface relating to mesh generation, we begin with a description of a simple example of a mesh and use it to describe how mesh data is stored.

Figure 6.1 represents a very simple mesh comprising just 11 points and 10 triangles.

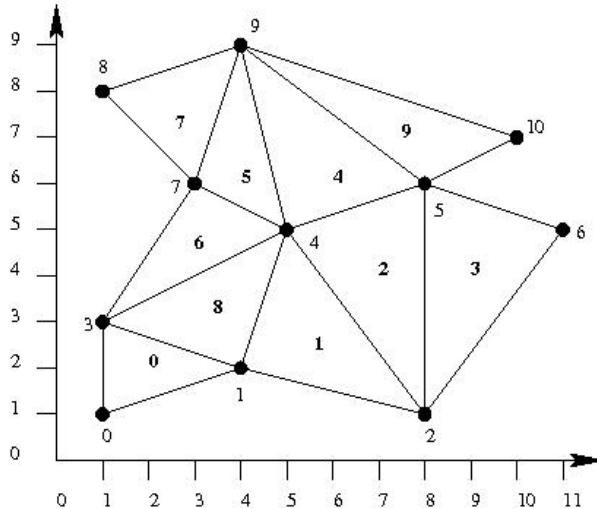


Figure 6.1: A simple mesh

The variables `points`, `triangles` and `boundary` represent the data displayed in Figure 6.1 as follows. The list `points` stores the coordinates of the points, and may be displayed schematically as in Table 6.1.

index	x	y
0	1	1
1	4	2
2	8	1
3	1	3
4	5	5
5	8	6
6	11	5
7	3	6
8	1	8
9	4	9
10	10	7

Table 6.1: Point coordinates for mesh in Figure 6.1

The list `triangles` specifies the triangles that make up the mesh. It does this by specifying, for each triangle, the indices (the numbers shown in the first column above) that correspond to the three points at the triangles

vertices, taken in an anti-clockwise order around the triangle. Thus, in the example shown in Figure 6.1, the variable `triangles` contains the entries shown in Table 6.2. The starting point is arbitrary so triangle (0, 1, 3) is considered the same as (1, 3, 0) and (3, 0, 1).

index	points		
0	0	1	3
1	1	2	4
2	2	5	4
3	2	6	5
4	4	5	9
5	4	9	7
6	3	4	7
7	7	9	8
8	1	4	3
9	5	10	9

Table 6.2: Triangles for mesh in Figure 6.1

Finally, the variable `boundary` identifies the boundary triangles and associates a tag with each.

6.1 High Level Mesh Generation Functions

```
create_mesh_from_regions(bounding_polygon, boundary_tags, maximum_triangle_area=None,
                         filename=None, interior_regions=None, interior_holes=None, hole_
tags=None, poly_geo_reference=None, mesh_geo_reference=None,
minimum_triangle_angle=28.0, fail_if_polygons_outside=True, break_
lines=None, use_cache=False, verbose=True)
```

Module: `pmesh.mesh_interface`

This function allows a user to initiate the automatic creation of a mesh inside a specified polygon (input `bounding_polygon`). Among the parameters that can be set are the *resolution* (maximal area for any triangle in the mesh) and the minimal angle allowable in any triangle. The user can specify a number of internal polygons within each of which the resolution of the mesh can be specified. `interior_regions` is a paired list containing the interior polygon and its resolution. Additionally, the user specifies a list of boundary tags, one for each edge of the bounding polygon.

`breaklines` lets you force a split along a boundary within the mesh. For example, a kerb or the edge of a dyke could be specified here. (new in 1.2)

`interior_holes` lets you specify polygons as empty holes in the mesh. This can be used to represent buildings, pylons and other immovable structures. These polygons do not need to be closed, but their points must be specified in a counter-clockwise order.(new in 1.2)

WARNING. Note that the dictionary structure used for the parameter `boundary_tags` is different from that used for the variable `boundary` that occurs in the specification of a mesh. In the case of `boundary`, the tags are the *values* of the dictionary, whereas in the case of `boundary_tags`, the tags are the *keys* and the *value* corresponding to a particular tag is a list of numbers identifying boundary edges labelled with that tag. Because of this, it is theoretically possible to assign the same edge to more than one tag. However, an attempt to do this will cause an error.

WARNING. Do not have polygon lines cross or be on-top of each other. This can result in regions of unspecified resolutions, and ANUGA will give you an error. Do not have polygon close to each other. This can result in the area between the polygons having small triangles. For more control over the mesh outline use the methods described below.

```
create_domain_from_regions(bounding_polygon, boundary_tags, maximum_triangle_area=None,
                           mesh_filename=None, interior_regions=None, interior_holes=None,
                           poly_geo_reference=None, mesh_geo_reference=None, minimum_tri_
angle=28.0, fail_if_polygons_outside=True, use_cache=False,
                           verbose=True)
```

Module: `interface.py`

This higher-level function allows a user to create a domain (and associated mesh) inside a specified polygon. `bounding_polygon` is a list of points in Eastings and Northings, relative to the zone stated in `poly_geo_reference` if specified. Otherwise points are just x, y coordinates with no particular association to any location.

`boundary_tags` is a dictionary of symbolic tags. For every tag there is a list of indices referring to segments associated with that tag. If a segment is omitted it will be assigned the default tag ”.

`maximum_triangle_area` is the maximal area per triangle for the bounding polygon, excluding the interior regions.

`interior_holes` lets you specify polygons as empty holes in the mesh. This can be used to represent buildings, pylons and other immovable structures. These polygons do not need to be closed, but their points must be specified in a counter-clockwise order.(new in 1.2)

`mesh_filename` is the name of the file to contain the generated mesh data.

`interior_regions` is a list of tuples consisting of (`polygon`, `resolution`) for each region to be separately refined. Do not have polygon lines cross or be on-top of each other. Also do not have polygons close to each other.

`poly_geo_reference` is the geo_reference of the bounding polygon and the interior polygons. If none, assume absolute. Please pass one though, since absolute references have a zone.

`mesh_geo_reference` is the geo_reference of the mesh to be created. If none is given one will be automatically generated. It will use the lower left hand corner of `bounding_polygon` (absolute) as the x and y values for the `geo_ref`.

`minimum_triangle_angle` is the minimum angle allowed for each generated triangle. This controls the *slimness* allowed for a triangle.

`fail_if_polygons_outside` – if True (the default) an Exception is thrown if interior polygons fall outside the bounding polygon. If False, these will be ignored and execution continues.

WARNING. Note that the dictionary structure used for the parameter `boundary_tags` is different from that used for the variable `boundary` that occurs in the specification of a mesh. In the case of `boundary`, the tags are the *values* of the dictionary, whereas in the case of `boundary_tags`, the tags are the *keys* and the *value* corresponding to a particular tag is a list of numbers identifying boundary edges labelled with that tag. Because of this, it is theoretically possible to assign the same edge to more than one tag. However, an attempt to do this will cause an error.

WARNING. Do not have polygon lines cross or be on-top of each other. This can result in regions of unspecified resolutions. Do not have polygon close to each other. This can result in the area between the polygons having small triangles. For more control over the mesh outline use the methods described below.

6.2 Advanced mesh generation

For more control over the creation of the mesh outline, use the methods of the class `Mesh`.

class `Mesh` (`userSegments=None`, `userVertices=None`, `holes=None`, `regions=None`, `geo_reference=None`)

Module: `pmesh.mesh`

A class used to build a mesh outline and generate a two-dimensional triangular mesh. The mesh outline is used to describe features on the mesh, such as the mesh boundary. Many of this class’s methods are used to build a mesh outline, such as `add_vertices()` and `add_region_from_polygon()`.

`userSegments` and `userVertices` define the outline enclosing the mesh.

`holes` describes any regions inside the mesh that are not to be included in the mesh.

`geo_reference` defines the geo_reference to which all point information is relative. If `geo_reference` is `None` then the default `geo_reference` is used.

6.2.1 Key Methods of Class Mesh

`<mesh>.add_hole(x, y, geo_reference=None)`

Module: `pmesh.mesh`

This method adds a hole to the mesh outline.

x and y define a point on the already defined hole boundary.

If geo_reference is not supplied the points are assumed to be absolute.

<mesh>.add_hole_from_polygon (polygon, segment_tags=None, geo_reference=None)

Module: pmesh.mesh

This method is used to add a 'hole' within a region – that is, to define a interior region where the triangular mesh will not be generated – to a Mesh instance. The region boundary is described by the polygon passed in. Additionally, the user specifies a list of boundary tags, one for each edge of the bounding polygon.

polygon is the polygon that defines the hole to be added to the <mesh>.

segment_tags – ??

If geo_reference is None then the default geo_reference is used.

<mesh>.add_points_and_segments (points, segments=None, segment_tags=None)

Module: pmesh.mesh

This adds points and segments connecting the points to a mesh.

points is a list of points.

segments is a list of segments. Each segment is defined by the start and end of the line by its point index, e.g. use segments = [[0,1], [1,2]] to make a polyline between points 0, 1 and 2.

segment_tags may be used to optionally define a tag for each segment.

<mesh>.add_region (x,y, geo_reference=None, tag=None)

Module: pmesh.mesh

This method adds a region to a mesh outline.

x and y define a point on the already-defined region that is to be added to the mesh.

If geo_reference is not supplied the points data is assumed to be absolute.

tag – ??

A region instance is returned. This can be used to set the resolution of the added region.

<mesh>.add_region_from_polygon (polygon, segment_tags=None, max_triangle_area=None, geo_reference=None, region_tag=None)

Module: pmesh.mesh

This method adds a region to a Mesh instance. Regions are commonly used to describe an area with an increased density of triangles by setting max_triangle_area.

polygon describes the region boundary to add to the <mesh>.

segment_tags specifies a list of segment tags, one for each edge of the bounding polygon.

If geo_reference is not supplied the points data is assumed to be absolute.

region_tag sets the region tag.

<mesh>.add_vertices (point_data)

Module: pmesh.mesh

Add user vertices to a mesh.

point_data is the list of point data, and can be a list of (x,y) values, a numeric array or a geospatial_data instance.

<mesh>.auto_segment (alpha=None, raw_boundary=True, remove_holes=False, smooth_indent=False, expand_pinch=False)

Module: pmesh.mesh

Add segments between some of the user vertices to give the vertices an outline. The outline is an alpha shape. This method is useful since a set of user vertices need to be outlined by segments before generate_mesh is called.

alpha determines the *smoothness* of the alpha shape.

raw_boundary, if True instructs the function to return the raw boundary, i.e. the regular edges of the alpha shape.

`remove_holes`, if `True` enables a filter to remove small holes (small is defined by `boundary_points_fraction`).

`smooth_indent`, if `True` removes sharp triangular indent in the boundary.

`expand_pinch`, if `True` tests for pinch-off and corrects (i.e. a boundary vertex with more than two edges).

<mesh>.export_mesh_file (ofile)

Module: `pmesh.mesh`

This method is used to save a mesh to a file.

`ofile` is the name of the mesh file to be written, including the extension. Use the extension `.msh` for the file to be in NetCDF format and `.tsh` for the file to be ASCII format.

<mesh>.generate_mesh (maximum_triangle_area=""", minimum_triangle_angle=28.0, verbose=True)

Module: `pmesh.mesh`

This method is used to generate the triangular mesh.

`maximum_triangle_area` sets the maximum area of any triangle in the mesh.

`minimum_triangle_angle` sets the minimum area of any triangle in the mesh.

These two parameters can be used to control the triangle density.

<mesh>.import_ungenerate_file (ofile, tag=None, region_tag=None)

Module: `pmesh.mesh`

This method is used to import a polygon file in the ungenerate format, which is used by arcGIS. The polygons from the file are converted to vertices and segments.

`ofile` is the name of the polygon file.

`tag` is the tag given to all the polygon's segments. If `tag` is not supplied then the segment will not effect the water flow, it will only effect the mesh generation.

`region_tag` is the tag given to all the polygon's segments. If it is a string the tag will be assigned to all regions. If it is a list the first value in the list will be applied to the first polygon etc.

This function can be used to import building footprints.

The Domain

```
class Domain (source=None, triangles=None, boundary=None, conserved_quantities=None, other_quantities=None, tagged_elements=None, geo_reference=None, use_inscribed_circle=False, mesh_file_name=None, use_cache=False, verbose=False, full_send_dict=None, ghost_recv_dict=None, processor=0, numproc=1, number_of_full_nodes=None, number_of_full_triangles=None)  
Module: abstract_2d_finite_volumes.domain
```

This class is used to store and manipulate data associated with a mesh and to setup the particulars for the evolution of the specific problem. The mesh is specified either by assigning the name of a mesh file to `source` or by specifying the points, triangle and boundary of the mesh.

7.1 Key Methods of Domain

`<domain>.set_name(name)`

Module: `abstract_2d_finite_volumes.domain`

`name` is used to name the domain. The name is also used to identify the output SWW file. If no name is assigned to a domain, the assumed name is '`domain`'.

`<domain>.get_name()`

Module: `abstract_2d_finite_volumes.domain`

Returns the name assigned to the domain by `set_name()`. If no name has been assigned, returns '`domain`'.

`<domain>.set_datadir(path)`

Module: `abstract_2d_finite_volumes.domain`

`path` specifies the path to the directory used to store SWW files.

Before this method is used to set the SWW directory path, the assumed directory path is `default_datadir` specified in `config.py`.

Since different operating systems use different formats for specifying pathnames it is necessary to specify path separators using the Python code `os.sep` rather than the operating-specific ones such as '/' or '\'. For this to work you will need to include the statement `import os` in your code, before the first use of `set_datadir()`.

For example, to set the data directory to a subdirectory `data` of the directory `project`, you could use the statements:

```
import os  
domain.set_datadir('project' + os.sep + 'data')
```

`<domain>.get_datadir()`

Module: `abstract_2d_finite_volumes.domain`

Returns the path to the directory where SWW files will be stored.

If the path has not previously been set with `set_datadir()` this method will return the value `default_datadir` specified in `config.py`.

<domain>.set_minimum_allowed_height (*minimum_allowed_height*)

Module: shallow_water.shallow_water_domain

Set the minimum depth (in metres) that will be recognised in the numerical scheme (including limiters and flux computations)

minimum_allowed_height is the new minimum allowed height value.

Default value is 10^{-3} metre, but by setting this to a greater value, e.g. for large scale simulations, the computation time can be significantly reduced.

<domain>.set_minimum_storable_height (*minimum_storable_height*)

Module: shallow_water.shallow_water_domain

Sets the minimum depth that will be recognised when writing to an SWW file. This is useful for removing thin water layers that seems to be caused by friction creep.

minimum_storable_height is the new minimum storable height value.

<domain>.set_maximum_allowed_speed (*maximum_allowed_speed*)

Module: shallow_water.shallow_water_domain

Set the maximum particle speed that is allowed in water shallower than *minimum_allowed_height*. This is useful for controlling speeds in very thin layers of water and at the same time allow some movement avoiding pooling of water.

maximum_allowed_speed sets the maximum allowed speed value.

<domain>.set_time (*time=0.0*)

Module: abstract_2d_finite_volumes.domain

time sets the initial time, in seconds, for the simulation. The default is 0.0.

<domain>.set_default_order (*n*)

Module: abstract_2d_finite_volumes.domain

Sets the default (spatial) order to the value specified by *n*, which must be either 1 or 2. (Assigning any other value to *n* will cause an error.)

<domain>.set_store_vertices_uniquely (*flag, reduction=None*)

Module: shallow_water.shallow_water_domain

Decide whether vertex values should be stored uniquely as computed in the model or whether they should be reduced to one value per vertex using averaging.

flag may be `True` (meaning allow surface to be discontinuous) or `False` (meaning smooth vertex values).

reduction defines the smoothing operation if *flag* is `False`. If not supplied, *reduction* is assumed to be `mean`.

Triangles stored in the SWW file can be discontinuous reflecting the internal representation of the finite-volume scheme (this is a feature allowing for arbitrary steepness of the water surface gradient as well as the momentum gradients). However, for visual purposes and also for use with `Field_boundary` (and `File_boundary`), it is often desirable to store triangles with values at each vertex point as the average of the potentially discontinuous numbers found at vertices of different triangles sharing the same vertex location.

Storing one way or the other is controlled in **ANUGA** through the method `<domain>.store_vertices_uniquely()`. Options are:

- `<domain>.store_vertices_uniquely(True)`: Allow discontinuities in the SWW file
- `<domain>.store_vertices_uniquely(False)`: (Default). Average values to ensure continuity in SWW file. The latter also makes for smaller SWW files.

Note that when model data in the SWW file are averaged (i.e. not stored uniquely), then there will most likely be a small discrepancy between values extracted from the SWW file and the same data stored in the model domain. This must be borne in mind when comparing data from the SWW files with that of the model internally.

<domain>.set_quantities_to_be_stored(*quantity_dictionary*)

Module: shallow_water.shallow_water_domain

Selects quantities that is to be stored in the sww files. The argument can be None, in which case nothing is stored.

Otherwise, the argument must be a dictionary where the keys are names of quantities already defined within ANUGA and the values are either 1 or 2. If the value is 1, the quantity will be stored once at the beginning of the simulation, if the value is 2 it will be stored at each timestep. The ANUGA default is equivalent to the call

```
domain.set_quantities_to_be_stored({'elevation': 1,
                                    'stage': 2,
                                    'xmomentum': 2,
                                    'ymomentum': 2})
```

<domain>.get_nodes(*absolute=False*)

Module: abstract_2d_finite_volumes.domain

Return x,y coordinates of all nodes in the domain mesh. The nodes are ordered in an Nx2 array where N is the number of nodes. This is the same format they were provided in the constructor i.e. without any duplication.

absolute is a boolean which determines whether coordinates are to be made absolute by taking georeference into account. Default is False as many parts of **ANUGA** expect relative coordinates.

<domain>.get_vertex_coordinates(*absolute=False*)

Module: abstract_2d_finite_volumes.domain

Return vertex coordinates for all triangles as a 3*Mx2 array where the jth vertex of the ith triangle is located in row 3*i+j and M is the number of triangles in the mesh.

absolute is a boolean which determines whether coordinates are to be made absolute by taking georeference into account. Default is False as many parts of **ANUGA** expect relative coordinates.

<domain>.get_centroid_coordinates(*absolute=False*)

Module: abstract_2d_finite_volumes.domain

Return centroid coordinates for all triangles as an Mx2 array.

absolute is a boolean which determines whether coordinates are to be made absolute by taking georeference into account. Default is False as many parts of **ANUGA** expect relative coordinates.

<domain>.get_triangles(*indices=None*)

Module: abstract_2d_finite_volumes.domain

Return an Mx3 integer array where M is the number of triangles. Each row corresponds to one triangle and the three entries are indices into the mesh nodes which can be obtained using the method `get_nodes()`.

indices, if specified, is the set of triangle ids of interest.

<domain>.get_disconnected_triangles()

Module: abstract_2d_finite_volumes.domain

Get the domain mesh based on nodes obtained from `get_vertex_coordinates()`.

Returns an Mx3 array of integers where each row corresponds to a triangle. A triangle is a triplet of indices into point coordinates obtained from `get_vertex_coordinates()` and each index appears only once.

This provides a mesh where no triangles share nodes (hence the name disconnected triangles) and different nodes may have the same coordinates.

This version of the mesh is useful for storing meshes with discontinuities at each node and is e.g. used for storing data in SWW files.

The triangles created will have the format:

```
[[0,1,2],
 [3,4,5],
 [6,7,8],
 ...
 [3*M-3 3*M-2 3*M-1]]
```

7.2 Evolution

<domain>.evolve (yieldstep=None, finaltime=None, duration=None, skip_initial_step=False)

Module: abstract_2d_finite_volumes.domain

This method is invoked once all the preliminaries have been completed, and causes the model to progress through successive steps in its evolution, storing results and outputting statistics whenever a user-specified period `yieldstep` is completed. Generally during this period the model will evolve through several steps internally as the method forces the water speed to be calculated on successive new cells.

`yieldstep` is the interval in seconds between yields where results are stored, statistics written and the domain is inspected or possibly modified. If omitted an internal predefined `yieldstep` is used. Internally, smaller timesteps may be taken.

`duration` is the duration of the simulation in seconds.

`finaltime` is the time in seconds where simulation should end. This is currently relative time, so it's the same as `duration`. If both `duration` and `finaltime` are given an exception is thrown.

`skip_initial_step` is a boolean flag that decides whether the first yield step is skipped or not. This is useful for example to avoid duplicate steps when multiple evolve processes are diveded.

The code specified by the user in the block following the `evolve` statement is only executed once every `yieldstep` even though ANUGA typically will take many more internal steps behind the scenes.

You can include `evolve` in a statement of the type:

```
for t in domain.evolve(yieldstep, finaltime):
    <Do something with domain and t>
```

7.3 Diagnostics

<domain>.statistics ()

Module: abstract_2d_finite_volumes.domain

Outputs statistics about the mesh within the Domain.

<domain>.timestepping_statistics (track_speeds=False, triangle_id=None)

Module: abstract_2d_finite_volumes.domain

Returns a string of the following type for each timestep:

Time = 0.9000, delta t in [0.00598964, 0.01177388], steps=12 (12)

Here the numbers in `steps=12 (12)` indicate the number of steps taken and the number of first-order steps, respectively.

The optional keyword argument `track_speeds` will generate a histogram of speeds generated by each triangle if set to True. The speeds relate to the size of the timesteps used by ANUGA and this diagnostics may help pinpoint problem areas where excessive speeds are generated.

The optional keyword argument `triangle_id` can be used to specify a particular triangle rather than the one with the largest speed.

<domain>.boundary_statistics (quantities=None, tags=None)

Module: abstract_2d_finite_volumes.domain

Generates output about boundary forcing at each timestep.

`quantities` names the quantities to be reported – may be None, a string or a list of strings.

`tags` names the tags to be reported – may be either None, a string or a list of strings.

When `quantities = 'stage'` and `tags = ['top', 'bottom']` will return a string like:

```
Boundary values at time 0.5000:
top:
    stage in [ -0.25821218, -0.02499998]
bottom:
    stage in [ -0.27098821, -0.02499974]
```

```
Q = <domain>.get_quantity(name, location='vertices', indices=None)
```

Module: abstract_2d_finite_volumes.domain

This function returns a Quantity object Q. Access to its values should be done through Q.get_values() documented on Page 51.

name is the name of the quantity to retrieve.

location is

indices is

```
<domain>.set_quantities_to_be_monitored(quantity, polygon=None, time_interval=None)
```

Module: abstract_2d_finite_volumes.domain

Selects quantities and derived quantities for which extrema attained at internal timesteps will be collected.

quantity specifies the quantity or quantities to be monitored and must be either:

- the name of a quantity or derived quantity such as 'stage-elevation',
- a list of quantity names, or
- None.

polygon can be used to monitor only triangles inside the polygon. Otherwise all triangles will be included.

time_interval will restrict monitoring to time steps in the interval. Otherwise all timesteps will be included.

Information can be tracked in the evolve loop by printing quantity_statistics and collected data will be stored in the SWW file.

```
<domain>.quantity_statistics(precision='%.4f')
```

Module: abstract_2d_finite_volumes.domain

Reports on extrema attained by selected quantities.

Returns a string of the following type for each timestep:

```
Monitored quantities at time 1.0000:  
  stage-elevation:  
    values since time = 0.00 in [0.00000000, 0.30000000]  
    minimum attained at time = 0.00000000, location = (0.16666667, 0.33333333)  
    maximum attained at time = 0.00000000, location = (0.83333333, 0.16666667)  
  ymomentum:  
    values since time = 0.00 in [0.00000000, 0.06241221]  
    minimum attained at time = 0.00000000, location = (0.33333333, 0.16666667)  
    maximum attained at time = 0.22472667, location = (0.83333333, 0.66666667)  
  xmomentum:  
    values since time = 0.00 in [-0.06062178, 0.47886313]  
    minimum attained at time = 0.00000000, location = (0.16666667, 0.33333333)  
    maximum attained at time = 0.35103646, location = (0.83333333, 0.16666667)
```

The quantities (and derived quantities) listed here must be selected at model initialisation time using the method domain.set_quantities_to_be_monitored().

The optional keyword argument precision='%.4f' will determine the precision used for floating point values in the output. This diagnostics helps track extrema attained by the selected quantities at every internal timestep.

These values are also stored in the SWW file for post-processing.

```
<quantity>.get_values(interpolation_points=None, location='vertices', indices=None, use_-  
cache=False, verbose=False)
```

Module: abstract_2d_finite_volumes.quantity

Extract values for quantity as a numeric array.

interpolation_points is a list of (x, y) coordinates where the value is sought (using interpolation). If interpolation_points is given, values for location and indices are ignored. Assume either an absolute UTM coordinates or geospatial data object.

`location` specifies where values are to be stored. Permissible options are 'vertices', 'edges', 'centroids' or 'unique vertices'.

The returned values will have the leading dimension equal to length of the `indices` list or N (all values) if `indices` is None.

If `location` is 'centroids' the dimension of returned values will be a list or a numeric array of length N, N being the number of elements.

If `location` is 'vertices' or 'edges' the dimension of returned values will be of dimension Nx3.

If `location` is 'unique vertices' the average value at each vertex will be returned and the dimension of returned values will be a 1d array of length "number of vertices"

`indices` is the set of element ids that the operation applies to.

The values will be stored in elements following their internal ordering.

```
<quantity>.set_values(numeric=None, quantity=None, function=None, geospatial_data=None, file-name=None, attribute_name=None, alpha=None, location='vertices', polygon=None, indices=None, smooth=False, verbose=False, use_cache=False)
```

Module: `abstract_2d_finite_volumes.quantity`

Assign values to a quantity object.

This method works the same way as `set_quantity()` except that it doesn't take a quantity name as the first argument since it is applied directly to the quantity. Use `set_values` is used to assign values to a new quantity that has been created but which is not part of the domain's predefined quantities.

`location` is ??

`indices` is ??

The method `set_values()` is always called by `set_quantity()` behind the scenes.

```
<quantity>.get_integral()
```

Module: `abstract_2d_finite_volumes.quantity`

Return the computed integral over the entire domain for the quantity.

```
<quantity>.get_maximum_value(indices=None)
```

Module: `abstract_2d_finite_volumes.quantity`

Return the maximum value of a quantity (on centroids).

`indices` is the optional set of element ids that the operation applies to.

We do not seek the maximum at vertices as each vertex can have multiple values – one for each triangle sharing it.

```
<quantity>.get_maximum_location(indices=None)
```

Module: `abstract_2d_finite_volumes.quantity`

Return the location of the maximum value of a quantity (on centroids).

`indices` is the optional set of element ids that the operation applies to.

We do not seek the maximum at vertices as each vertex can have multiple values – one for each triangle sharing it.

If there are multiple cells with the same maximum value, the first cell encountered in the triangle array is returned.

```
<domain>.get_wet_elements(indices=None)
```

Module: `shallow_water.shallow_water_domain`

Returns the indices for elements where $h > \text{minimum_allowed_height}$

`indices` is the optional set of element ids that the operation applies to.

```
<domain>.get_maximum_inundation_elevation(indices=None)
```

Module: `shallow_water.shallow_water_domain`

Return highest elevation where $h > 0$.

`indices` is the optional set of element ids that the operation applies to.

Example to find maximum runup elevation:

```
z = domain.get_maximum_inundation_elevation()

<domain>.get_maximum_inundation_location (indices=None)
Module: shallow_water.shallow_water_domain
Return location (x,y) of highest elevation where h > 0.
indices is the optional set of element ids that the operation applies to.
Example to find maximum runup location:
x, y = domain.get_maximum_inundation_location()
```


Initial Conditions

In standard usage of partial differential equations, initial conditions refers to the values associated to the system variables (the conserved quantities here) for `time = 0`. In setting up a scenario script as described in Sections 2.1 and 4, `set_quantity` is used to define the initial conditions of variables other than the conserved quantities, such as friction. Here, we use the terminology of initial conditions to refer to initial values for variables which need prescription to solve the shallow water wave equation. Further, it must be noted that `set_quantity()` does not necessarily have to be used in the initial condition setting; it can be used at any time throughout the simulation.

```
<domain>.set_quantity(numeric=None, quantity=None, function=None, geospatial_data=None, file-
    name=None, attribute_name=None, alpha=None, location='vertices', poly-
    gon=None, indices=None, smooth=False, verbose=False, use_cache=False)
```

Module: `abstract_2d_finite_volumes.domain`

(This method passes off to `abstract_2d_finite_volumes.quantity.set_values()`)

This function is used to assign values to individual quantities for a domain. It is very flexible and can be used with many data types: a statement of the form `<domain>.set_quantity(name, x)` can be used to define a quantity having the name `name`, where the other argument `x` can be any of the following:

- a number, in which case all vertices in the mesh gets that for the quantity in question
- a list of numbers or a numeric array ordered the same way as the mesh vertices
- a function (e.g. see the samples introduced in Chapter 2)
- an expression composed of other quantities and numbers, arrays, lists (for example, a linear combination of quantities, such as `<domain>.set_quantity('stage', 'elevation' +x)`)
- the name of a file from which the data can be read. In this case, the optional argument `attribute_name` will select which attribute to use from the file. If left out, `set_quantity()` will pick one. This is useful in cases where there is only one attribute
- a geospatial dataset (See Section A.4). Optional argument `attribute_name` applies here as with files

Exactly one of the arguments `numeric`, `quantity`, `function`, `geospatial_data` and `filename` must be present.

`set_quantity()` will look at the type of the `numeric` and determine what action to take.

Values can also be set using the appropriate keyword arguments. If `x` is a function, for example, `domain.set_quantity(name, x)`, `domain.set_quantity(name, numeric=x)`, and `domain.set_quantity(name, function=x)` are all equivalent.

Other optional arguments are:

- `indices` which is a list of ids of triangles to which `set_quantity()` should apply its assignment of values.
- `location` determines which part of the triangles to assign to. Options are 'vertices' (the default), 'edges', 'unique vertices', and 'centroids'. If 'vertices' is used, edge and centroid values are automatically computed as the appropriate averages. This option ensures continuity of the surface. If, on the other hand, 'centroids' is used, vertex and edge values will be set to the same value effectively creating a piecewise constant surface with possible discontinuities at the edges.

ANUGA provides a number of predefined initial conditions to be used with `set_quantity()`. See for example callable object `slump_tsunami` below.

```
<domain>.add_quantity(numeric=None, quantity=None, function=None, geospatial_data=None, file-
    name=None, attribute_name=None, alpha=None, location='vertices', poly-
    gon=None, indices=None, smooth=False, verbose=False, use_cache=False)
```

Module: `abstract_2d_finite_volumes.domain`

(passes off to `abstract_2d_finite_volumes.domain.set_quantity()`)

This function is used to *add* values to individual quantities for a domain. It has the same syntax as `<domain>.set_quantity(name, x)`.

A typical use of this function is to add structures to an existing elevation model:

```
# Create digital elevation model from points file
domain.set_quantity('elevation', filename=
    'elevation_file.pts', verbose=True)

# Add buildings from file
building_polygons, building_heights =
    anuga.load_csv_as_building_polygons(building_file)

B = []
for key in building_polygons:
    poly = building_polygons[key]
    elev = building_heights[key]
    B.append((poly, elev))

domain.add_quantity('elevation', Polygon_function(B, default=0.0))
```

```
<domain>.set_region(tag, quantity, X, location='vertices')
```

Module: `abstract_2d_finite_volumes.domain`

(see also `abstract_2d_finite_volumes.quantity.set_values`)

This function is used to assign values to individual quantities given a regional tag. It is similar to `set_quantity()`.

For example, if in the mesh-generator a regional tag of 'ditch' was used, `set_region()` can be used to set elevation of this region to -10m. `X` is the constant or function to be applied to the `quantity`, over the tagged region. `location` describes how the values will be applied. Options are 'vertices' (the default), 'edges', 'unique vertices', and 'centroids'.

This method can also be called with a list of region objects. This is useful for adding quantities in regions, and having one quantity value based on another quantity. See `abstract_2d_finite_volumes.region` for more details.

```
<callable_object> =slump_tsunami(length, depth, slope, width=None, thickness=None, ra-
    dius=None, dphi=0.48, x0=0.0, y0=0.0, alpha=0.0, grav-
    ity=9.8, gamma=1.85, massco=1, dragco=1, frictionco=0,
    dx=None, kappa=3.0, kappad=1.0, zsmall=0.01, scale=None,
    domain=None, verbose=False)
```

Module: `shallow_water.smf`

This function returns a callable object representing an initial water displacement generated by a submarine sediment failure. These failures can take the form of a submarine slump or slide. In the case of a slide, use `slide_tsunami` instead.

`length` is the length of the slide or slump.

`depth` is the water depth to the centre of the sediment mass.

`slope` is the bathymetric slope.

Other slump or slide parameters can be included if they are known.

```
<callable_object> = file_function(filename, domain=None, quantities=None, interpola-
    tion_points=None, time_thinning=1, time_limit=None,
    verbose=False, output_centroids=False, use_cache=False,
    boundary_polygon=None)
```

Module: `abstract_2d_finite_volumes.util`

Reads the time history of spatial data for specified interpolation points from a NetCDF file and returns a callable object. Values returned from the `<callable_object>` are interpolated values based on the input file using the underlying `interpolation_function`.

`filename` is the name of the input file. This would be either an SWW, TMS or STS file.

`quantities` is either the name of a single quantity to be interpolated or a list of such quantity names. In the second case, the resulting function will return a tuple of values – one for each quantity. If the NetCDF file uses names other than 'stage', 'xmomentum', and 'ymomentum' the name(s) appearing in the file must be explicitly stated using the `quantities` keyword. This is for example be the case if a 'tms' file is used to specify time dependent precipitation. In this case the keyword might be called 'rainfall' both in the call to `file_function` and in the 'tms' file.

`interpolation_points` is a list of absolute coordinates or a geospatial object for points at which values are sought.

`boundary_polygon` is a list of coordinates specifying the vertices of the boundary. This must be the same polygon as used when calling `create_mesh_from_regions()`. This argument can only be used when reading boundary data from an STS format file.

`output_centroids` set to true to sample at the centre of the triangle containing the point. This may be useful for debugging. (new in 1.2)

The model time stored within the file function can be accessed using the method `<callable_object>.get_time()`

The underlying algorithm used is as follows:

Given a time series (i.e. a series of values associated with different times), whose values are either just numbers, a set of numbers defined at the vertices of a triangular mesh (such as those stored in SWW files) or a set of numbers defined at a number of points on the boundary (such as those stored in STS files), `Interpolation_function()` is used to create a callable object that interpolates a value for an arbitrary time t within the model limits and possibly a point (x, y) within a mesh region.

The actual time series at which data is available is specified by means of an array `time` of monotonically increasing times. The quantities containing the values to be interpolated are specified in an array – or dictionary of arrays (used in conjunction with the optional argument `quantity_names`) – called `quantities`. The optional arguments `vertex_coordinates` and `triangles` represent the spatial mesh associated with the quantity arrays. If omitted the function must be created using an STS file or a TMS file.

Since, in practice, values need to be computed at specified points, the syntax allows the user to specify, once and for all, a list `interpolation_points` of points at which values are required. In this case, the function may be called using the form `<callable_object>(t, id)`, where `id` is an index for the list `interpolation_points`.

```
class <callable_object> = Interpolation_function(time, quantities, quantity_names=None,
                                                 vertex_coordinates=None, triangles=None,
                                                 interpolation_points=None,
                                                 time_thinning=1, verbose=False, gauge_neighbour_id=None)
```

Module: `fit_interpolate.interpolate`

Given a time series (i.e. a series of values associated with different times) whose values are either just numbers or a set of numbers defined at the vertices of a triangular mesh (such as those stored in SWW files), `Interpolation_function` is used to create a callable object that interpolates a value for an arbitrary time t within the model limits and possibly a point (x, y) within a mesh region.

The actual time series at which data is available is specified by means of an array `time` of monotonically increasing times. The quantities containing the values to be interpolated are specified in an array – or dictionary of arrays (used in conjunction with the optional argument `quantity_names`) – called `quantities`. The optional arguments `vertex_coordinates` and `triangles` represent the spatial mesh associated with the quantity arrays. If omitted the function created by `Interpolation_function` will be a function of `t` only.

Since, in practice, values need to be computed at specified points, the syntax allows the user to specify, once and for all, a list `interpolation_points` of points at which values are required. In this case, the function may be called using the form `f(t, id)`, where `id` is an index for the list `interpolation_points`.

Boundary Conditions

ANUGA provides a large number of predefined boundary conditions, represented by objects such as `Reflective_boundary(domain)` and `Dirichlet_boundary([0.2, 0.0, 0.0])`, described in the examples in Chapter 2. Alternatively, you may prefer to "roll your own", following the method explained in Section 9.2.

These boundary objects may be used with the function `set_boundary` described below to assign boundary conditions according to the tags used to label boundary segments.

<domain>.set_boundary(boundary_map)

Module: `abstract_2d_finite_volumes.domain`

This function allows you to assign a boundary object (corresponding to a pre-defined or user-specified boundary condition) to every boundary segment that has been assigned a particular tag.

`boundary_map` is a dictionary of boundary objects keyed by symbolic tags.

<domain>.get_boundary_tags()

Module: `abstract_2d_finite_volumes.domain`

Returns a list of the available boundary tags.

9.1 Predefined boundary conditions

class Reflective_boundary(domain=None)

Module: `shallow_water`

Reflective boundary returns same conserved quantities as those present in the neighbouring volume but reflected.

This class is specific to the shallow water equation as it works with the momentum quantities assumed to be the second and third conserved quantities.

class Transmissive_boundary(domain=None)

Module: `abstract_2d_finite_volumes.generic_boundary_conditions`

A transmissive boundary returns the same conserved quantities as those present in the neighbouring volume.

The underlying domain must be specified when the boundary is instantiated.

class Dirichlet_boundary(conserved_quantities=None)

Module: `abstract_2d_finite_volumes.generic_boundary_conditions`

A Dirichlet boundary returns constant values for each of conserved quantities. In the example of `Dirichlet_boundary([0.2, 0.0, 0.0])`, the stage value at the boundary is 0.2 and the `xmomentum` and `ymomentum` at the boundary are set to 0.0. The list must contain a value for each conserved quantity.

class Time_boundary(domain=None, function=None, default_boundary=None, verbose=False)

Module: `abstract_2d_finite_volumes.generic_boundary_conditions`

A time-dependent boundary returns values for the conserved quantities as a function of time `function(t)`. The user must specify the domain to get access to the model time.

Optional argument `default_boundary` can be used to specify another boundary object to be used in case model time exceeds the time available in the file used by `File_boundary`. The `default_boundary` could be a simple Dirichlet condition or even another `Time_boundary` typically using data pertaining to another time interval.

class `File_boundary` (`filename, domain, time_thinning=1, time_limit=None, boundary_polygon=None, default_boundary=None, use_cache=False, verbose=False`)
Module: `abstract_2d_finite_volumes.generic_boundary_conditions`

This method may be used if the user wishes to apply a SWW file, STS file or a time series file (TMS) to a boundary segment or segments. The boundary values are obtained from a file and interpolated to the appropriate segments for each conserved quantity.

Optional argument `default_boundary` can be used to specify another boundary object to be used in case model time exceeds the time available in the file used by `File_boundary`. The `default_boundary` could be a simple Dirichlet condition or even another `File_boundary` typically using data pertaining to another time interval.

class `Field_boundary` (`filename, domain, mean_stage=0.0, time_thinning=1, time_limit=None, boundary_polygon=None, default_boundary=None, use_cache=False, verbose=False`)
Module: `shallow_water.shallow_water_domain`

This method works in the same way as `File_boundary` except that it allows for the value of stage to be offset by a constant specified in the keyword argument `mean_stage`.

This functionality allows for models to be run for a range of tides using the same boundary information (from STS, SWW or TMS files). The tidal value for each run would then be specified in the keyword argument `mean_stage`. If `mean_stage = 0.0`, `Field_boundary` and `File_boundary` behave identically.

Note that if the optional argument `default_boundary` is specified its stage value will be adjusted by `mean_stage` just like the values obtained from the file.

See `File_boundary` for further details.

class `Transmissive_momentum_set_stage_boundary` (`domain=None, function=None`)
Module: `shallow_water.shallow_water_domain`

This boundary returns the same momentum conserved quantities as those present in its neighbour volume but sets stage as in a `Time_boundary`. The underlying domain must be specified when boundary is instantiated.

This type of boundary is useful when stage is known at the boundary as a function of time, but momenta (or speeds) aren't.

This class is specific to the shallow water equation as it works with the momentum quantities assumed to be the second and third conserved quantities.

In some circumstances, this boundary condition may cause numerical instabilities for similar reasons as what has been observed with the simple fully transmissive boundary condition (see Page 59). This could for example be the case if a planar wave is reflected out through this boundary.

class `Transmissive_stage_zero_momentum_boundary` (`domain=None`)
Module: `shallow_water`

This boundary returns same stage conserved quantities as those present in its neighbour volume but sets momentum to zero. The underlying domain must be specified when boundary is instantiated

This type of boundary is useful when stage is known at the boundary as a function of time, but momentum should be set to zero. This is for example the case where a boundary is needed in the ocean on the two sides perpendicular to the coast to maintain the wave height of the incoming wave.

This class is specific to the shallow water equation as it works with the momentum quantities assumed to be the second and third conserved quantities.

This boundary condition should not cause the numerical instabilities seen with the transmissive momentum boundary conditions (see Page 59 and Page 60).

class `Dirichlet_discharge_boundary` (`domain=None, stage0=None, wh0=None`)
Module: `shallow_water.shallow_water_domain`

`stage0` sets the stage.

`wh0` sets momentum in the inward normal direction.

9.2 User-defined boundary conditions

All boundary classes must inherit from the generic boundary class `Boundary` and have a method called `evaluate()` which must take as inputs `self`, `vol_id` and `edge_id` where `self` refers to the object itself and `vol_id` and `edge_id` are integers referring to particular edges. The method must return a list of three floating point numbers representing values for `stage`, `xmomentum` and `ymomentum`, respectively.

The constructor of a particular boundary class may be used to specify particular values or flags to be used by the `evaluate()` method. Please refer to the source code for the existing boundary conditions for examples of how to implement boundary conditions.

Operators and Structures

A way to effect the evolution is via fractional step operators. The idea is that at each inner timestep we can use an operator to change the centroid values of quantities such as the stage and the xmomentum and the ymomentum. T

If you are using one of the older flow algorithms then the elevation can also be changed but more care needs to be applied as the elevation quantity needs to remain continuous. The moral, play with elevation at your peril if using the old algorithms.

The newer algorithms (check that you are using discontinuous elevation with the domain member function `<domain>.get_using_discontinuous_elevation()`)

Currently predefined operators:

class Set_elevation_operator (*domain, elevation=None, indices=None, polygon=None, center=None, radius=None, description = None, label = None, logging = False, verbose = False*)

Module: `anuga.operators.set_elevation_operator`

Set the elevation in a region (careful to maintain continuity of elevation)

`domain` is the domain being evolved.

`elevation` a function of *t* or *x, y* or *x, y, t* written to take numpy arrays *x* and *y*. *t* is a scalar.

`indices` is a list of triangle indices where the function `elevation` will be applied.

`polygon` is a polygon. The function `elevation` will be applied to triangles with in the polygon.

`center` is the center of a circle where the function `elevation` will be applied. (`radius` needs to be set).

`radius` is the radius of a circle where the function `elevation` will be applied. (`center` needs to be set).

`description` is a description of this operator.

`label` is the label used when reporting on the operator.

`logging` is the boolean flag to set logging to a file.

`verbose` is the boolean flag to setup extended output from the operator.

Example:

```
op0 = anuga.Set_elevation_operator(domain, elevation = lambda t : 0.01*t)
```

would setup an operator which raises the elevation over the whole domain 1 cm per second.

While

```
P = [[x0, y0], [x1, y0], [x1, y1], [x0, y1]]
```

```
op0 = anuga.Set_elevation_operator(domain, \
elevation = lambda t : 0.01*t, polygon=P)
```

would setup an operator which raises the elevation over the polygon P 1 cm per second.

10.1 Culvert operators

A culvert is a structure that allows water to flow under a road, rail road, trail, or similar obstruction that would otherwise build up behind the embankment. But culverts are also used to drain basins, dams or lakes. **ANUGA** now has the ability to model a culvert by transferring flows from one point in the 2D domain to another. It should be noted that flow from the culvert inlet to the outlet occurs instantaneously with no lagging of the flows.

Only box culverts and pipe culverts can be modelled at present using the Boyd Method (Generalised head-discharge equations for culverts, Proceedings of the fourth national local government engineering conference pp. 161-165, Perth, August, 1987).

Usage

In **ANUGA**, a culvert can be modelled as two points (an inlet point and an outlet point) or along two lines (and inlet line and an outlet line) to account for skew.

The user needs to nominate the location of the culvert inlet and outlet, any culvert losses (i.e. inlet, outlet, bends etc) and the culvert dimensions (in metres).

The user can also model the effects of momentum jetting at the outlet of the culvert and also account for velocity head of the flow at the inlet for more realistic results.

Culvert hydraulics information can be logged by switching logging on or off.

To use the Boyd Method in **ANUGA**, the user can just copy the code below into their script. So if your model run has five pipe culverts, copy the pipe culvert routine five times into your run script and fill in the details for each of your five culverts.

```
#-----
# Box Culvert modelled along two lines
#-----
losses = {'inlet':0.5, 'outlet':1.0, 'bend':0.0, 'grate':0.0, 'pier': 0.0, 'other': 0.0}
el0 = numpy.array([[297750.2,6181379.1], [297753.5,6181380.9]])
el1 = numpy.array([[297731.8,6181416.4], [297735.1,6181418.3]])
culvert = anuga.Boyd_box_operator(domain,
    losses=losses,
    width=1.5,
    height=1.5,
    end_points=[ep0, ep1],
    use_momentum_jet=True, #False to switch it off
    use_velocity_head=True, #False to switch it off
    manning=0.013, #culvert manning's n
    logging=True, #False to switch it off
    label='culvert_log_file',
    verbose=False)

#-----
# Pipe Culvert modelled with a single point
#-----
losses = {'inlet':0.5, 'outlet':1.0, 'bend':0.0, 'grate':0.0, 'pier': 0.0, 'other': 0.0}
ep0 = numpy.array([296653.0,6180014.9])
ep1 = numpy.array([296642.5,6180036.3])
culvert = anuga.Boyd_pipe_operator(domain,
    losses=losses,
    diameter=1.5,
    end_points=[ep0, ep1],
    use_momentum_jet=True, #False to switch it off
    use_velocity_head=True, #False to switch it off
    manning=0.013, #culvert manning's n
    logging=True, #False to switch it off
    label='culvert_log_file',
    verbose=False)
```

10.2 User developed operators

Suppose we want to add water to our domain at a steady rate. we can create a class based on the `Operator` class which has a `__call__` function to do the required update to the centroid values of the stage variable.

Here is some code to do this:

```
from anuga import Operator

class My_operator(Operator):
    """
    An operator which adds water to the domain at a given rate (m/sec)
    """

    def __init__(self,
                 domain,
                 rate=0.0,
                 description = None,
                 label = None,
                 logging = False,
                 verbose = False):
        """Initialize the user defined operator
        """
        Operator.__init__(self, domain, description, label, logging, verbose)

        self.rate = rate

    def __call__(self):
        """
        Apply rate to all triangles
        """

        timestep = self.domain.get_timestep()

        self.stage_c[:] = self.stage_c[:] + self.rate*timestep
```

And then in your script you would asosiated `My_operator` with the domain with a call

```
My_operator(domain,rate=1.0)
```


Querying SWW model output files

After a model has been run, it is often useful to extract various information from the SWW output file (see Section 15.3). This is typically more convenient than using the diagnostics described in Section 7.3 which rely on the model running – something that can be very time consuming. The SWW files are easy and quick to read and offer information about the model results such as runup heights, time histories of selected quantities, flow through cross sections and much more.

```
elevation = get_maximum_inundation_elevation(filename,      polygon=None,      time_inter-  
val=None, verbose=False)
```

Module: shallow_water.data_manager

Return the highest elevation where depth is positive ($h > 0$).

filename is the path to a NetCDF SWW file containing ANUGA model output.

polygon restricts the query to the points that lie within the polygon.

time_interval restricts the query to within the time interval.

Example to find maximum runup elevation:

```
max_runup = get_maximum_inundation_elevation(filename)
```

If no inundation is found (within the polygon and time_interval, if specified) the return value is None. This indicates "No Runup" or "Everything is dry".

```
(x, y) = get_maximum_inundation_location(filename, polygon=None, time_interval=None, ver-  
bose=False)
```

Module: shallow_water.data_manager

Return location (x,y) of the highest elevation where depth is positive ($h > 0$).

filename is the path to a NetCDF SWW file containing ANUGA model output.

polygon restricts the query to the points that lie within the polygon.

time_interval restricts the query to within the time interval.

Example to find maximum runup location:

```
max_runup_location = get_maximum_inundation_location(filename)
```

If no inundation is found (within the polygon and time_interval, if specified) the return value is None. This indicates "No Runup" or "Everything is dry".

```
sww2timeseries(swwfiles, gauge_filename, production_dirs, report=None, reportname=None, plot_quan-  
tity=None, generate_fig=False, surface=None, time_min=None, time_max=None, output_-  
centroids=False, time_thinning=1, time_unit=None, title_on=None, use_cache=False, ver-  
bose=False)
```

Module: abstract_2d_finite_volumes.util

Read a set of SWW files and plot the time series for the prescribed quantities at defined gauge locations and prescribed time range.

swwfiles is a dictionary of SWW files with keys of label_id.

gauge_filename is the path to a file containing gauge data.

THIS NEEDS MORE WORK. WORK ON FUNCTION __DOC__ STRING, IF NOTHING ELSE!

```
(time, Q) = get_flow_through_cross_section(filename, polyline, verbose=False)
```

Module: shallow_water.data_manager

Obtain flow (m^3/s) perpendicular to specified cross section.

filename is the path to the SWW file.

output_centroids set to true to sample at the centre of the triangle containing the point. This may be useful for debugging. (new in 1.2)

polyline is the representation of the desired cross section – it may contain multiple sections allowing for complex shapes. Assumes absolute UTM coordinates.

Returns a tuple time, Q where:

time is all the stored times in the SWW file.

Q is a hydrograph of total flow across the given segments for all stored times.

The normal flow is computed for each triangle intersected by the polyline and added up. If multiple segments at different angles are specified the normal flows may partially cancel each other.

Example to find flow through cross section:

```
cross_section = [[x, 0], [x, width]]  
time, Q = get_flow_through_cross_section(filename, cross_section)
```

Parallel Simulation

The examples from the previous chapters were run just using one processor. As you will have noticed, the simulations can take a long time to run, especially if you are using a fine mesh. Indeed as you halve the spacing of the mesh, the number of triangles goes up by a factor of 4 and the timestep halves, so generally halving the spacing of the mesh increases the run time by approximately a factor of 8.

One way to alleviate this is to run your simulation in parallel and use more processors to spread the computational cost.

ANUGA has the option of running in parallel using MPI. A description of the method used to parallelize **ANUGA** is given in section 16.4.

Such jobs are run using the command

```
mpirun -np n python runscript.py
```

where *n* is the total number of processors being used for the parallel run.

Essentially we can expect speedups comparable to the number of cores available. This is measured via scalability. Our current experiments have demonstrated a scalability of 70% or above when the number of processors are chosen so that the local partitioned meshes contain around 2000 triangles.

For instance, suppose we have a problem with a mesh of 500,000 triangles, and use 250 processors. Then the mesh will be partitioned into sub meshes of approximately 2000 triangles. We would expect 70% scalability, and so expect a speedup of $250 \times 0.7 = 175$.

12.1 The Code

Here is the code for ‘runParallelCairns.py’ which is found in the ‘examples/cairns’ directory:

```
"""Script for running a tsunami inundation scenario for Cairns, QLD Australia.

Source data such as elevation and boundary data is assumed to be available in
directories specified by project.py
The output swv file is stored in directory named after the scenario, i.e
slide or fixed_wave.

The scenario is defined by a triangular mesh created from project.polygon,
the elevation data and a tsunami wave generated by a submarine mass failure.

Geoscience Australia, 2004-present
"""

#-----
# Import necessary modules
#-----
# Standard modules
import os
```

```

import time
import sys

# Related major packages
import anuga

# Application specific imports
import project           # Definition of file names and polygons

# The parallel interface
from anuga import distribute, myid, numprocs, finalize, barrier

args = anuga.get_args()
alg = args.alg
verbose = args.verbose

#-----
# Do the domain creation on processor 0
#-----
if myid == 0:

    #-----
    # Preparation of topographic data
    # Convert ASC 2 DEM 2 PTS using source data and store result in source data
    #-----
    # Unzip asc from zip file
    import zipfile as zf
    if project.verbose: print 'Reading ASC from cairns.zip'
    zf.ZipFile(project.name_stem+'.zip').extract(project.name_stem+'.asc')

    # Create DEM from asc data
    anuga.asc2dem(project.name_stem+'.asc', use_cache=project.cache,
                  verbose=project.verbose)

    # Create pts file for onshore DEM
    anuga.dem2pts(project.name_stem+'.dem', use_cache=project.cache,
                  verbose=project.verbose)

    #-----
    # Create the triangular mesh and domain based on
    # overall clipping polygon with a tagged
    # boundary and interior regions as defined in project.py
    #-----
    domain = anuga.create_domain_from_regions(project.bounding_polygon,
                                              boundary_tags={'top': [0],
                                                             'ocean_east': [1],
                                                             'bottom': [2],
                                                             'onshore': [3]},
                                              maximum_triangle_area=project.default_res,
                                              mesh_filename=project.meshname,
                                              interior_regions=project.interior_regions,
                                              use_cache=project.cache,
                                              verbose=project.verbose)

    # Print some stats about mesh and domain
    print 'Number of triangles = ', len(domain)
    print 'The extent is ', domain.get_extent()
    print domain.statistics()

    #-----
    # Setup parameters of computational domain
    #-----

```

```

domain.set_name('cairns_' + project.scenario) # Name of sww file
domain.set_datadir('.')                      # Store sww output here
domain.set_minimum_storable_height(0.01)       # Store only depth > 1cm
domain.set_flow_algorithm(alg)

#-----
# Setup initial conditions
#-----
tide = project.tide
domain.set_quantity('stage', project.tide)
domain.set_quantity('friction', 0.0)

domain.set_quantity('elevation',
                    filename=project.name_stem + '.pts',
                    use_cache=project.cache,
                    verbose=project.verbose,
                    alpha=0.1)

else:
    domain = None

#-----
# Now produce parallel domain
#-----
domain = distribute(domain, verbose=project.verbose)

domain.set_store_vertices_uniquely(False)

#-----
# Setup information for slide scenario (to be applied 1 min into simulation
#-----
if project.scenario == 'slide':
    # Function for submarine slide
    tsunami_source = anuga.slide_tsunami(length=35000.0,
                                            depth=project.slide_depth,
                                            slope=6.0,
                                            thickness=500.0,
                                            x0=project.slide_origin[0],
                                            y0=project.slide_origin[1],
                                            alpha=0.0,
                                            domain=domain,
                                            verbose=True)

#-----
# Setup boundary conditions
#-----
print 'Available boundary tags', domain.get_boundary_tags()

Bd = anuga.Dirichlet_boundary([project.tide, 0, 0]) # Mean water level
Bs = anuga.Transmissive_stage_zero_momentum_boundary(domain) # Neutral boundary

if project.scenario == 'fixed_wave':
    # Huge 50m wave starting after 60 seconds and lasting 1 hour.
    Bw = anuga.Transmissive_n_momentum_zero_t_momentum_set_stage_boundary(
        domain=domain,
        function=lambda t: [(60<t<3660)*10.0, 0, 0])

```

```

domain.set_boundary({'ocean_east': Bw,
                     'bottom': Bs,
                     'onshore': Bd,
                     'top': Bs})

if project.scenario == 'slide':
    # Boundary conditions for slide scenario
    domain.set_boundary({'ocean_east': Bd,
                         'bottom': Bd,
                         'onshore': Bd,
                         'top': Bd})

#-----
# Evolve system through time
#-----
import time
t0 = time.time()

from numpy import allclose

if project.scenario == 'slide':
    # Initial run without any event
    for t in domain.evolve(yieldstep=10, finaltime=60):
        if myid == 0:
            print domain.timestepping_statistics()
            #print domain.boundary_statistics(tags='ocean_east')

    # Add slide to water surface
    if allclose(t, 60):
        domain.add_quantity('stage', tsunami_source)

    # Continue propagating wave
    for t in domain.evolve(yieldstep=10, finaltime=5000,
                           skip_initial_step=True):
        if myid == 0:
            print domain.timestepping_statistics()
            #print domain.boundary_statistics(tags='ocean_east')

if project.scenario == 'fixed_wave':
    # Save every two mins leading up to wave approaching land
    for t in domain.evolve(yieldstep=2*60, finaltime=5000):
        if myid == 0:
            print domain.timestepping_statistics()
            #print domain.boundary_statistics(tags='ocean_east')

    # Save every 30 secs as wave starts inundating ashore
    for t in domain.evolve(yieldstep=60*0.5, finaltime=10000,
                           skip_initial_step=True):
        if myid == 0:
            print domain.timestepping_statistics()
            #print domain.boundary_statistics(tags='ocean_east')

domain.sww_merge(delete_old=True)

if myid == 0:
    print 'That took %.2f seconds' %(time.time()-t0)

finalize()

```

12.2 Structure of the Code

The code is very similar to the sequential code. The same procedures are used to setup the domain, setup the initial conditions, boundary conditions and evolve.

We first import a few procedures need for the parallel code.

```
from anuga import distribute, myid, numprocs, finalize, barrier
```

`myid` returns the id of the current processor running the code.

`numprocs` returns the total number of processors involved in this parallel jobs (the `n` in the original `mpirun` command).

`finalize` is called at the end of a script to close down the parallel job.

`distribute` is used to partition and setup the parallel domains.

`barrier` is a command for processors to wait as all the other processor to catchup to this point.

The creation of the domain is only done on processor 0. Hence we have the structure:

```
#-----
# Do the domain creation on processor 0
#-----
if myid == 0:
    ...
    domain = ...

else:
    domain = None
```

We only need to create the original domain on one processor, otherwise we will have multiple copies of the full domain (which will easily eat up our memory).

Once we have our codedomain setup we partition it and send the partitions to each of the other processors, via the command

```
#-----
# Now produce parallel domain
#-----
domain = distribute(domain)
```

This takes the domain on processor 0 and distributes that domain to each of the processors, (it overwrites the full domain on processor 0). From this point of the code, there is a different domain on each processor, with each domain communicating with the other domains to ensure required transfer of information to allow flow over the combined domains.

It is important to apply the boundary conditions after the `distribute`

As the partitioned domain evolve, they will store their data to individual `sww` files, named as `domain_name_-Pn_m.sww`, where `n` is the total number of processors being used and `m` is the specific processor id.

We have a procedure to merge these individual `sww` files via the command

```
domain.sww_merge()
```

And we close down the parallel job by issuing the command

```
finalize()
```


Checkpointing

When running large and long running simulations, it is useful to provide a mechanism to allow the simulation to be restarted if it is interrupted mid simulation. Maybe there is a power cut, or when using batch queues there may be a time restriction on the length of any one running job. Then the use of checkpointing becomes useful.

The idea is that at regular intervals the system makes a copy of the current state of the computation. Then if there is an interruption the computation can be started from the last checkpoint time and not original start time.

13.1 The Code

Here is the code for ‘runCheckpoint.py’:

```
"""Run parallel shallow water domain.

with check pointing
"""

#-----
# Import necessary modules
#-----

import os
import sys
import time
import numpy as num

#-----
# ANUGA Modules
#-----
from anuga import Reflective_boundary
from anuga import Transmissive_n_momentum_zero_t_momentum_set_stage_boundary

from anuga import create_domain_from_file

from anuga import distribute, myid, numprocs, finalize, barrier

#-----
# Setup parameters
#-----

verbose = False
domain_name = 'checkpoint'
checkpoint_dir = 'CHECKPOINTS'
finaltime = 1000.0
```

```

useCheckpointing = True

mesh_filename = "merimbula_10785_1.tsh"
x0 = 756000.0
x1 = 756500.0
yieldstep = 50

#-----
# Setup procedures
#-----
class Set_Stage:
    """Set an initial condition with constant water height, for x0<x<x1
    """
    def __init__(self, x0=0.25, x1=0.5, h=1.0):
        self.x0 = x0
        self.x1 = x1
        self.h = h

    def __call__(self, x, y):
        return self.h*((x>self.x0)&(x<self.x1))+1.0

class Set_Elevation:
    """Set an elevation
    """
    def __init__(self, h=1.0):
        self.x0 = x0
        self.x1 = x1
        self.h = h

    def __call__(self, x, y):
        return x/self.h

def wave(t):
    from math import sin
    return sin(t/200)

#-----
# Use a try statement to read in previous checkpoint file and if not possible
# just go ahead as normal and produce domain as usual.
#
# Though in the part of the code where you create the domain as normal,
# remember to turn on checkpointing via
# domain.set_checkpointing(checkpoint_time = 5) (see code below)
#-----
try:

    from anuga import load_checkpoint_file

    domain = load_checkpoint_file(domain_name = domain_name,
                                   checkpoint_dir = checkpoint_dir)

except:
    #
    # Normal Setup of Domain on processor 0
    #
    if myid == 0:
        domain = create_domain_from_file(mesh_filename)
        domain.set_quantity('stage', Set_Stage(x0, x1, 1.0))

```

```

domain.set_name(domain_name)
domain.set_store(True)

    domain.set_store_vertices_smoothly(False)
else:
    domain = None

#-----
# Distribute sequential domain on processor 0 to other processors
#-----

if myid == 0 and verbose: print 'DISTRIBUTING DOMAIN'
domain = distribute(domain, verbose=verbose)

#-----
# On all processors, setup evolve parameters for domains on all processors
# (all called "domain"
#-----

domain.set_flow_algorithm('DE0')
domain.set_store_centroids()

domain.set_quantities_to_be_stored({'elevation':1,
                                    'friction':1,
                                    'stage':2,
                                    'xmomentum':2,
                                    'ymomentum':2})

#-----
# Setup boundary conditions
# This must currently happen *after* domain has been distributed
#-----
Br = Reflective_boundary(domain)      # Solid reflective wall

Bts = Transmissive_n_momentum_zero_t_momentum_set_stage_boundary(domain, wave)

domain.set_boundary({'outflow' :Br, 'inflow' :Br, 'inner' :Br,
                     'exterior' :Br, 'open' :Bts})

#-----
# Turn on checkpointing every 5 sec (just for testing, more reasonable to
# set to 15 minutes = 15*60 sec
#-----
if useCheckpointing:
    domain.set_checkpointing(checkpoint_time = 5)

#-----
# Evolution
#-----
if myid == 0 and verbose: print 'EVOLVE'

barrier()
import time
t0 = time.time()

for t in domain.evolve(yieldstep = yieldstep, finaltime = finaltime):
    if myid == 0: domain.write_time()

```

```

barrier()

for p in range(numprocs):
    if myid == p:
        print 'Processor %g ' %myid
        print 'That took %.2f seconds' %(time.time()-t0)
        print 'Communication time %.2f seconds' %domain.communication_time
        print 'Reduction Communication time %.2f seconds' \
              %domain.communication_reduce_time
        print 'Broadcast time %.2f seconds' %domain.communication_broadcast_time
    else:
        pass

    barrier()

#-----
# Merge the individual sww files into one file
# But don't delete the sub domain sww files
#-----
domain.sww_merge()

finalize()

```

13.2 Structure of the Code

As usual the code needs to import the required modules, and setup parameters and in this case procedures for setting up the stage and elevation.

Then we use a `try: except:` statement, where we try to open any appropriate checkpoint files, and if not successful, create and distribute a domain as usual. In the creation of the domain, we setup checkpointing just before we start the evolve loop.

```

try:
    from anuga import load_checkpoint_file

    domain = load_checkpoint_file(domain_name = domain_name,
                                  checkpoint_dir = checkpoint_dir)
except:
    # create the domain as usual

```

The `load_checkpoint_file` needs to know where to look for the checkpoint files (by default the current directory) and the domain name (default “domain”).

When the domain is originally created, we need to setup checkpointing via the command:

```

if useCheckpointing:
    domain.set_checkpointing(checkpoint_time = 5)

```

Here we are setting the wall time between saving of checkpoint files to 5 sec (this is just for testing). Normally we would set the checkpointing to something large, say 15 minutes for a run of multiple hours.

ANUGA Public Interface

This chapter gives an overview of the features of **ANUGA** available to the user at the public interface. These are grouped under the following headings, which correspond to the outline of the examples described in Chapter 2:

- Establishing the Mesh: Section 6
- Initialising the Domain: Section 7
- Initial Conditions: Section 8
- Boundary Conditions: Section 9
- Operators: Section 10
- Evolution: Section 7.2

14.1 Documentation

The listings here are intended merely to give the reader an idea of what each feature is and how it can be used – they do not give full specifications; for these the reader may consult the programmer’s guide. The code for every function or class contains a documentation string, or ‘docstring’, that specifies the precise syntax for its use. This appears immediately after the line introducing the code, between two sets of triple quotes.

Python has a handy tool that lets you easily navigate this documentation, called `pydoc`. In Linux, it runs as a server, which serves the documentation up to your web browser:

1. Open a terminal at your `anuga` folder 2. Start the python documentation server with `pydoc -p 6767` 3. Open a browser and type in `http://localhost:6767/`

Now you have a real-time programmers’ guide for **ANUGA**, and an easy way to find the functions you are interested in. Pydoctor and other Python doc generators look nicer and have graphs, etc, but `pydoc` works straight out of the box.

14.2 Public vs Private Interface

To simplify the process of writing scripts, **ANUGA** has a public API which packages up the commonly-used functionality of **ANUGA** in the one place. To use it, simply import the `anuga` module like so:

```
import anuga
```

You can now use the public API like so. Note the `anuga.` prefix:

```
anuga.sww2dem('in.sww', 'out.asc')
```

If you wish to delve "under the hood" and modify the way **ANUGA** runs at a more advanced level, you need to specify the full location of the module like so:

```
from anuga.fit_interpolate.interpolate import Interpolation_interface
```

All modules are in the folder ‘anuga’ or one of its subfolders, and the location of each module is described relative to ‘anuga’. Rather than using pathnames, whose syntax depends on the operating system, we use the format adopted for importing the function or class for use in Python code. For example, suppose we wish to specify that the function `create_mesh_from_regions` is in a module called `mesh_interface` in a subfolder of `anuga` called `pmesh`. In Linux or Unix syntax, the pathname of the file containing the function, relative to ‘anuga’, would be:

```
pmesh/mesh_interface.py
```

while in Windows syntax it would be:

```
pmesh\mesh_interface.py
```

Rather than using either of these forms, in this chapter we specify the location simply as `anuga.pmesh.mesh_interface`, in keeping with the usage in the Python statement for importing the function, namely:

```
from anuga.pmesh.mesh_interface import create_mesh_from_regions
```

The following parameters are common to many functions and classes and are omitted from the descriptions given below:

- | | |
|------------------|---|
| <i>use_cache</i> | Specifies whether caching is to be used for improved performance. See Section A.1 for details on the underlying caching functionality |
| <i>verbose</i> | If <code>True</code> , provides detailed terminal output to the user |

14.3 Other

quantity = <domain>.create_quantity_from_expression(string)

Module: `abstract_2d_finite_volumes.domain`

Create a new quantity from other quantities in the domain using an arbitrary expression.

`string` is a string containing an arbitrary quantity expression.

Returns the new `Quantity` object.

Handy for creating derived quantities on-the-fly:

```
Depth = domain.create_quantity_from_expression('stage-elevation')

exp = '(xmomentum*xmomentum + ymomentum*ymomentum)**0.5'
Absolute_momentum = domain.create_quantity_from_expression(exp)
```

ANUGA File Formats

ANUGA makes use of a number of different file formats. The following table lists all these formats, which are described in more detail in the paragraphs below.

Extension	Description
.sww	NetCDF format for storing model output with mesh information $f(t, x, y)$
.sts	NetCDF format for storing model output $f(t, x, y)$ without mesh information
.tms	NetCDF format for storing time series $f(t)$
.csv/.txt	ASCII format for storing arbitrary points and associated attributes
.pts	NetCDF format for storing arbitrary points and associated attributes
.asc	ASCII format of regular DEMs as output from ArcView
.prj	Associated ArcView file giving more metadata for .asc format
.ers	ERMapper header format of regular DEMs for ArcView
.dem	NetCDF representation of regular DEM data
.tsh	ASCII format for storing meshes and associated boundary and region info
.msh	NetCDF format for storing meshes and associated boundary and region info
.nc	Native ferret NetCDF format
.geo	Houdinis ASCII geometry format (?)

The above table shows the file extensions used to identify the formats of files. However, typically, in referring to a format we capitalise the extension and omit the initial full stop – thus, we refer to ‘SWW files’ or ‘PRJ files’, not ‘sww files’ or ‘.prj files’.

15.1 Manually Created Files

- ASC, PRJ Digital elevation models (gridded)
NC Model outputs for use as boundary conditions (e.g. from MOST)

15.2 Automatically Created Files

- | | |
|--------------------------------|--|
| ASC, PRJ → DEM → PTS | Convert DEMs to native .pts file |
| NC → SWW | Convert MOST boundary files to boundary .sww |
| PTS + TSH → TSH with elevation | Least squares fit |
| TSH → SWW | Convert TSH to .sww-viewable using <code>anuga_viewer</code> |
| TSH + Boundary SWW → SWW | Simulation using ANUGA |
| Polygonal mesh outline → | TSH or MSH |

15.3 SWW, STS and TMS Formats

The SWW, STS and TMS formats are all NetCDF formats and are of key importance for **ANUGA**.

An SWW file is used for storing **ANUGA** output and therefore pertains to a set of points and a set of times at which a model is evaluated. It contains, in addition to dimension information, the following variables:

- `x` and `y`: coordinates of the points, represented as numeric arrays
- `elevation`: a numeric array storing bed-elevations
- `volumes`: a list specifying the points at the vertices of each of the triangles
- `time`: a numeric array containing times for model evaluation

The contents of an SWW file may be viewed using the `anuga` viewer `anuga_viewer`, which creates an on-screen visualisation. See section A.2 (page 98) in Appendix A for more on `anuga_viewer`.

Alternatively, there are tools, such as `ncdump`, that allow you to convert a NetCDF file into a readable format such as the Class Definition Language (CDL). The following is an excerpt from a CDL representation of the output file ‘`runup.sww`’ generated from running the simple example ‘`runup.py`’ of Chapter 2:

```
netcdf channel1 {  
dimensions:  
    number_of_volumes = 200 ;  
    number_of_triangle_vertices = 116 ;  
    number_of_vertices = 3 ;  
    numbers_in_range = 2 ;  
    number_of_points = 116 ;  
    number_of_timesteps = UNLIMITED ; // (201 currently)  
variables:  
    float x(number_of_points) ;  
    float y(number_of_points) ;  
    int volumes(number_of_volumes, number_of_vertices) ;  
    float elevation(number_of_points) ;  
    float elevation_range(numbers_in_range) ;  
    float friction(number_of_points) ;  
    float friction_range(numbers_in_range) ;  
    float xmomentum(number_of_timesteps, number_of_points) ;  
    float xmomentum_range(numbers_in_range) ;  
    float ymomentum(number_of_timesteps, number_of_points) ;  
    float ymomentum_range(numbers_in_range) ;  
    float stage(number_of_timesteps, number_of_points) ;  
    float stage_range(numbers_in_range) ;  
    double time(number_of_timesteps) ;  
  
    // global attributes:  
    :institution = "Geoscience Australia" ;  
    :description = "Output from anuga.file.sww suitable for plotting" ;  
    :smoothing = "Yes" ;  
    :vertices_are_stored_uniquely = "False" ;  
    :order = 2 ;  
    :revision_number = "9674" ;  
    :starttime = 0 ;  
    :xllcorner = 0. ;  
    :yllcorner = 0. ;  
    :zone = -1 ;  
    :false_easting = 500000 ;  
    :false_northing = 10000000 ;  
    :datum = "wgs84" ;  
    :projection = "UTM" ;  
    :units = "m" ;
```

The SWW format is used not only for output but also serves as input for functions such as `file_boundary` and `file_function`, described in Chapter 14.

An STS file is used for storing a set of points and associated times. It contains, in addition to dimension information, the following variables:

- `x` and `y`: coordinates of the points, represented as numeric arrays
- `permutation`: Original indices of the points as specified by the optional `ordering_file` (see the function `urs2sts()` in Section 15.8)
- `elevation`: a numeric array storing bed-elevations
- `time`: a numeric array containing times for model evaluation

The only difference between the STS format and the SWW format is the former does not contain a list specifying the points at the vertices of each of the triangles (`volumes`). Consequently information (arrays) stored within an STS file such as `elevation` can be accessed in exactly the same way as it would be extracted from an SWW file.

A TMS file is used to store time series data that is independent of position.

15.4 Mesh File Formats

A mesh file is a file that has a specific format suited to triangular meshes and their outlines. A mesh file can have one of two formats: it can be either a TSH file, which is an ASCII file, or an MSH file, which is a NetCDF file. A mesh file can be generated from the function `create_mesh_from_regions()` (see Section 6.1) and be used to initialise a domain.

A mesh file can define the outline of the mesh – the vertices and line segments that enclose the region in which the mesh is created – and the triangular mesh itself, which is specified by listing the triangles and their vertices, and the segments, which are those sides of the triangles that are associated with boundary conditions.

In addition, a mesh file may contain 'holes' and/or 'regions'. A hole represents an area where no mesh is to be created, while a region is a labelled area used for defining properties of a mesh, such as friction values. A hole or region is specified by a point and bounded by a number of segments that enclose that point.

A mesh file can also contain a georeference, which describes an offset to be applied to `x` and `y` values – e.g. to the vertices.

15.5 Formats for Storing Arbitrary Points and Attributes

A CSV/TXT/XYA file is used to store data representing arbitrary numerical attributes associated with a set of points.

The format for an CSV/TXT/XYA file is:

```
first line: [column names]
other lines: [x value], [y value], [attributes]
```

for example:

```
x, y, elevation, friction
0.6, 0.7, 4.9, 0.3
1.9, 2.8, 5.0, 0.3
2.7, 2.4, 5.2, 0.3
```

The delimiter is a comma. The first two columns are assumed to be `x` and `y` coordinates.

A PTS file is a NetCDF representation of the data held in an points CSV file. If the data is associated with a set of N points, then the data is stored using an $N \times 2$ numeric array of float variables for the points and an $N \times 1$ numeric array for each attribute.

15.6 ArcView Formats

Files of the three formats ASC, PRJ and ERS are all associated with data from ArcView.

An ASC file is an ASCII representation of DEM output from ArcView. It contains a header with the following format:

```
ncols          753
nrows          766
xllcorner     314036.58727982
yllcorner     6224951.2960092
cellsize       100
NODATA_value  -9999
```

The remainder of the file contains the elevation data for each grid point in the grid defined by the above information.

A PRJ file is an ArcView file used in conjunction with an ASC file to represent metadata for a DEM.

15.7 DEM Format

A DEM file in **ANUGA** is a NetCDF representation of regular DEM data.

15.8 Basic File Conversions

```
sww2dem((basename_in, basename_out=None, quantity=None, reduction=None, cellsize=10, number_of_
decimal_places=None, NODATA_value=-9999, easting_min=None, easting_max=None, northing_
min=None, northing_max=None, verbose=False, origin=None, datum='WGS84', format='ers',
block_size=None)
Module: shallow_water.data_manager
```

Takes data from an SWW file `basename_in` and converts it to DEM format (ASC or ERS) of a desired grid size `cellsize` in metres. The user can select how many decimal places the output data is represented with by using `number_of_decimal_places`, with the default being 3.

The `easting` and `northing` values are used if the user wishes to determine the output within a specified rectangular area. The `reduction` input refers to a function to reduce the quantities over all time step of the SWW file, e.g. maximum, or an index referring to a time-step to extract a time-slice of data.

```
dem2pts(basename_in, basename_out=None, easting_min=None, easting_max=None, northing_min=None,
northing_max=None, use_cache=False, verbose=False)
Module: shallow_water.data_manager
```

Takes DEM data (a NetCDF file representation of data from a regular Digital Elevation Model) and converts it to PTS format.

```
urs2sts(basename_in, basename_out=None, weights=None, verbose=False, origin=None, mean_stage=0.0,
zscale=1.0, ordering_filename=None)
Module: shallow_water.data_manager
```

Takes URS data (timeseries data in mux2 format) and converts it to STS format. The optional filename `ordering_filename` specifies the permutation of indices of points to select along with their longitudes and latitudes. This permutation will also be stored in the STS file. If absent, all points are taken and the permutation will be trivial, i.e. $0, 1, \dots, N - 1$, where N is the total number of points stored.

```
csv2building_polygons(file_name, floor_height=3)
Module: shallow_water.data_manager
```

Convert CSV files of the form:

```
easting,northing,id,floors
422664.22,870785.46,2,0
422672.48,870780.14,2,0
422668.17,870772.62,2,0
422660.35,870777.17,2,0
422664.22,870785.46,2,0
422661.30,871215.06,3,1
422667.50,871215.70,3,1
422668.30,871204.86,3,1
422662.21,871204.33,3,1
422661.30,871215.06,3,1
```

to a dictionary of polygons with `id` as key. The associated number of `floors` are converted to `m` above MSL and returned as a separate dictionary also keyed by `id`.

Optional parameter `floor_height` is the height of each building story.

These can e.g. be converted to a `Polygon_function` for use with `add_quantity` as shown on page 56.

ANUGA mathematical background

16.1 Introduction

This chapter outlines the mathematics underpinning ANUGA .

16.2 Model

The shallow water wave equations are a system of differential conservation equations which describe the flow of a thin layer of fluid over terrain. The form of the equations are:

$$\frac{\partial \mathbf{U}}{\partial t} + \frac{\partial \mathbf{E}}{\partial x} + \frac{\partial \mathbf{G}}{\partial y} = \mathbf{S}$$

where $\mathbf{U} = [h \quad uh \quad vh]^T$ is the vector of conserved quantities; water depth h , x -momentum uh and y -momentum vh . Other quantities entering the system are bed elevation z and stage (absolute water level) w , where the relation $w = z + h$ holds true at all times. The fluxes in the x and y directions, \mathbf{E} and \mathbf{G} are given by

$$\mathbf{E} = \begin{bmatrix} uh \\ u^2h + gh^2/2 \\ uvh \end{bmatrix} \text{ and } \mathbf{G} = \begin{bmatrix} vh \\ vuh \\ v^2h + gh^2/2 \end{bmatrix}$$

and the source term (which includes gravity and friction) is given by

$$\mathbf{S} = \begin{bmatrix} 0 \\ -gh(z_x + S_{fx}) \\ -gh(z_y + S_{fy}) \end{bmatrix}$$

where S_f is the bed friction. The friction term is modelled using Manning's resistance law

$$S_{fx} = \frac{u\eta^2\sqrt{u^2 + v^2}}{h^{4/3}} \text{ and } S_{fy} = \frac{v\eta^2\sqrt{u^2 + v^2}}{h^{4/3}}$$

in which η is the Manning resistance coefficient. The model does not currently include consideration of kinematic viscosity or dispersion.

As demonstrated in our papers, [ZR1999, nielsen2005] these equations and their implementation in ANUGA provide a reliable model of general flows associated with inundation such as dam breaks and tsunamis.

16.3 Finite Volume Method

We use a finite-volume method for solving the shallow water wave equations [ZR1999]. The study area is represented by a mesh of triangular cells as in Figure 16.1 in which the conserved quantities of water depth h , and horizontal momentum (uh, vh), in each volume are to be determined. The size of the triangles may be varied within the mesh to allow greater resolution in regions of particular interest.

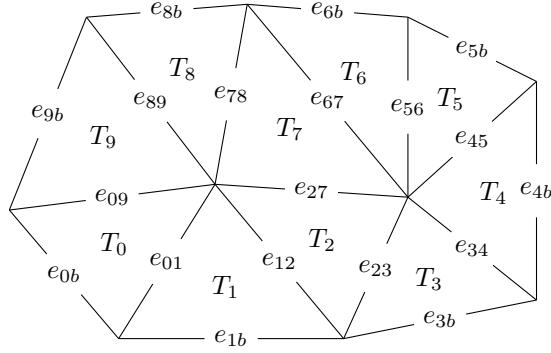


Figure 16.1: Triangular mesh used in our finite volume method. Conserved quantities h , uh and vh are associated with the centroid of each triangular cell, T_i . From the values of the conserved quantities at the centroid of a cell and its neighbouring cells, a discontinuous piecewise linear reconstruction of the conserved quantities is obtained. Fluxes are calculated across each edge e_{ij} using the reconstructed quantities.

The equations constituting the finite-volume method are obtained by integrating the differential conservation equations over each triangular cell of the mesh.

Introducing some notation we use i to refer to the i -th triangular cell T_i , and N_i to the set of indices j referring to cells neighbouring the i -th cell. Also let A_i be the area of the i -th triangular cell, e_{ij} the edge between the i -th and j -th cells, and l_{ij} the length of the edge e_{ij} . Then integrating

$$\int_{T_i} \frac{\partial \mathbf{U}}{\partial t} d\mathbf{x} + \int_{T_i} \left(\frac{\partial \mathbf{E}}{\partial x} + \frac{\partial \mathbf{G}}{\partial y} \right) d\mathbf{x} = \int_{T_i} \mathbf{S} d\mathbf{x}$$

By an application of the divergence theorem, we obtain an equation for each cell T_i which describes the rate of change of the average of the conserved quantities within each cell, in terms of the fluxes across the edges of the cells and the effect of the source terms.

$$\frac{d}{dt} \frac{1}{A_i} \int_{T_i} \mathbf{U} d\mathbf{x} + \frac{1}{A_i} \sum_{j \in N_i} \int_{e_{ij}} (\mathbf{E}, \mathbf{G}) \cdot \mathbf{n} ds = \frac{1}{A_i} \int_{T_i} \mathbf{S} d\mathbf{x}$$

So the rate equations associated with average of each cell have the form

$$\frac{d\mathbf{U}_i}{dt} + \frac{1}{A_i} \sum_{j \in N_i} \mathbf{H}_{ij} l_{ij} = \mathbf{S}_i$$

where

- \mathbf{U}_i the vector of conserved quantities averaged over the i th cell, $\frac{1}{A_i} \int_{T_i} \mathbf{U} d\mathbf{x}$,
- \mathbf{S}_i is the average of the source term associated with the i th cell, $\frac{1}{A_i} \int_{T_i} \mathbf{S} d\mathbf{x}$,
- l_{ij} is the length of the edge e_{ij} , and
- $\mathbf{H}_{ij} l_{ij}$ an approximation of the outward normal flux of material across the ij th edge, $\int_{e_{ij}} (\mathbf{E}, \mathbf{G}) \cdot \mathbf{n} ds$.

Given the cell average values \mathbf{U}_k (which are essentially centroid values), the calculation of the fluxes at the edges need an approximation of the conserved values at the edges. This is called the reconstruction process. It is common to use a second order reconstruction to produce a piece-wise linear reconstruction of the conserved quantities for all $x \in T_i$ for each cell. The slope of this function is limited to avoid artificially introduced oscillations. This function is allowed to be discontinuous across the edges of the cells. The reconstructed quantities in the i -th cell is denoted $\mathbf{U}_i(\mathbf{x})$. The values on either side of an edge are denoted

$$\mathbf{U}_{ij}^i = \lim_{\mathbf{x} \rightarrow m_{ij}} \mathbf{U}_i(\mathbf{x}) \quad \text{and} \quad \mathbf{U}_{ij}^j = \lim_{\mathbf{x} \rightarrow m_{ij}} \mathbf{U}_j(\mathbf{x}).$$

The flux in the direction \mathbf{n} , is given by

$$\mathbf{H}(\mathbf{U}) = \mathbf{E}(\mathbf{U})n_1 + \mathbf{G}(\mathbf{U})n_2.$$

The numerical scheme is obtained by approximating the flux \mathbf{H} using a numerical flux function. Godunov's method (see [Toro1992]) involves calculating the numerical flux function by exactly solving the corresponding one dimensional Riemann problem normal to the edge. A much simpler approximation is the central-upwind scheme of [KurNP2001] which is given by

$$\mathbf{H}_{ij} = \frac{a_{ij}^+ \mathbf{H}(\mathbf{U}_{ij}^i) - a_{ij}^- \mathbf{H}(\mathbf{U}_{ij}^j)}{a_{ij}^+ - a_{ij}^-} + \frac{a_{ij}^+ a_{ij}^-}{a_{ij}^+ - a_{ij}^-} [\mathbf{U}_{ij}^j - \mathbf{U}_{ij}^i]$$

with bounds on wave speeds given by

$$a_{ij}^+ = \max \left\{ u_{ij}^i + \sqrt{gh_{ij}^i}, u_{ij}^j + \sqrt{gh_{ij}^j}, 0 \right\}, \quad a_{ij}^- = \min \left\{ u_{ij}^i - \sqrt{gh_{ij}^i}, u_{ij}^j - \sqrt{gh_{ij}^j}, 0 \right\}.$$

An explicit Euler timestepping method with variable timestepping adapted to the observed CFL condition is used to approximate the semi-discrete equation. In particular

$$\mathbf{U}_i^{n+1} = \mathbf{U}_i^n - \frac{\Delta t}{A_i} \sum_{j \in N_i} \mathbf{H}_{ij} l_{ij} + \Delta t \mathbf{S}_i$$

For stability of the method, it is necessary that the timestep satisfy the Courant-Fredrichs-Levy (CFL) condition $\Delta t \leq \min_i \min_{j \in N_i} \left(\frac{r_i}{a_{ij}}, \frac{r_j}{a_{ij}} \right)$ where $a_{ij} = \max\{a_{ij}^+, -a_{ij}^-\}$ and r_i is the radius of the inscribed circle of the i -th cell.

16.4 Parallel Implementation

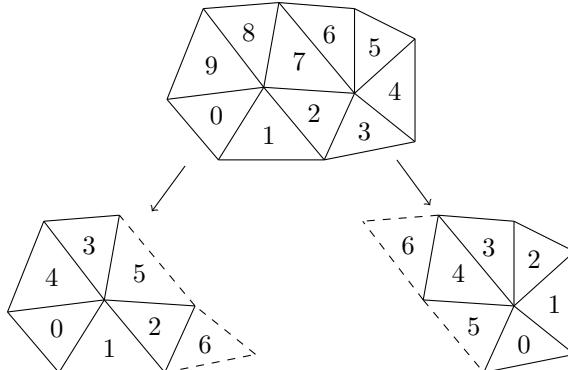


Figure 16.2: An example subpartitioning of original mesh, together with ghost triangles. The numbers show the local numbering scheme of the meshes.

Currently **ANUGA** uses a simple domain decomposition technique to parallelize the code. The first step is to subdivide the mesh into, roughly, equally sized partitions. On a rectangular mesh this may be done by a simple coordinate based dissection method, but on complicated domains a more sophisticated approach must be used. We use a **PYTHON** wrapper around the **METIS** (<http://glaros.dtc.umn.edu/gkhome/metis/metis/overview>) partitioning library. The code uses METIS to divide the mesh for parallel computation. METIS was chosen as the partitioner based on the results in the paper [KarypisK1999]. To minimize the amount of communication, it is common to add an extra layer of cells, which we call ghost cells which hold any extra information that a processor may need to complete its calculations. The ghost cell values are updated through buffered communication calls. Figure 16.2 shows a partition of a mesh into two submeshes with the extra layer of ghost cells. When partitioning the mesh we introduce new, dummy, boundary edges. These new boundary edges are tagged as standard boundary edges.

A typical timestep consists of the following computational steps:

```
compute_fluxes() # Compute H_ij across each edge
compute_forcing_terms() # Compute S_i
update_timestep() # Communication a global timestep
update_conserved_quantities()
update_ghosts() # Communicate cell values to neighbouring processors
```

The `compute_fluxes()` step is the most computationally intensive, consisting of iterating through all the cells or edges and accumulating, for each cell, the fluxes along each edge. This step itself consists of a number of calls to PYTHON routines.

There are two communications steps,

- (1) `update_timestep()` which involves a `MPI_Allreduce` to find a global timestep for the scheme based on a CFL condition,
- (2) `update_ghosts()` where at present we use the asynchronous MPI calls, where we initiate all the `MPI_Irecv` first and then the corresponding `MPI_Isend` calls are made. Finally the communication is resolved via a call to `MPI_Waitall`.

The use of these asynchronous MPI calls produced a great improvement in scalability of our code, jumping from modest results for 32 - 64 MPI processes up to 90% efficiency for larger problems with 100s to 1000s of MPI processes. There is still an opportunity to improve efficiency by overloading communication in `update_ghosts()` with computation in `compute_fluxes()` which we will investigate in future.

In Figure 16.3 we present experiments demonstrating the typical speedups for problems running from 43,200 triangles to 2,349,353 triangles. The results demonstrate super scalability for the larger problems stemming from better cache utilization for those problems based on the simple observation that the subdivided meshes can fit in the cache in those cases.

These experiments were conducted on a Fujitsu PRIMERGY cluster consisting of 36 BX920 S2 blades, each blade consisting of 2 Intel Xeon X5670 CPUs (Westmere, 6 core, 2.934 GHz) for a total of 432 cores.

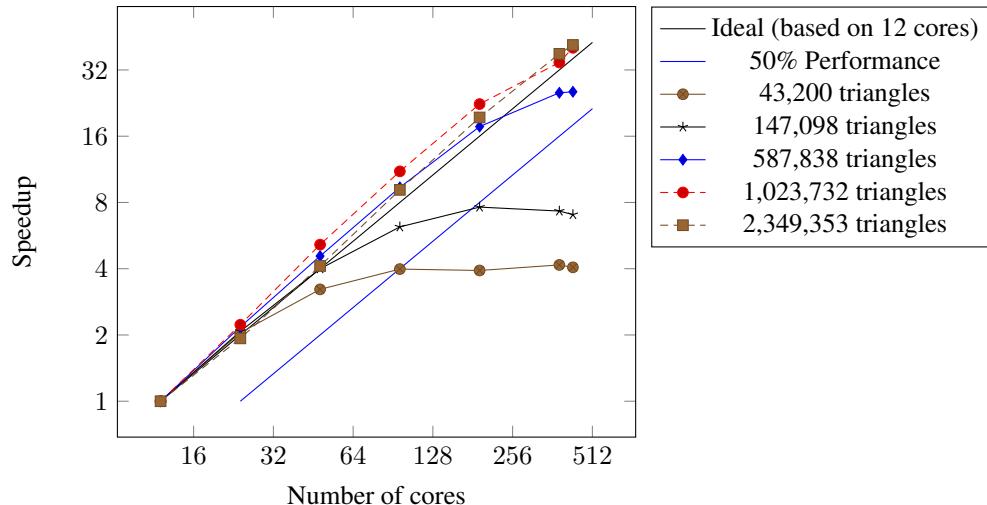


Figure 16.3: Speedups for problems ranging from 43,200 triangles to 2,349,353 triangles showing excellent speedups for the larger problems. We surmise that the super-scalability stems from better cache utilization as the larger meshes are subdivided into smaller meshes that can fit into cache.

16.5 Flux limiting

The shallow water equations are solved numerically using a finite volume method on an unstructured triangular grid. The upwind central scheme due to Kurganov and Petrova is used as an approximate Riemann solver for the computation of inviscid flux functions. This makes it possible to handle discontinuous solutions.

To alleviate the problems associated with numerical instabilities due to small water depths near a wet/dry boundary we employ a new flux limiter that ensures that unphysical fluxes are never encountered.

Let u and v be the velocity components in the x and y direction, w the absolute water level (stage) and z the bed elevation. The latter are assumed to be relative to the same height datum. The conserved quantities tracked by **ANUGA** are momentum in the x -direction (uh), momentum in the y -direction (vh) and depth ($h = w - z$).

The flux calculation requires access to the velocity vector (u, v) where each component is obtained as $u = uh/h$ and $v = vh/h$ respectively. In the presence of very small water depths, these calculations become numerically unreliable and will typically cause unphysical speeds.

We have employed a flux limiter which replaces the calculations above with the limited approximations.

$$\hat{u} = \frac{uh}{h^2 + h_0}, \hat{v} = \frac{vh}{h^2 + h_0}, \quad (16.1)$$

where h_0 is a regularisation parameter that controls the minimal magnitude of the denominator. Taking the limits we have for \hat{u}

$$\lim_{h \rightarrow 0} \hat{u} = \lim_{h \rightarrow 0} \frac{uh}{h^2 + h_0} = 0$$

and

$$\lim_{h \rightarrow \infty} \hat{u} = \lim_{h \rightarrow \infty} \frac{uh}{h^2 + h_0} = \frac{\mu}{h} = u$$

with similar results for \hat{v} .

The maximal value of \hat{u} is attained when $h + h_0/h$ is minimal or (by differentiating the denominator)

$$1 - h_0/h^2 = 0$$

or

$$h_0 = h^2$$

ANUGA has a global parameter H_0 that controls the minimal depth which is considered in the various equations. This parameter is typically set to 10^{-3} . Setting

$$h_0 = H_0^2$$

provides a reasonable balance between accuracy and stability. In fact, setting $h = H_0$ will scale the predicted speed by a factor of 0.5:

$$\left[\frac{\mu}{h + h_0/h} \right]_{h=H_0} = \left[\frac{\mu}{H_0 + H_0^2/H_0} \right] = \frac{\mu}{2H_0} = \frac{\mu}{2h} = \frac{u}{2}$$

In general, for multiples of the minimal depth NH_0 one obtains

$$\left[\frac{\mu}{h + h_0/h} \right]_{h=NH_0} = \frac{\mu}{NH_0 + H_0/N} = \frac{\mu}{h(1 + 1/N^2)} \quad (16.2)$$

which converges quadratically to the true value with the multiple N.

Although this equation can be used for any depth, we have restricted its use to depths less than $10 * H_0$ (or 1 cm) to computational resources. According to Equation 16.2 this cutoff affects the calculated velocity by less than 1 %.

16.6 Slope limiting

A multidimensional slope-limiting technique is employed to achieve second-order spatial accuracy and to prevent spurious oscillations. This is using the MinMod limiter and is documented elsewhere.

However close to the bed, the limiter must ensure that no negative depths occur. On the other hand, in deep water, the bed topography should be ignored for the purpose of the limiter.

Let w, z, h be the stage, bed elevation and depth at the centroid and let w_i, z_i, h_i be the stage, bed elevation and depth at vertex i . Define the minimal depth across all vertices as h_{\min} as

$$h_{\min} = \min_i h_i$$

Let \tilde{w}_i be the stage obtained from a gradient limiter limiting on stage only. The corresponding depth is then defined as

$$\tilde{h}_i = \tilde{w}_i - z_i$$

We would use this limiter in deep water which we will define (somewhat boldly) as

$$h_{\min} \geq \epsilon$$

Similarly, let \bar{w}_i be the stage obtained from a gradient limiter limiting on depth respecting the bed slope. The corresponding depth is defined as

$$\bar{h}_i = \bar{w}_i - z_i$$

We introduce the concept of a balanced stage w_i which is obtained as the linear combination

$$w_i = \alpha \tilde{w}_i + (1 - \alpha) \bar{w}_i$$

or

$$w_i = z_i + \alpha \tilde{h}_i + (1 - \alpha) \bar{h}_i$$

where $\alpha \in [0, 1]$.

Since \tilde{w}_i is obtained in 'deep' water where the bedslope is ignored we have immediately that

$$\alpha = 1 \text{ for } h_{\min} \geq \epsilon$$

If $h_{\min} < \epsilon$ we want to use the 'shallow' limiter just enough that no negative depths occur. Formally, we will require that

$$\alpha \tilde{h}_i + (1 - \alpha) \bar{h}_i > \epsilon, \forall i$$

or

$$\alpha(\tilde{h}_i - \bar{h}_i) > \epsilon - \bar{h}_i, \forall i \quad (16.3)$$

There are two cases:

1. $\bar{h}_i \leq \tilde{h}_i$: The deep water (limited using stage) vertex is at least as far away from the bed than the shallow water (limited using depth). In this case we won't need any contribution from \bar{h}_i and can accept any α .

E.g. $\alpha = 1$ reduces Equation 16.3 to

$$\tilde{h}_i > \epsilon$$

whereas $\alpha = 0$ yields

$$\bar{h}_i > \epsilon$$

all well and good.

2. $\bar{h}_i > \tilde{h}_i$: In this case the the deep water vertex is closer to the bed than the shallow water vertex or even below the bed. In this case we need to find an α that will ensure a positive depth. Rearranging Equation 16.3 and solving for α one obtains the bound

$$\alpha < \frac{\epsilon - \bar{h}_i}{\tilde{h}_i - \bar{h}_i}, \forall i$$

Ensuring Equation 16.3 holds true for all vertices one arrives at the definition

$$\alpha = \min_i \frac{\bar{h}_i - \epsilon}{\bar{h}_i - \tilde{h}_i}$$

which will guarantee that no vertex 'cuts' through the bed. Finally, should $\bar{h}_i < \epsilon$ and therefore $\alpha < 0$, we suggest setting $\alpha = 0$ and similarly capping α at 1 just in case.

Basic ANUGA Assumptions

17.1 Time

Physical model time cannot be earlier than 1 Jan 1970 00:00:00. If one wished to recreate scenarios prior to that date it must be done using some relative time (e.g. 0).

The **ANUGA** domain has an attribute `starttime` which is used in cases where the simulation should be started later than the beginning of some input data such as those obtained from boundaries or forcing functions (hydrographs, `file_boundary` etc).

The `domain starttime` may be adjusted in `file_boundary` in the case the input data does not itself start until a later time.

17.2 Spatial data

17.2.1 Projection

All spatial data relates to the WGS84 datum (or GDA94) and assumes a projection into UTM with false easting of 500000 and false northing of 1000000 on the southern hemisphere (0 on the northern hemisphere). All locations must consequently be specified in Cartesian coordinates (eastings, northings) or (x,y) where the unit is metres. Alternative projections can be used, but **ANUGA** does have the concept of a UTM zone that must be the same for all coordinates in the model.

17.2.2 Internal coordinates

It is important to realise that for numerical precision **ANUGA** uses coordinates that are relative to the lower left node of the rectangle containing the mesh (x_{\min}, y_{\min}). This origin is referred to internally as `xllcorner`, `yllcorner` following the ESRI ASCII grid notation. The SWW file format also includes `xllcorner`, `yllcorner` and any coordinate in the file should be adjusted by adding this origin. See Section 15.3.

Throughout the **ANUGA** interface, functions have optional boolean arguments `absolute` which controls whether spatial data received is using the internal representation (`absolute=False`) or the user coordinate set (`absolute=True`). See e.g. `get_vertex_coordinates()` on 49.

DEM's, meshes and boundary conditions can have different origins. However, the internal representation in **ANUGA** will use the origin of the mesh.

17.2.3 Polygons

When generating a mesh it is assumed that polygons do not cross. Having polygons that cross can cause bad meshes to be produced or the mesh generation itself may fail.

Supporting Tools

This section describes a number of supporting tools, supplied with **ANUGA**, that offer a variety of types of functionality and can enhance the basic capabilities of **ANUGA**.

A.1 caching

The `cache` function is used to provide supervised caching of function results. A Python function call of the form:

```
result = func(arg1, ..., argn)
```

can be replaced by:

```
from caching import cache
result = cache(func, (arg1, ..., argn))
```

which returns the same output but reuses cached results if the function has been computed previously in the same context. `result` and the arguments can be simple types, tuples, list, dictionaries or objects, but not unhashable types such as functions or open file objects. The function `func` may be a member function of an object or a module.

This type of caching is particularly useful for computationally intensive functions with few frequently used combinations of input arguments. Note that if the inputs or output are very large caching may not save time because disc access may dominate the execution time.

If the function definition changes after a result has been cached, this will be detected by examining the functions bytecode and the function will be recomputed. However, caching will not detect changes in modules used by `func`. In this case the cache must be cleared manually.

Options are set by means of the function `set_option(key, value)`, where `key` is a key associated with a Python dictionary `options`. This dictionary stores settings such as the name of the directory used, the maximum number of cached files allowed, and so on.

The `cache` function allows the user also to specify a list of dependent files. If any of these have been changed, the function is recomputed and the results stored again.

USAGE:

```
result = cache(func, args, kwargs, dependencies, cachedir, verbose,
               compression, evaluate, test, return_filename)
```

A.2 anuga_viewer

The output generated by **ANUGA** may be viewed by means of the visualisation tool `anuga_viewer`, which takes an SWW file generated by **ANUGA** and creates a visual representation of the data. Examples may be seen in Figures 2.1 and 2.2.

A.2.1 Installing on Ubuntu

We suggest installing from source if you are using Ubuntu (Linux generally).

Install basic packages

```
sudo apt-get install build-essential libgdal-dev make git libopenscenegraph-dev
```

Download the `anuga_viewer` Code The latest version of the code is available from github. Don't use the version on sourceforge.

From your home directory, download the `anuga` viewer code via

```
git clone https://github.com/GeoscienceAustralia/anuga-viewer.git anuga-viewer
```

Change into the new directory `anuga-viewer`. From this directory build and install the viewer via

```
make  
sudo make install
```

Finally we need to setup some environment variables.

Put the following in your `.bashrc` file (if you use the bash shell).

```
export SWOLLEN_BINDIR=~/.anuga-viewer/bin  
export PATH=$PATH:$SWOLLEN_BINDIR
```

With some versions of linux you need to put this command in the file `.profile`

You should rerun your `.bashrc` file with

```
source .bashrc
```

Actually it is usually safer to fire up a new terminal to see if you have been successful in setting up the `PATH` and `SWOLLEN_BINDIR`

You can check your `PATH` with the command

```
printenv PATH
```

Check the Installation. Change into the `anuga-viewer/data` directory and run the `anuga_viewer` via the command

```
anuga_viewer cairns.sww
```

Hopefully the viewer fires up and you will see a simple flow. Use the space bar to start the visualisation.

A.2.2 Installing on Windows

A windows binary of the `anuga_viewer` is available from http://sourceforge.net/projects/anuga/files/anuga_viewer_windows/

Extract the files to a folder and create a shortcut to the `anuga_core` executable. Or set up a file association to make files with the extension `.sww` open with `anuga_viewer`. Alternatively, you can operate `anuga_viewer` from the command line if you setup the `PATH` to point to this folder.

A.2.3 Commands

The output generated by **ANUGA** may be viewed by means of the visualisation tool `anuga_viewer`, which takes an `SWW` file generated by **ANUGA** and creates a visual representation of the data. Examples may be seen in Figures 2.1 and 2.2. To view an `SWW` file with `anuga_viewer` in the Windows environment, you can simply drag the icon representing the file over an icon on the desktop for the `anuga_viewer` executable file (or a shortcut to it), or set up a file association to make files with the extension `.sww` open with `anuga_viewer`. Alternatively, you can operate `anuga_viewer` from the command line via

```
anuga_viewer <swwfile>
```

or if a georeferenced `tif` file (or `jpg` cut to the same shape as the domain) is needed

```
anuga_viewer <swwfile> <tif file>
```

Upon starting the viewer, you will see an interactive moving-picture display. You can use the keyboard and mouse to slow down, speed up or stop the display, change the viewing position or carry out a number of other simple operations. Help is also displayed when you press the `h` key.

The main keys operating the interactive screen are:

<code>h</code>	toggle on-screen help display
<code>w</code>	toggle wireframe
space bar	start/stop
up/down arrows	increase/decrease speed
left/right arrows	direction in time (<i>when running</i>)
	step through simulation (<i>when stopped</i>)
left mouse button	rotate
middle mouse button	pan
right mouse button	zoom

The following describes how to operate `anuga_viewer` from the command line:

Usage: anuga_viewer [options] swwfile ...

where:

--display <type>	MONITOR POWERWALL REALITY_CENTER HEAD_MOUNTED_DISPLAY
--rgba	Request a RGBA colour buffer visual
--stencil	Request a stencil buffer visual
--stereo	Use default stereo mode which is ANAGLYPHIC if not overridden by environmental variable
--stereo <mode>	ANAGLYPHIC QUAD_BUFFER HORIZONTAL_SPLIT VERTICAL_SPLIT LEFT_EYE RIGHT_EYE ON OFF
-alphamax <float 0-1>	Maximum transparency clamp value
-alphamin <float 0-1>	Transparency value at hmin
-cullangle <float angle 0-90>	Cull triangles steeper than this value
-help	Display this information
-hmax <float>	Height above which transparency is set to alphamax
-hmin <float>	Height below which transparency is set to zero
-lightpos <float>, <float>, <float>	<i>x, y, z</i> of bedslope directional light (<i>z</i> is up, default is overhead)
-loop	Repeated (looped) playback of .swm files
-movie <dirname>	Save numbered images to named directory and quit
-nosky	Omit background sky
-scale <float>	Vertical scale factor
-texture <file>	Image to use for bedslope topography
-tps <rate>	Timesteps per second
-version	Revision number and creation (not compile) date

A.3 utilities/polylons

```
class <callable> = Polygon_function(regions, default=0.0, geo_reference=None)
Module: utilities.polygon
```

Creates a callable object that returns one of a specified list of values when evaluated at a point (x, y), depending on which polygon, from a specified list of polygons, the point belongs to.

`regions` is a list of pairs (P, v), where each P is a polygon and each v is either a constant value or a function of coordinates x and y , specifying the return value for a point inside P .

`default` may be used to specify a value (or a function) for a point not lying inside any of the specified polygons.

When a point lies in more than one polygon, the return value is taken to be the value for whichever of these polygon appears later in the list.

`geo_reference` refers to the status of points that are passed into the function. Typically they will be relative to some origin.

Typical usage may take the form:

```
set_quantity('elevation',
             Polygon_function([(P1, v1), (P2, v2)],
                             default=v3,
                             geo_reference=domain.geo_reference))
```

```
<polygon> = read_polygon(filename, split=',')
```

Module: utilities.polygon

Reads the specified file and returns a polygon. Each line of the file must contain exactly two numbers, separated by a delimiter, which are interpreted as coordinates of one vertex of the polygon.

`filename` is the path to the file to read.

`split` sets the delimiter character between the numbers on one line of the file. If not specified, the delimiter is the ',' character.

```
populate_polygon(polygon, number_of_points, seed=None, exclude=None)
```

Module: utilities.polygon

Populates the interior of the specified polygon with the specified number of points, selected by means of a uniform distribution function.

`polygon` is the polygon to populate.

`number_of_points` is the (optional) number of points.

`seed` is the optional seed for random number generator.

`exclude` is a list of polygons (inside main polygon) from where points should be excluded.

```
<point> = point_in_polygon(polygon, delta=1e-8)
```

Module: utilities.polygon

Returns a point inside the specified polygon and close to the edge. The distance between the returned point and the nearest point of the polygon is less than $\sqrt{2}$ times the second argument `delta`, which is taken as 10^{-8} by default.

```
<array> = inside_polygon(points, polygon, closed=True, verbose=False)
```

Module: utilities.polygon

Get a set of points that lie inside a given polygon.

`points` is the list of points to test.

`polygon` is the polygon to test the points against.

`closed` specifies if points on the polygon edge are considered to be inside or outside the polygon – True means they are inside.

Returns a numeric array comprising the indices of the points in the list that lie inside the polygon. If none of the points are inside, returns `zeros((0,), 'l')` (ie, an empty numeric array).

Compare with `outside_polygon()`, page 102.

<array> = outside_polygon (points, polygon, closed=True, verbose=False)

Module: utilities.polygon

Get a set of points that lie outside a given polygon.

points is the list of points to test.

polygon is the polygon to test the points against.

closed specifies if points on the polygon edge are considered to be outside or inside the polygon – True means they are outside.

Returns a numeric array comprising the indices of the points in the list that lie outside the polygon. If none of the points are outside, returns zeros((0,), 'l') (ie, an empty numeric array).

Compare with inside_polygon(), page 101.

<boolean> = is_inside_polygon (point, polygon, closed=True, verbose=False)

Module: utilities.polygon

Determines if a single point is inside a polygon.

point is the point to test.

polygon is the polygon to test point against.

closed is a flag that forces the function to consider a point on the polygon edge to be inside or outside – if True a point on the edge is considered inside the polygon.

Returns True if point is inside polygon.

Compare with inside_polygon(), page 101.

<boolean> = is_outside_polygon (point, polygon, closed=True, verbose=False,)

Module: utilities.polygon

Determines if a single point is outside a polygon.

point is the point to test.

polygon is the polygon to test point against.

closed is a flag that forces the function to consider a point on the polygon edge to be outside or inside – if True a point on the edge is considered inside the polygon.

Compare with outside_polygon(), page 102.

<boolean> = point_on_line (point, line, rtol=1.0e-5, atol=1.0e-8)

Module: utilities.polygon

Determine if a point is on a line to some tolerance. The line is considered to extend past its end-points.

point is the point to test ([x, y]).

line is the line to test point against ([[x1,y1], [x2,y2]]).

rtol is the relative tolerance to use when testing for coincidence.

atol is the absolute tolerance to use when testing for coincidence.

Returns True if the point is on the line, else False.

(indices, count) = separate_points_by_polygon (points, polygon, closed=True, check_input=True, verbose=False)

separate_points_by_polygon Module: utilities.polygon

Separate a set of points into points that are inside and outside a polygon.

points is a list of points to separate.

polygon is the polygon used to separate the points.

closed determines whether points on the polygon edge should be regarded as inside or outside the polygon. True means they are inside.

check_input specifies whether the input parameters are checked – True means check the input parameters.

The function returns a tuple (indices, count) where indices is a list of point indices from the input points list, with the indices of points inside the polygon at the left and indices of points outside the polygon listed at the right. The count value is the count (from the left) of the indices of the points *inside* the polygon.

```
<area> = polygon_area(polygon)
```

Module: utilities.polygon

Returns area of an arbitrary polygon (reference <http://mathworld.wolfram.com/PolygonArea.html>).

```
[xmin, xmax, ymin, ymax] = plot_polygons(polygons_points, style=None, fname=None, label=None, verbose=False)
```

Module: utilities.polygon

Plot a list of polygons to a file.

`polygons_points` is a list of polygons to plot.

`style` is a list of style strings to be applied to the corresponding polygon in `polygons_points`. A polygon can be closed for plotting purposes by assigning the style string 'line' to it in the appropriate place in the `style` list. The default style is 'line'.

`fname` is the path to the file to save the plot in. If not specified, use 'test_image.png'.

The function returns a list containing the minimum and maximum of the points in all the input polygons, i.e. `[xmin, xmax, ymin, ymax]`.

A.4 geospatial_data

This describes a class that represents arbitrary point data in UTM coordinates along with named attribute values.

```
class Geospatial_data (data_points=None, attributes=None, geo_reference=None, default_attribute_name=None, file_name=None, latitudes=None, longitudes=None, points_are_lats_long=False, max_read_lines=None, load_file_now=True, verbose=False)
```

Module: geospatial_data.geospatial_data

This class is used to store a set of data points and associated attributes, allowing these to be manipulated by methods defined for the class.

The data points are specified either by reading them from a NetCDF or CSV file, identified through the parameter `file_name`, or by providing their x- and y-coordinates in metres, either as a sequence of 2-tuples of floats or as an $M \times 2$ numeric array of floats, where M is the number of points.

Coordinates are interpreted relative to the origin specified by the object `geo_reference`, which contains data indicating the UTM zone, easting and northing. If `geo_reference` is not specified, a default is used.

Attributes are specified through the parameter `attributes`, set either to a list or array of length M or to a dictionary whose keys are the attribute names and whose values are lists or arrays of length M . One of the attributes may be specified as the default attribute, by assigning its name to `default_attribute_name`. If no value is specified, the default attribute is taken to be the first one.

Note that the `Geospatial_data` object currently reads entire datasets into memory i.e. no memory blocking takes place. For this we refer to the `set_quantity()` method which will read PTS and CSV files into ANUGA using memory blocking allowing large files to be used.

```
<Geospatial_data>.import_points_file(file_name, delimiter=None, verbose=False)
```

Module: geospatial_data.geospatial_data

Import a TXT, CSV or PTS points data file into a code`Geospatial_data` object.

`file_name` is the path to a TXT, CSV or PTS points data file.

`delimiter` is currently unused.

```
<Geospatial_data>.export_points_file(file_name, absolute=True, as_lat_long=False, isSouthHemisphere=True)
```

Module: geospatial_data.geospatial_data

Export a CSV or PTS points data file from a `Geospatial_data` object.

`file_name` is the path to the CSV or PTS points file to write.

`absolute` determines if the exported data is absolute or relative to the `Geospatial_data` object `geo_reference`. If `True` the exported data is absolute.

`as_lat_long` exports the points data as latitudes and longitudes if `True`.

`isSouthHemisphere` has effect only if `as_lat_long` is `True` and causes latitude/longitude values to be for the southern (`True`) or northern hemispheres (`False`).

```
points = <Geospatial_data>.get_data_points(absolute=True, geo_reference=None, as_lat_long=False, isSouthHemisphere=True)
```

Module: geospatial_data.geospatial_data

Get the coordinates for all the data points as an $N \times 2$ array.

`absolute` determines if the exported data is absolute or relative to the `Geospatial_data` object `geo_reference`. If `True` the exported data is absolute.

`geo_reference` is the `geo_reference` the points are relative to, if supplied.

`as_lat_long` exports the points data as latitudes and longitudes if `True`.

`isSouthHemisphere` has effect only if `as_lat_long` is `True` and causes latitude/longitude values to be for the southern (`True`) or northern hemispheres (`False`).

```
<Geospatial_data>.set_attributes(attributes)
```

Module: geospatial_data.geospatial_data

Set the attributes for a `Geospatial_data` object.

`attributes` is the new value for the object's attributes. May be a dictionary or `None`.

```
atributes = <Geospatial_data>.get_attributes (attribute_name=None)
Module: geospatial_data.geospatial_data
Get a named attribute from a Geospatial_data object.
attribute_name is the name of the desired attribute. If None, return the default attribute.

<Geospatial_data>.get_all_attributes()
Module: geospatial_data.geospatial_data
Get all attributes of a Geospatial_data object.
Returns None or the attributes dictionary (which may be empty).

<Geospatial_data>.set_default_attribute_name (default_attribute_name)
Module: geospatial_data.geospatial_data
Set the default attribute name of a Geospatial_data object.
default_attribute_name is the new default attribute name.

<Geospatial_data>.set_geo_reference (geo_reference)
Module: geospatial_data.geospatial_data
Set the internal geo_reference of a Geospatial_data object.
geo_reference is the new internal geo_reference for the object. If None will use the default geo-
reference.
If the Geospatial_data object already has an internal geo_reference then the points data will be
changed to use the new geo_reference.

<Geospatial_data>.__add__ (other)
Module: geospatial_data.geospatial_data
The __add__() method is defined so it is possible to add two Geospatial_data objects.

geospatial = <Geospatial_data>.clip (polygon, closed=True, verbose=False)
Module: geospatial_data.geospatial_data
Clip a Geospatial_data object with a polygon.
polygon is the polygon to clip the Geospatial_data object with. This may be a list of points, an
N × 2 array or a Geospatial_data object.
closed determines whether points on the polygon edge are inside (True) or outside (False) the
polygon.
Returns a new Geospatial_data object representing points inside the
Compare with clip_outside(), page 105. specified polygon.

geospatial = <Geospatial_data>.clip_outside (polygon, closed=True, verbose=False)
Module: geospatial_data.geospatial_data
Clip a Geospatial_data object with a polygon.
polygon is the polygon to clip the Geospatial_data object with. This may be a list of points, an
N × 2 array or a Geospatial_data object.
closed determines whether points on the polygon edge are inside (True) or outside (False) the
polygon.
Returns a new Geospatial_data object representing points outside the specified polygon.
Compare with clip(), page 105.

(g1, g2) = <Geospatial_data>.split (factor=0.5, seed_num=None, verbose=False)
Module: geospatial_data.geospatial_data
Split a Geospatial_data object into two objects of predetermined ratios.
factor is the ratio of the size of the first returned object to the original object. If '0.5' is supplied, the two
resulting objects will be of equal size.
seed_num, if supplied, will be the random number generator seed used for the split.
Points of the two new geospatial_data object are selected RANDOMLY.
Returns two geospatial_data objects that are disjoint sets of the original.
```

A.5 Miscellaneous Functions

The functions here are not Geospatial_data object methods, but are used with them.

```
x = find_optimal_smoothing_parameter(data_file, alpha_list=None, mesh_file=None, boundary_poly=None, mesh_resolution=100000, north_boundary=None, south_boundary=None, east_boundary=None, west_boundary=None, plot_name='all_alphas', split_factor=0.1, seed_num=None, cache=False, verbose=False)
```

Module: geospatial_data.geospatial_data

Calculate the minimum covariance from a set of points in a file. It does this by removing a small random sample of points from data_file and creating models with different alpha values from alpha_list and cross validates the predicted value to the previously removed point data. Returns the alpha value which has the smallest covariance.

data_file is the input data file and must not contain points outside the boundaries defined and is either a PTS, TXT or CSV file.

alpha_list is the list of alpha values to use.

mesh_file is the path to a mesh file to create (if supplied). If None a mesh file will be created (named 'temp.msh'). NOTE: if there is a mesh_resolution defined or any boundaries are defined, any input mesh_file value is ignored.

mesh_resolution is the maximum area size for a triangle.

north_boundary

south_boundary

east_boundary

west_boundary are the boundary values to use.

plot_name is the path name of the plot file to write.

seed_num is the random number generator seed to use.

The function returns a tuple (min_covar, alpha) where min_covar is the minimum normalised covariance and alpha is the alpha value that created it. A plot file is also written.

This is an example of function usage:

```
convariance_value, alpha = \
    find_optimal_smoothing_parameter(data_file=fileName,
                                      alpha_list=[0.0001, 0.01, 1],
                                      mesh_file=None,
                                      mesh_resolution=3,
                                      north_boundary=5,
                                      south_boundary=-5,
                                      east_boundary=5,
                                      west_boundary=-5,
                                      plot_name='all_alphas',
                                      seed_num=100000,
                                      verbose=False)
```

NOTE: The function will not work if the data_file extent is greater than the boundary_poly polygon or any of the boundaries, e.g. north_boundary, etc.

A.6 Graphical Mesh Generator GUI

The program `graphical_mesh_generator.py` in the `pmesh` module allows the user to set up the mesh of the problem interactively. It can be used to build the outline of a mesh or to visualise a mesh automatically generated.

Graphical Mesh Generator will let the user select various modes. The current allowable modes are *vertex*, *segment*, *hole* or *region*. The mode describes what sort of object is added or selected in response to mouse clicks. When changing modes any prior selected objects become deselected.

In general the left mouse button will add an object and the right mouse button will select an object. A selected object can be deleted by pressing the middle mouse button (scroll bar).

A.7 class Alpha_Shape

Alpha shapes are used to generate close-fitting boundaries around sets of points. The alpha shape algorithm produces a shape that approximates to the 'shape formed by the points' – or the shape that would be seen by viewing the points from a coarse enough resolution. For the simplest types of point sets, the alpha shape reduces to the more precise notion of the convex hull. However, for many sets of points the convex hull does not provide a close fit and the alpha shape usually fits more closely to the original point set, offering a better approximation to the shape being sought.

In ANUGA , an alpha shape is used to generate a polygonal boundary around a set of points before mesh generation. The algorithm uses a parameter α that can be adjusted to make the resultant shape resemble the shape suggested by intuition more closely. An alpha shape can serve as an initial boundary approximation that the user can adjust as needed.

The following paragraphs describe the class used to model an alpha shape and some of the important methods and attributes associated with instances of this class.

class Alpha_Shape (points, alpha=None)

Module: alpha_shape

Instantiate an instance of the Alpha_Shape class.

points is an $N \times 2$ list of points ($[[x_1, y_1], [x_2, y_2] \dots]$).

alpha is the 'fitting' parameter.

alpha_shape_via_files (point_file, boundary_file, alpha= None)

Module: alpha_shape

This function reads points from the specified point file point_file, computes the associated alpha shape (either using the specified value for alpha or, if no value is specified, automatically setting it to an optimal value) and outputs the boundary to a file named boundary_file. This output file lists the coordinates (x, y) of each point in the boundary, using one line per point.

<Alpha_shape>.set_boundary_type (raw_boundary=True, remove_holes=False, smooth_indent=False, expand_pinch=False, boundary_points_fraction=0.2)

Module: alpha_shape

This function sets internal state that controls how the Alpha_shape boundary is presented or exported.

raw_boundary sets the type to raw if True, i.e. the regular edges of the alpha shape.

remove_holes, if True removes small holes ('small' is defined by boundary_points_fraction).

smooth_indent, if True removes sharp triangular indentations in the boundary.

expand_pinch, if True tests for pinch-off and corrects – preventing a boundary vertex from having more than two edges.

boundary = <Alpha_shape>.get_boundary()

Module: alpha_shape

Returns a list of tuples representing the boundary of the alpha shape. Each tuple represents a segment in the boundary by providing the indices of its two endpoints.

See set_boundary_type(), page 108.

<Alpha_shape>.write_boundary (file_name)

Module: alpha_shape

Writes the list of 2-tuples returned by get_boundary() to the file file_name, using one line per tuple.

See set_boundary_type(), page 108.

See get_boundary(), page 108.

A.8 Numerical Tools

The following table describes some useful numerical functions that may be found in the module `utilities.numerical_tools`:

<code>angle(v1, v2=None)</code>	Angle between two-dimensional vectors <code>v1</code> and <code>v2</code> , or between <code>v1</code> and the <i>x</i> -axis if <code>v2</code> is <code>None</code> . Value is in range 0 to 2π .
<code>normal_vector(v)</code>	Normal vector to <code>v</code> .
<code>mean(x)</code>	Mean value of a vector <code>x</code> .
<code>cov(x, y=None)</code>	Covariance of vectors <code>x</code> and <code>y</code> . If <code>y</code> is <code>None</code> , returns <code>cov(x, x)</code> .
<code>err(x, y=0, n=2, relative=True)</code>	Relative error of $\ x-y\ $ to $\ y\ $ (2-norm if <code>n = 2</code> or Max norm if <code>n = None</code>). If denominator evaluates to zero or if <code>y</code> is omitted or if <code>relative=False</code> , absolute error is returned.
<code>norm(x)</code>	2-norm of <code>x</code> .
<code>corr(x, y=None)</code>	Correlation of <code>x</code> and <code>y</code> . If <code>y</code> is <code>None</code> returns autocorrelation of <code>x</code> .
<code>ensure_numeric(A, typecode=None)</code>	Returns a numeric array for any sequence <code>A</code> . If <code>A</code> is already a numeric array it will be returned unaltered. Otherwise, an attempt is made to convert it to a numeric array. (Needed because <code>array(A)</code> can cause memory overflow.)
<code>histogram(a, bins, relative=False)</code>	Standard histogram. If <code>relative</code> is <code>True</code> , values will be normalised against the total and thus represent frequencies rather than counts.
<code>create_bins(data, number_of_bins=None)</code>	Safely create bins for use with <code>histogram</code> . If <code>data</code> contains only one point or is constant, one bin will be created. If <code>number_of_bins</code> is omitted, 10 bins will be created.

Glossary

<i>Term</i>	<i>Definition</i>	<i>Page</i>
ANUGA	Name of software (joint development between ANU and GA)	i
bathymetry	offshore elevation	
conserved quantity	conserved (stage, x and y momentum)	
Digital Elevation Model (DEM)	DEMs are digital files consisting of points of elevations, sampled systematically at equally spaced intervals.	
Dirichlet boundary	A boundary condition imposed on a differential equation that specifies the values the solution is to take on the boundary of the domain.	9
edge	A triangular cell within the computational mesh can be depicted as a set of vertices joined by lines (the edges).	
elevation	refers to bathymetry and topography	
evolution	integration of the shallow water wave equations over time	
finite volume method	The method evaluates the terms in the shallow water wave equation as fluxes at the surfaces of each finite volume. Because the flux entering a given volume is identical to that leaving the adjacent volume, these methods are conservative. Another advantage of the finite volume method is that it is easily formulated to allow for unstructured meshes. The method is used in many computational fluid dynamics packages.	
forcing term	A part of the right hand side S in the Shallow water equation. Typical terms are bed pressure, bed friction, wind stress, atmospheric pressure, rain etc.	
flux	the amount of flow through the volume per unit time	
grid	Evenly spaced mesh	
latitude	The angular distance on a meridian north and south of the equator, expressed in degrees and minutes.	
longitude	The angular distance east or west, between the meridian of a particular place on Earth and that of the Prime Meridian (located in Greenwich, England) expressed in degrees or time.	
Manning friction coefficient		
mesh	Triangulation of domain	
mesh file	A TSH or MSH file	25
NetCDF		
node	A point at which edges meet	
northing	A rectangular (x,y) coordinate measurement of distance north from a north-south reference line, usually a meridian used as the axis of origin within a map zone or projection. Northing is a UTM (Universal Transverse Mercator) coordinate.	
points file	A PTS or CSV file	

polygon	A sequence of points in the plane. ANUGA represents a polygon either as a list consisting of Python tuples or lists of length 2 or as an $N \times 2$ numeric array, where N is the number of points. The unit square, for example, would be represented either as [[0,0], [1,0], [1,1], [0,1]] or as array([0,0], [1,0], [1,1], [0,1]). NOTE: For details refer to the module <code>utilities/polygon.py</code> .	
resolution	The maximal area of a triangular cell in a mesh	9
reflective boundary	Models a solid wall. Returns same conserved quantities as those present in the neighbouring volume but reflected. Specific to the shallow water equation as it works with the momentum quantities assumed to be the second and third conserved quantities.	9
stage		98
anuga_viewer	visualisation tool used with ANUGA	9
time boundary	Returns values for the conserved quantities as a function of time. The user must specify the domain to get access to the model time. onshore elevation	9
topography		
transmissive boundary		
vertex	A point at which edges meet.	
xmomentum	conserved quantity (note, two-dimensional SWW equations say only x and y and NOT z)	
ymomentum	conserved quantity	

INDEX

```
(g1, g2) = <Geospatial_data>.split()
    (Geospatial_data method), 105
(indices, count) = separate_points_-
    by_polygon() (in module utilities.polygon), 102
(time, Q) = get_flow_through_cross_-_
    section() (in module ), 68
(x, y) = get_maximum_inundation_-
    location() (in module ), 67
<area> = polygon_area() (in module utilities.polygon), 103
<array> = inside_polygon() (in module utilities.polygon), 101
<array> = outside_polygon() (in module utilities.polygon), 102
<boolean> = is_inside_polygon() (in module utilities.polygon), 102
<boolean> = is_outside_polygon() (in module utilities.polygon), 102
<boolean> = point_on_line() (in module utilities.polygon), 102
<callable> = Polygon_function (class in utilities.polygon), 101
<point> = point_in_polygon() (in module utilities.polygon), 101
<polygon> = read_polygon() (in module utilities.polygon), 101
[xmin, xmax, ymin, ymax] = plot_-
    polygons() (in module utilities.polygon),
    103
ANUGA, i
ANUGA, 111
<Alpha_shape>.set_boundary_type() (Alpha_
    Shape method), 108
<Alpha_shape>.write_boundary() (Alpha_
    Shape method), 108
<Geospatial_data>.__add__() (Geospatial_-
    data method), 105
<Geospatial_data>.export_points_-
    file() (Geospatial_data method), 104
<Geospatial_data>.get_all_-
    attributes() (Geospatial_data method),
    105
<Geospatial_data>.import_points_-
    file() (Geospatial_data method), 104
<Geospatial_data>.set_attributes()
    (Geospatial_data method), 104
<Geospatial_data>.set_default_-
    attribute_name() (Geospatial_data
    method), 105
<Geospatial_data>.set_geo_-
    reference() (Geospatial_data method),
    105
<callable_object> = Interpolation_-
    function (class in ), 57
<callable_object> = file_function()
    (in module ), 56
<callable_object> =slump_tsunami() (in
    module ), 56
<domain>.add_quantity() (method), 56
<domain>.boundary_statistics() (method),
    50
<domain>.evolve() (method), 50
<domain>.get_boundary_tags() (&callable_-
    object; = Interpolation_function method), 59
<domain>.get_centroid_coordinates() (method),
    49
<domain>.get_datadir() (method), 47
<domain>.get_disconnected_-
    triangles() (method), 49
<domain>.get_maximum_inundation_-
    elevation() (method), 52
<domain>.get_maximum_inundation_-
    location() (method), 53
<domain>.get_name() (method), 47
<domain>.get_nodes() (method), 49
<domain>.get_triangles() (method), 49
<domain>.get_vertex_coordinates() (method),
    49
<domain>.get_wet_elements() (method), 52
<domain>.quantity_statistics() (method),
    51
<domain>.set_boundary() (&callable_object;
    = Interpolation_function method), 59
<domain>.set_datadir() (method), 47
<domain>.set_default_order() (method),
    48
<domain>.set_maximum_allowed_speed() (method),
    48
<domain>.set_minimum_allowed_-
    height() (method), 48
```

<*domain*>.set_minimum_storable_height() (method), 48
 <*domain*>.set_name() (method), 47
 <*domain*>.set_quantities_to_be_monitored() (method), 51
 <*domain*>.set_quantities_to_be_stored() (method), 49
 <*domain*>.set_quantity() (method), 55
 <*domain*>.set_region() (method), 56
 <*domain*>.set_store_vertices_uniquely() (method), 48
 <*domain*>.set_time() (method), 48
 <*domain*>.statistics() (method), 50
 <*domain*>.timestepping_statistics() (method), 50
 <*mesh*>.add_hole() (Mesh method), 43
 <*mesh*>.add_hole_from_polygon() (Mesh method), 44
 <*mesh*>.add_points_and_segments() (Mesh method), 44
 <*mesh*>.add_region() (Mesh method), 44
 <*mesh*>.add_region_from_polygon() (Mesh method), 44
 <*mesh*>.add_vertices() (Mesh method), 44
 <*mesh*>.auto_segment() (Mesh method), 44
 <*mesh*>.export_mesh_file() (Mesh method), 45
 <*mesh*>.generate_mesh() (Mesh method), 45
 <*mesh*>.import_ungenerate_file() (Mesh method), 45
 <*quantity*>.get_integral() (method), 52
 <*quantity*>.get_maximum_location() (method), 52
 <*quantity*>.get_maximum_value() (method), 52
 <*quantity*>.get_values() (method), 51
 <*quantity*>.set_values() (method), 52
 Alpha_Shape (class in), 108
 alpha_shape_via_files() (in module), 108
 ANUGA
 credits, *ii*
 licence, *ii*
 anuga_viewer, 112
 attributes = <*Geospatial_data*>.get_attributes() (Geospatial_data method), 105
 bathymetry, 111
 boundary = <*Alpha_shape*>.get_boundary() (Alpha_Shape method), 108
 boundary conditions, 8, 29, 59
 conserved quantity, 111
 create_domain_from_regions() (in module), 42
 create_mesh_from_regions() (in module), 42
 csv2building_polygons() (in module), 84
 dem2pts() (in module), 84
 Digital Elevation Model (DEM), 111
 Dirichlet boundary, 111
 Dirichlet_boundary (class in), 59
 Dirichlet_discharge_boundary (class in), 60
 Documentation, 79
 Domain (class in), 47
 domain, establishing, 6
 edge, 111
 elevation, 111
 elevation = get_maximum_inundation_elevation() (in module), 67
 evolution, 10, 50, 111
 Field_boundary (class in), 60
 File_boundary (class in), 60
 finite volume method, 111
 flux, 111
 forcing term, 111
 geospatial = <*Geospatial_data*>.clip() (Geospatial_data method), 105
 geospatial = <*Geospatial_data*>.clip_outside() (Geospatial_data method), 105
 Geospatial_data (class in), 104
 grid, 111
 Initial Conditions, 55
 Initialising the Domain, 47
 latitude, 111
 longitude, 111
 Manning friction coefficient, 111
 Mesh
 generation, 41
 Mesh (class in), 43
 mesh, 111
 mesh file, 25, 111
 mesh, establishing, 14, 24
 NetCDF, 111
 node, 111
 northing, 111
 operators, 63
 points = <*Geospatial_data*>.get_data_points() (Geospatial_data method), 104
 points file, 111
 polygon, 112
 populate_polygon() (in module utilties.polygon), 101
 public vs private interface, 79

```
Q = <domain>.get_quantity() ( method), 51
quantity = <domain>.create_-
    quantity_from_expression()      (
method), 80

reflective boundary, 112
Reflective_boundary (class in ), 59
resolution, 112

separate_points_by_polygon, 102
Set_elevation_operator (class in ), 63
stage, i, 112
structures, 63
sww2dem() (in module ), 84
sww2timeseries() (in module ), 67

time boundary, 112
Time_boundary (class in ), 59
topography, 112
transmissive boundary, 112
Transmissive_boundary (class in ), 59
Transmissive_momentum_set_stage_-
    boundary (class in ), 60
Transmissive_stage_zero_momentum_-
    boundary (class in ), 60

urs2sts() (in module ), 84
utilities.polygon (module), 101
utilities.polygon (standard module), 101

vertex, 112

X = find_optimal_smoothing_-
    parameter() ( method), 106
xmomentum, 112

ymomentum, 112
```


BIBLIOGRAPHY

- [nielsen2005] *Hydrodynamic modelling of coastal inundation*. Nielsen, O., S. Roberts, D. Gray, A. McPherson and A. Hitchman. In Zerger, A. and Argent, R.M. (eds) MODSIM 2005 International Congress on Modelling and Simulation. Modelling and Simulation Society of Australia and New Zealand, December 2005, pp. 518-523. ISBN: 0-9758400-2-9.
<http://www.mssanz.org.au/modsim05/papers/nielsen.pdf>
- [grid250] Australian Bathymetry and Topography Grid, June 2005. Webster, M.A. and Petkovic, P. Geoscience Australia Record 2005/12. ISBN: 1-920871-46-2.
<http://www.ga.gov.au/meta/ANZCW0703008022.html>
- [ZR1999] Catastrophic Collapse of Water Supply Reservoirs in Urban Areas. C. Zoppou and S. Roberts. *ASCE J. Hydraulic Engineering*, 125(7):686–695, 1999.
- [Toro1992] Riemann problems and the waf method for solving the two-dimensional shallow water equations. E. F. Toro. *Philosophical Transactions of the Royal Society, Series A*, 338:43–68, 1992.
- [KurNP2001] Semidiscrete central-upwind schemes for hyperbolic conservation laws and hamilton-jacobi equations. A. Kurganov, S. Noelle, and G. Petrova. *SIAM Journal of Scientific Computing*, 23(3):707–740, 2001.
- [KarypisK1999] Karypis, G. and V. Kumar (1999). A fast and high quality multilevel scheme for partitioning irregular graphs. *SIAM Journal on Scientific Computing* 20(1), 359.