



UTP-G3-WALL Test Plan

Prepared:HailinDu

Date:8/1/2023

Rev: 1.1

Revision History

Rev	Date	Description	Prepared	Reviewed	Approved
1.1	8/1/2023	1st Release	Hailin.Du	HW: Kelvin.Wang SW: Michael.Wu FTU/FCD: Kevin.Wen AUD: James.Liu RF: Jack.Sung Camera: Chintse.Kuo	OK
1.2	8/22/2023			Add camera shutter off test in "T7-ASSY-QMMI Test"	
1.3	10/17/2023			Update FTU	
1.4	5/17/2025	Modify the burn condition	Simon/Jason	Ray.Wu	



1. DIRECTORY

1. T1-BL-DOWNLOAD FCD IMAGE	7
1.1 EQUIPMENT LIST	7
1.2 CONNECTION DIAGRAM	8
1.3 SOFTWARE SETUP	8
1.3.1 FTU tool download	8
1.3.2 FCD image download	8
1.3.3 Qualcomm USB Drivers installation	9
1.3.4 Install “QFIL” tool	15
1.4 SETUP ENVIRONMENT	19
1.5 TEST PROCESS	20
1.6 CHECK RESULT	21
2. T2-BL-NRF5340 PROGRAM	21
2.1 EQUIPMENT LIST	21
2.2 CONNECTION DIAGRAM	22
2.3 SOFTWARE SETUP	22
2.3.1 Tool download and installation	22
2.4 SETUP ENVIRONMENT	23
2.5 TEST PROCESS	25
2.6 CHECK RESULT	25
3. T3-BL-BT-VERIFY	25
3.1 EQUIPMENT LIST	25
3.2 CONNECTION DIAGRAM	26



3.3 SOFTWARE SETUP	26
3.3.1 Install “QDART 00035”	26
3.3.2 Install “IQmeasure”	26
3.3.3 Install “LitePoint_QTI_SCPI_Combo_3.0.3”	27
3.3.4 Install “NI drivers”	27
3.3.5 Install “qpst.win.2.7_installer_00496.2”	27
3.3.6 USB driver Download.....	29
3.3.7 Google adb driver installation.....	29
3.4 SETUP ENVIRONMENT.....	36
3.5 TEST PROCESS	41
3.6 CHECK RESULTS	41
4. T4-BL-WIFI-VERIFY.....	43
4.1 EQUIPMENT LIST	43
4.2 CONNECTION DIAGRAM	43
4.3 SOFTWARE SETUP	43
4.4 SETUP ENVIRONMENT.....	43
4.5 TEST PROCESS	47
4.6 CHECK RESULTS	48
5. T5-BL-FCD	49
5.1 EQUIPMENT LIST	49
5.2 CONNECTION DIAGRAM	49
5.3 SOFTWARE SETUP	49
5.3.1 FCD File	49
5.3.2 Key files	50
5.4 SETUP ENVIRONMENT.....	50



5.5 TEST PROCESS	52
5.6 CHECK RESULT.....	53
6.T6-ASSY-BURN-IN.....	53
6.1 EQUIPMENT LIST	53
6.2 CONNECTION DIAGRAM	54
6.3 SETUP ENVIRONMENT.....	54
6.4 TEST PROCESS	54
6.5 CHECK RESULT.....	58
7. T7-ASSY-QMMI TEST	58
7.1 EQUIPMENT LIST.....	58
7.2 CONNECTION DIAGRAM	59
7.3 TEST PROCESS	59
7.4 CHECK RESULT.....	68
8. T8-ASSY-FTU	68
8.1 EQUIPMENT LIST.....	68
8.2 CONNECTION DIAGRAM	69
8.3 SOFTWARE SETUP	69
8.4 SETUP ENVIRONMENT.....	69
8.5 TEST PROCESS	71
8.6. CHECK RESULT.....	90
9. T9-ASSY-AP LINK TEST	91



9.1 EQUIPMENT LIST	91
9.2 CONNECTION DIAGRAM	92
9.3 SOFTWARE SETUP	92
9.3.1 Tool download and installation	92
9.3.2 Config WIFI Golden	93
9.4 SETUP ENVIRONMENT	100
9.5 TEST PROCESS	101
9.6 CHECK RESULT	101
10. T10-ASSY-AUDIO	102
10.1 EQUIPMENT LIST	102
10.2 CONNECTION DIAGRAM	102
10.3 SOFTWARE SETUP	103
10.3.1 FTU tool download	103
10.4 SETUP ENVIRONMENT	104
10.5 TEST PROCESS	105
10.6 TEST CRITIRIA	107
10.7 CHECK RESULT	107
11. ASSY-CAMERA TEST	108
11.1 EQUIPMENT LIST	108
11.2 CONNECTION DIAGRAM	109
11.3 SOFTWARE SETUP	109
11.3.1 FTU tool download	109
11.4 SETUP ENVIRONMENT	109



11.5 TEST PROCESS	110
11.6 CHECK RESULT.....	112
12. T12-ASSY-SHIPPING FW	113
12.1 EQUIPMENT LIST.....	113
12.2 CONNECTION DIAGRAM	114
12.3 SOFTWARE SETUP	114
12.3.1 FTU tool download	114
12.3.2 Shipping FW file.....	114
12.4 SETUP ENVIRONMENT	115
12.5 TEST PROCESS	117
12.6 CHECK RESULT.....	119
13. T13-PACKING-SHIPPING FW CHECK & CCD CHECK.....	121
13.1 EQUIPMENT LIST.....	121
13.2 CONNECTION DIAGRAM	121
13.3 SOFTWARE SETUP	122
13.3.1 FTU tool download	122
13.4 SETUP ENVIRONMENT	122
13.5 TEST PROCESS	122
13.6 CHECK RESULT.....	127




After SMT (Board testing)

1. T1-BL-Download FCD image

1.1 Equipment List

Please reference equipment list.

1.2 Connection Diagram

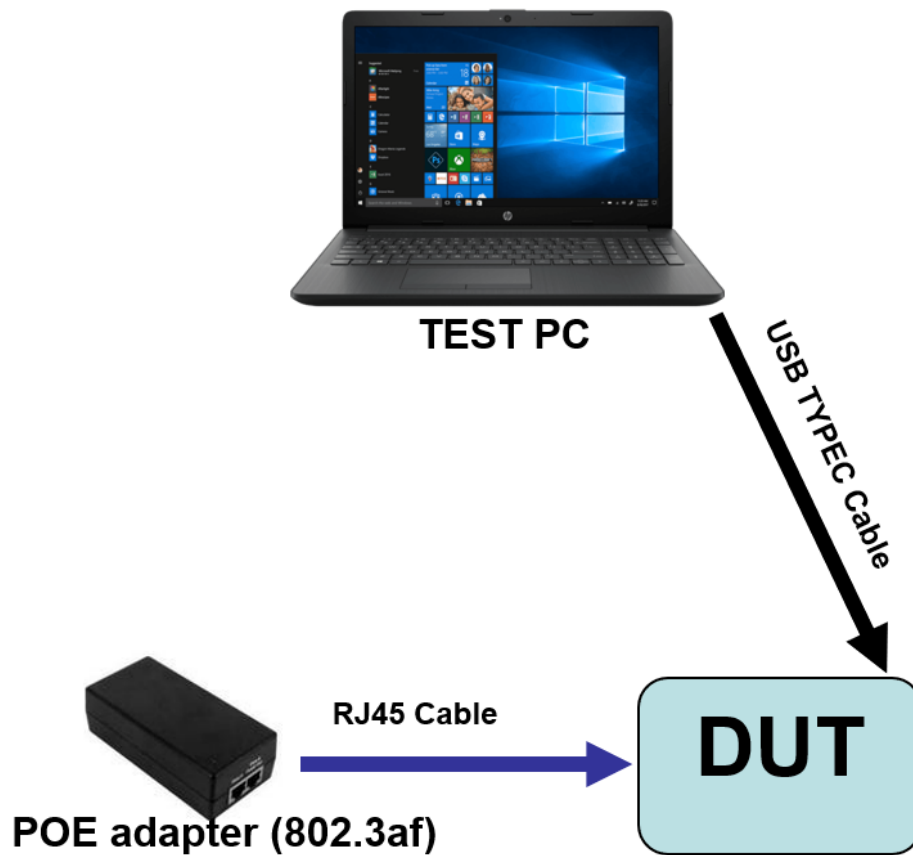


1.3 Software Setup

1.3.1 FTU tool download

- 1). Download FTU file ([FTU_efba_1.0.11_1.0.0_UTP-G3-TouchMax-Wall.zip](#)) from path.
- 2). Please contact to UBNT RD (Kevin.Wen@ui.com) for any update!


1.3.2 FCD image download

- 1). Download FCD image file ([UTP_WALLMOUNT_FCD_V006.20230617.101602.7z](#)) from path.
- 2). Please contact to UBNT RD (Michael.Wu @ui.com) for any update!
- 3). Put the unzipped FCD file on the disk C.

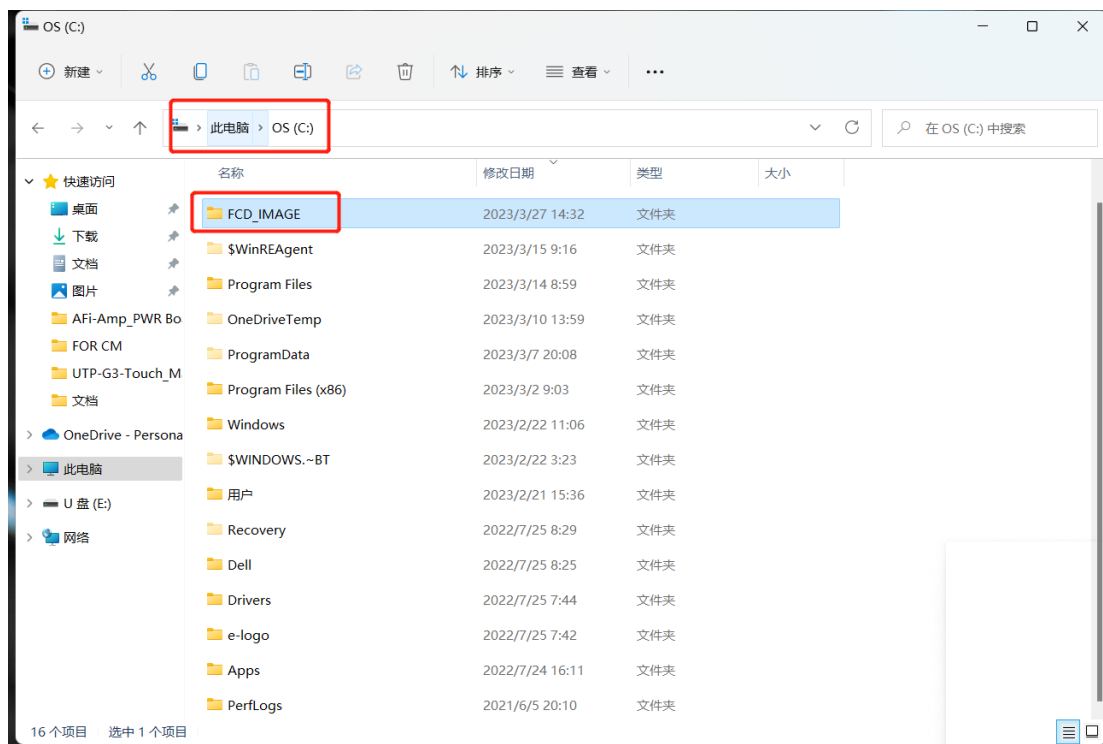


1.3.3 Qualcomm USB Drivers installation


- 1). Download the “QUD.WIN.1.1 Installer-10039.2.zip” and unzip it.
- 2). Double click “Setup.exe” .


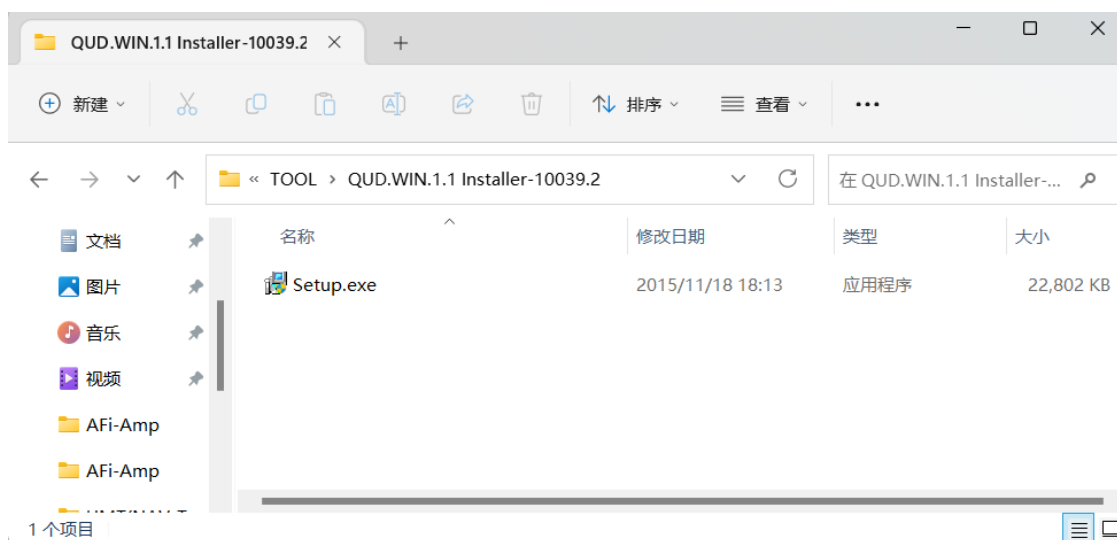


- 3). Please follow the steps below.

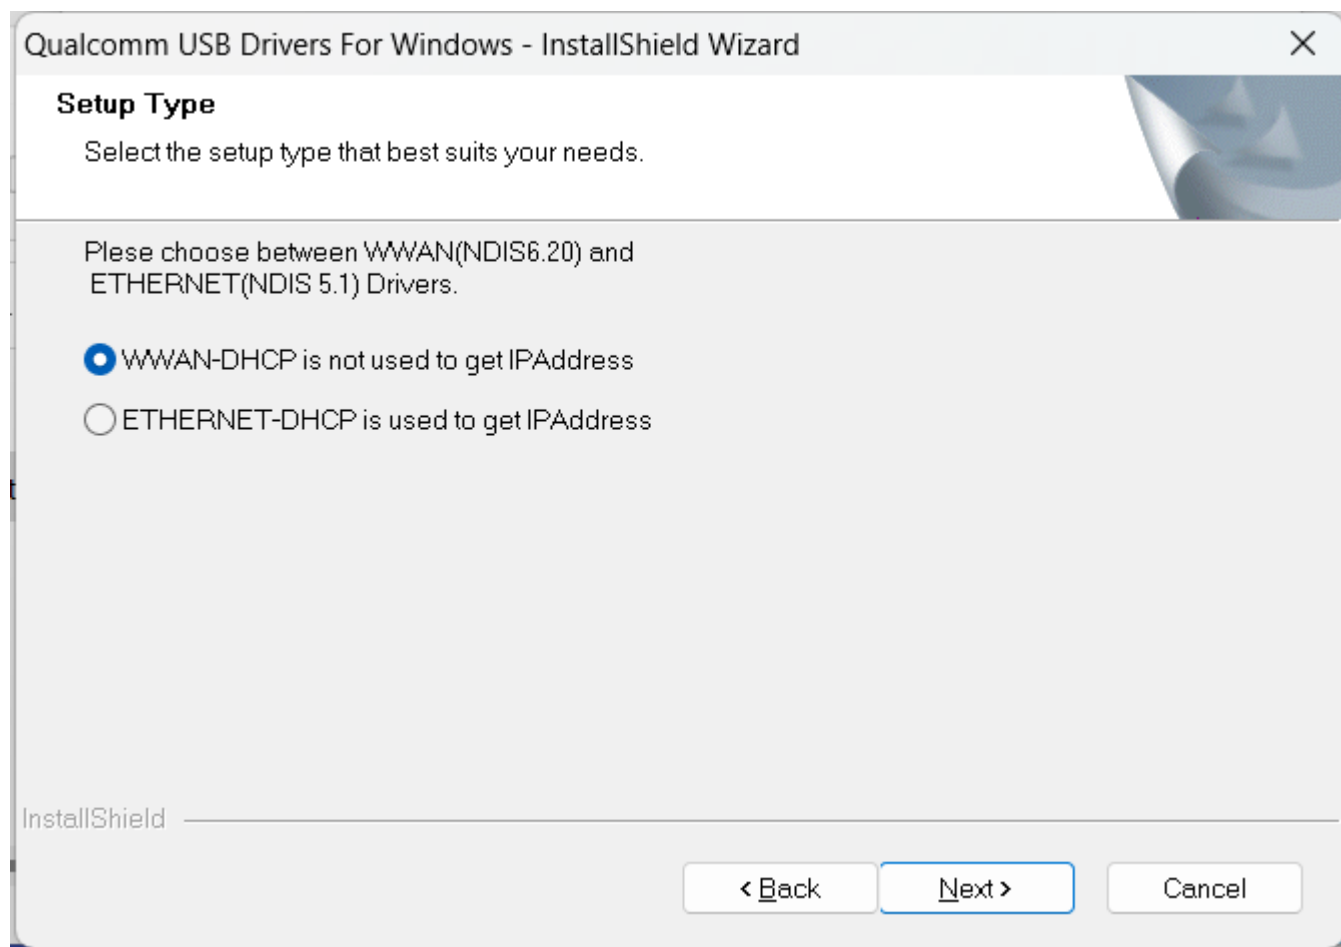




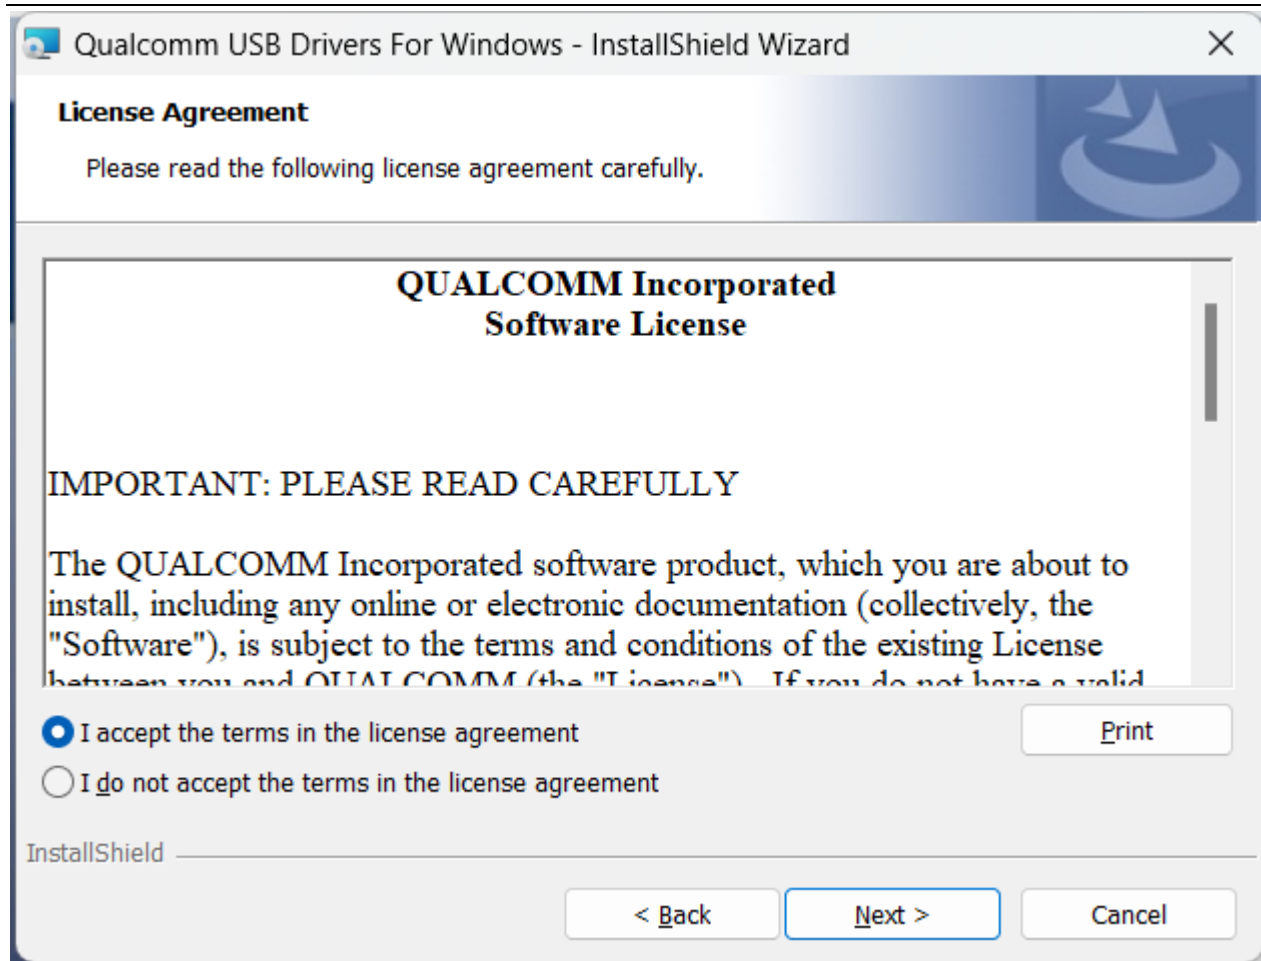

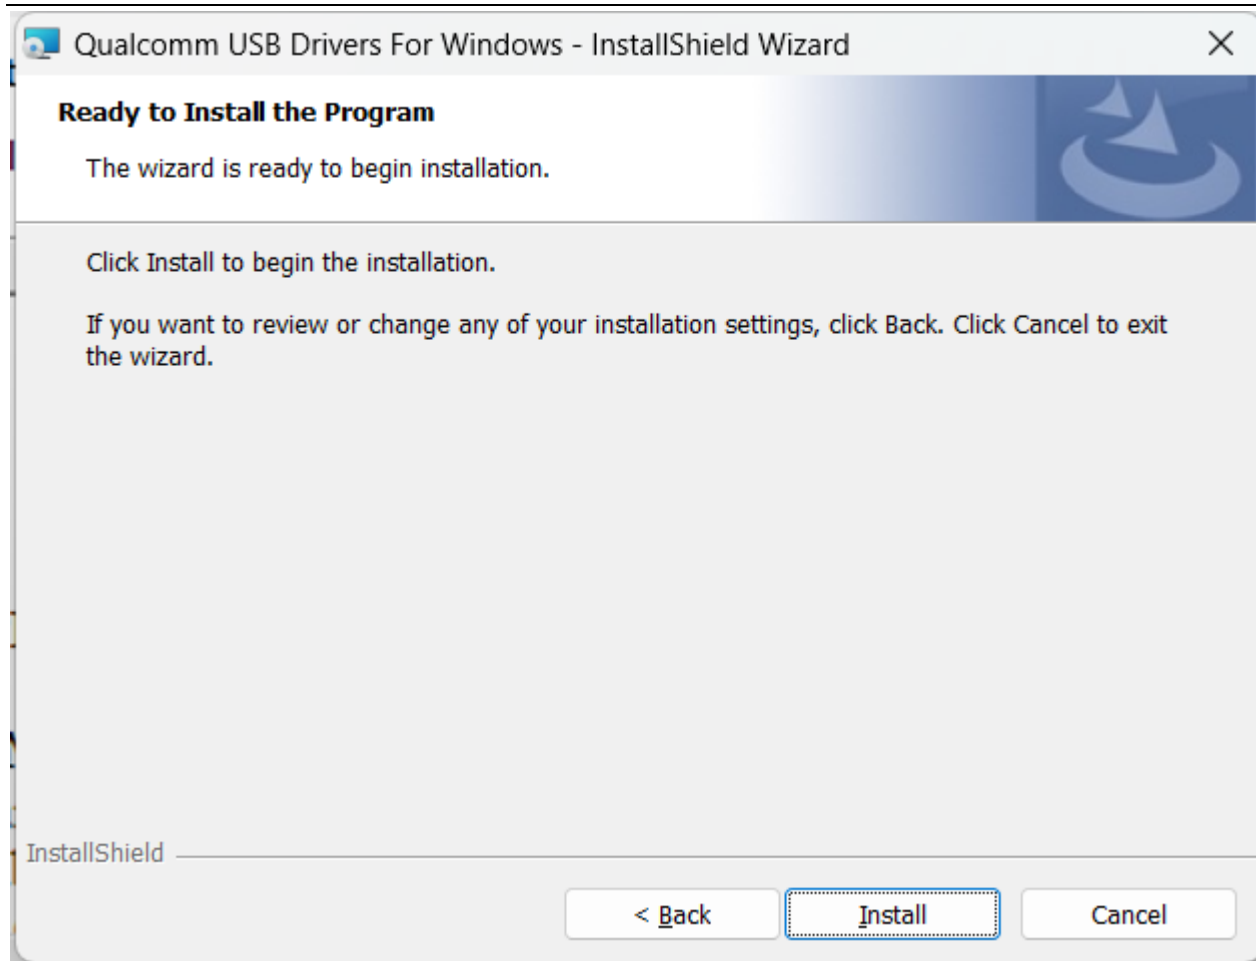




4). After the installation, you can see the following information in the control panel.

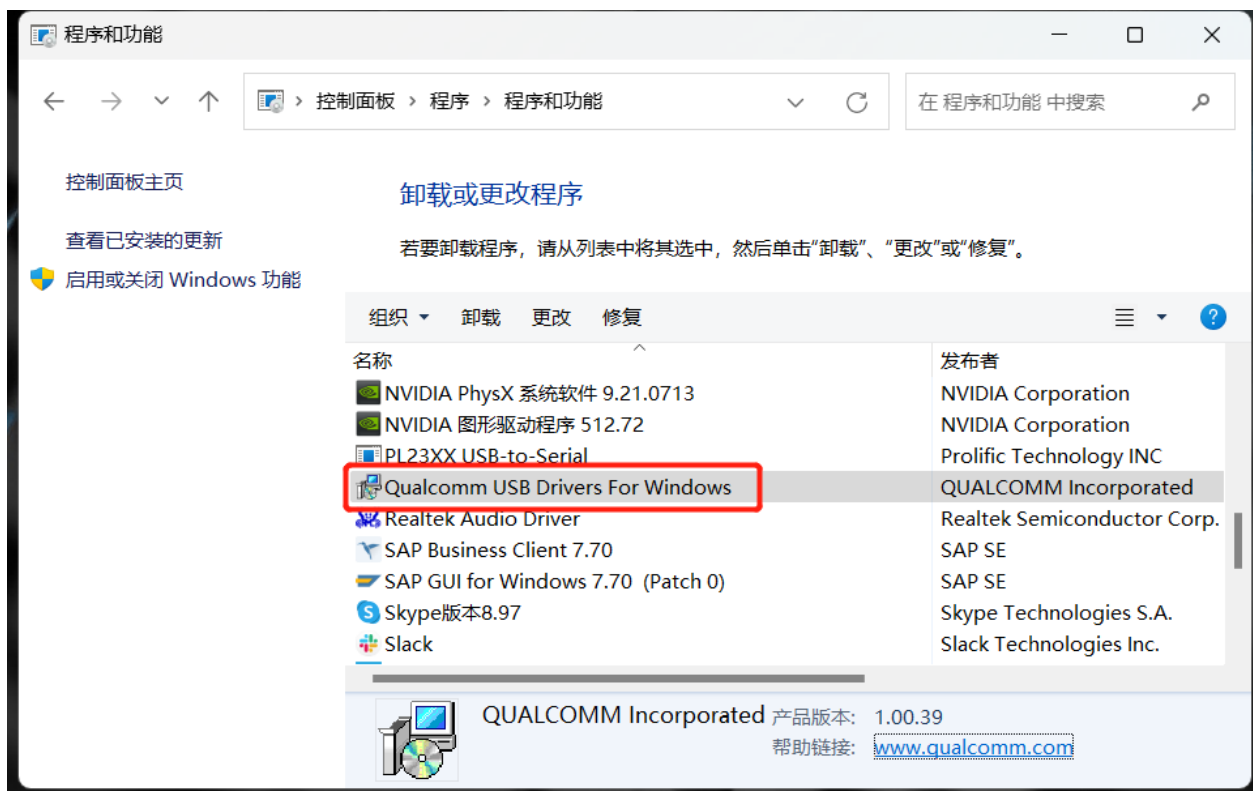




5). After you connect the DUT, you can see the following driver information in Device Manager.

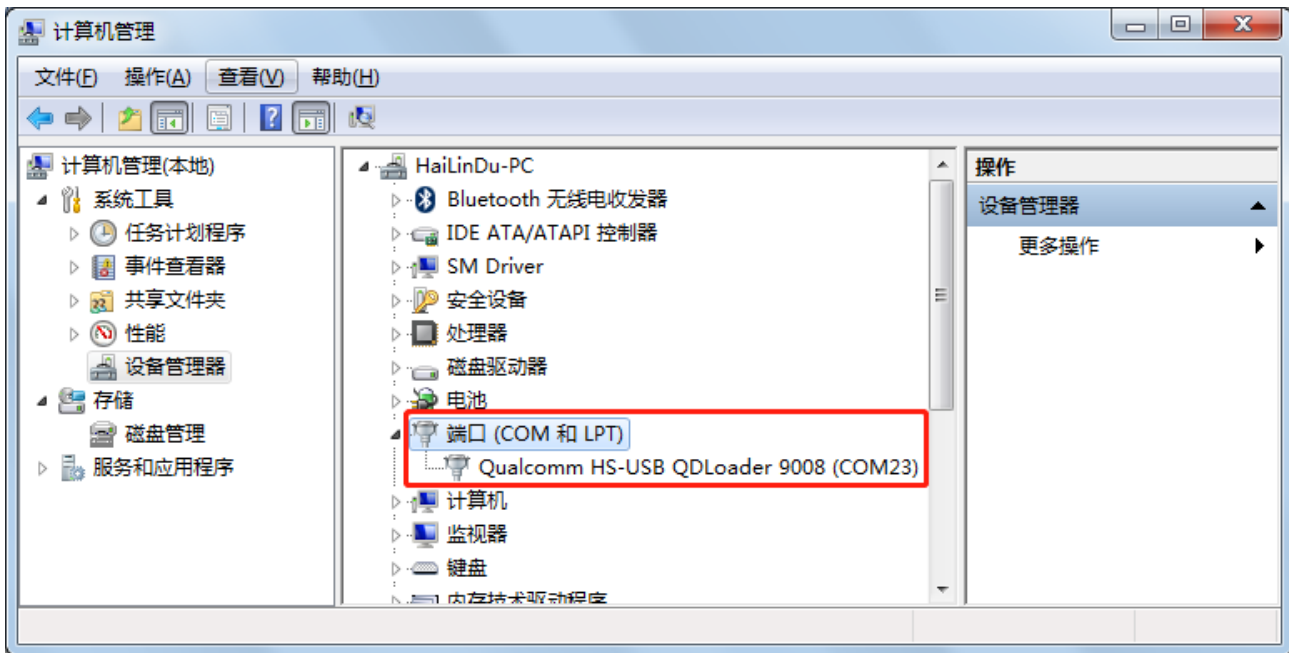


1.3.4 Install “QFIL” tool


1). Download the “qpst.win.2.7_installer_00490.1.zip” and unzip it.


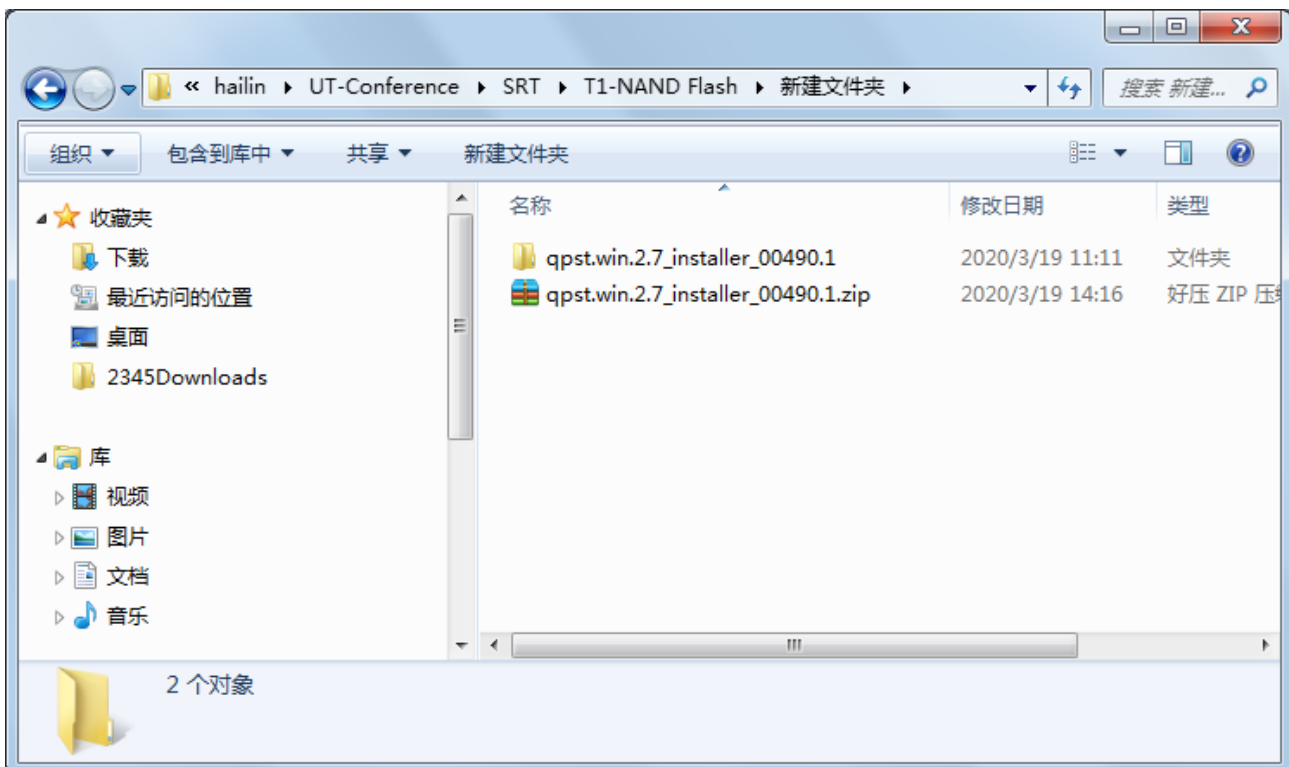




2). Double click “QPST.2.7.490.1.exe” .

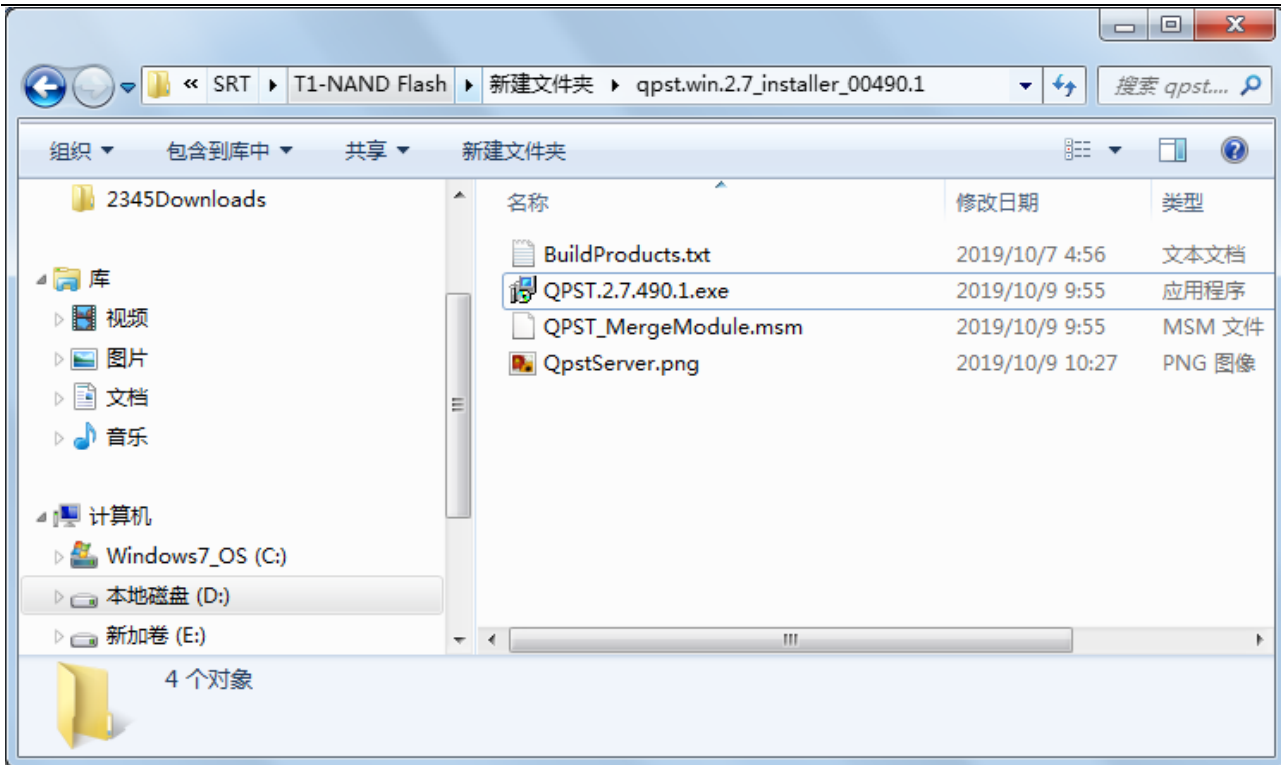


3). Please follow the steps below.

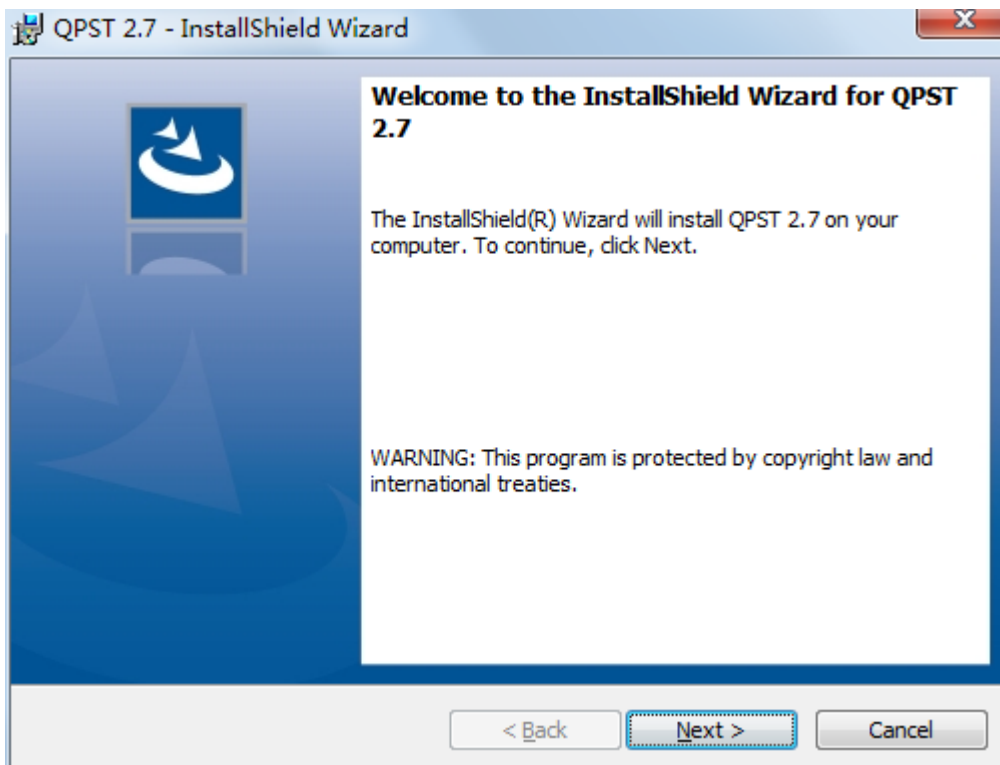

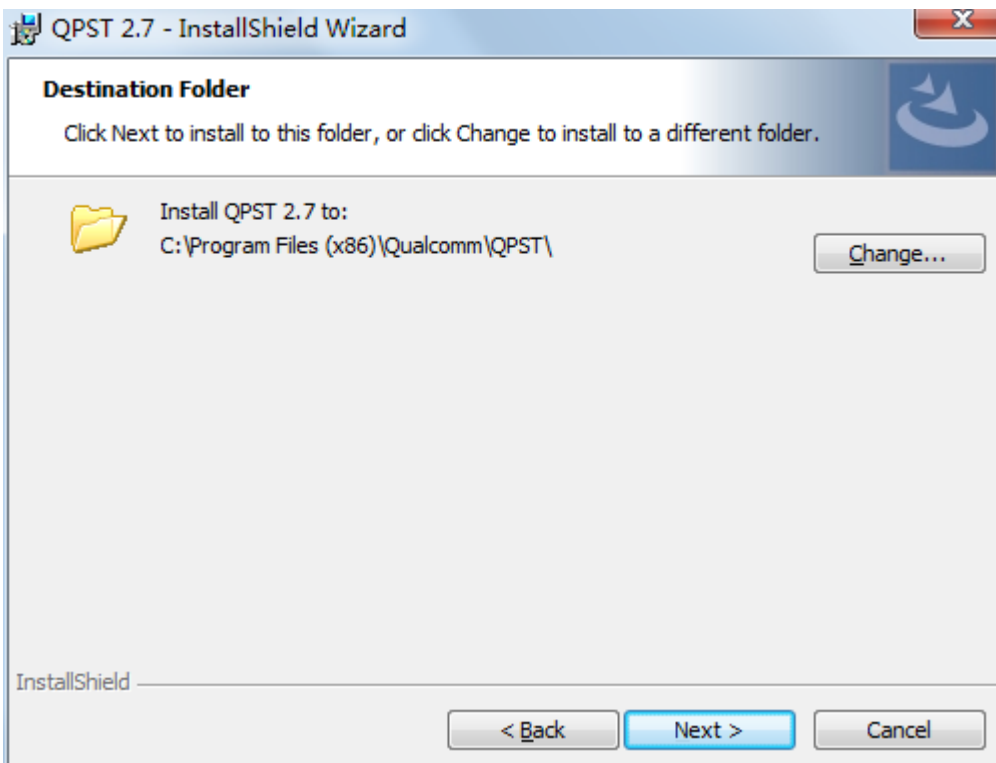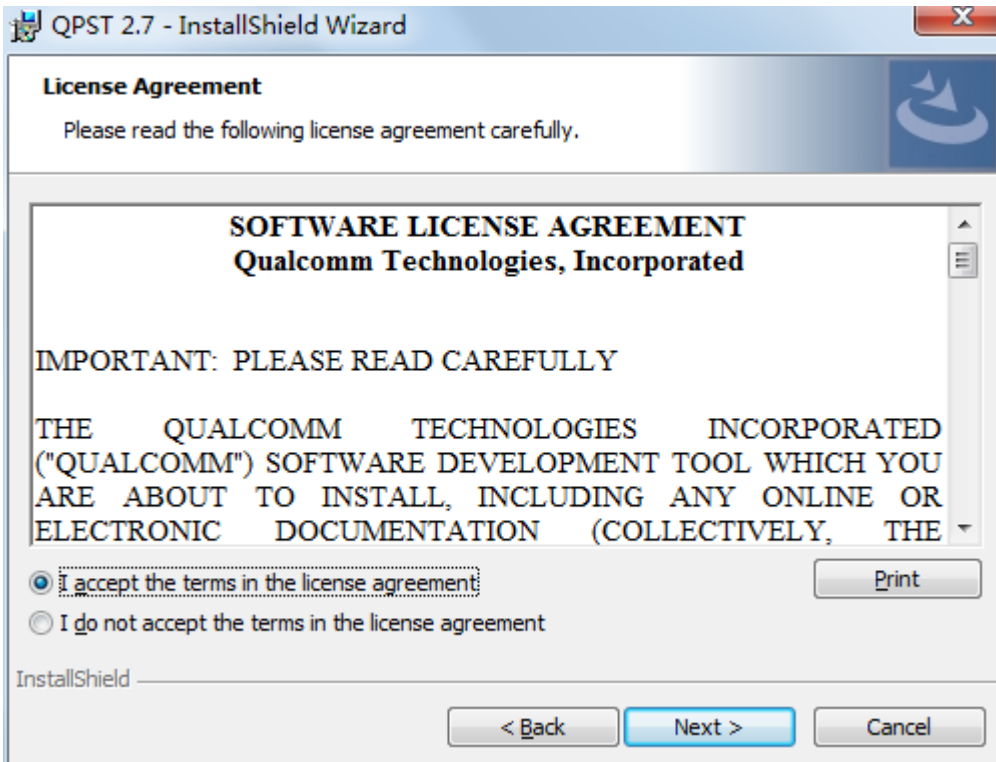


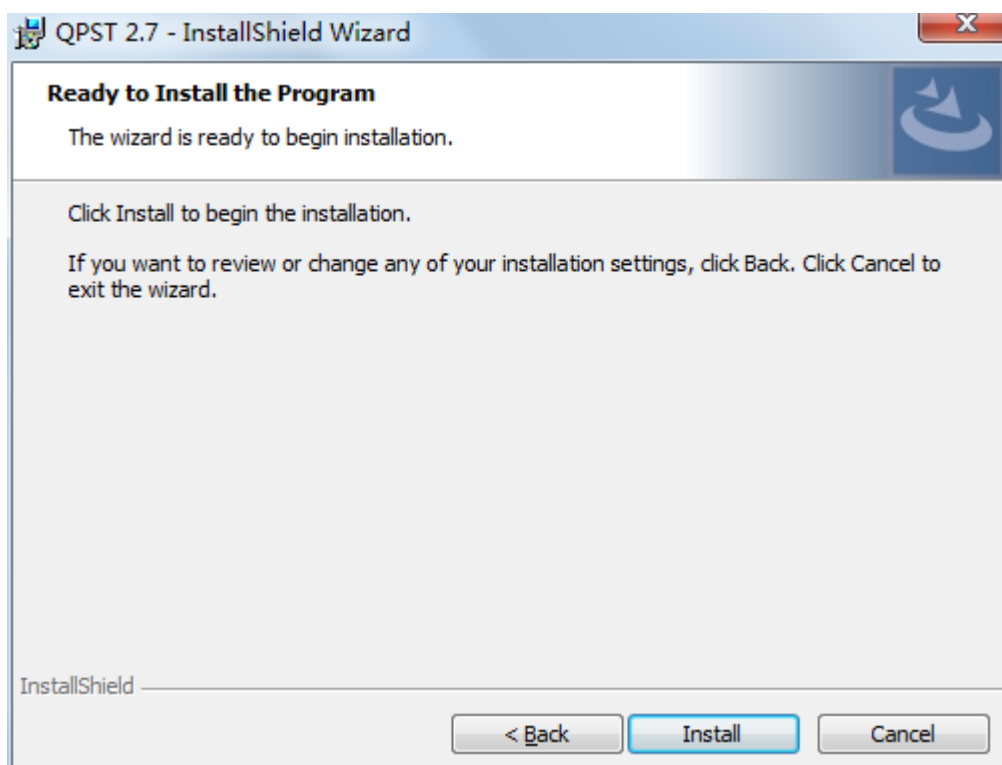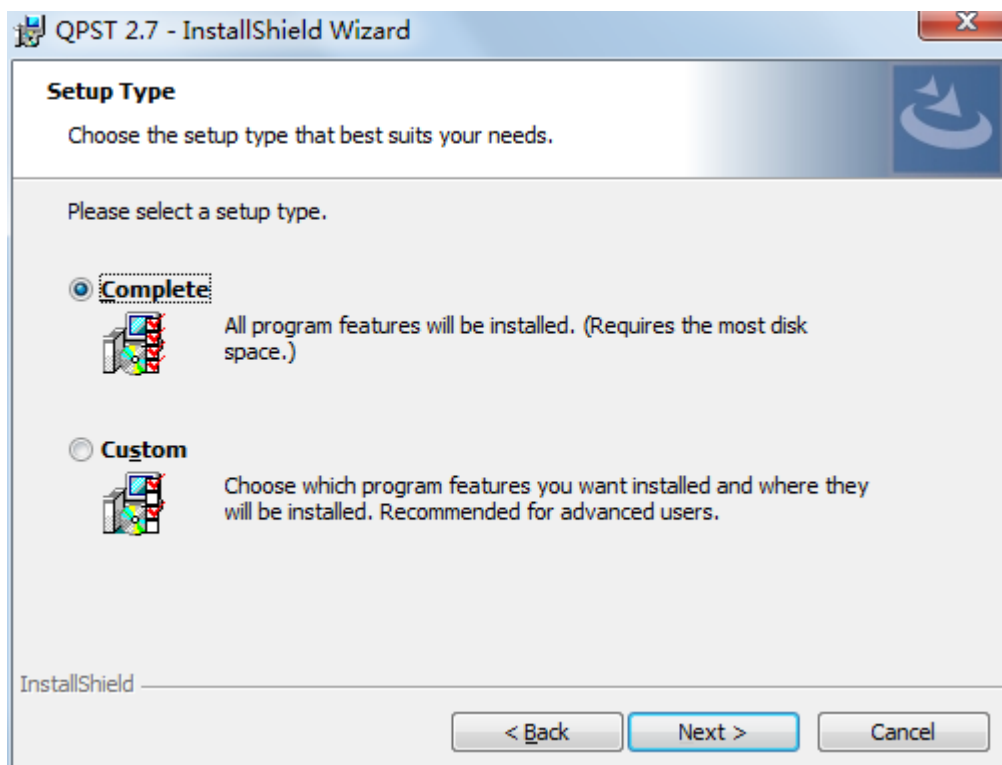

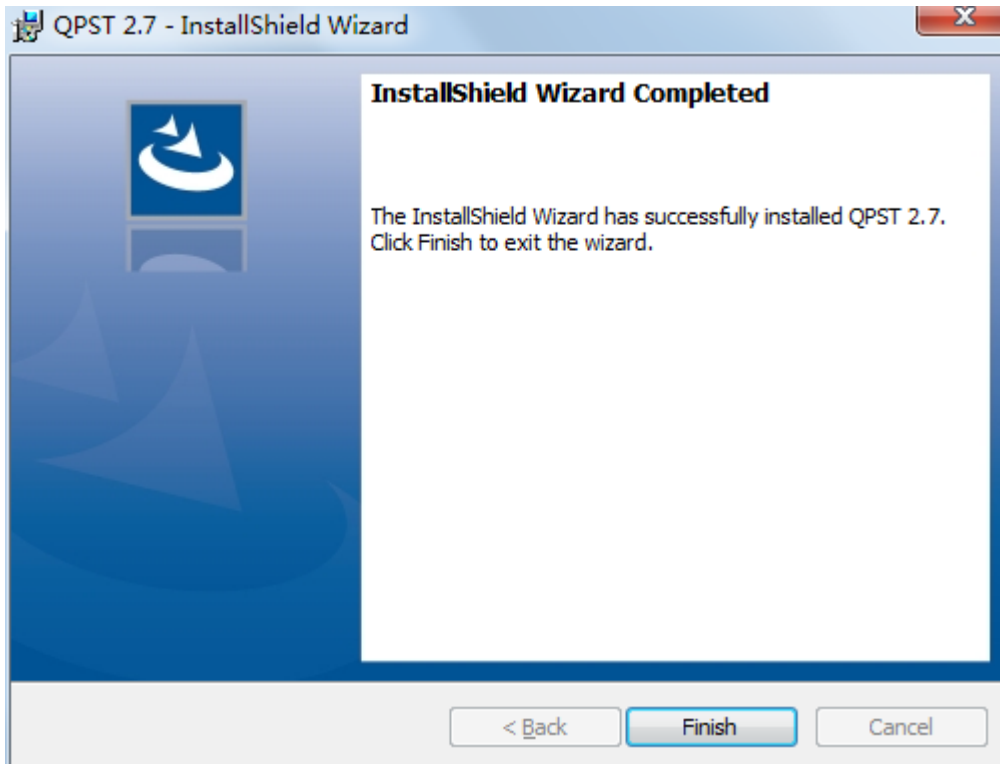


1.4 Setup Environment


1). Double-click "run_windows_mvc.bat" in FTU tool.

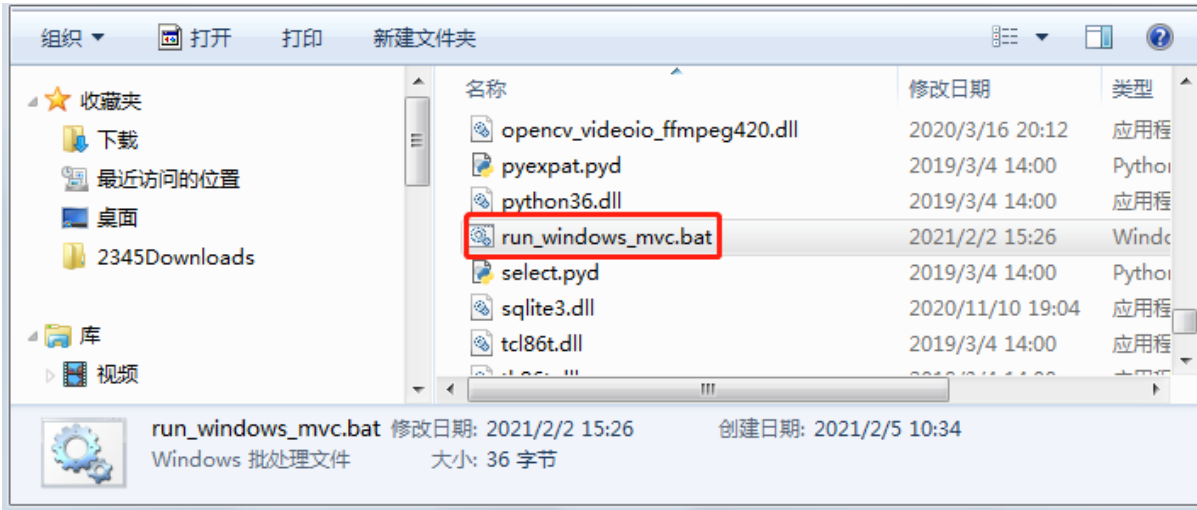

2). FTU setting (Review the version and test items).

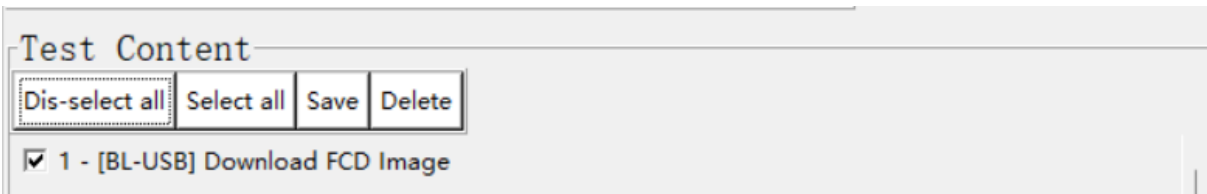

3). Choose the right USB COM Port and change to COM11.

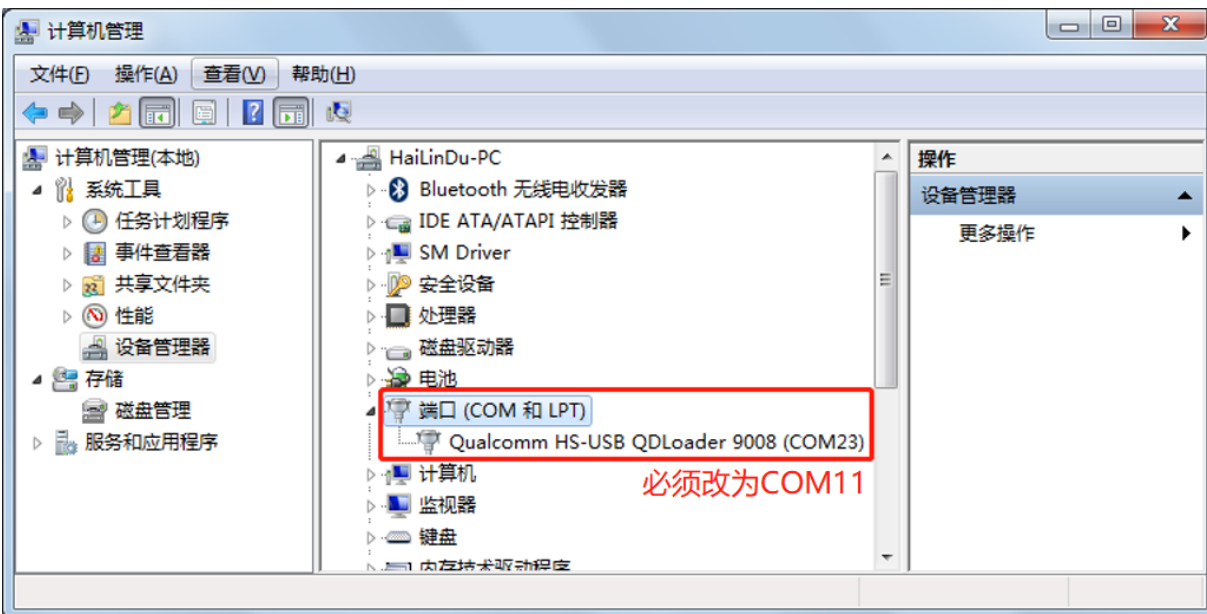

1.5 Test Process

- 1). Power on DUT by 48V POE.
- 2). Scan "MAC ID", then click button "F2" .




MAC:

Test Content

1.6 Check Result

Waiting for the test program show **PASS** or **FAIL** result.

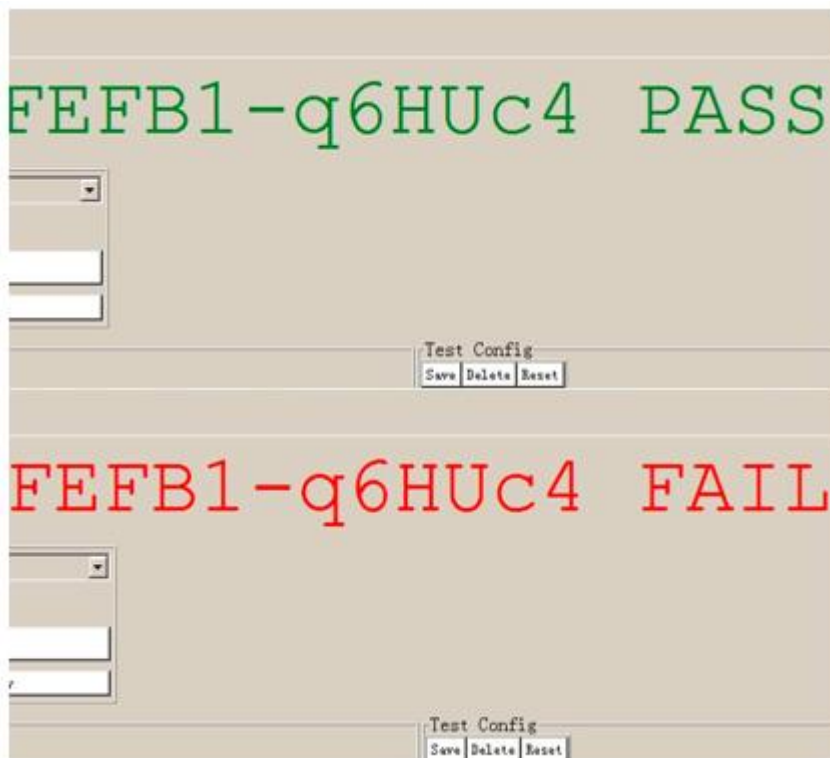


2. T2-BL-nRF5340 Program

2.1 Equipment List

Please reference equipment list.

2.2 Connection Diagram

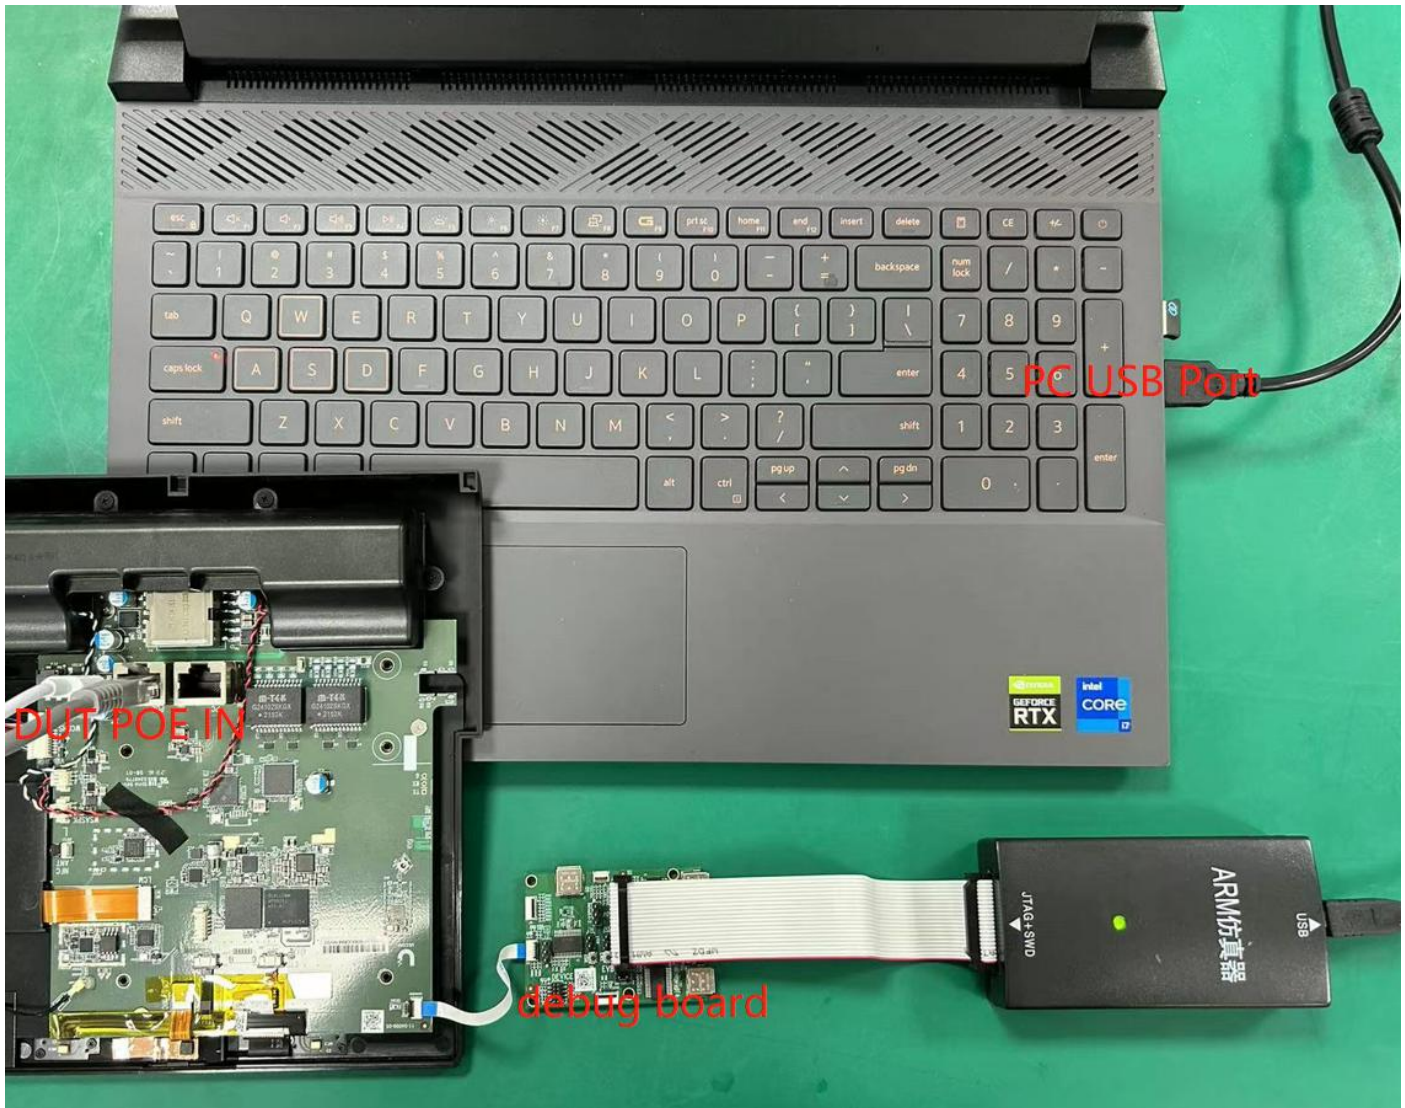

2.3 Software Setup

2.3.1 Tool download and installation

- 1). Download “nrf-command-line-tools-10.18.1-x64.exe” at <https://drive.google.com/drive/folders/14S-smGw7IpJtLWkqnZFKSnGEw0VZN3IO> then install it.
- 2). Please contact to UBNT RD (Kelvin.Wang@ui.com) for any update!



云端硬盘

在云端硬盘中搜索

+ 新建

- ☒ 优先
- 我的云端硬盘
- 与我共享
- 最近用过
- 已加星标
- 垃圾内容
- 回收站
- 存储空间

已使用 91.69 GB

与我共享 > NRF tool

文件类型 相关人员 上次修改日期 (发送反馈给 Google)

名称 ↑

	nrf-command-line-tools-10.18.1-x64.exe	
	nrfconnect-setup-3.12.0-ia32.exe	

3). Download FTU file ([FTU_efba_1.0.11_1.0.0_UTP-G3-TouchMax-Wall.zip](#)) from path.

4). Please contact to UBNT RD (Kevin.Wen@ui.com) for FTU any update!

5). Download nRF5340 Program file from BOM.

6). Please contact to UBNT RD (Kelvin.Wang@ui.com) for any update!

nrf5340

新建 剪切 复制 粘贴 删除 排序 查看 全部解压缩

« tools » utp-g3-touchmax-wall » nrf5340 在 nrf5340 中搜索

名称	类型	压缩大小	密码保护	大
merged.hex	HEX 文件	659 KB	否	
net_core_app_signed.hex	HEX 文件	238 KB	否	

2 个项目


2.4 Setup Environment

1). Connect to debug board with FFC cable then power on MB.


2). Jlink connect to PC then check the indicator LED is green light.



3). Double-click "run_windows_mvc.bat" in FTU tool.

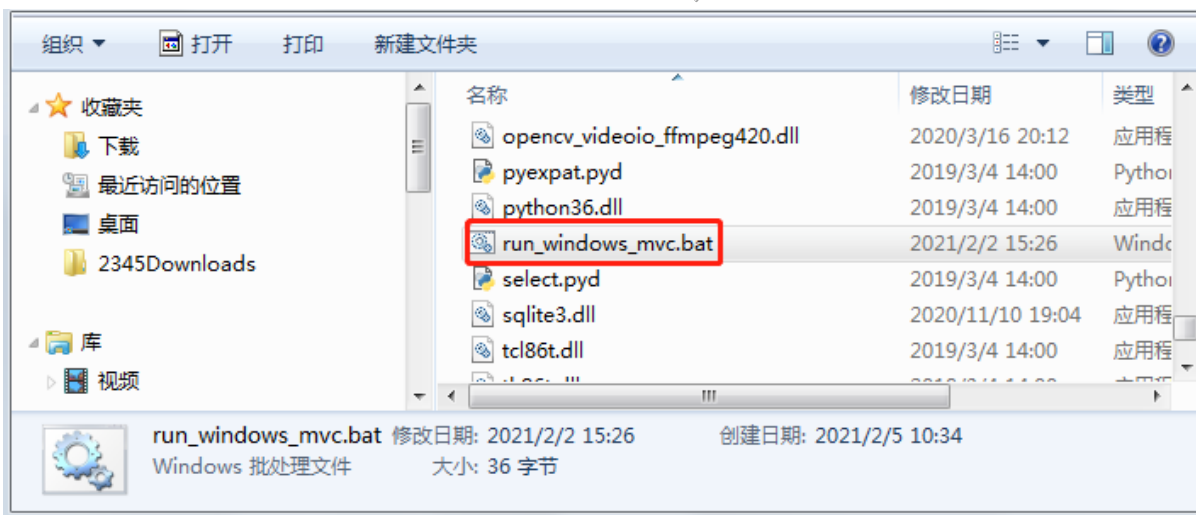

4). FTU setting (Review the version and test items).

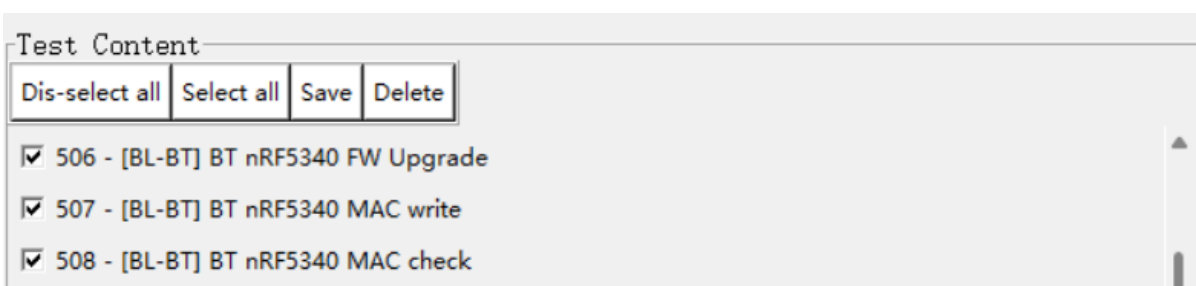



2.5 Test Process


- 1). Power on DUT by 48V POE.
- 2). Scan “MAC ID”, then click button “F2” .

MAC:

Test Content

2.6 Check Result

Waiting for the test program show **PASS** or **FAIL** result.

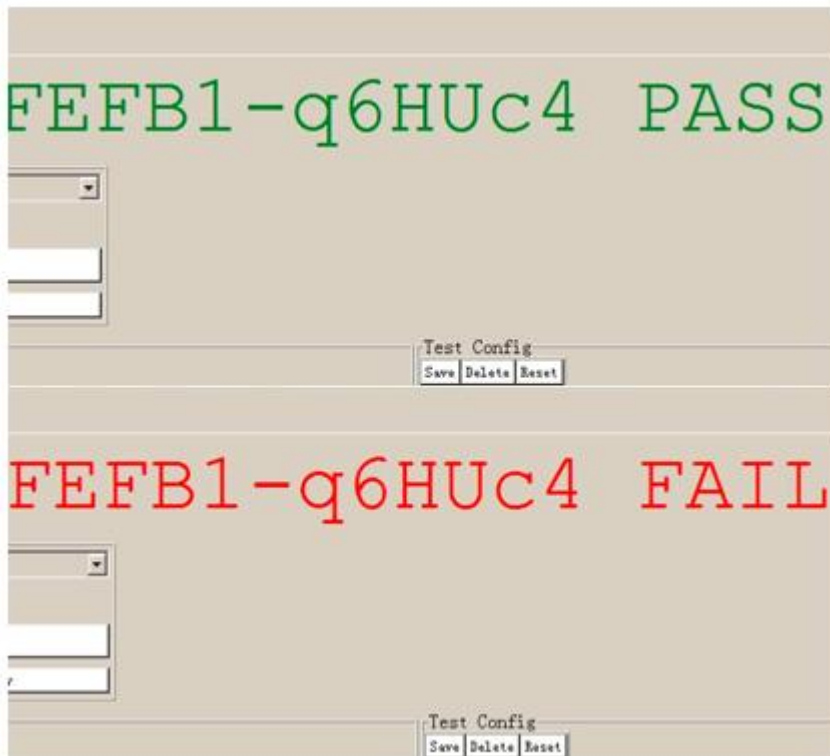


3. T3-BL-BT-Verify

(All shielding for the DUT must be installed before testing)

3.1 Equipment List

Please reference equipment list.

3.2 Connection diagram

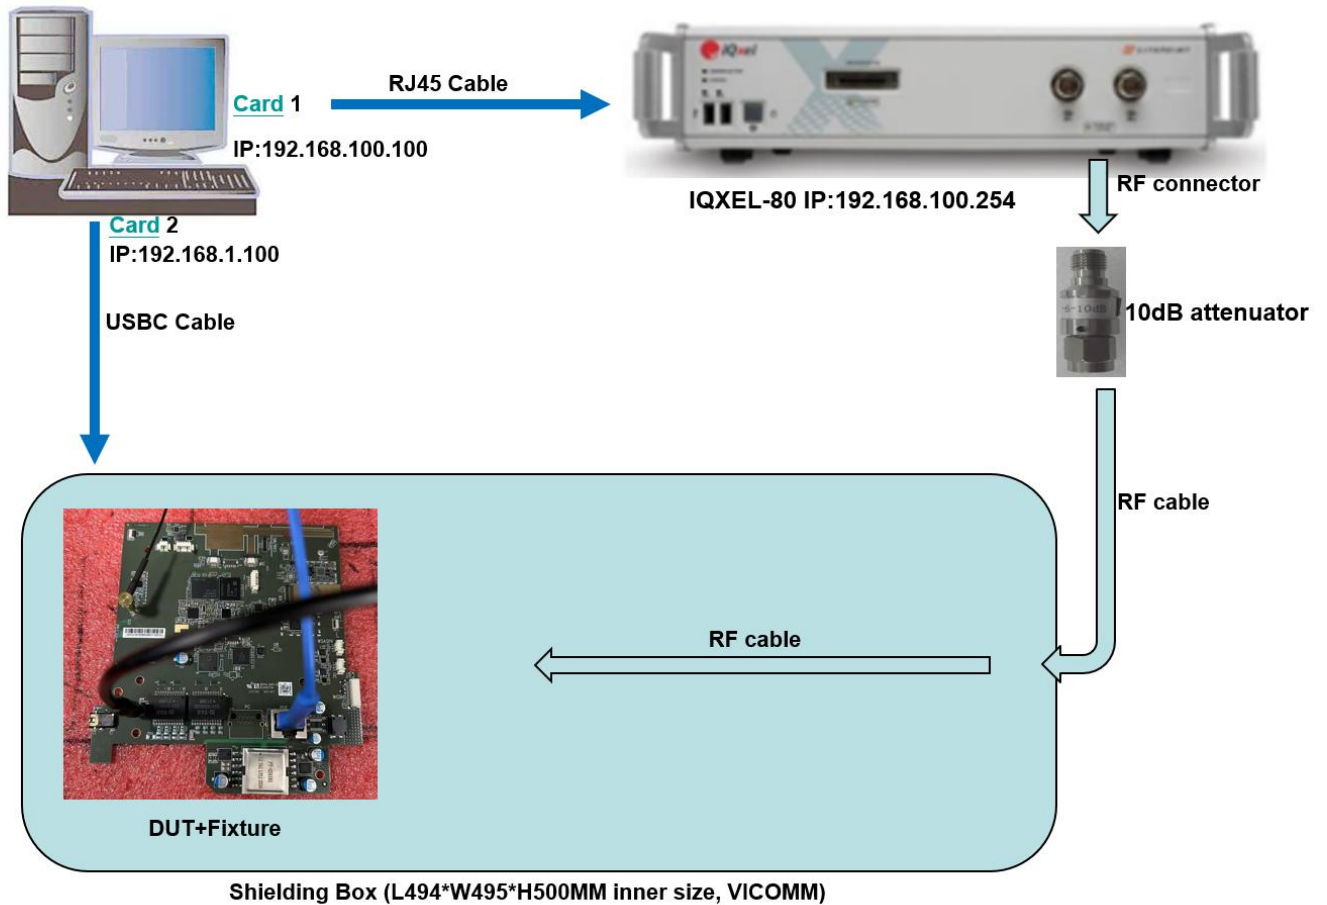

3.3 Software Setup


Download the online folder here

<https://drive.google.com/drive/folders/12qwo4cviuLjwzPqeywEDE07rprpml0Ji?usp=sharing>

3.3.1 Install “QDART 00035”

>>QDART_WIN_4_8_Installer_00035_4.zip

3.3.2 Install “IQmeasure”





3.3.3 Install “[LitePoint_QTI_SCPI_Combo_3.0.3](#)”

 User Guide.pdf

 Setup.exe

 releaseNote.pdf

 install.log

3.3.4 Install “[NI drivers](#)”

 NIVISA1850full.exe

 NI4882_1850f1.exe

 LVRTE2012f3std.exe

3.3.5 Install “[qpst.win.2.7_installer_00496.2](#)”

1). Install QPST

 BuildProducts.txt

 QPST.2.7.496.1.exe

 QPST_MergeModule.msm

 QpstServer.png

2). Unzip “[QDAT bin](#)” and copy all the files into

“C:\Qualcomm\WCN\ProdTests\BIN” .

3). Left click QSPR program at

“C:\ProgramData\Microsoft\Windows\Start Menu\Programs\QDART” .



4). Use the following settings.





3.3.6 USB driver Download

QDART: QDART_WIN_4_8_Installer_00035_4


Google adb driver:

<https://developer.android.com/studio/run/win-usb.html>

Note: If you're developing on Mac OS X or Linux, then you **do not** need to install a USB driver. Instead see [Using Hardware Devices](#).

You can download the Google USB Driver for Windows in one of two ways:

- [Click here to download the Google USB Driver ZIP file](#) (ZIP)
- Or, get it from the [Android SDK Manager](#) as follows:

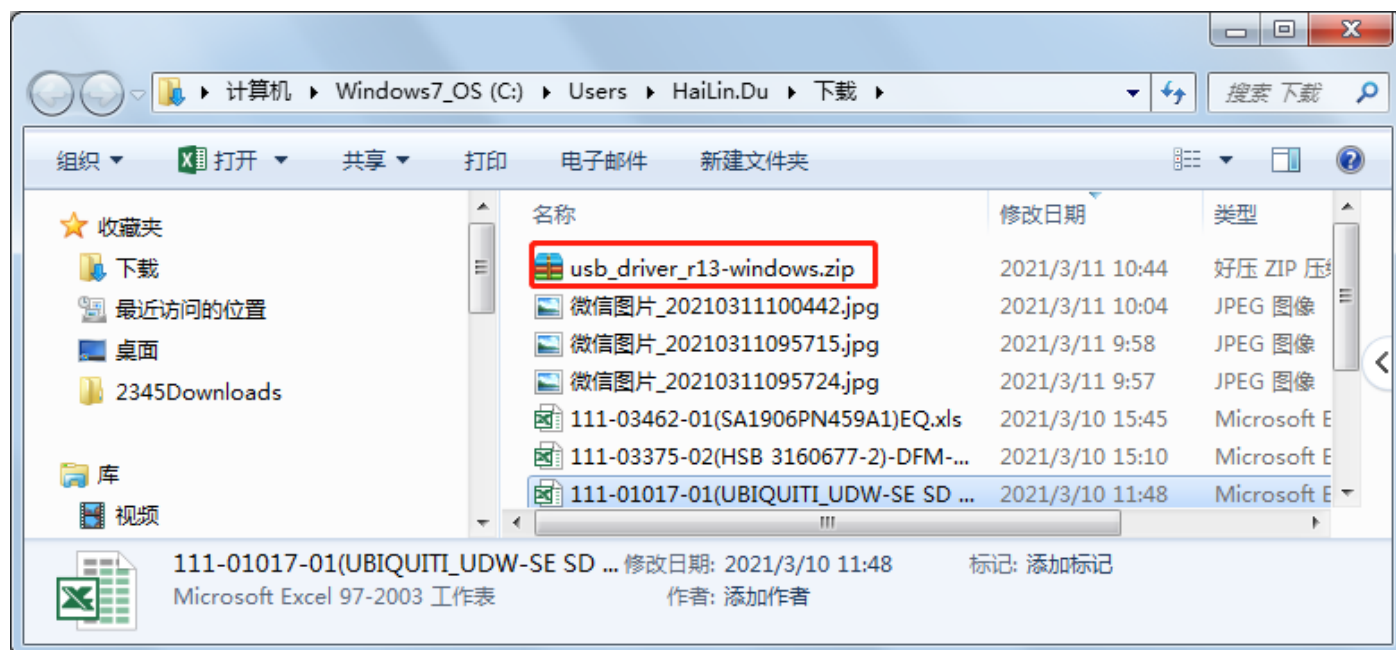


3.3.7 Google adb driver installation

1). Before installing google adb driver, please disable the digital certificate in advance.

Reference website:

<http://www.howtogeek.com/167723/how-to-disable-driver-signature-verification-on-64-bit-windows-8.1-so-that-you-can-install-unsigned-drivers/>

2). You'll need to run a command from an Administrator Command Prompt to do this. To launch one, right-click the Start button or press Windows+X and select "Command Prompt (Admin)".

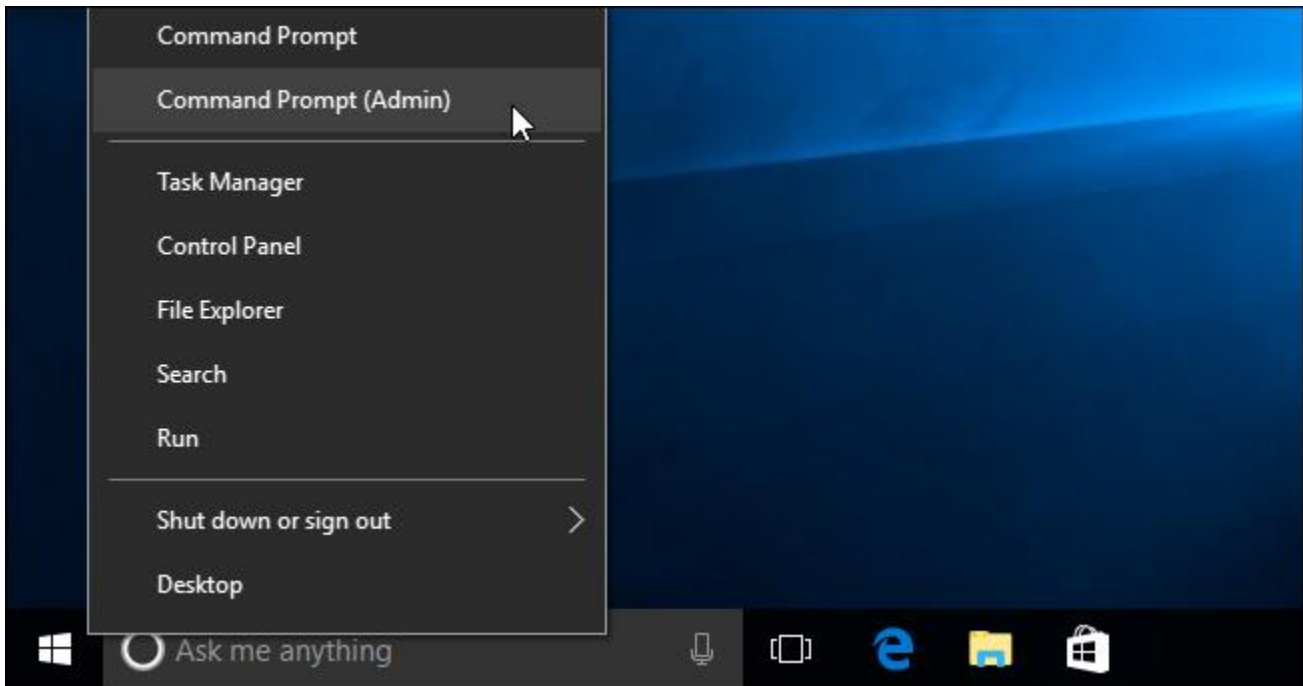


3). Paste the following command into the Command Prompt window and press Enter:
`bcdedit /set testsigning on`

```
Administrator: Command Prompt
Microsoft Windows [Version 10.0.14393]
(c) 2016 Microsoft Corporation. All rights reserved.


C:\Windows\system32>bcdedit /set testsigning on
The operation completed successfully.

C:\Windows\system32>
```


4). Restart your computer to enter test mode. You'll see the "Test Mode" watermark appear at the bottom right corner of your desktop and you'll be free to install whatever unsigned drivers you want.

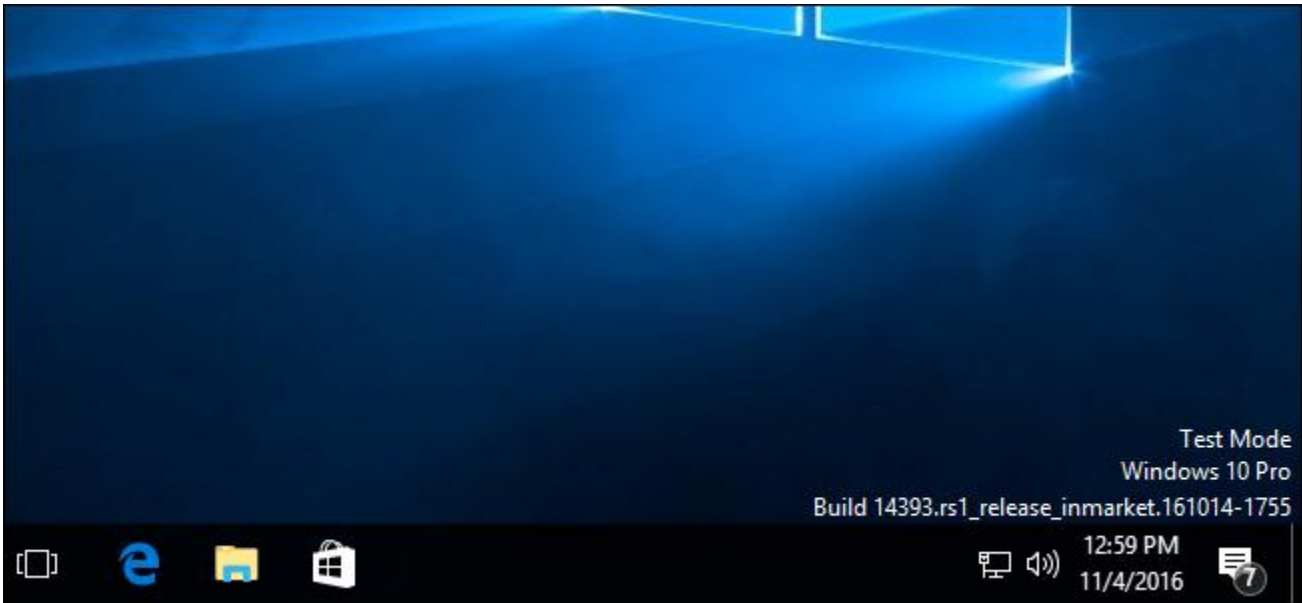


5). Please copy adb.exe, AdbWinApi.dll, AdbWinUsbApi.dll, fastboot.exe into C:\Windows\System32 and C:\Windows\SysWOW64.

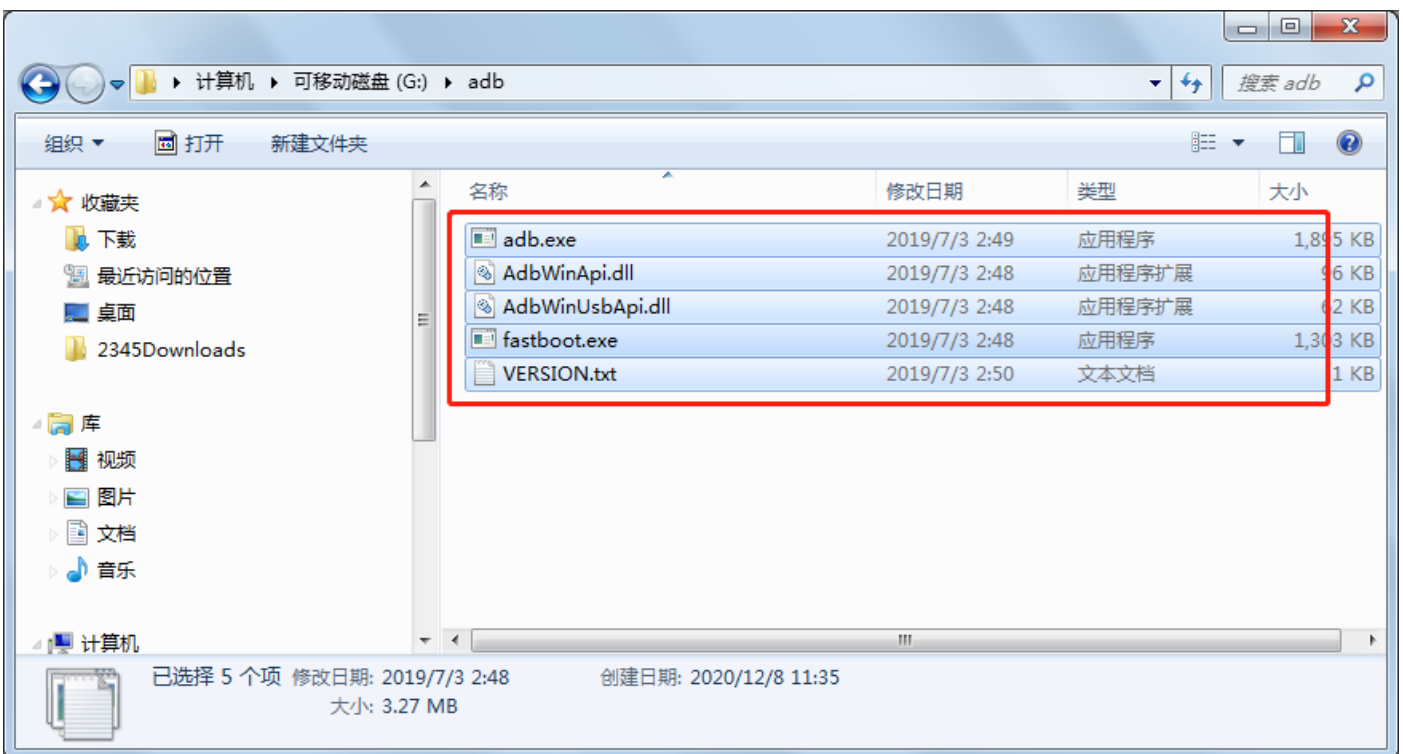


6). Please plug USB with DUT device and you will see following driver can't be installed. Right click to update driver.

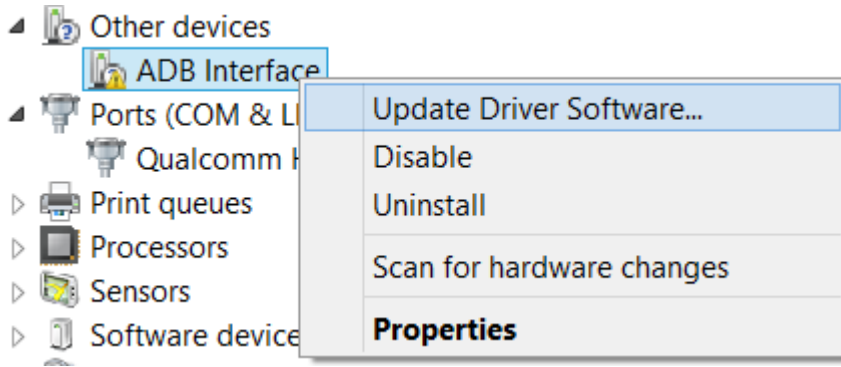


7). Choose “Browse my computer for driver software” .

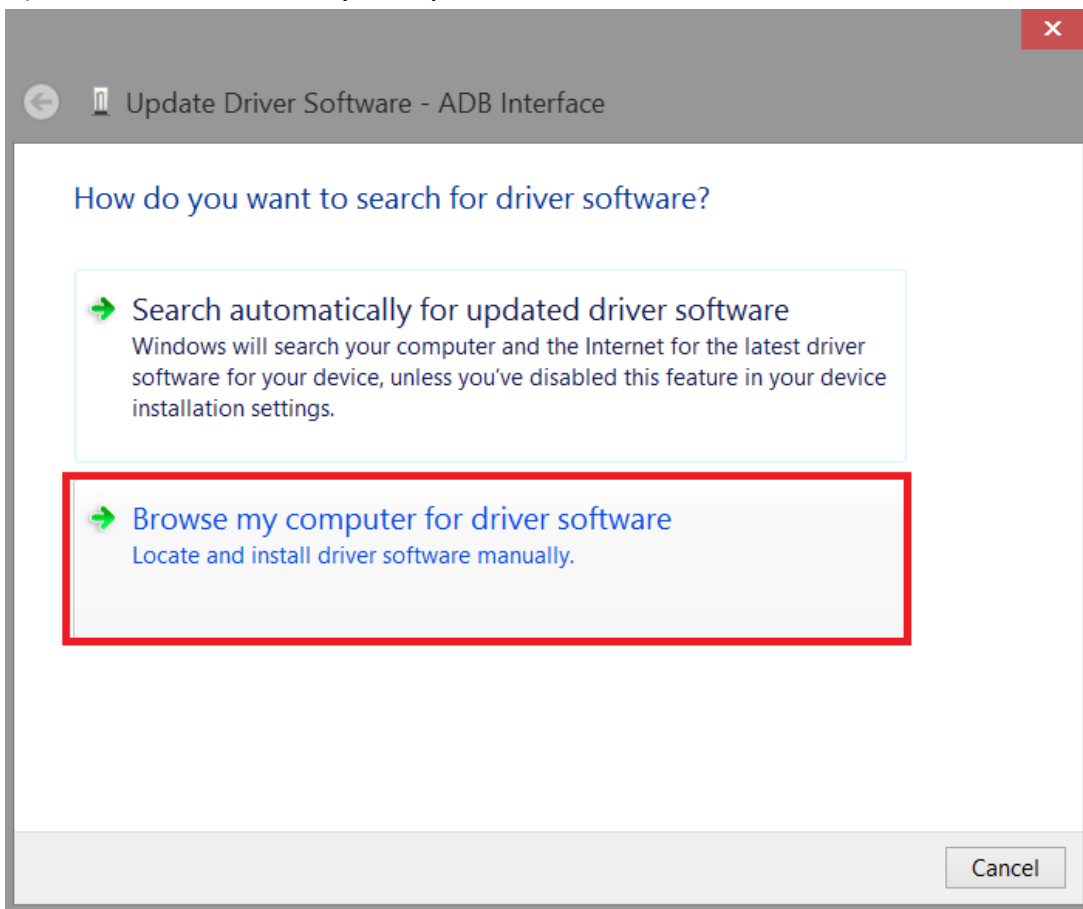


8). Choose “Let me pick from a list of device drivers on my computer” .

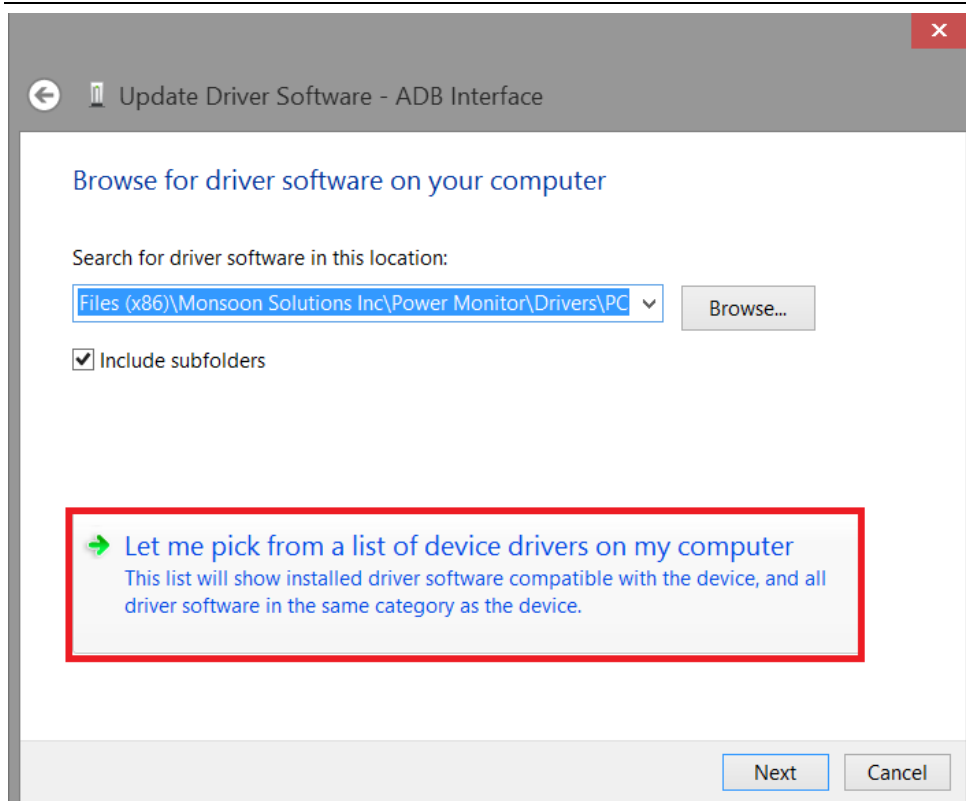


9). Choose “Next” directly.

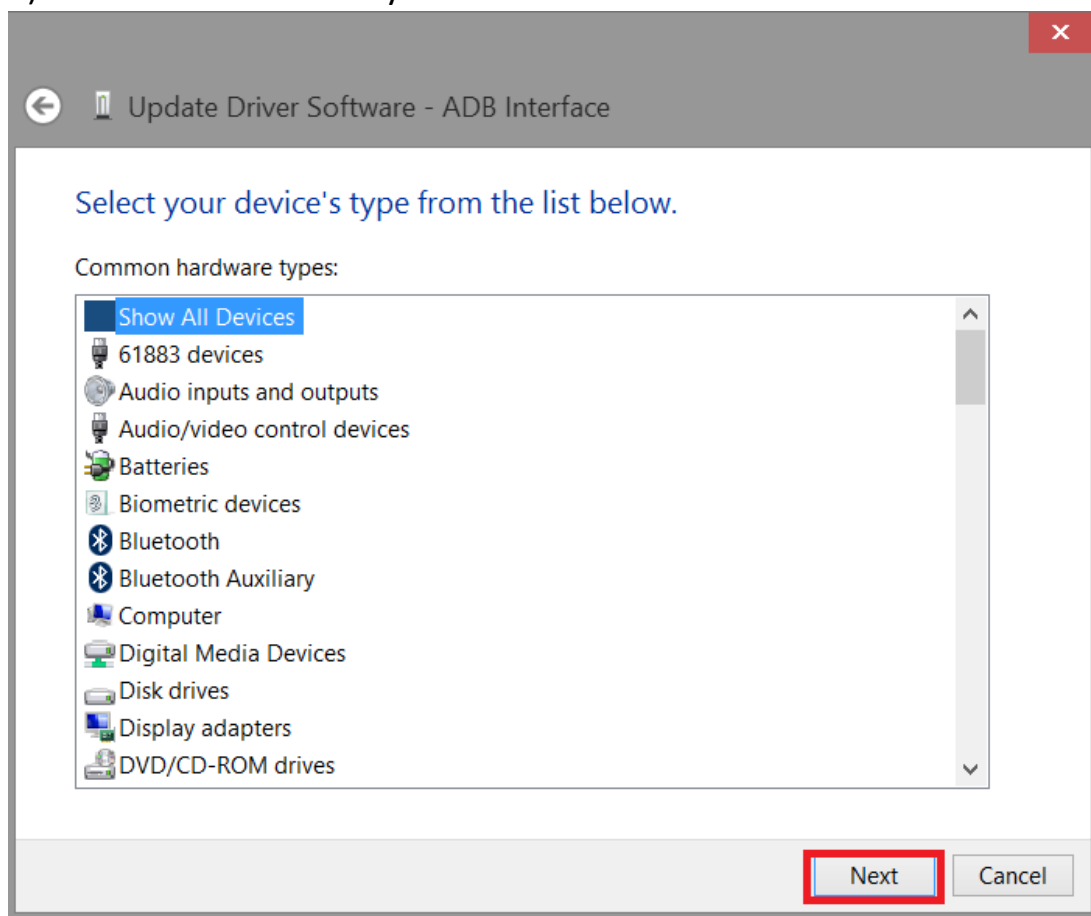


10). Click “Have Disk” then Browse ..\usb_driver\android_winusb.inf.

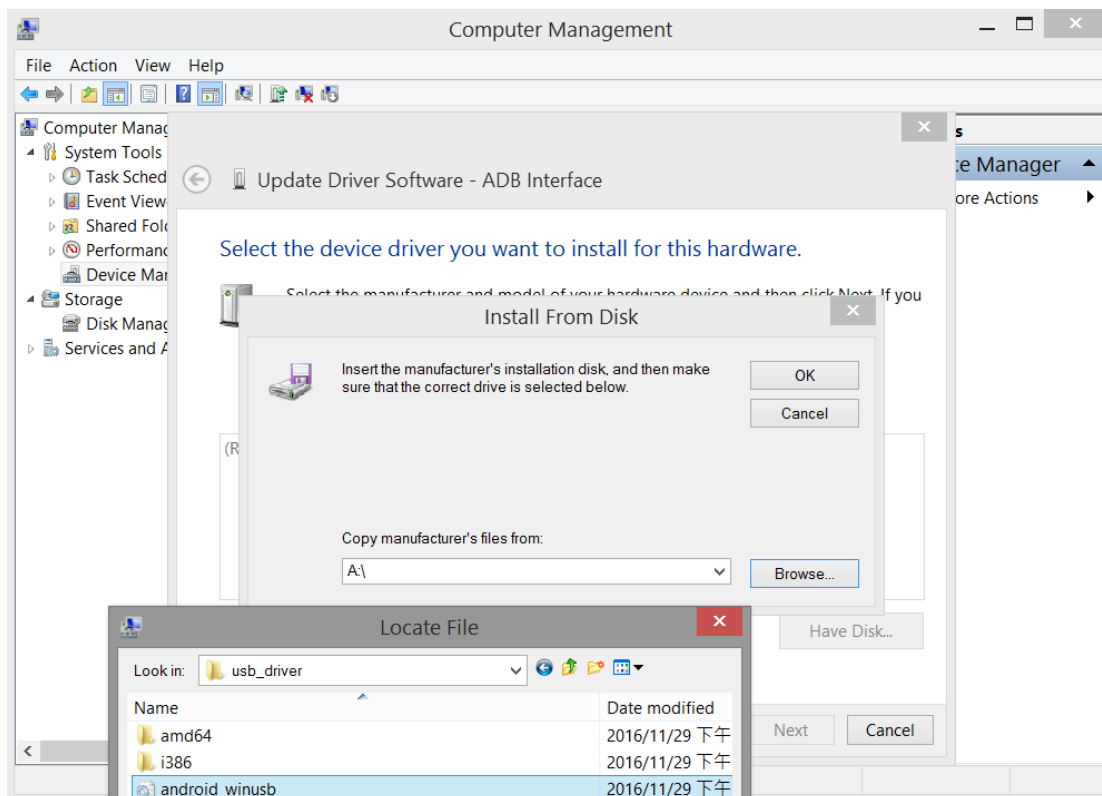


11). Choose “Android Composite ADB Interface” and click Next.

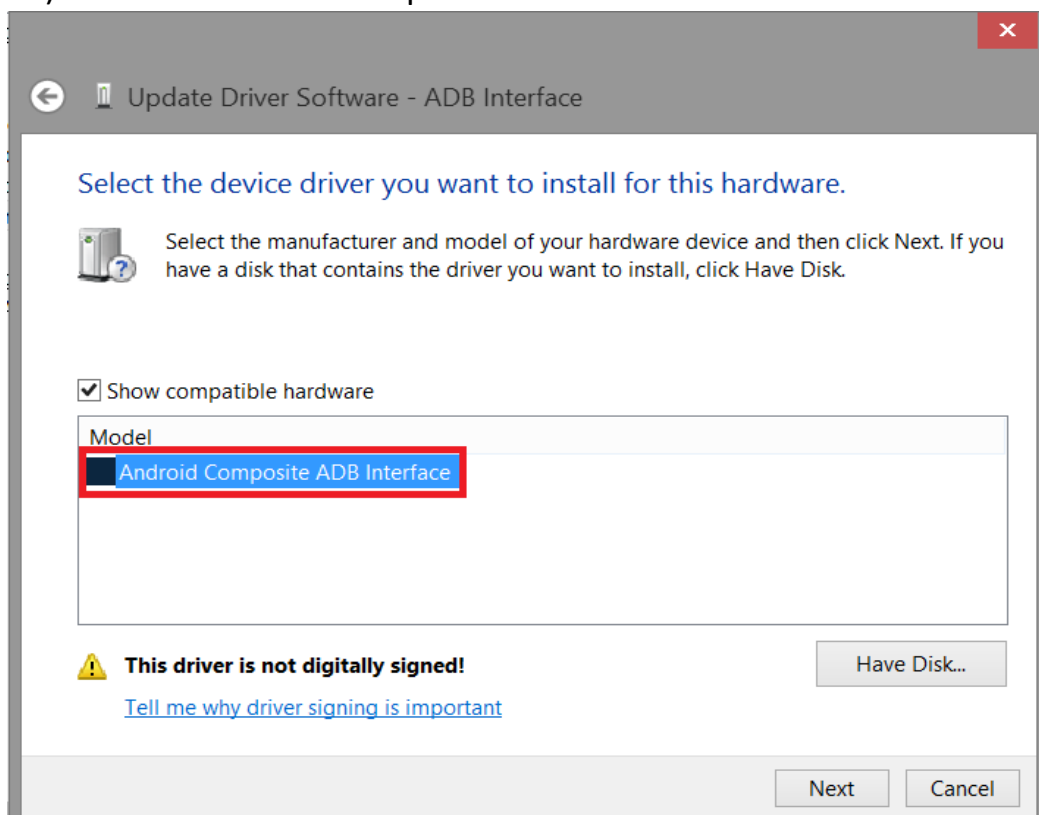

12). Click “Yes” .

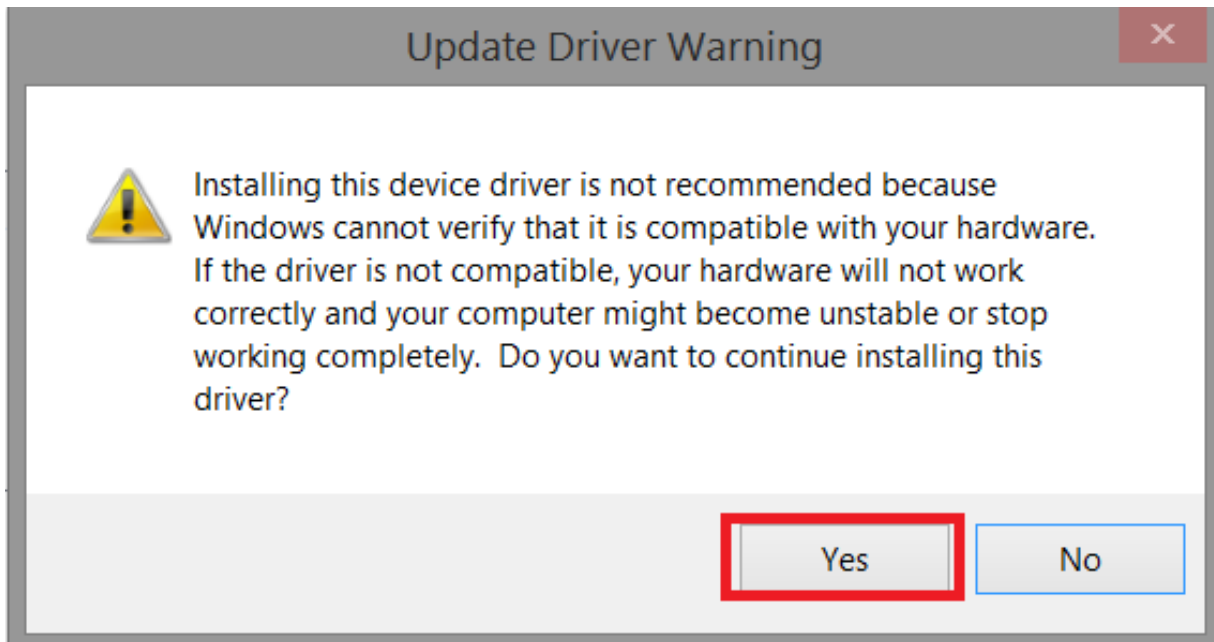


13). Choose “Install this driver software anyway” .

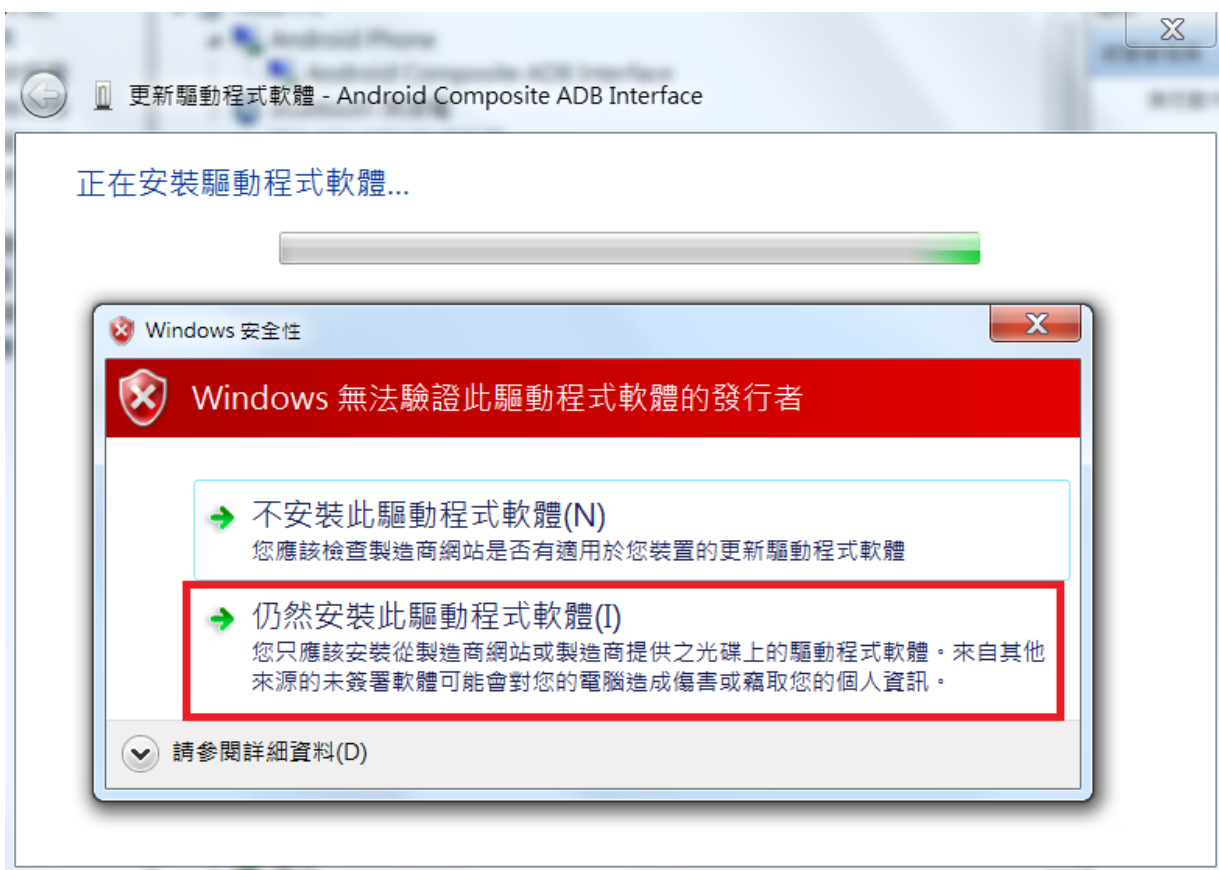


14). Close the window when driver is installed successfully.



15). You can see device manager would show ADB interface.

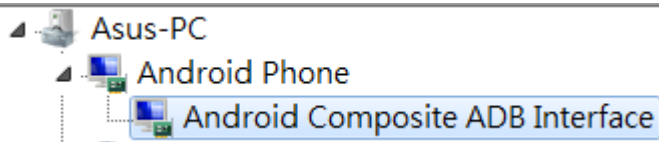


16). Launch command prompt and type adb device to test. If you can see the device serial number is listed, it means you can connect the device.

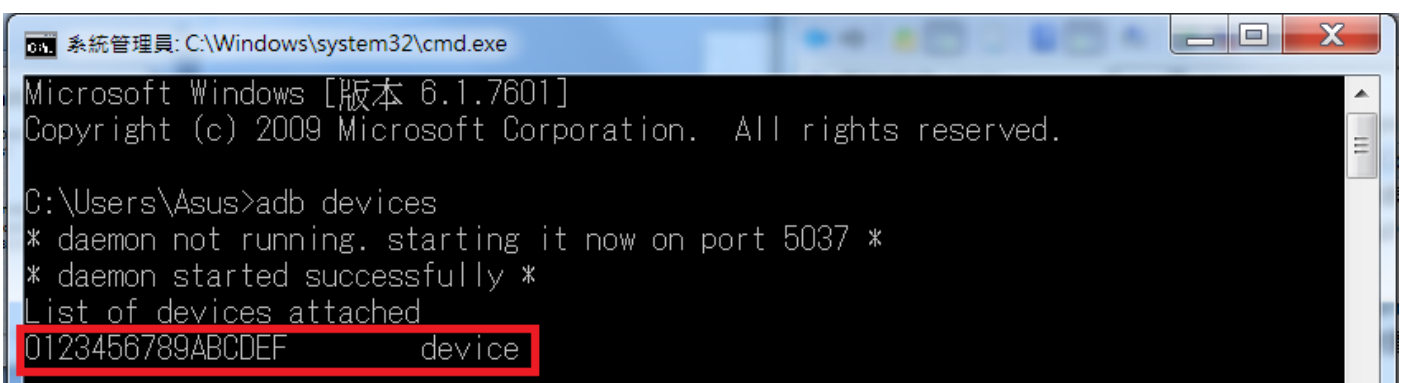

3.4 Setup Environment

1). Setup waveform files.

Place iqvsf folder to the C:\

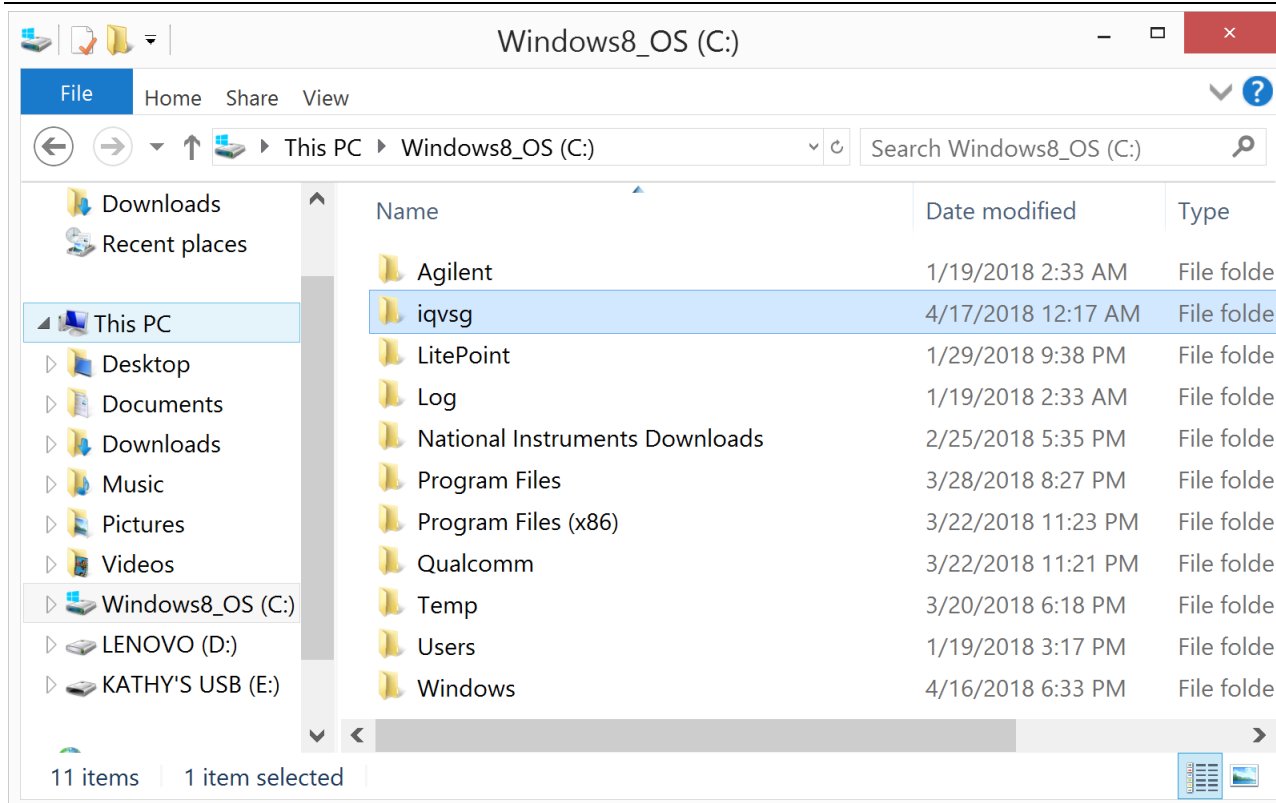


2). Setup config files

Place the following files in C:\Qualcomm\WCN\ProdTests\ConfigFiles

[UVP-TouchMax_BT_Non-SignalingTests_BT_ALL_v2.xtt](#)

[UVP_LP_IQxel--WCNTesterConfig_BT.xml](#)

[UVP_QTA_CalDataFile_BT.xml](#)

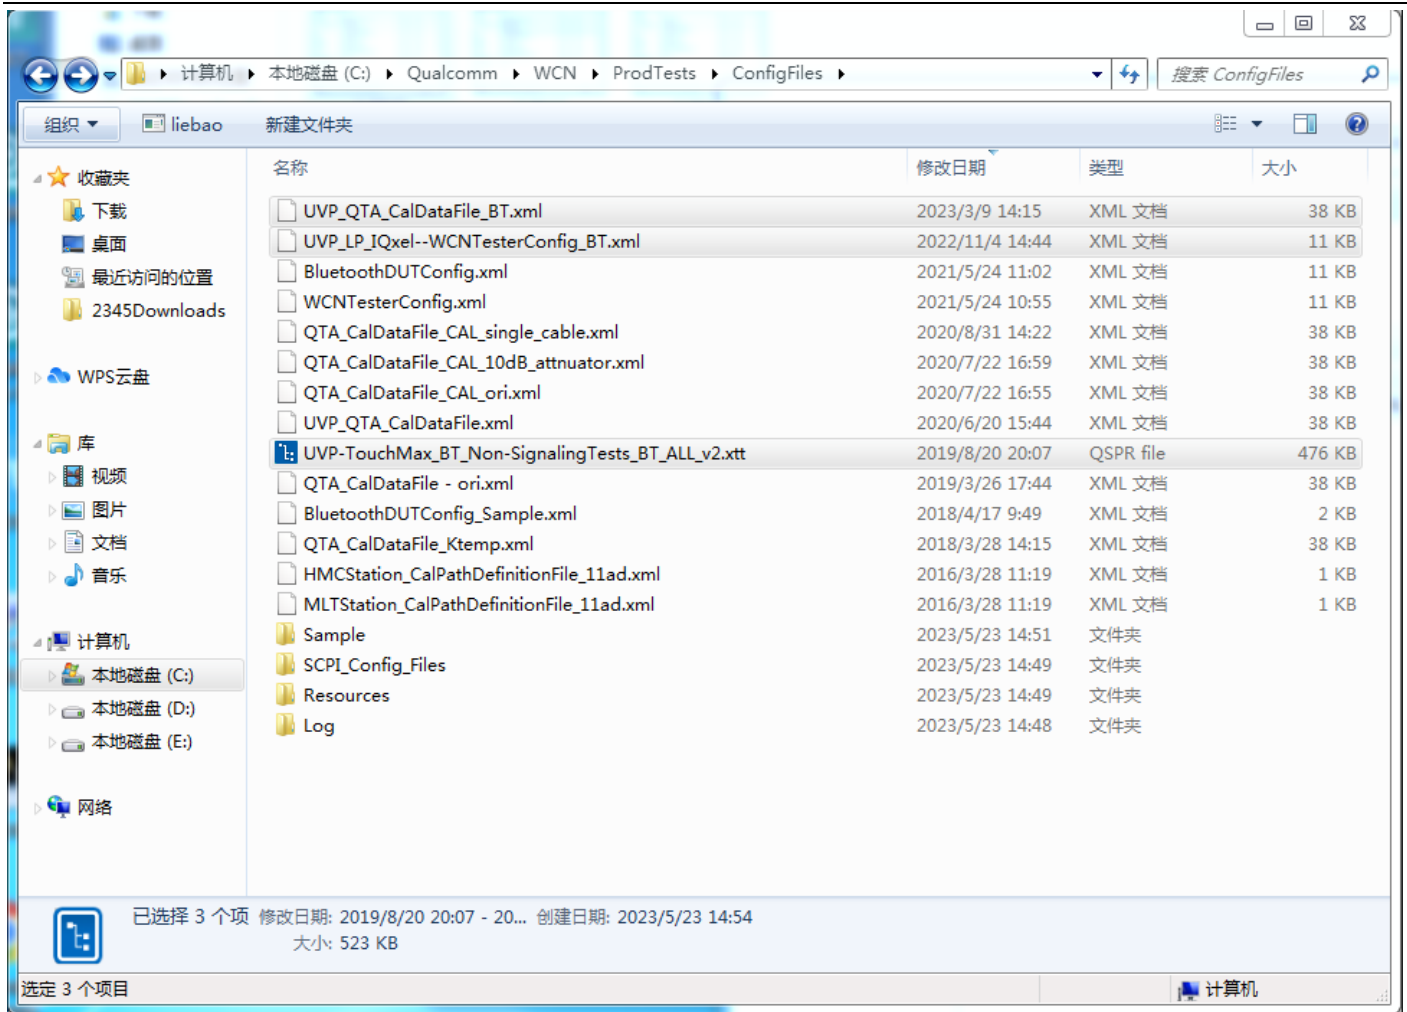

3). Modify iQxel IP address

Modify iQxel IP Address in UVP_LP_IQxel--WCNTesterConfig_BT.xml as shown:



```
<InfoItem Name="WaveformBluetoothAddress" Value="00, 00, 88, C0, FF, EE"/>
<InfoItem Name="RFPort" Value="left"/>
<!-- Supported packet types DH1, DH5, 2DH5, 3DH5 and LE -->
<InfoItem Name="WaveFilePath" Value="C:\iqvsg"/>
<InfoItem Name="BT_DH1" Value="1DH1_000088C0FFEE.iqvsg"/>
<InfoItem Name="BT_DH5" Value="1DH5_000088C0FFEE.iqvsg"/>
<InfoItem Name="BT_2_DH5" Value="2DH5_000088C0FFEE.iqvsg"/>
<InfoItem Name="BT_3_DH5" Value="bt_3_dh5_00001111_Fs80M.iqvsg"/>
<InfoItem Name="LE1a" Value="1LE.iqvsg"/>
<InfoItem Name="LT Address" Value="0"/>
<InfoItem Name="ListModeWaveform"
Value="LP_NULL_DH1_DH5_2DH5_3DH5_LE_000088C0FFEE.iqvsg"/>
<InfoItem Name="ListMode-BDADDRESS" Value="00, 00, 88, C0, FF, EE"/>
<InfoItem Name="ListMode-LTADDRESS" Value="0"/>
</OptionalConfigInfoList>
▼ <HardwareInterface>
  <HWInterfaceDLL>QC.TILib.LibraryManager.dll</HWInterfaceDLL>
  <PartialClassName>TcpClient</PartialClassName>
  ▼ <ITcpClient>
    <Host>192.168.100.254</Host>
    <Port>24000</Port>
  </ITcpClient>
</HardwareInterface>
  <DriverDLL>QC.TILib.WirelessConnectivity.dll</DriverDLL>
</Instrument>
</Instruments>
</InstrumentConfList>
</root>
```

4). Modify BT pathloss

Modify Bluetooth pathloss in UVP_QTA_CalDataFile_BT.xml as shown:



```
▼ <Path>
  <PathName>BTPath</PathName>
  <PathID>0</PathID>
  <AdditionalLoss>0</AdditionalLoss>
  <Cal_Date>7/18/2013 12:57 PM</Cal_Date>
  <TesterID>PC NAME</TesterID>
  <CalCable_PathName>CAL_CABLE</CalCable_PathName>
  <UseCalCable>>false</UseCalCable>
▼ <DataList>
  ▼ <Data>
    <Frequency>2402</Frequency>
    <Value>11.3</Value>
    <Delta>0</Delta>
  </Data>
  ▼ <Data>
    <Frequency>2441</Frequency>
    <Value>11.3</Value>
    <Delta>0</Delta>
  </Data>
  ▼ <Data>
    <Frequency>2480</Frequency>
    <Value>11.3</Value>
    <Delta>0</Delta>
  </Data>
</DataList>
</Path>
▼ <Path>
  <PathName>ARBPath</PathName>
  <PathID>0</PathID>
```

5). Before Starting QSPR, you need to make DUT into BT test mode.

a. Use MicroUSB cable connect DUT to PC

b. Run “[BT_ftmdaemon_20190730_01.bat](#)” file and wait till you see the following message:

You can start test, now.

```
C:\WINDOWS\system32\cmd.exe
C:\Users\Kathy\Documents\UVP\UVP-CONF-SPK\SetupSOP>adb w
C:\Users\Kathy\Documents\UVP\UVP-CONF-SPK\SetupSOP>adb r
C:\Users\Kathy\Documents\UVP\UVP-CONF-SPK\SetupSOP>adb w
C:\Users\Kathy\Documents\UVP\UVP-CONF-SPK\SetupSOP>Timeo
C:\Users\Kathy\Documents\UVP\UVP-CONF-SPK\SetupSOP>adb sh
ifconfig: SIOCGIFFLAGS: No such device
C:\Users\Kathy\Documents\UVP\UVP-CONF-SPK\SetupSOP>adb sh
sh: write error: No such device
C:\Users\Kathy\Documents\UVP\UVP-CONF-SPK\SetupSOP>START

#####
# You can start test, now.
# And, you can check the ftmdaemon log in the new "ftmdae
#####
Press any key to close this window . . .

ftmdaemon
FTM Daemon calling LSM init
FTMDaemon: Diag_LSM_init succesful
ftmdaemon l: bt-hci: get_bt_soc_type
ftmdaemon l: vendor.qcom.bluetooth.soc set to cherokee
Initialised the BT FTM cmd queue handlers
Wait on cmd complete from the previous command
Waiting on next Cmd to be queued
```

3.5 Test Process


1). Run Test Tree to verify setup.

Open QSPR and run test tree “UVP-TouchMax_BT_Non-SignalingTests_BT_ALL_v2.xtt”

Run to verify setup correctly

2). Click “Run Tree(Red marked)” or press “F5” to start test.

3). Input “MAC ID” and press “OK” to the next step.

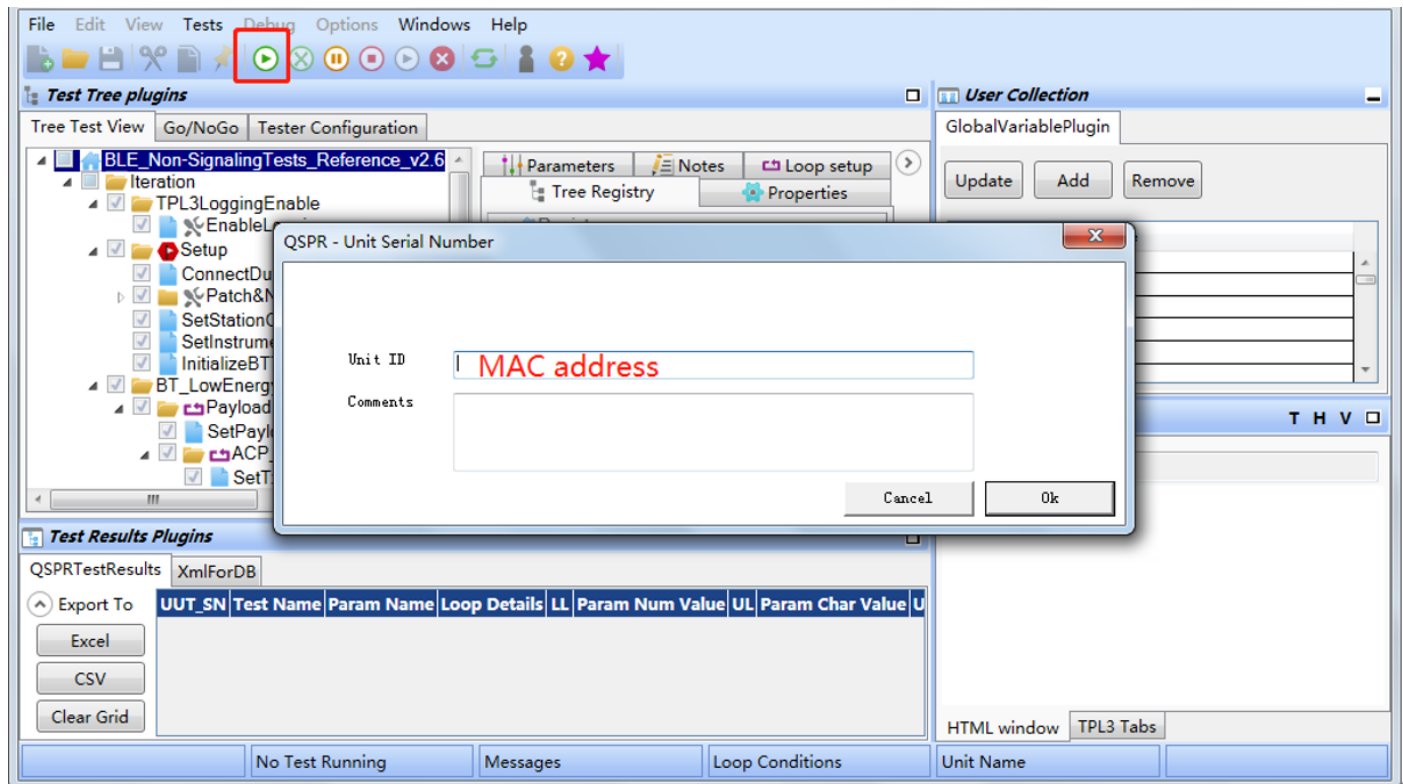

3.6 Check Results

1). Waiting for the test program show **PASS** or **FAIL** result.



Test Results Plugins

UUT_SN	Test Name	Param Name	Loop Details
68D79A1F3359-UUJERP	WlanPerTest	PerPower	channel_42_rate_RATE_11AC_HT80_MCS9_startPower_-51_stopPower_-51
68D79A1F3359-UUJERP	WlanPerTest	nsi	channel_42_rate_RATE_11AC_HT80_MCS9_startPower_-51_stopPower_-51
68D79A1F3359-UUJERP	WlanPerTest	ErrorMessage	channel_42_rate_RATE_11AC_HT80_MCS9_startPower_-51_stopPower_-51
68D79A1F3359-UUJERP	WlanPerTest	PerPower	channel_150_rate_RATE_11AC_HT80_MCS9_startPower_-70_stopPower_-70
68D79A1F3359-UUJERP	WlanPerTest	nsi	channel_150_rate_RATE_11AC_HT80_MCS9_startPower_-70_stopPower_-70
68D79A1F3359-UUJERP	WlanPerTest	ErrorMessage	channel_150_rate_RATE_11AC_HT80_MCS9_startPower_-70_stopPower_-70
68D79A1F3359-UUJERP	WlanPerTest	PER	channel_150_rate_RATE_11AC_HT80_MCS9_startPower_-51_stopPower_-51
68D79A1F3359-UUJERP	WlanPerTest	PerPower	channel_150_rate_RATE_11AC_HT80_MCS9_startPower_-51_stopPower_-51
68D79A1F3359-UUJERP	WlanPerTest	nsi	channel_150_rate_RATE_11AC_HT80_MCS9_startPower_-51_stopPower_-51
68D79A1F3359-UUJERP	WlanPerTest	ErrorMessage	channel_150_rate_RATE_11AC_HT80_MCS9_startPower_-51_stopPower_-51

Test Results Plugins

UUT_SN	Test Name	Param Name	Loop Details	LL	Param Nu
FCCEDAFFBEEE	BTDUT_Disconnect	errorMessage			

2). TEST LOG will be saved in "C:\Qualcomm\QSPR\TestLog"

File Explorer window showing the contents of the 'TestLog' folder:

Name	Date modified	Type	Size
BOM07_UNIT1_RX_VHT80MCS9_122419183753.csv	12/24/2019 6:37 PM	Microsoft Excel Comma Separated Values File	169 KB
BOM07_UNIT1_TXQVT_122419161542.csv	12/24/2019 4:15 PM	Microsoft Excel Comma Separated Values File	9,508 KB
BOM07_UNIT1_TXQVT_122419150635.csv	12/24/2019 3:06 PM	Microsoft Excel Comma Separated Values File	105 KB


4. T4-BL-WIFI-Verify

(All shielding for the DUT must be installed before testing)

4.1 Equipment List

Please reference equipment list.

4.2 Connection diagram

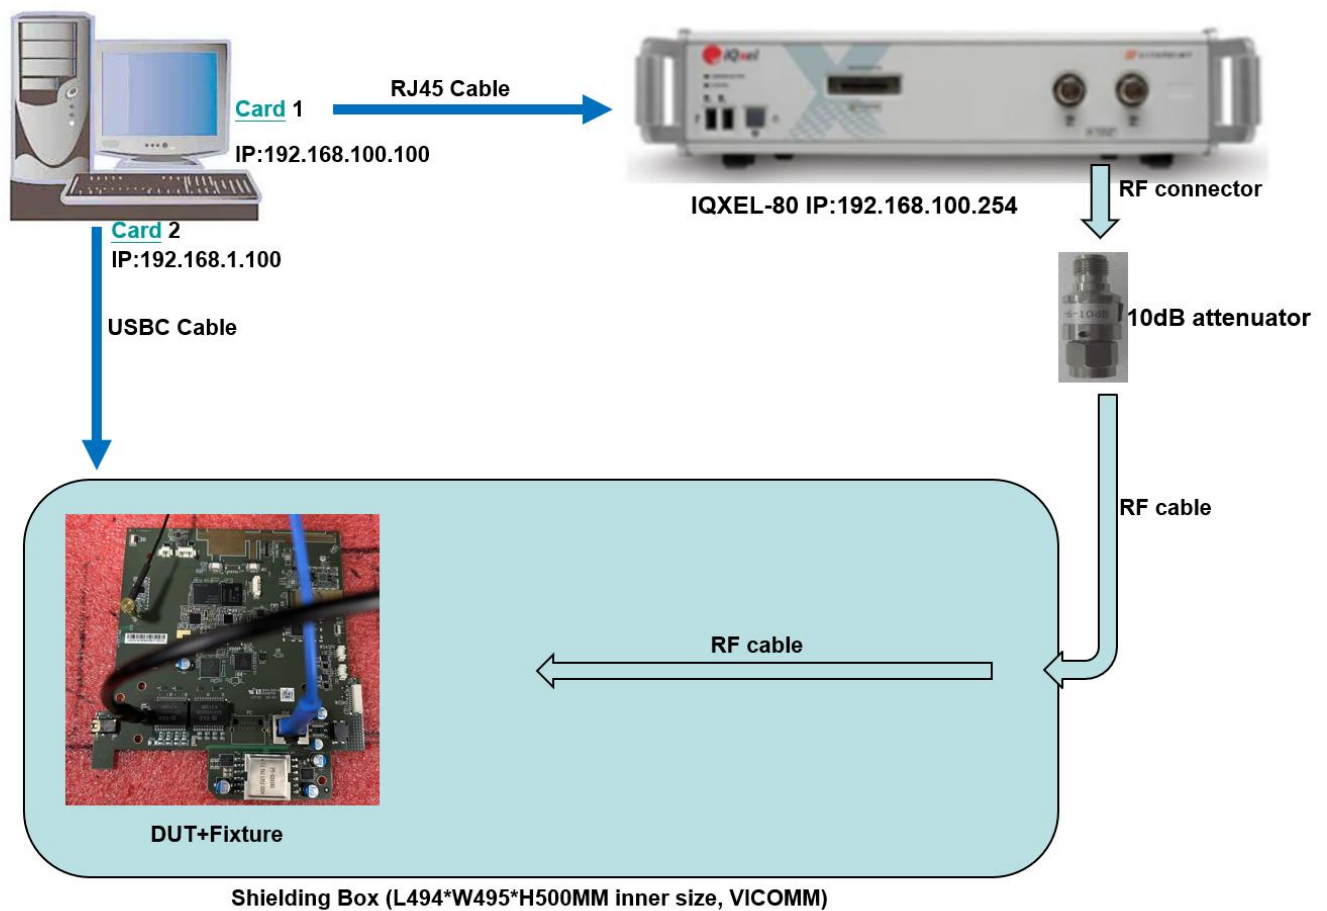


4.3 Software Setup

Same the "2.3 Software Setup" .

4.4 Setup Environment

- 1). Setup waveform files.
Place iqvsg folder to the C:\

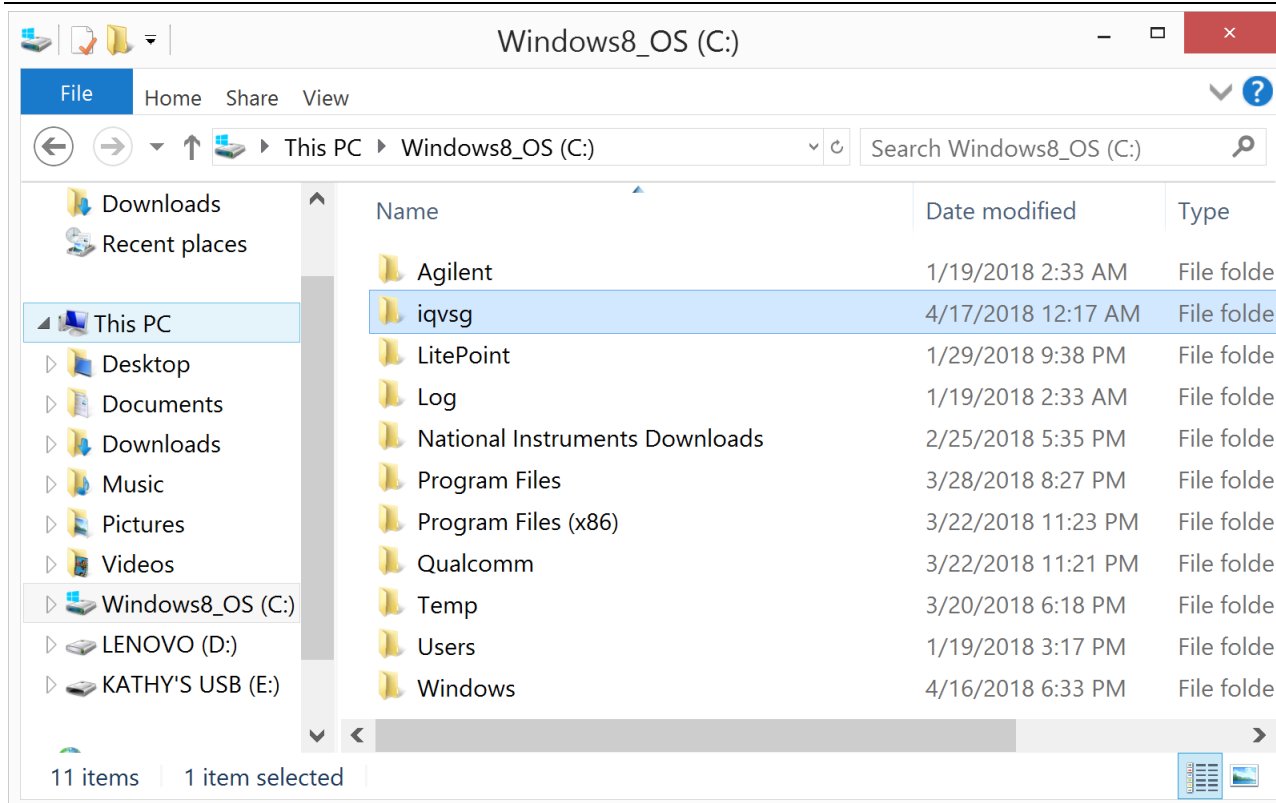

2). Setup config files

Place the following files in C:\Qualcomm\WCN\ProdTests\ConfigFiles

[UVP_TOUCHMAX_WIFI_TEST_TREE_v4.xtt](#)

[LP_IQxel--WCNTesterConfig.xml](#)

[UVP_QTA_CalDataFile.xml](#)

3). Modify iQxel IP address

Modify iQxel IP Address in [LP_IQxel--WCNTesterConfig.xml](#) as shown:



```
<InfoItem Name="WaveformBluetoothAddress" Value="00, 00, 88, C0, FF, EE"/>
<InfoItem Name="RFPort" Value="left"/>
<!-- Supported packet types DH1, DH5, 2DH5, 3DH5 and LE -->
<InfoItem Name="WaveFilePath" Value="user"/>
<InfoItem Name="BT_DH1" Value="1DH1_000088C0FFEE.iqvsg"/>
<InfoItem Name="BT_DH5" Value="1DH5_000088C0FFEE.iqvsg"/>
<InfoItem Name="BT_2_DH5" Value="2DH5_000088C0FFEE.iqvsg"/>
<InfoItem Name="BT_3_DH5" Value="bt_3_dh5_00001111_Fs80M.iqvsg"/>
<InfoItem Name="LE1a" Value="1LE.iqvsg"/>
<InfoItem Name="LT Address" Value="0"/>
<InfoItem Name="ListModeWaveform"
Value="LP_NULL_DH1_DH5_2DH5_3DH5_LE_000088C0FFEE.iqvsg"/>
<InfoItem Name="ListMode-BDADDRESS" Value="00, 00, 88, C0, FF, EE"/>
<InfoItem Name="ListMode-LTADDRESS" Value="0"/>
</OptionalConfigInfoList>
▼ <HardwareInterface>
  <HWInterfaceDLL>QC.TILib.LibraryManager.dll</HWInterfaceDLL>
  <PartialClassName>TcpClient</PartialClassName>
  ▼ <ITcpClient>
    <Host>192.168.100.254</Host>
    <Port>24000</Port>
  </ITcpClient>
</HardwareInterface>
  <DriverDLL>QC.TILib.WirelessConnectivity.dll</DriverDLL>
</Instrument>
</Instruments>
</InstrumentConfList>
</root>
```

4). Modify WIFI pathloss

Modify Bluetooth pathloss in [QTA_CalDataFile.xml](#) as shown:



```
</Data>
▼<Data>
  <Frequency>2412</Frequency>
  <Value>11.3</Value>
  <Delta>0</Delta>
</Data>
▼<Data>
  <Frequency>2442</Frequency>
  <Value>11.3</Value>
  <Delta>0</Delta>
</Data>
▼<Data>
  <Frequency>2472</Frequency>
  <Value>11.3</Value>
  <Delta>0</Delta>
</Data>
▼<Data>
  <Frequency>2490</Frequency>
  <Value>11.3</Value>
  <Delta>0</Delta>
</Data>
▼<Data>
  <Frequency>5180</Frequency>
  <Value>12.8</Value>
  <Delta>0</Delta>
</Data>
▼<Data>
  <Frequency>5320</Frequency>
  <Value>12.8</Value>
```

5). Before Starting QSPR, you need to make DUT into WIFI test mode.

1. Use MicroUSB cable connect DUT to PC

2. Run “[WIFI_ptt_socket_app_v2.bat](#)” file and wait till you see the following message:

You can start test, now.

```
C:\WINDOWS\system32\cmd.exe
C:\Users\Kathy\Documents\UVP\UVP-CONF-SPK\SetupSOP>adb wa
C:\Users\Kathy\Documents\UVP\UVP-CONF-SPK\SetupSOP>adb re
C:\Users\Kathy\Documents\UVP\UVP-CONF-SPK\SetupSOP>adb wa
C:\Users\Kathy\Documents\UVP\UVP-CONF-SPK\SetupSOP>Timeou
C:\Users\Kathy\Documents\UVP\UVP-CONF-SPK\SetupSOP>adb sh
ifconfig: SIOCGIFFLAGS: No such device
C:\Users\Kathy\Documents\UVP\UVP-CONF-SPK\SetupSOP>adb sh
sh: write error: No such device
C:\Users\Kathy\Documents\UVP\UVP-CONF-SPK\SetupSOP>START
#####
# You can start test, now.
# And, you can check the ftmdaemon log in the new "ftmdae
#####
Press any key to close this window . . .

ftmdaemon
FTM Daemon calling LSM init
FTMDaemon: Diag_LSM_Init succesful
ftmdaemon l: bt-hci: get_bt_soc_type
ftmdaemon l: vendor.qcom.bluetooth.soc set to cherokee
Initialised the BT FTM cmd queue handlers
Wait on cmd complete from the previous command
Waiting on next Cmd to be queued
```



4.5 Test Process


1). Run Test Tree to verify setup

Open QSPR and run test tree “ [UVP_TOUCHMAX_WIFI_TEST_TREE_v4.xtt](#) ”


Run to verify setup correctly

2). Click “Run Tree(Red marked)” or press “F5” to start test.

3). Input “MAC ID” and press “OK” to the next step.

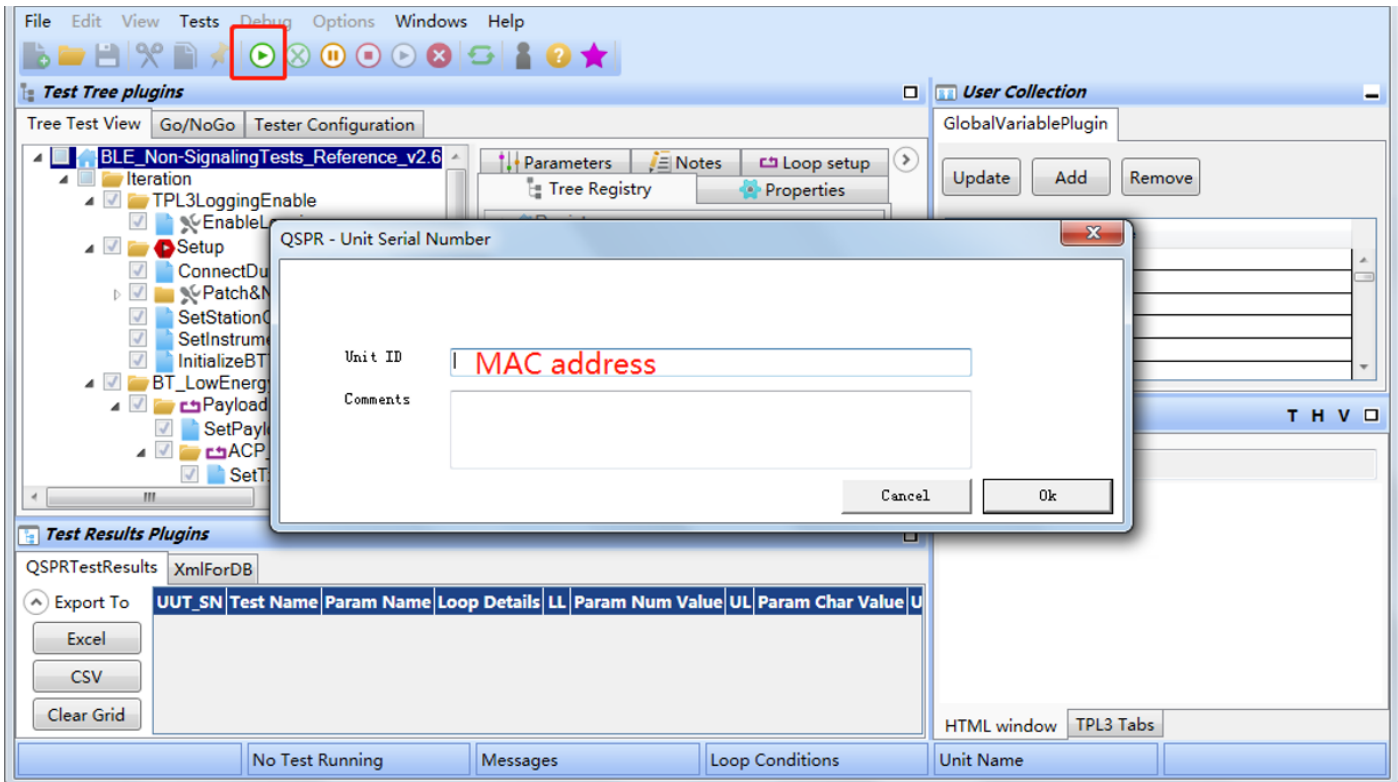

4). Click “OK” proceed to the next step.

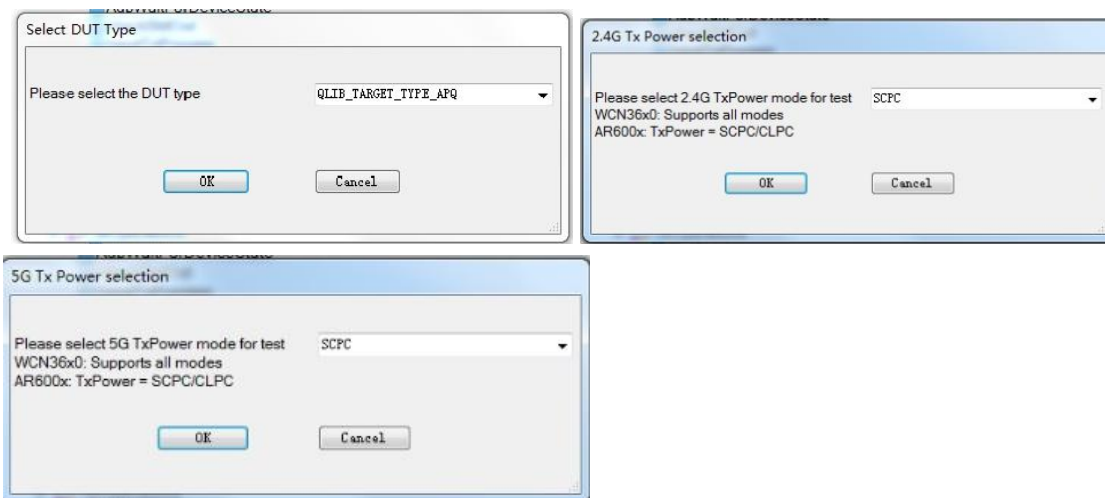



4.6 Check Results

1). Waiting for the test program show **PASS** or **FAIL** result.

The screenshot shows the QSPR test results interface. A central dialog box displays "PASSED" in green text. The background interface includes a "Test Tree plugins" panel on the left, a "Tree Registry" panel in the center, and a "Test Results Plugins" panel at the bottom. The "Test Results Plugins" panel shows a table of test results:

UUT_SN	Test Name	Param Name	Loop Details
68D79A1F3559-UIERP	WlanPerfTest	PerfPower	channel_42_rate_RATE_11AC_HT80 MCS9_startPower_-51_stopPower_-51
68D79A1F3559-UIERP	WlanPerfTest	rsi	channel_42_rate_RATE_11AC_HT80 MCS9_startPower_-51_stopPower_-51
68D79A1F3559-UIERP	WlanPerfTest	ErrorMessage	channel_42_rate_RATE_11AC_HT80 MCS9_startPower_-51_stopPower_-51
68D79A1F3559-UIERP	WlanPerfTest	PER	channel_150_rate_RATE_11AC_HT80 MCS9_startPower_-75_stopPower_-75
68D79A1F3559-UIERP	WlanPerfTest	PerfPower	channel_150_rate_RATE_11AC_HT80 MCS9_startPower_-75_stopPower_-75
68D79A1F3559-UIERP	WlanPerfTest	rsi	channel_150_rate_RATE_11AC_HT80 MCS9_startPower_-75_stopPower_-75
68D79A1F3559-UIERP	WlanPerfTest	ErrorMessage	channel_150_rate_RATE_11AC_HT80 MCS9_startPower_-75_stopPower_-75
68D79A1F3559-UIERP	WlanPerfTest	PER	channel_150_rate_RATE_11AC_HT80 MCS9_startPower_-51_stopPower_-51
68D79A1F3559-UIERP	WlanPerfTest	PerfPower	channel_150_rate_RATE_11AC_HT80 MCS9_startPower_-51_stopPower_-51
68D79A1F3559-UIERP	WlanPerfTest	rsi	channel_150_rate_RATE_11AC_HT80 MCS9_startPower_-51_stopPower_-51
68D79A1F3559-UIERP	WlanPerfTest	ErrorMessage	channel_150_rate_RATE_11AC_HT80 MCS9_startPower_-51_stopPower_-51

The screenshot shows the QSPR test results interface. A central dialog box displays "Failed" in red text. The background interface includes a "Test Tree plugins" panel on the left, a "Tree Registry" panel in the center, and a "Test Results Plugins" panel at the bottom. The "Test Results Plugins" panel shows a table of test results:

UUT_SN	Test Name	Param Name	Loop Details	LL	Param Nu
FCCEDAFFBEE	BTDUT_Disconnect	errorMessage			

2). TEST LOG will be saved in "C:\Qualcomm\QSPR\TestLog\TestLog"


TestLog				
File	Home	Share	View	
This PC > Windows (C:) > Qualcomm > QSPR > TestLog				
Name	Date modified	Type	Size	
BOM07_UNIT1_RX_VHT80MCS9_122419183753.csv	12/24/2019 6:37 PM	Microsoft Excel Comma Separated Values FL...	169 KB	
BOM07_UNIT1_TXQVT_122419161542.csv	12/24/2019 4:15 PM	Microsoft Excel Comma Separated Values FL...	9,508 KB	
BOM07_UNIT1_TXQVT_122419150635.csv	12/24/2019 3:06 PM	Microsoft Excel Comma Separated Values FL...	105 KB	

5. T5-BL-FCD

5.1 Equipment List

Please reference equipment list.

5.2 Connection diagram

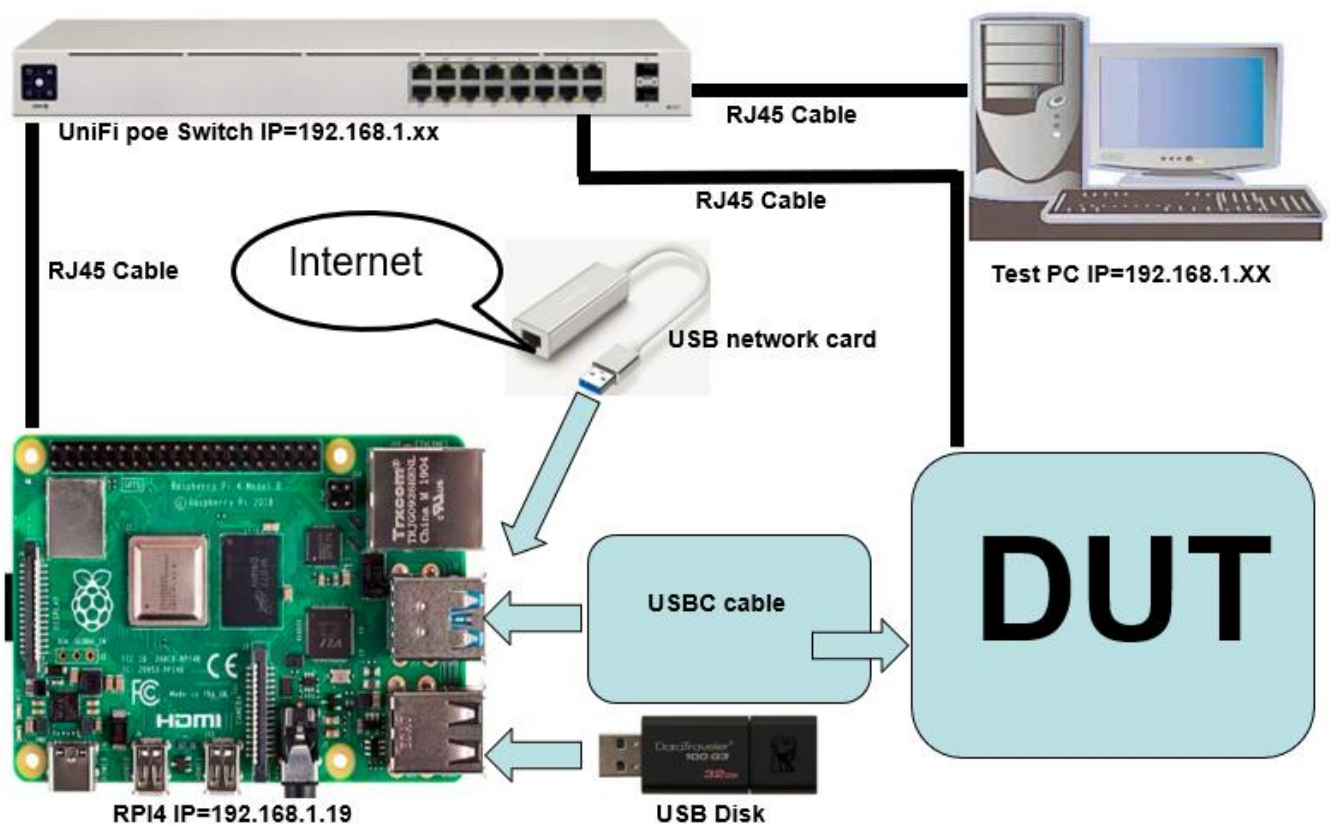

5.3 Software Setup

5.3.1 FCD File

- 1). Download tgz file ([FCD_efba_0.0.2_0.0.1_UTP-G3-TouchMax-Wall.tgz](#)) from path.
- 2). Download FTU file ([FTU_efba_1.0.11_1.0.0_UTP-G3-TouchMax-Wall.zip](#)) from path.
- 3). Please contact to UBNT RD (Kevin.Wen@ui.com) for any update!



5.3.2 Key files

1). Put key files to USB dongle.



5.4 Setup Environment


1). The RPi4 image version should be equal or higher than v0.2.13.

2). Start-up Rpi4 with LINUX SD card, Then insert USB drive with key files.


Start-up Computer with windows OS.

3). SSH login RPi4. Enter the command: [ping devreg-prod.ubnt.com](https://devreg-prod.ubnt.com). Make sure the network is well.


4). Double click “run_windows_mvc.bat” to open FTU.

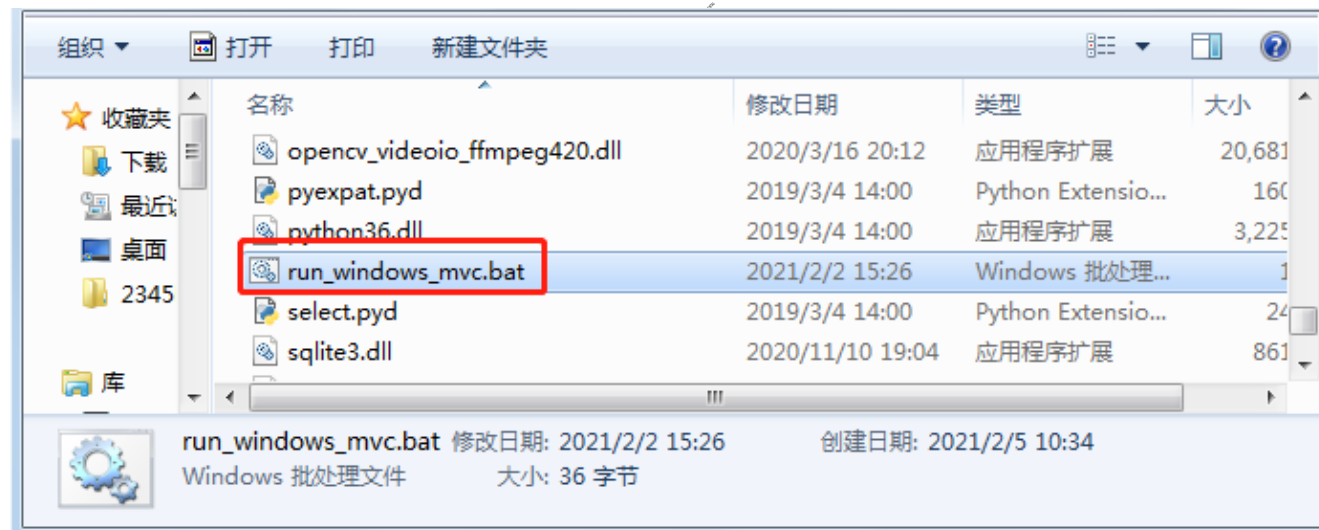

5). Select FCD<F8>.

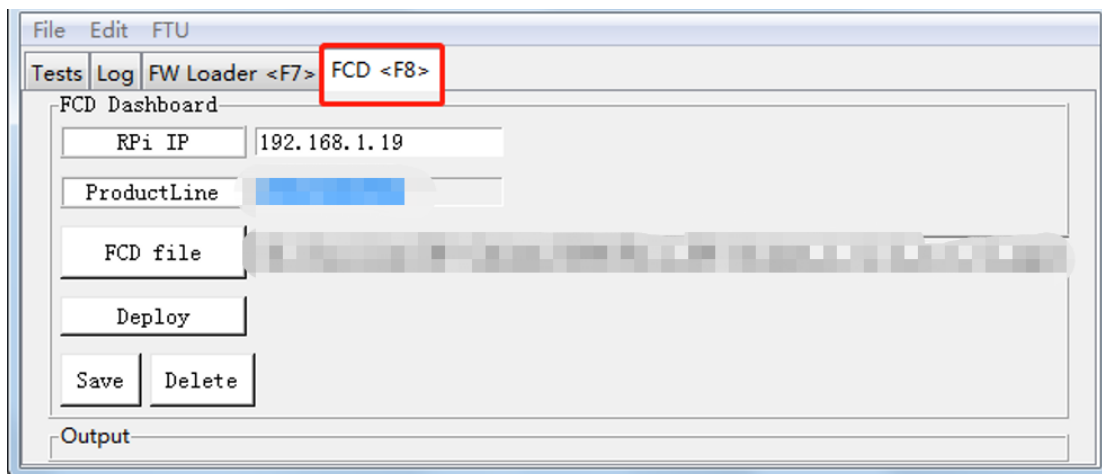

6). Steps are as below:

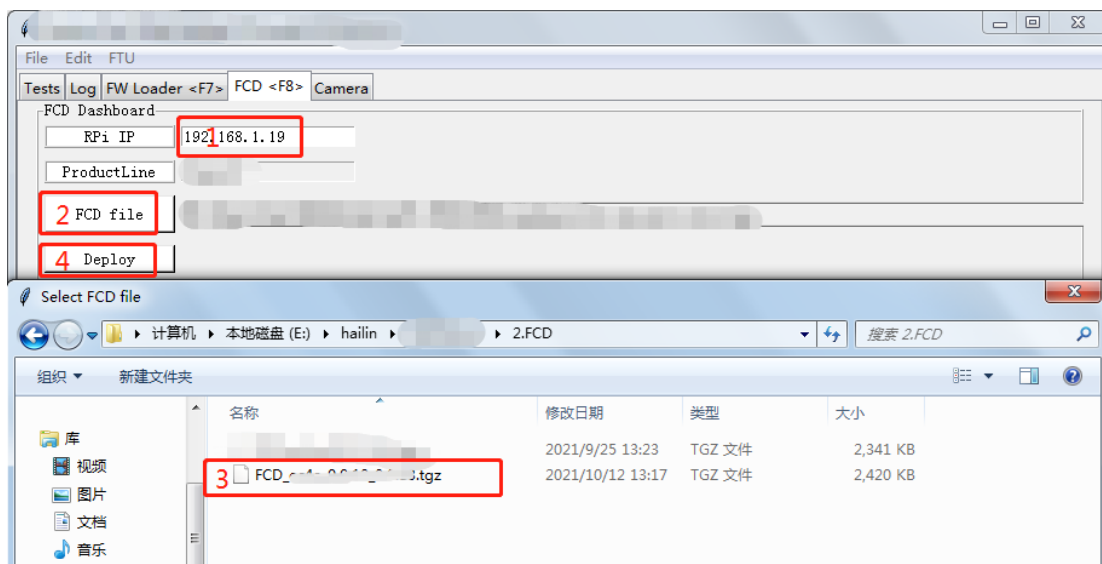

7). Key in password (pass-phrase) and BOM version, then select a product “UTP-G3-WALL” .
(Based on requirements for shipment choose the region).



Registration:

WO/PO:

OP_No:

Passphrase:

Select a product:

BOM revision:

Region:

Submit

8). After you connect the “USB-TYPEC Cable” to RPi4, you will see a ttyUSB0 device in RPi4. Please select the ttyUSB0 device to run FCD.

===== Slot: 0 =====

Serial Device: MACID:

0%

5.5 Test Process

- 1). Power on DUT by 48V POE.
- 2). Press scan MAC address and “Start” button, then the program will run automatically.

===== Slot: 0 =====

Serial Device: MACID:

0%

===== Slot: 1 =====

Serial Device: MACID:

40%

===== Slot: 2 =====



5.6 Check Result

Waiting for the test program show **PASS** or **FAIL** result.

===== Slot: 1
=====

Serial Device: MACID:

Successful Completed 100%,Time elapse: 1 mins 33

===== Slot: 1
=====

Serial Device: MACID:


Failed Completed 5% !!!,Time elapse: 0 mins 29 secs

After assembled (Product Testing)

6.T6-ASSY-Burn-in

6.1 Equipment List

Please reference equipment list.

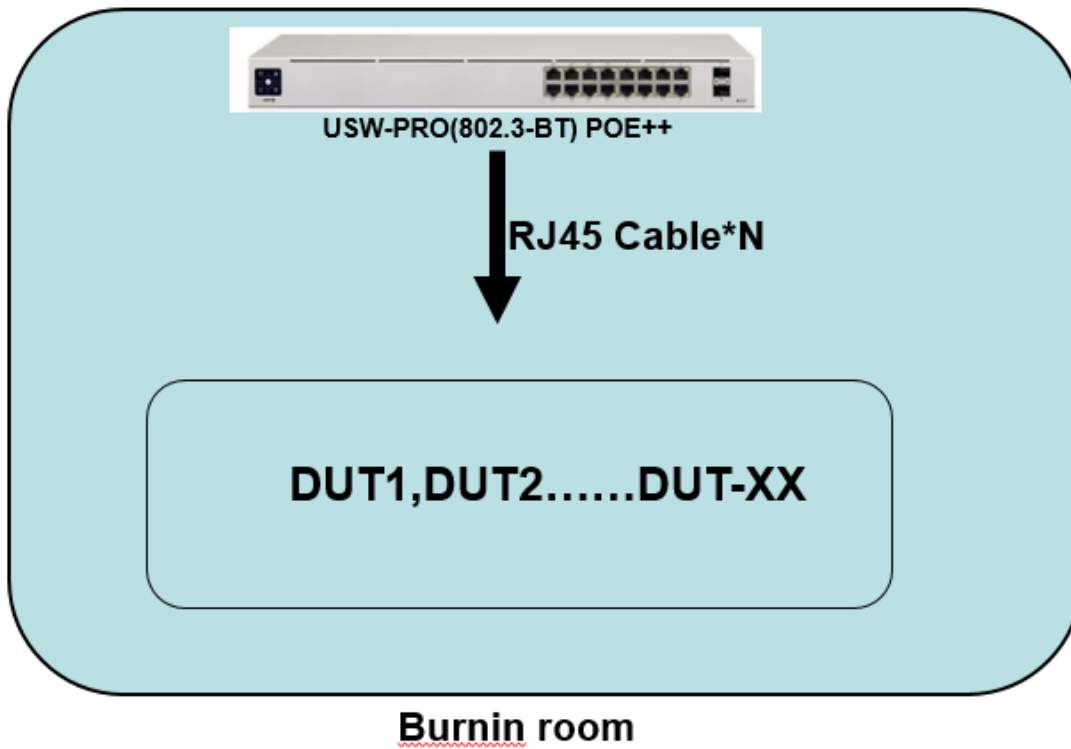


6.3 Setup Environment


- 1). Put DUT in the burn-in room.
- 2). Set chamber **50°C with 4 hours**.

6.4 Test Process


- 1). Open "Burnin Test" app.


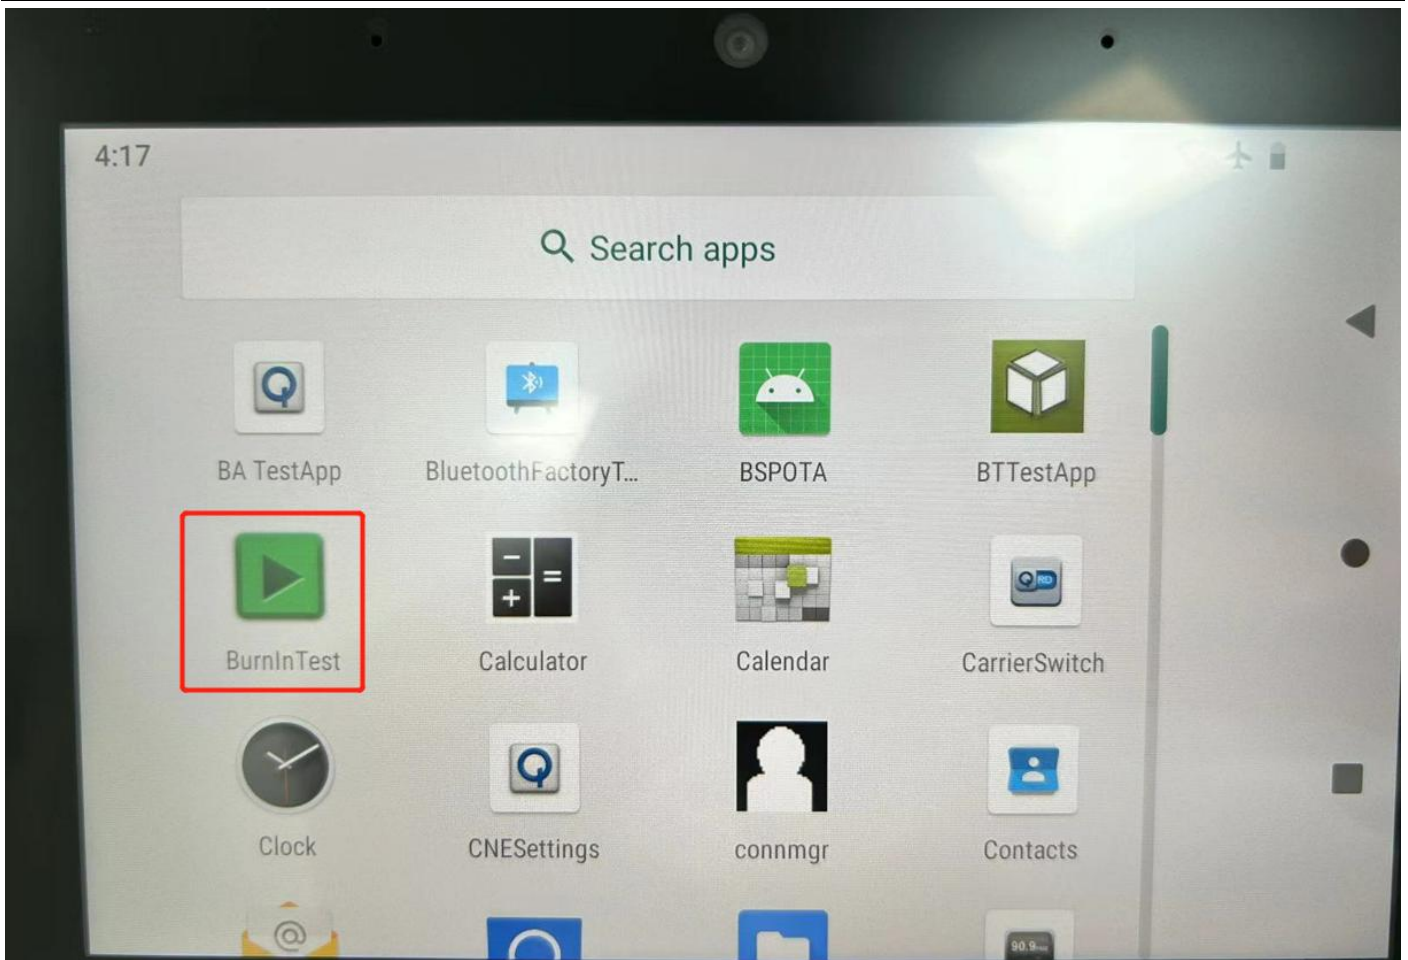


2). Set the volume and LCM brightness up to maximum.

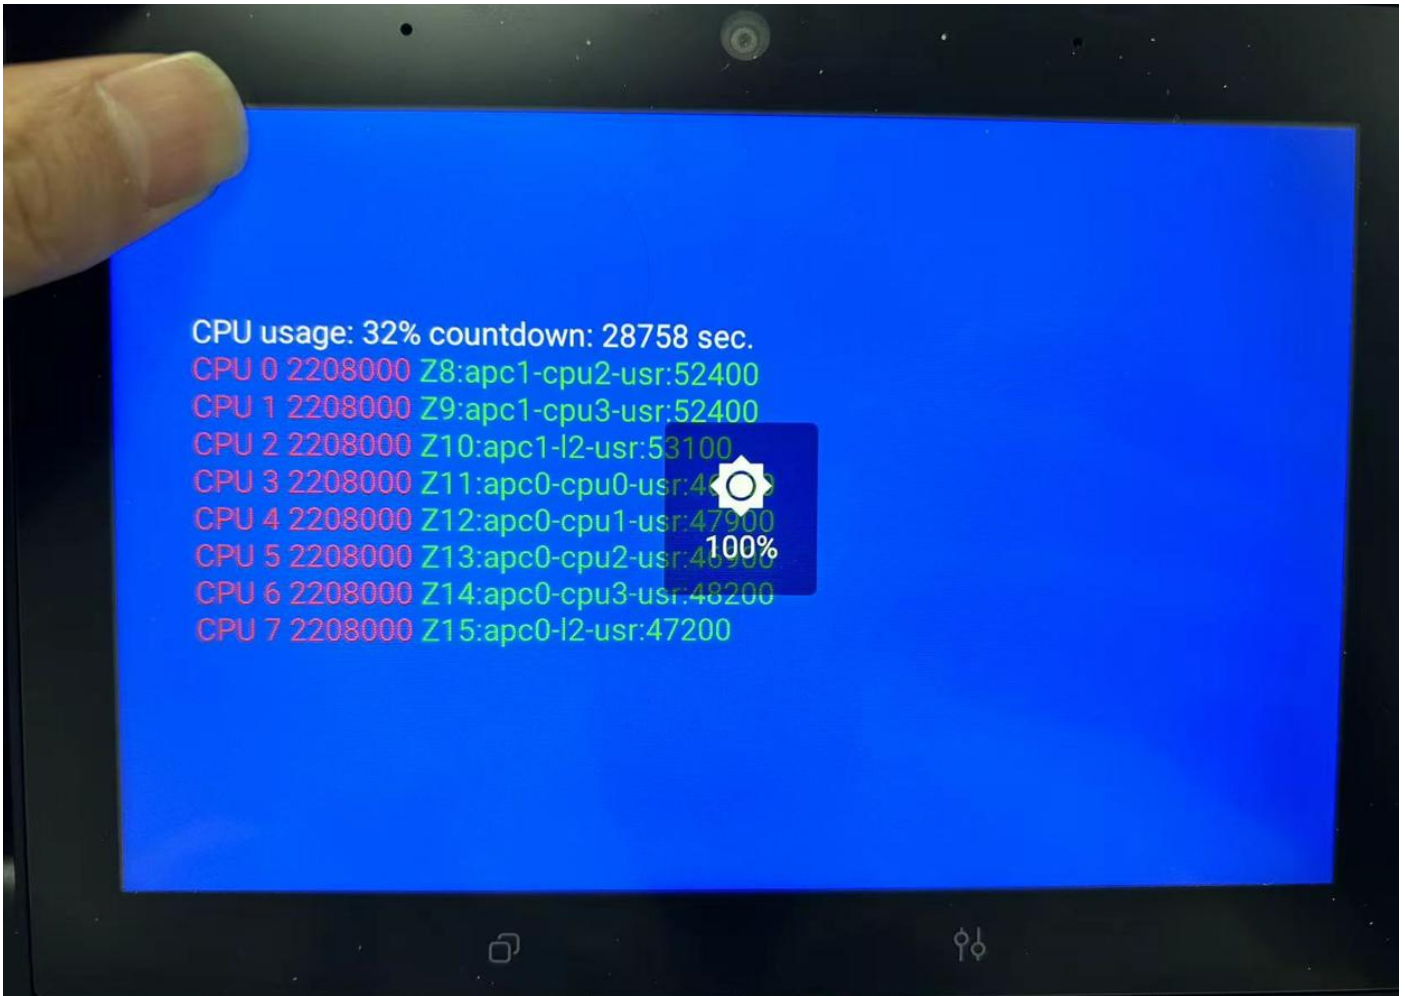


3). Set "burn in time" to 4 hours

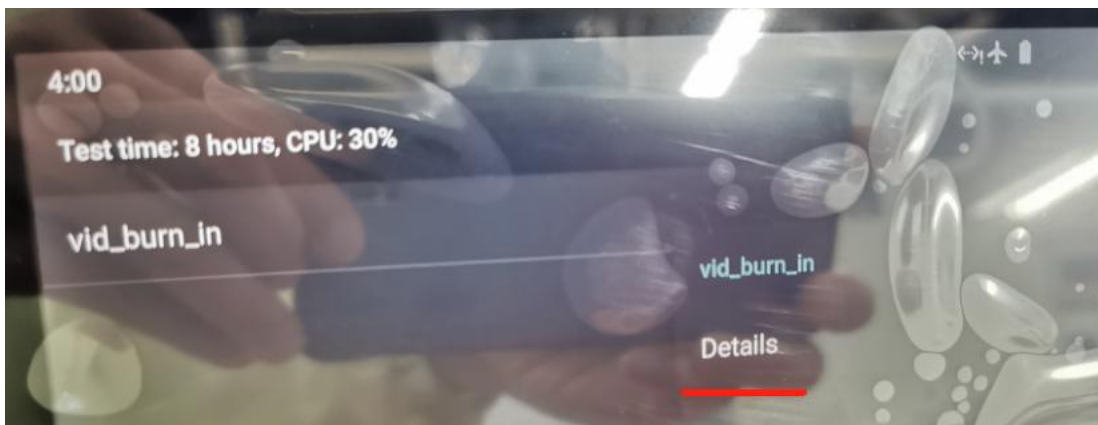

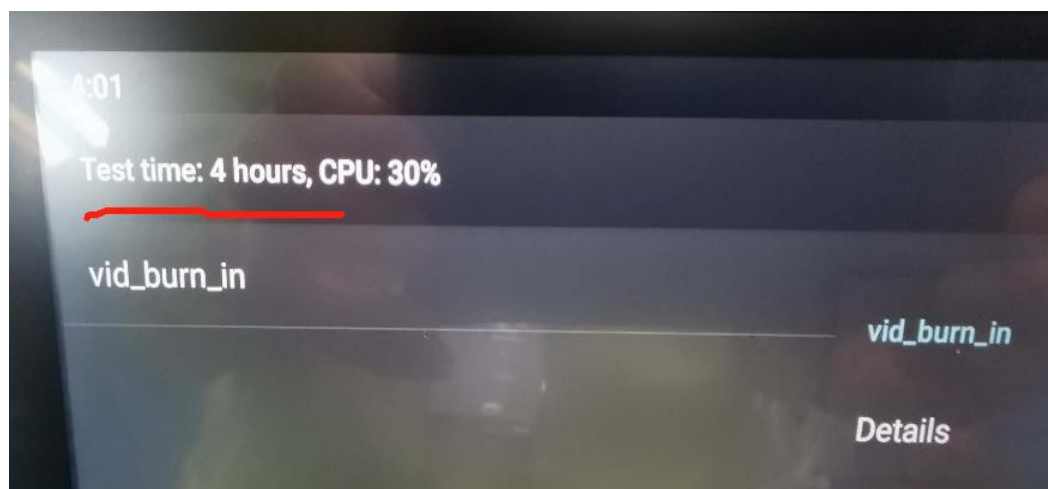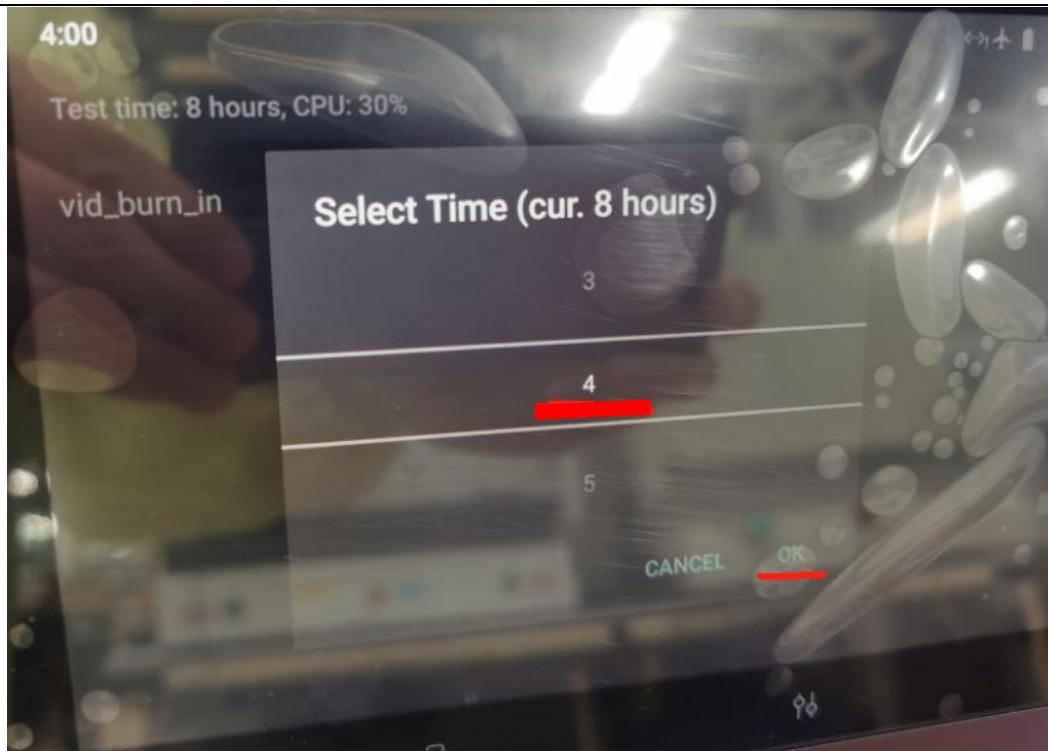

4). In Burn-in mode, You can see video images and hear sound.

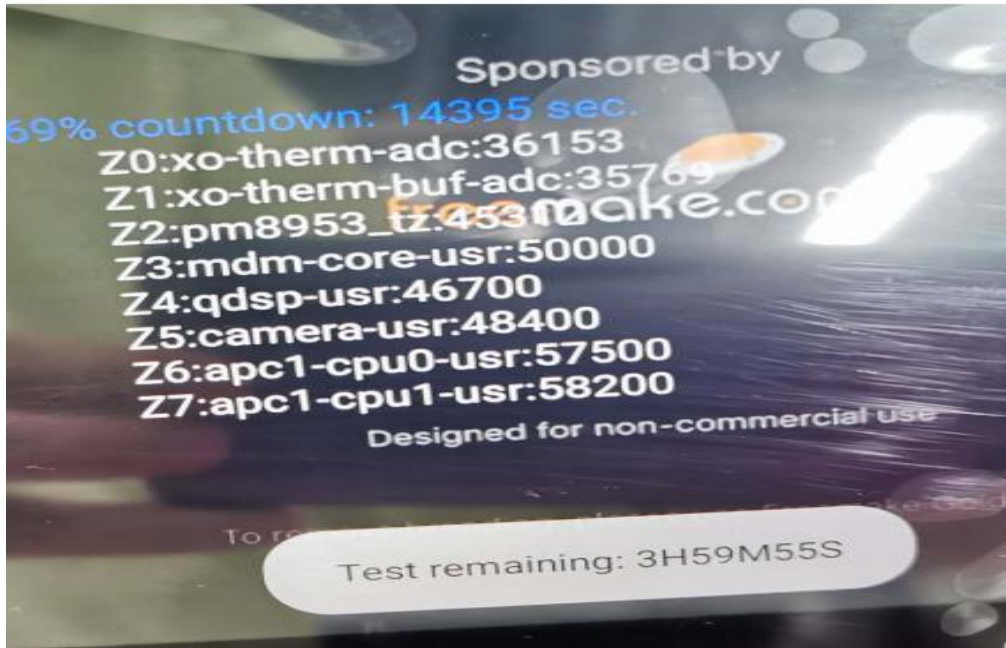

6.5 Check Result

1). Use FTU tool to check burn-in results in “T8-ASSY-FTU” station after 8 hours.

Test Content

Dis-select all
Select all
Save
Delete

☒ 345 - [BL-ETH] Check Burn-in test

Spec (4Hours):


burn_in
length_csv
2500

7. T7-ASSY-QMMI Test

7.1 Equipment List

Please reference equipment list.

7.2 Connection Diagram

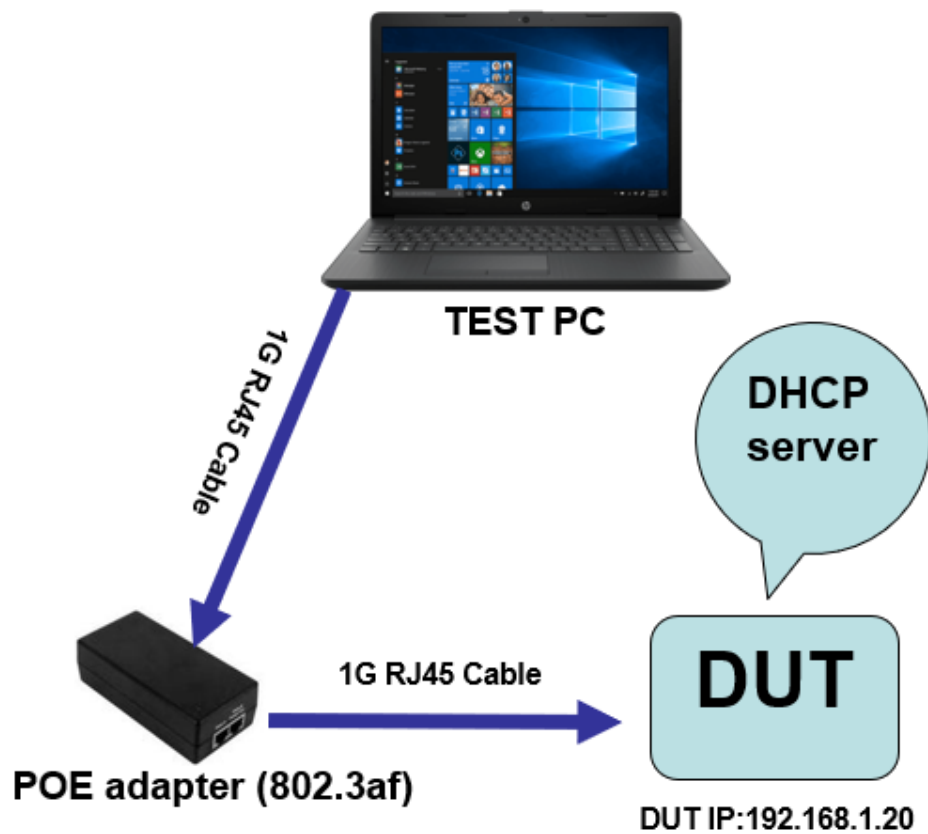


7.3 Test Process

Test Case 1,2,3,6,7,10,11,12,13,14,15,19 must test.


Test Case 4,5,8,9,16,17,18 no test.

- 1). Open "QMMI" app.
- 2). Power on the DUT device by POE, and you will see below UI. Please press each test item to test.

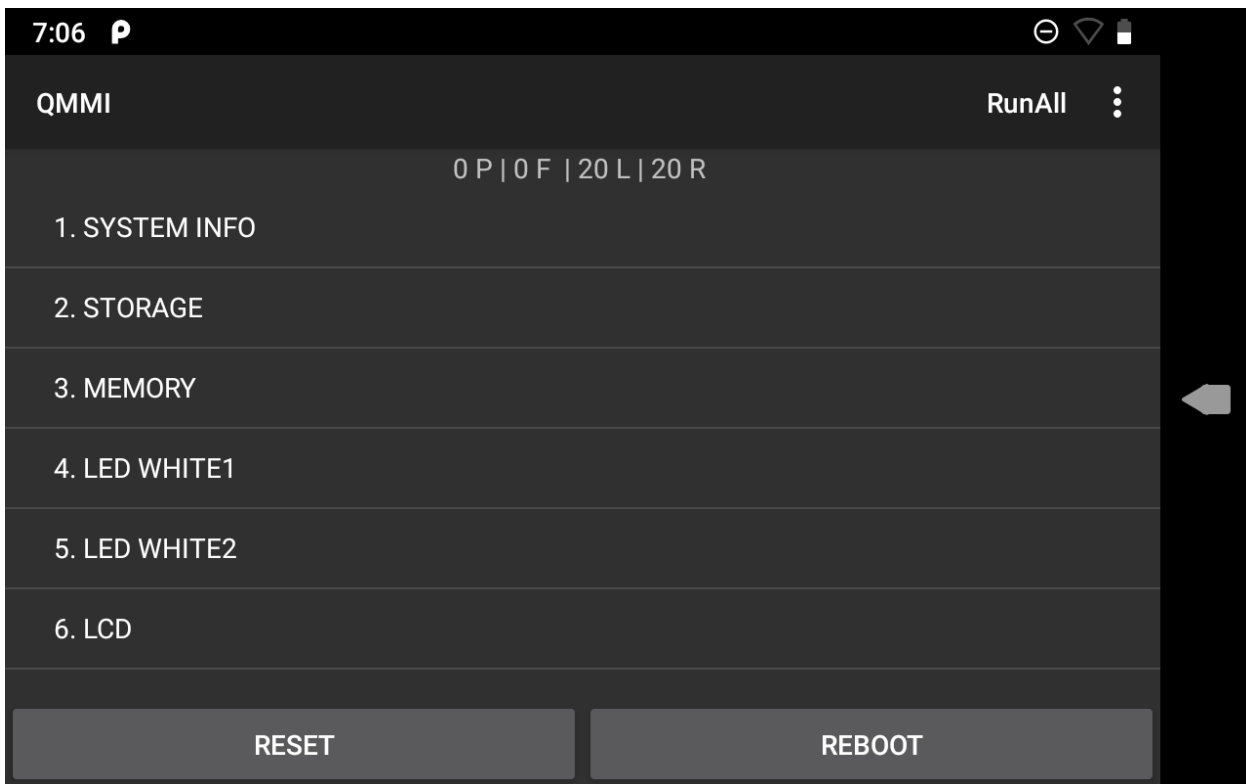

3). SYSTEM INFO


Check “MAC Address”. This address is also our serial number.

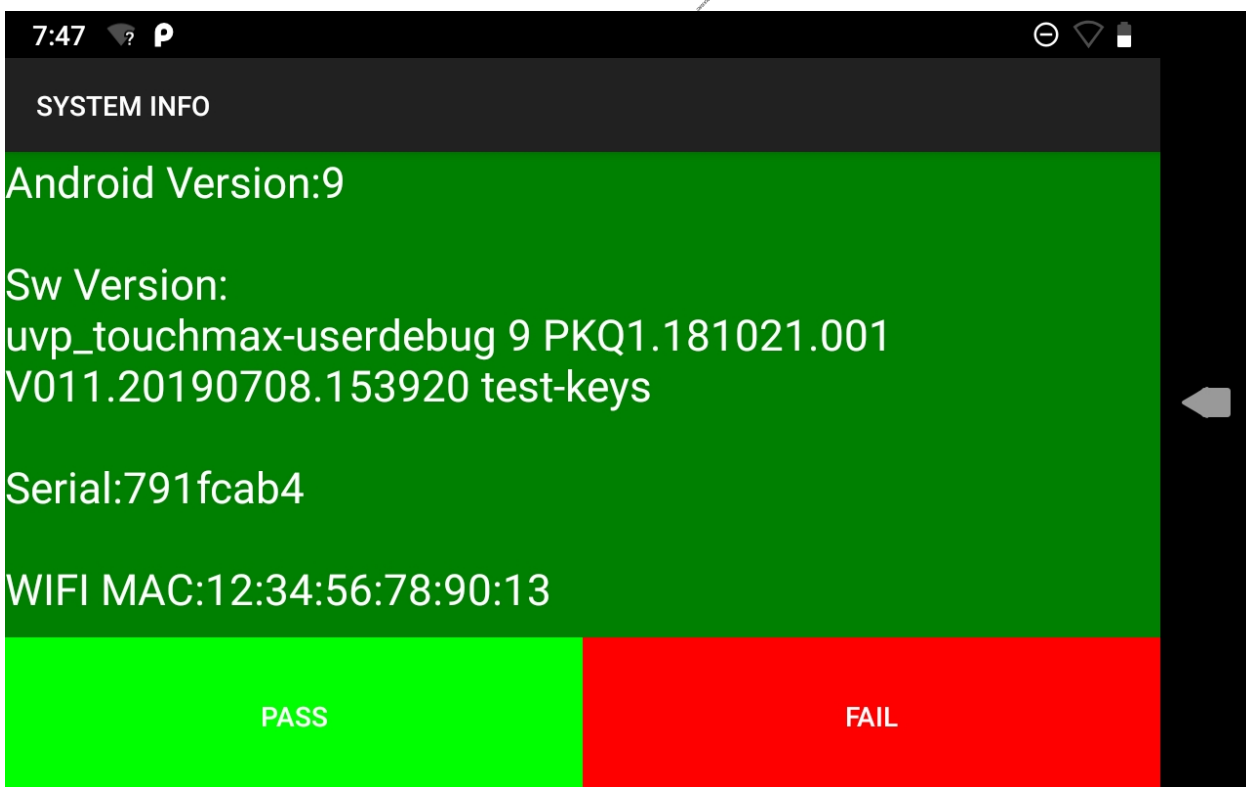

4). STORAGE


Check size. UVP use 32GB emmc. Thus, the total storage size around 20.8GB. And, the

available size should be less than the total size (around 20.5GB).

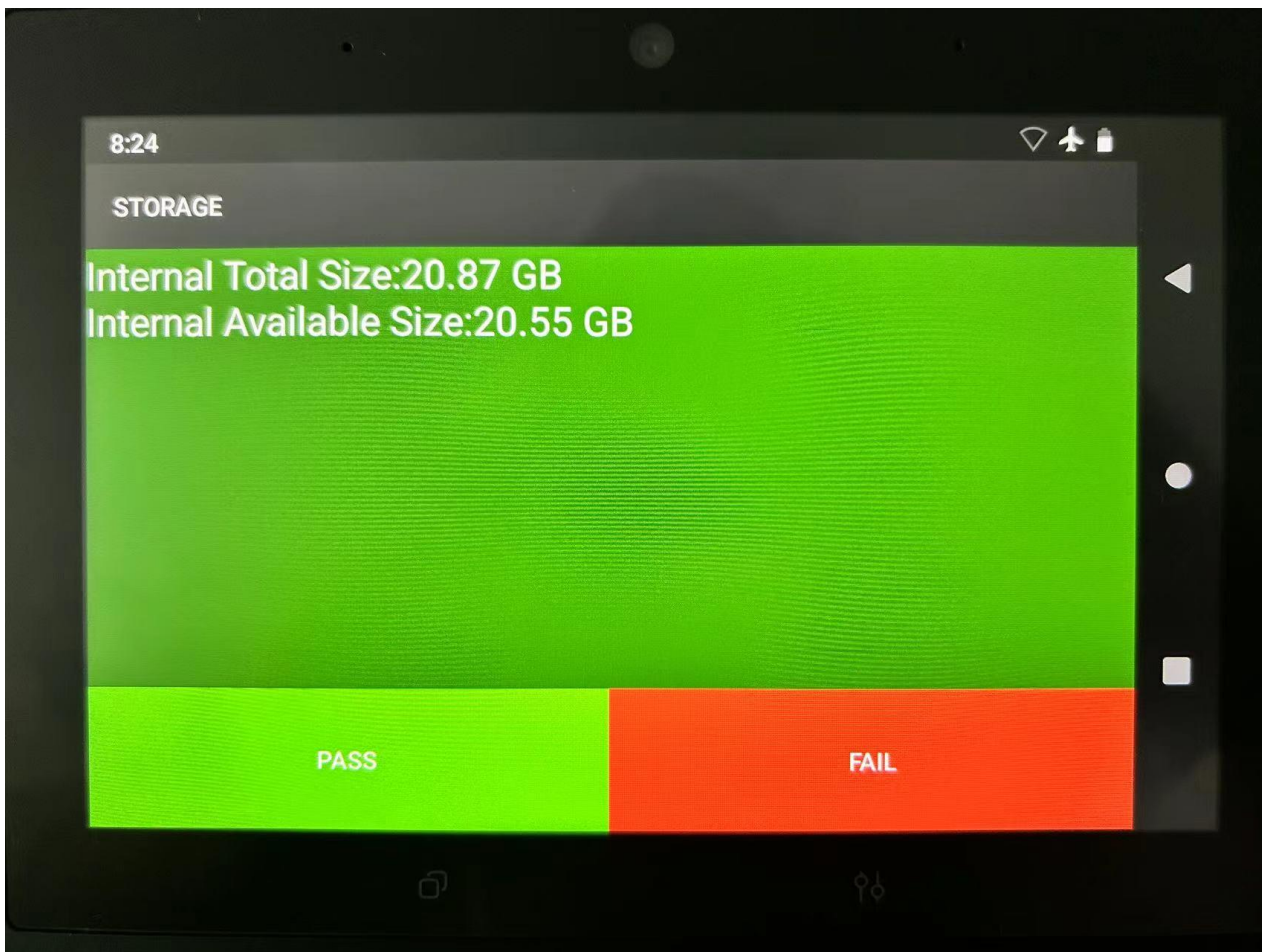

5). MEMORY

Check size. DUT use 16Gbits (2GB) RAM. Thus, the total memory around 2GB. And, the available memory should be less than the total size (around 1GB).

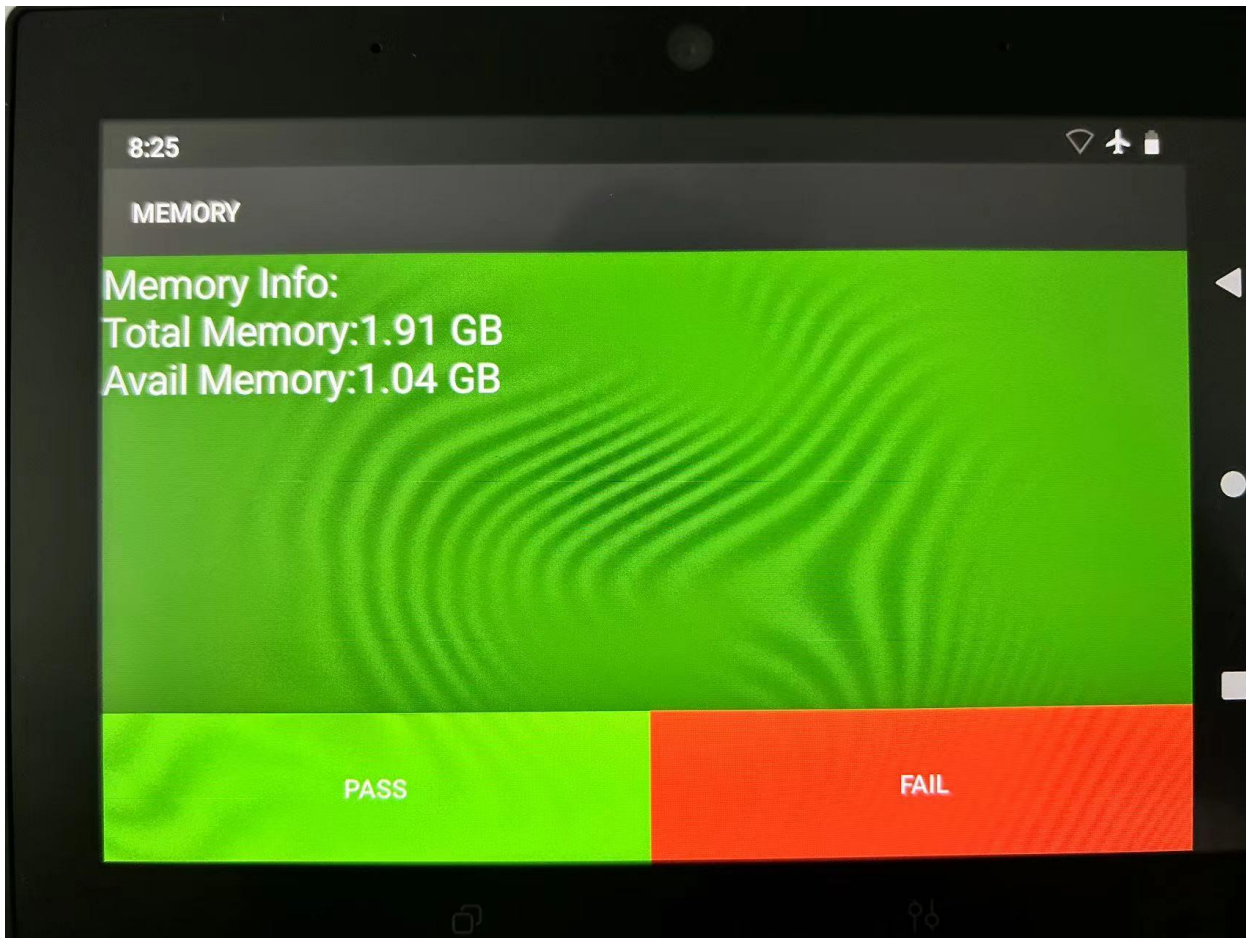


6). LCD

Check “RED”, “GREEN”, “WHITE”, “BLUE”, and “BLACK” are correct.

Please Touch screen to change color.


If no error, please press “PASS”.

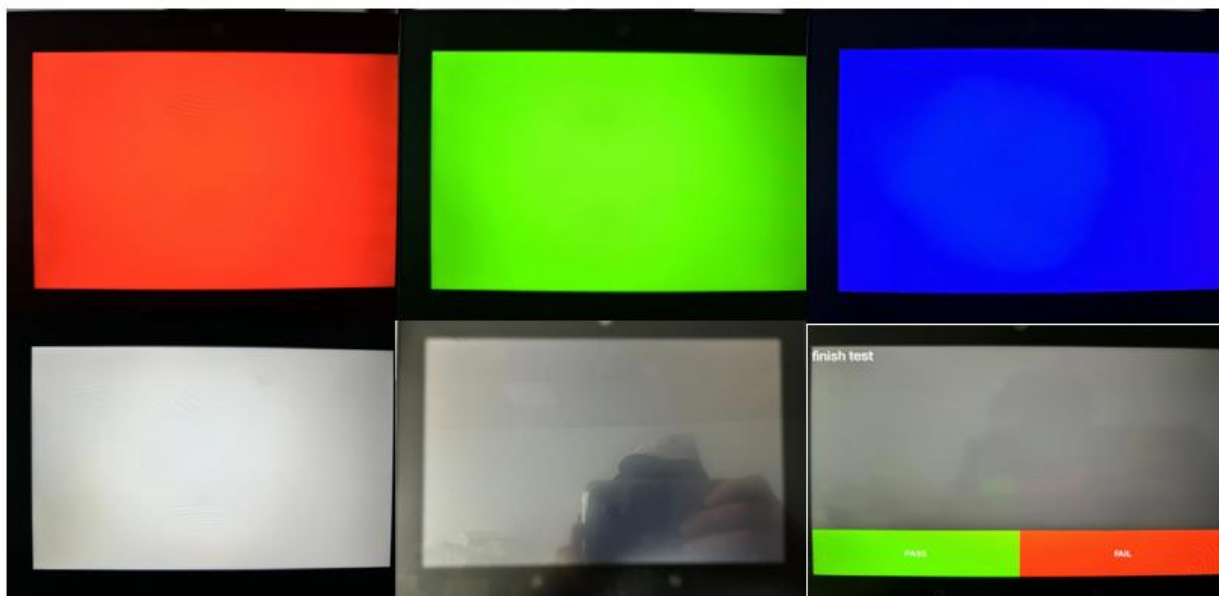




7). TOUCH

Touch every white spot to pass the test.(Note: The test will exit with test failed result if you touch the red fail area.)

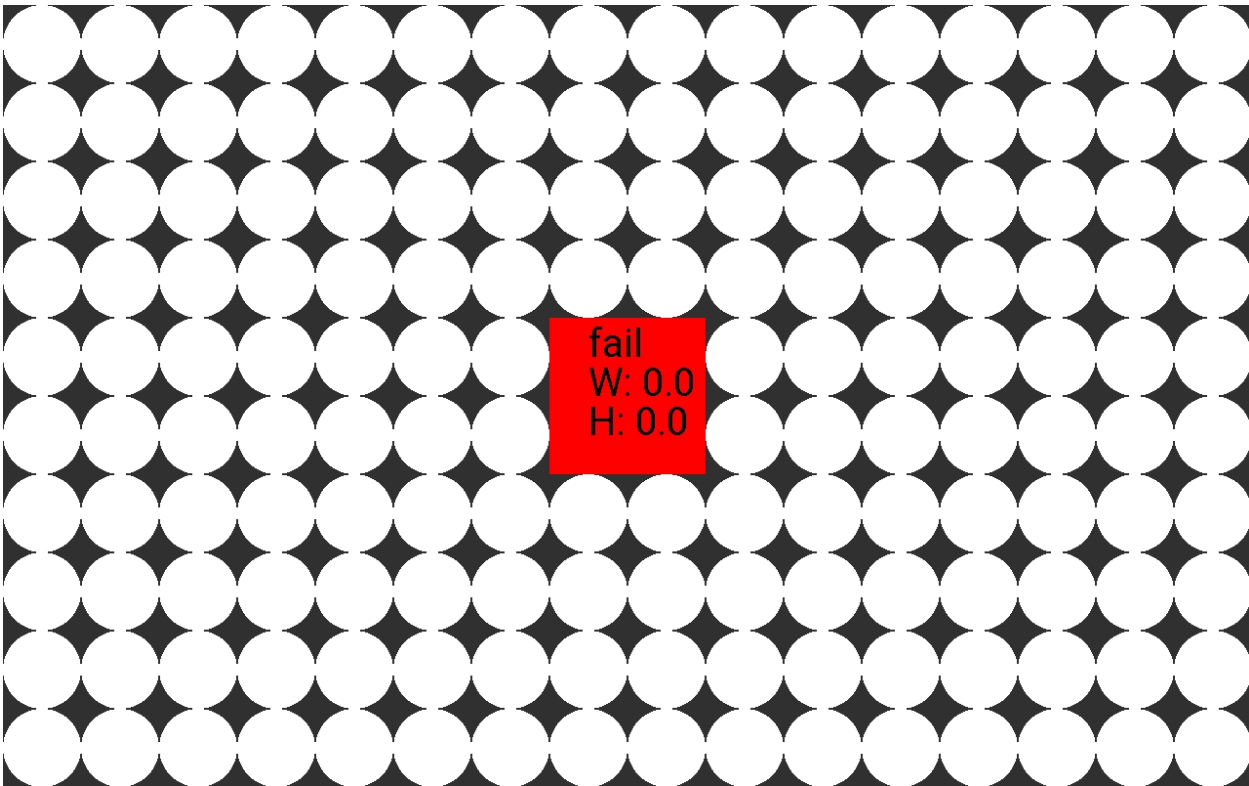


8). CAMERA FRONT

a. Please check the front camera function. If no error, please press "PASS".

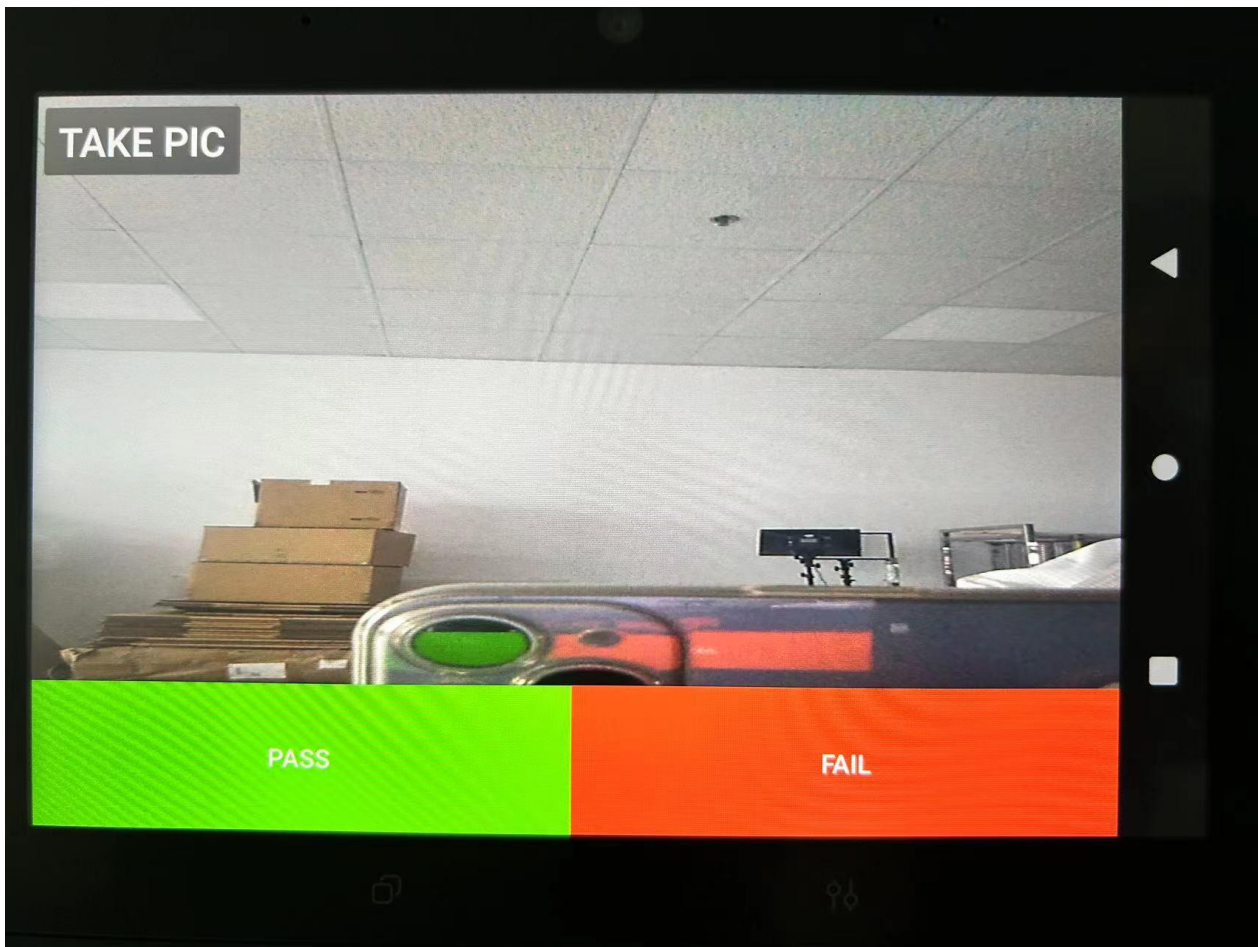


b. Please close the shutter button and check to see if the camera is completely obscured. If so, please press "PASS".

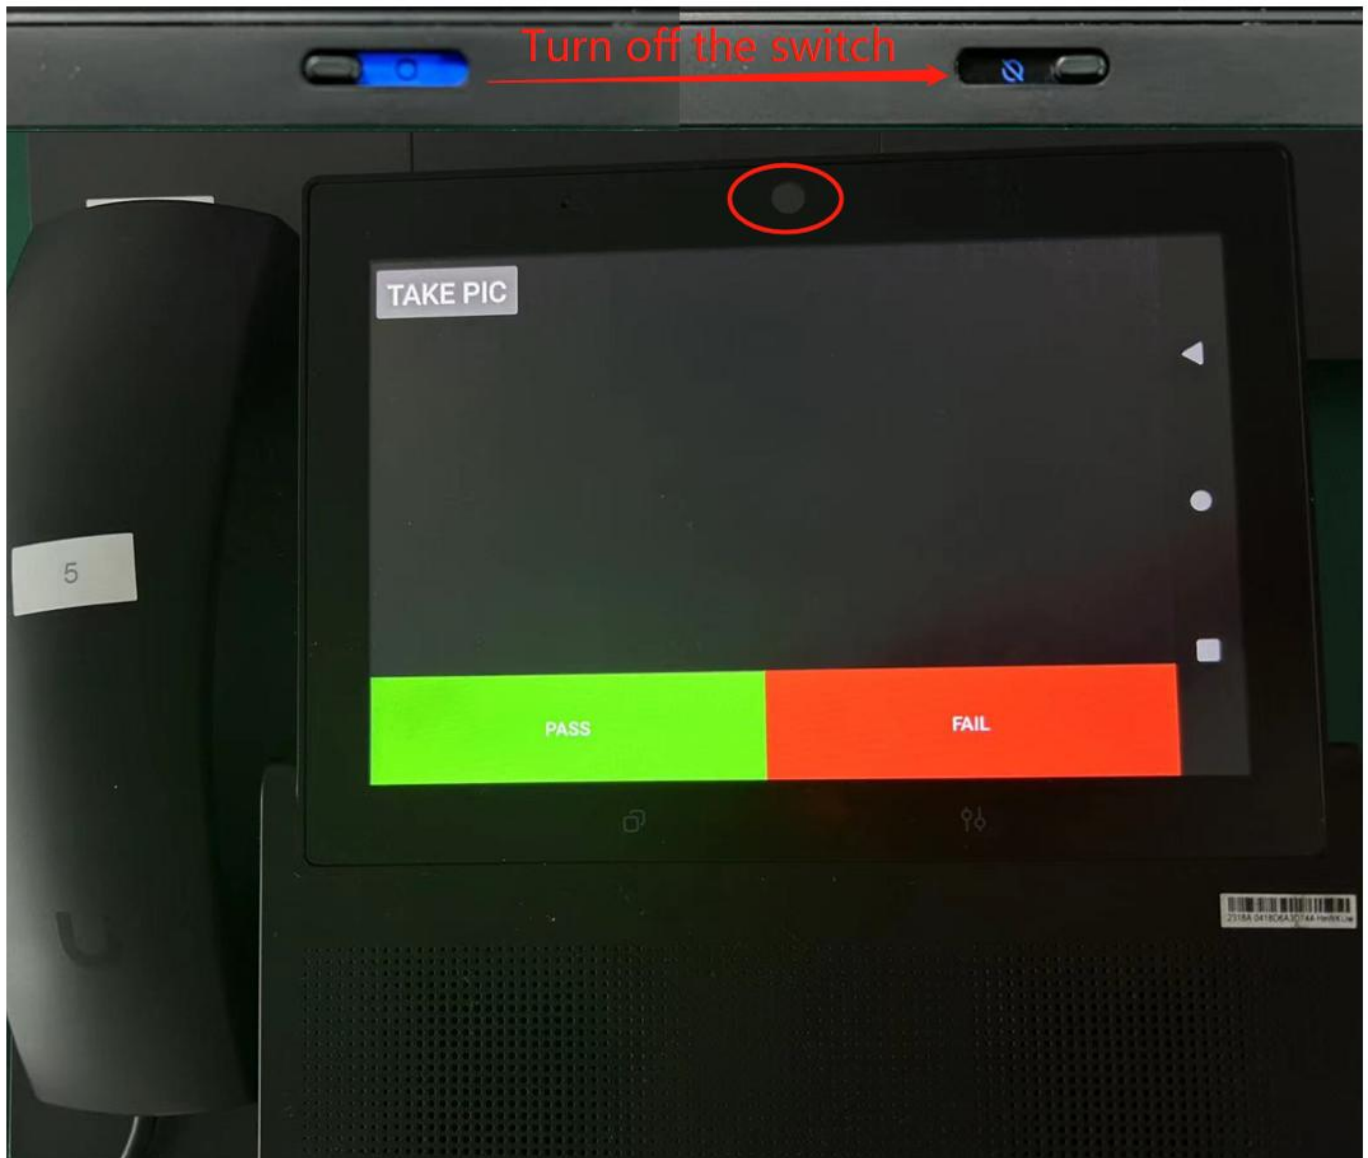


9). WIFI

Please check WIFI scan result. If no error, please press “PASS”.

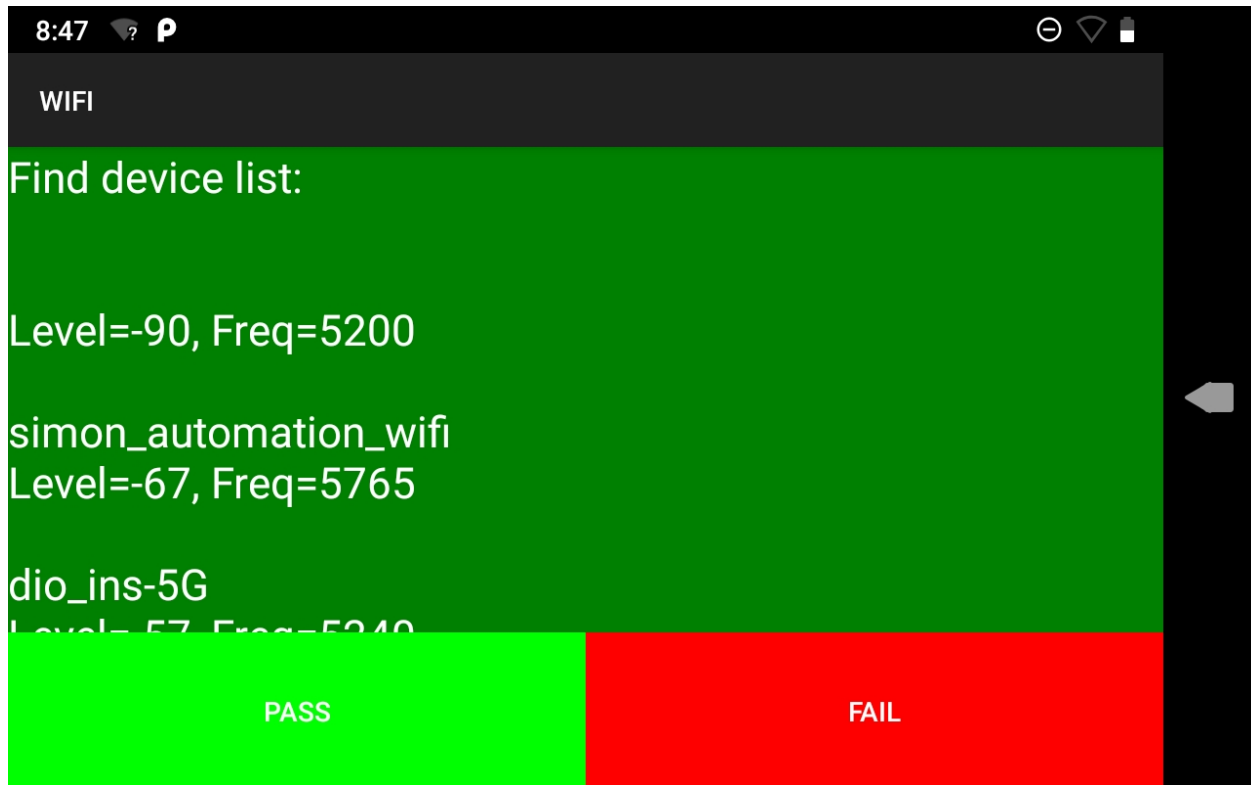


10). BLUETOOTH

Please check BT scan result. If no error, please press “PASS”.

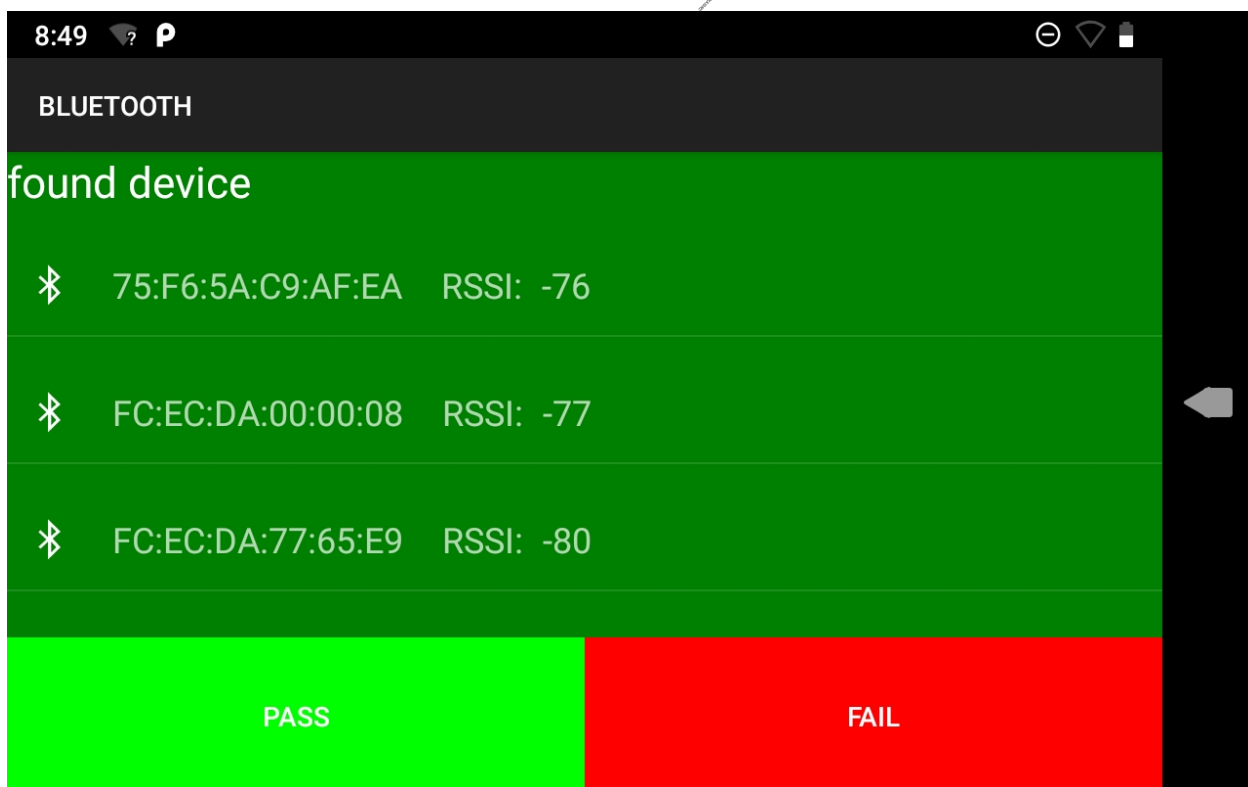


11). AUDIO_SPEAKER_R_PLAYFILE

Hear the sound from **Right Speaker**. If no error, please press “PASS”.

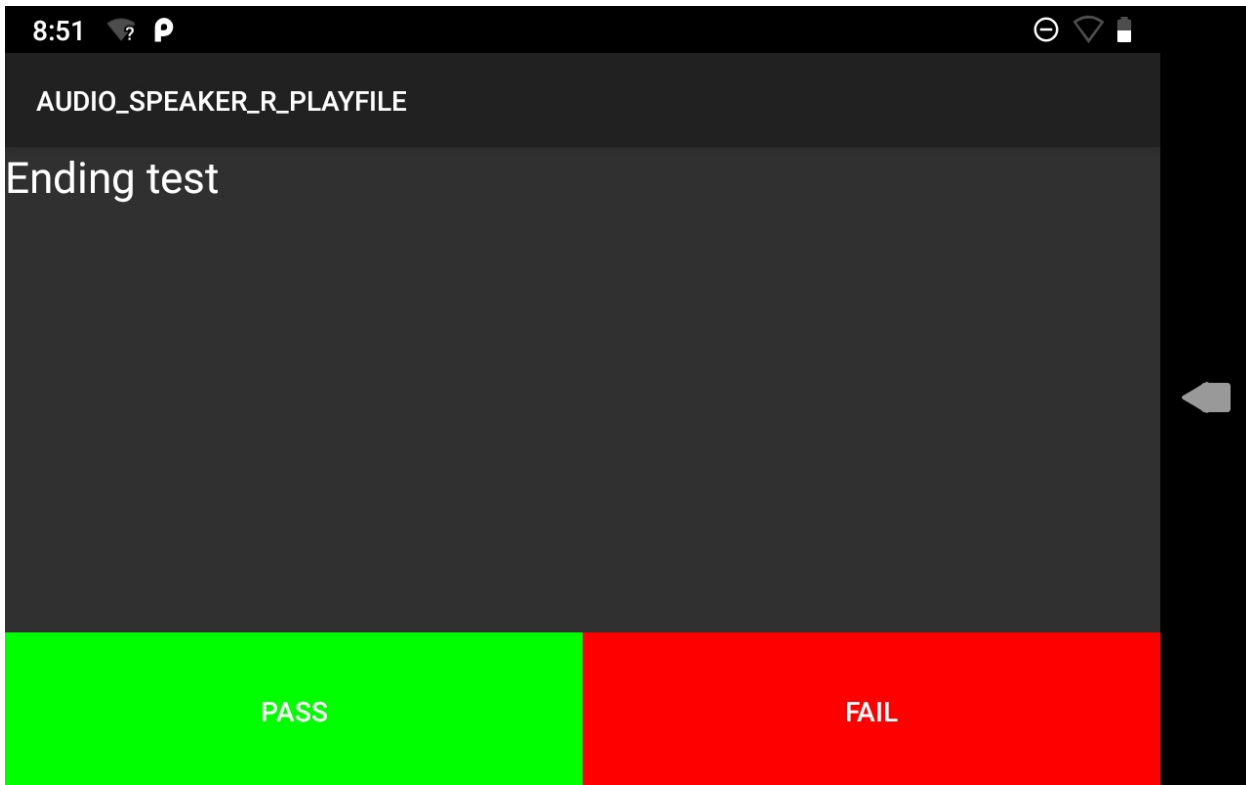


12). AUDIO_SPEAKER_L_PLAYFILE

Hear the sound from **Left Speaker**. If no error, please press “PASS”.

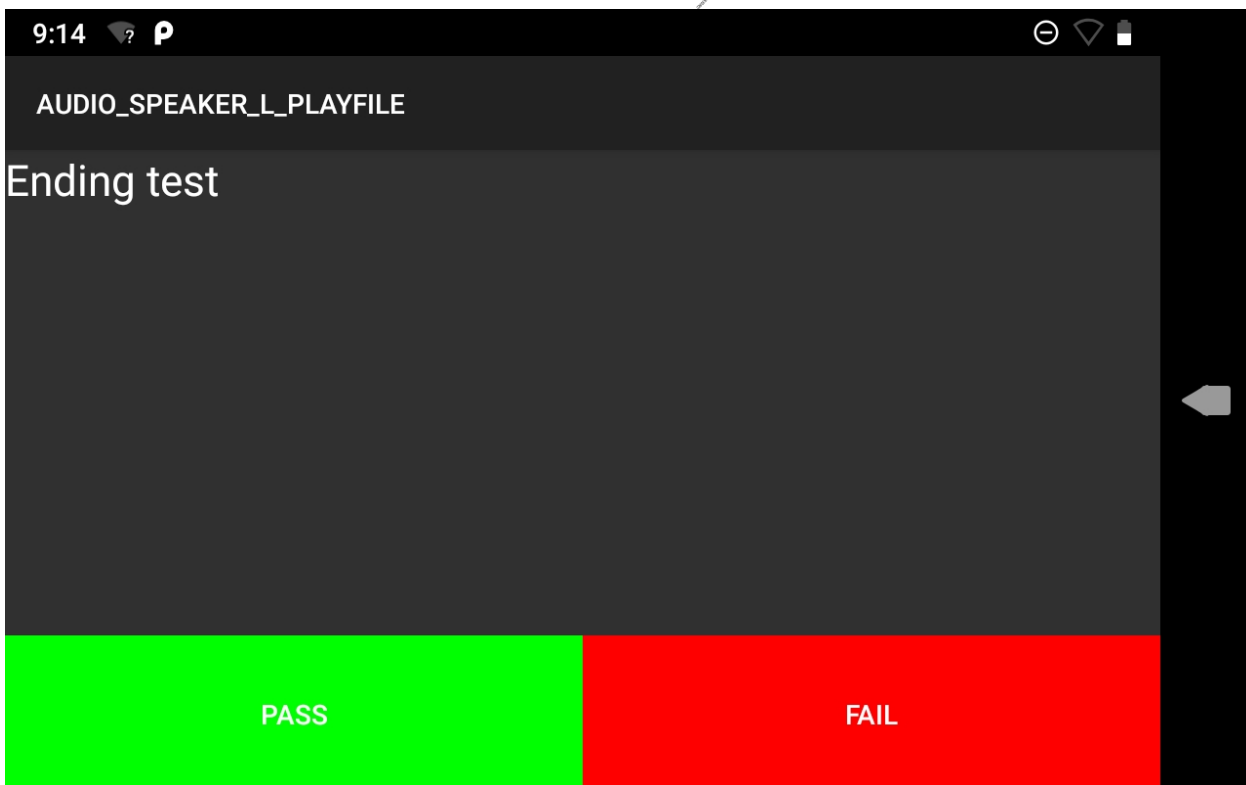


13). AUDIO_HANDSET_PLAYFILE

Hear the sound from the **handset receiver**. If no error, please press “PASS”.

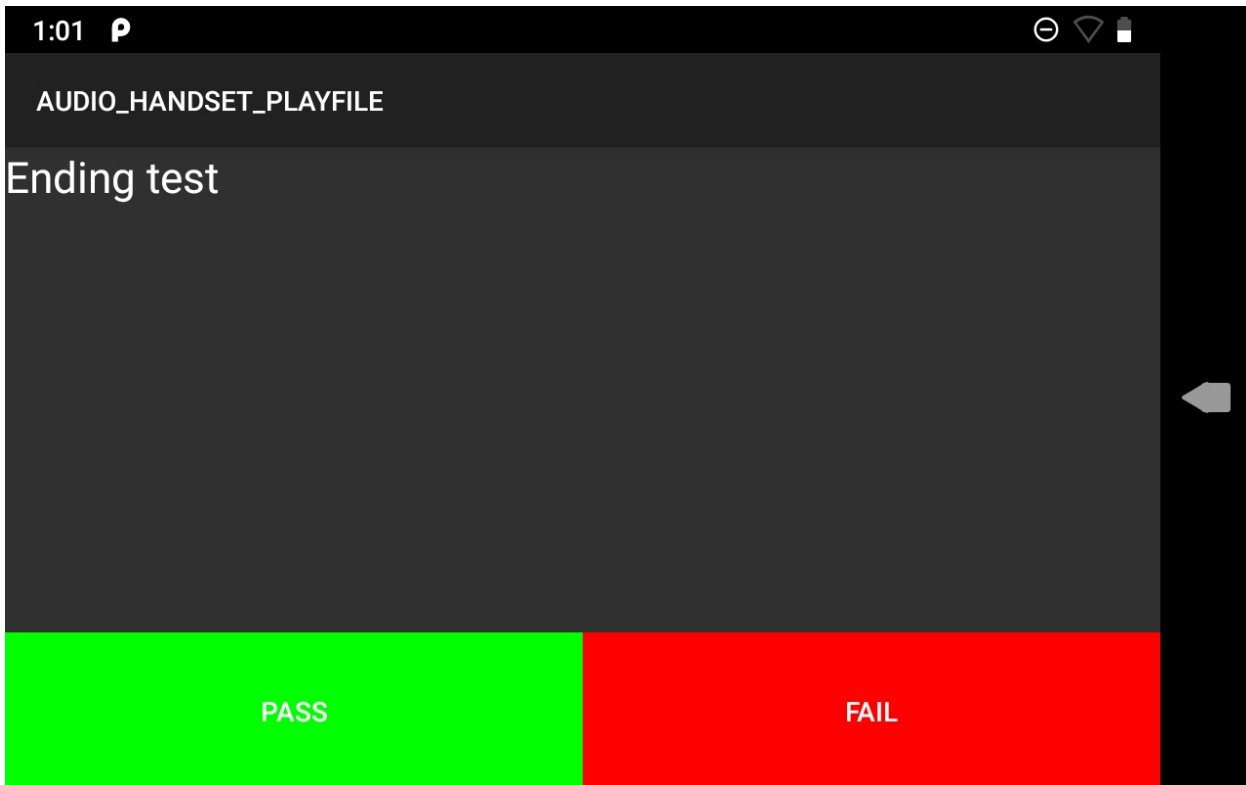


14). AUDIO_HANDSET_MIC_HANDSET_SPEAKER_LOOPBACK

Record sound by **handset receiver MIC** and hear the sound from the **handset receiver**. If no error, please press "PASS".

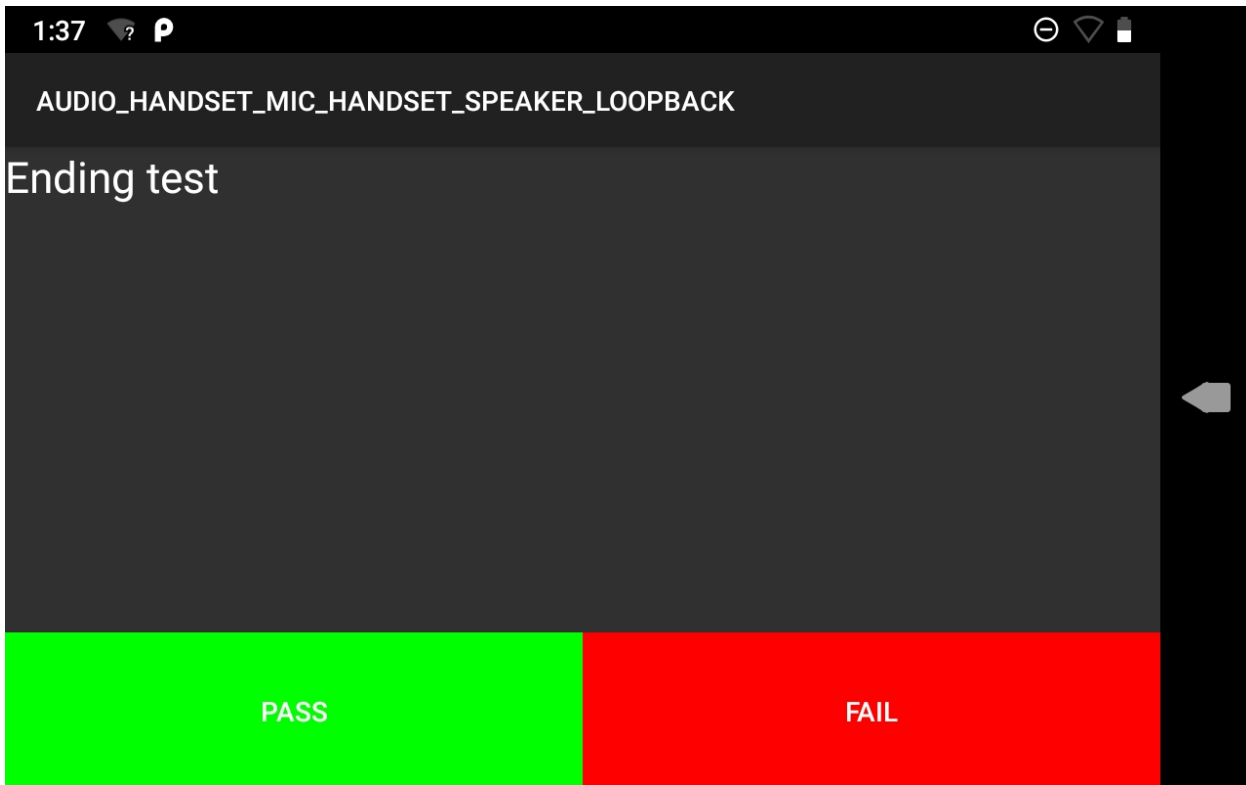

7.4 Check Result

1). Use FTU tool to upload QMMI test results in “T8-ASSY-FTU” station.

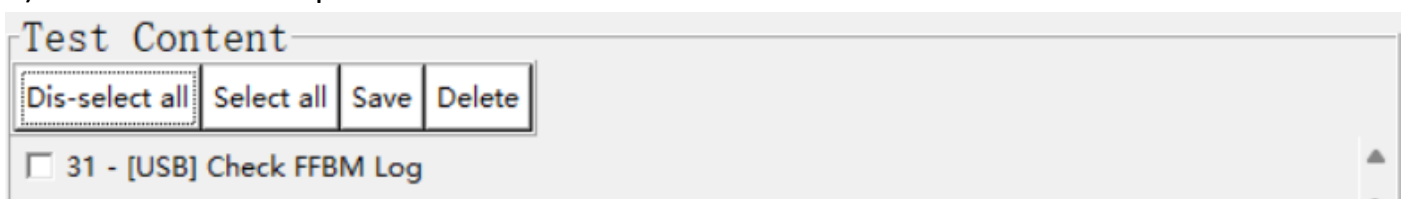


8. T8-ASSY-FTU

8.1 Equipment List

Please reference equipment list.

8.2 Connection Diagram

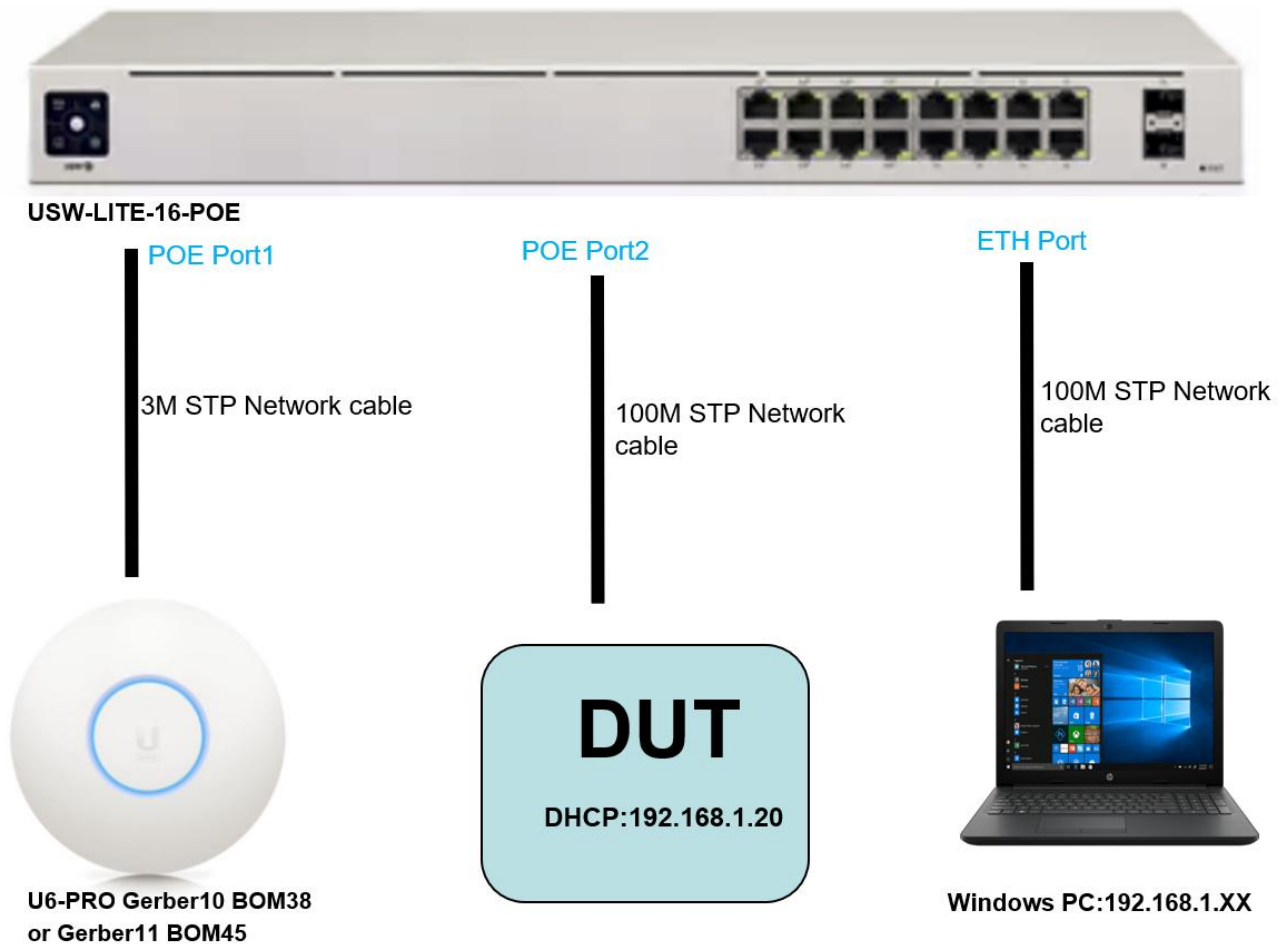


8.3 Software Setup


- 1). Download FTU Tool from path : ([FTU_efba_1.0.11_1.0.0_UTP-G3-TouchMax-Wall.zip](#))
- 2). Please contact to UBNT RD (Kevin.Wen@ui.com) for any update!

8.4 Setup Environment

- 1). Double-click "run_windows_mvc.bat" .

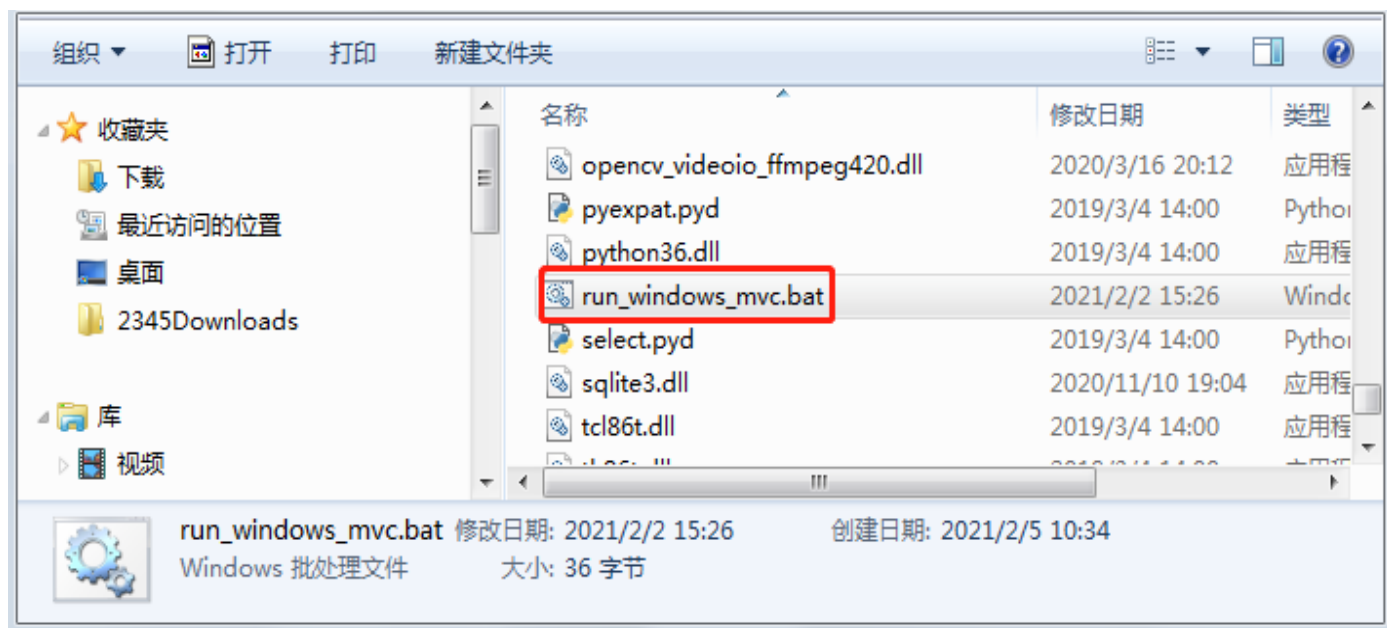

2). FTU setting (Review the version and test items).

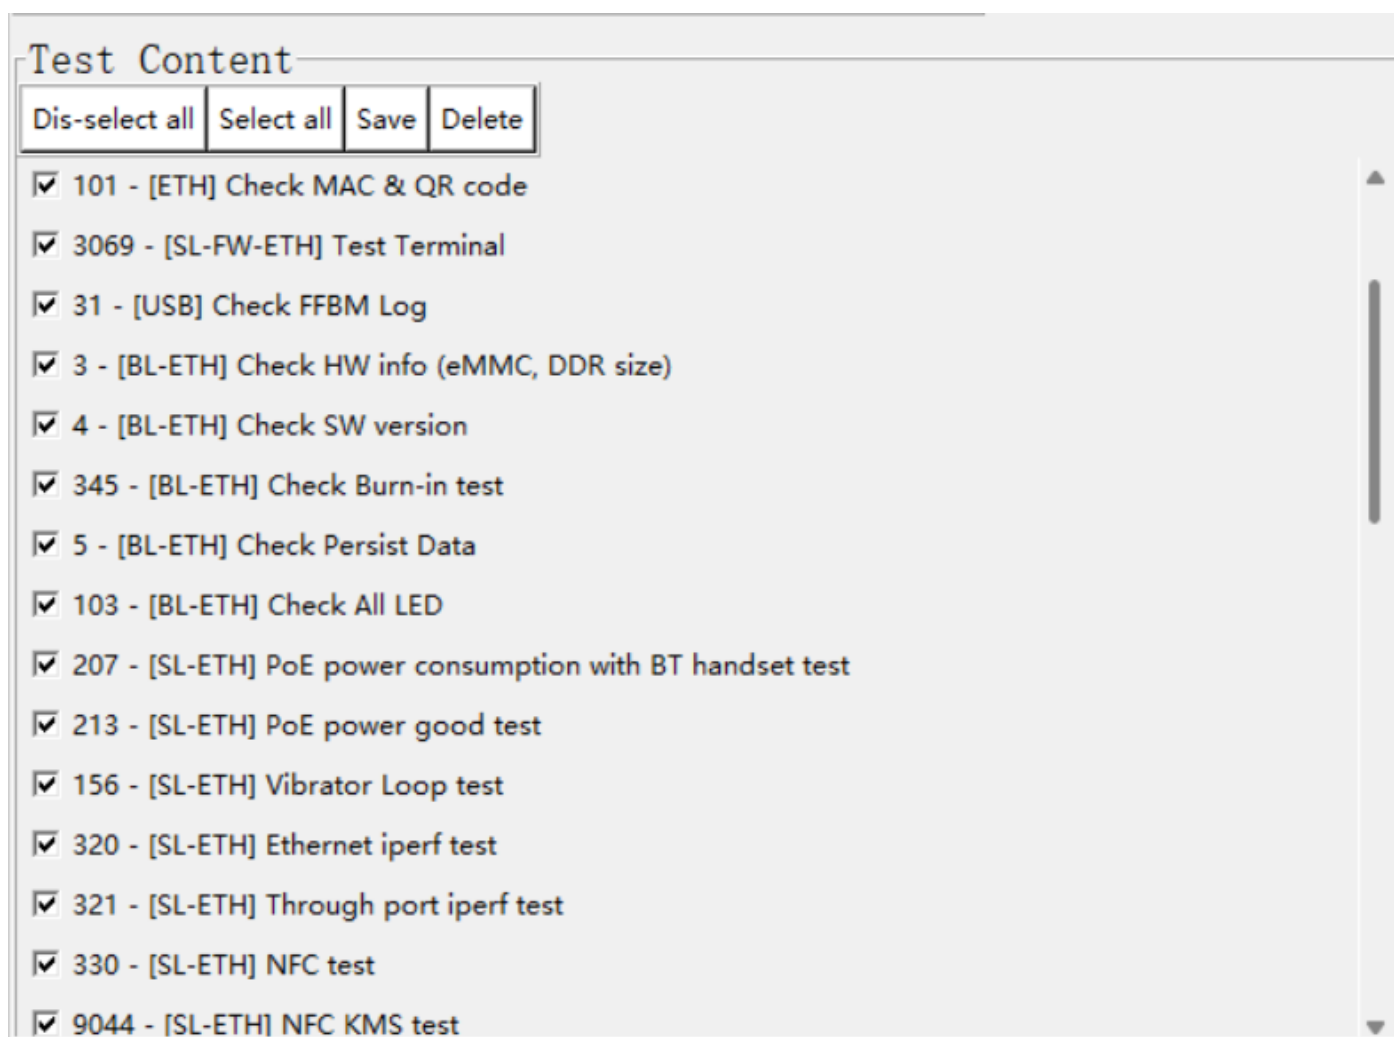



- ☒ 600 - [SL-ETH] USBC Test
- ☒ 37 - [SL-ETH] Reset button test
- ☒ 38 - [SL-ETH] Hook ON/OFF test
- ☒ 39 - [SL-ETH] Mute button test
- ☒ 40 - [SL-ETH] Virtual Key2 test
- ☒ 41 - [SL-ETH] Virtual Key0 test

FUT Ini config:

[IP]

DUT = 192.168.1.220

LocalPC = 192.168.1.193

[func_power]

switch_ip= 192.168.1.101

switch_id = ubnt

switch_pw = ubnt

switch_port_poe = 1

switch_port_poe_gu = 2

not_catch_sec = 5

test_duration_sec = 5

power_regular_criterion_watt = [5.5, 7.0]

[ethernet]

iperf_rx_crit = 500

iperf_tx_crit = 600

8.5 Test Process

1). Scan "MAC ID", then click button "F2" .



MAC:




Test Content



2). Are all LEDs Status good? If yes, press "Yes" button.



Work fine?

ALL_LED
Is LED red on now?



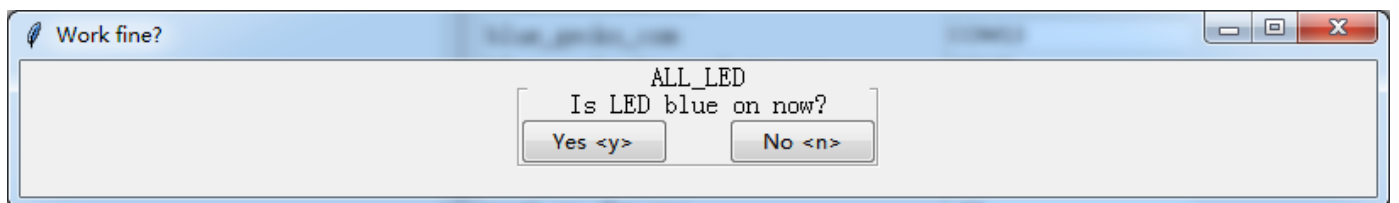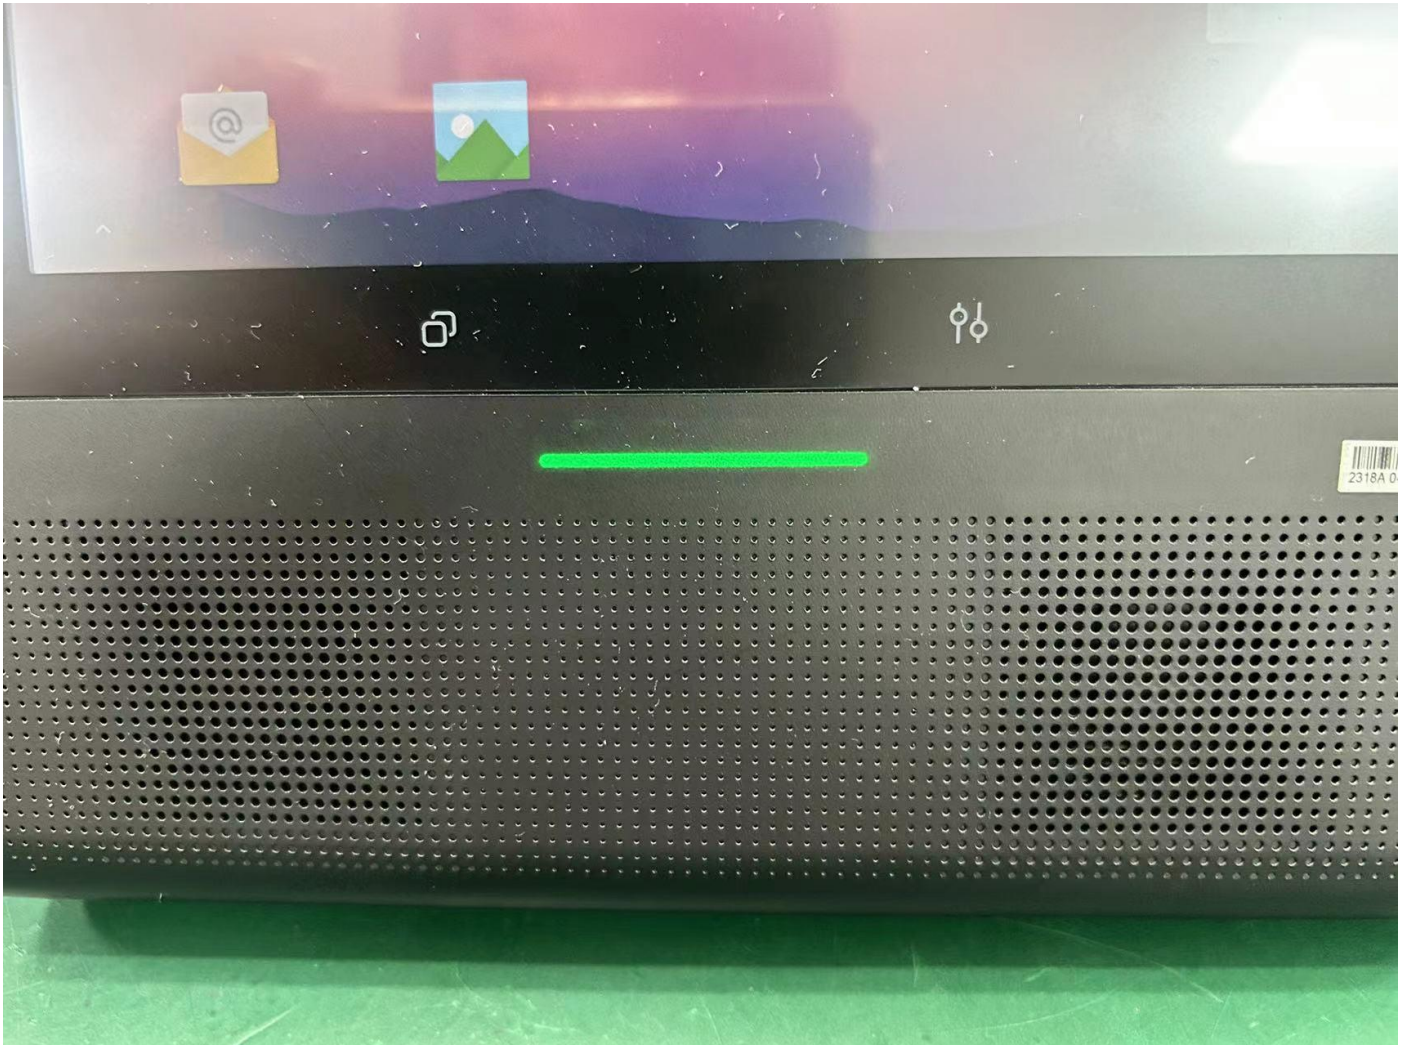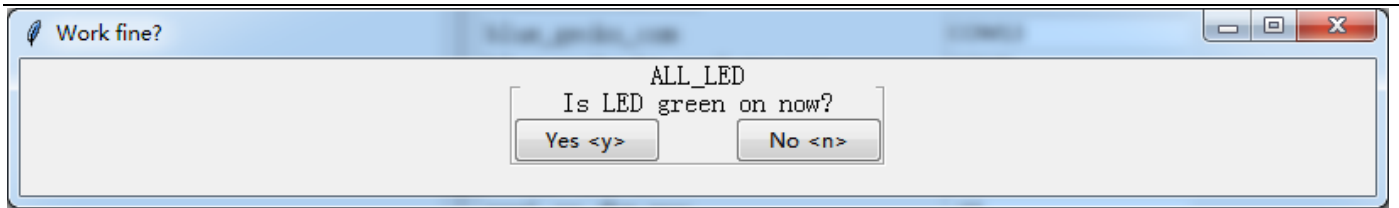


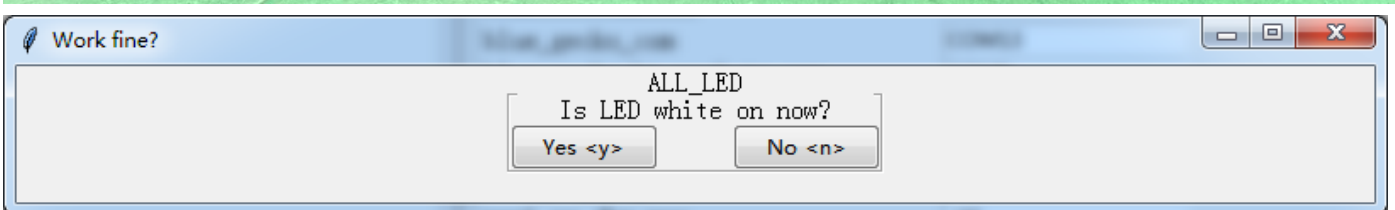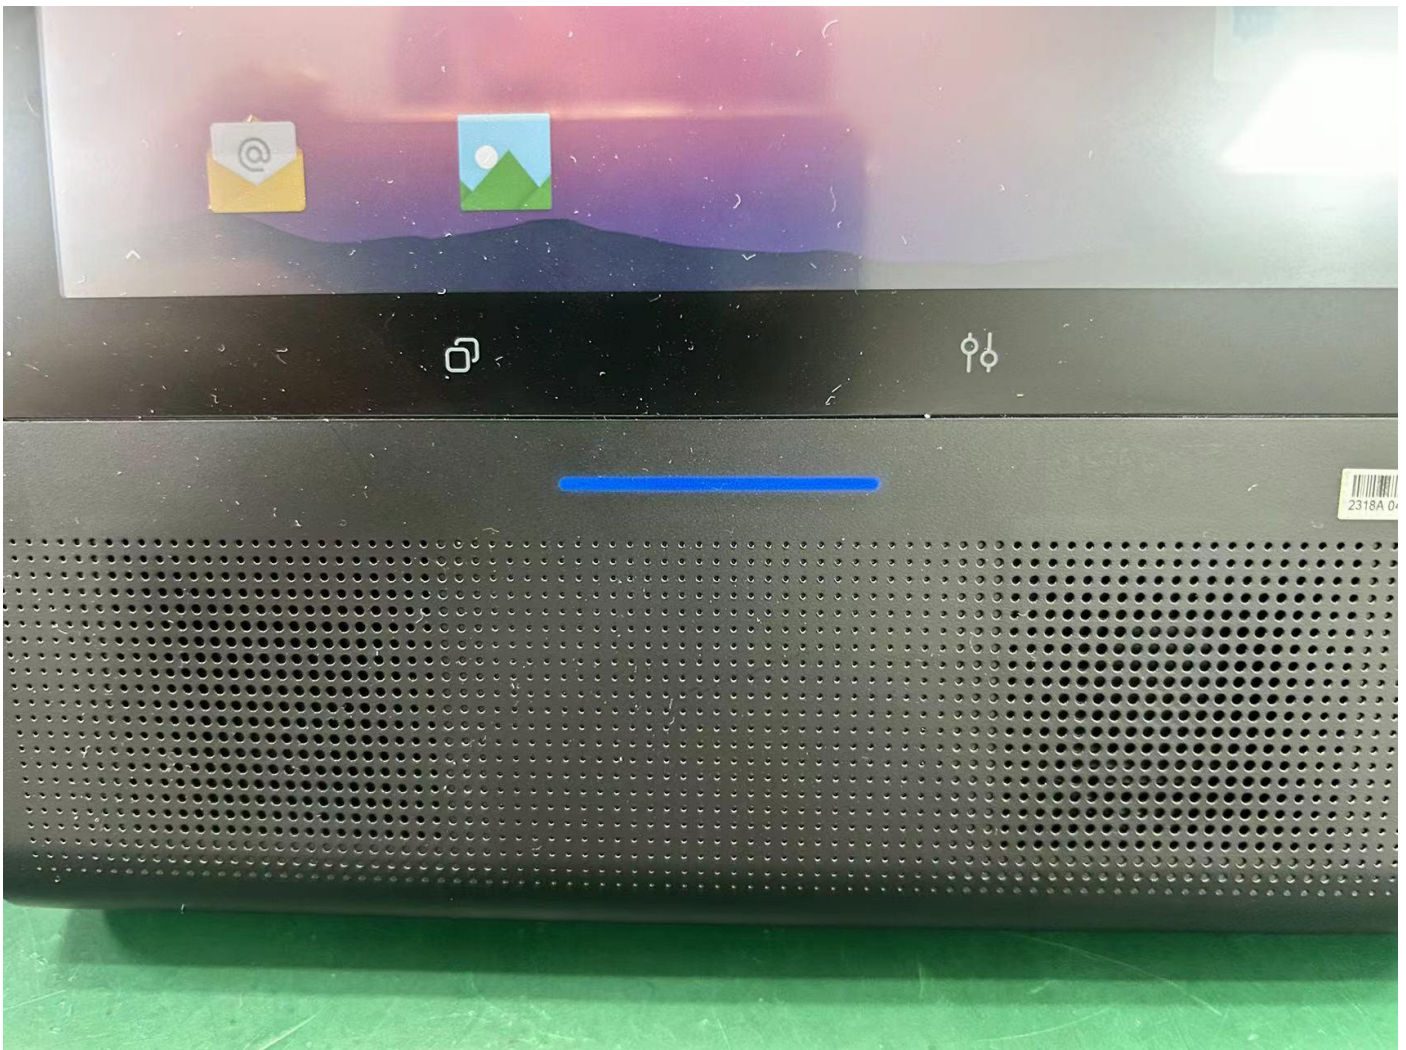


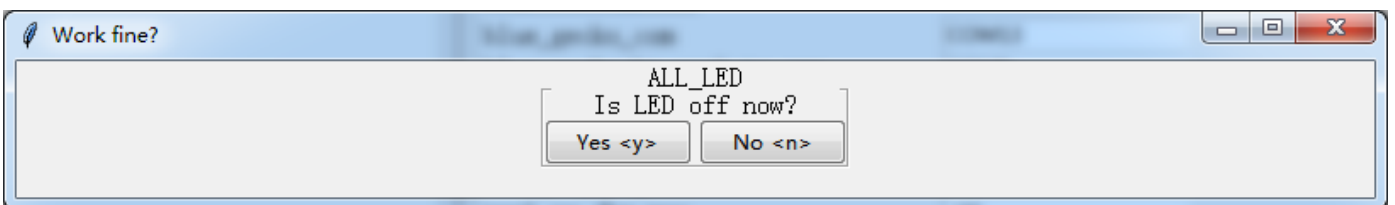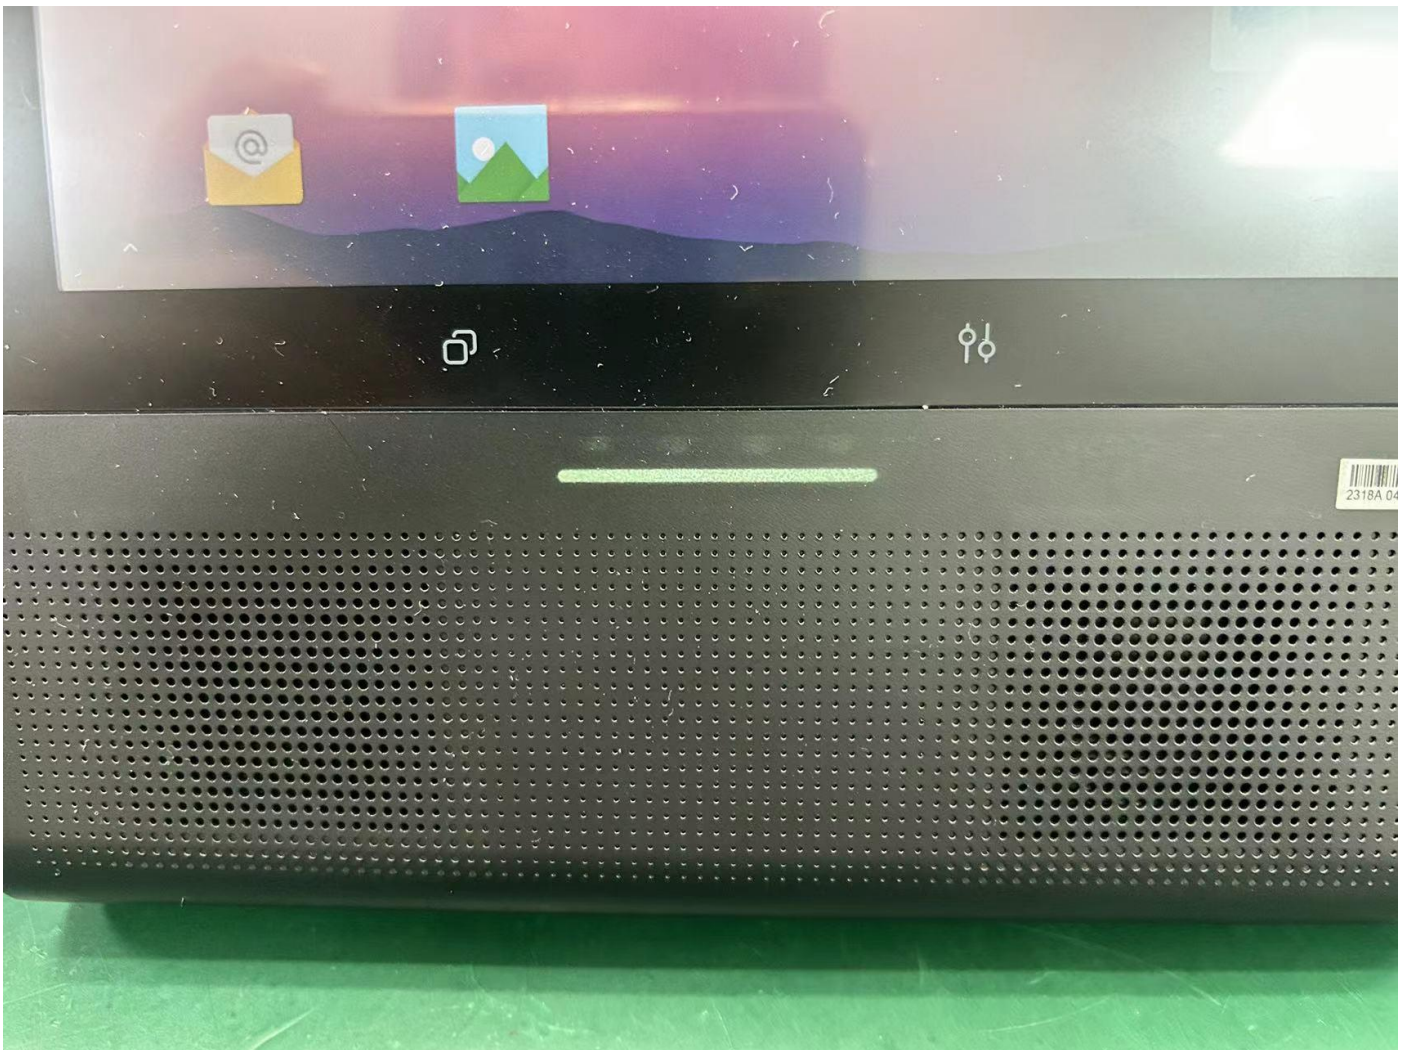




3). Please connect BT Handset to DUT then click “ok” button.

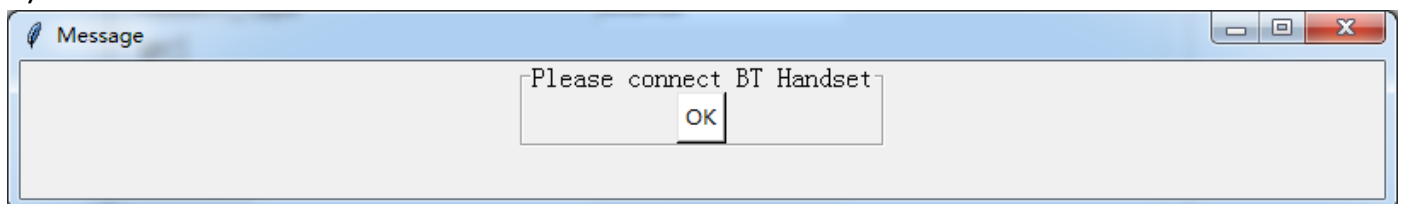


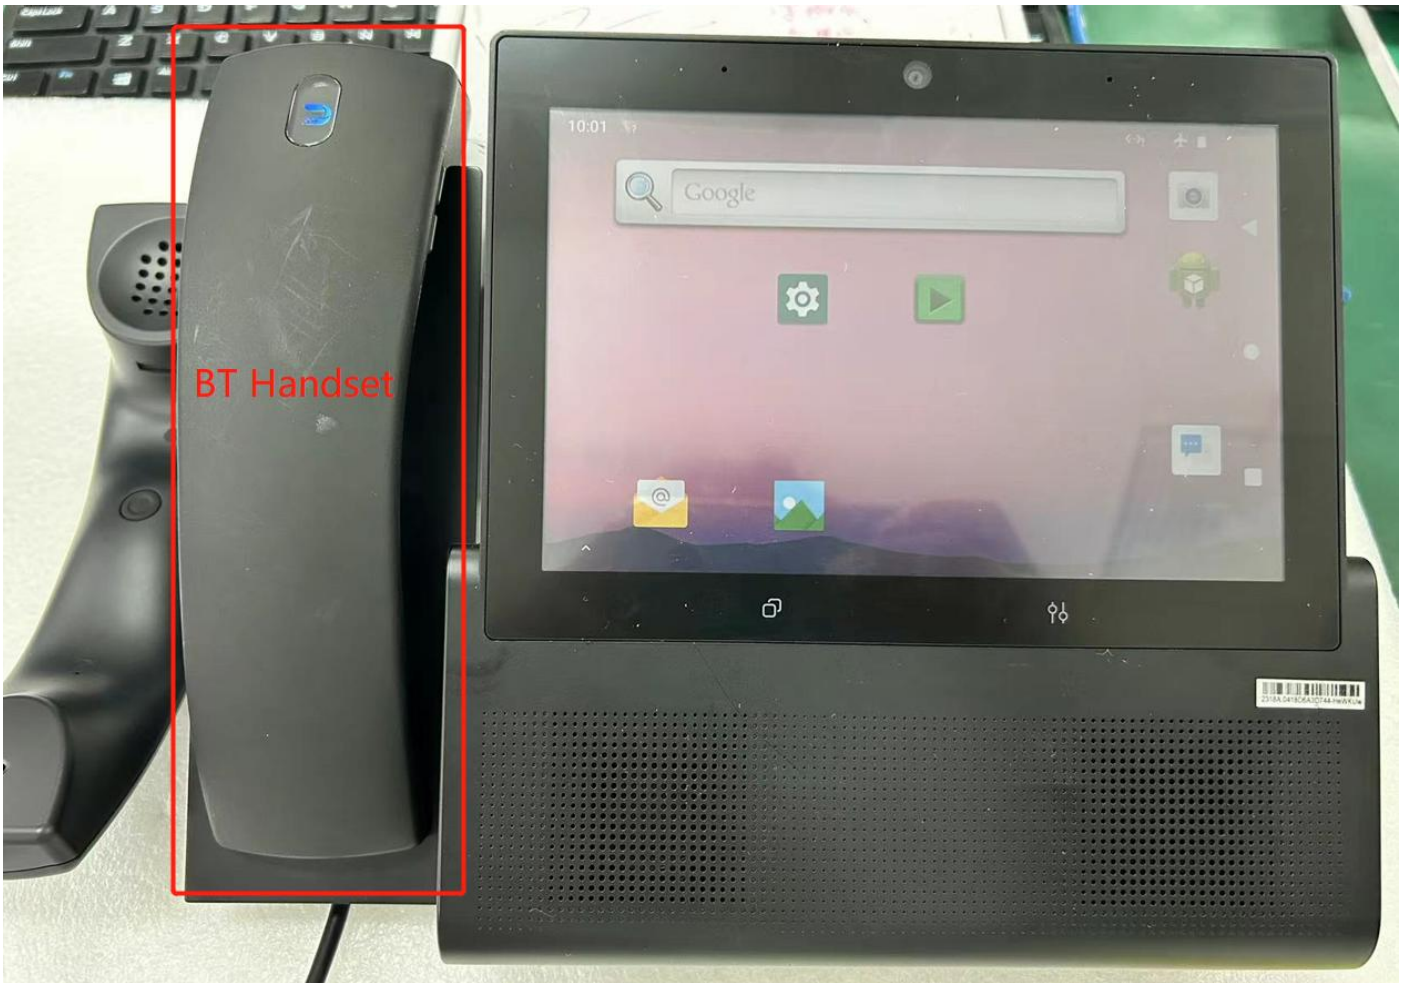


4). Is the vibrator behaving normal? If yes, press “Yes” button.

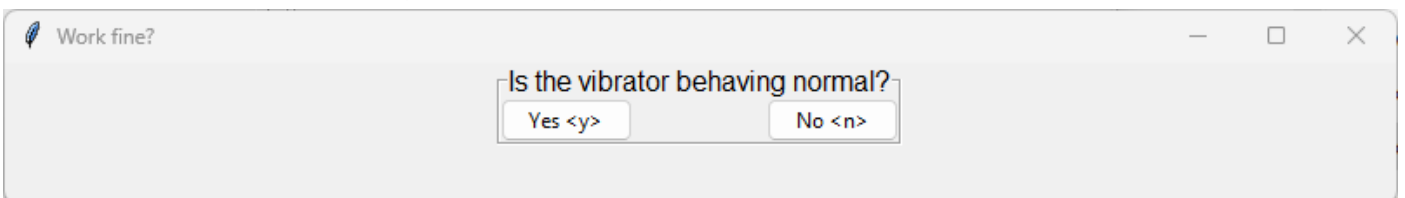



5). Please connect DUT through port to PC ethernet port then click “ok” button.

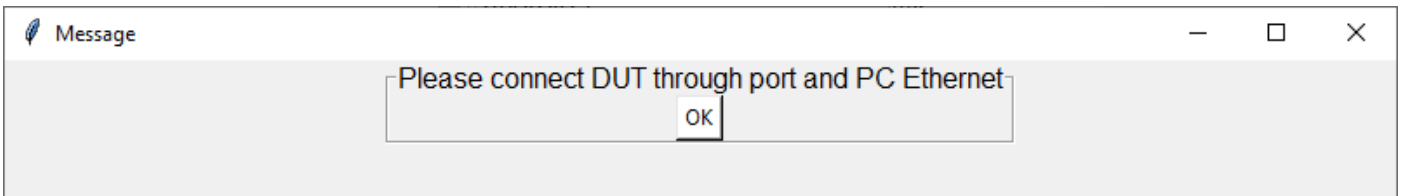

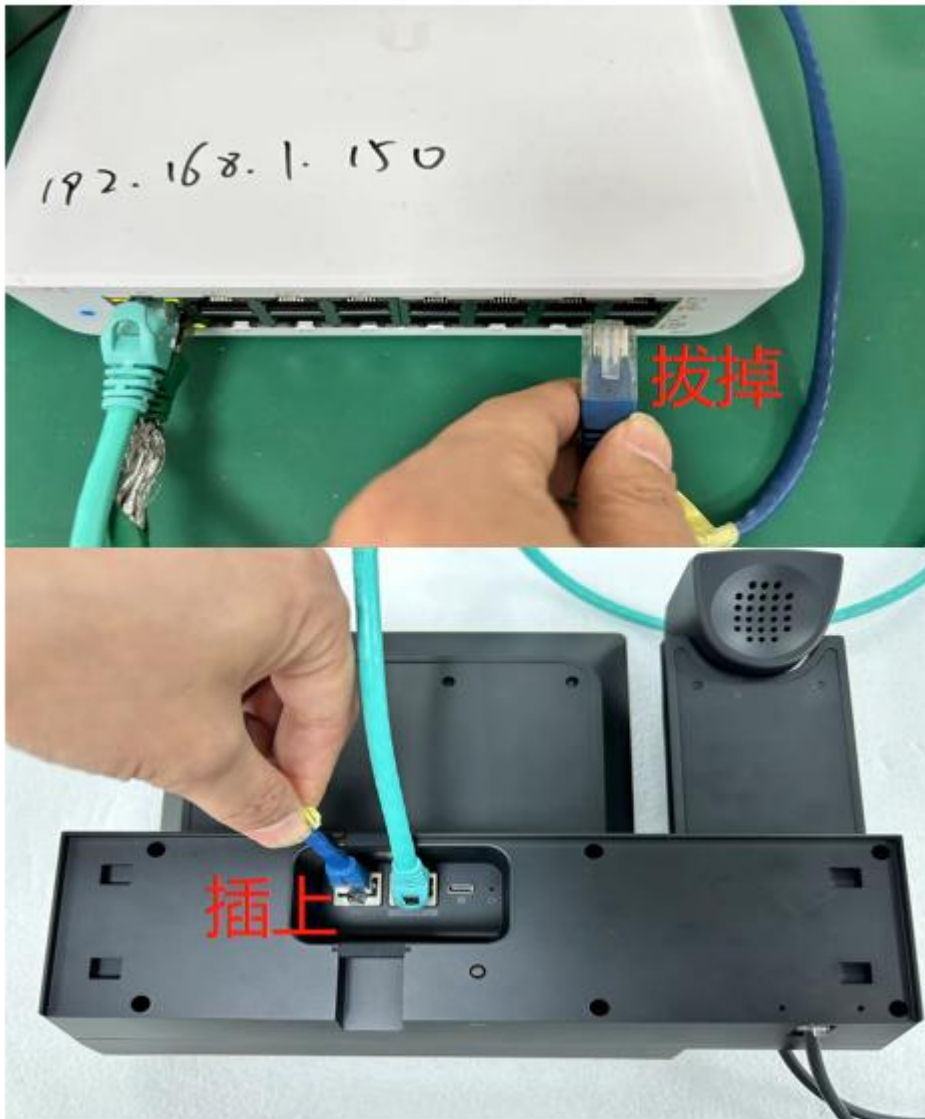



6). Please connect switch port to PC ethernet port then click “ok” button.

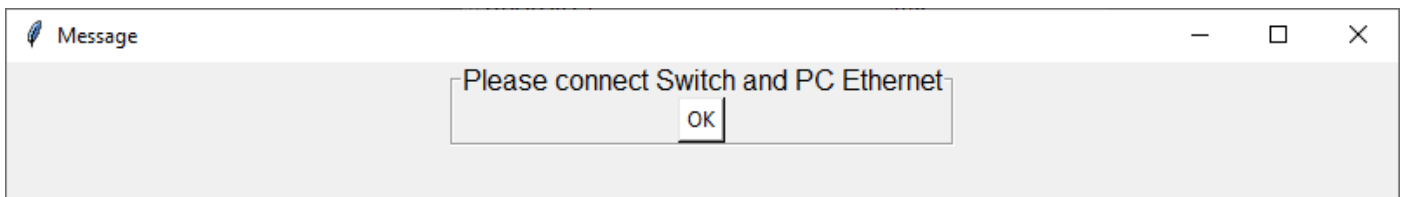

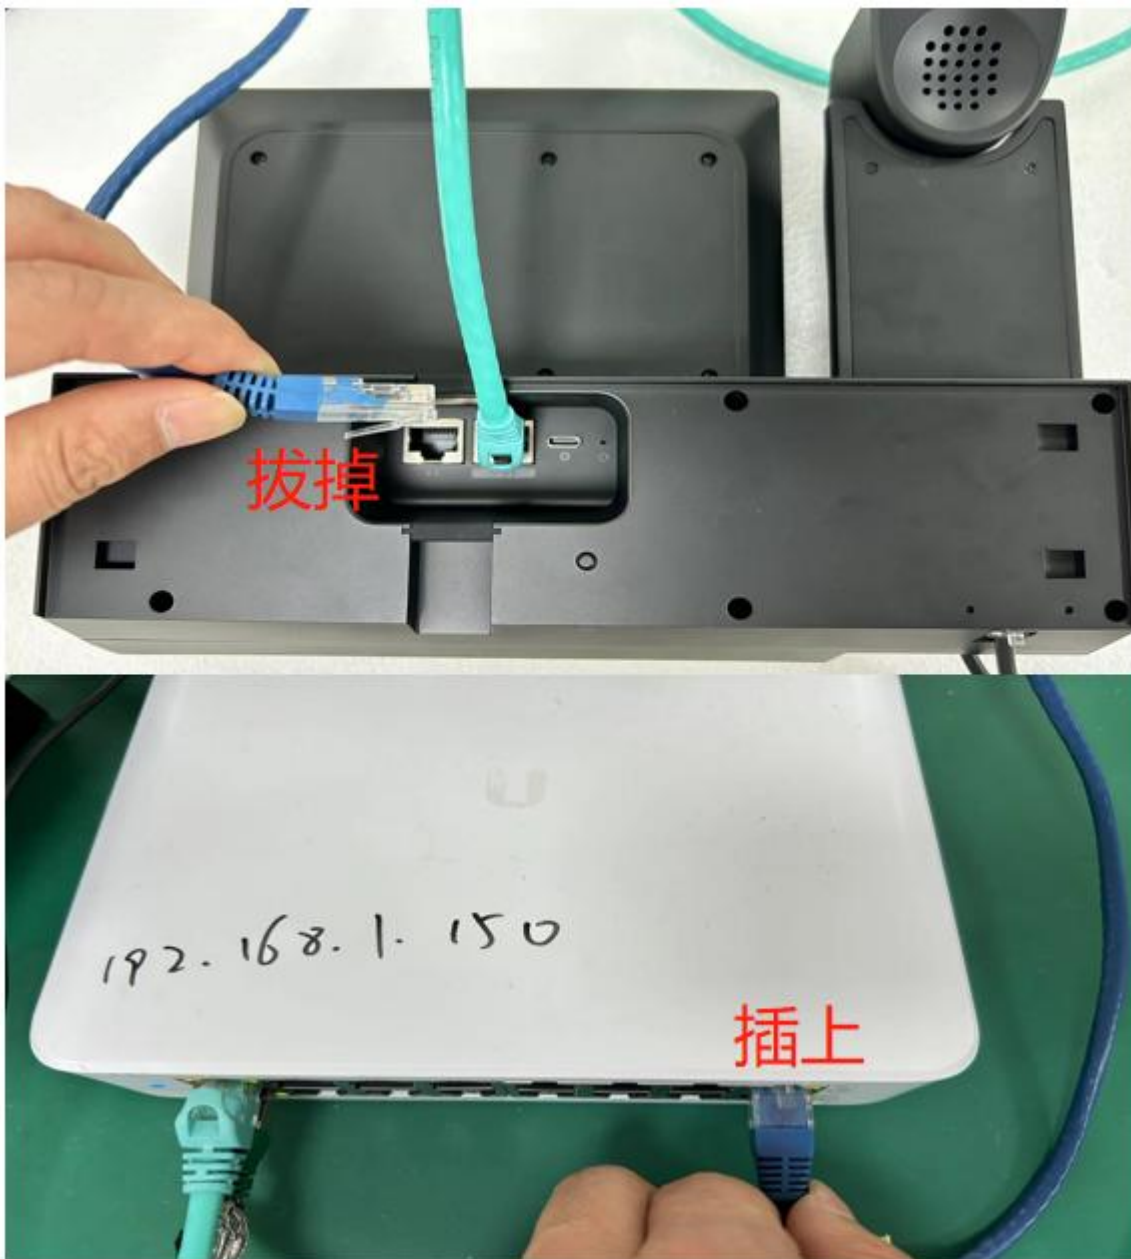


7). Put the UA-CARD on DUT.

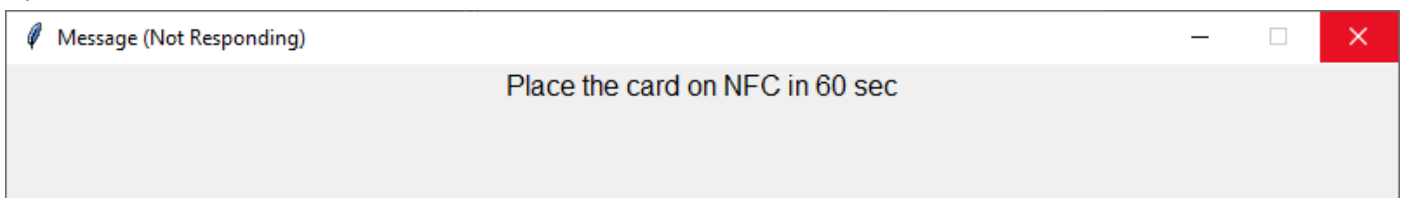

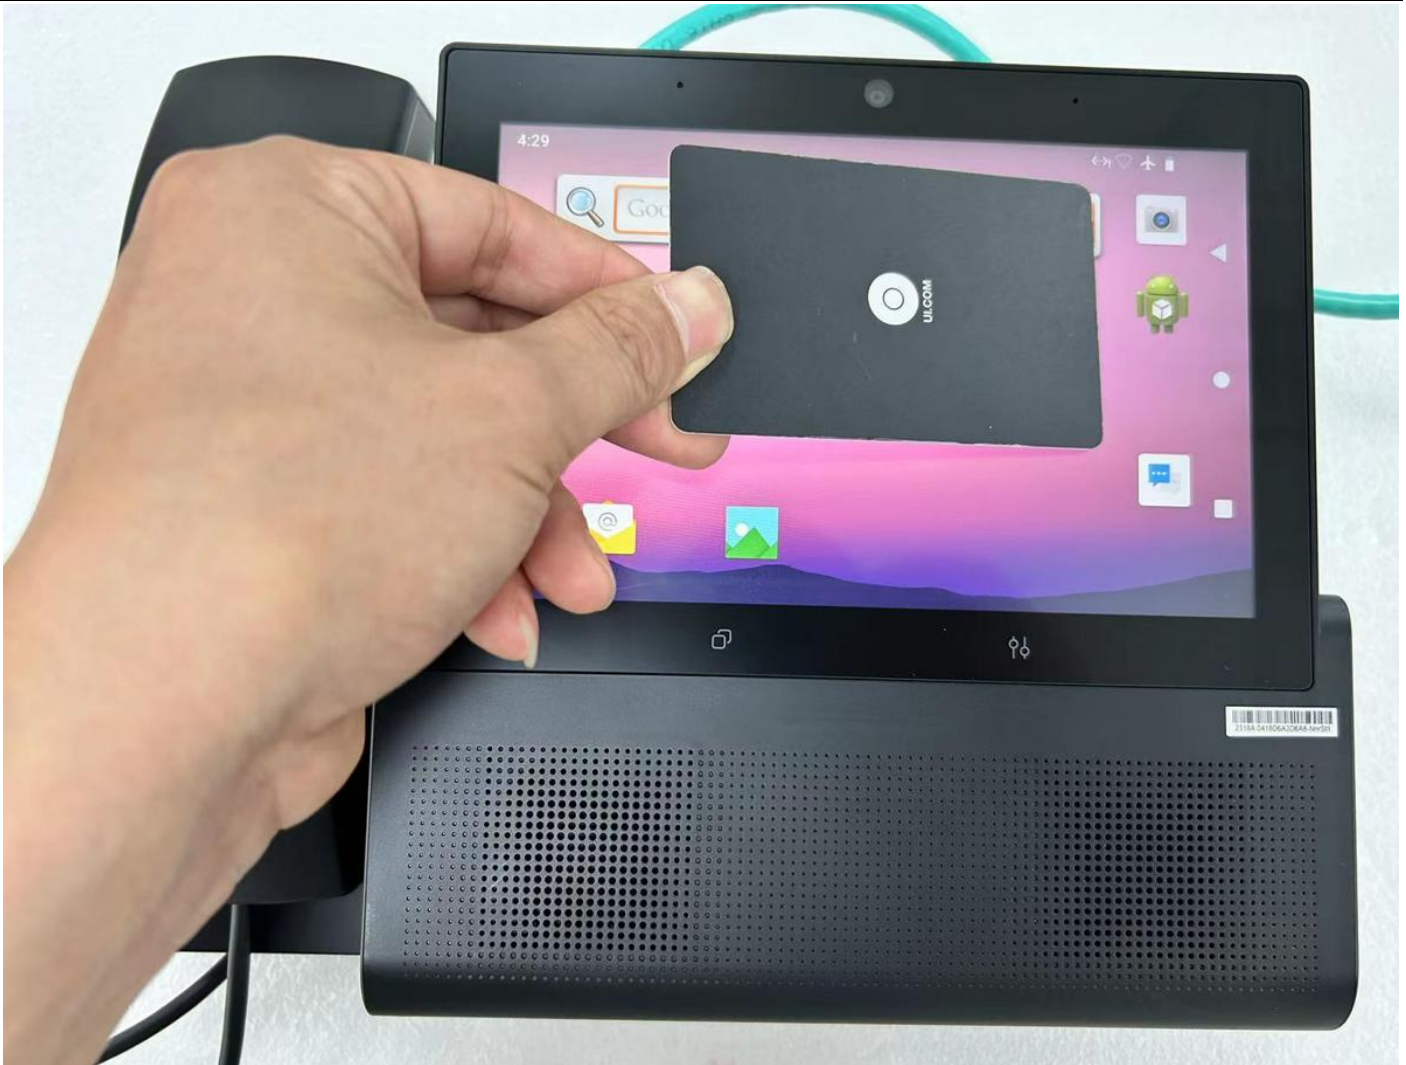


8). Put the factory card on DUT then click “ok” button.

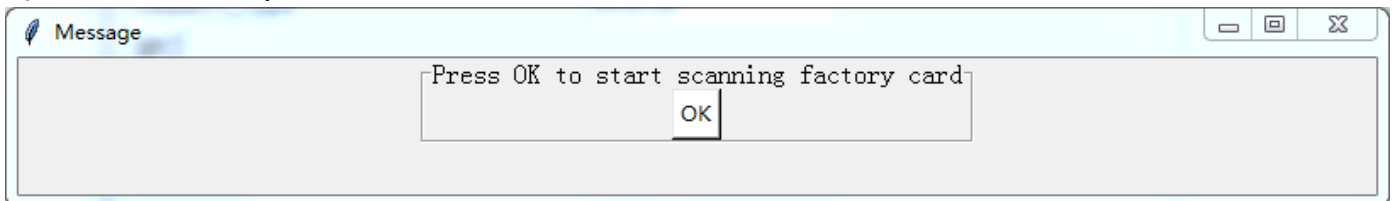




9). Put the verify card on DUT then click “ok” button.

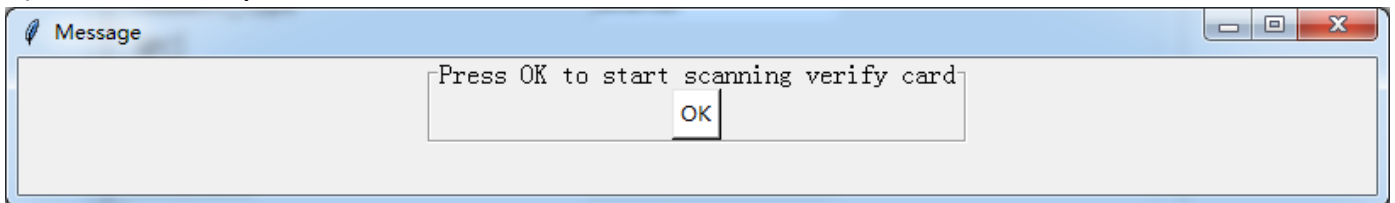



10). Please plug in USBC cable to DUT, then plug out POE cable.

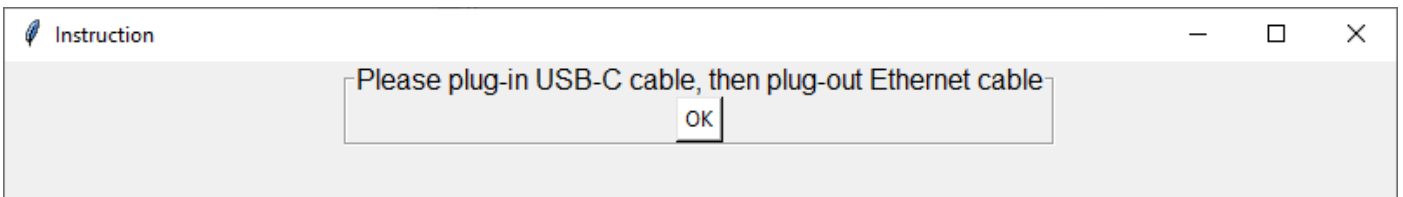



11). Is device working fine? If yes, press “Yes” button.

 Work fine?


Is device working fine ?

Yes <y>

No <n>




12). Please press reset button in 60 sec.

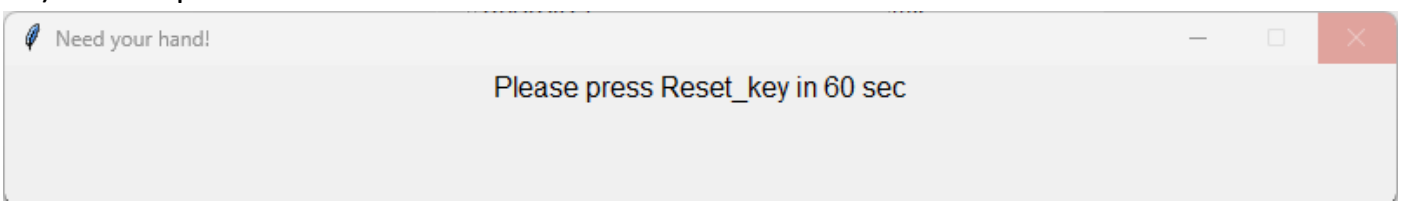





13). Please hang the telephone handle in 60 sec.

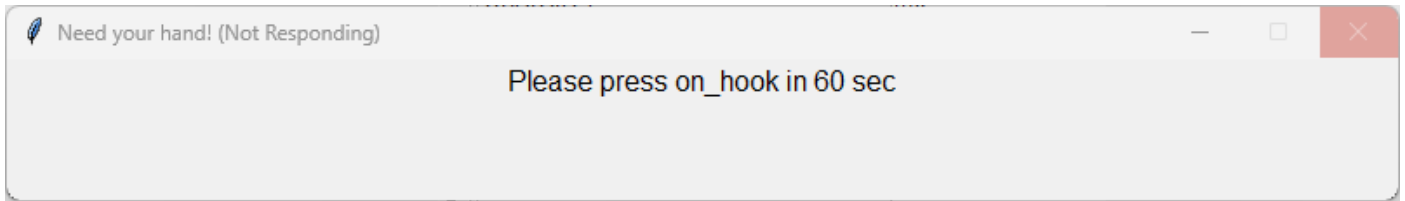


14). Please remove the telephone handle in 60 sec.

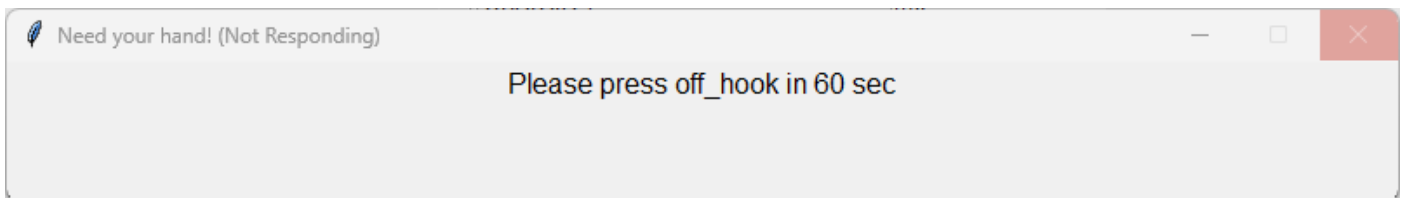

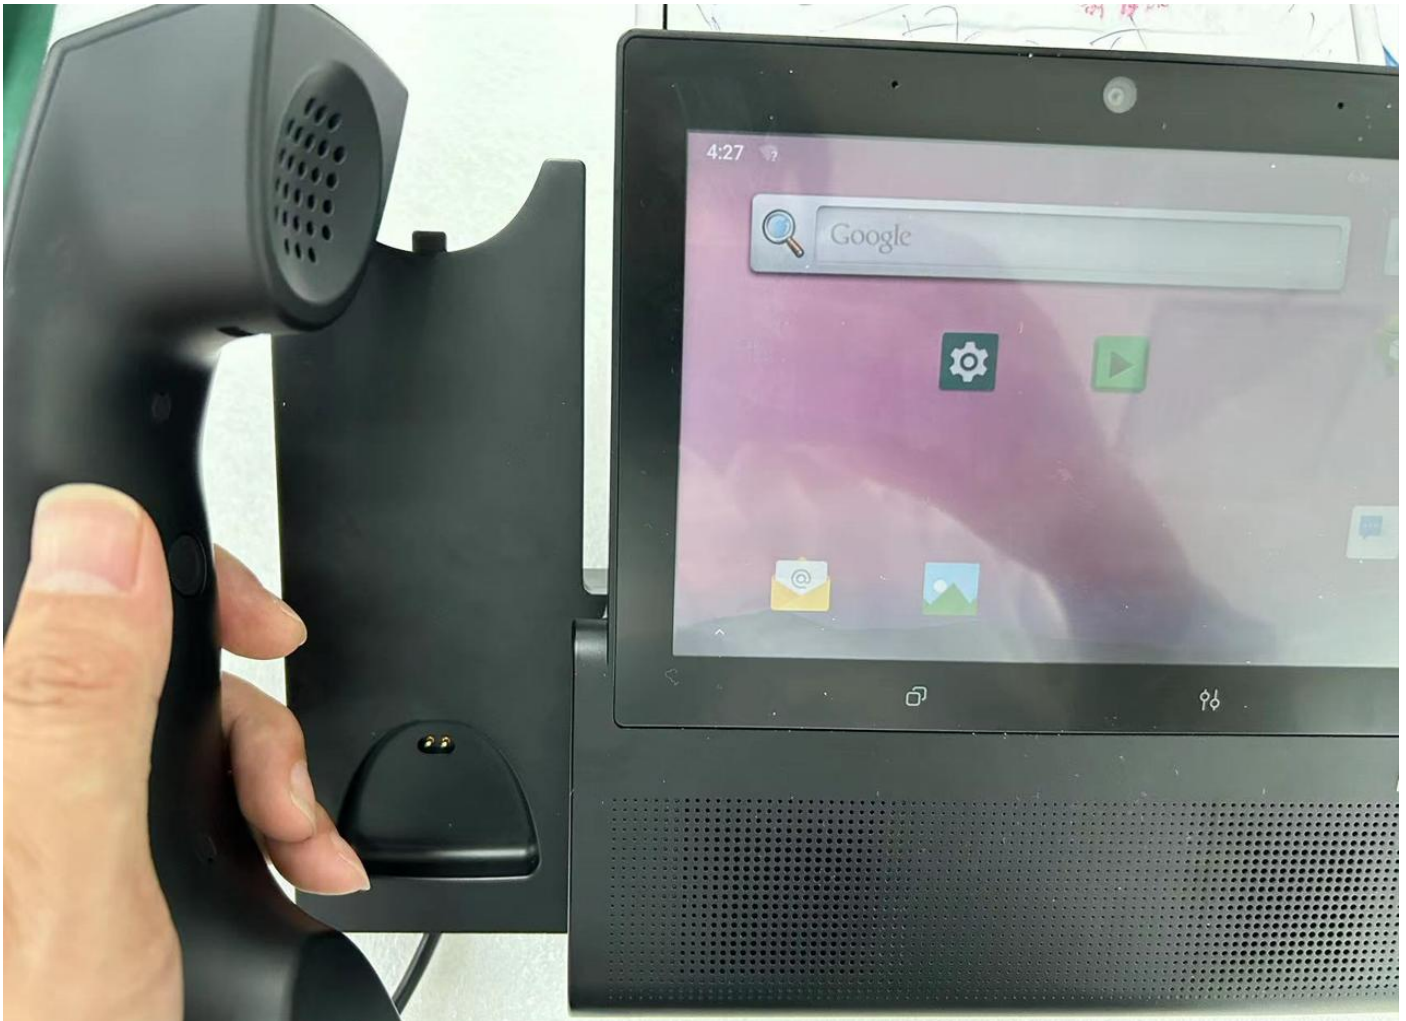


15). Please press mute_button in 60 sec.

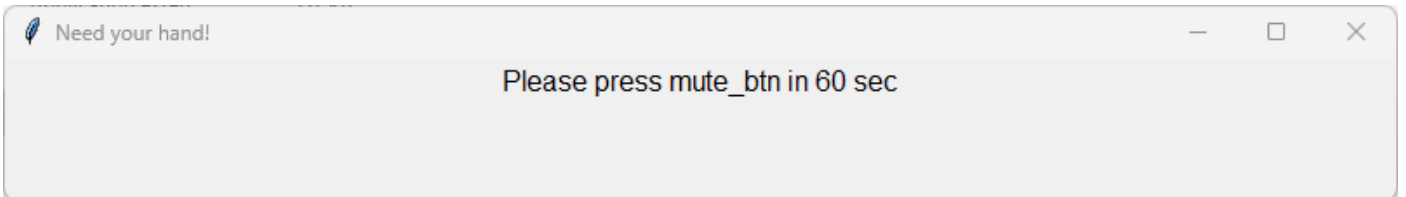





16). Please press vol_key in 60 sec.

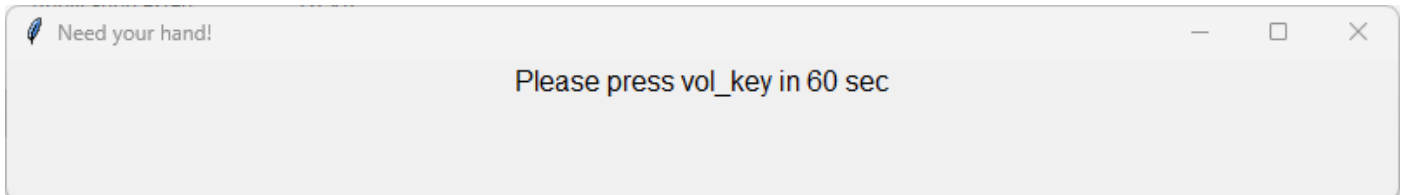




17). Please press multi_key in 60 sec.

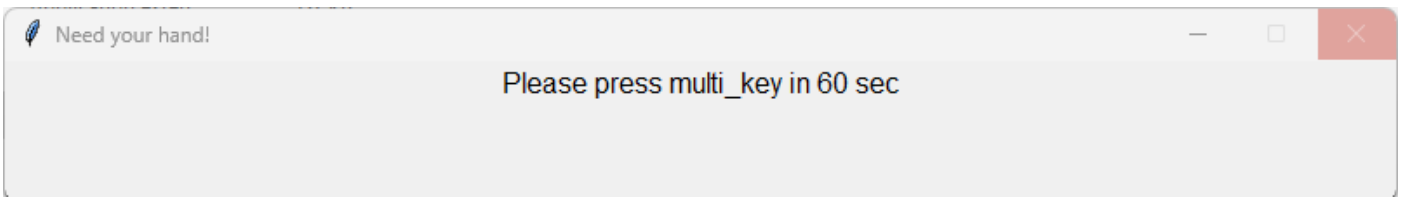

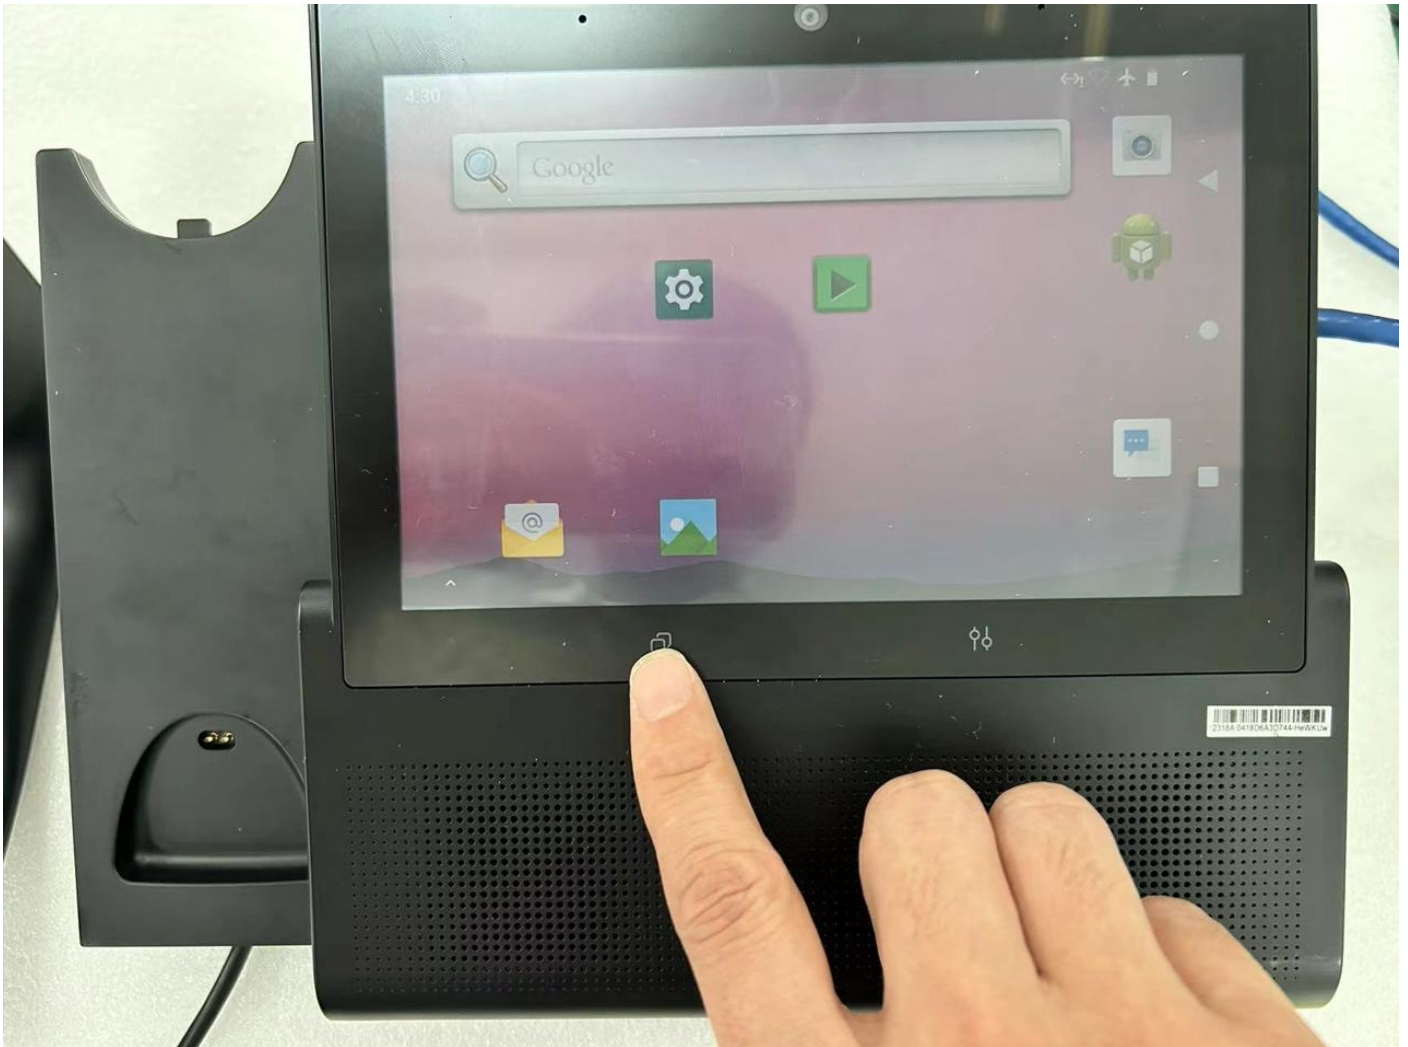

8.6. Check Result

Waiting for the test program show **PASS** or **FAIL** result.

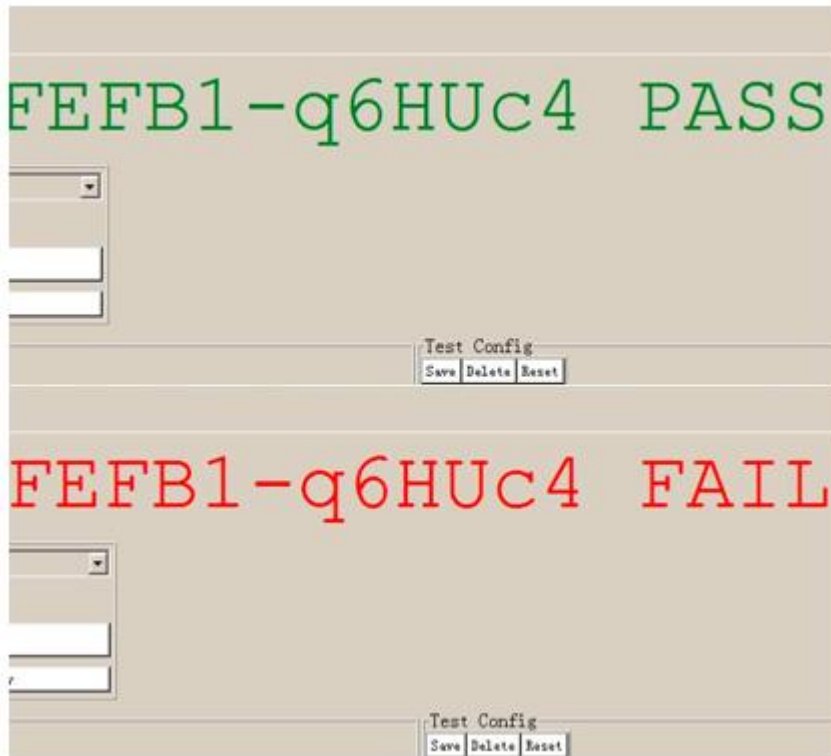


9. T9-ASSY-AP Link test

9.1 Equipment List

Please reference equipment list.

9.2 Connection Diagram

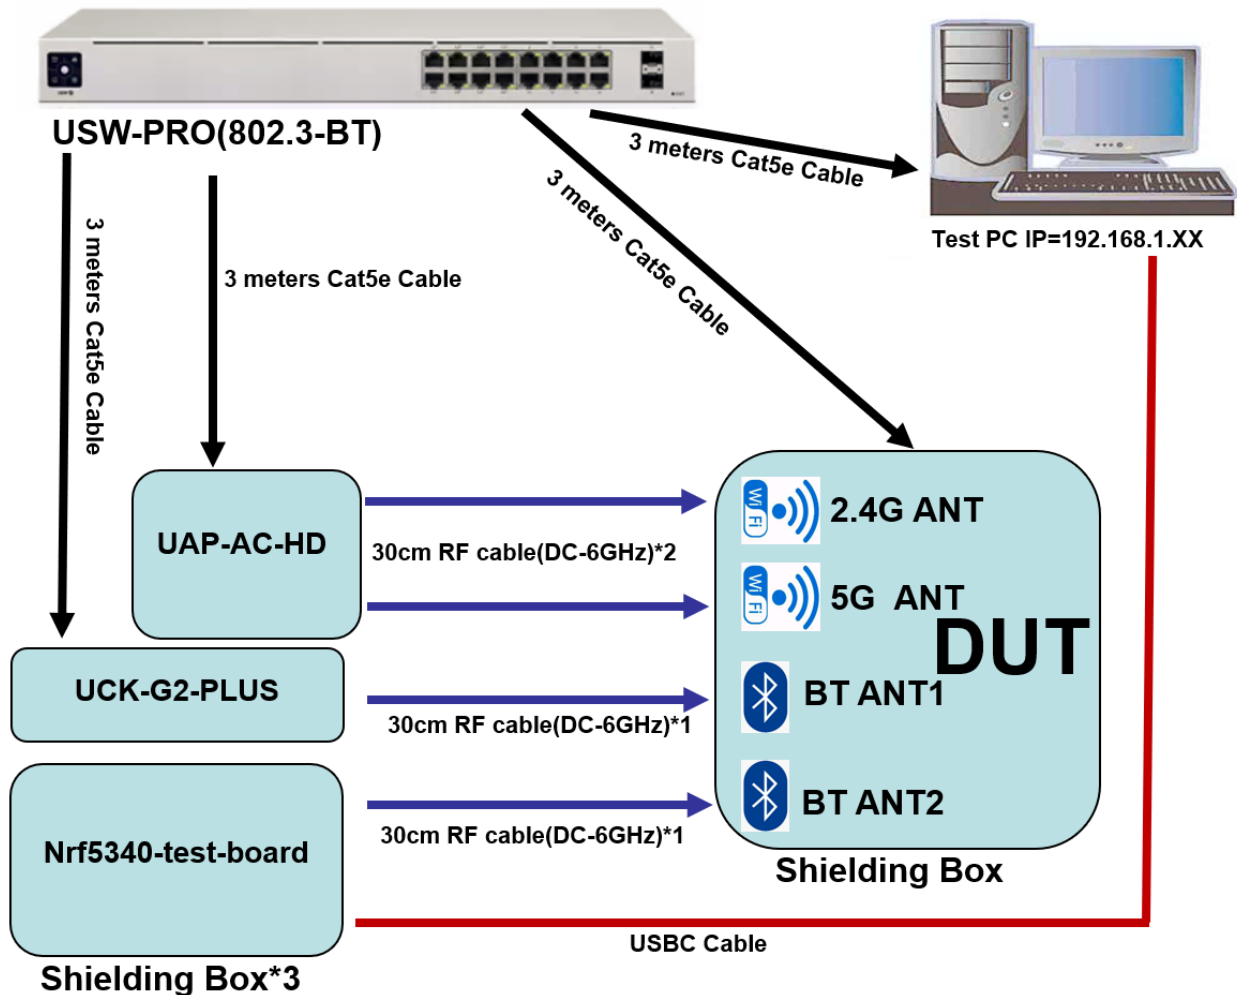


9.3 Software Setup

9.3.1 Tool download and installation

1). Download “nrf-command-line-tools-10.18.1-x64.exe” at <https://drive.google.com/drive/folders/14S-smGw7IpJtLWkqnZFKSnGEw0VZN3IO> then install it.

2). Please contact to UBNT RD (Kelvin.Wang@ui.com) for any update!

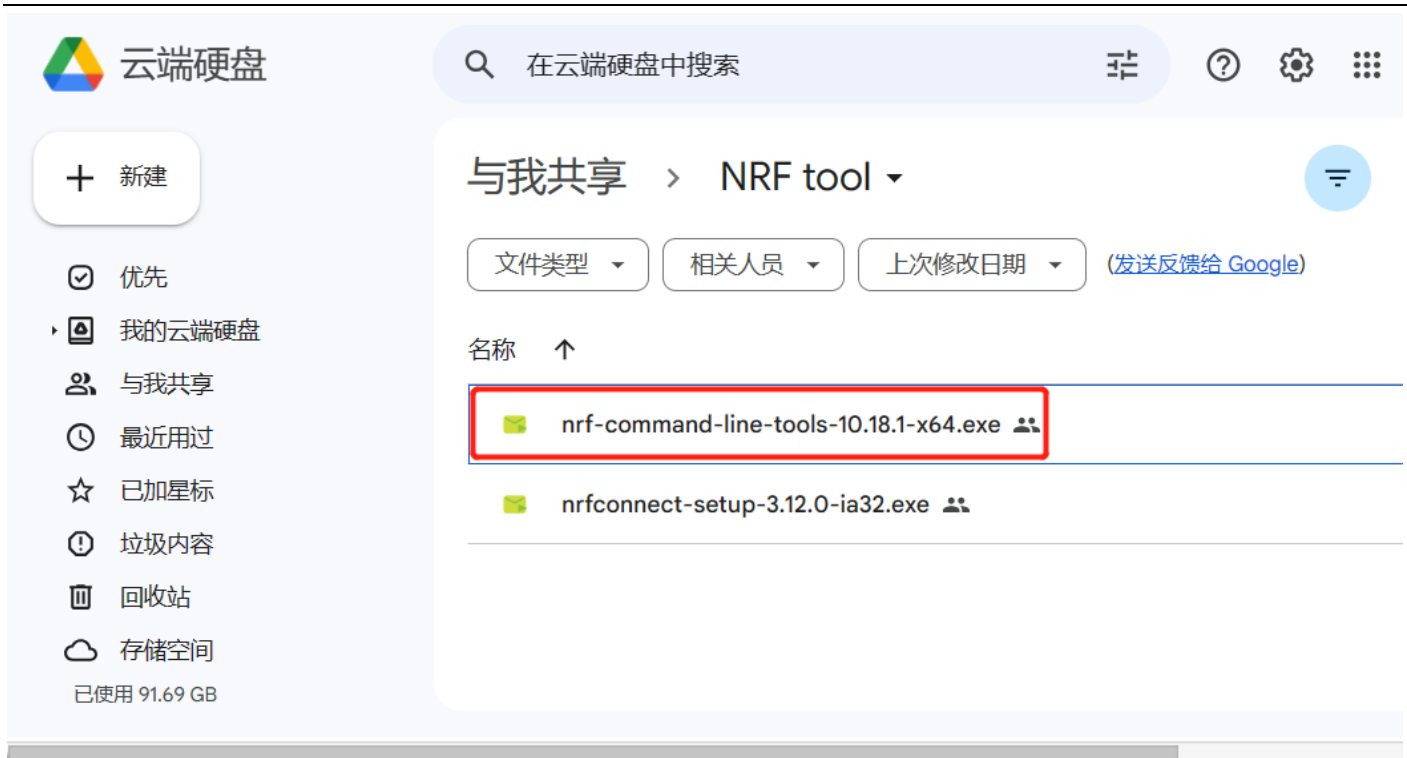

- 3). Download FTU file ([FTU_efba_1.0.11_1.0.0_UTP-G3-TouchMax-Wall.zip](#)) from path.
- 4). Please contact to UBNT RD (Kevin.Wen@ui.com) for any update!

9.3.2 Config WIFI Golden

- 1). Log in to UAP-AC-HD with UniFi Controller and set it up as shown in the below.
 - a. UAP-AC-HD-2G configuration:
SSID: UAP-AC-HD-test-2G
PSK: ubntubnt
 - b. UAP-AC-HD-5G configuration:
SSID: UAP-AC-HD-test-5G
PSK: ubntubnt
- 2). Open google browser download and install [UniFi-controller](#).
- 3). Click “v” and select “Next”.



Step 1 of 6

Name Your Controller

Use a simple name to help differentiate your controller when managing multiple networks.

Controller Name
UniFi Network

☒ By selecting this you are agreeing to [end user license agreement](#) and the [terms of service](#).

[Or restore setup from backup](#)

Next

4). Click "Switch to Advanced Setup"

Step 2 of 6

Sign in with your Ubiquiti Account

Use your Ubiquiti Account to access your Cloud Key Gen2 via the [unifi.ui.com](#) cloud service or locally with the same credentials.

Username

Password

Switch to Advanced Setup

< Back

Next

5). Disable Cloud Access and local access. Then enter username and PW. Please click "Next" step.



Team member list... Test Duration - G... 收件箱 (9) - hailin...

Advanced cloud and local access

Change access methods and local accounts

Enable Cloud Access

You will not be able to login to this device via the UniFi Cloud and must provide local credentials for managing this device, all its controllers as well as SSH.

Use your Ubiquiti account for local access

Local Administrator Username
hailin.du@ui.com

Local Administrator Password

Confirm password

Local Administrator Email
hailin.du@ui.com

[< Back](#) [Next](#)

6). Keep click “Next” step.

Step 3 of 6 (Advanced)

UniFi Network Setup

Basic configuration for your network.

Automatically optimize my network

UniFi Network automatically detects and sets the most commonly missed, but vital, settings for improved WiFi and network performance.

Enable Auto Backup

UniFi Network will periodically do backups of your setup.

[< Back](#) [Next](#)

7). Enter WIFI name and PW. For example the picture. Then click “Next” step.



Step 4 of 6 (Advanced)

WiFi Setup

Name your new Wi-Fi network and choose a password.

WiFi Name
hallin_uck

WiFi Password

Combine 2 GHz and 5 GHz WiFi Network Names into one ☐

[< Back](#) [Next](#)

8). Click “Finish” .

Step 6 of 6 (Advanced)

Review Configuration

Check your configuration and setup your Cloud Key Gen2.


Controller Name	UniFi Network8
Cloud Access	Disabled
Use Ubiquiti account for local access	No
Local Administrator Username	hallin.du@ui.com
WiFi Name	hallin-uck
WiFi Name IoT (2GHz)	hallin-uck_iot
Country or territory	United States
Timezone	(UTC+08:00) Shanghai

[< Back](#) [Finish](#)

9). Please click button then enter username and PW.




10). Select “setting” item, then enter user name and password:ubnt/ubnt, then save setting.

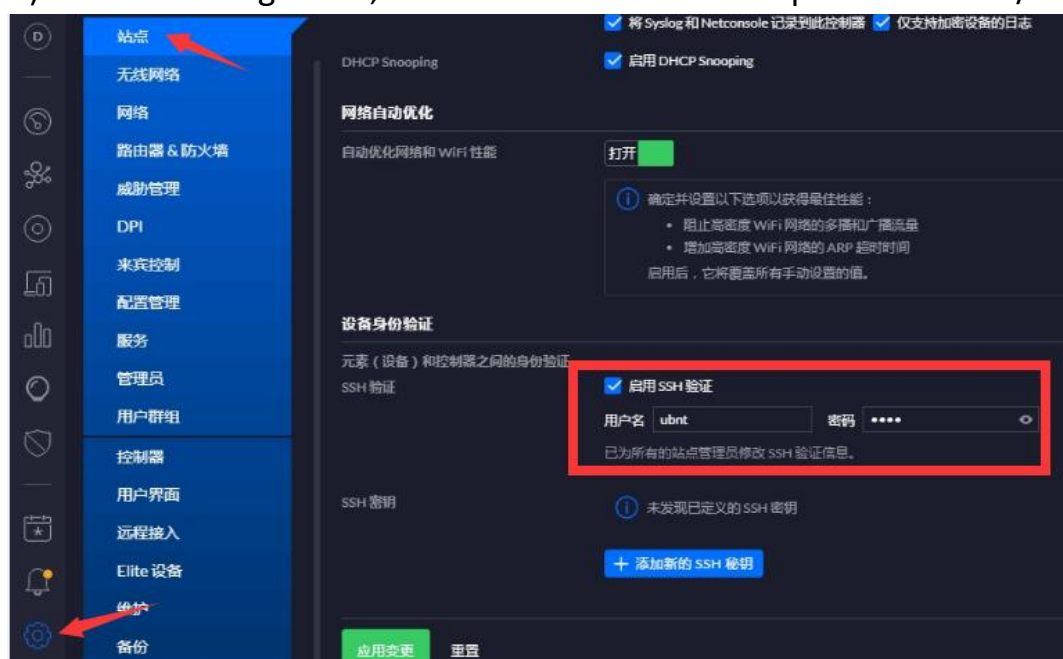

11). Click “adopt” for USG from controller, then save setting.



12). Setting static IP address :192.168.1.X for UAP-AC-HD, then save setting.

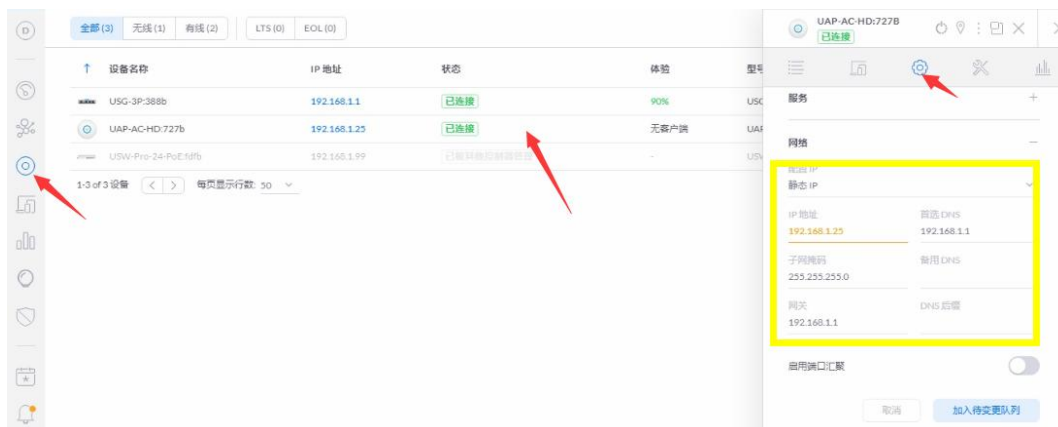

13). Setting frequency and bandwidth of 2G and 5G.




14). Setting 2G and 5G WIFI SSID.






15) Setting "SSID":UAP-AC-HD-test-2G, PW:ubntubnt; Select WIFI band was 2.4G, then save setting.

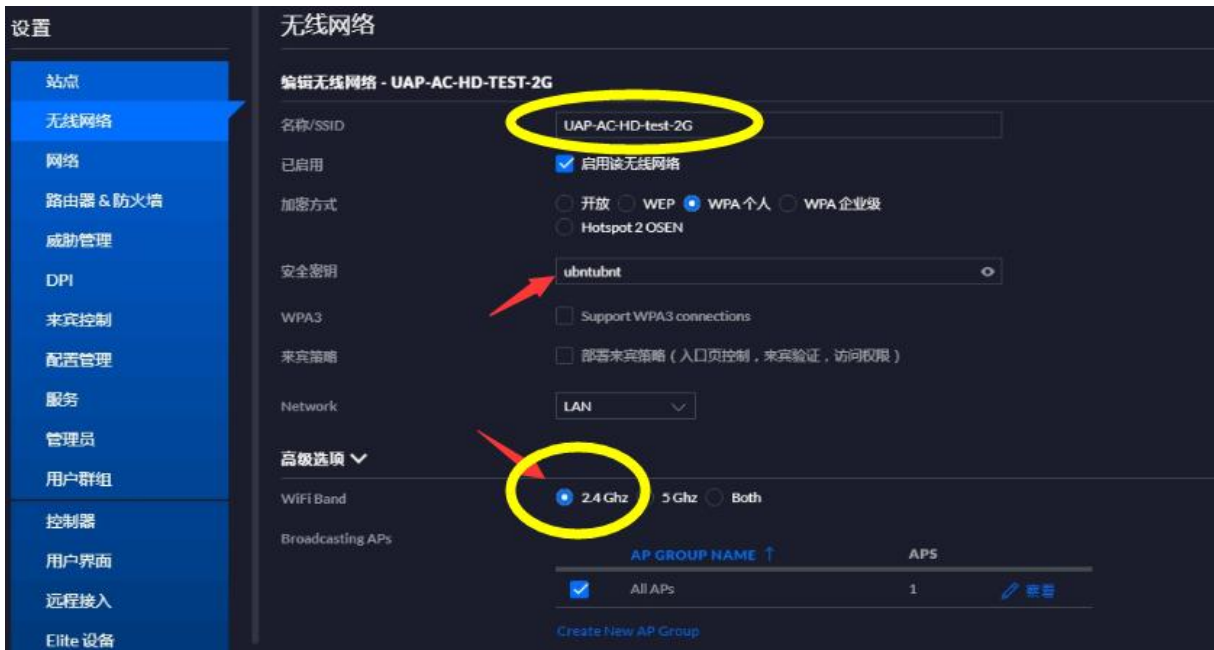

16) Setting "SSID":UAP-AC-HD-test-5G, PW:ubntubnt; Select WIFI band was 5G, then save setting.

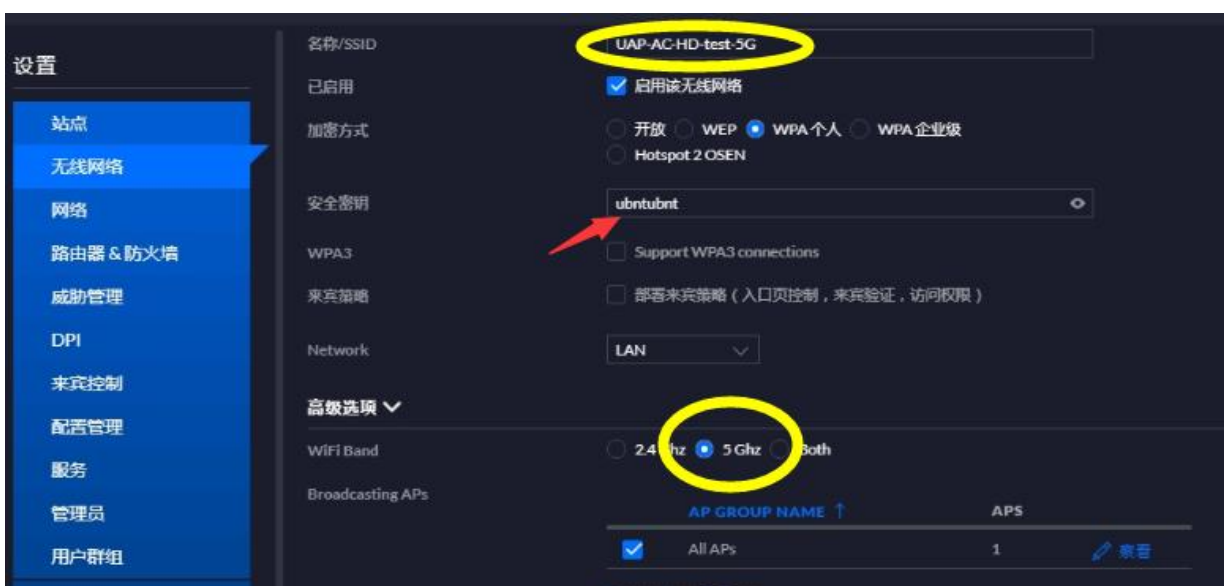

17) Using your mobile connect to SSID. Setting item was good If it was connected successfully.



WLAN

点击查看[帮助](#)



更多 WLAN 设置



可用 WLAN 列表

UAP-AC-HD-test-2G

已连接



WLAN

点击查看[帮助](#)



更多 WLAN 设置



可用 WLAN 列表

UAP-AC-HD-test-5G

已连接



9.4 Setup Environment

1). FTU setting (Review the version and test items).

- ☒ 800 - [SL-RF-ETH] BT Test
- ☒ 509 - [SL-RF-ETH] BT nRF5340 Test
- ☒ 810 - [SL-RF-ETH] Wifi Test

2). Change WIFI and BT information in “[ctr_04099_efba.ini](#)”, WIFI RSSI Upper and lower limit form center [+/- 7db](#).



2G RSSI = (-79~-65db) , 2G iperf >20

5G-RSSI=(-79~-65db) , 5G iperf >30

BT-RSSI=(-63~-49db)

 *ctr_04099_efba.ini - 记事本
文件(F) 编辑(E) 格式(O) 查看(V) 帮助(H)

[wifi]

```
eth_dut = 192.168.1.20
; ethernet ip
ip_dut = 192.168.1.101
; wifi ip
test_2g_en = True
test_5g_en = True
test_rssi_tx_en = False
test_rssi_rx_en = True
test_tx_iperf_en = True
test_rx_iperf_en = True
ip_uap = 192.168.1.38
id_uap = ubnt
pw_uap = ubntubnt
ssid_2g = UAP-AC-HD_test_2G
sspw_2g = ubntubnt
ssid_5g = UAP-AC-HD_test_5G
sspw_5g = ubntubnt
delay_before_iperf = 10

tx_rssi_criterion_2g = [-79, -65]
rx_rssi_criterion_2g = [-79, -65]
iperf_criterion_2g = 20

tx_rssi_criterion_5g = [-79, -65]
rx_rssi_criterion_5g = [-79, -65]
iperf_criterion_5g = 30
```



```
[bt_scan]
ip_dut = 192.168.1.20

ip_test_tool = 192.168.1.30
id_test_tool = ubnt
pw_test_tool = ubntubnt

scan_timeout_sec_float = 40
rssi_duration_sec_float = 10
name_uck = UCKG2-PLUS

Tx_rssi_en = False
Rx_rssi_criterion = [-63, -49]
Tx_rssi_criterion = [-63, -49]
```

```
[BT_nRF5340_RSSI]
test_board_port = COM20
rssi_tx_dbm_min = -63
rssi_tx_dbm_max = -49
rssi_rx_dbm_min = -63
rssi_rx_dbm_max = -49
```

9.5 Test Process

1). Scan “MAC ID”, then click button “F2” .

MAC: FCECDAFF32B5

Run Tests <F2>


Test Summary Clear Summary

Test Content

Dis-select all Select all Save Delete

9.6 Check Result

Waiting for the test program show **PASS** or **FAIL** result.

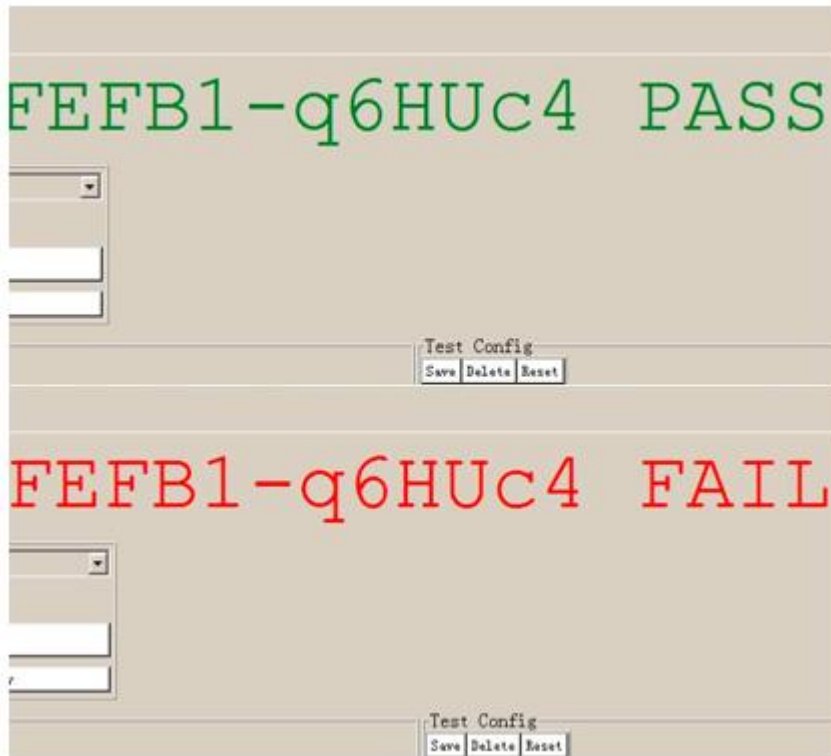

10. T10-ASSY-Audio

10.1 Equipment List

Please reference equipment list.

10.2 Connection Diagram


Test distance


1_Refmic_HF @ 5-10cm

2_Refmic_HS@ 1cm

1_HF_Mouth@5-15cm

2_HS_Mouth@5-10cm

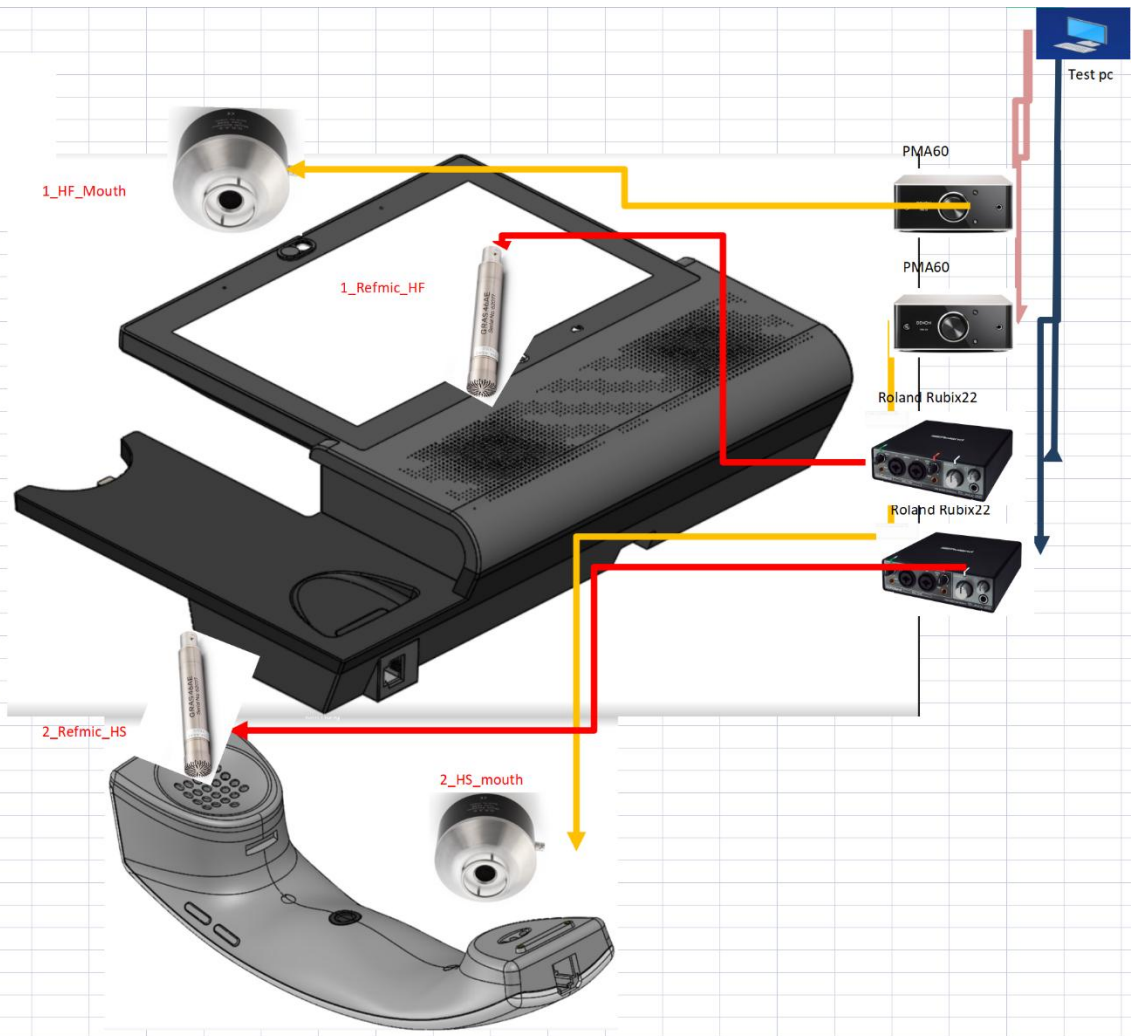

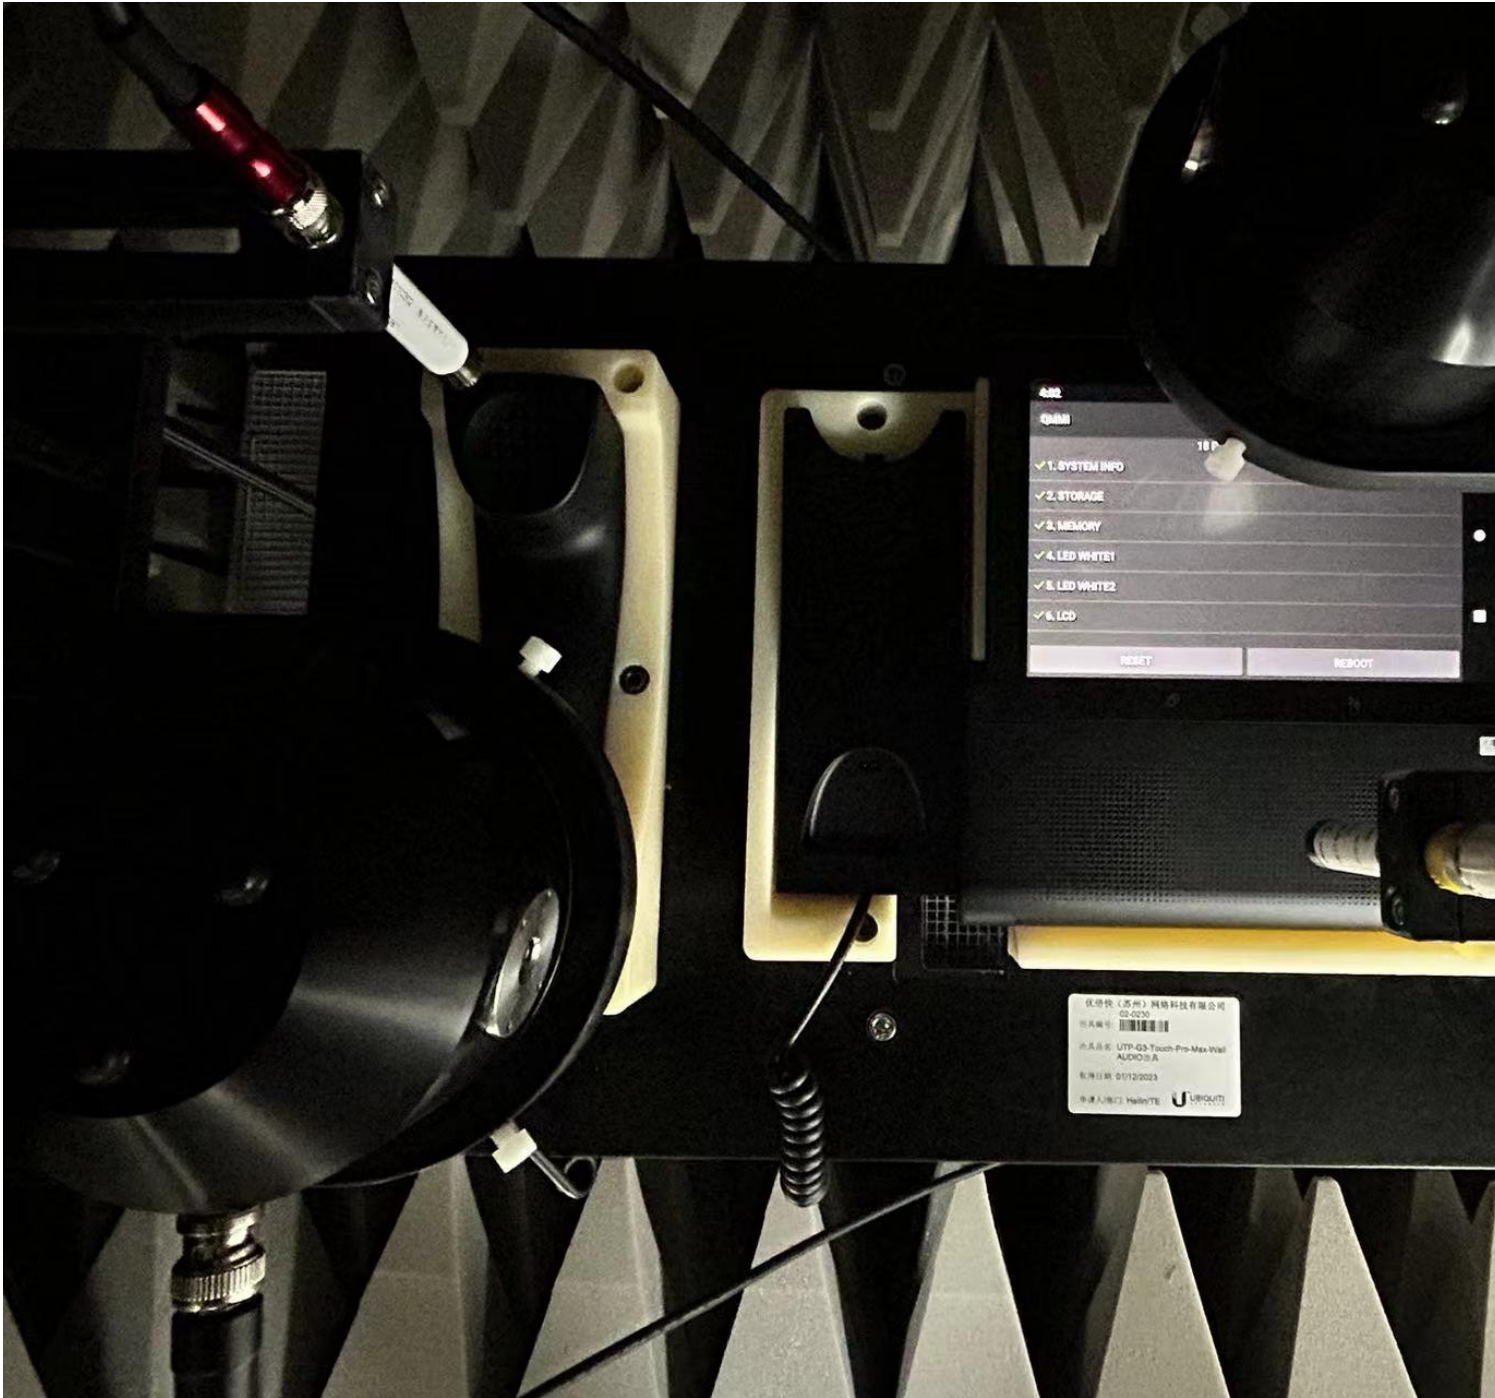


10.3 Software Setup

10.3.1 FTU tool download


- 1). Download FTU file ([FTU_efba_1.0.11_1.0.0_UTP-G3-TouchMax-Wall.zip](#)) from path.
- 2). Please contact to UBNT RD (Kevin.Wen@ui.com) for any update!

10.4 Setup Environment

1) Connect DUT with cat5e eth cable, then calibration “GRAS 46AE microphone#1” with “114dB sound calibrator”. Only select “8866” test item show as below:

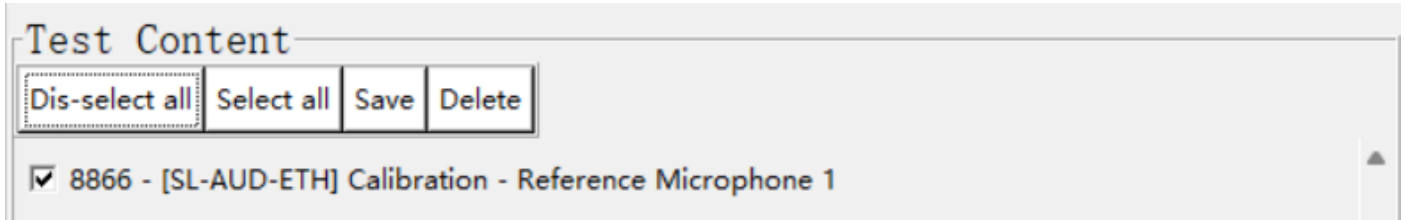


2) Connect DUT with cat5e eth cable, then calibration “GRAS 46AE microphone#2” with “114dB sound calibrator”. Only select “8867” test item show as below:

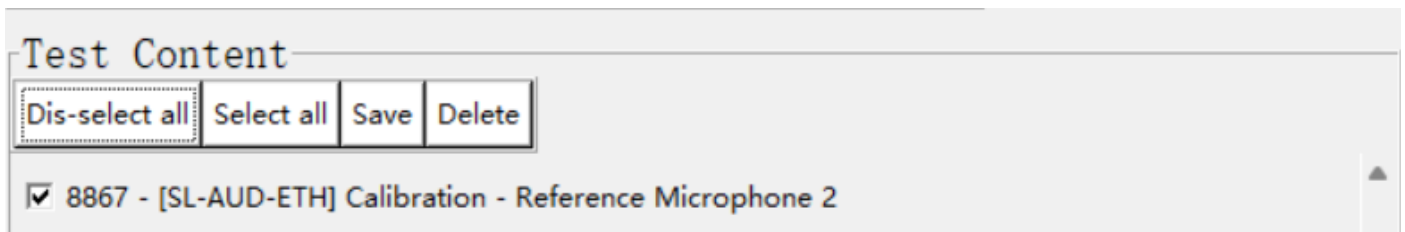




3) Calibration “mouth simulator#1” with “GRAS 46AE microphone#1”, the distance is 5cm. Only select “8850” test item show as below:

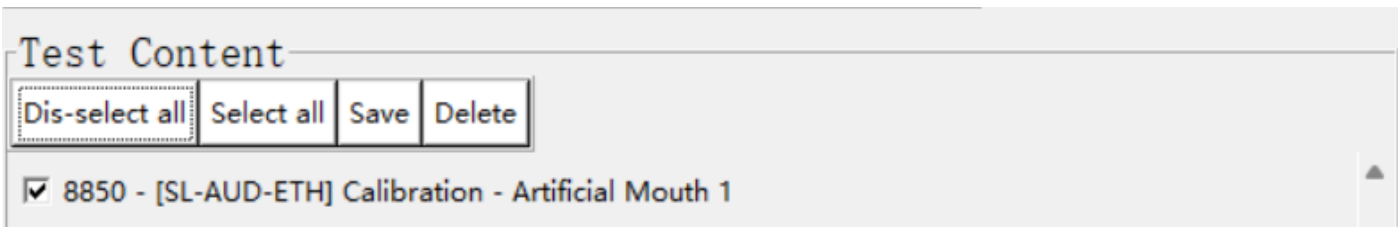


4) Calibration “mouth simulator#2” with “GRAS 46AE microphone#2”, the distance is 5cm. Only select “8851” test item show as below:

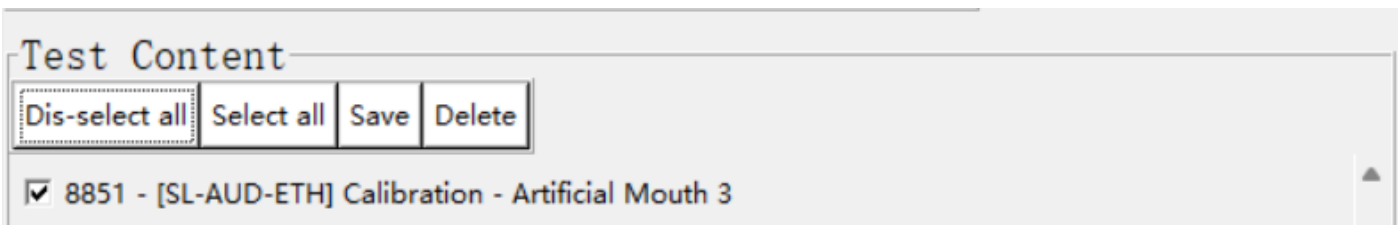

10.5 Test Process

1). Run “run_windows_mvc.bat”, select test items show as below:

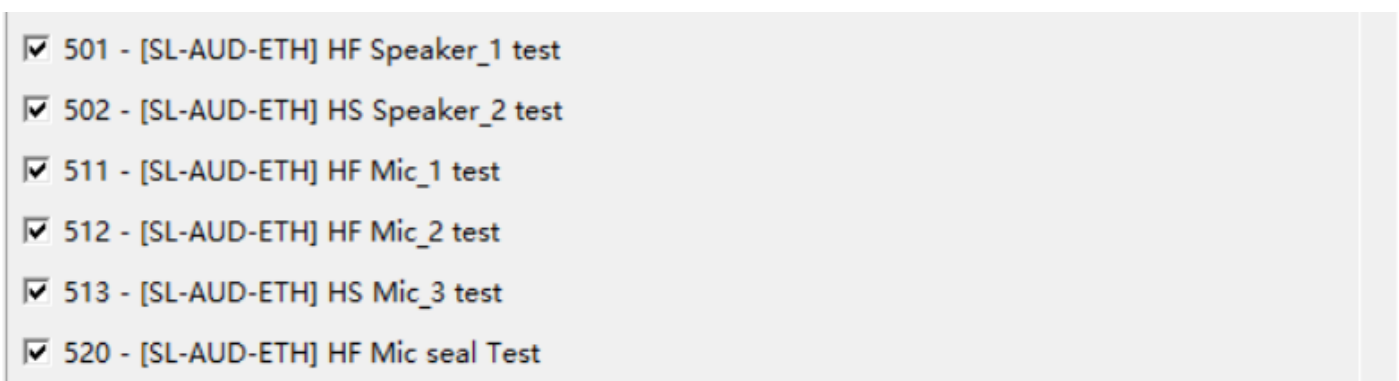

- 2). Input MAC ID for the test after PC get “ping 192.168.1.20” info.
- 3). Click “Run Tests <F2>”.
- 4). If pop out “Please seal [MIC1] and [MIC2]” window, please open anechoic box, then tape MIC1 & MIC2 show as below:



- 5). Put back DUT on fixture, then close anechoic box. Click “OK” for final test result:

10.6 Test CRITIRIA

- 1). Test SPK1 and SPK2:
- 2). Test MIC1 & MIC2 & MIC3:
- 3). Spec ini:



- criteria_12th_octave_seal_mic_1_G3Wall_VN_20231208.ini
- criteria_12th_octave_seal_mic_2_G3Wall_VN_20231208.ini
- HF_mic_1_G3Wall_VN_20250417.ini
- HF_mic_2_G3Wall_VN_20250417.ini
- HF_SPK_1_G3Wall_VN_20250417.ini
- HS_mic_3_G3Wall_VN_20250417.ini
- HS_SPK_2_G3Wall_VN_20250417.ini


Testing standards Google Drive:

https://drive.google.com/drive/folders/16hdbttlRsVN5ZkJ2dbBp3H_GfYuTMsrn?usp=drive_link

.

10.7 Check Result

Waiting for the test program show **PASS** or **FAIL** result.

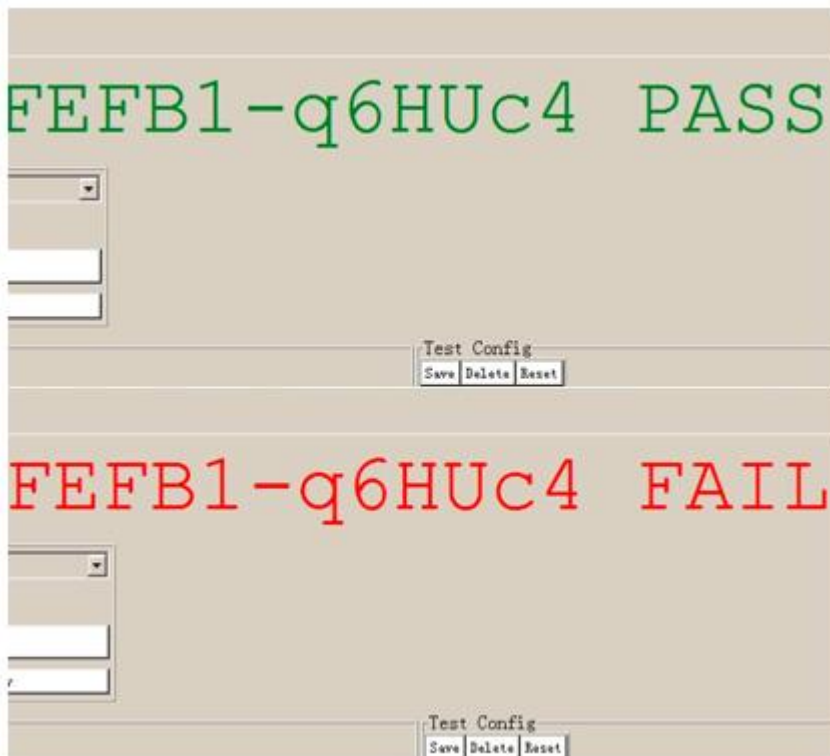

11. ASSY-Camera test


11.1 Equipment List

Please reference equipment list.

Notification:

Please use a computer with a resolution of 1920*1080 or above when testing the MTF station.

11.2 Connection Diagram

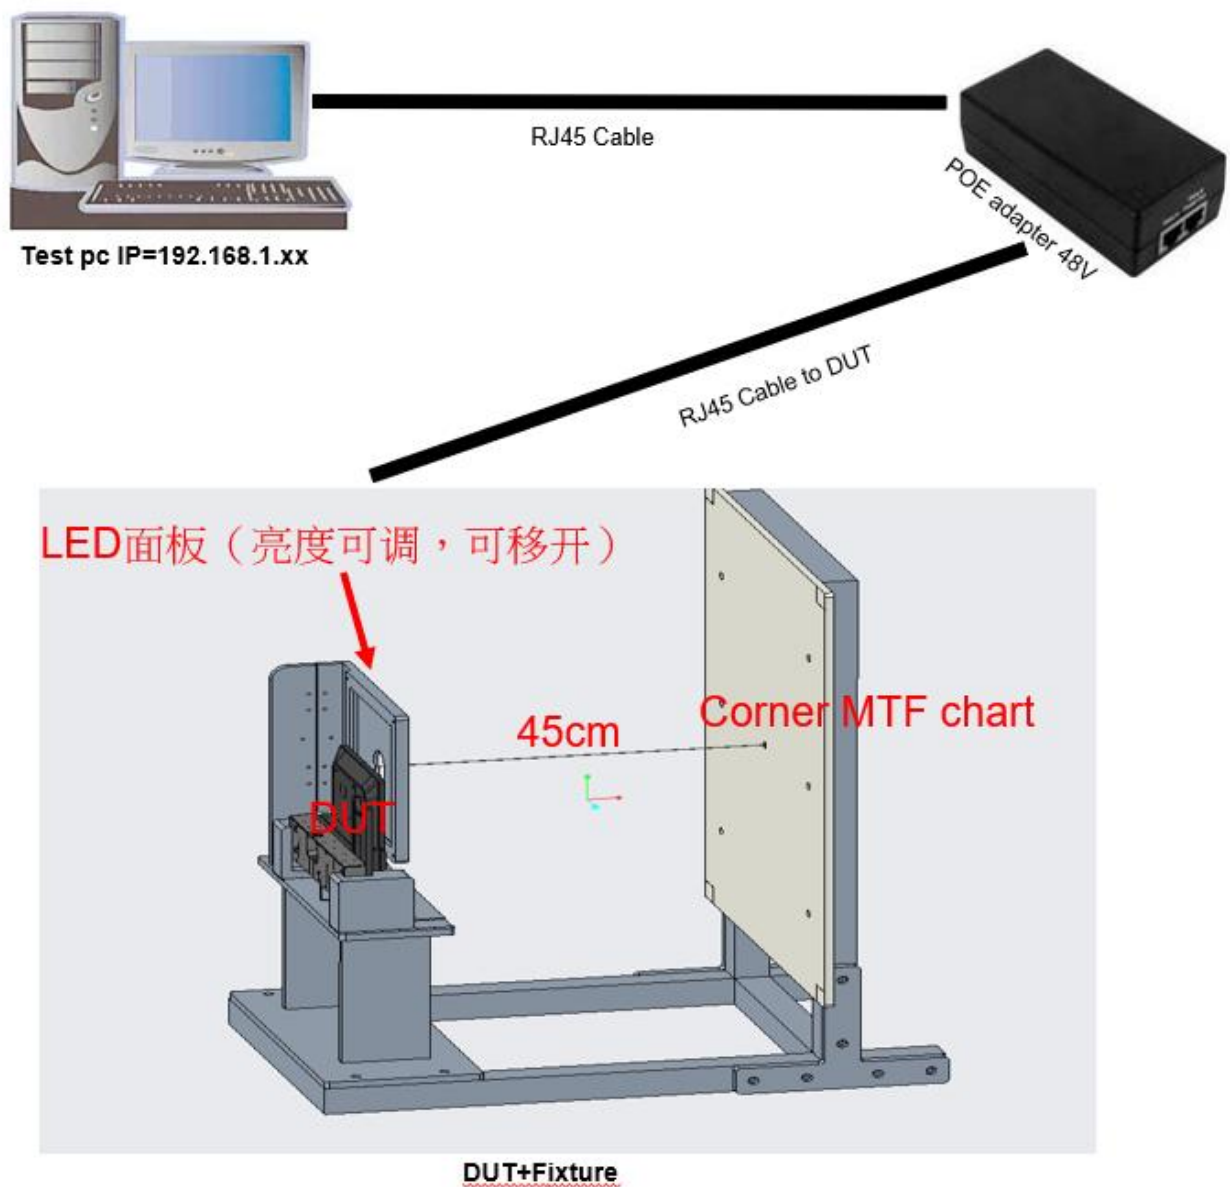




11.3 Software Setup

11.3.1 FTU tool download


- 1). Download FTU file ([FTU_efba_1.0.11_1.0.0_UTP-G3-TouchMax-Wall.zip](#)) from path.
- 2). Please contact to UBNT RD (Kevin.Wen@ui.com) for any update!

11.4 Setup Environment

- 1). Double-click "run_windows_mvc.bat" in FTU tool.

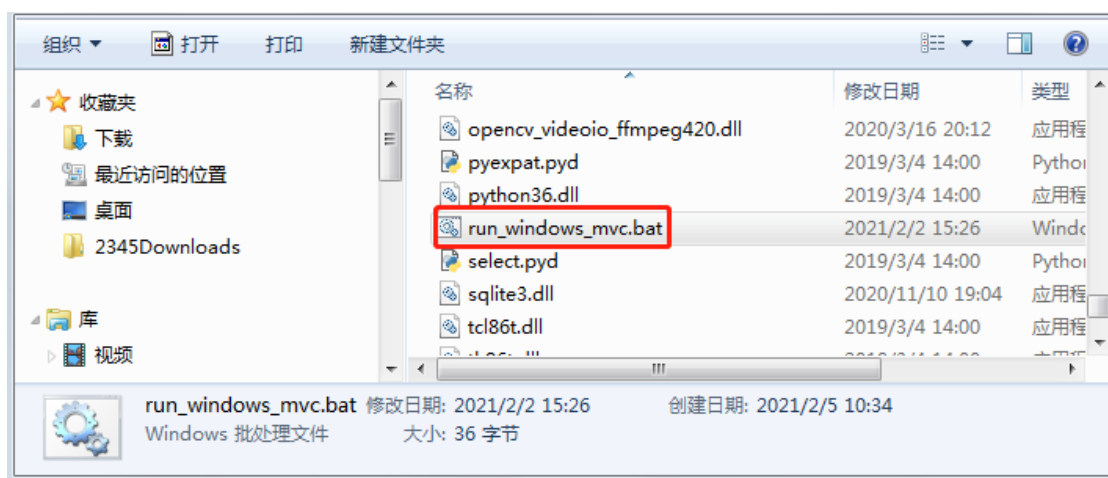

- 2). Select camera item and product name, then enter MAC ID.

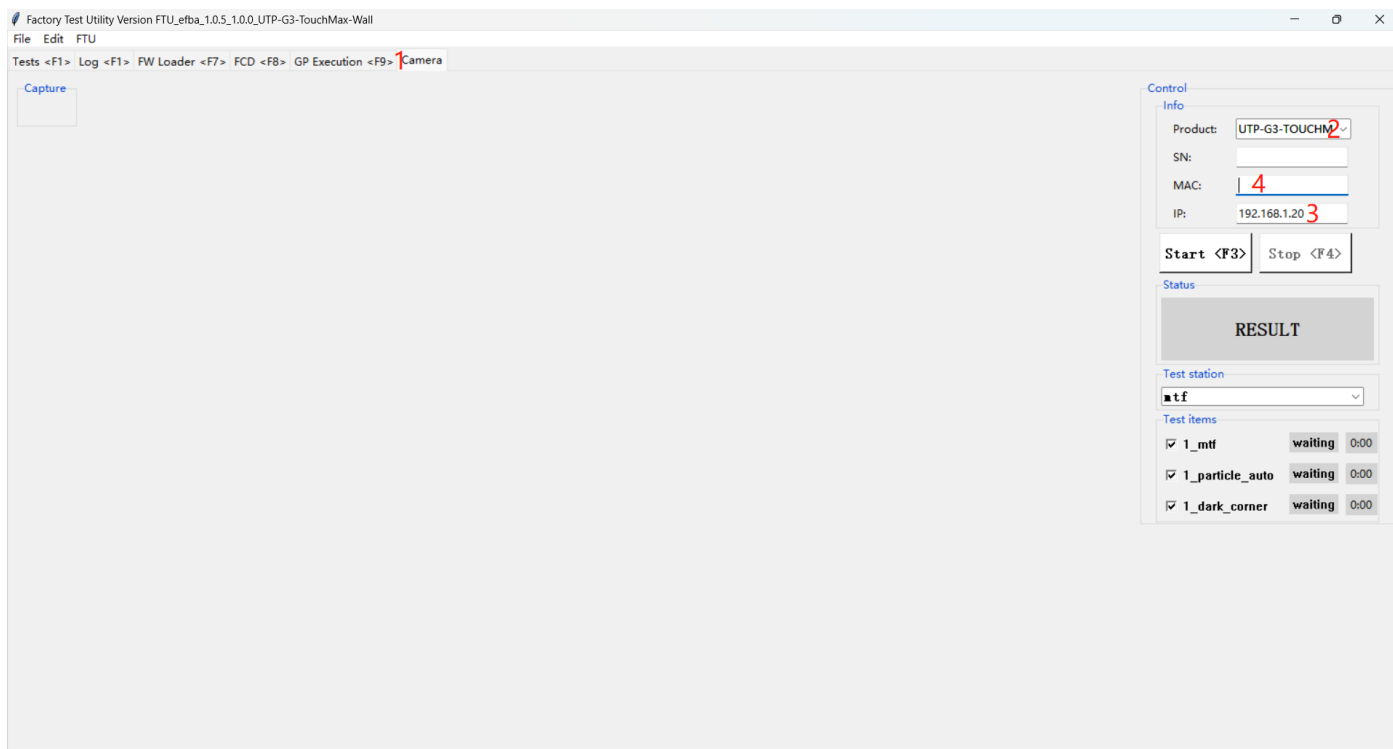



11.5 Test Process

1). Click “Start <F3>” button.

Control

Info

Product: UTP-G3-TOUCHM ▾

SN:

MAC:

IP: 192.168.1.20

Start <F3> **Stop <F4>**

Status

RESULT


Test station

mtf ▾

Test items


☒ 1_mtf	waiting	0:00
☒ 1_particle_auto	waiting	0:00
☒ 1_dark_corner	waiting	0:00


2). Please put the light board in front of DUT, then click “NEXT” button. The test will finish automatically.

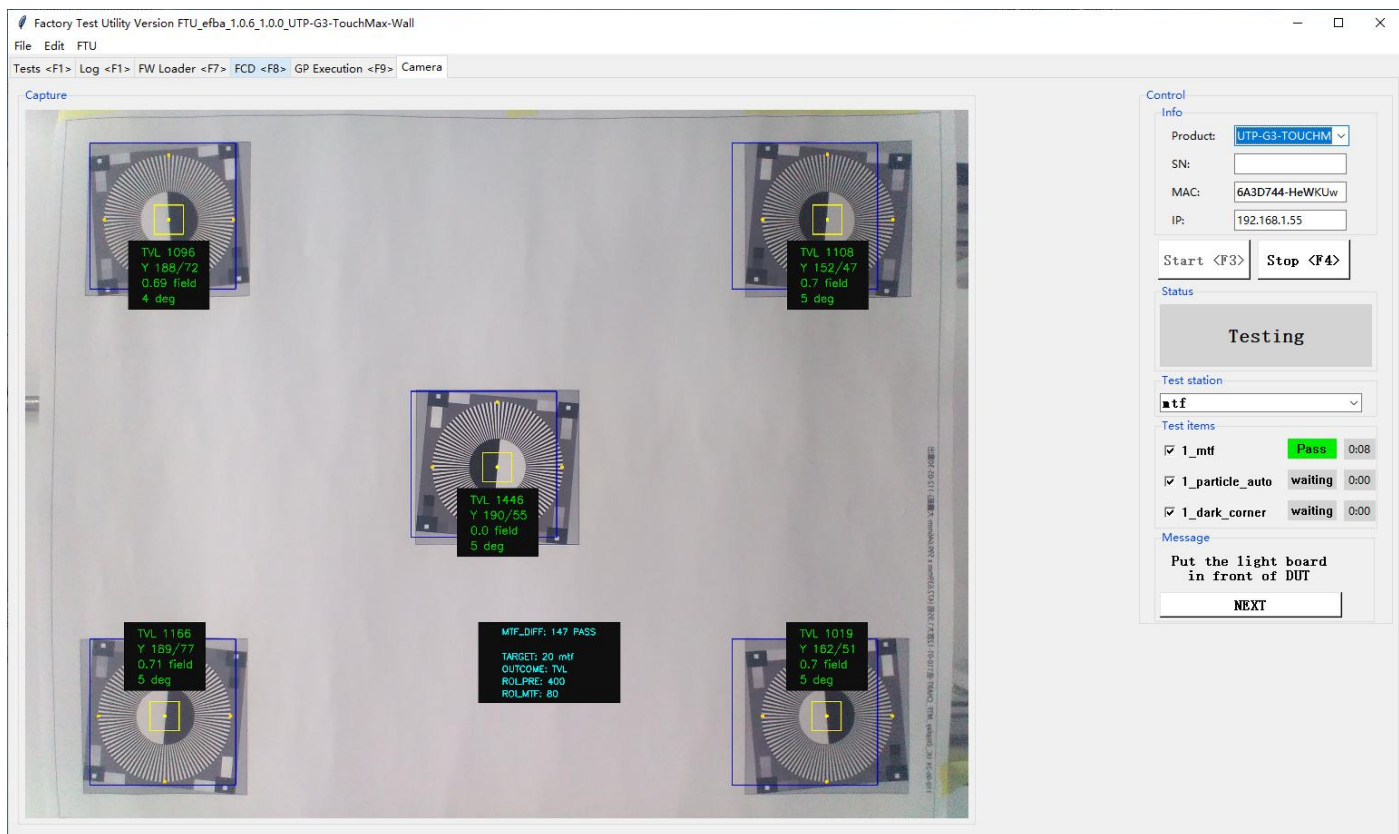

11.6 Check Result

Waiting for the test program show **PASS** or **FAIL** result.

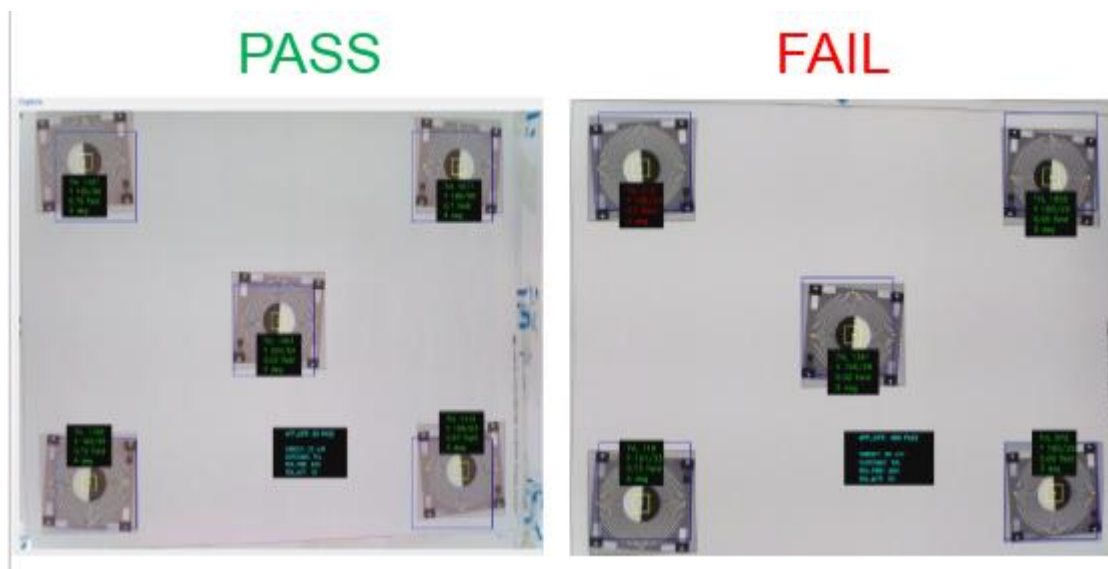

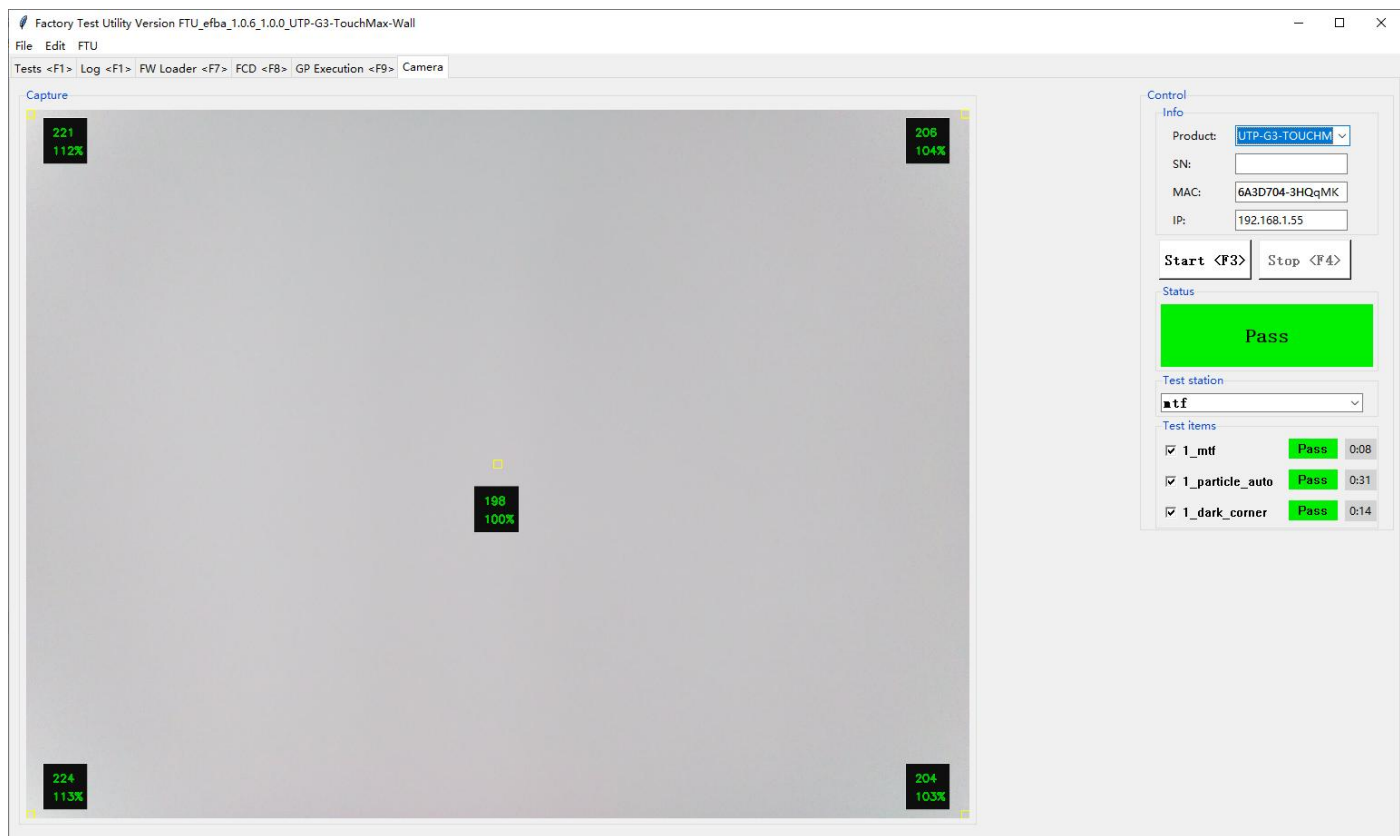


12. T12-ASSY-Shipping fw

12.1 Equipment List

Please reference equipment list.

12.2 Connection Diagram

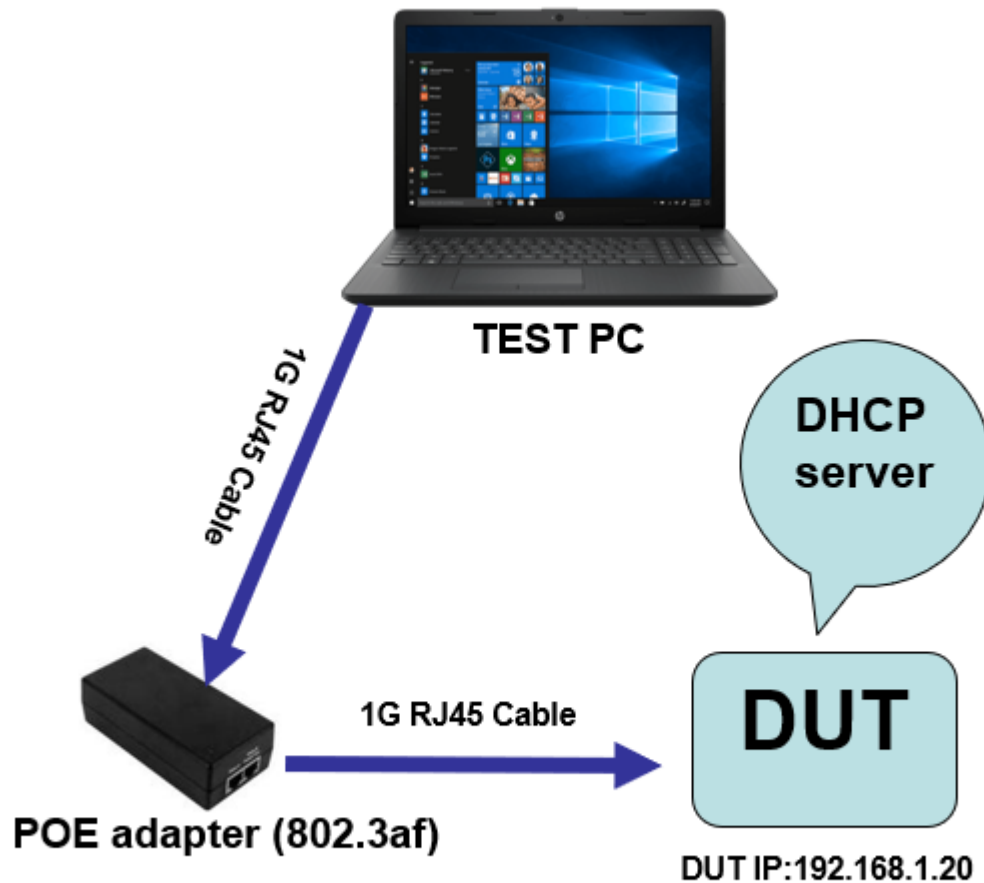


12.3 Software Setup

12.3.1 FTU tool download

- 1). Download FTU file ([FTU_efba_1.0.11_1.0.0_UTP-G3-TouchMax-Wall.zip](#)) from path.
- 2). Please contact to UBNT RD (Kevin.Wen@ui.com) for any update!


12.3.2 Shipping FW file

- 1). Download Shipping FW file ([ota_update_otp-g3_46_2.11.6.zip](#)) from path.
- 2). Please contact to UBNT RD (Michael Wu@ui.com) for any update!
- 3). Put the unzipped Shipping FW file in the diskC of the test pc.

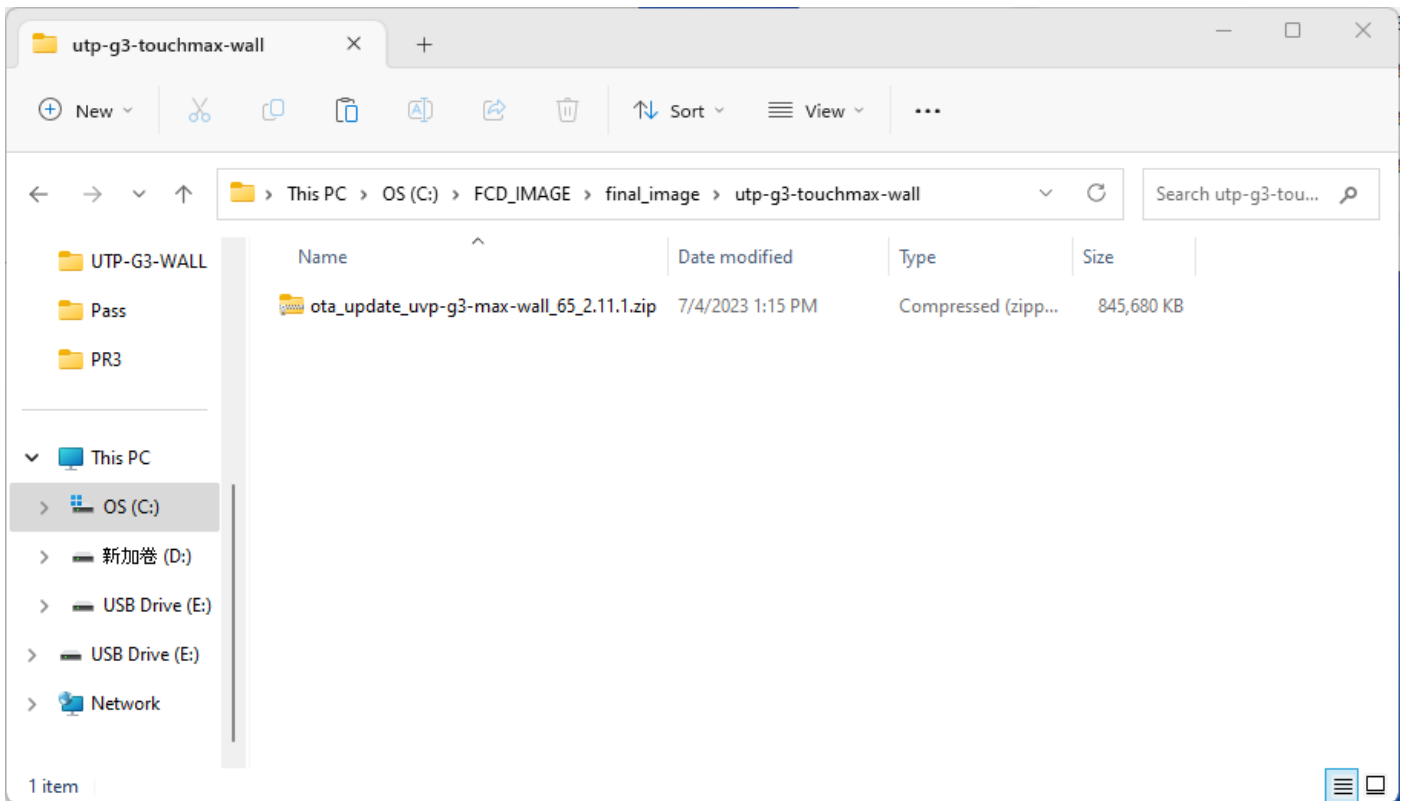

12.4 Setup Environment

1). Double-click "run_windows_mvc.bat" in FTU tool.

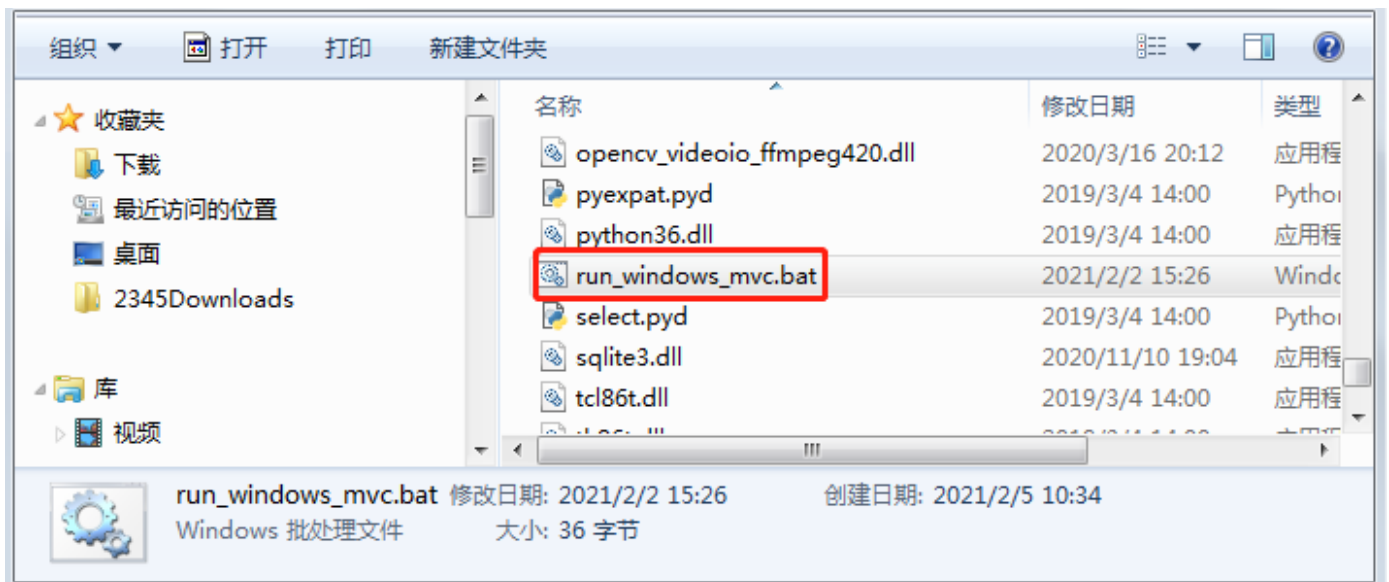

2). FTU setting (Review the version and test items).



Test Content

Dis-select all	Select all	Save	Delete
----------------	------------	------	--------

- ☒ 100 - [ETH] Check MAC & ZTP
- ☒ 20 - [ETH] Check ME BOM
- ☒ 23 - [ETH] Check Top Level BOM
- ☒ 3 - [BL-ETH] Check HW info (eMMC, DDR size)
- ☒ 4 - [BL-ETH] Check SW version
- ☒ 39 - [SL-ETH] Mute button test
- ☒ 5 - [BL-ETH] Check Persist Data
- ☒ 997 - [SL-FW-ETH] Write SKU
- ☒ 6 - [BL-ETH] Backup Persist Data
- ☒ 990 - [SL-FW-ETH] nRF5340 Shipping FW Update
- ☒ 999 - [SL-FW-ETH] Shipping FW Update

3). Select the correct SKUs and shipping FW based on shipping requirements.



```
[General]
  android9 = true
  product_name = utp-g3-touchmax-wall
  sku = UTP-G3-TOUCH-MAX-WALL-UL
  connect_type = ethernet

[NFC]
  factory_card_sn=UA01011330000300A1
  timeout = 30

[Firmware]
  product_name = utp_wallmount
  sw_version = V001.20221206.123612
  bom_id = 113-04099-01

[shipping_fw_update]
  ip_host = 192.168.1.193
  shipping_fw_dut_ip = 192.168.1.20
  shipping_fw = ota_update_otp-g3_46_2.11.6.zip
  sw_version = v2.11.6

[IP]
  DUT = 192.168.1.20
  LocalPC = 192.168.1.193
```

请按出货要求选择正确的SKU(UL或L)

1.请确认并选择正确的shipping fw版本
2.确认host 和DUT IP正确无误

行 25, 列 1 | 100% | Unix (LF) | UTF-8

12.5 Test Process

- 1). Power on DUT.
- 2). Scan “MAC ID”, then click button “F2” .

MAC: FCECDAFF32B5



Run Tests <F2>

Test Summary Clear Summary



Test Content

Dis-select all Select all Save Delete


- 3) check the start-up image. Click the Yes button.

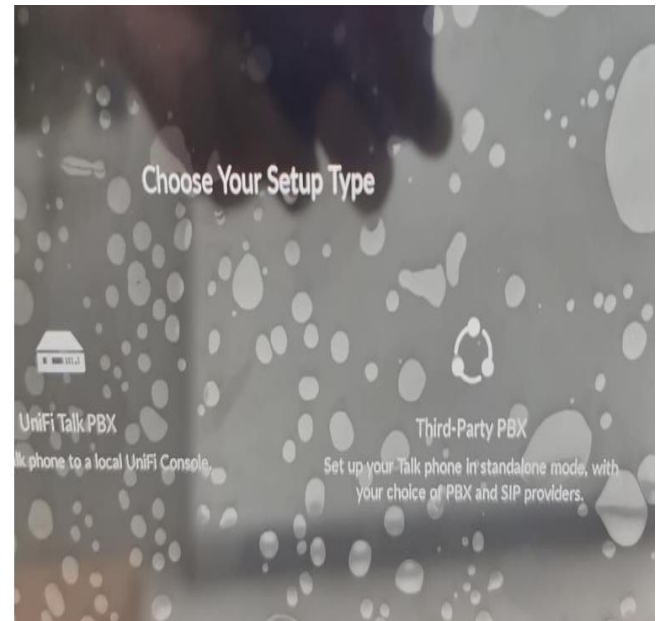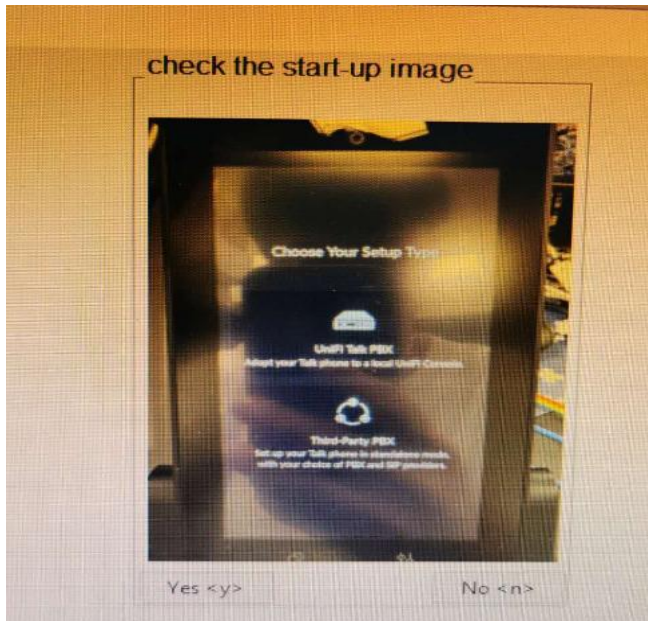


4) Please click "UniFi Talk PBX" and click "OK"

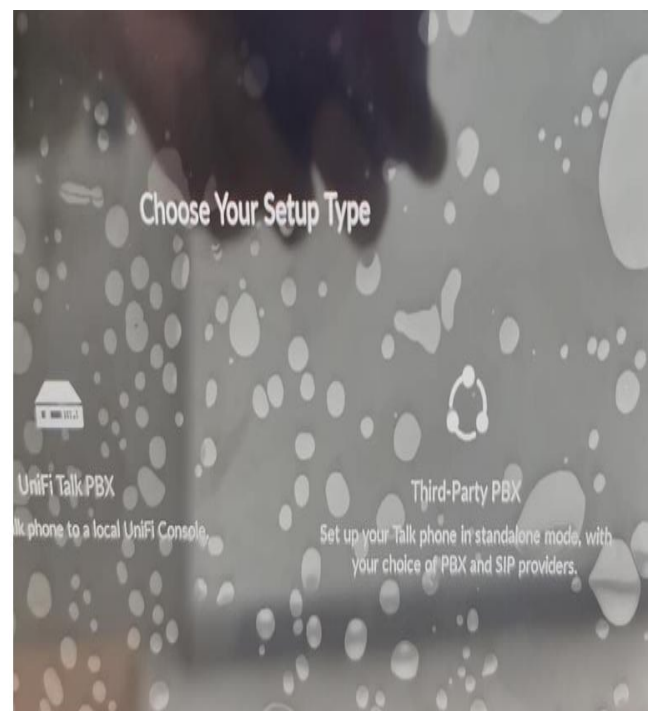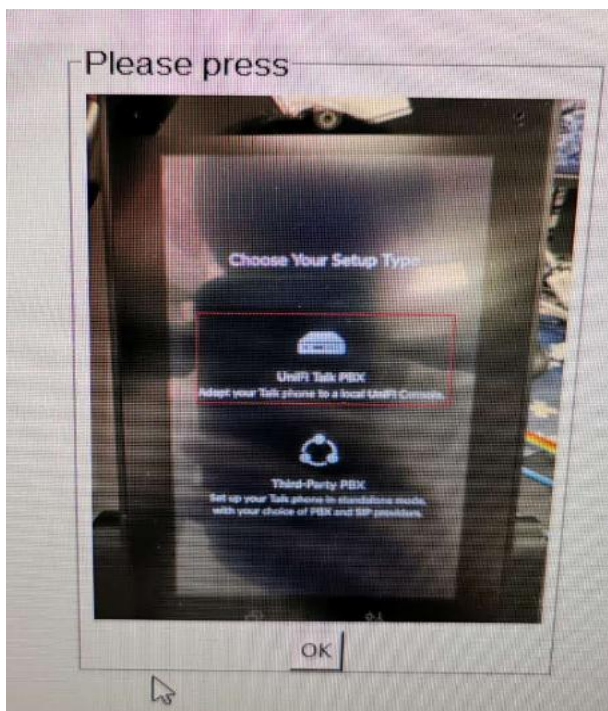

5) Allow USB debugging? click "Always allow from this computer" and Click the OK button.

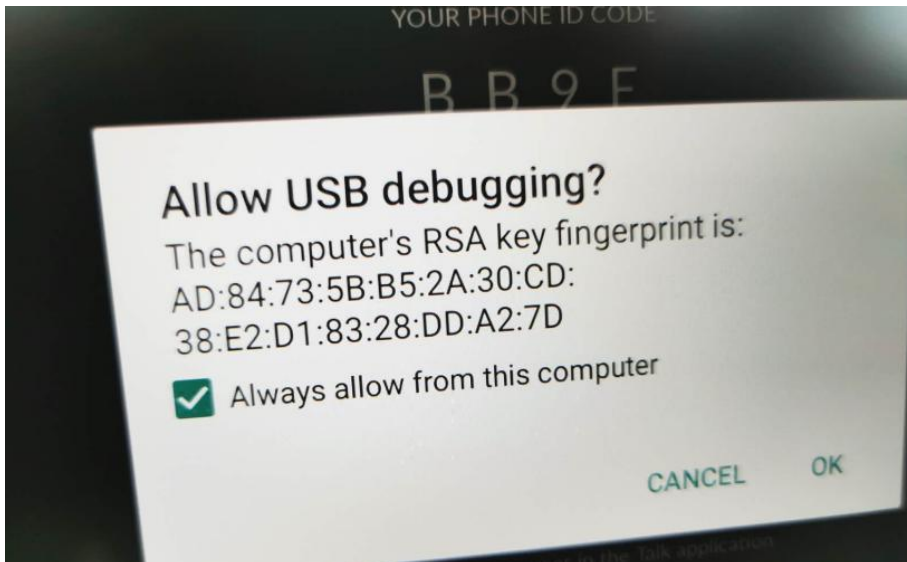


6).check the start-up image. Click the Yes button.

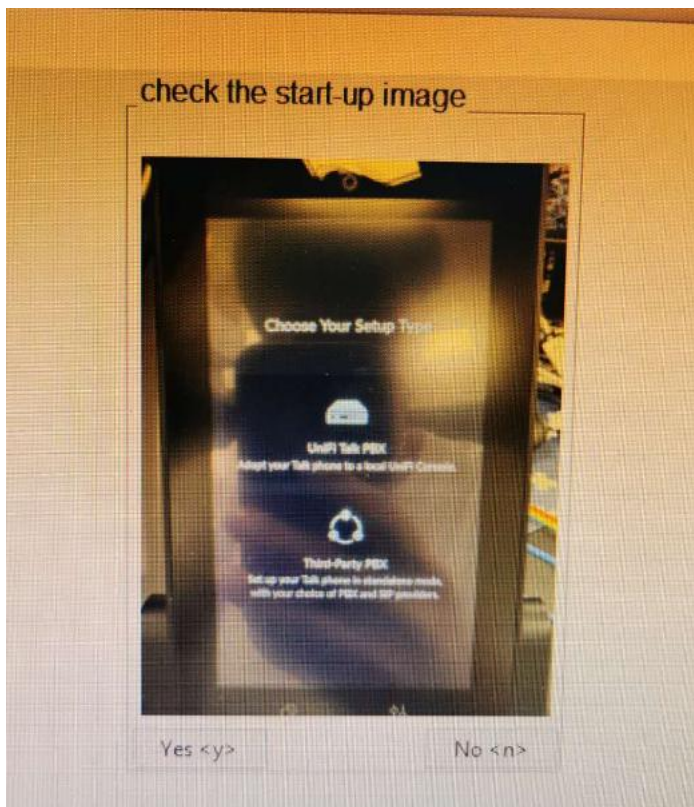

12.6 Check Result

Waiting for the test program show **PASS** or **FAIL** result.

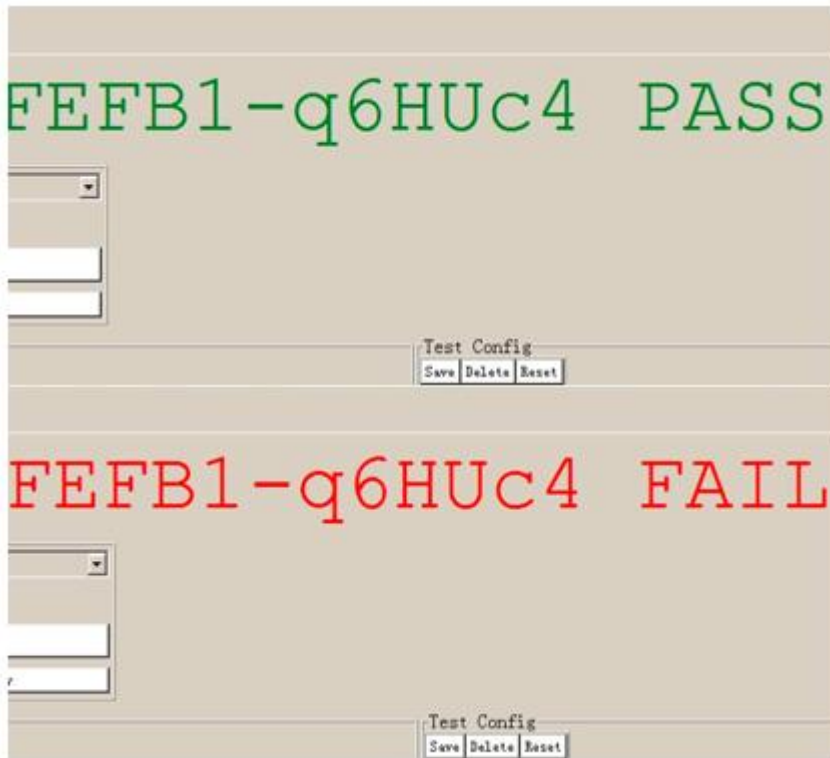





13. T13-Packing-Shipping FW check & CCD check

13.1 Equipment List

Please reference equipment list.

13.2 Connection Diagram

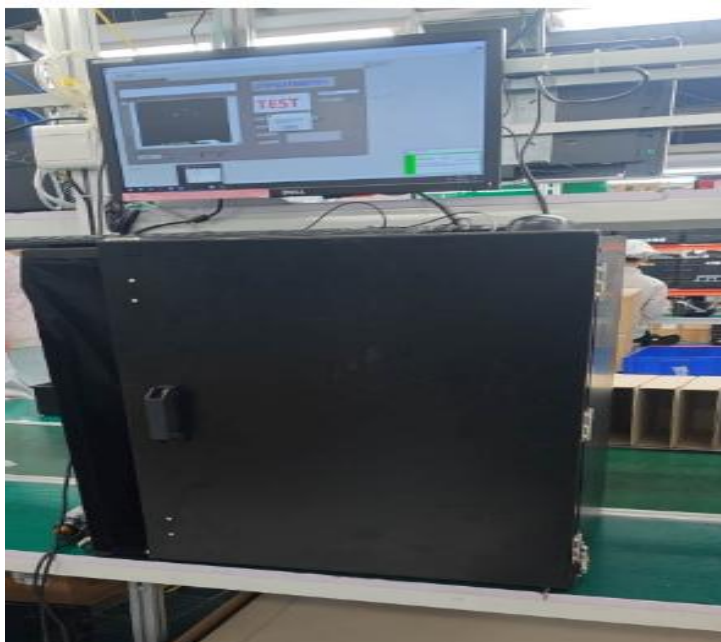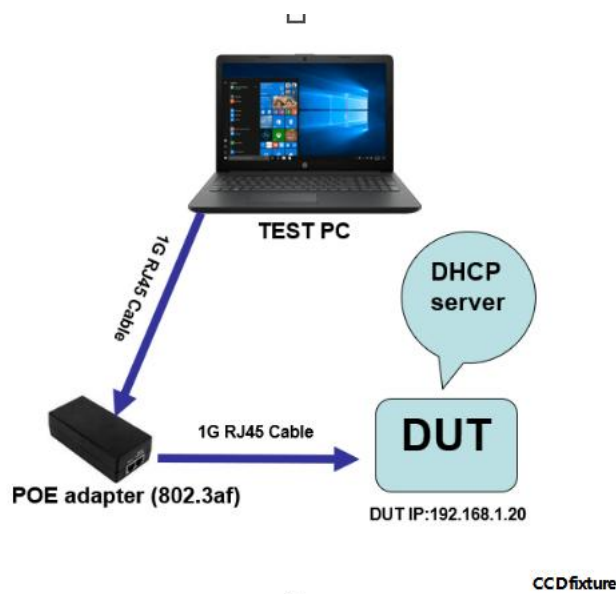

13.3 Software Setup

13.3.1 FTU tool download


1) Download the FTU file (FTU_efbc_1.0.21_3.17.17_UTP-G3-Touch-Wall.zip) from the path.



- 2) Please contact UBNT RD (Kevin.Wen@ui.com) for any updates.
- 3) Use DHCP to assign a fixed IP to the DUT 192.168.1.20

13.4 Setup Environment

- 1). Double-click "run_windows_mvc.bat" in FTU tool.

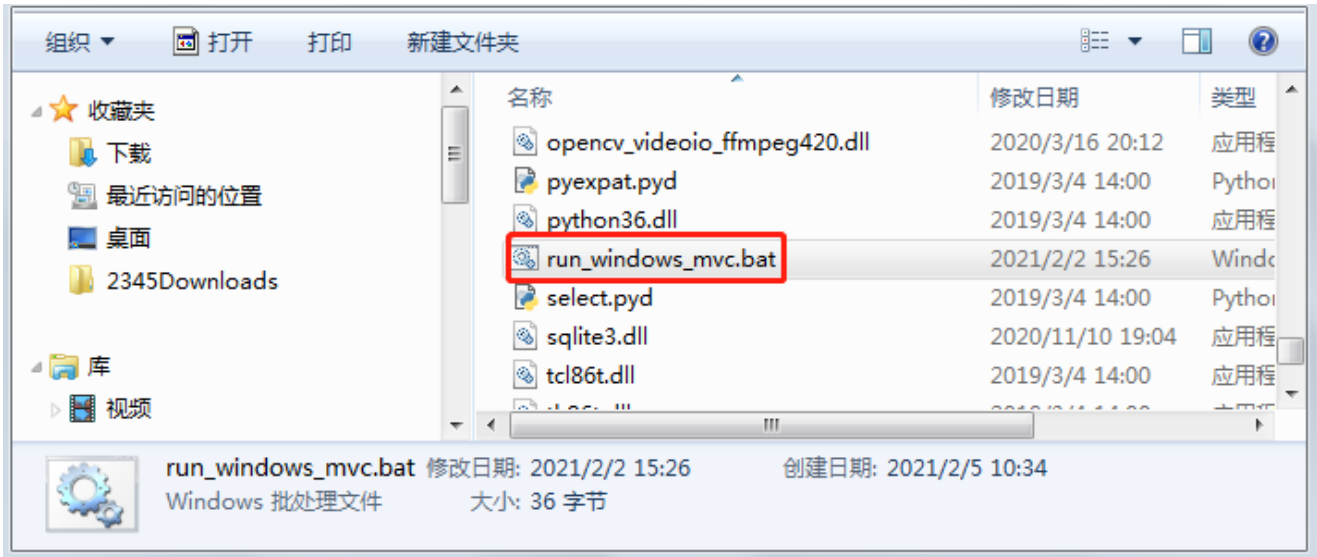

- 2) FTU setting (Review the version and test items).

☒ 1008 - [SL-FW-ETH] Shipping Check MAC

- 3) Set up sw_version as below.

[IP]

DUT = 192.168.1.20
LocalPC = 192.168.1.193

13.5 Test Process

- 1) Power on the DUT.
- 2) Scan the "MAC ID", then click the button "F2".




MAC:	FCECDAFF32B5		
Run Tests <F2>			
Test Summary	Clear Summary		
Test Content			
Dis-select all	Select all	Save	Delete


3) Check the start-up image.

NOTE:


Need to use CCD to check and save all the images.

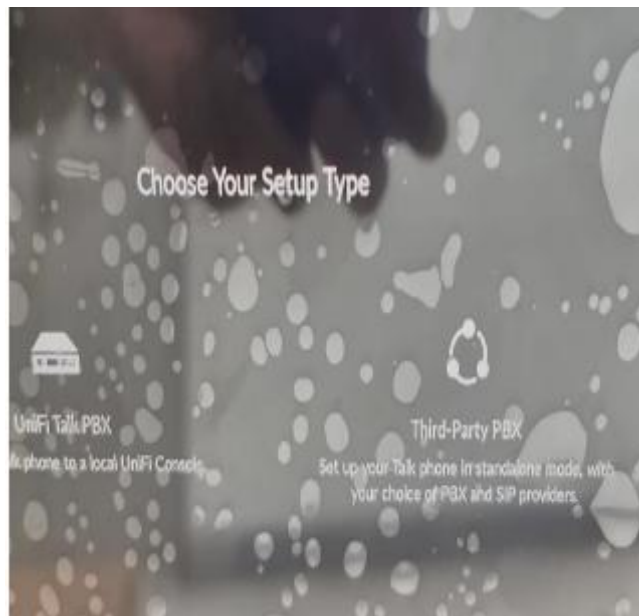

The CCD picture shows that as the startup screen, can be judged as pass.

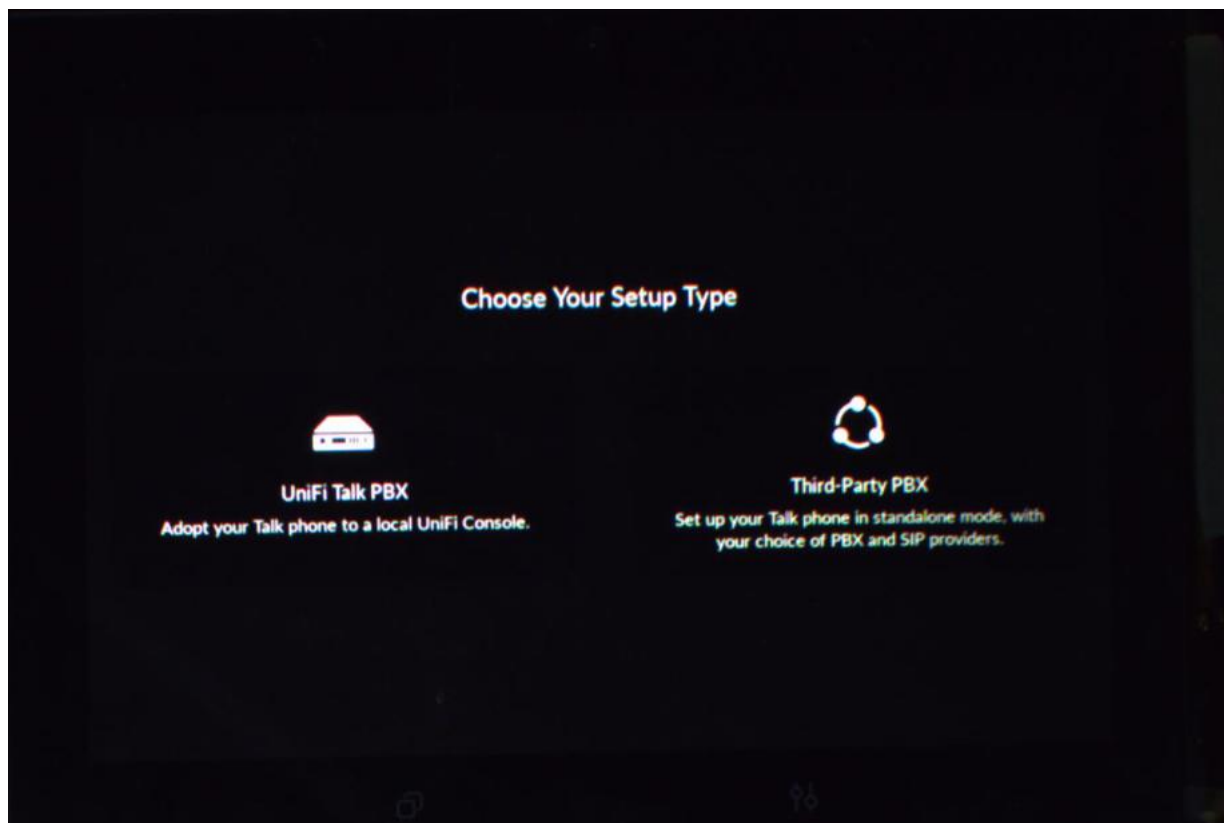


PASS LCM_1C0B8BC6D172_05,33,48.jpg

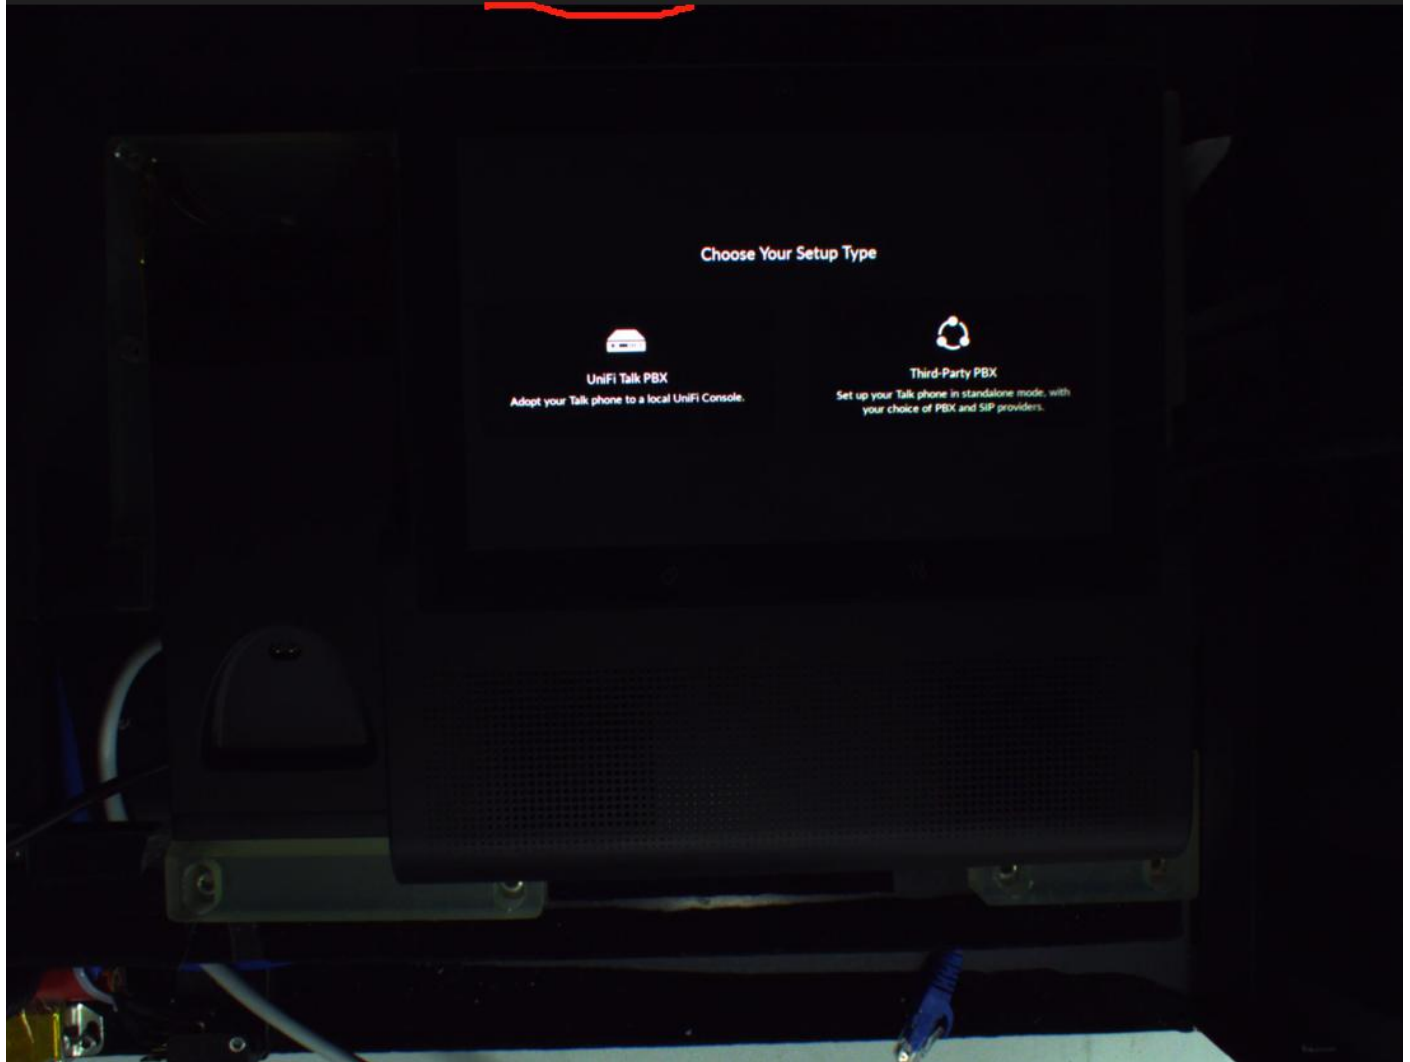



13.6 Check Result

Waiting for the test program to show a **PASS** or **FAIL** result.

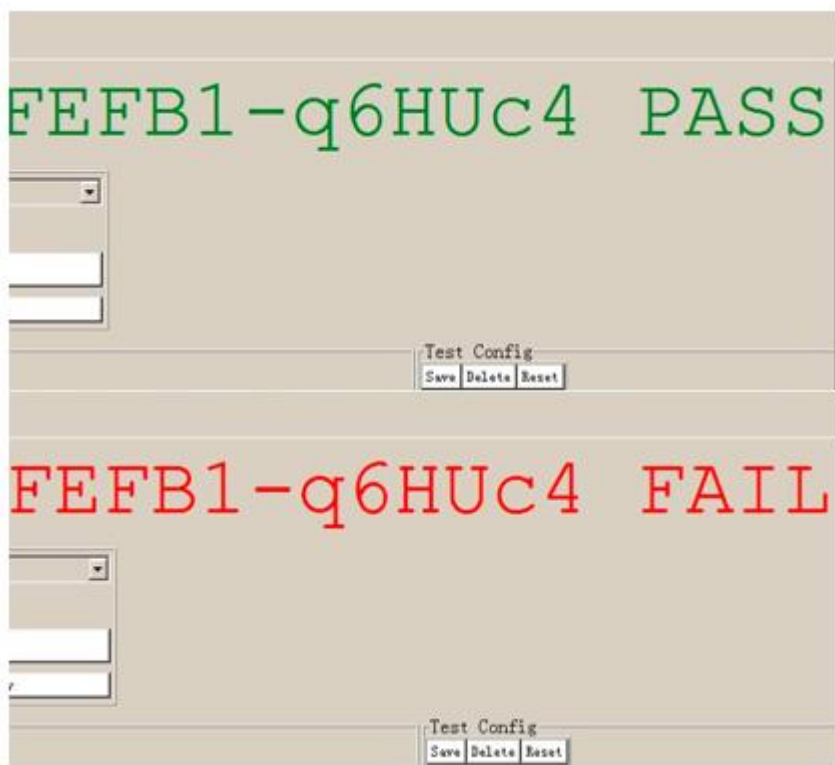

注意：需要在 CCD 治具暗箱加上一个门，利用开关门的方式来触发 POE 的通断，用来给电话机供电或是断电，要求开门时将 POE 电源断掉，关上门后 POE 通电给电话机上电。目的是防止 OP 在插拔 POE 电源网线时误碰到触摸屏上的按钮，导致电话机的开机画面不对，造成客诉。

Note: A door needs to be added to the CCD fixture box. open and close the door will be used to trigger the on-off of the POE, supply power or cut off power to the telephone. The POE power supply be turned off when the door is opened, and the POE will be powered on and supply power to the telephone after the door is closed. The purpose is to prevent the OP from accidentally touching the buttons on the touch screen when plugging or unplugging the POE power RJ45 cable, resulting in incorrect startup screens on the telephone and causing customer complaints.

