




01 What It Is

Damage is a square-wave fuzz whose pulse width can be cross-modulated by its own internal FM oscillator, for a mangled, unstable character standard clipping distortion doesn't touch. A noise gate keyed off the input level keeps the fuzz contained.

The Gate knob doubles as a live meter, showing the input level in real time so you can see exactly where the threshold sits against your signal.

02 Signal Path

Signal moves through Damage in a fixed order. Gate mutes what reaches the fuzz stage; Hi Pass and Lo Pass shape what leaves it.

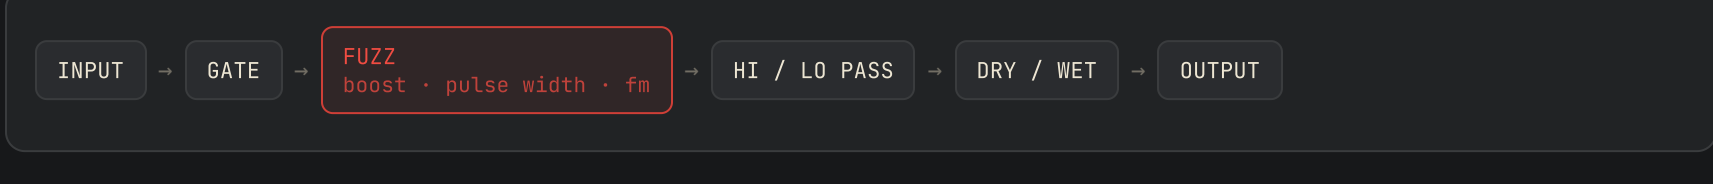

03 The Panel

GAIN

GAIN




Drive 1x-60x · default 1.0x

Gain into the fuzz stage. At 1x the signal passes through clean. Turning it up pushes harder into fuzz.




Gate -80 to 0 dB · default -80 dB

Threshold below which the input is muted. The knob also shows the live input level in real time, so you can see exactly where it sits against your signal. At -80 dB the gate is effectively open.

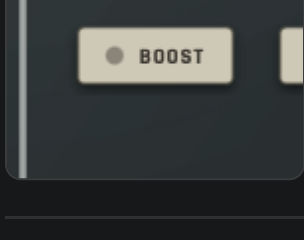

Boost on/off · default off

Extra gain ahead of the fuzz stage, for a hotter signal into Drive.

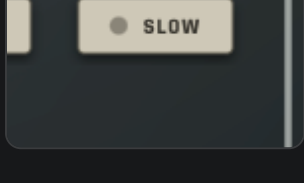

Slow on/off · default off

Lengthens the gate's release time, so it fades out rather than cutting off abruptly.

CHARACTER



Hi Pass 20 Hz-2 kHz · default 20 Hz

High-pass filter on the fuzz output. At 20 Hz it's fully open. Raise it to thin out the low end.



Lo Pass 200 Hz-20 kHz · default 6000 Hz

Low-pass filter on the fuzz output. Lower it to tame harshness in the fuzz's upper harmonics.




Pulse Width 0-100% · default 50.0%

Duty cycle of the square-wave fuzz stage. 50% is a symmetric square wave. Moving either direction skews it toward a thinner, more nasal pulse.



FM Freq 0.5 Hz-5 kHz · default 30 Hz


Frequency of the internal oscillator that cross-modulates the fuzz stage's pulse width, when On is engaged. Unused otherwise. Note that at some settings your signal may correlate with FM Freq to cause it to be inaudible. In these cases, adjust the FM Freq control or the Drive.

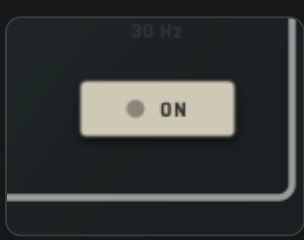

On on/off · default off


Enables FM cross-modulation of the fuzz stage's pulse width, using FM Freq. At low frequencies it wobbles the fuzz's character; at higher frequencies it adds its own harsh, ring-modulated texture.

MIX

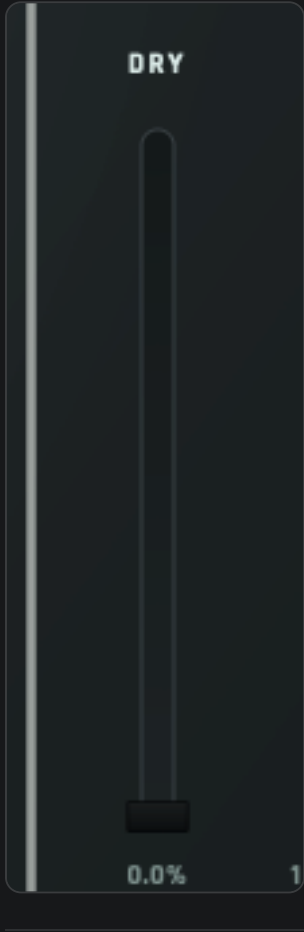

Dry 0-100% · default 0%

Level of the untouched input.

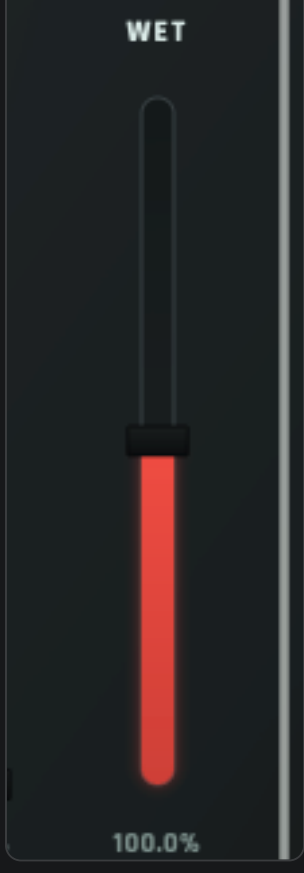

Wet 0-200% · default 100%

Level of the processed signal, independent of Dry. Can be pushed past unity for an exaggerated, obviously-effected sound.

A Bypass switch sits at the top right of the panel. It mutes the effect entirely, passing dry signal only, for quick A/B comparison.