
## **Position of Parts in Body**

## [LHD: S/D]

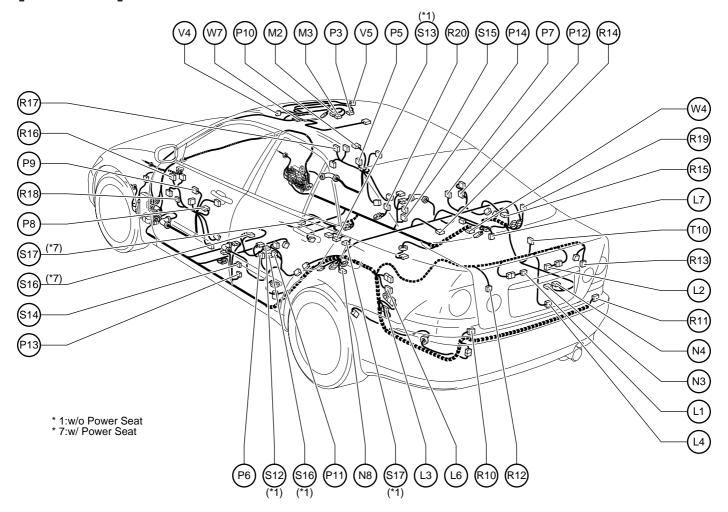

- 1 License Plate Light LH2 License Plate Light RH
- 3 Light Failure Sensor
- Luggage Compartment Door Courtesy SW and Opener Motor
- Luggage Compartment Door Opener Relay
- L 7 Luggage Compartment Light
- M 2 Moon Roof Control ECU
- M 3 Moon Roof Control SW Personal Light
- N 3 Navigation ECU
- N 4 Navigation ECU
- N 8 Noise Filter (Stop Light)
- 3 Personal Light
- 5 Power Window Control SW Front RH Ρ
- P 6 Power Window Control SW Rear LH
- 7 Power Window Control SW Rear RH
- 8 Power Window Master SW
- P 9 Power Window Motor Front LH
- P10 Power Window Motor Front RH
- P11 Power Window Motor Rear LH
- P12 Power Window Motor Rear RH
- P13 Pretensioner LH
- P14 Pretensioner RH

- R10 Rear Combination Light LH R11 Rear Combination Light RH
- R12 Rear Fog Light LH R13 Rear Fog Light RH R14 Rear Speaker LH
- R15 Rear Speaker RH
- R16 Remote Control Mirror LH R17 Remote Control Mirror RH
- R18 Remote Control Mirror SW
- R19 Rear Window Defogger
- R20 Rear Window Defogger
- S12 Seat Heater (Driver's Seat)S13 Seat Heater (Passenger's Seat)
- S14 Side Airbag Sensor LH
- S15 Side Airbag Sensor RH
- S16 Side Airbag Squib LH S17 Side Airbag Squib RH
- T10 Theft Warning Siren
- V 4 Vanity Light LH
- V 5 Vanity Light RH
- W 4 Wireless Door Lock ECU
- W 7 Wire to FFC Holder