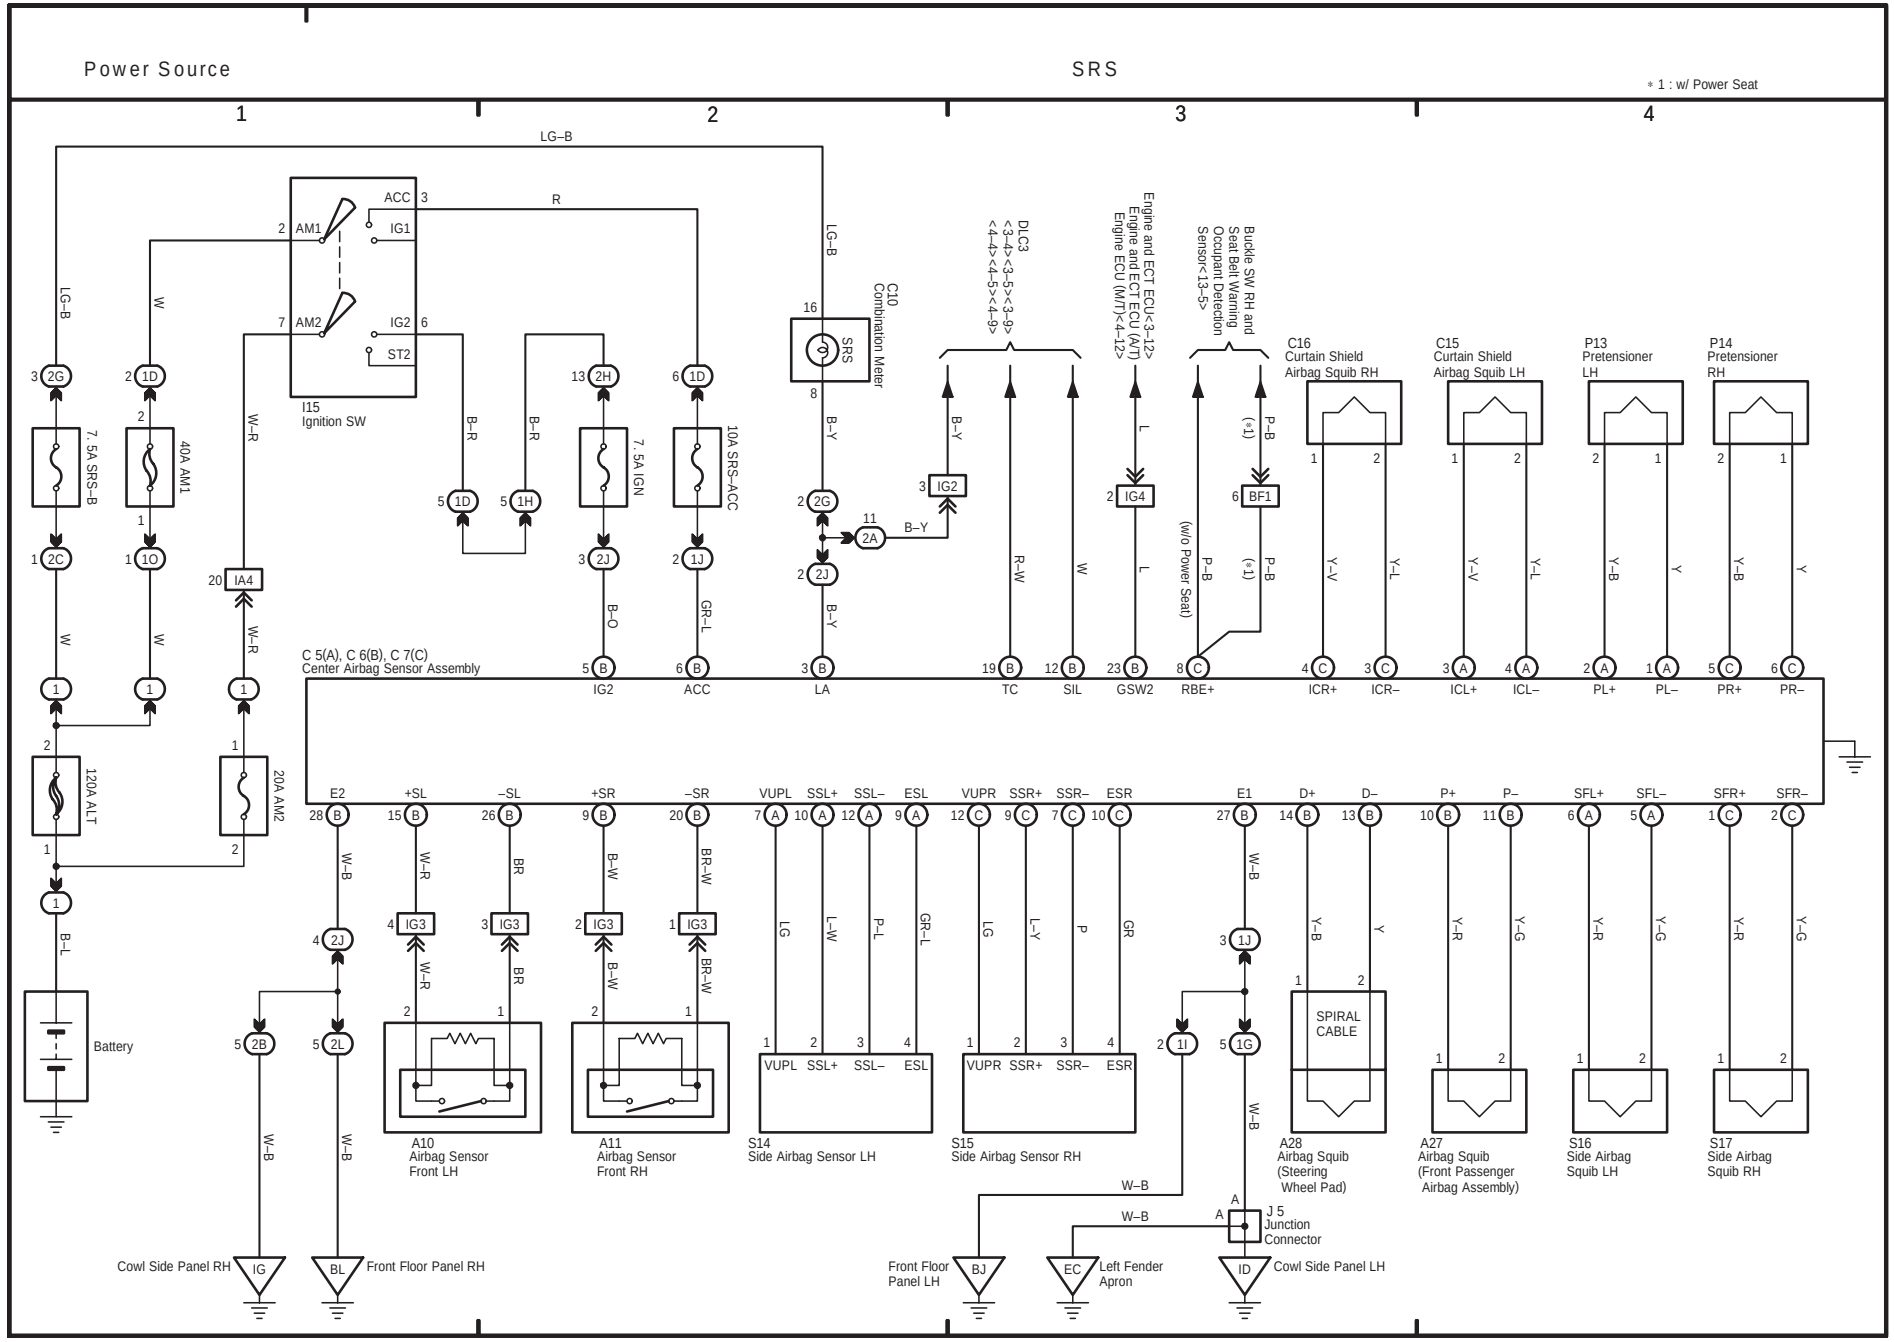
Power Source
SRS
* 1 : w/ Power Seat
1
2
3
4
LG–B
R
ACC
IG1
IG2
ST2
AM1
AM2
I15
Ignition SW
C10
Combination Meter
SRS
7. 5A SRS–B
40A AM1
7. 5A IGN
10A SRS–ACC
IA4
120A ALT
20A AM2
Battery
C 5(A), C 6(B), C 7(C)
Center Airbag Sensor Assembly
IG2
ACC
LA
TC
SIL
GSW2
RBE+
ICR+
ICR–
ICL+
ICL–
PL+
PL–
PR+
PR–
E2
+SL
–SL
+SR
–SR
VUPL
SSL+
SSL–
ESL
VUPR
SSR+
SSR–
ESR
E1
D+
D–
P+
P–
SFL+
SFL–
SFR+
SFR–
DLC3
<3–4><3–5><3–9>
<4–4><4–5><4–9>
Engine and ECT ECU<3–12>
Engine and ECT ECU (A/T)
Engine ECU (M/T)<4–12>
Buckle SW RH and
Seat Belt Warning
Occupant Detection
Sensor<13–5>
(w/o Power Seat)
C16
Curtain Shield
Airbag Squib RH
C15
Curtain Shield
Airbag Squib LH
P13
Pretensioner
LH
P14
Pretensioner
RH
A10
Airbag Sensor
Front LH
A11
Airbag Sensor
Front RH
S14
Side Airbag Sensor LH
S15
Side Airbag Sensor RH
SPIRAL
CABLE
A28
Airbag Squib
(Steering
Wheel Pad)
A27
Airbag Squib
(Front Passenger
Airbag Assembly)
S16
Side Airbag
Squib LH
S17
Side Airbag
Squib RH
J 5
Junction
Connector
Cowl Side Panel RH
Front Floor Panel RH
Front Floor
Panel LH
Left Fender
Apron
Cowl Side Panel LH