I GROUND POINT (RHD)

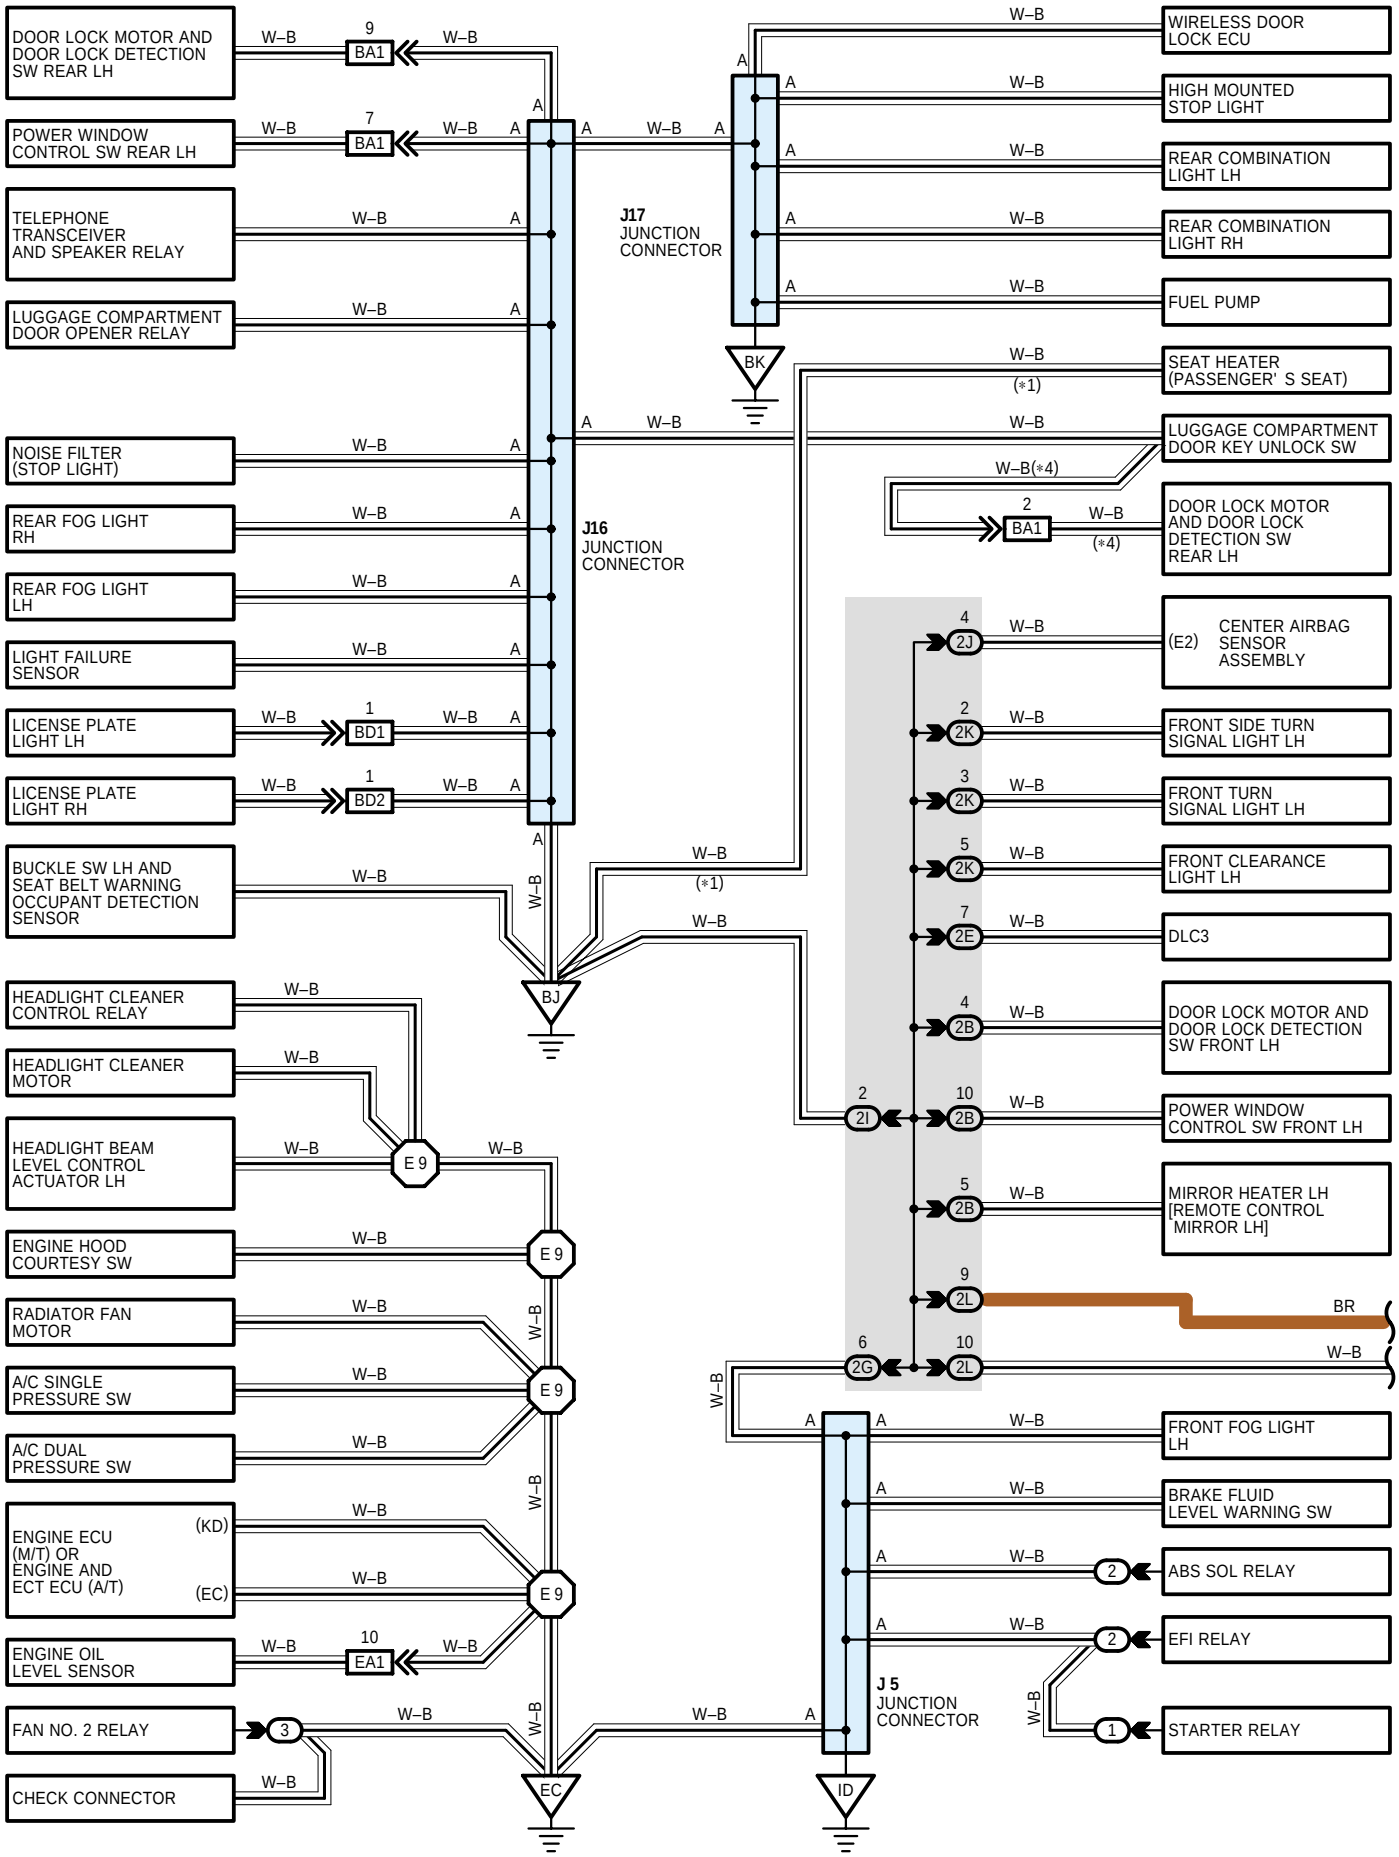

∗ 1 : W/ POWER SEAT
∗ 3 : W/ LEXUS NAVIGATION SYSTEM
∗ 4 : W/ DOUBLE LOCKING
∗ 5 : W/ MOON ROOF
∗ 6 : W/O MOON ROOF

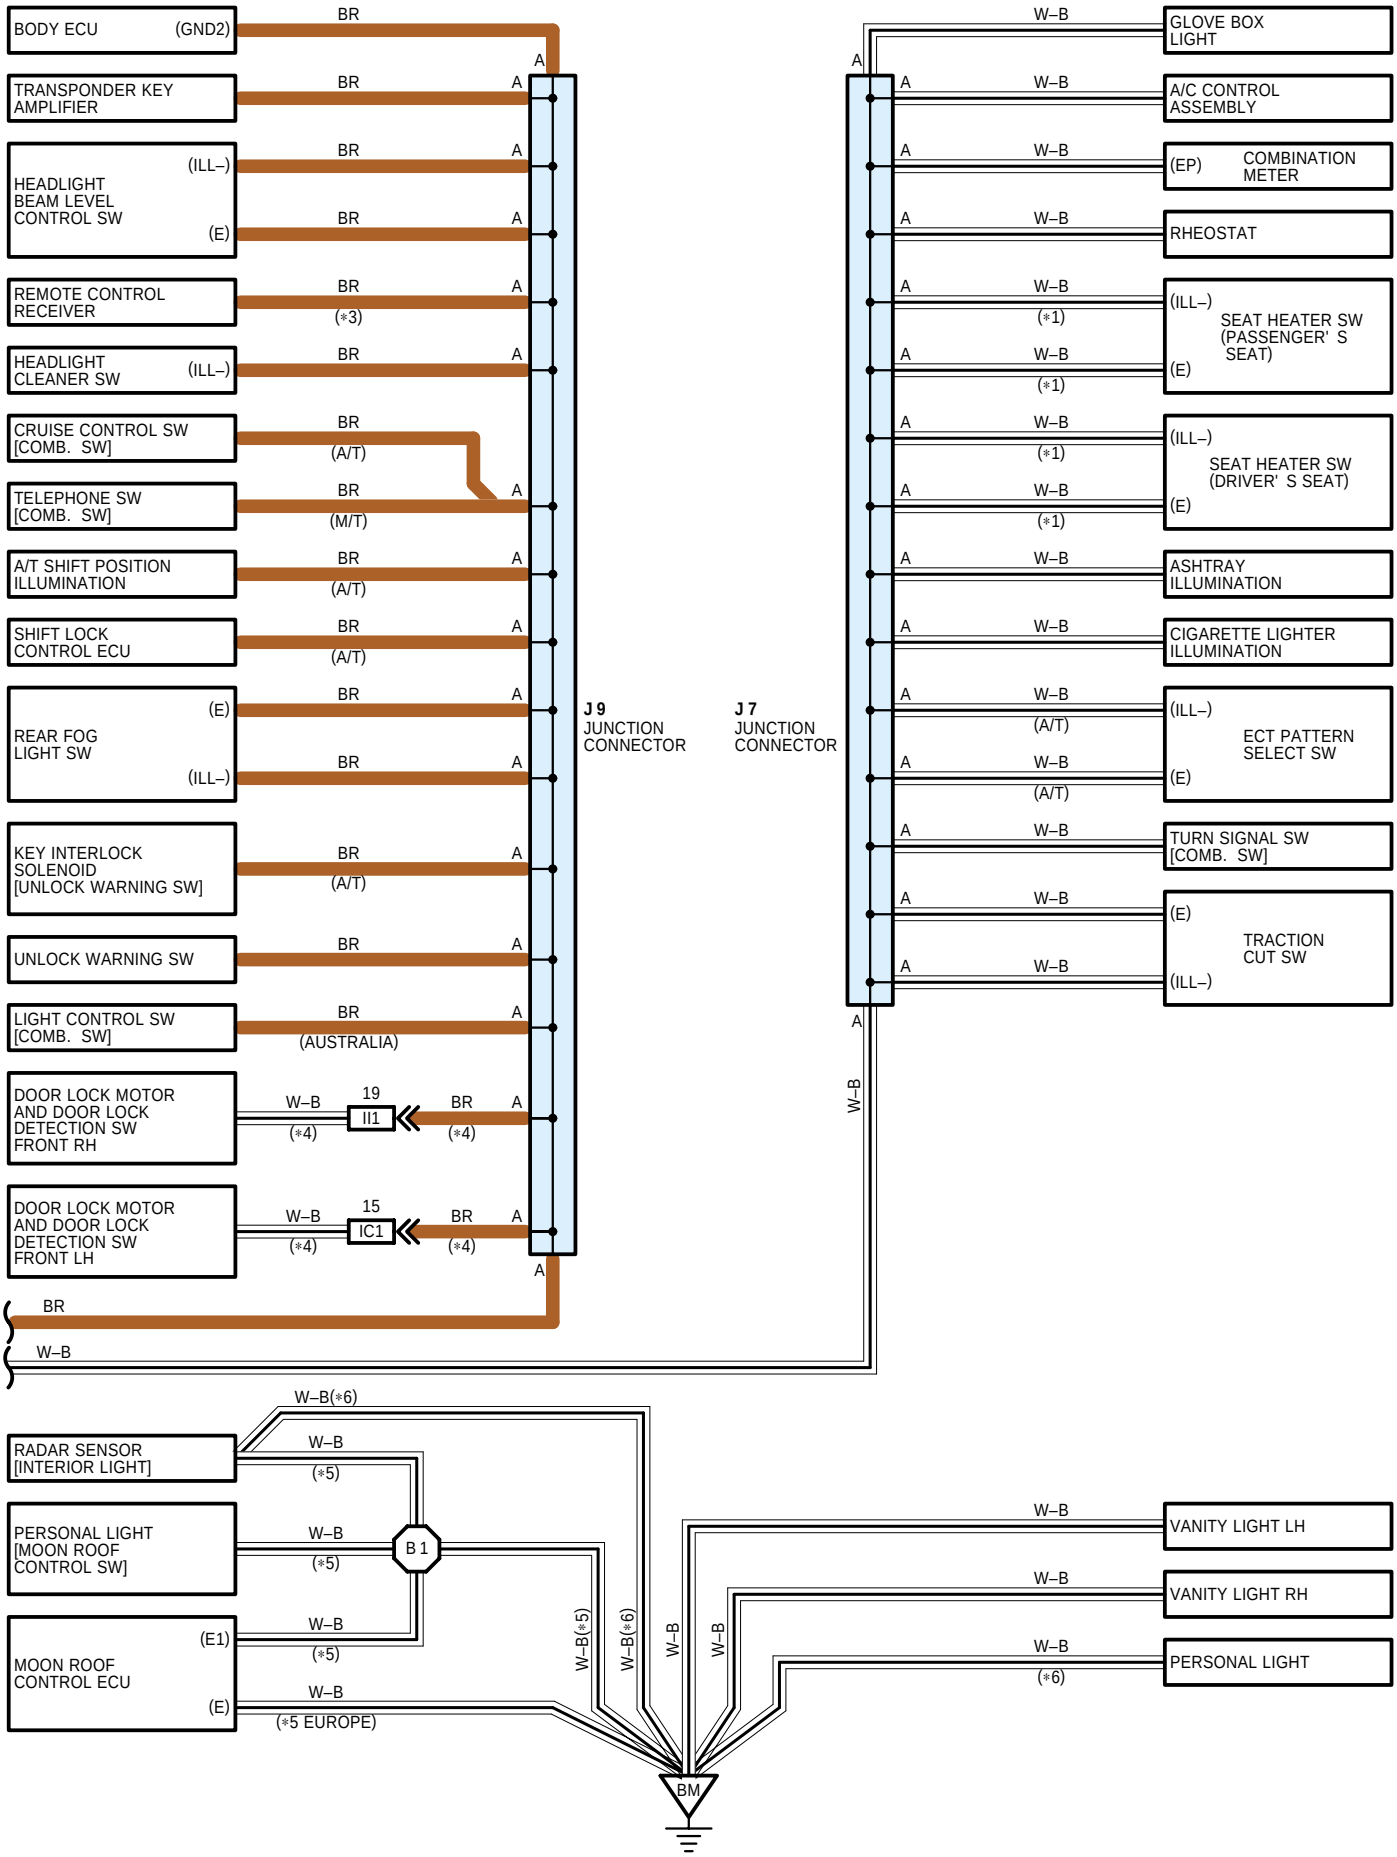

I GROUND POINT (RHD)

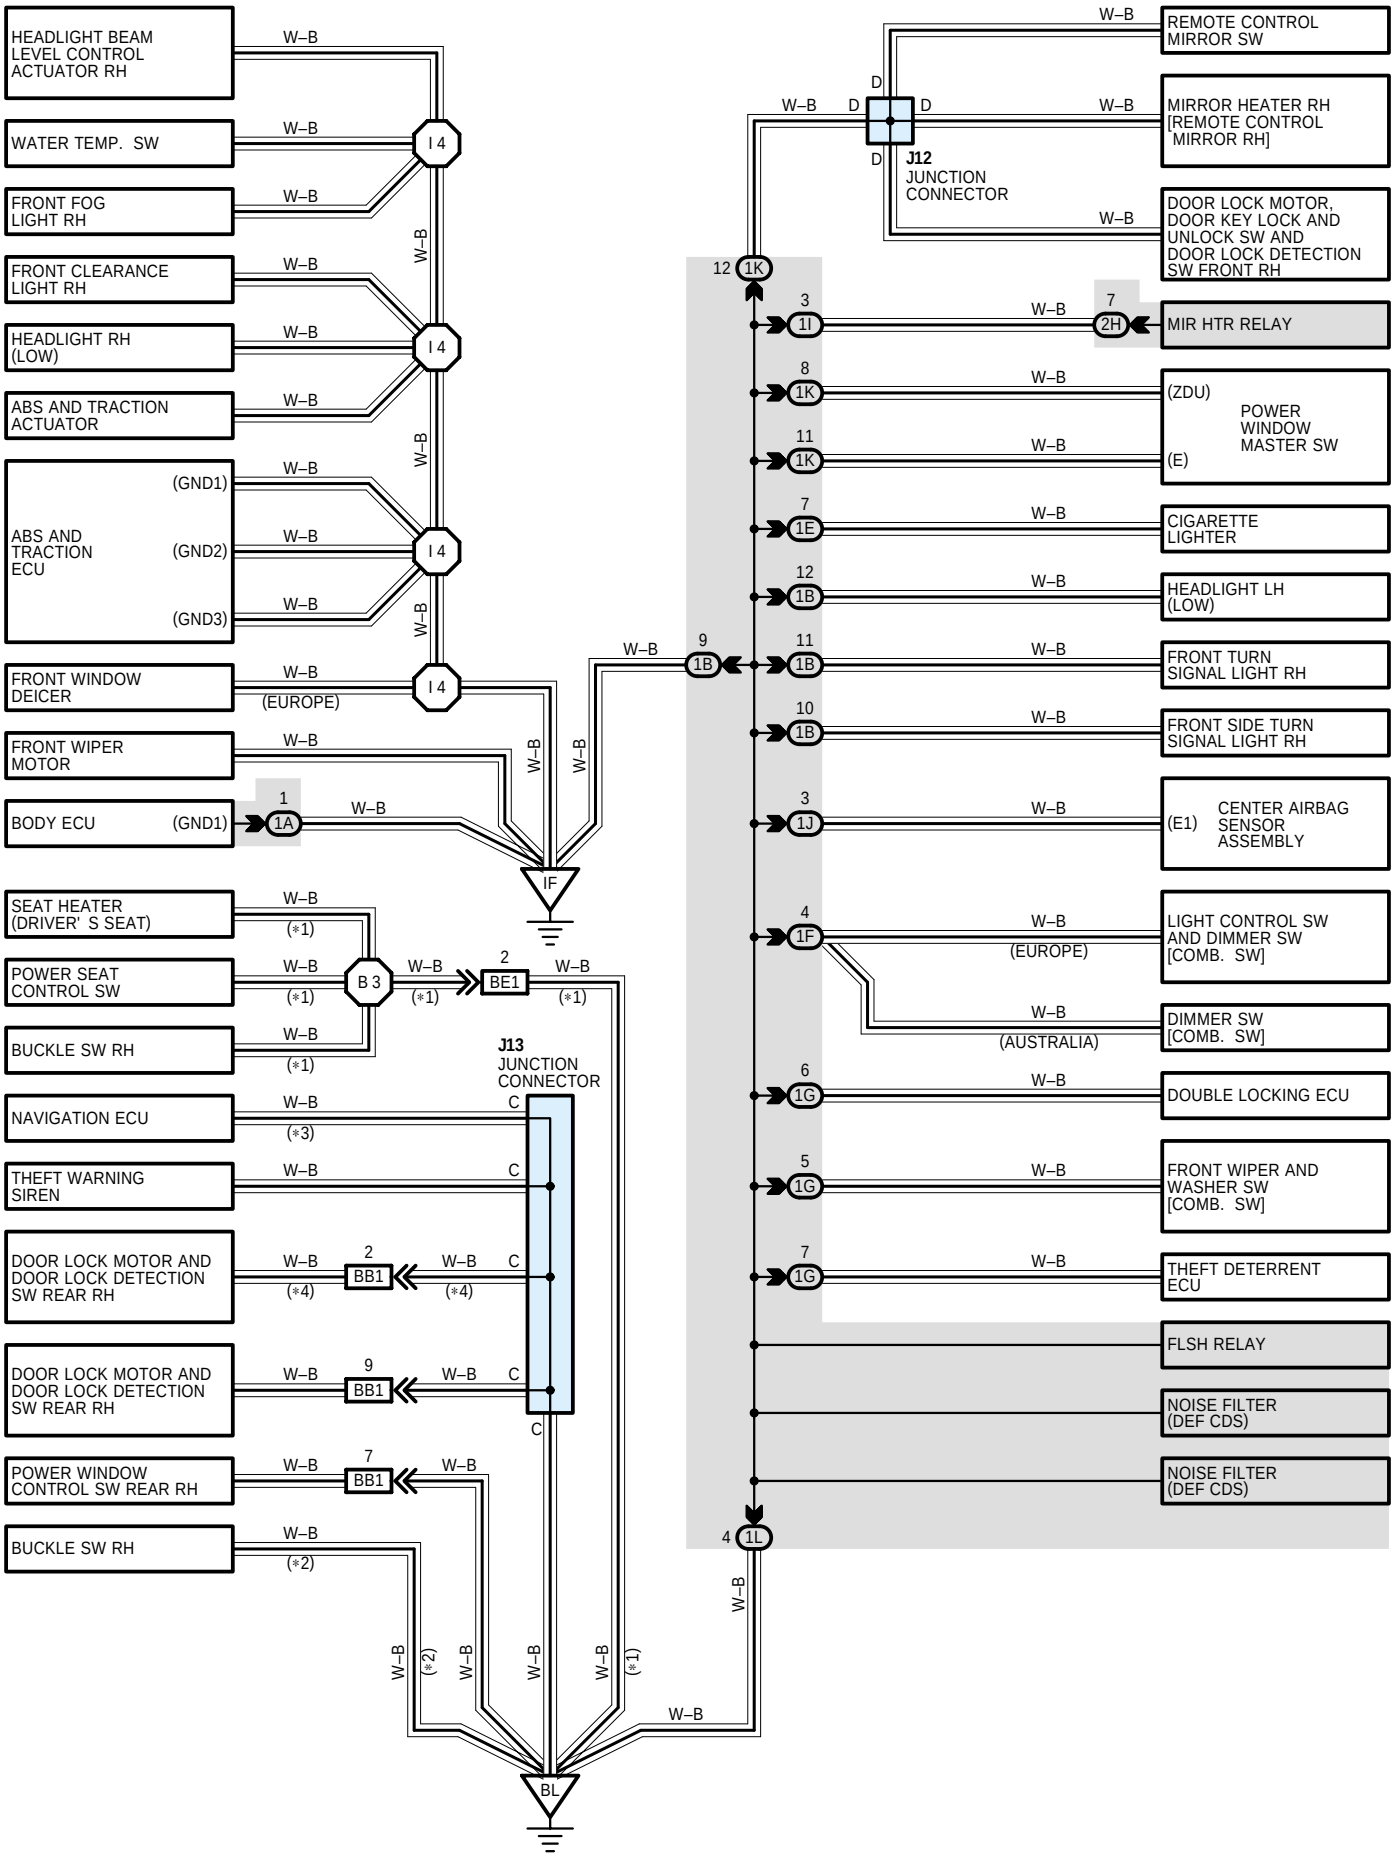

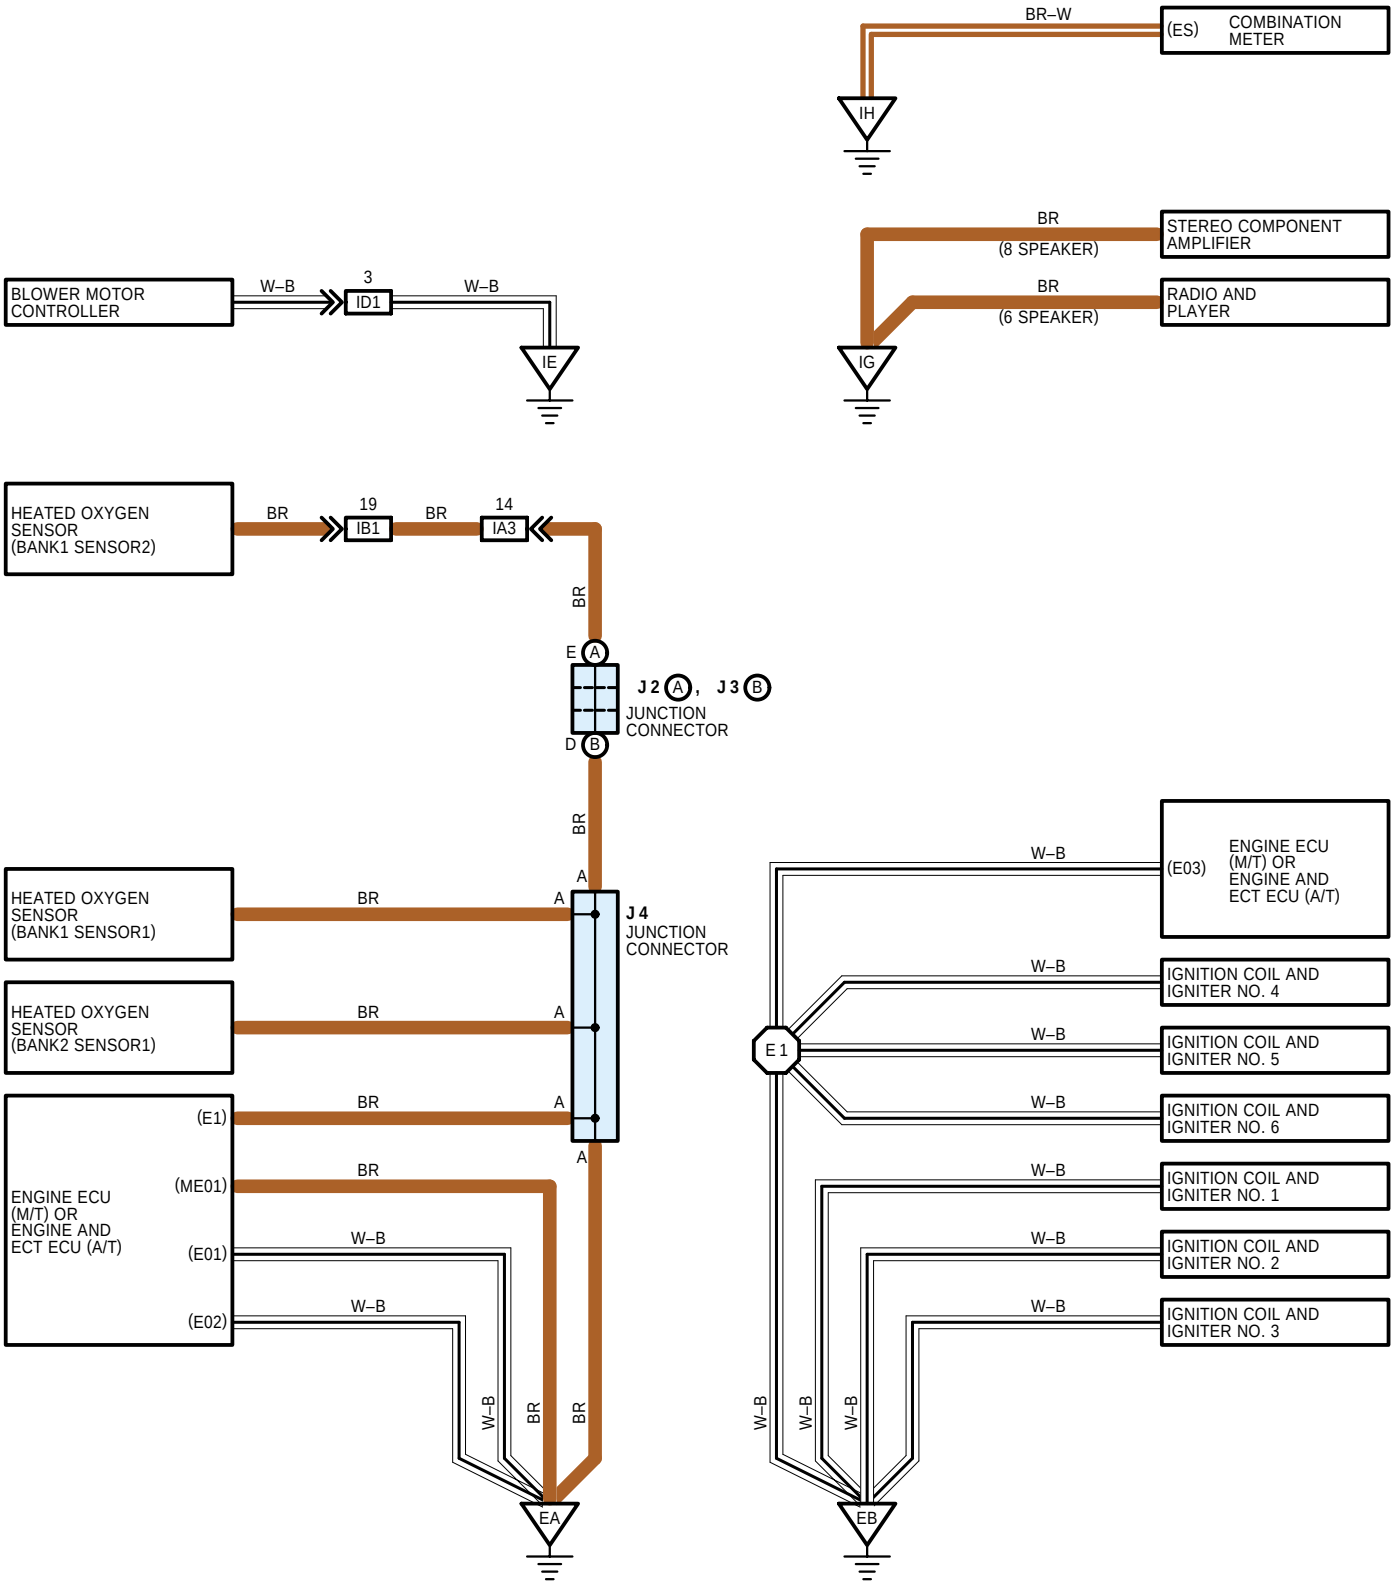
BR–W
(ES)
COMBINATION METER
IH
BR
(8 SPEAKER)
STEREO COMPONENT AMPLIFIER
BR
(6 SPEAKER)
RADIO AND PLAYER
IG
BLOWER MOTOR CONTROLLER
W–B
3
ID1
W–B
IE
HEATED OXYGEN SENSOR (BANK1 SENSOR2)
BR
19
IB1
BR
14
IA3
BR
E
A
J2 A , J3 B
JUNCTION CONNECTOR
D
B
BR
HEATED OXYGEN SENSOR (BANK1 SENSOR1)
HEATED OXYGEN SENSOR (BANK2 SENSOR1)
A
J4
JUNCTION CONNECTOR
BR
A
BR
A
BR
A
A
ENGINE ECU (M/T) OR ENGINE AND ECT ECU (A/T)
(E1)
(ME01)
(E01)
(E02)
BR
W–B
W–B
W–B
W–B
BR
BR
EA
W–B
(E03)
ENGINE ECU (M/T) OR ENGINE AND ECT ECU (A/T)
E1
W–B
IGNITION COIL AND IGNITER NO. 4
W–B
IGNITION COIL AND IGNITER NO. 5
W–B
IGNITION COIL AND IGNITER NO. 6
W–B
IGNITION COIL AND IGNITER NO. 1
W–B
IGNITION COIL AND IGNITER NO. 2
W–B
IGNITION COIL AND IGNITER NO. 3
W–B
W–B
W–B
EB