

REAR FLOOR NO.2 CROSSMEMBER (ASSY)

REPLACEMENT

- 1. REMOVE BODY LOWER BACK PANEL (See page BP-17)
- 2. REMOVE REAR FLOOR PAN (See page BP-20)
- 3. REMOVE REAR FLOOR NO.1 CROSSMEMBER (See page BP-26)
- 4. REMOVE REAR FLOOR NO.2 CROSSMEMBER

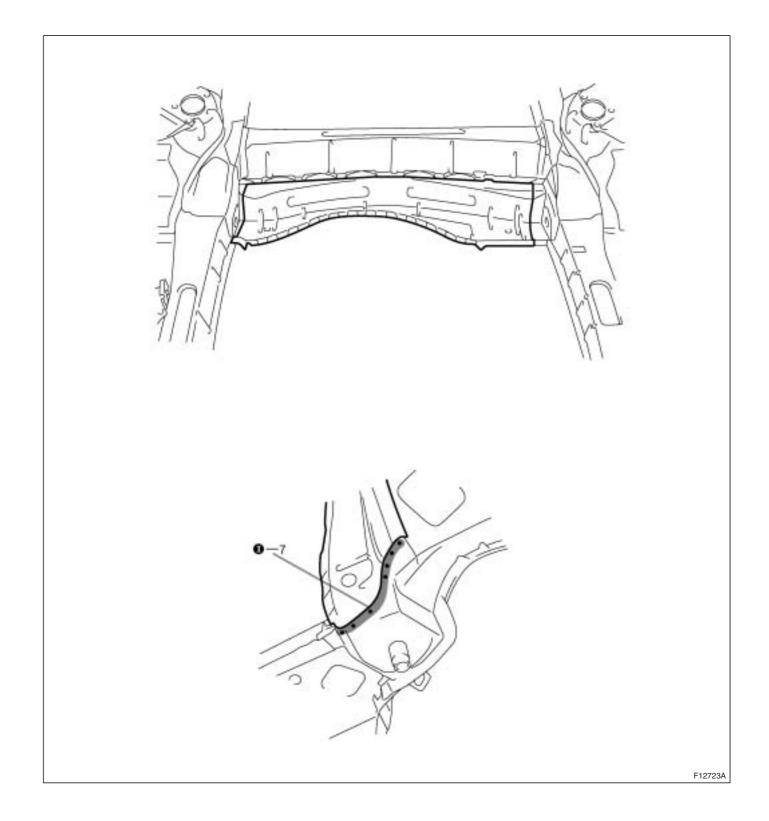

5. INSTALL REAR FLOOR NO.2 CROSSMEMBER

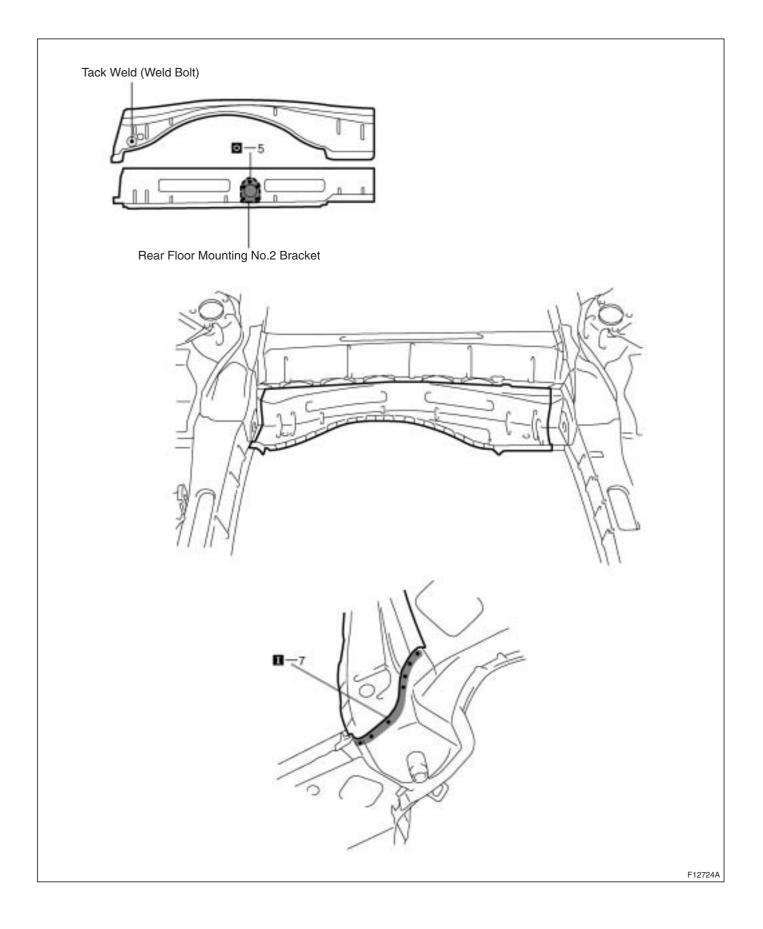

- 6. INSTALL REAR FLOOR NO.1 CROSSMEMBER (See page BP-26)
- 7. INSTALL REAR FLOOR PAN (See page BP-20)
- 8. INSTALL BODY LOWER BACK PANEL (See page BP-17)
- 9. APPLYING SEALER TO THE REAR LUGGAGE COMPARTMENT (See page PC-1)
- 10. APPLYING UNDER COATING (See page PC-6)
- 11. APPLYING ANTI-RUST AGENT
- (a) After applying the top coat layer, apply the anti-rust agent to the inside of the necked section structural weld spots.