
Position of Parts in Instrument Panel

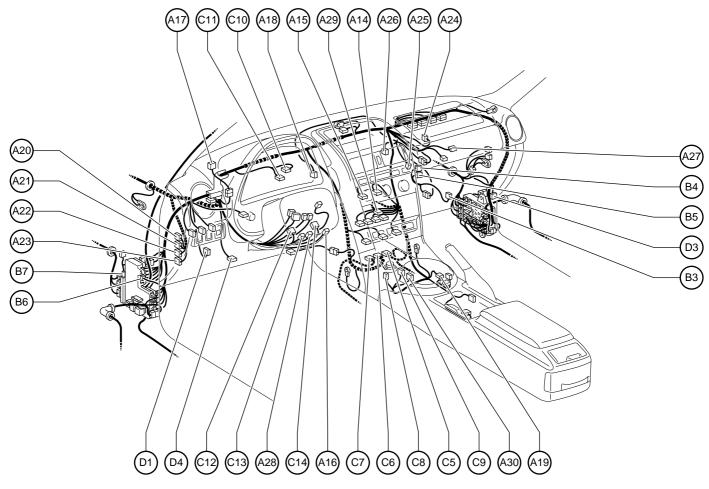



- A14 A/C Control Assembly
- A15 A/C Control Assembly
- A16 A/C Room Temp. Sensor
- A17 A/C Solar Sensor
- A18 A/C Thermistor
- A19 A/T Shift Position Illumination
- A20 ABS and Traction ECU
- A21 ABS and Traction ECU
- A22 ABS and Traction ECU
- A23 ABS and Traction ECU
- A24 Air Inlet Control Servo Motor
- A25 Air Mix Control Servo MotorA26 Air Vent Mode Control Servo Motor
- A26 All vent wode Control Servo woto
- A27 Airbag Squib (Front Passenger Airbag Assembly)
- A28 Airbag Squib (Steering Wheel Pad)
- A29 Antenna Amplifier
- A30 Ashtray Illumination
- B 3 Blower Motor
- B 4 Blower Motor Controller
- B 5 Blower Motor Controller
- B 6 Body ECU
- B 7 Body ECU

- C 5 Center Airbag Sensor Assembly
- C 6 Center Airbag Sensor Assembly
- C 7 Center Airbag Sensor Assembly
- C 8 Cigarette Lighter
- C 9 Cigarette Lighter Illumination
- C10 Combination Meter
- C11 Combination Meter
- C12 Combination SW
- C13 Combination SW
- C14 Combination SW
- D 1 Daytime Running Light Relay
- D 3 Diode (A/C)
- D 4 DLC3