
Position of Parts in Instrument Panel

[LHD]

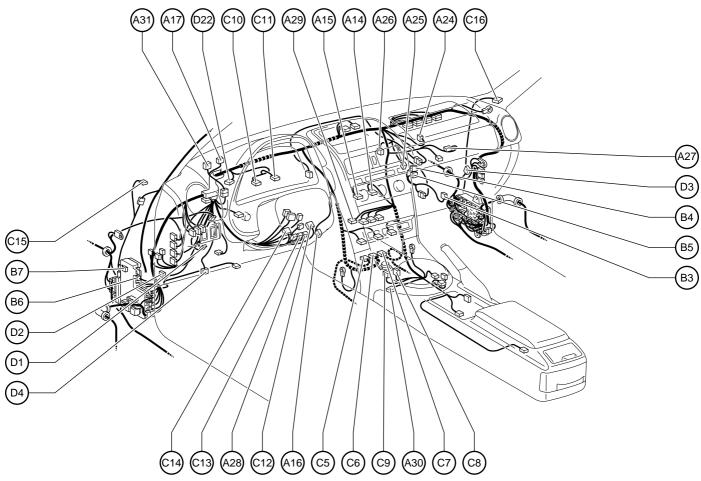

- A14 A/C Control Assembly
- A15 A/C Control Assembly
- A16 A/C Room Temp. Sensor
- A17 A/C Solar Sensor
- A18 A/C Thermistor
- A24 Air Inlet Control Servo Motor
- A25 Air Mix Control Servo Motor
- A26 Air Vent Mode Control Servo Motor
- A27 Airbag Squib (Front Passenger Airbag Assembly)
- A28 Airbag Squib (Steering Wheel Pad)
- A29 Antenna Amplifier
- A30 Ashtray Illumination
- A31 Automatic Light Control Sensor
- B 3 Blower Motor
- B 4 Blower Motor Controller
- B 5 Blower Motor Controller
- B 6 Body ECU
- B 7 Body ECU

- C 5 Center Airbag Sensor Assembly
- C 6 Center Airbag Sensor Assembly
- C 7 Center Airbag Sensor Assembly
- C 8 Cigarette Lighter
- C 9 Cigarette Lighter Illumination
- C10 Combination Meter
- C11 Combination Meter
- C12 Combination SW
- C13 Combination SW
- C14 Combination SW
- C15 Curtain Shield Airbag Squib LH
- C16 Curtain Shield Airbag Squib RH
- D 1 Daytime Running Light Relay Short Connector
- D 2 Double Locking ECU
- D 3 Diode (A/C)
- D 4 DLC3
- D22 Diode (Rear Fog Light)