

CIRCUIT BE16C-01

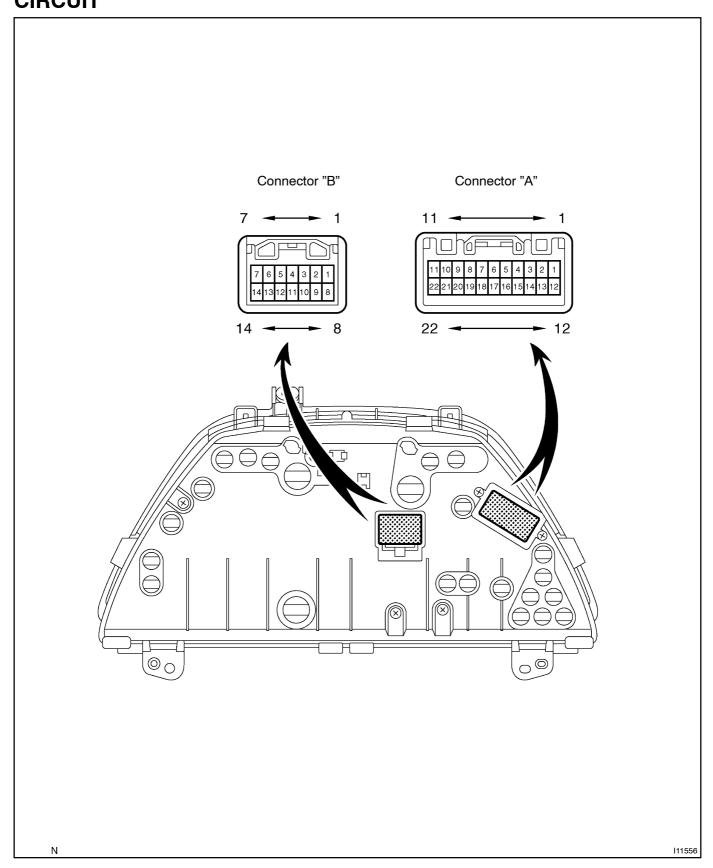

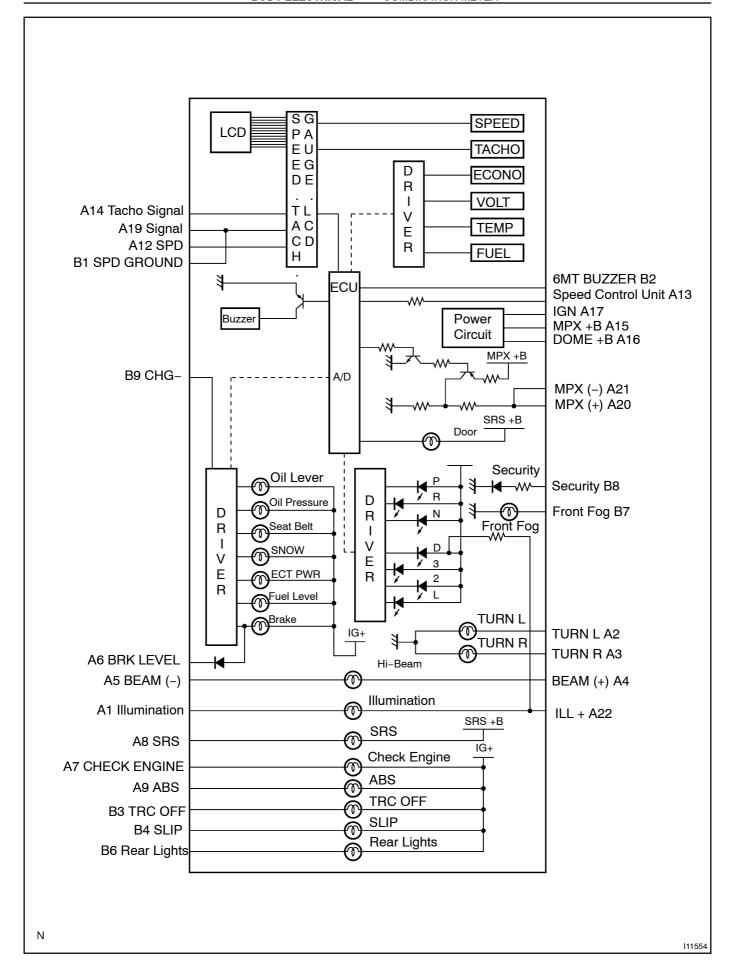

No.		Wiring connector side
A	1	Rheostat light control volume
	2	Turn signal light switch (Left)
	3	Turn signal light switch (Right)
	4	HEAD Fuse
	5	Headlight dimmer switch
	6	Brake fluid level warning switch
	7	Engine and ECT ECU
	8	Airbag sensor assembly
	9	ABS ECU
	12	Speed sensor (M/T) or ABS ECU (A/T)
	13	Speed control unit
	14	Engine and ECT ECU
	15	MPX+B Fuse
	16	DOME Fuse
	17	GAUGE Fuse
	18	Power ground
	19	Signal ground
	20	Multiplex communication circuit (MPX+)
	21	Multiplex communication circuit (MPX-)
	22	TAIL Fuse
В	1	Speed signal ground (M/T vehicle only)
	2	6M/T reverse buzzer (M/T vehicle only)
	3	ABS and TRC ECU
	4	ABS and TRC ECU
	5	Light failure relay
	6 7	Light failure relay
	8	Front fog light switch Transponder key ECU
	9	Daytime running light relay
	l a	Dayume ruming ngm relay