
Position of Parts in Engine Compartment

[RHD: 2JZ-GE]

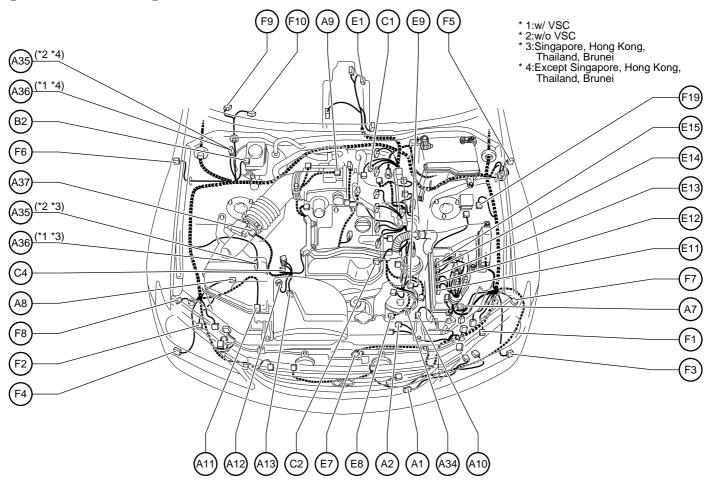

- A 1 A/C Ambient Temp. Sensor
- A 2 A/C Condenser Fan Motor
- A 7 ABS Speed Sensor Front LH
- A 8 ABS Speed Sensor Front RH
- A 9 Accel Position Sensor
- A10 Airbag Sensor Front LH
- A 11 Airbag Sensor Front RH
- A12 Alternator
- A13 Alternator
- A34 A/C Magnetic Clutch and Lock Sensor
- A35 ABS & BA & TRC Actuator
- A36 ABS & BA & TRC & VSC Actuator
- A37 Air Flow Meter
- B 2 Brake Fluid Level Warning SW
- C 1 Camshaft Position Sensor
- C 2 Camshaft Timing Oil Control Valve
- C 4 Crankshaft Position Sensor

- E 1 ECT Solenoid
- E 7 Engine Hood Courtesy SW
- E 8 Engine Oil Level Sensor
- E 9 Engine Oil Pressure SW
- E 11 Engine and ECT ECU
- E12 Engine and ECT ECU
- E13 Engine and ECT ECU
- E14 Engine and ECT ECU
- E15 Engine and ECT ECU
- F 1 Front Clearance Light LH
- F 2 Front Clearance Light RH
- F 3 Front Fog Light LH
- F 4 Front Fog Light RH
- F 5 Front Side Turn Signal Light LH
- F 6 Front Side Turn Signal Light RH
- F 7 Front Turn Signal Light LH
- F 8 Front Turn Signal Light RH
- F 9 Front Window Deicer
- F10 Front Wiper Motor
- F19 Fuel Pump Resistor