BE16O–01

COMPONENTS

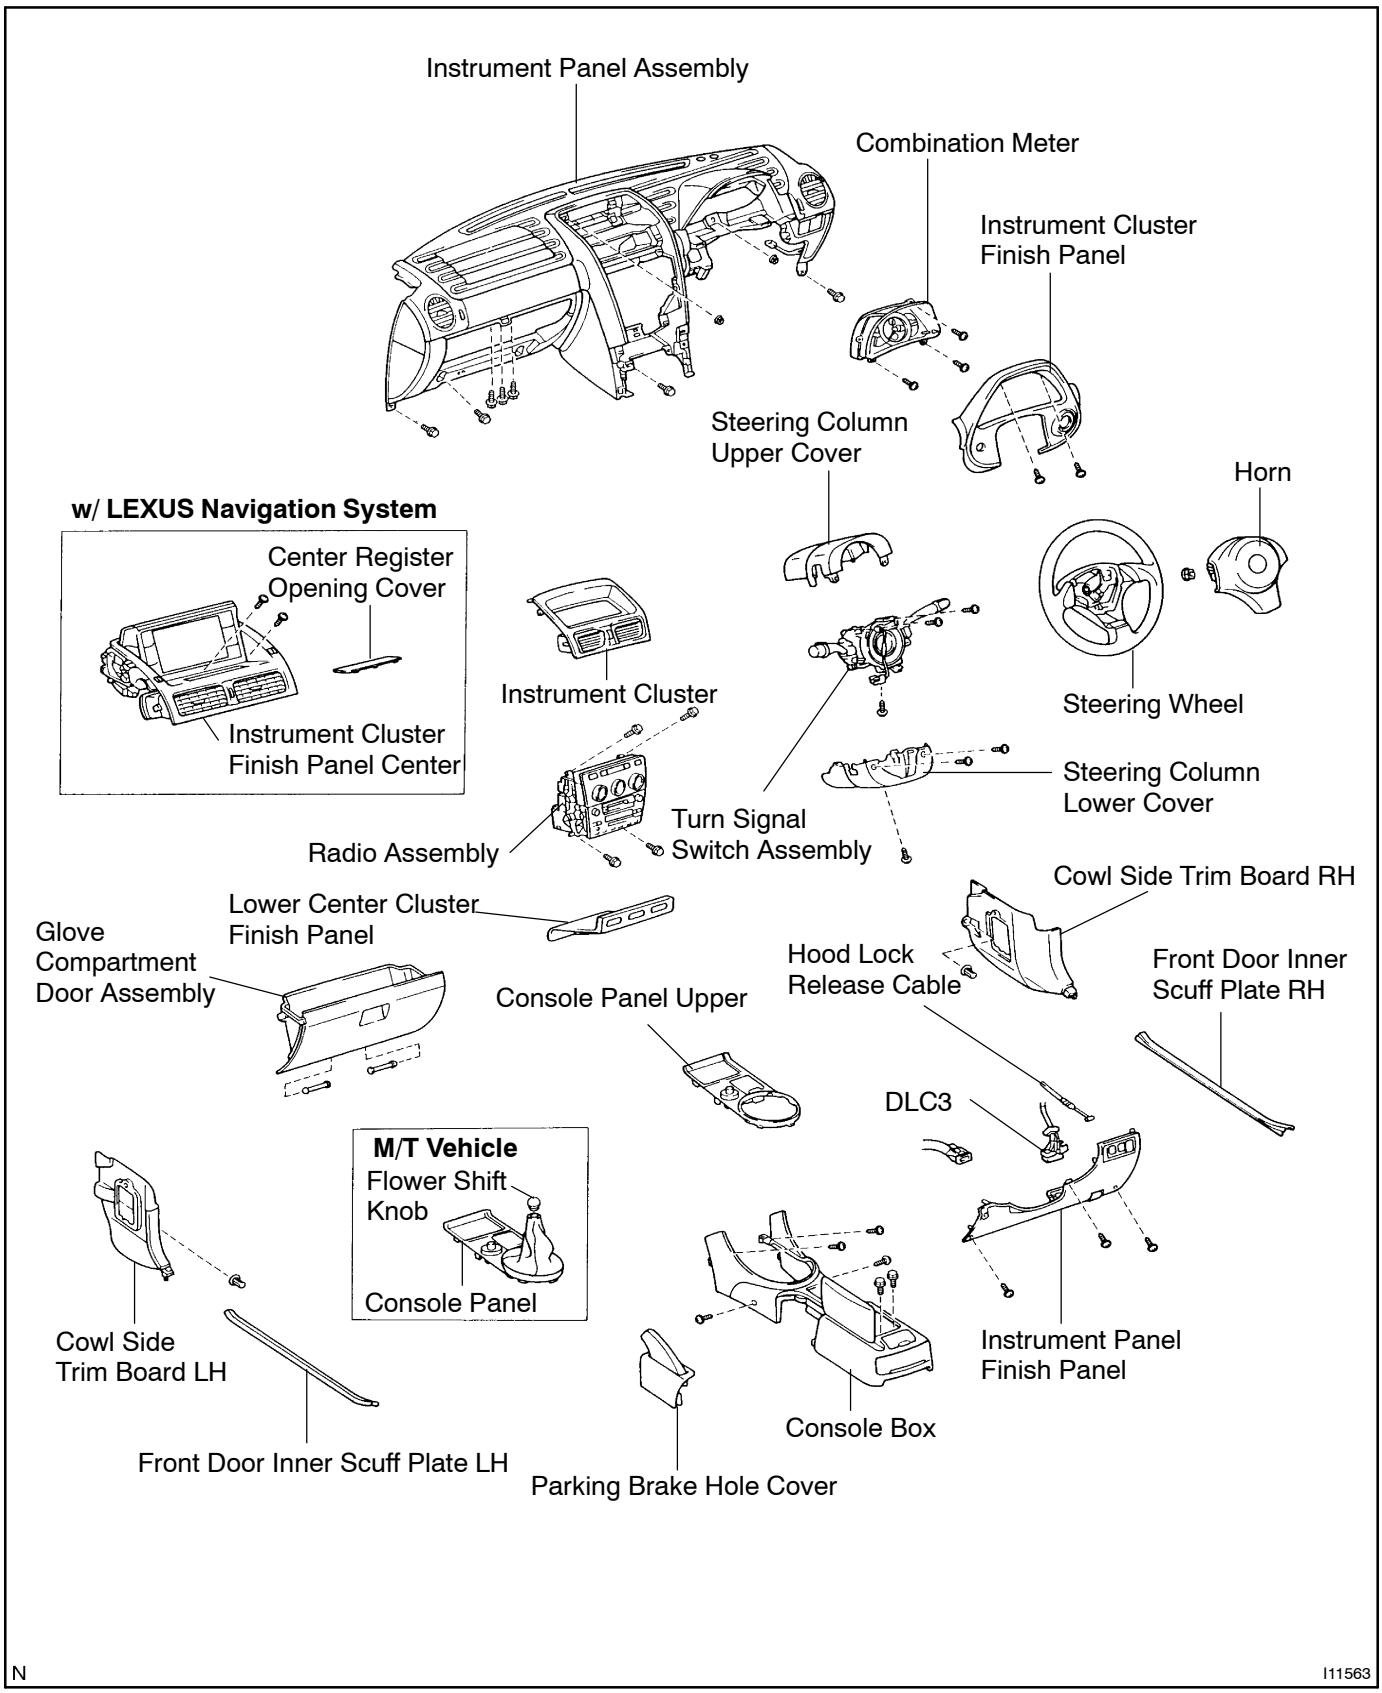

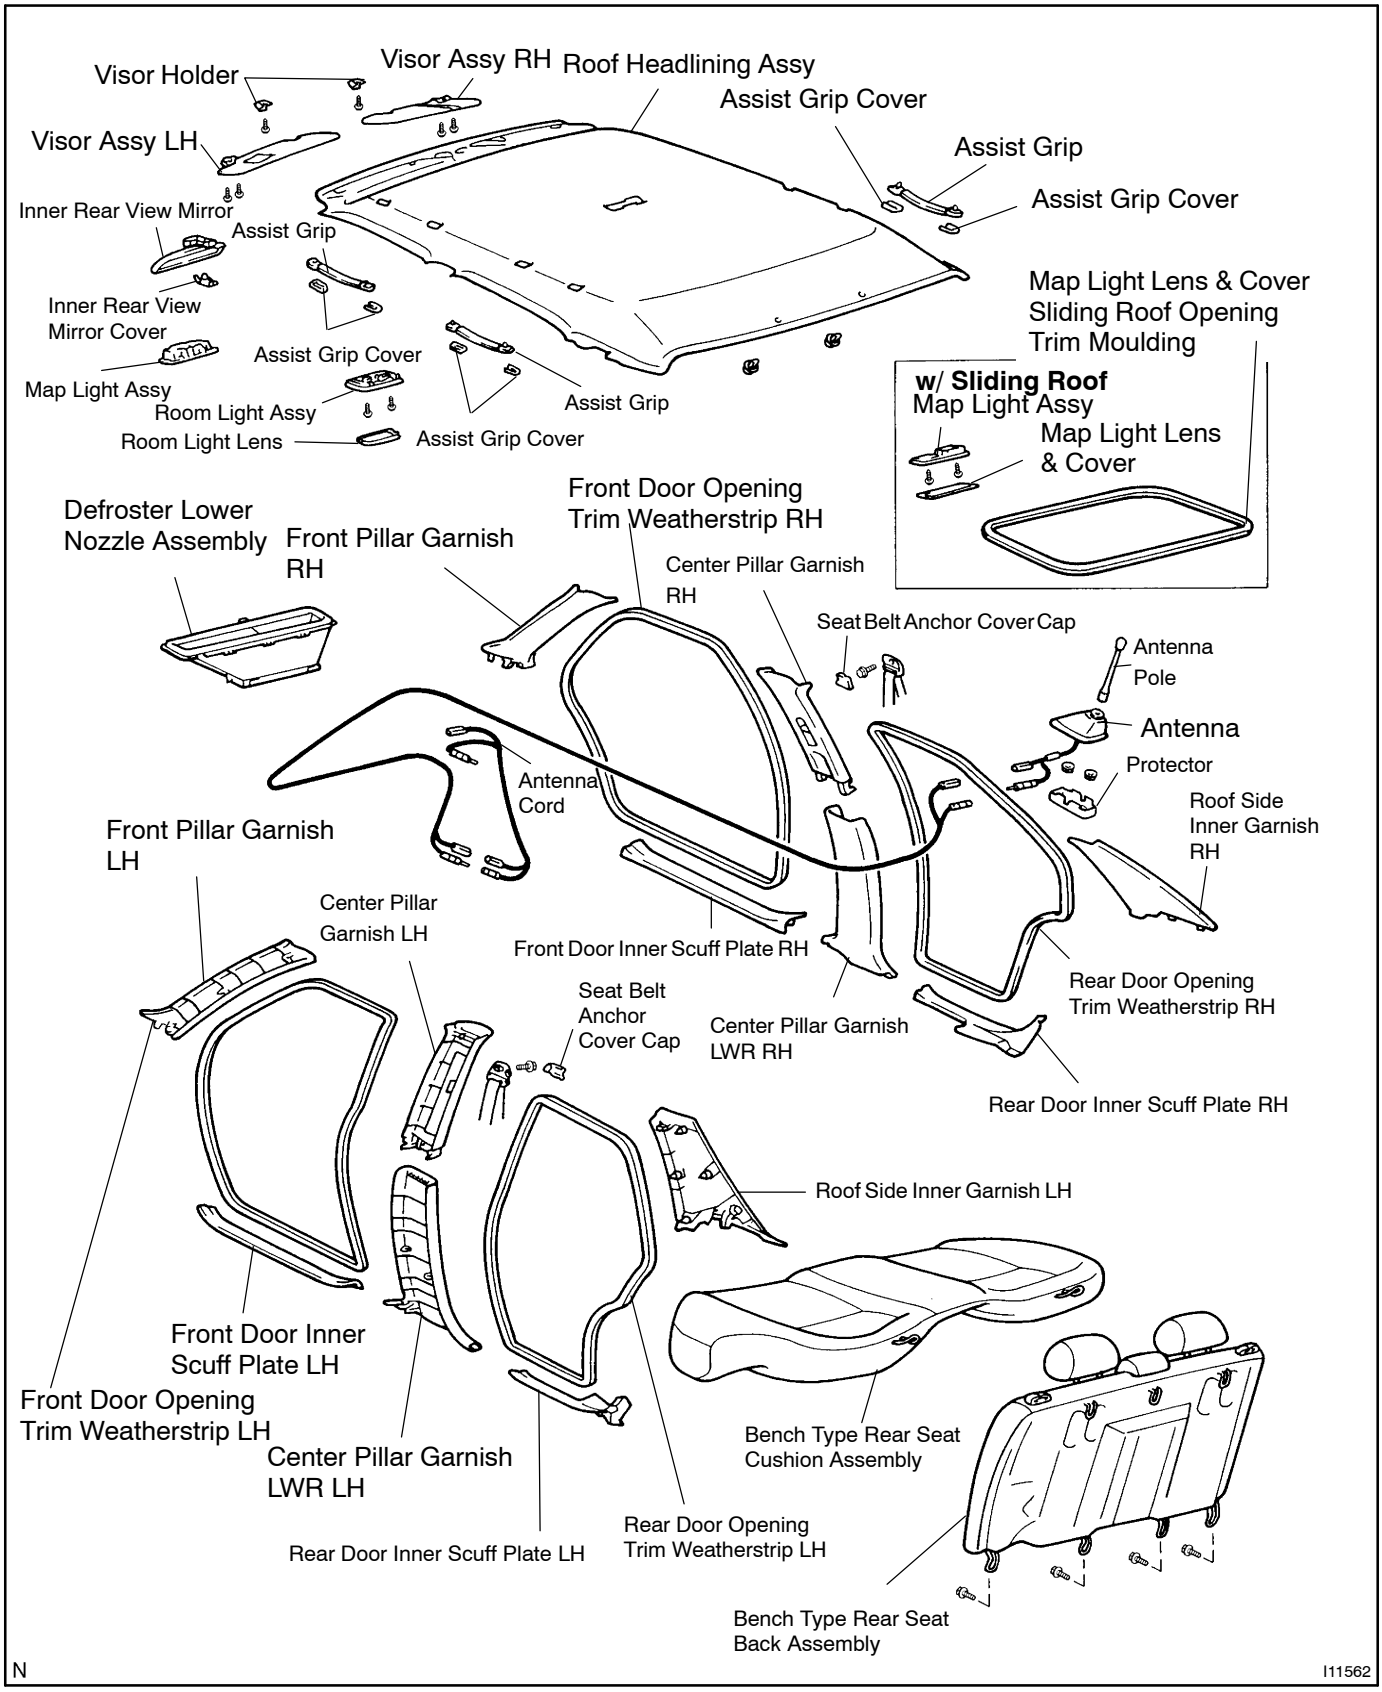
Visor Holder
Visor Assy RH
Roof Headlining Assy
Assist Grip Cover
Visor Assy LH
Assist Grip
Assist Grip Cover
Inner Rear View Mirror
Assist Grip
Inner Rear View Mirror Cover
Map Light Lens & Cover
Sliding Roof Opening Trim Moulding
Assist Grip Cover
Map Light Assy
Room Light Assy
Assist Grip
Room Light Lens
Assist Grip Cover
w/ Sliding Roof
Map Light Assy
Map Light Lens & Cover
Defroster Lower Nozzle Assembly
Front Pillar Garnish RH
Front Door Opening Trim Weatherstrip RH
Center Pillar Garnish RH
Seat Belt Anchor Cover Cap
Antenna
Pole
Antenna
Protector
Antenna Cord
Roof Side Inner Garnish RH
Front Pillar Garnish LH
Center Pillar Garnish LH
Front Door Inner Scuff Plate RH
Rear Door Opening Trim Weatherstrip RH
Seat Belt Anchor Cover Cap
Center Pillar Garnish LWR RH
Rear Door Inner Scuff Plate RH
Roof Side Inner Garnish LH
Front Door Inner Scuff Plate LH
Front Door Opening Trim Weatherstrip LH
Center Pillar Garnish LWR LH
Bench Type Rear Seat Cushion Assembly
Rear Door Opening Trim Weatherstrip LH
Rear Door Inner Scuff Plate LH
Bench Type Rear Seat Back Assembly
N
I11562