




INDEX	PART NO.	DESCRIPTION	QTY	SEE PAGE
1	QDP005054232	Flexible Shaft Fixed Support	1	
2	61009918	Transmission Control Assembly	1	
3	14244903	Selector Rocker	1	
4	61009946	Flexible Shaft	1	
5	61009945	Flexible Shaft	1	
6	12908572	Flexible Shaft Tube Clamp	1	27-4
7	A229900004636	Tube Clip	2	
8	A229900004637	Pipe Clamp Sleeve	2	
9	A229900004673	Pipe Clamp	2	
10	60265718	Bolt	6	
11	60078169	Nut	4	
12	13072581	Coil	1	
13	14337842	Interim Plate	1	
14	14257136	Dust Cover Bracket Assembly	1	27-6
15	QDP005684100	Dust Cover Assembly	1	
16	60265720	Bolt	4	
17	QDP005126195	Transmission Control Rod	1	
18	60144915	Bolt	1	
19	151208000111A	Quick Coupler Adapter	2	
20	14223738	Transmission System	1	27-8
21	12852977	Left Side Bracket	2	27-10
22	120102990043A	Nut	1	
23	120101060073A	Bolt	4	
24	60265721	Bolt	1	

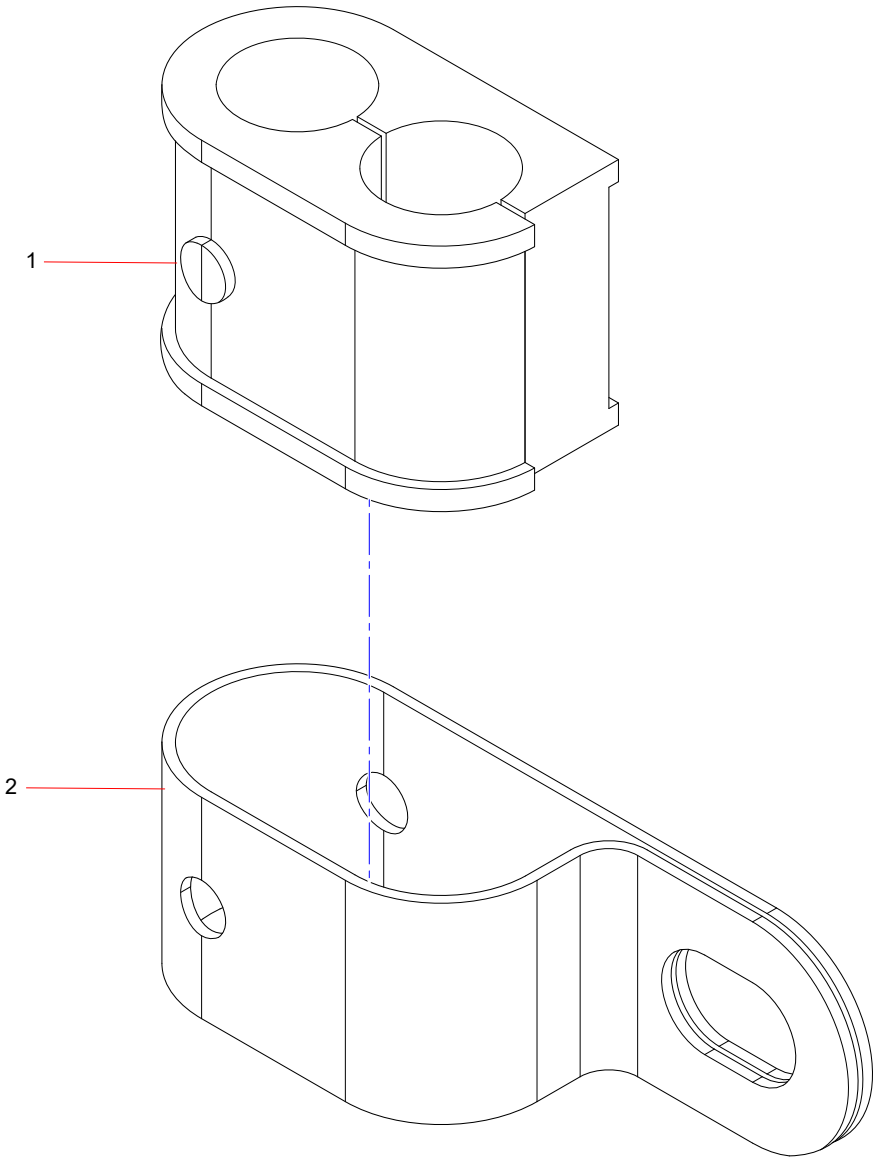


INDEX	PART NO.	DESCRIPTION	QTY	SEE PAGE
1	12908573	rubber pad	1	
2	12908574	Upper Spacer	1	

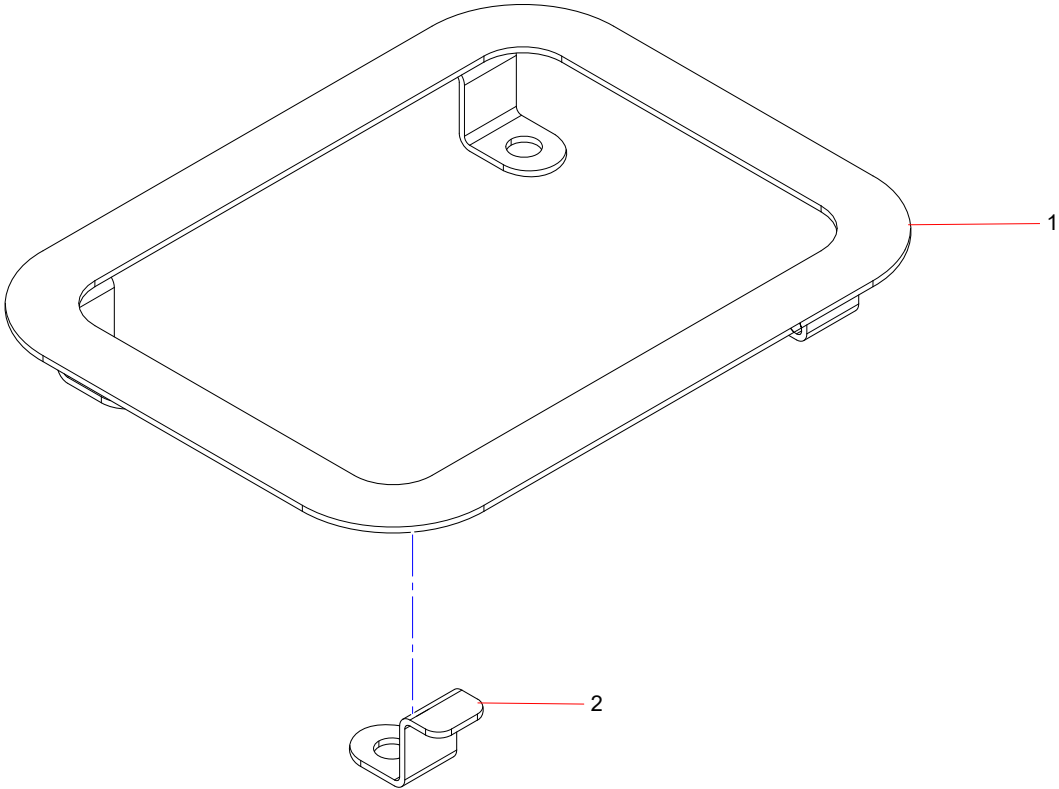


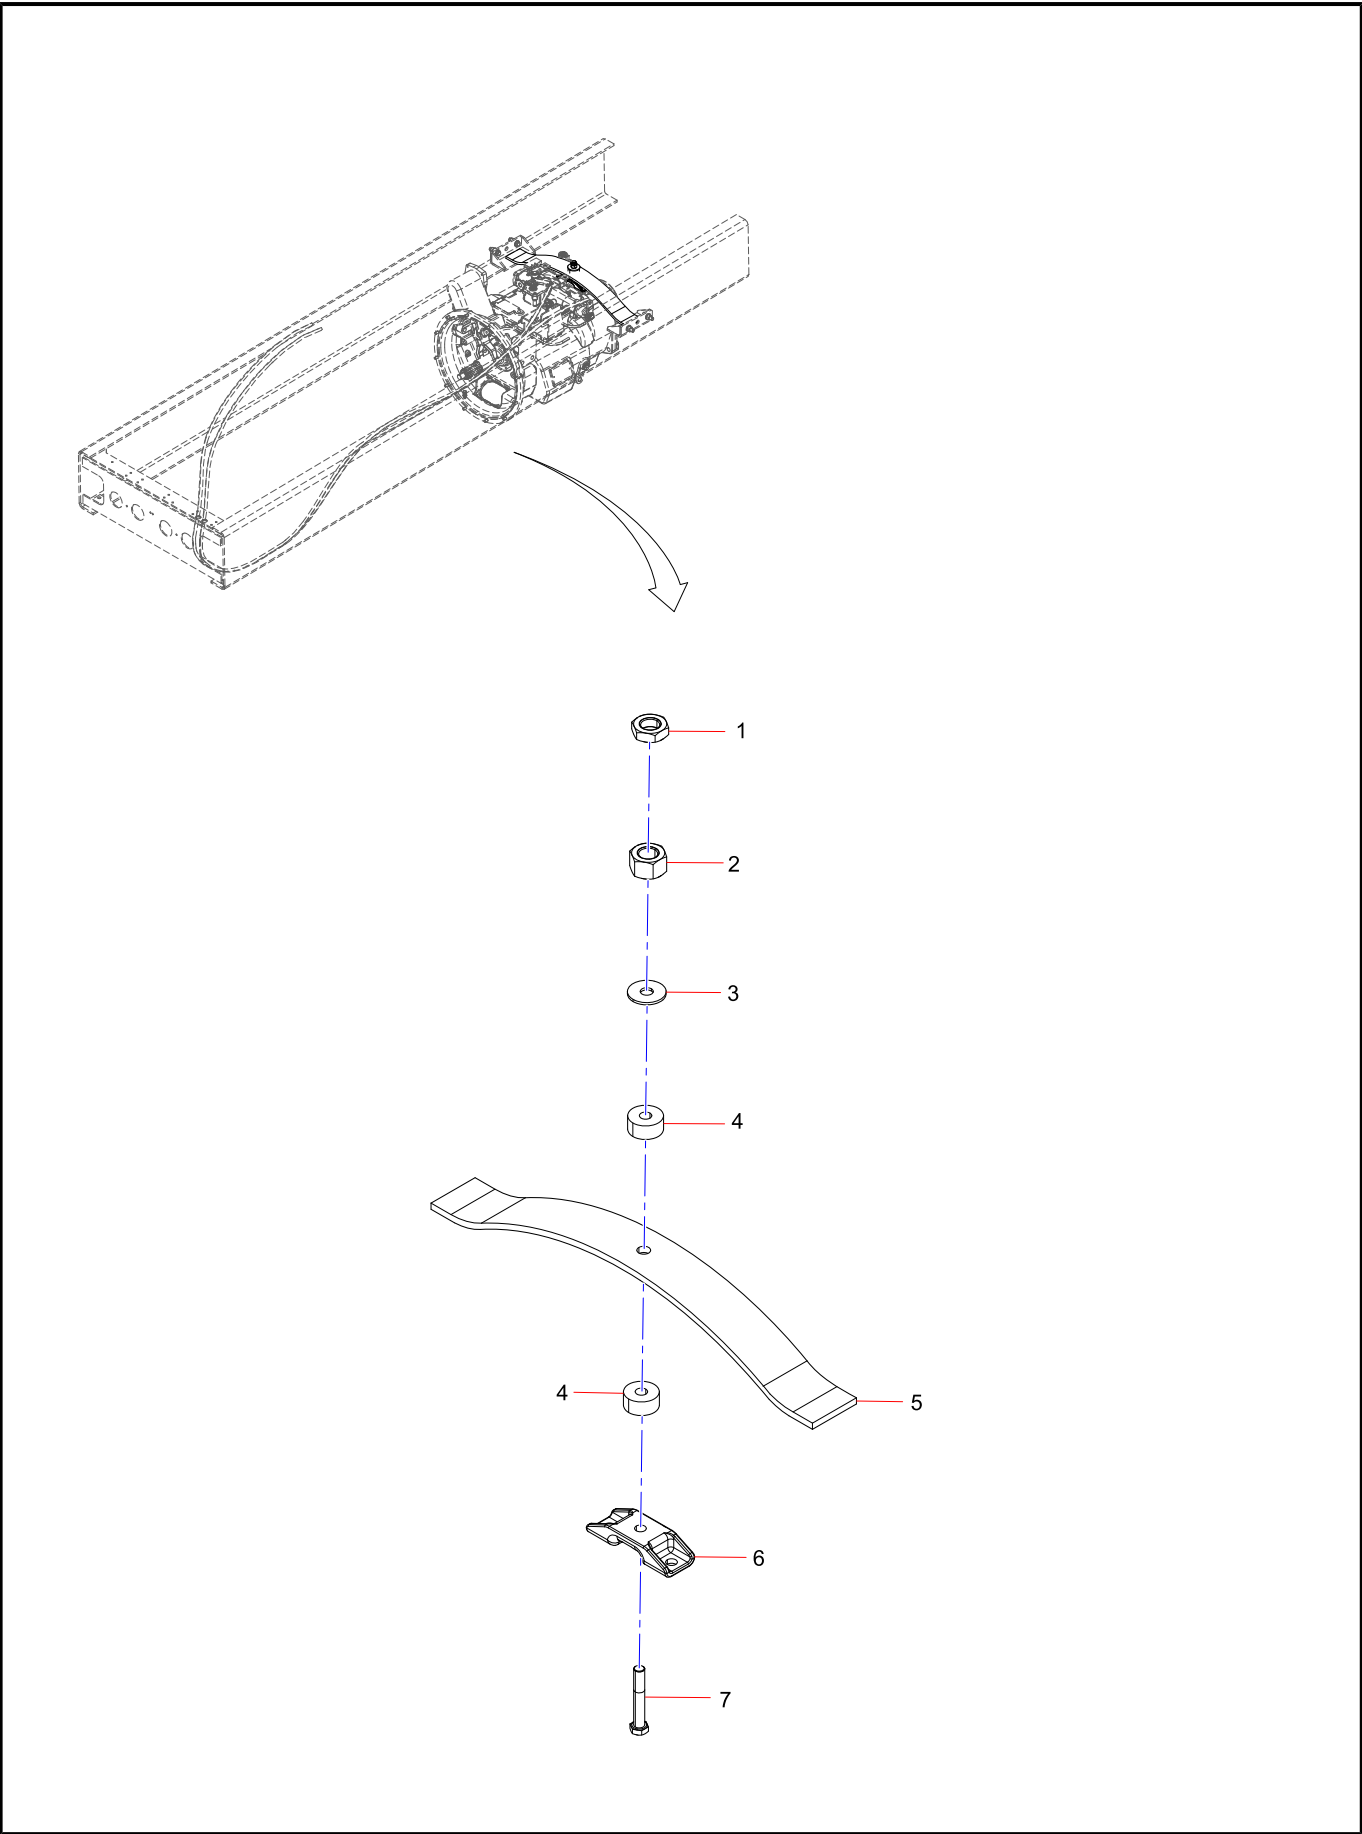

INDEX	PART NO.	DESCRIPTION	QTY	SEE PAGE
1	A210309000014	Nut	1	
2	A210307000040	Nut	1	
3	A210404000006	Washer	1	
4	A229900004242	Radiator Suspension Cushion	2	
5	A820101026089	Elastic Beam	1	
6	11643114	Intermediate Support	1	
7	A210111000447	Bolt	1	

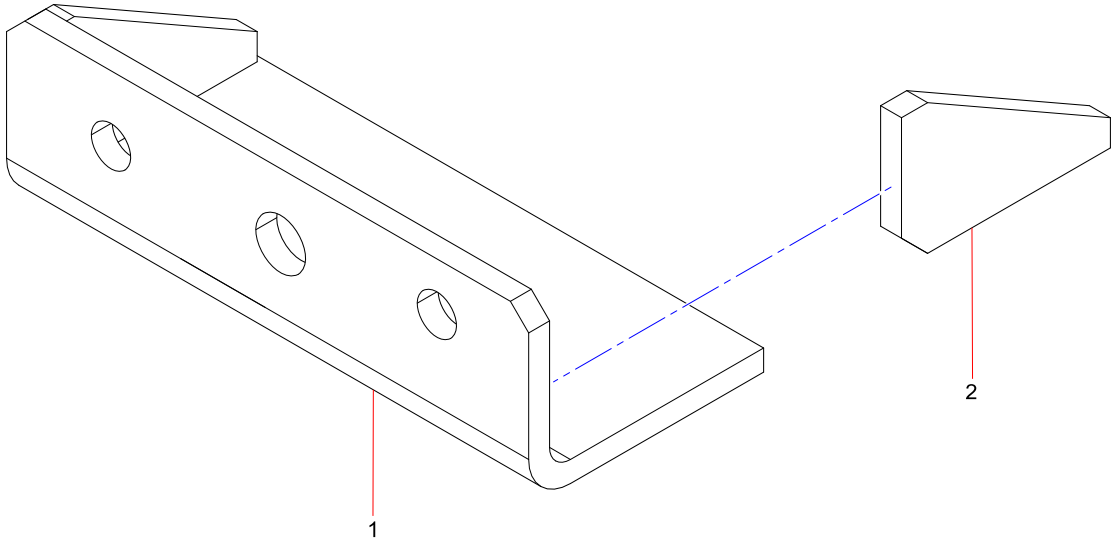


INDEX	PART NO.	DESCRIPTION	QTY	SEE PAGE
1	12852976	Bracket Base Plate	1	
2	A820101338759	Supporting Plate	2	

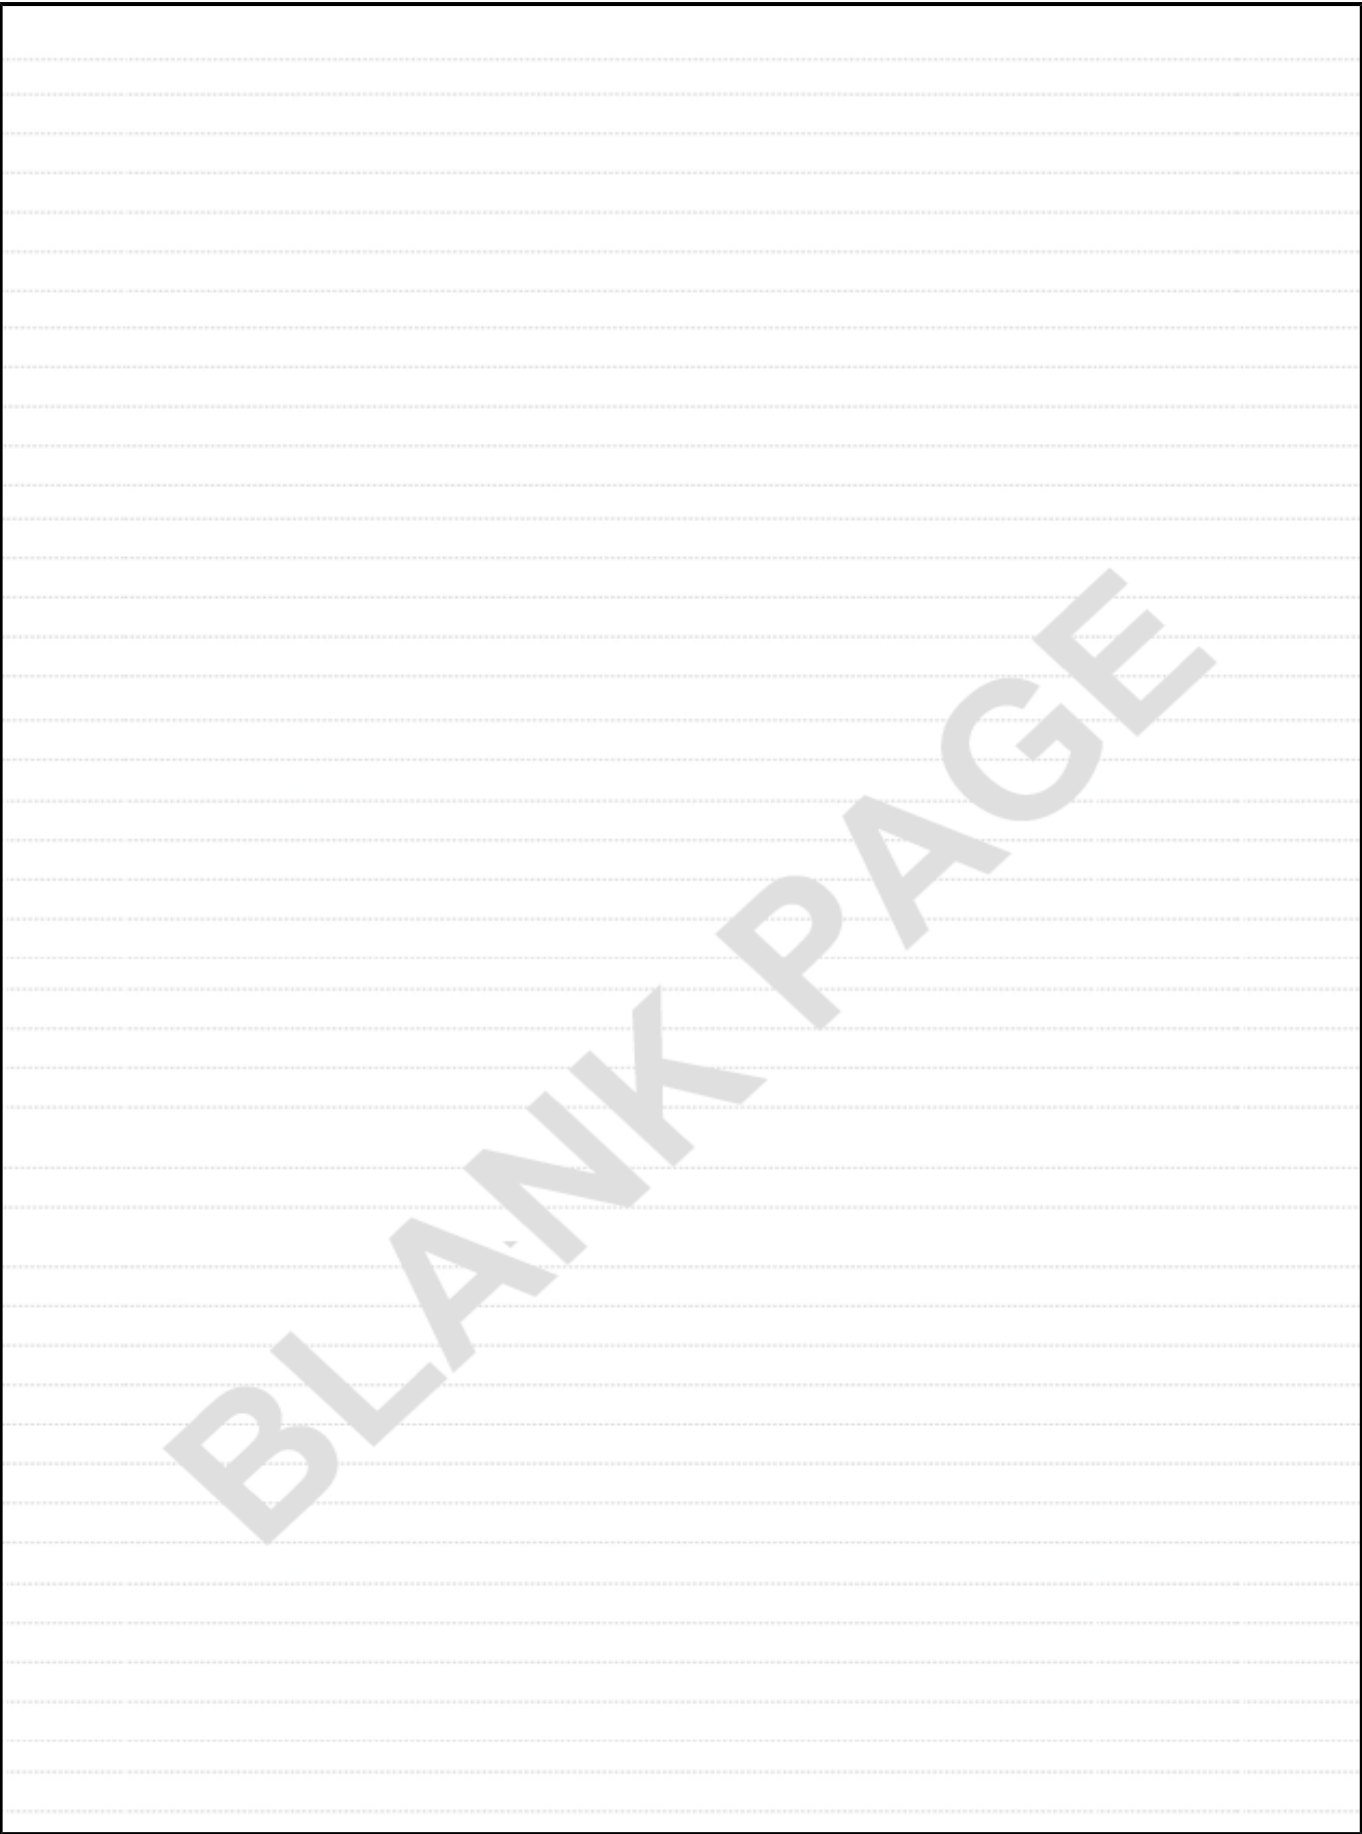


Group 28

clutch system

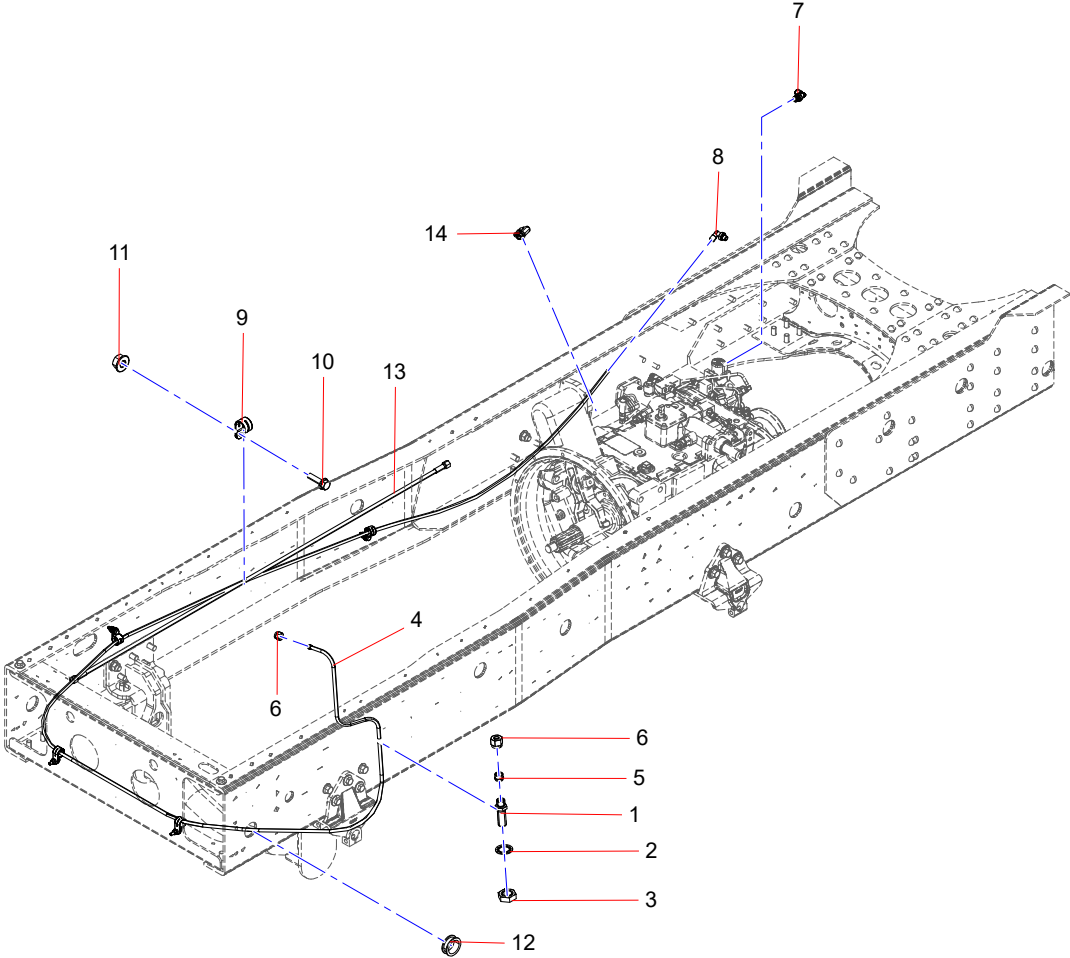


INDEX	PART NO.	DESCRIPTION	QTY	SEE PAGE
1	A210747300002	Joint Body	1	
2	A210431000008	Washer	1	
3	A210338000003	Nut	1	
4	13007536	Main Pump Steel Pipe	1	
5	60197003	Clamp Sleeve	2	
6	A210306000011	Nut	2	
7	61009637	Elbow Union Connector	1	
8	A229900005611	Elbow Union Connector	1	
9	A229900004673	Pipe Clamp	5	
10	60265718	Bolt	5	
11	60078169	Nut	5	
12	A820606030809	Cross Coil	1	
13	QDP006864419	hose assembly	1	
14	60333774	Quick Connector	1	

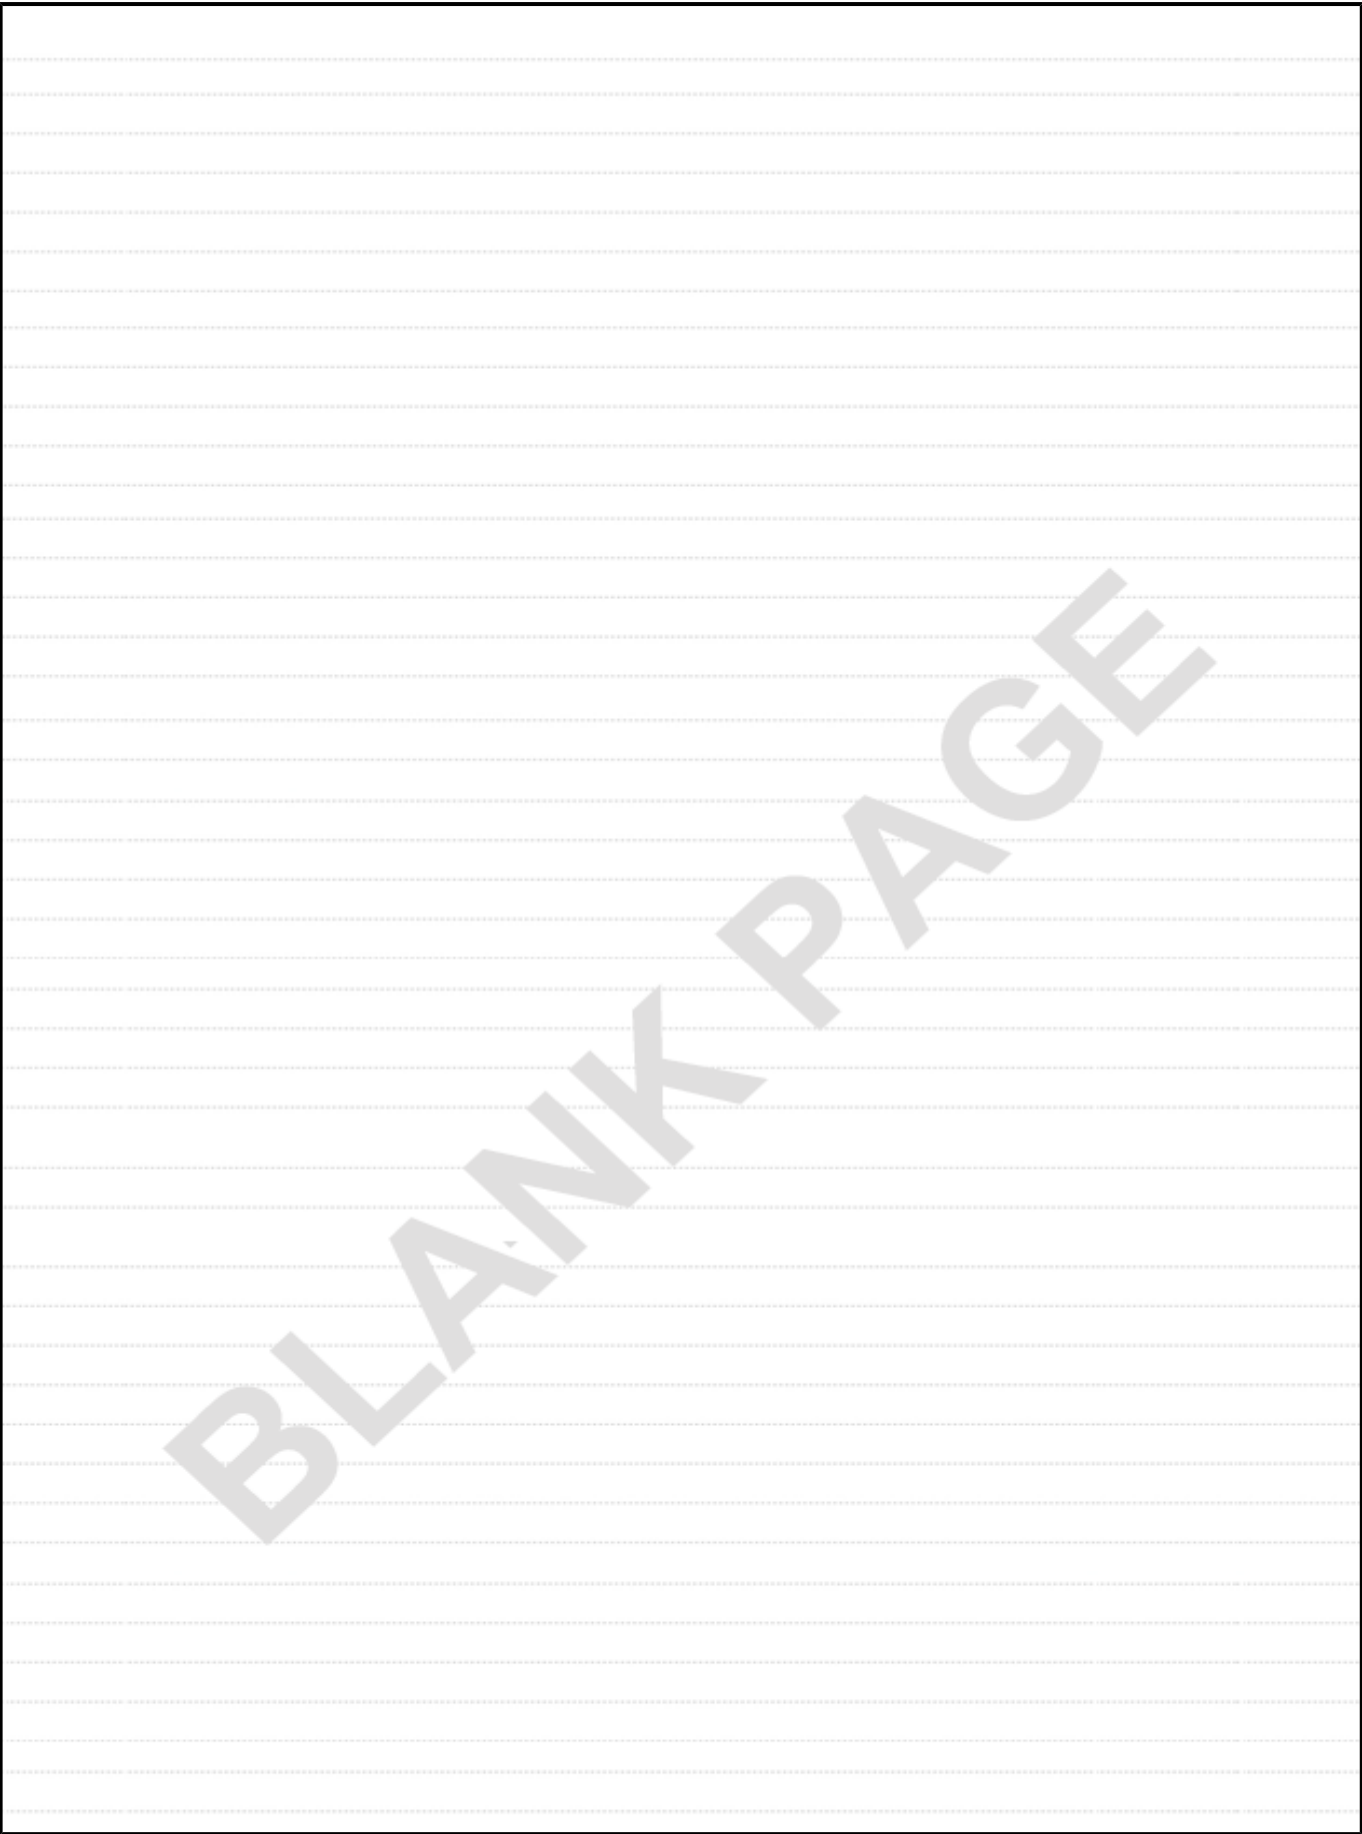



Group 29

Two-shaft wheel dashboard

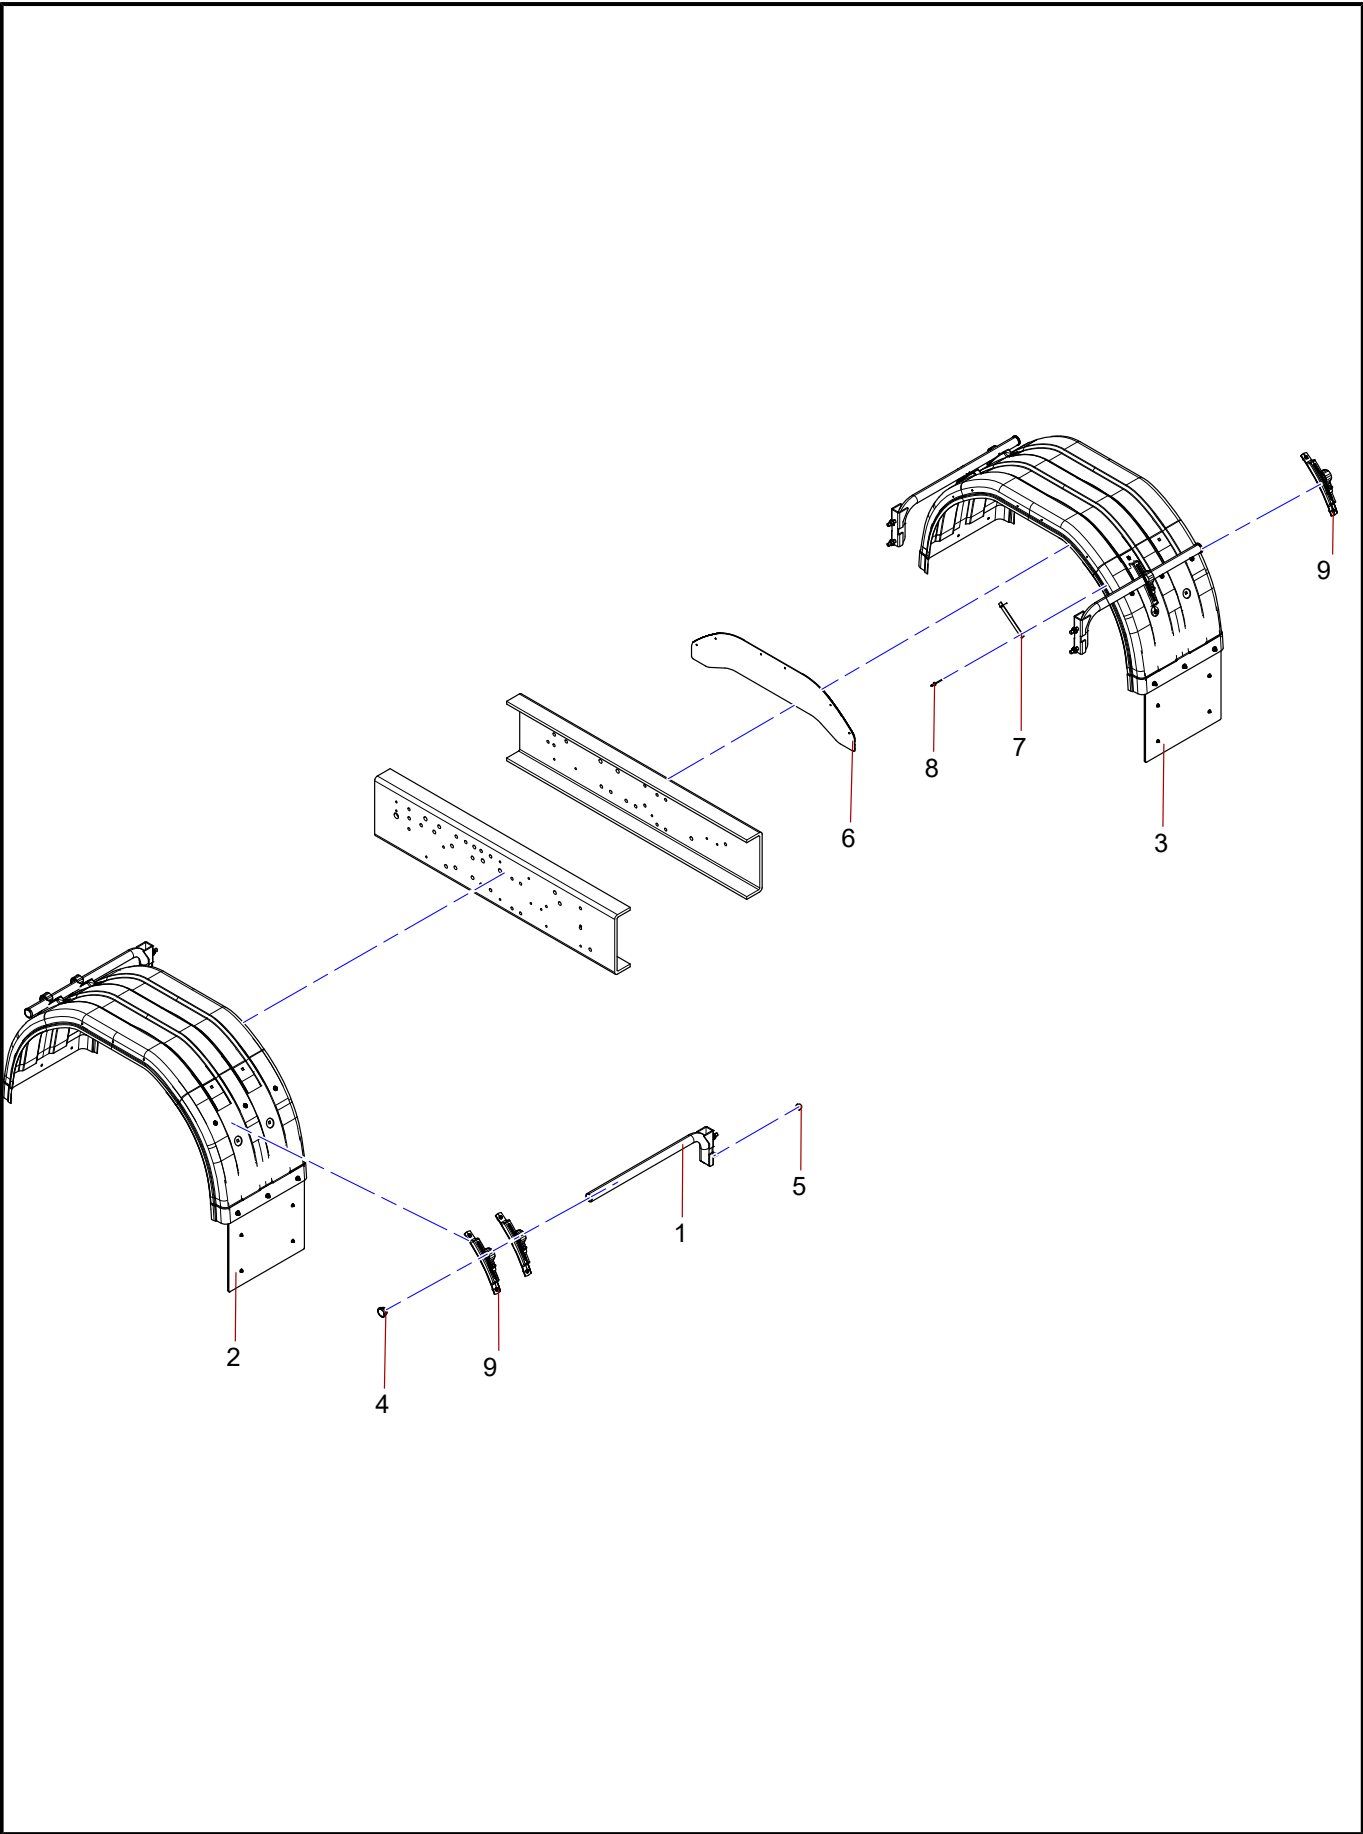


INDEX	PART NO.	DESCRIPTION	QTY	SEE PAGE
1	10488510	Fender Bracket Assembly	4	29-4
2	QDP004755648	Left Front Rear Fender with Splash Protection Assembly	1	29-6
3	QDP004755665	Right Front Rear Fender with Splash Protection Assembly	1	29-8
4	10710823	Gland	4	
5	120102990036A	Nut	8	
6	QDP004755710	Rubber Inner Baffle	2	
7	GJB004700779	Inner Fender Batten	6	
8	A229900002294	Rivet Blind	12	
9	QDP004803953	Adjusting Plate	8	

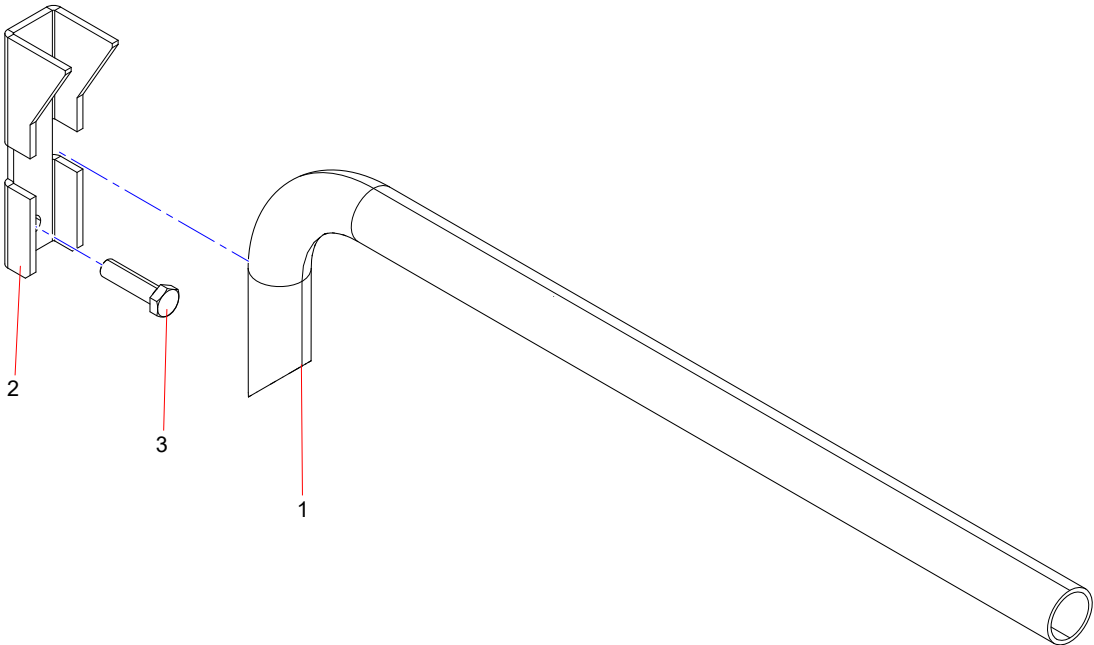

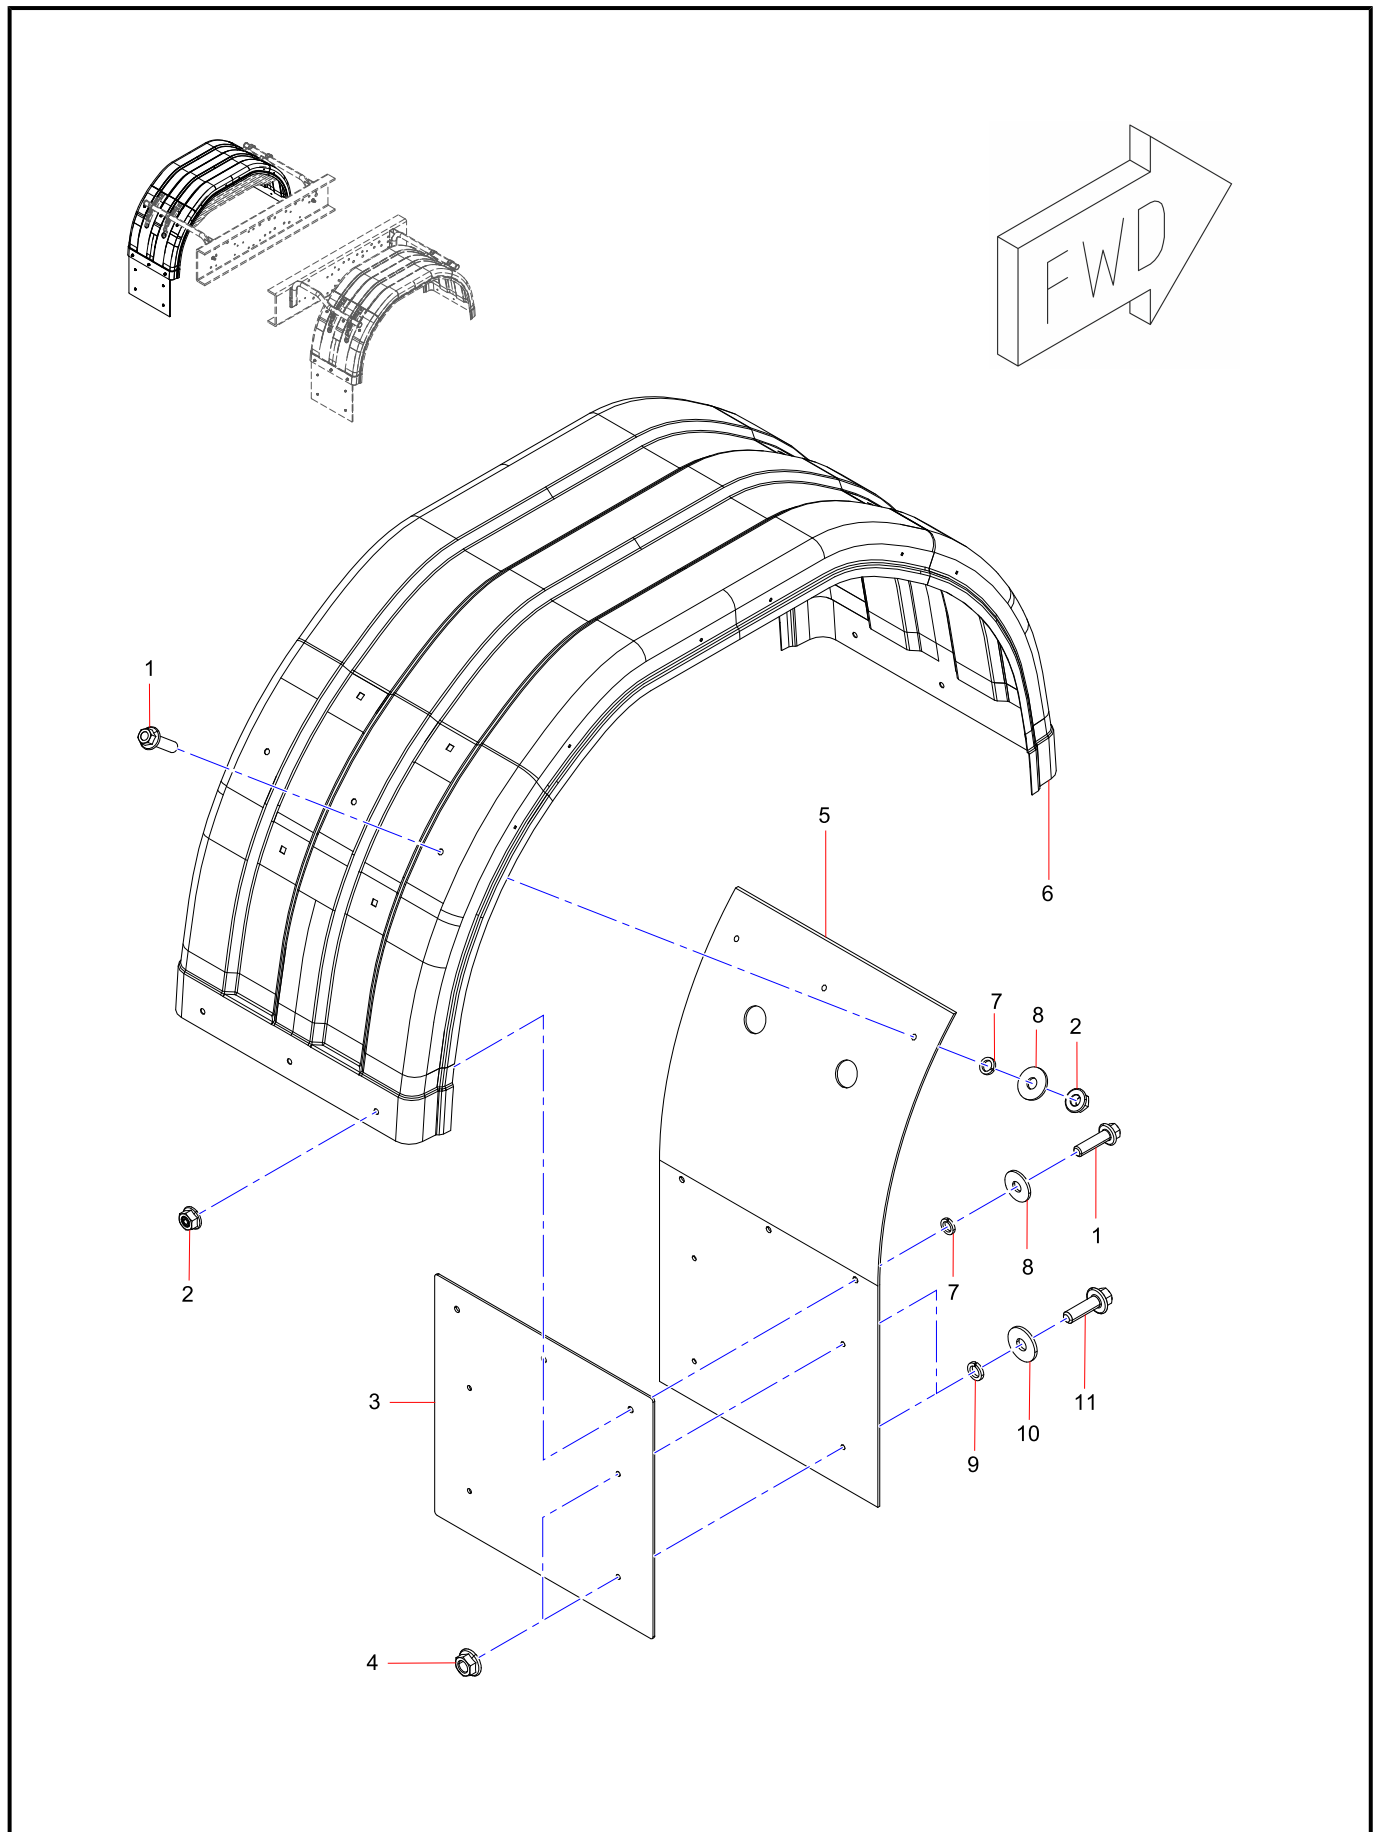


INDEX	PART NO.	DESCRIPTION	QTY	SEE PAGE
1	60144921	Bolt	6	
2	60144926	Nut	6	
3	QDP004690688	Mud Flap	1	
4	60144889	Nut	4	
5	QDP004690687	Anti-splash Rear Baffle	1	
6	QDP004755643	Type Fender	1	
7	A210401000017	Washer	6	
8	A210404000005	Washer	6	
9	A210401000016	Washer	4	
10	A210404000009	Washer	4	
11	60144908	Bolt	4	

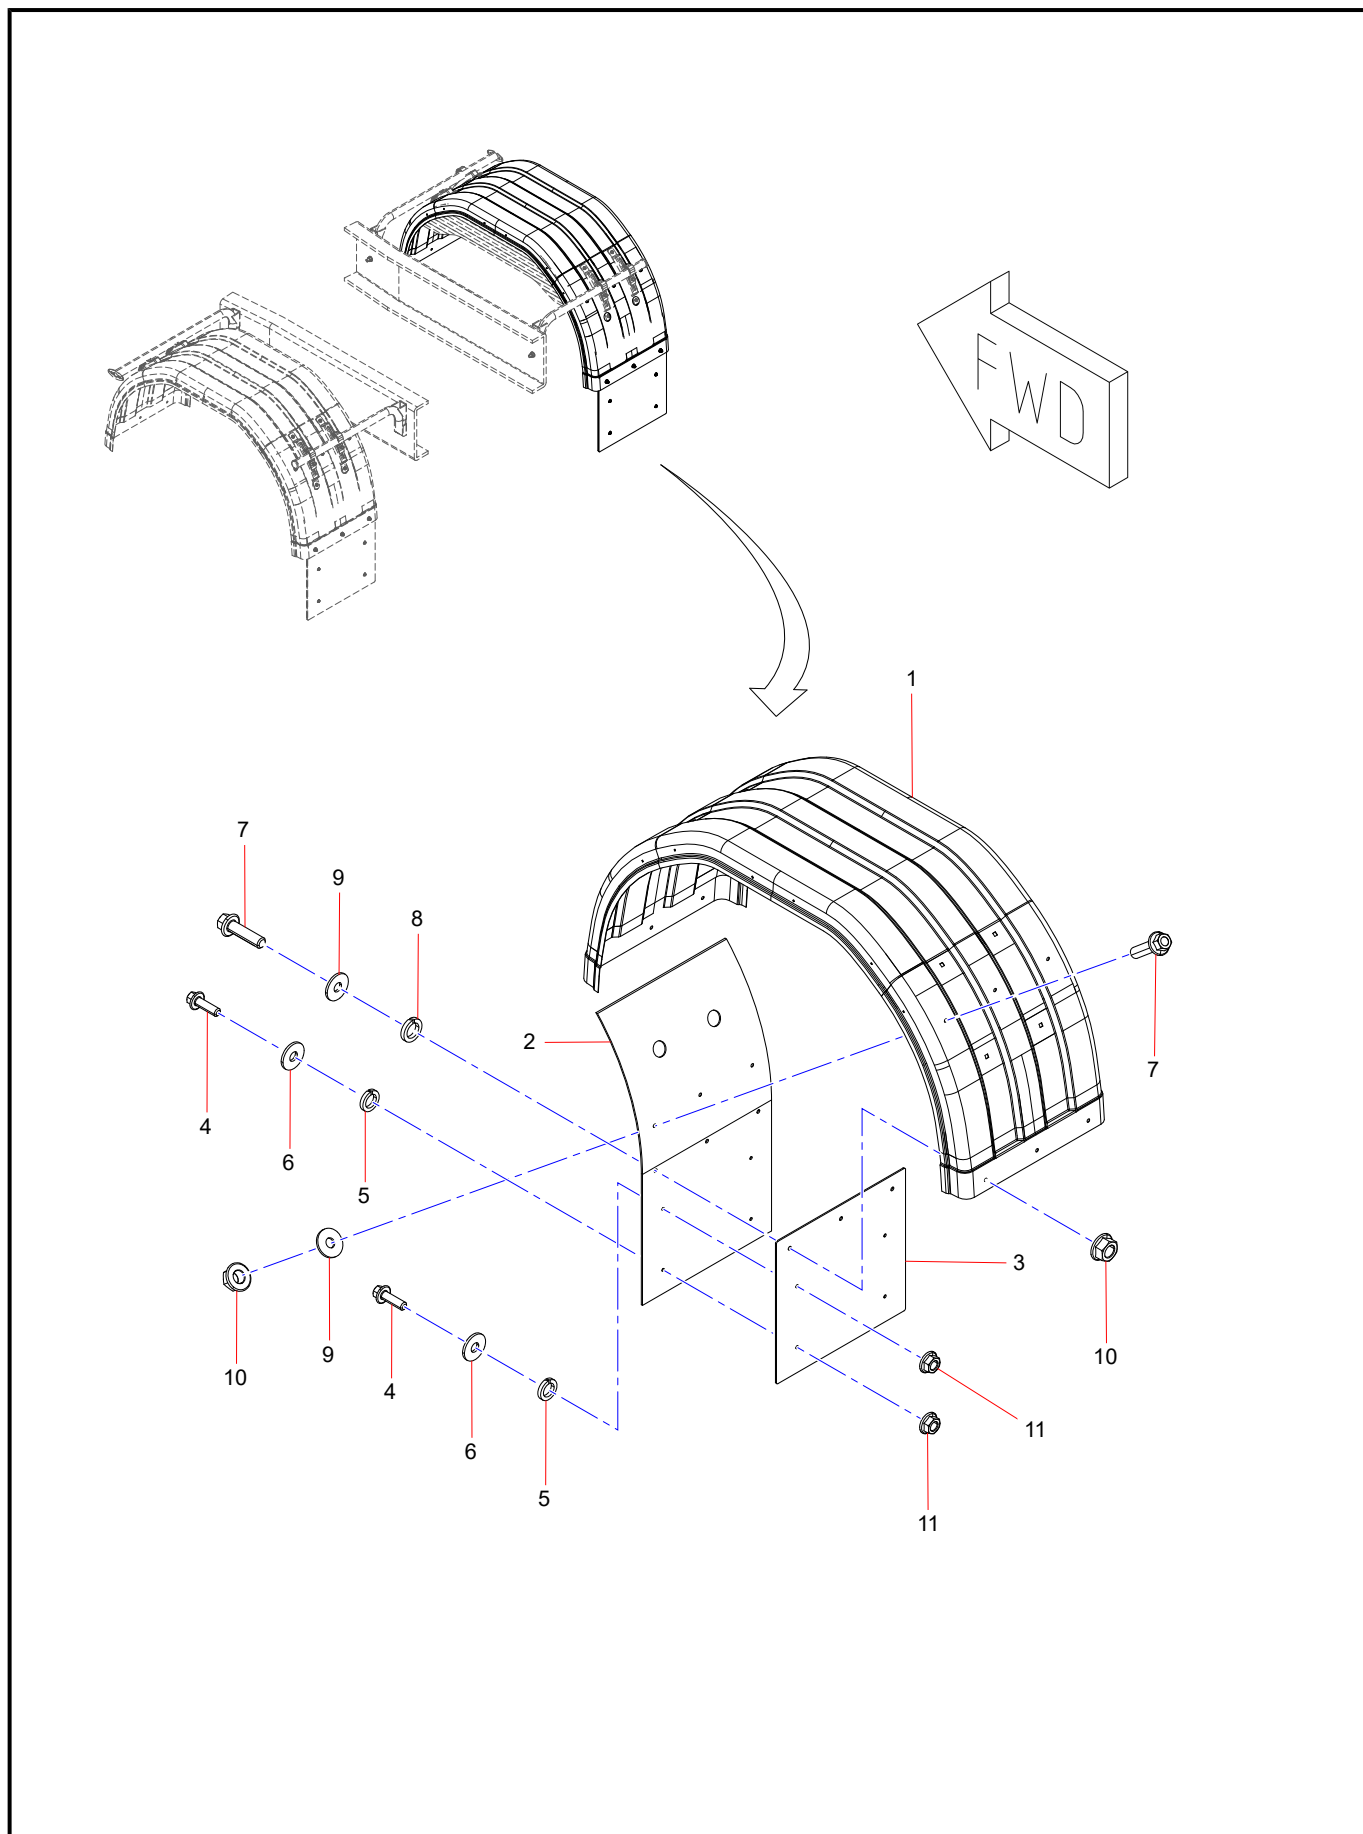


QDP004755665 Right Front Rear Fender with Splash Protection Assembly

INDEX	PART NO.	DESCRIPTION	QTY	SEE PAGE
1	QDP004755643	Type Fender	1	
2	QDP004690687	Anti-splash Rear Baffle	1	
3	QDP004690688	Mud Flap	1	
4	60144908	Bolt	4	
5	A210401000016	Washer	4	
6	A210404000009	Washer	4	
7	60144921	Bolt	6	
8	A210401000017	Washer	6	
9	A210404000005	Washer	6	
10	60144926	Nut	6	
11	60144889	Nut	4	

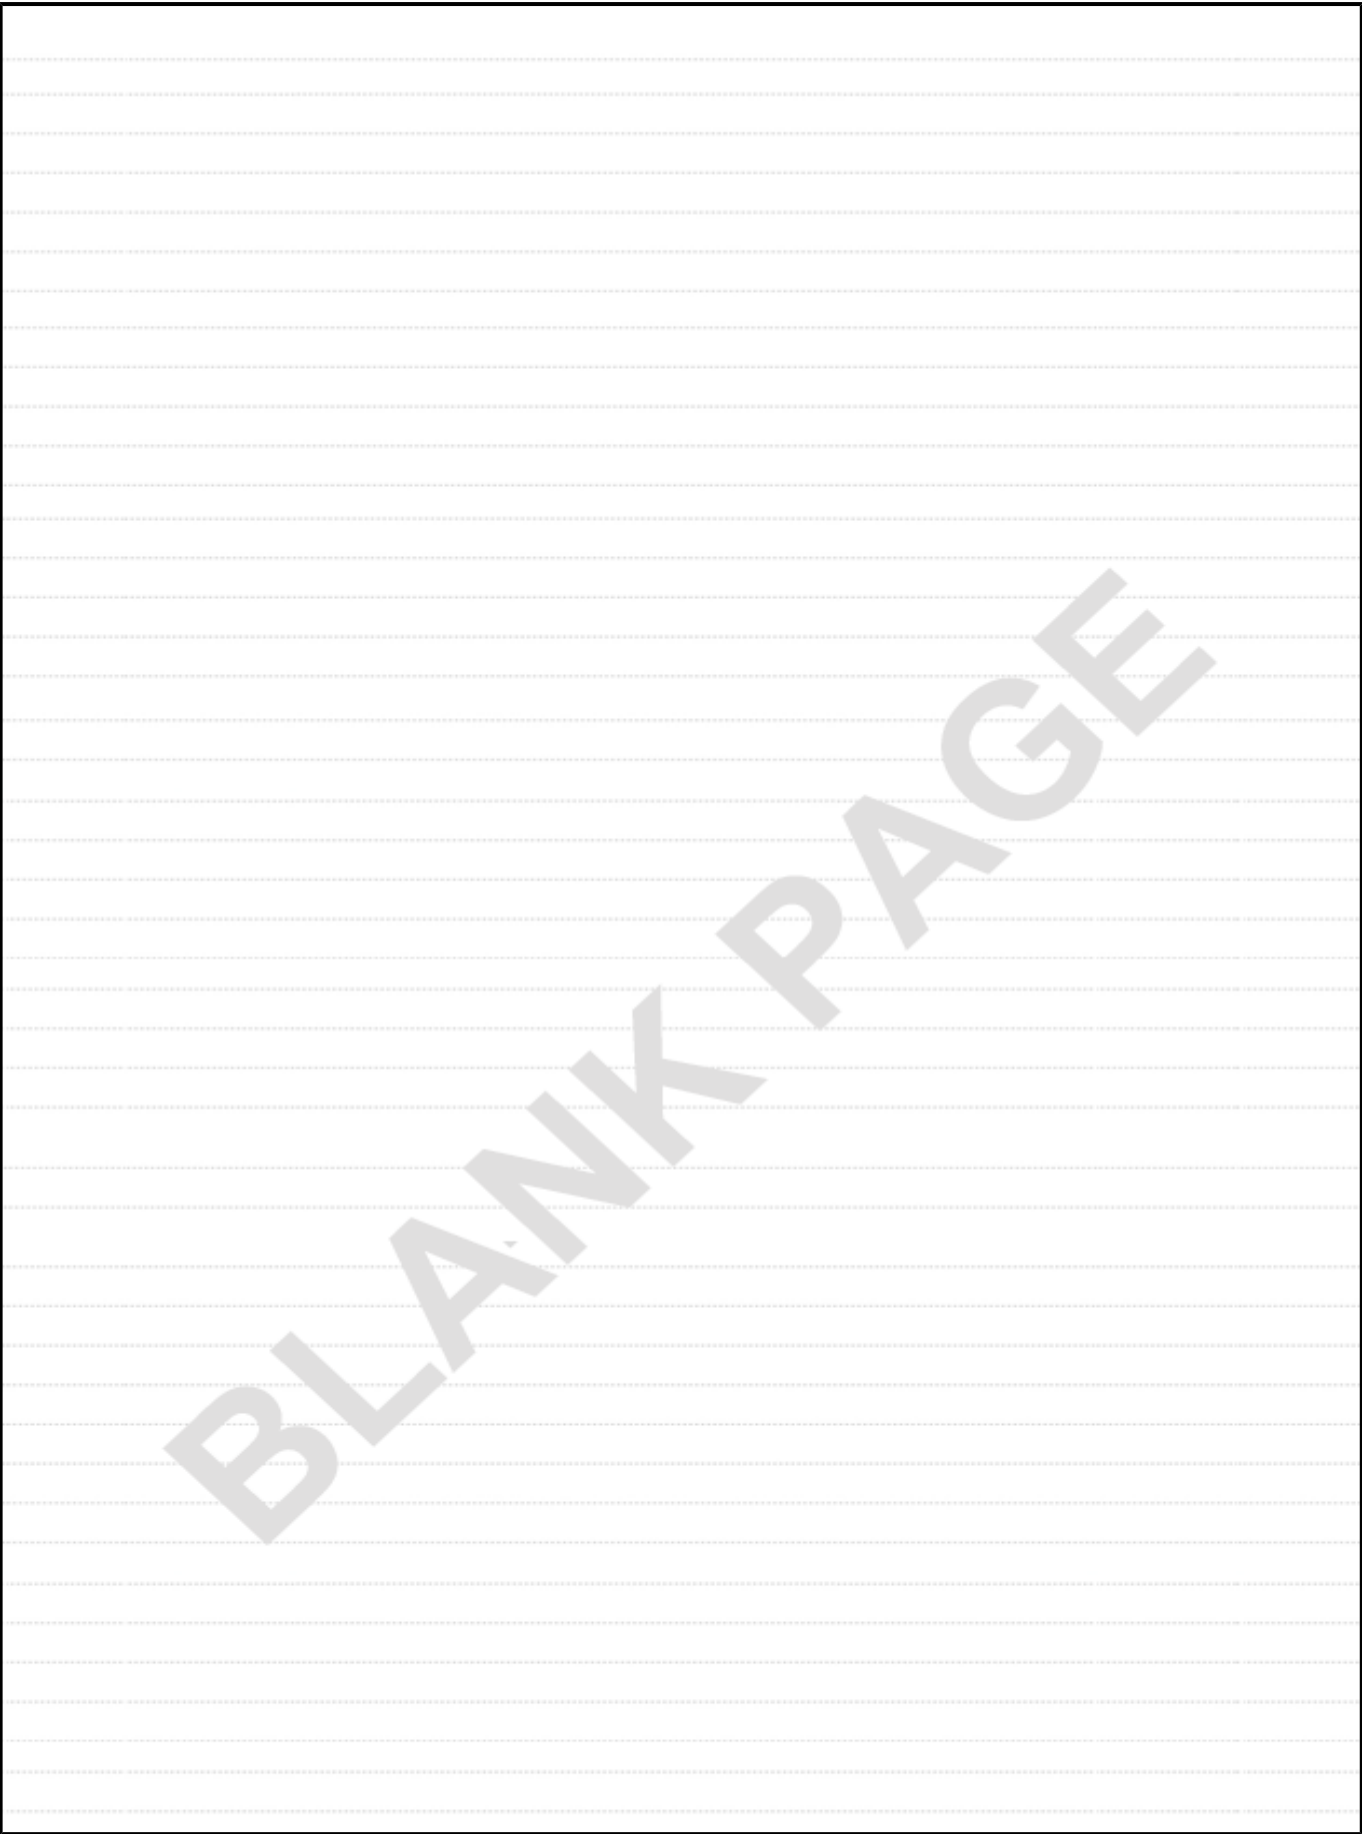


Group 30


Oil supply system

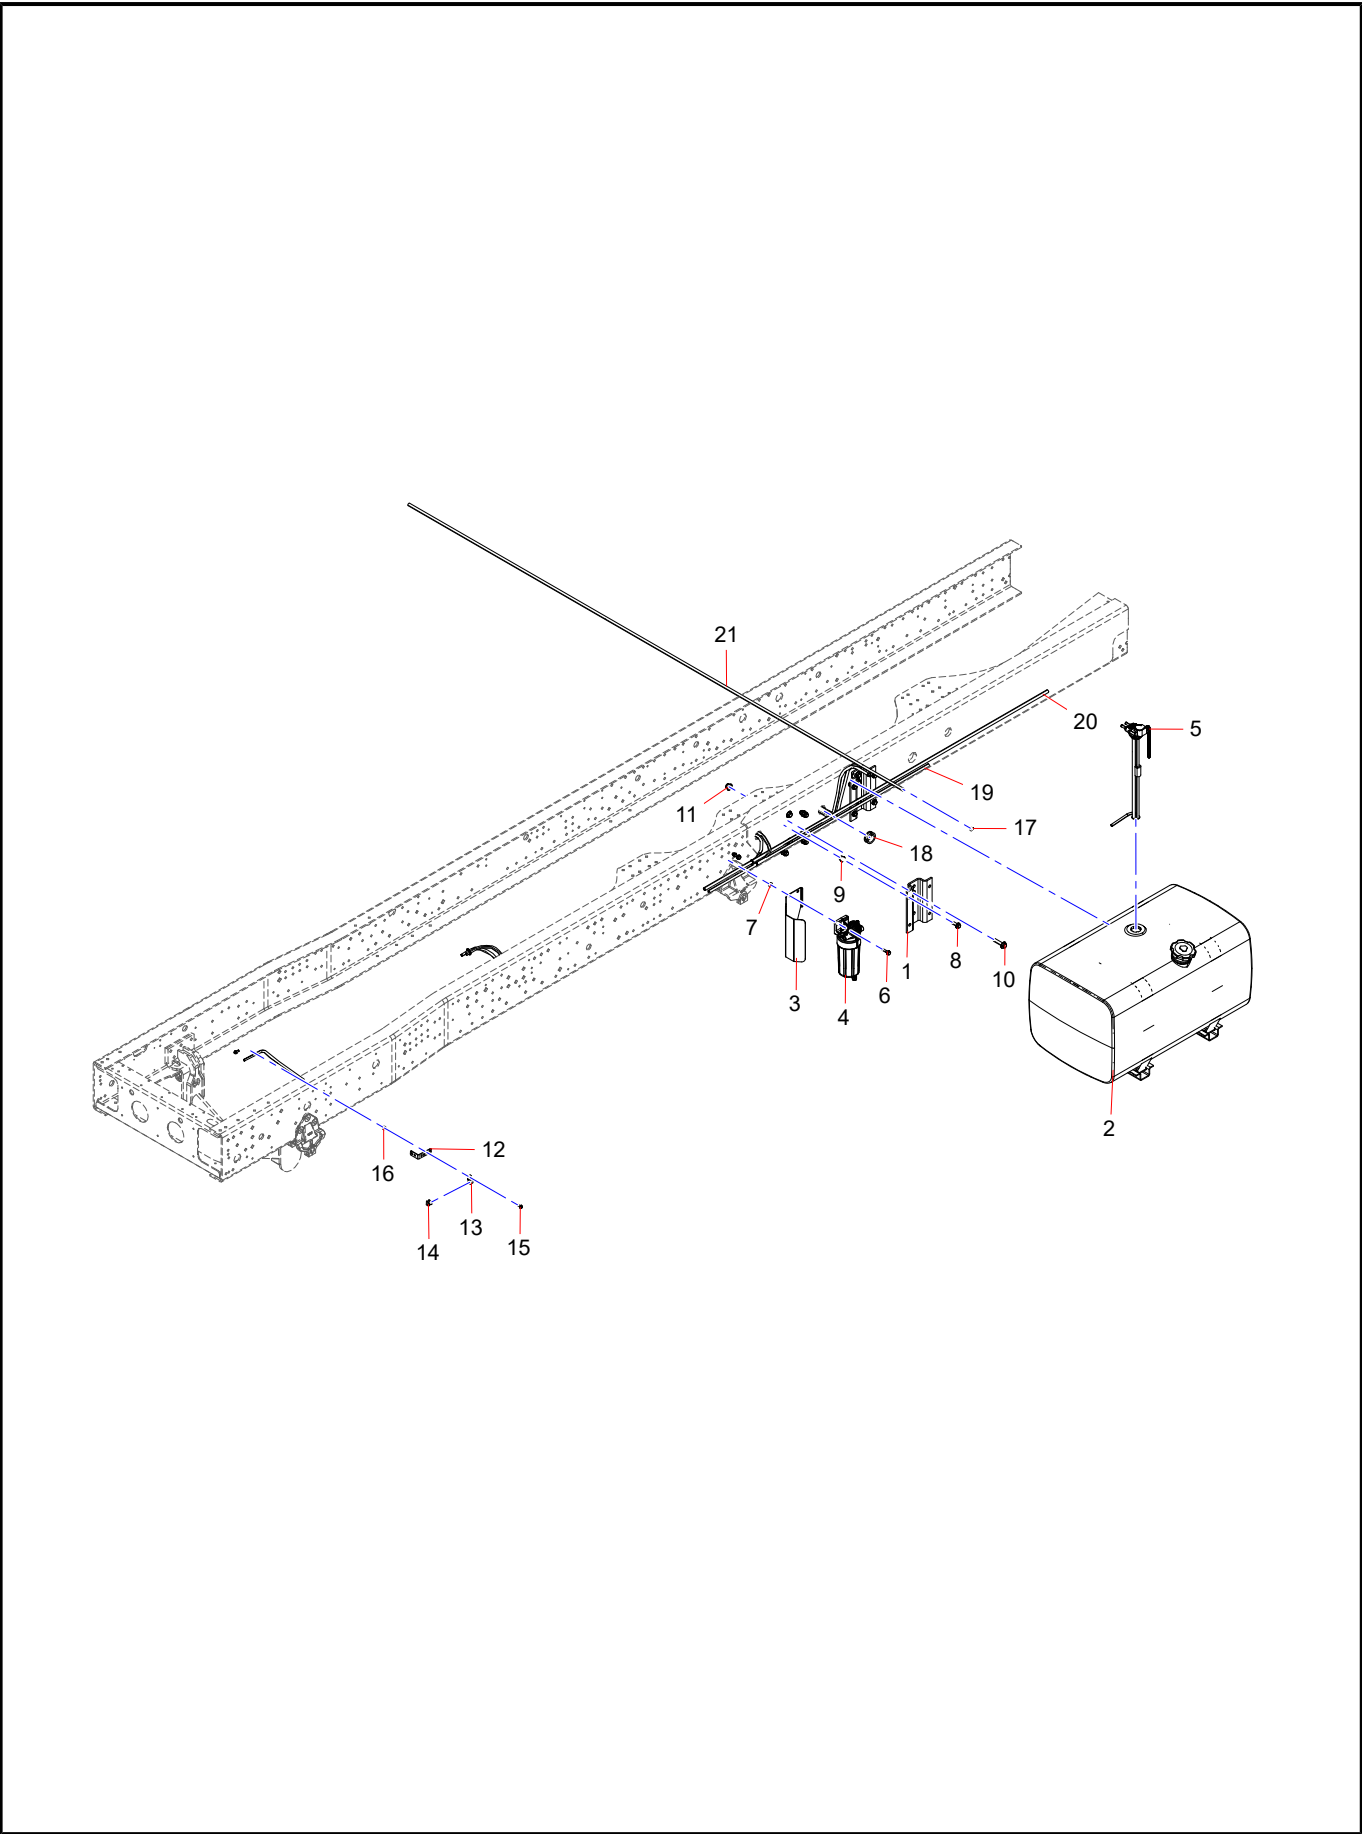


INDEX	PART NO.	DESCRIPTION	QTY	SEE PAGE
1	QDP005015312	Fuel Tank Bracket Transition Bracket	2	
2	11816281	Fuel Tank Module	1	30-4
3	QDP004819378	Oil water separator baffle	1	
4	60358718	Oil Water Separator	1	30-6
5	QDP005534098	Level sensor module	1	30-8
6	60265733	Bolt	2	
7	61003891	Nut	2	
8	120101060069A	Hexagon Head Bolt	8	
9	61028577	Nut	8	
10	60210230	Bolt	6	
11	61028566	Nut	6	
12	13546545	Non-bearing General Support	1	
13	A229900004636	Tube Clip	1	
14	A229900004637	Pipe Clamp Sleeve	1	
15	60144915	Bolt	2	
16	60078169	Nut	1	
17	60202895	Hose Clamp	6	
18	A820606030809	Cross Coil	2	
19	QDP004660499	Diesel Fil	1	
20	12329139	Diesel Filter Outlet Line	1	
21	QDP004660890	Return Tube	1	

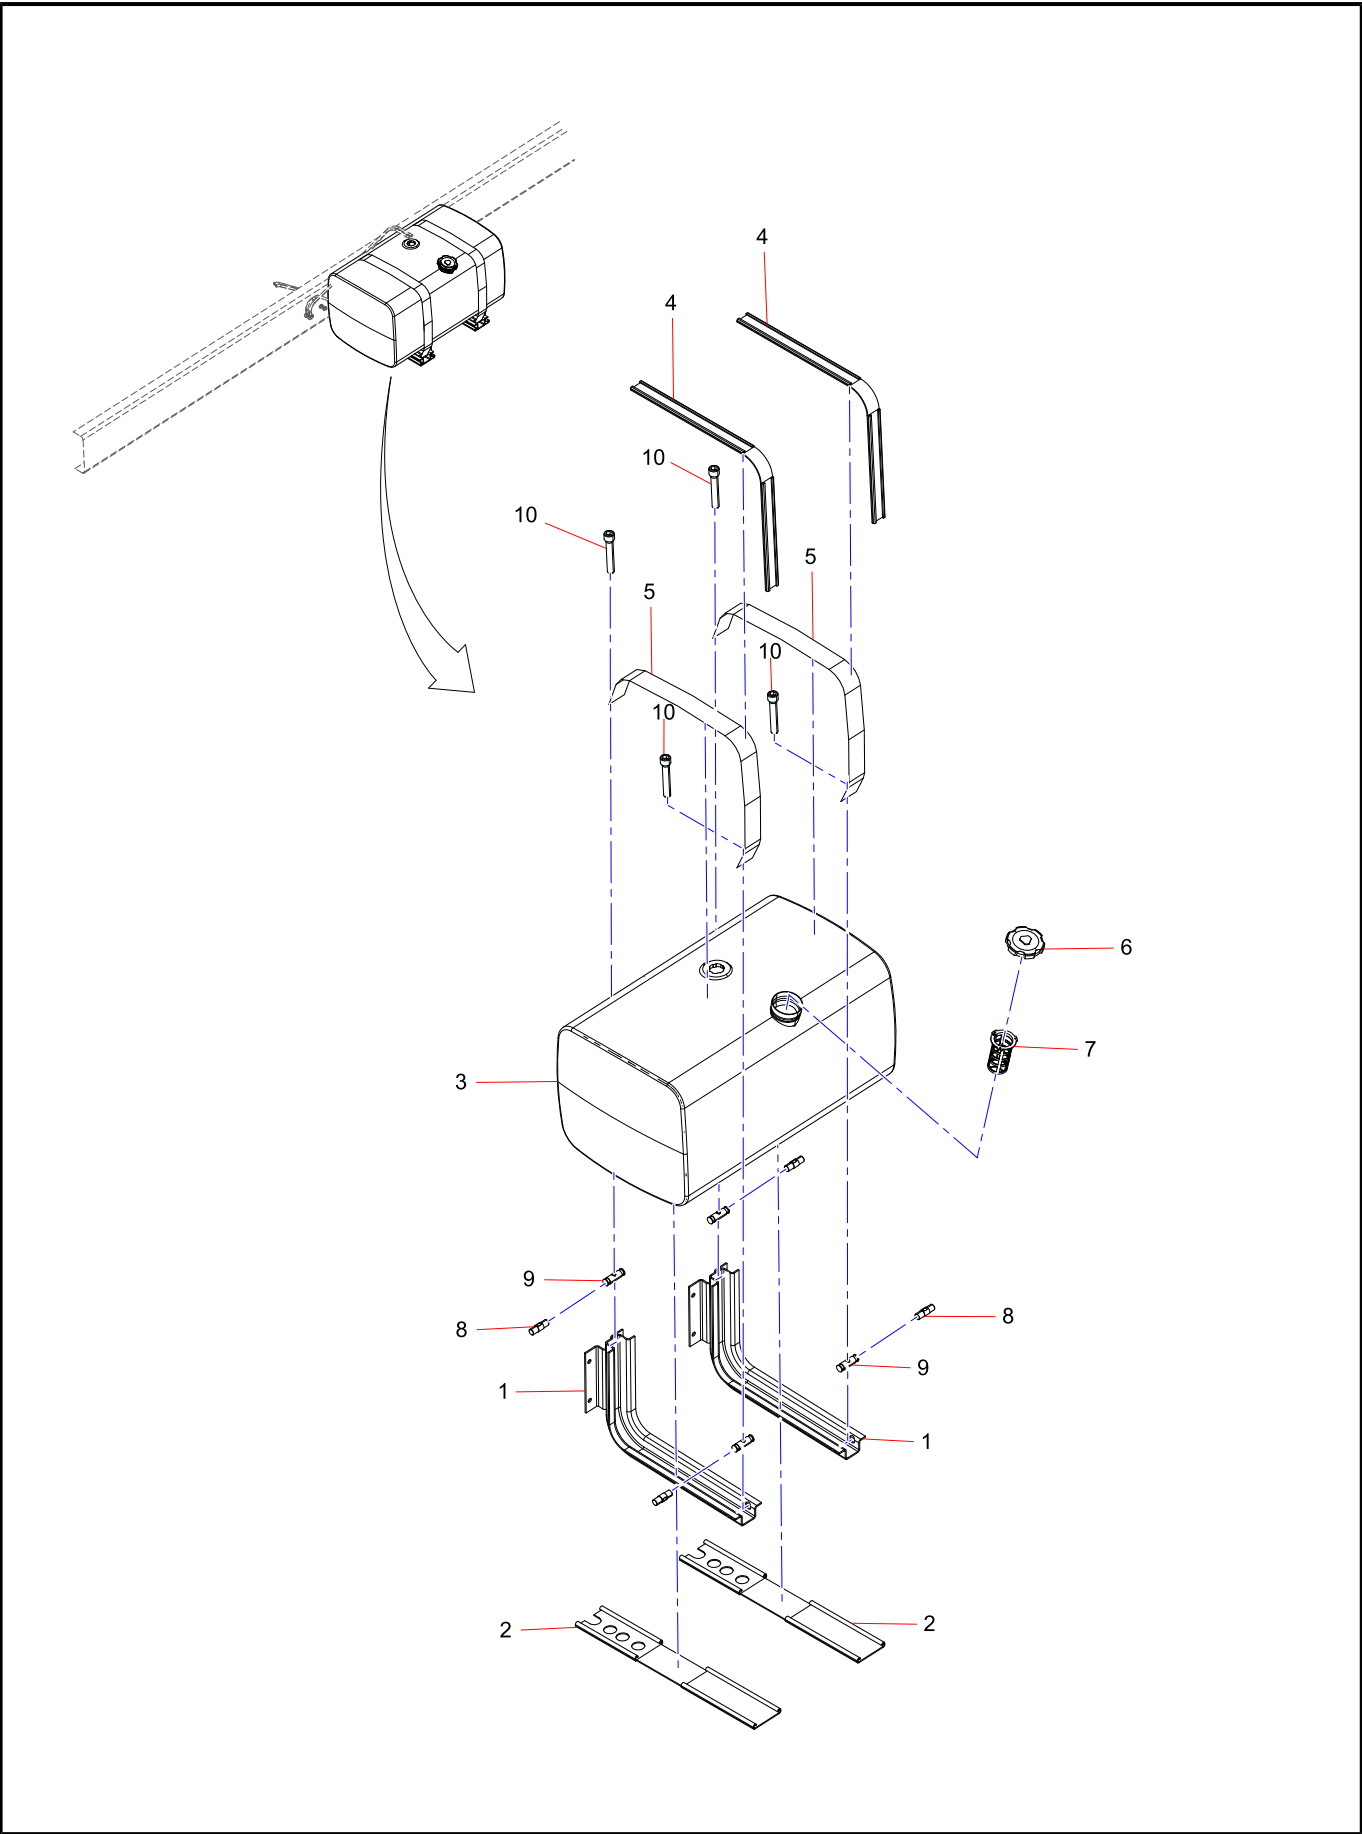


INDEX	PART NO.	DESCRIPTION	QTY	SEE PAGE
1	60022612	Supporting Bracket	2	
2	60022613	Tank Bracket Strip	2	
3	60022610	Fuel Tank	1	
4	60022616	Cushion Belt of Draw Belt	2	
5	60022604	Draw Belt	2	
6	60022614	Oil Tank Cover	1	
7	60022607	Strainer	1	
8	60022606	Draw Belt Pin	4	
9	60006346	Thread Pin Shaft	4	
10	60006348	Inner Hexagon Screw	4	

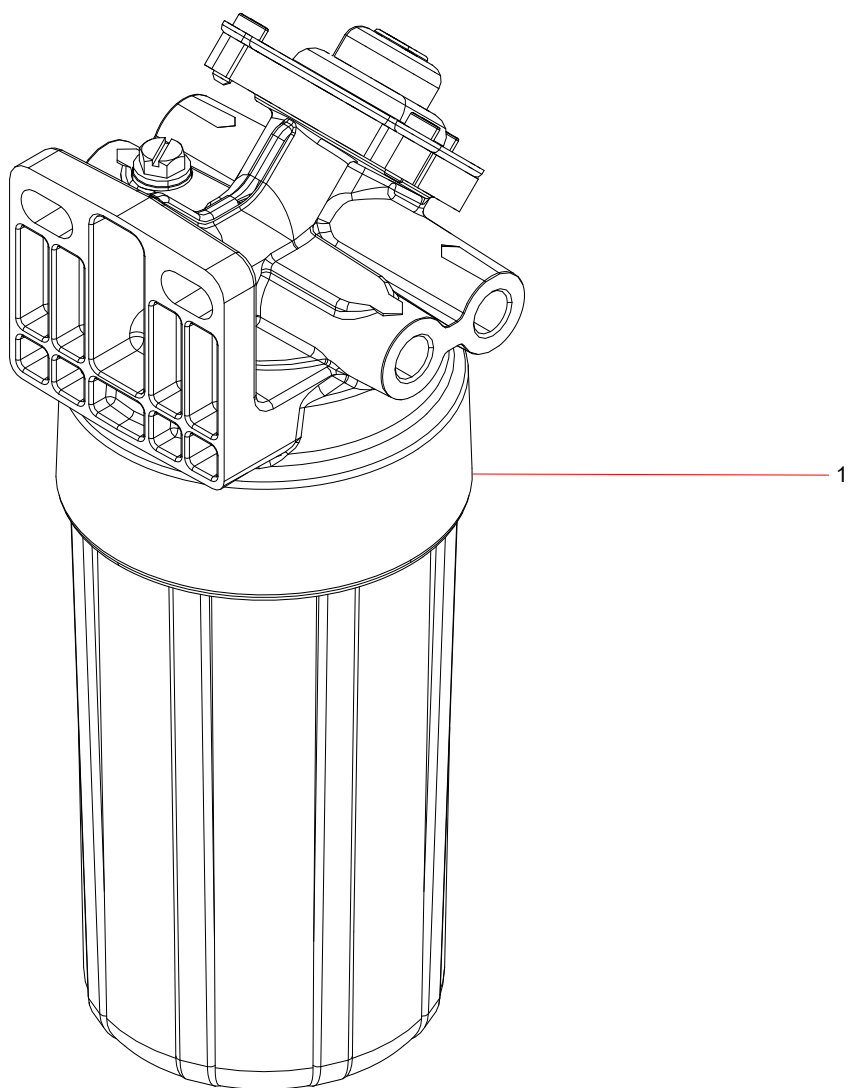

INDEX	PART NO.	DESCRIPTION	QTY	SEE PAGE
1	60358722	Filter Element	1	

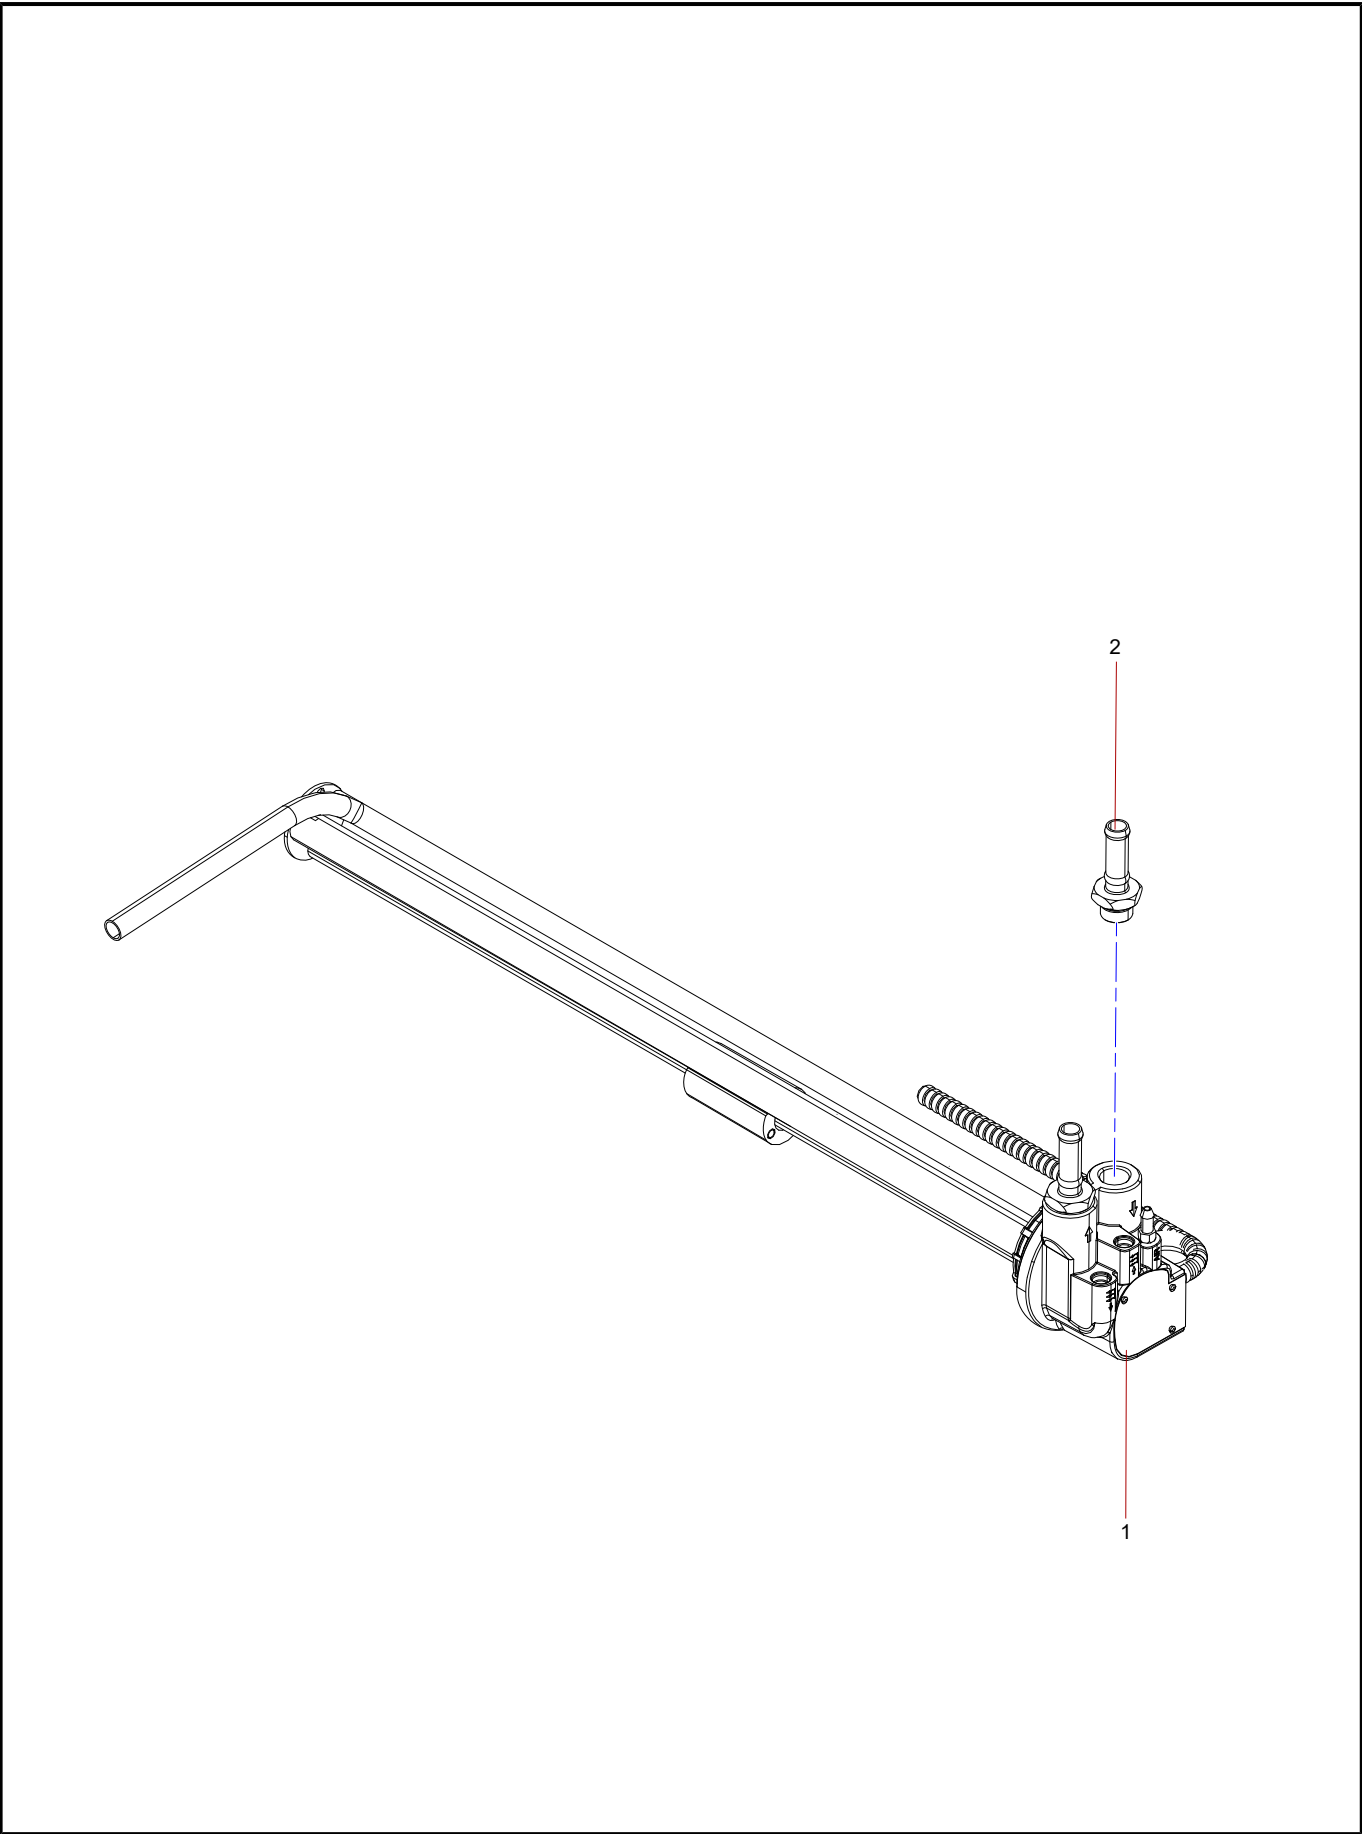


INDEX	PART NO.	DESCRIPTION	QTY	SEE PAGE
1	140504000155A	Fuel Sensor	1	
2	QDP005525732	Hose connector(Φ10)	2	

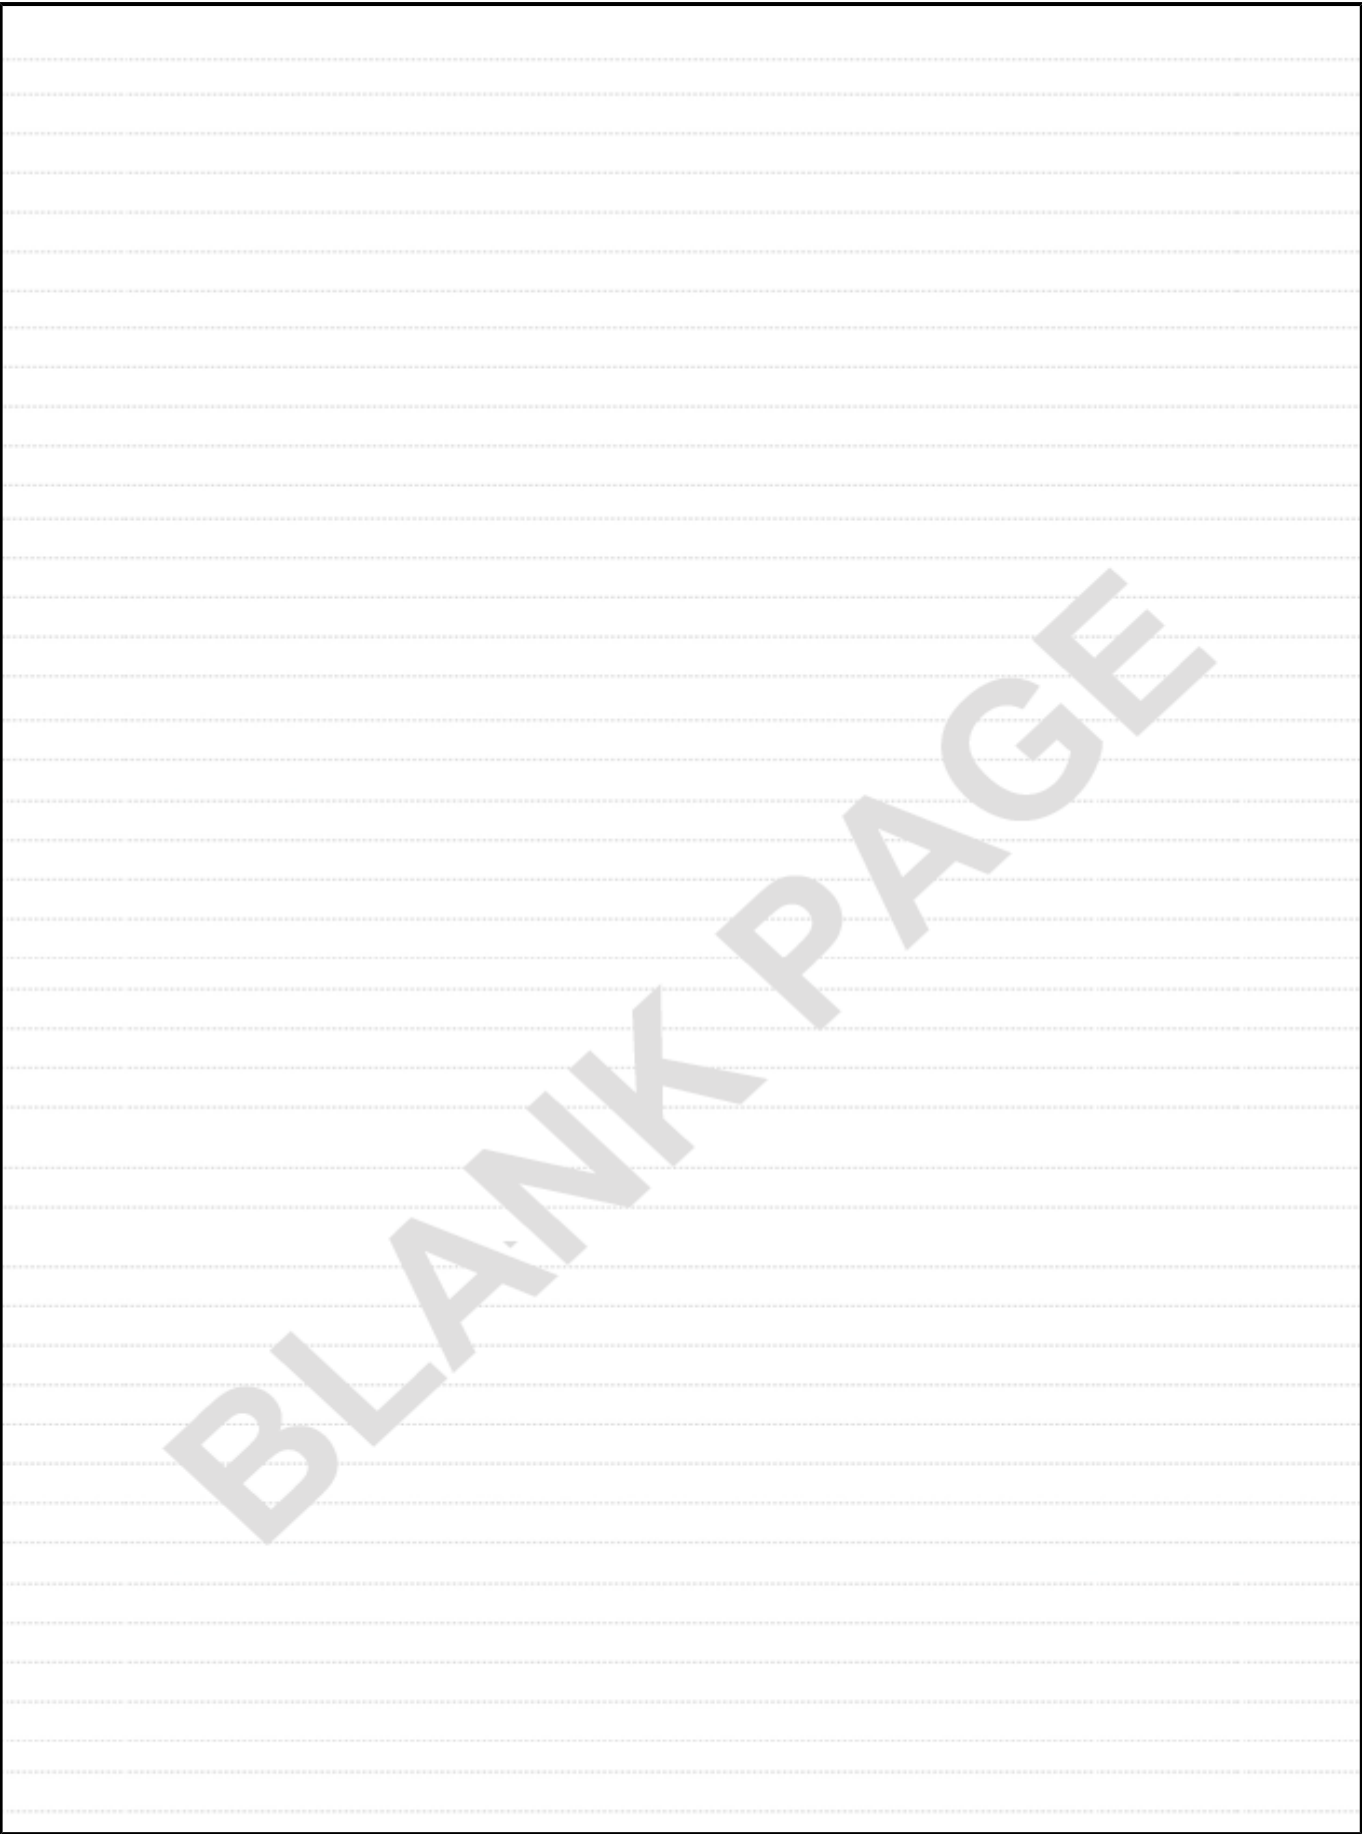


Group 31

Transmission shaft system

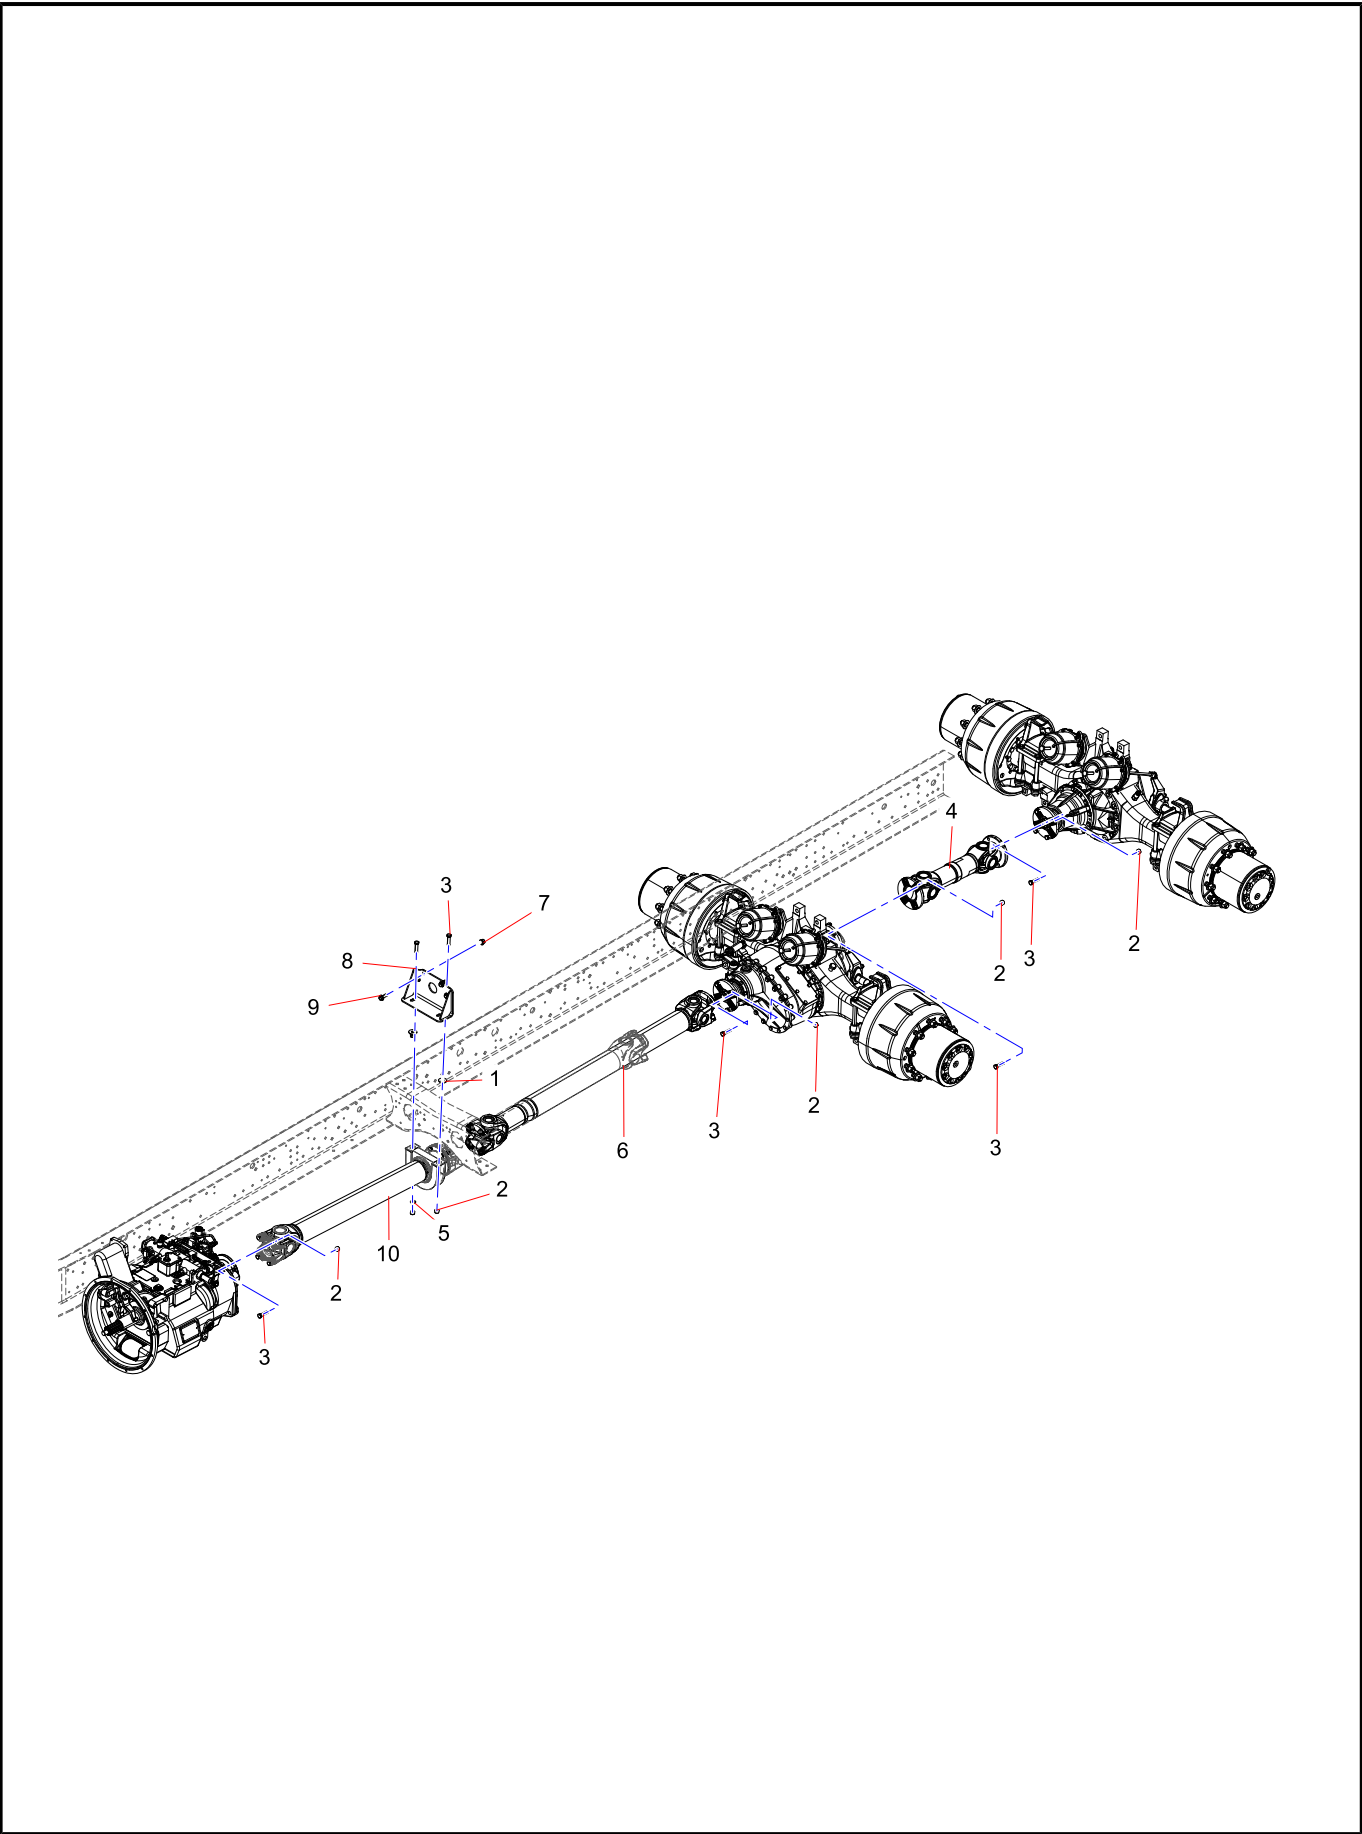


INDEX	PART NO.	DESCRIPTION	QTY	SEE PAGE
1	A210404000012	Washer	2	
2	A210319000021	Nut	24	
3	A210114000120	Bolt	22	
4	14498803	Rear Axle Drive Shaft Assembly	1	
5	A210405000002	Washer	2	
6	QDP007162443	Middle axle transmission shaft assembly	1	
7	120102990043A	Nut	4	
8	14035338	The Hanger Assembly	1	
9	120101060069A	Hexagon Head Bolt	4	
10	14498805	Middle transmission shaft assembly	1	

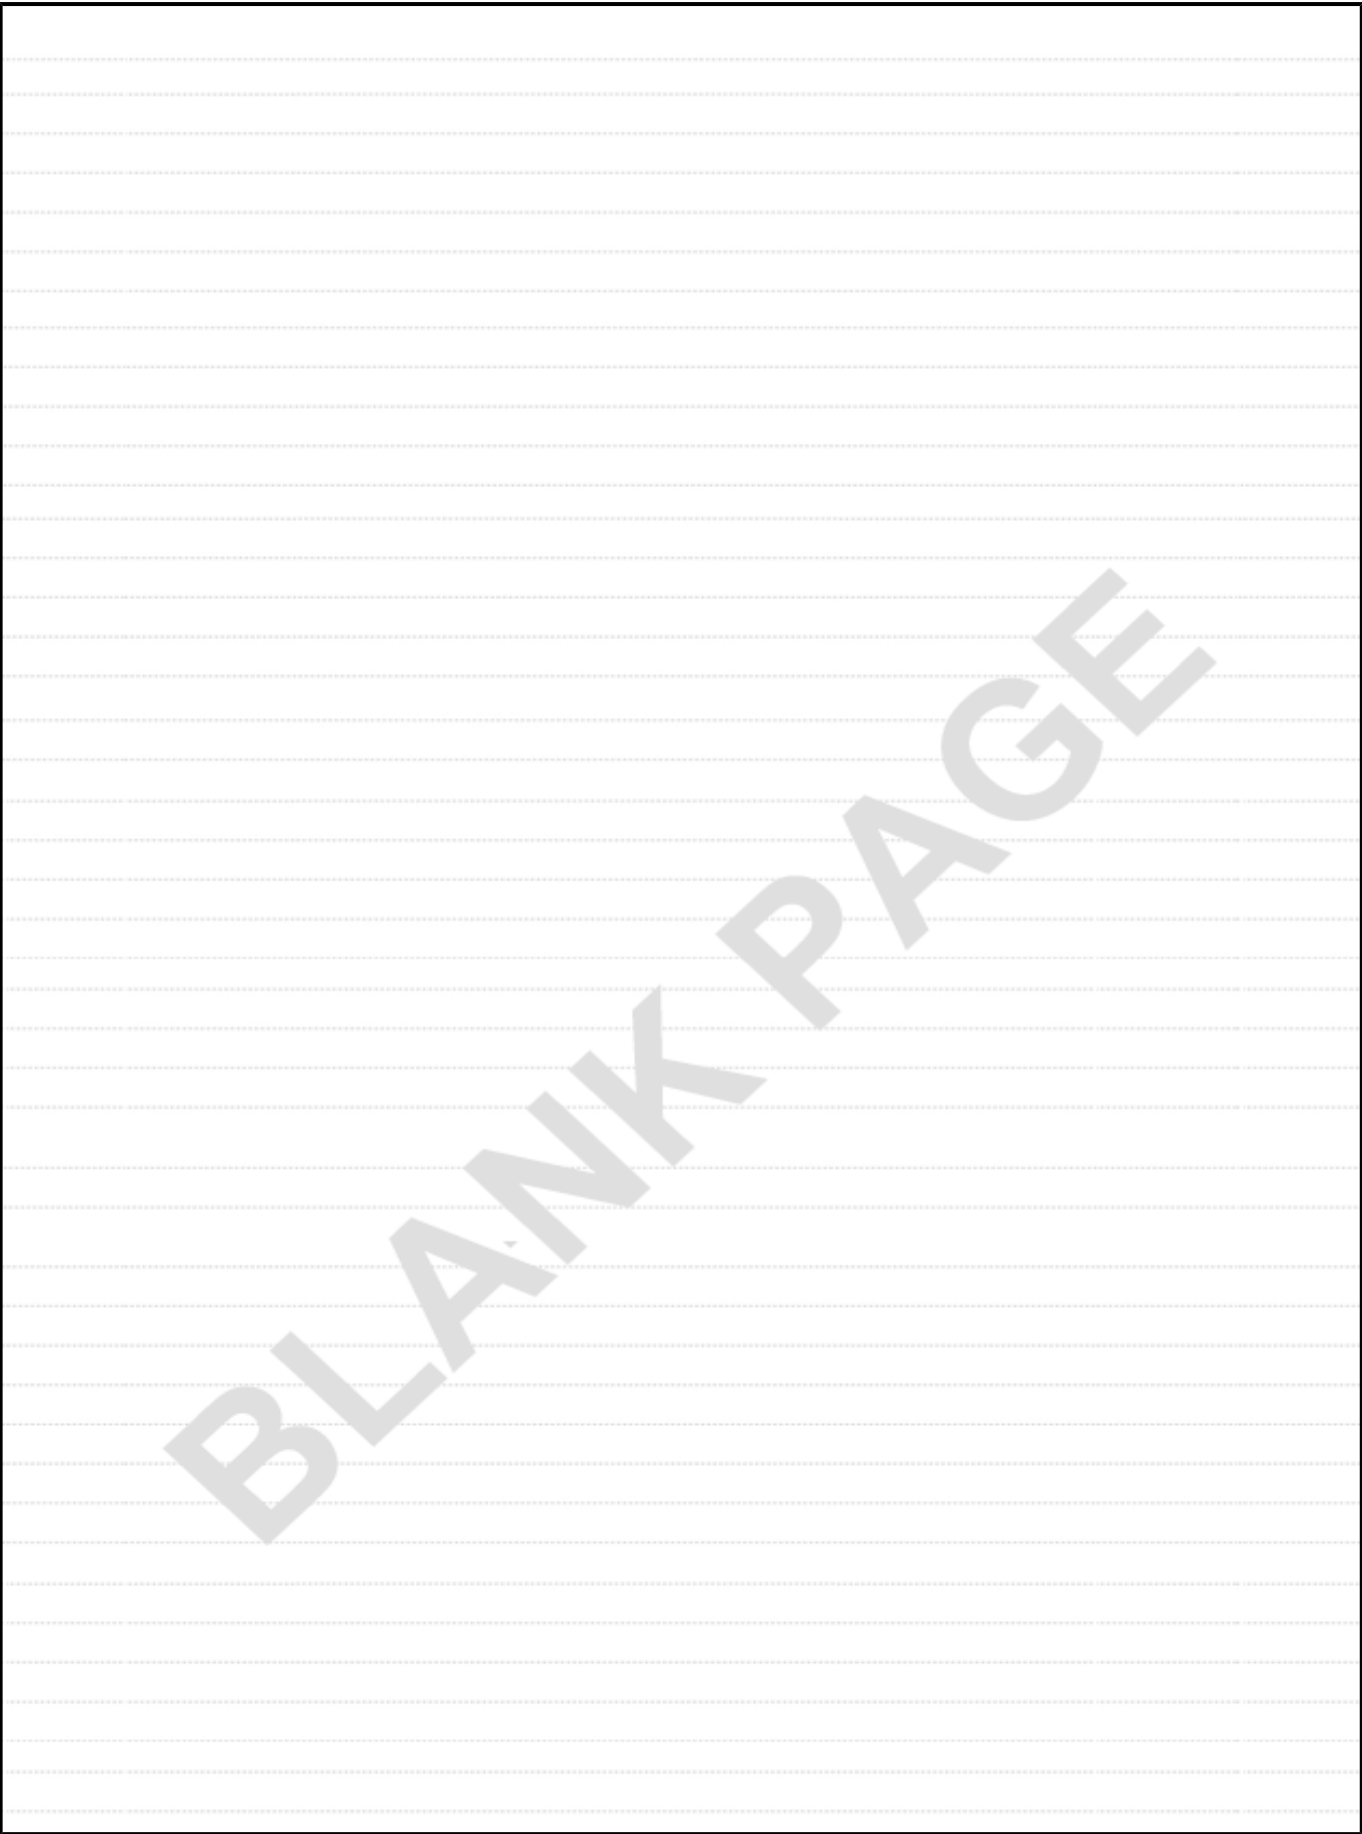


Group 32


Traction and Towing device

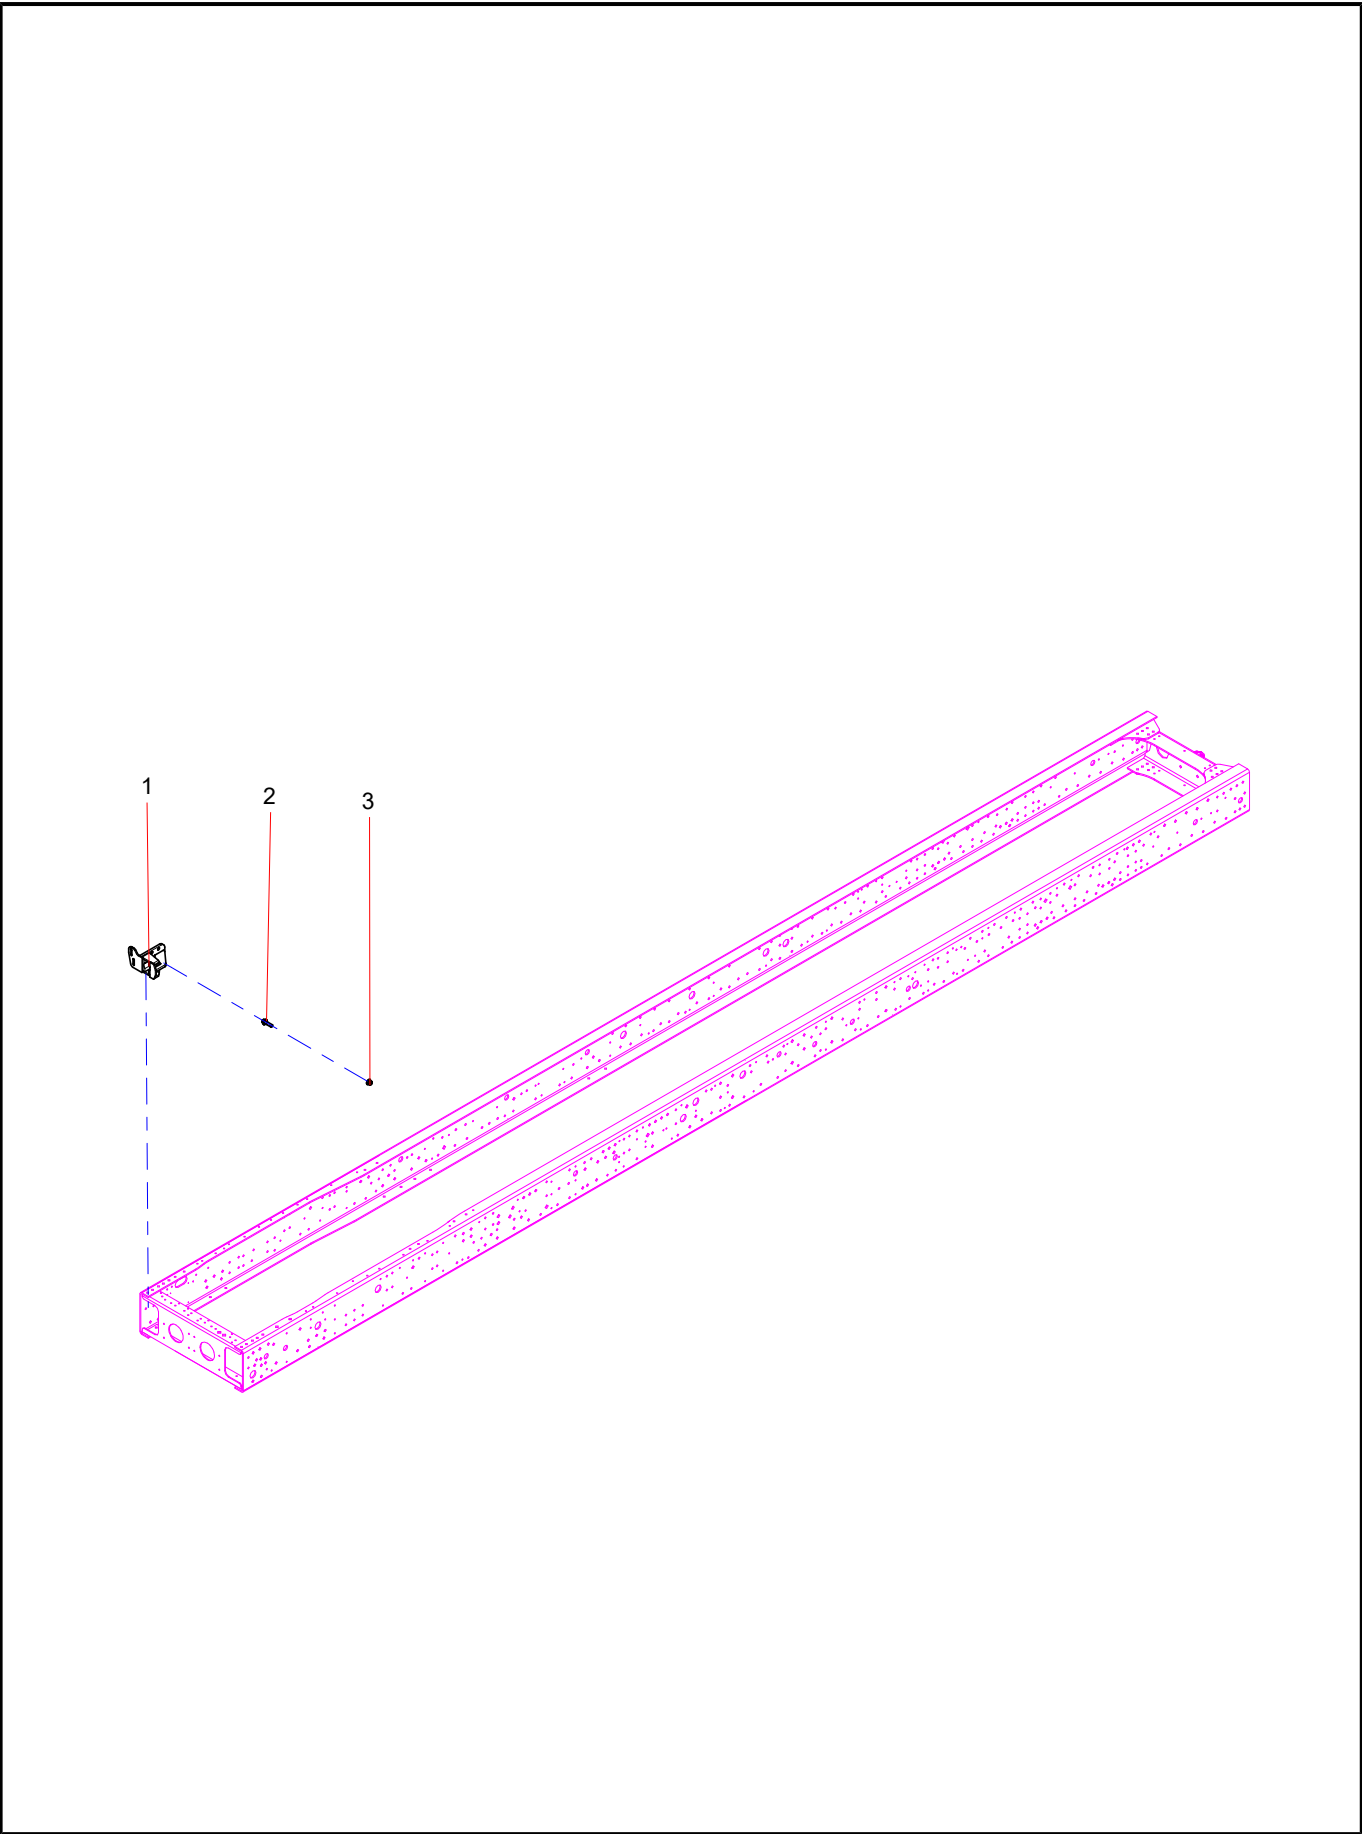


INDEX	PART NO.	DESCRIPTION	QTY	SEE PAGE
1	QDP005514682	Draw Bar Hook Seat Assembly	1	32-4
2	60207152	Bolt	1	
3	61028566	Nut	1	

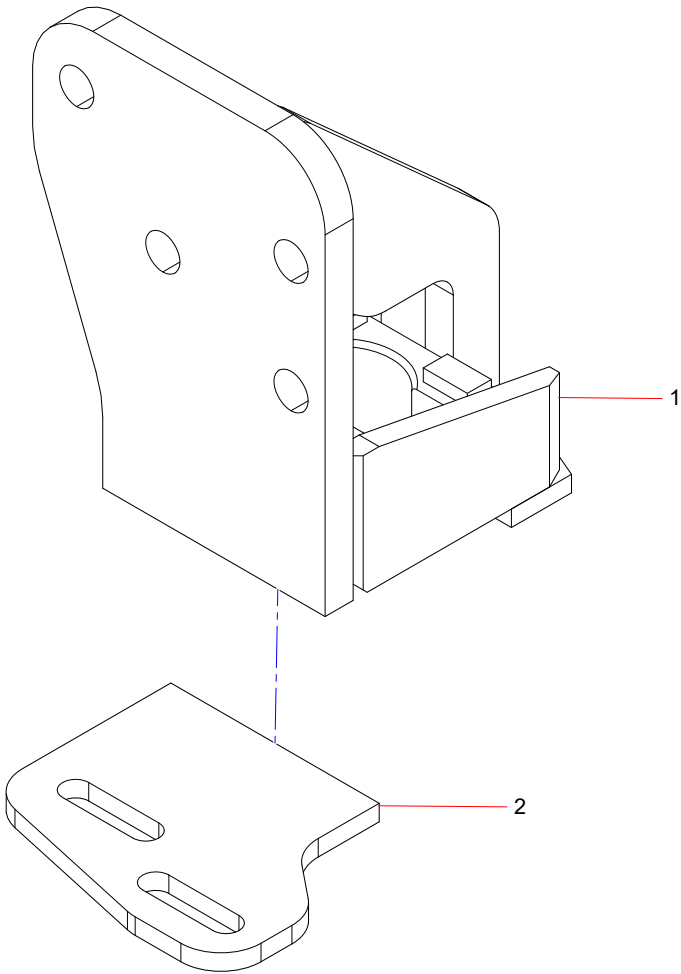

INDEX	PART NO.	DESCRIPTION	QTY	SEE PAGE
1	13694353	Draw Bar Hook Seat	1	32-6
2	QDP005514676	Bumper Connecting Board	1	

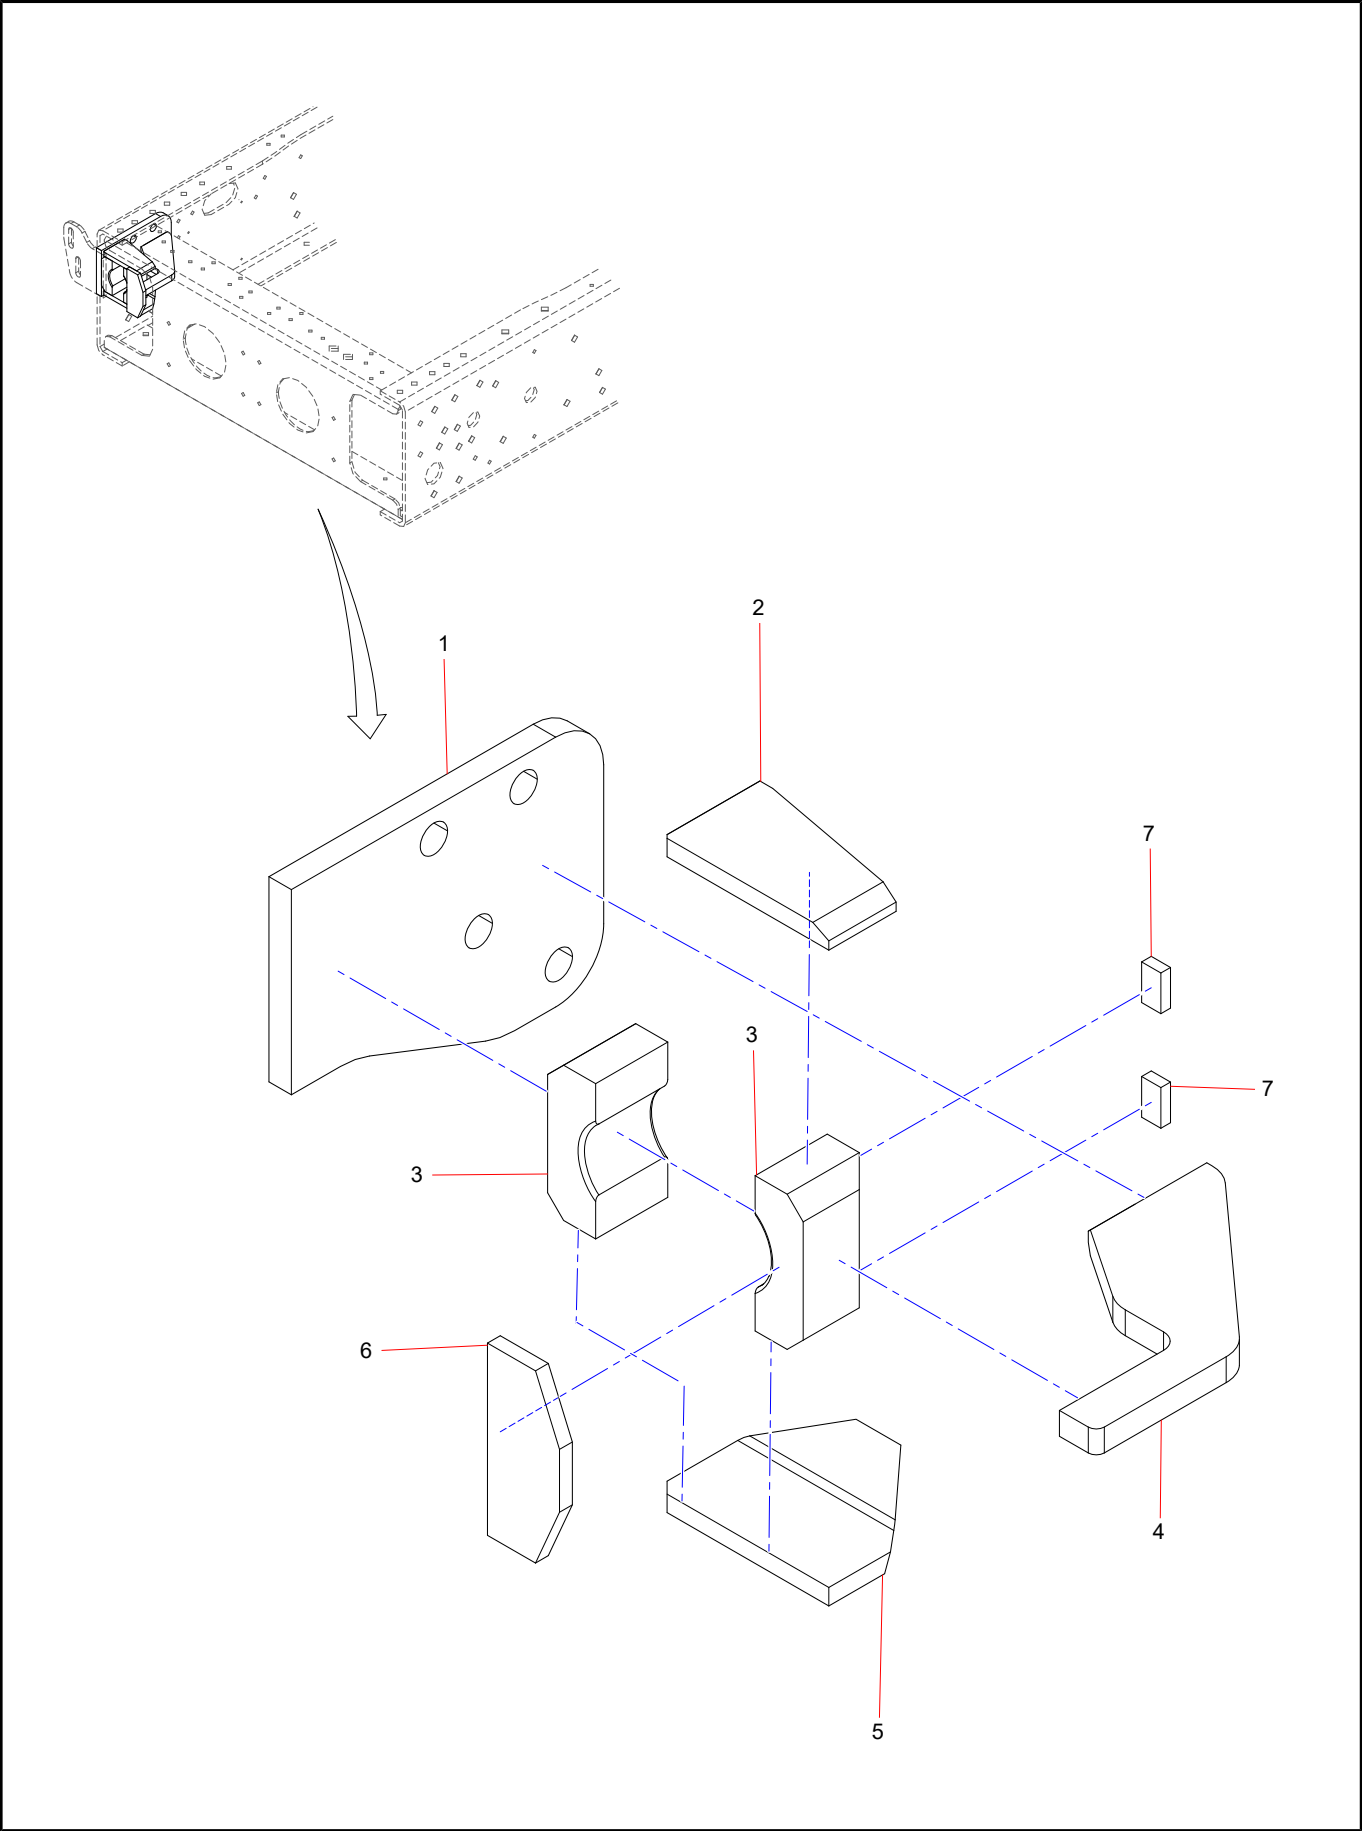

INDEX	PART NO.	DESCRIPTION	QTY	SEE PAGE
1	13694348	Draw Hook Seat Bottom Board	1	
2	13694349	Draw Bar Hook Seat Rigid Board	1	
3	13694352	Towing Hook Board	2	
4	13694351	Draw Hook Seat Rigid Board	1	
5	13694350	Draw Bar Hook Seat Rigid Board	1	
6	13840970	Draw Bar Hook Seat Rigid Board	1	
7	14027239	Stop Block	2	

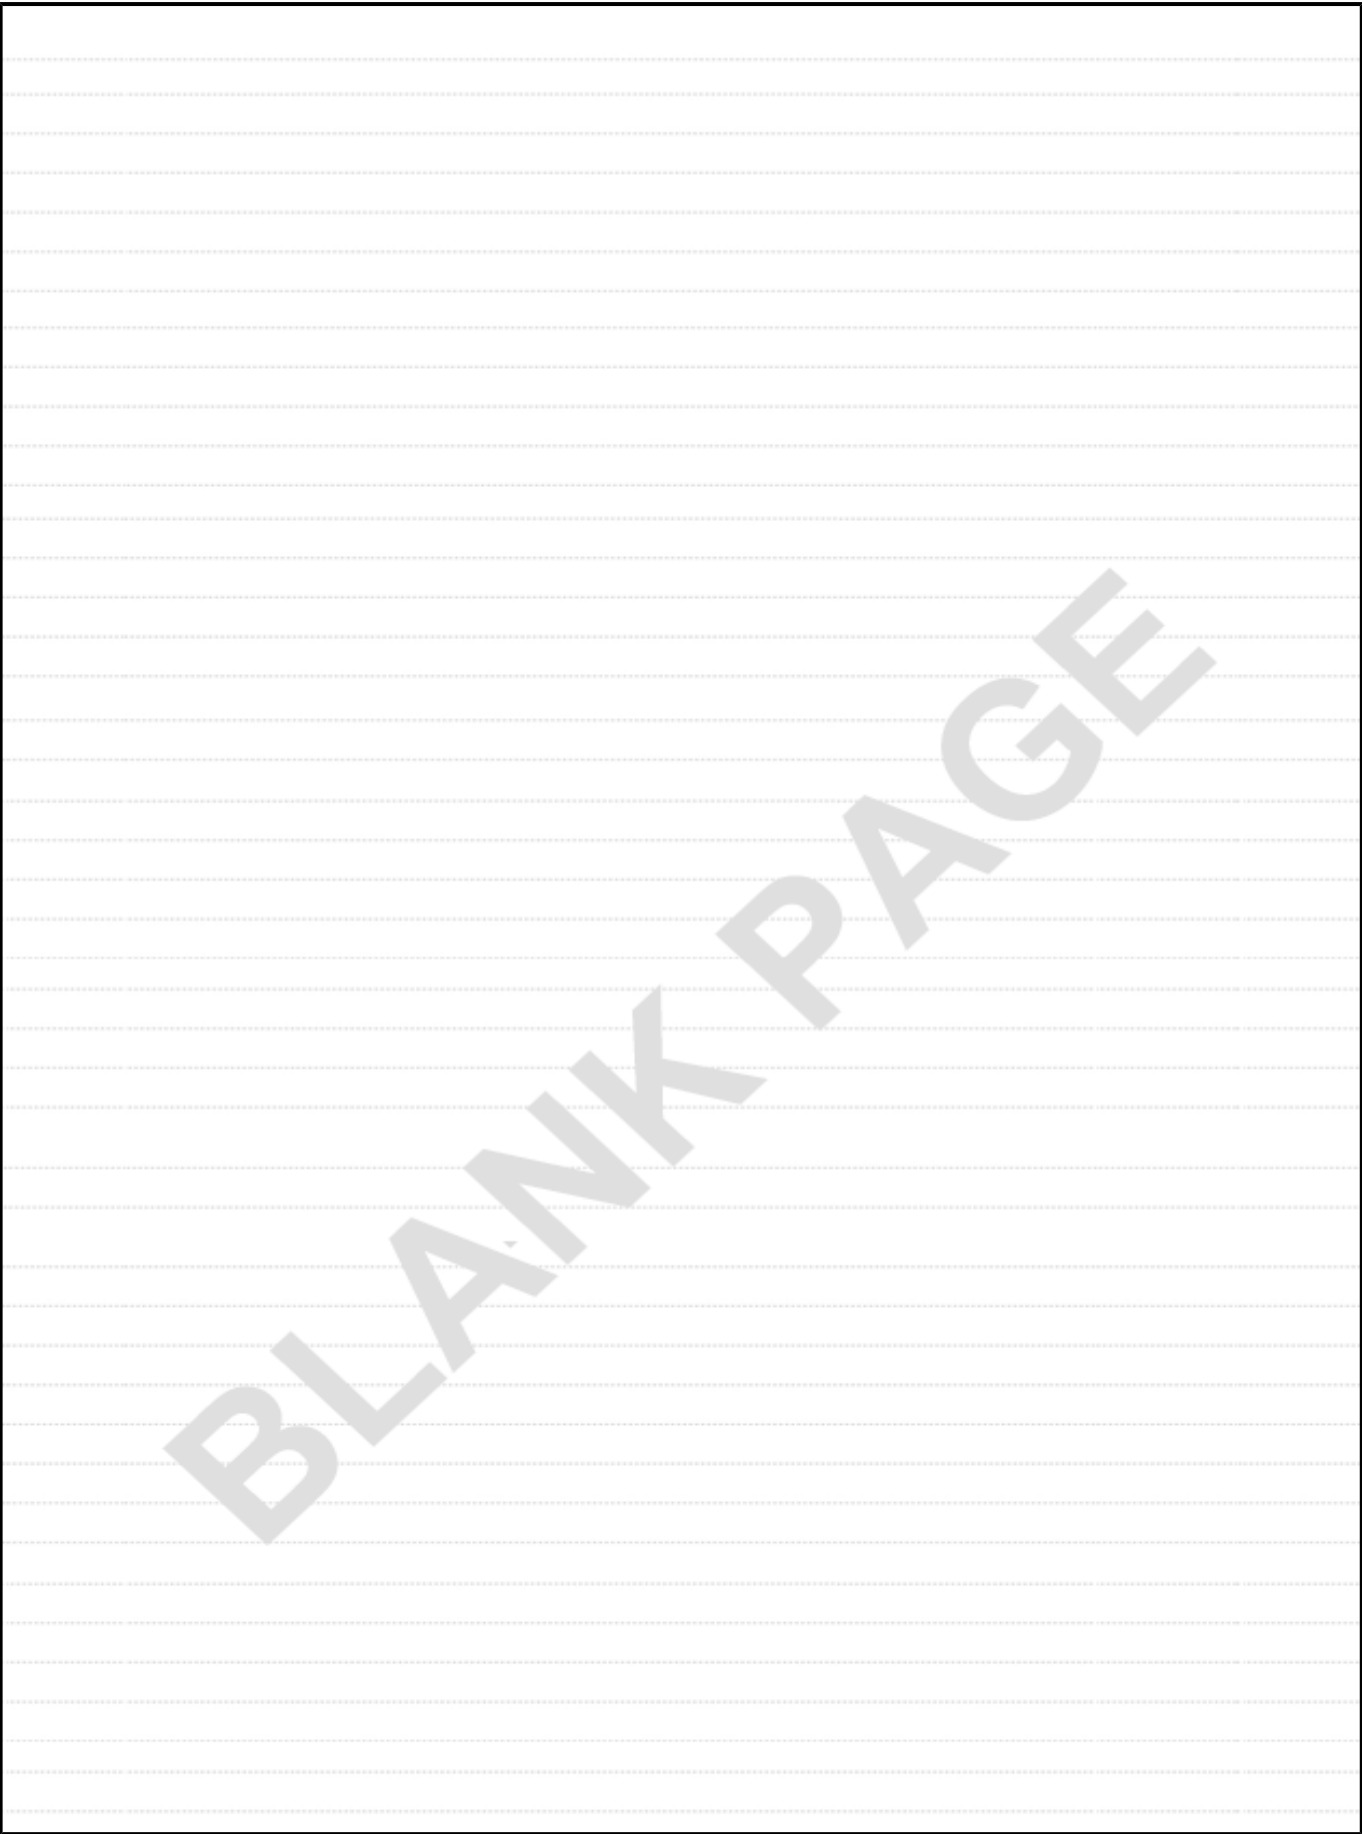

Index

10021812 Power Steering Oil Tank Assembly.....	26-19	11697451 Seal Right Door Sealing	2-17
10031126 Connecting Plate	16-3	11697452 Door Frame Seal	2-17
10034117 Engine Wiring Harness Mounting Bracket.....	15-3	11697453 Inner Guide Groove of Door.....	2-17
10039187 Rear Supporting Gasket of the Engine.....	23-3	11697454 Left Window Guide Groove.....	2-17
10053068 Seal Washer	14-11	11697455 Right Window Guide Groove.....	2-17
10110193 Engine Drain	24-3	11697456 Outer Belt Line of Left Door	2-17
10143965 Exhaust Brake Valve Pipe	16-3	11697466 Seal Real Window Screen	2-17
10143967 Engine Outlet Pipe.....	16-3	11697774 Outer Belt Line of Right Door	2-17
10183907 Press Strip Towing Hook	15-7	11784388 Outer Decorating Plate of Left Piller...2-127	
10208355 Warning Scutcheon of No Washing	4-3	11784389 Outer Decorating Plate of Right Piller.....	2-127
10468313 Support of the Oil Inlet Pipe	26-17	11784390 Cover of Left Piller Outer Decorating Plate	2-127
10488418 Supporting Tube	29-5	11784391 Cover of Right Piller Outer Decorating Plate	2-127
10488430 Connecting Board.....	29-5	11795150 Connecting Angle Iron.....	2-101, 2-103
10488510 Fender Bracket Assembly	29-3	11797975 Outer Decorating Plate of Right Piller.....	2-119
10489917 Front U-Bolt	17-5, 17-9	11798548 Sun Shield Body	2-117
10499850 High Pressure Tube Bracket.....	26-17	11798761 Outer Decorating Plate of Piller	2-77
10710823 Gland	20-3, 29-3	11816281 Fuel Tank Module	30-3
10779231 Hydraulic Cylinder	26-9	11816716 Left Door Handle Cover.....	2-27
10779232 Hydraulic Cylinder Piston Rod	26-9	11816717 Right Door Handle Cover.....	2-27
10938393 Mark of No Sliding in Neutral Gear	4-3	11816718 Door Goard Assembly	2-23
11137504 Extension Rod	7-5	11819035 Logo	2-119
11137710 Lifter Elongated Rod Assembly	7-3	11819349 Plate Locking.....	2-119
11141655 Small Web-plate	9-15	11820336 Left Doorsill Decorative Board.....	2-25
11209482 Clip.....	2-15, 2-27, 2-33, 2-95	11820337 Right Doorsill Decorative Board	2-25
11212264 Reinforced Connecting Board	9-15	11820339 Doorsill Decorative Board	2-23
11212265 Reinforced Connecting Board	9-15	11820379 Left Side Bracket	2-121
11270627 Nameplate	2-131	11821174 Spring Leaf Nut.....	2-121
11275414 Hexagonal Flange Nut	13-3	11821851 Seft-locking Reed	2-125, 20-3
11318849 Cover Radio	2-13	11822273 Fire Extinguisher Assembly	2-131
11325819 Coupling, Internal Hexagon	2-33, 2-89, 2-115, 25-3	11823420 Rear Suspension Swing Boom.....	2-101
11326706 Screw, Drive	2-15, 2-19, 2-27, 2-59, 2-95, 2-145, 3-3	11823596 Rear Suspension Spiral Spring Shock Sbsorber	2-101, 2-103
11374561 Joint Body	14-11	11823635 Support of Rear Suspension Shock.....	2-101, 2-103
11439696 Muffler Heat Shield	16-13	11823667 Lower Decorative Plate of Right Door.....	2-103
11638894 Snap Fastener.....	2-27	11826998 Catch Bayonet.....	2-31, 2-33, 2-35
11643114 Intermediate Support.....	27-9	11830136 Right Door Welding Assembly.....	2-129
11663018 Engine rear suspension support abutment (left)	23-3	11830315 Ignition Switch Assembly	2-131
11663019 Engine rear suspension support abutment (right)	23-3	11830629 Left Door Welding Assembly.....	2-129
11663020 Engine's rear left supporting	23-3	11830762 Lock and Handle Assembly	2-133
11663021 Engine's rear right supporting	23-3	11831587 Mounting Support of Cover Lock Assembly.....	2-147
11663473 Mobile Hanger for Muffler	16-13	11831589 Mounting Support of Left Cover Lock Assembly.....	2-151
11663474 Muffler Fastening Belt	16-13	11831591 Mounting Support of Left Cover Lock Assembly.....	2-151
11663475 Muffler Fastening Belt	16-13	11831593 Mounting Support of Right Cover Lock Assembly.....	2-151
11689838 Engine Insulator Assembly	2-97	11831814 Cover Lock and Bracket Assembly	2-133
11689847 Plastic Clip	2-97	11834765 Limiter Assembly	2-133
11689854 Right Door Lower Decorative Plate	2-97		
11689857 Spring Leaf Nut.....	2-97		
11697448 Left Door Sealing Strip	2-17		
11697449 Belt Left Inner Waist.....	2-17		
11697450 Belt Right Inner Waist.....	2-17		

11835113 Glass Lifter Assembly	2-133	12052718 Right Upper Decorating Plate Front Panel	2-115
11840374 Combined Switch	2-47	12054382 Right Side Lower Decorating Plate Assembly	2-115
11840534 Windscreen Wiper Assembly	2-131	12056696 Front Cover Right Support	2-115
11840551 Washer	2-131	12059474 Left Guide Plate Assembly	2-95
11840565 Switch Door Lamp	2-133	12059648 Right Guide Plate Assembly	2-95
11841554 Front Fog Lamp	2-63	12062106 Left Un-shading Plate Assembly	2-33
11841901 Rear Covering Casing	2-37	12065782 Rear Top Guard Board Body	2-33
11841918 Corrugated Covering Casing	2-37	12065794 Left Top Trimming Board	2-33
11841925 Pressure Strip for Corrugated Covering Casing	2-37	12065800 Right Top Trimming Board	2-33
11841936 Bayonet catch	2-19	12065810 Window Curtain Guide Rail Assembly	2-33
11843529 Door Rear Lower Guide Assembly	2-133	12065815 Decorative Batten	2-33
11843531 Rear Lower Guide Left Door Assembly	2-139	12065886 Left Side Wall Inner Guard Board	2-35
11843537 Rear Lower Guide Right Door Assembly	2-139	12065888 Right Guard Board Assembly	2-35
11844014 Middle Decoration Plate Assembly	2-19	12065898 Side Wall Inner Guard Board	2-23
11844018 Instrument Cover Plate	2-19	12065964 Left Pin Rail	2-31
11845790 Blank Cover	2-133	12065968 Right Pin Rail	2-31
11845891 Mounting Support Left Cover Lock Assembly	2-151	12068527 Sun Shield Body	2-123
11845897 Mounting Support Right Cover Lock Assembly	2-151	12068529 Middle Support of Sun Shield	2-123
11846488 Left Decoration Plate Assembly	2-19	12068530 Left Support	2-123
11846653 Storage Box of IP	2-19	12068532 Right Support	2-123
11846676 Left Bracket for CCB	2-19	12068534 Sun Shield Washer	2-123
11859069 Cover	2-25	12068536 Sun Shield	2-77
11859775 Front Covering Casing	2-37	12068543 Engine Insulator Assembly	2-77
11934802 Mounting Support Right Cover Lock Assembly	2-151	12096987 Front Clearance Harness	2-71
11948085 Left Door Baffle Curtain	2-17	12097152 Front Clearance Lamp	2-63
11948091 Right Door Baffle Curtain	2-17	12105439 Speaker Assembly	2-55
11989160 Front Cover Buffer Block	2-143	12143391 Flexible Enclosures Wind	24-3
120101050130A Bolt	25-3	12181863 Mounting Parts, Cab Door Hinge	2-129
120101050143A Bolt	9-5	12211855 Warm Air Pipe Coupling	6-3
120101050144A Bolt	9-5	12212523 Warm Air Water Inlet Pipe	6-3
120101050147A Bolt	9-3	12212526 Warm Air Water Outlet Tube	6-3
120101050148A Bolt	9-5, 16-5	12212534 Warm Air Outlet Pipe	6-3
120101050194A Bolt	13-3	12212537 Warm Air Inlet Pipe	6-3
120101060014A Bolt	17-21, 17-23	12266306 Mixing Cylinder Control Mechanism Support Assembly	2-131
120101060016A Bolt	10-3	12266307 Support Assembly	2-137
120101060069A Hexagon Head Bolt	23-3, 30-3, 31-3	12273439 Left Manual Lens L	2-85, 2-87
120101060073A Bolt	27-3	12273480 Logo	2-85
120101060076A Bolt-M16×1.5×60	13-3	12273531 Right Manual Wide-angle Lens L	2-85, 2-87
120102090011A Nut	15-3	12273549 Lower Bracket Cover	2-87
120102100012A Nut	23-3	12273568 Fill Blind Mirror	2-83
120102990036A Nut	2-5, 9-7, 13-3, 17-3, 17-21, 17-23, 18-3, 29-3	12273572 Left Guide Plate Body	2-79
120102990043A Nut	27-3, 31-3	12301984 Staff Jacket	2-133
120102990047A Nut	9-5	12304856 Bracket Pipeline Brake	2-181
120102990048A Nut	9-3, 16-5	12327198 Get-up Handle Assembly	2-73
12035444 Left-front Superstructure Handrail	2-91	12329139 Diesel Filter Outlet Line	30-3
12035456 Right-front Superstructure Handrail	2-91	12358605 Air Filter Outlet Hose	21-3
12035470 Left-front Superstructure Handrail	2-91	12360567 Blanking Cover	2-19
12035501 Right-rear Superstructure Handrail	2-91	12445554 A Piller Outer Decorating Plate Assembly	2-119
12045378 Cross Beam of Rear Suspension	2-99	12448991 Mid-high Roof Cab Column Steering Assembly	2-131
12045500 Right Door Lower Decorative Plate Assembly	2-99	12471064 Tail Lamp and Fog Lamp Installation	15-3
12052712 Strip Left Wheel Middle Decorative	2-115	12534609 Elbow beam	9-15
		12557668 Left End Lower Sponge Cover Plate	2-19
		12566775 Foreside Top Guard Board Assembly	2-33

12566880 Storage Box Assembly.....	2-33	12805343 The Front Bracket of The Front Suspension.....	9-5
12566918 Cross Beam Assembly.....	2-33	12825725 Front Spring Pressure Plate	17-5, 17-9
12567092 Top Fixed Support of Storage Box.....	2-33	12845816 Steel Tube Support of Intercooler.....	21-11
12568284 Left Lock Steel Cable Fixed Support.....	2-151	12845817 Reinforced Bar	21-11
12568312 Right Lock Steel Cable Fixed Support.....	2-151	12845821 Air Steel Pipe of Intercooler Assembly.....	21-5
12571236 Left Aillar A Inner Plate Assembly	2-29	12848704 Brake Hose.....	14-11
12571244 Right Aillar A Inner Plate Assembly	2-29	12852976 Bracket Base Plate	27-11
12571293 Left Body Instrument Panel Assembly.....	2-19	12852977 Left Side Bracket	27-3
12571352 Right Body Instrument Panel Assembly.....	2-19	12867790 Air Temperature Adjusting Device Assembly.....	2-55
12571421 Right Upper Instrument Panel Access Cover Assembly.....	2-19	12908572 Flexible Shaft Tube Clamp	27-3
12571438 Right Down Instrument Panel Access Cover Assembly.....	2-19	12908573 rubber pad	27-5
12571494 Right Down Instrument Panel Guard Board Assembly.....	2-19	12908574 Upper Spacer.....	27-5
12571502 Left Down Instrument Panel Guard Board Assembly.....	2-19	13006891 Connecting Angle Iron.....	2-7
12571557 Right Instrument Panel Decorating Plate Assembly.....	2-19	13007536 Main Pump Steel Pipe.....	28-3
12571561 Right End Cover Plate Lower Sponge.....	2-19	13008480 Connecting Support of Left Pedal.....	2-113
12571625 Left Air Duct Defrosting Assembly.....	2-15	13008481 Supporting Rod of Right Pedal.....	2-109
12571640 Middle Air Duct Defrosting Assembly.....	2-15	13008482 Supporting Rod of Left Pedal.....	2-113
12571662 Right Air Duct Defrosting Assembly.....	2-15	13008594 Self Tapping Screw.....	2-109
12571668 Left Transition Door Assembly - Air Duct.....	2-15	13009983 Left Upper Decorating Plate Front Panel.....	2-107
12571681 Right Transition Door Assembly - Air Duct.....	2-15	13010564 Front Panel Left Upper Reinforced Plate.....	2-111
12571718 Left Face Blowing Air Duct Assembly Main Cab.....	2-15	13010782 Thimble	16-11
12571739 Right Face Blowing Air Duct Assembly Main Cab.....	2-15	13010825 Hanger of exhaust tube	16-3
12571778 Secondary Cab Left Blowing Face Air Duct Assembly.....	2-15	13010953 Exhaust tubel	16-3
12571810 Secondary Cab Right Blowing Face Air Duct Assembly.....	2-15	13014915 Curtain Assembly Rear Window.....	2-133
12571817 Foot Blowing Air Duct Assembly Main Cab.....	2-15	130201000040A041 Bolt	22-25
12572002 Secondary Cab Blowing Foot Air Duct Assembly.....	2-15	130201000040A043 Bolt	22-23
12602037 Towing Hook	7-3	130201000040A059 Nut, Hexagon Head	22-23
12617017 Electrical Support Left Installed Plate Assembly.....	2-19	130201000040A060 Nut, Hexagon Head	22-23
12617028 Electrical Support Right Installed Plate Assembly.....	2-19	130201000040A077 Hexagon Bolt & Spring Washer Assembly.....	22-37
12629125 Reinforcement Plate A of the Arched Beam	9-11, 9-13, 9-17	130201000040A090 Hexagon Bolt & Spring Washer Assembly.....	22-25
12629126 Reinforcement Plate B of the Arched Beam	9-11, 9-13, 9-17	130201000040A093 Cylindrical Pin Elastic.....	22-25
12677496 Instrument Panel Air Duct	2-13	130201000040A096 Screw.....	22-25
12704674 Electrical Installed Support Front Plate Assembly.....	2-19	130201000040A097 Pin	22-25
12720691 Pillar Fender Plate	2-23	130201000040A099 Pressure Switch	22-25
12775610 Front Cover Buffer Block Assembly.....	2-131	130201000040A104 Hexagon Bolt & Spring Washer Assembly.....	22-13, 22-37
12781513 Mounting Support Assembly of Fire Extinguisher.....	2-153	130201000040A105 Hexagon Bolt & Spring Washer Assembly.....	22-13
		130201000048A021 Scutcheon	22-39
		130201000048A022 Scutcheon	22-39
		130201000050A027 rock arm	22-39
		130201000051A003 Bearing Cover	22-13
		130201000051A004 Hexagon Bolt & Spring Washer Assembly.....	22-13
		130201000051A016 Shaft	22-19
		130201000051A026 Air Pipe Assembly	22-39
		130201000053A002 Middle Shaft Weldment Group.....	22-33
		130201000053A003 Middle Shaft Weldment Group.....	22-33
		130201000054A014 Cover	22-25
		130201000054A015 Gasket.....	22-25
		130201000054A019 Gasket.....	22-25

130201000058A012 Oil Plugging and Magnet Assembly.....	22-13	131401020099A129 Bolt	12-19, 13-5
130201000061A084 Ring, Retainer, Elastic.....	12-5	131401020099A130 Washer.....	13-5
130201000061A088 Rotor.....	22-35	131401020106A001 Thread Plug	12-3
130201000061A119 Tapping screw	22-39	131401020106A062 Bolt Hexagon Head	11-15, 12-19, 17-17
130201000061A129 Precoated hexagon head bolts.....	22-17, 22-39	131401020106A070 Oil Plug.....	11-7, 12-3, 12-11
130201000061A172 Oil Level Label	22-39	131401020106A074 Bolt Hexagon Head	17-13
130201000070B004 Screw.....	22-13	131401020117A014 Grease packing	17-13
130201000081B043 pre-coated hexagon bolt and spring washer assembly	22-23	131401020124A001 Spacing Collar.....	11-9, 12-13
130201000101B003 Dos ejes	22-15	131401020124A002 Axle Packing Ring	11-9, 12-13
130201000101B011 gearbox housing.....	22-13	131401020124A006 Y-type hinge.....	11-7, 12-3
130201000120B012 Bolt	22-29	131401020134B053 Disc Friction Lower	17-15
13025424 Front Panel Body Assembly	2-111	131401020135B019 Bolt	17-13
130288000153A High and Low Switch.....	22-39	131401020158B001 Differential Housing Assembly.....	12-5
130288000158A Reverse switch	22-25	131401020159B001 Differential Housing Assembly.....	11-3
130288000161A Odometer sensor.....	22-35	131401020159B002 Differential Housing Assembly.....	12-9
130288000660A Seal, Oil	22-35	131401020215C001 Main & Passvie Bevel Gear Pair.....	11-3
130288000664A Valve Body Combination Parts	22-35	131401020270C004 Washer.....	11-11, 12-15
130288000734A Seal, Oil	22-13	131401020270C012 Axle Pass Box	12-3
130288000741A Ventilation Plug Assembly.....	22-25	131401020321B002 Pass-axle Box Cap	12-3
130288000743A Reverse Lock Spring.....	22-25	131401020348A001 Planet Shelf Assembly.....	11-11, 12-15
130288000748A Shift connector.....	22-25	131401020360A008 Washer, Seal	22-25
130288000779A Hexagon Bolt & Spring Washer Assembly.....	22-35	131401020433B045 Pin	11-7
130299000012A002 Quick Coupling.....	22-39	131401020433B055 Alarm Lamp Harness	17-17
130301000022A032 Spring Washer	22-23	131401020433B056 Alarm Lamp Harness	11-13, 17-17
13057252 Left Wheel Hood Front Fender.....	20-3	131401020509A007 Axle Shaft Gear Washer, Front.....	12-5
13057289 Right Wheel Hood Front Fender	20-3	131401020509A008 Axle Shaft Gear Washer, Front.....	12-5
13067476 Switch.....	3-3	131401020581A006 Brake Prevented Dust Cap.....	11-13, 12-17
130699000065A Driven Disc Assembly, Clutch ..	22-3	131401020581A007 Brake Shoe.....	11-13, 12-17
13072581 Coil.....	27-3	131401020581A008 Left Automatic Adjusting Arm.....	11-15, 12-19
13078498 Cab Reverse Operation Warning Board.....	19-3	131401020581A009 Right Automatic Adjusting Arm.....	11-15, 12-19
130901000570B Cab Assembly	2-3	131401020607A005 Pin	17-15
130901000571B Driver's Cab Sub-Assembly	2-9	131401020607A007 Return spring	17-15
130903000103A Driver Seat	2-39	131401020607A011 Plug, Rubber.....	17-13
130903000106A Seat Assembly Codriver	2-43	131401020630A001 Housing, Middle Axle	12-11
130907000260A Brake Clutch Pedal Assembly.....	2-181	131401020631A001 Rear axle housing assembly.....	11-7
130907000312A001 Clutch switch.....	2-183	131401020631A002 Operation Handle Assembly.....	11-7
130907000315A Air Filter Connecting Base	21-3	131401020810A Middle Axle.....	1-3
130907000316A Air intake passage body Assy ..	2-93	131401020811A Rear Axle	1-3
130999000025A Connecting Oil Pipe B of Hydraulic Cylinder.....	19-3	131402010013A069 Grease Nozzle	13-5
131101000003A Steering Wheel Assembly.....	2-3	131402010031B001 Washer.....	17-13
131288000099A Tube	17-7, 17-11	131402010031B012 Arm Regulating	17-13
131401020033A005 Brake friction plate..	11-13, 12-17	131402010164A Front two axle assembly	17-9
131401020033A010 Bearer Assembly, Gear Ring	11-11, 12-15	131402010165A001 Prevented dust cap (right).....	17-13
131401020033A014 Roller wheel	11-13, 12-17	131402010165A002 Prevented dust cap (left) ...	17-13
131401020092A002 Operation Handle Assembly.....	12-11	131402010165A003 Brake floor	17-13
131401020092A003 Space Bush	11-7, 12-11	131402010165A004 Retain spring.....	17-15
131401020092A004 Breathing Pipe	11-7		
131401020093A001 Brake Prevented Dust Cap.....	11-13, 12-17		
131401020099A058 Nut.....	12-3		
131401020099A059 Washer, Spring.....	12-3		